 


CHEST 2 X 3 DRAWERS

ASSEMBLY INSTRUCTIONS

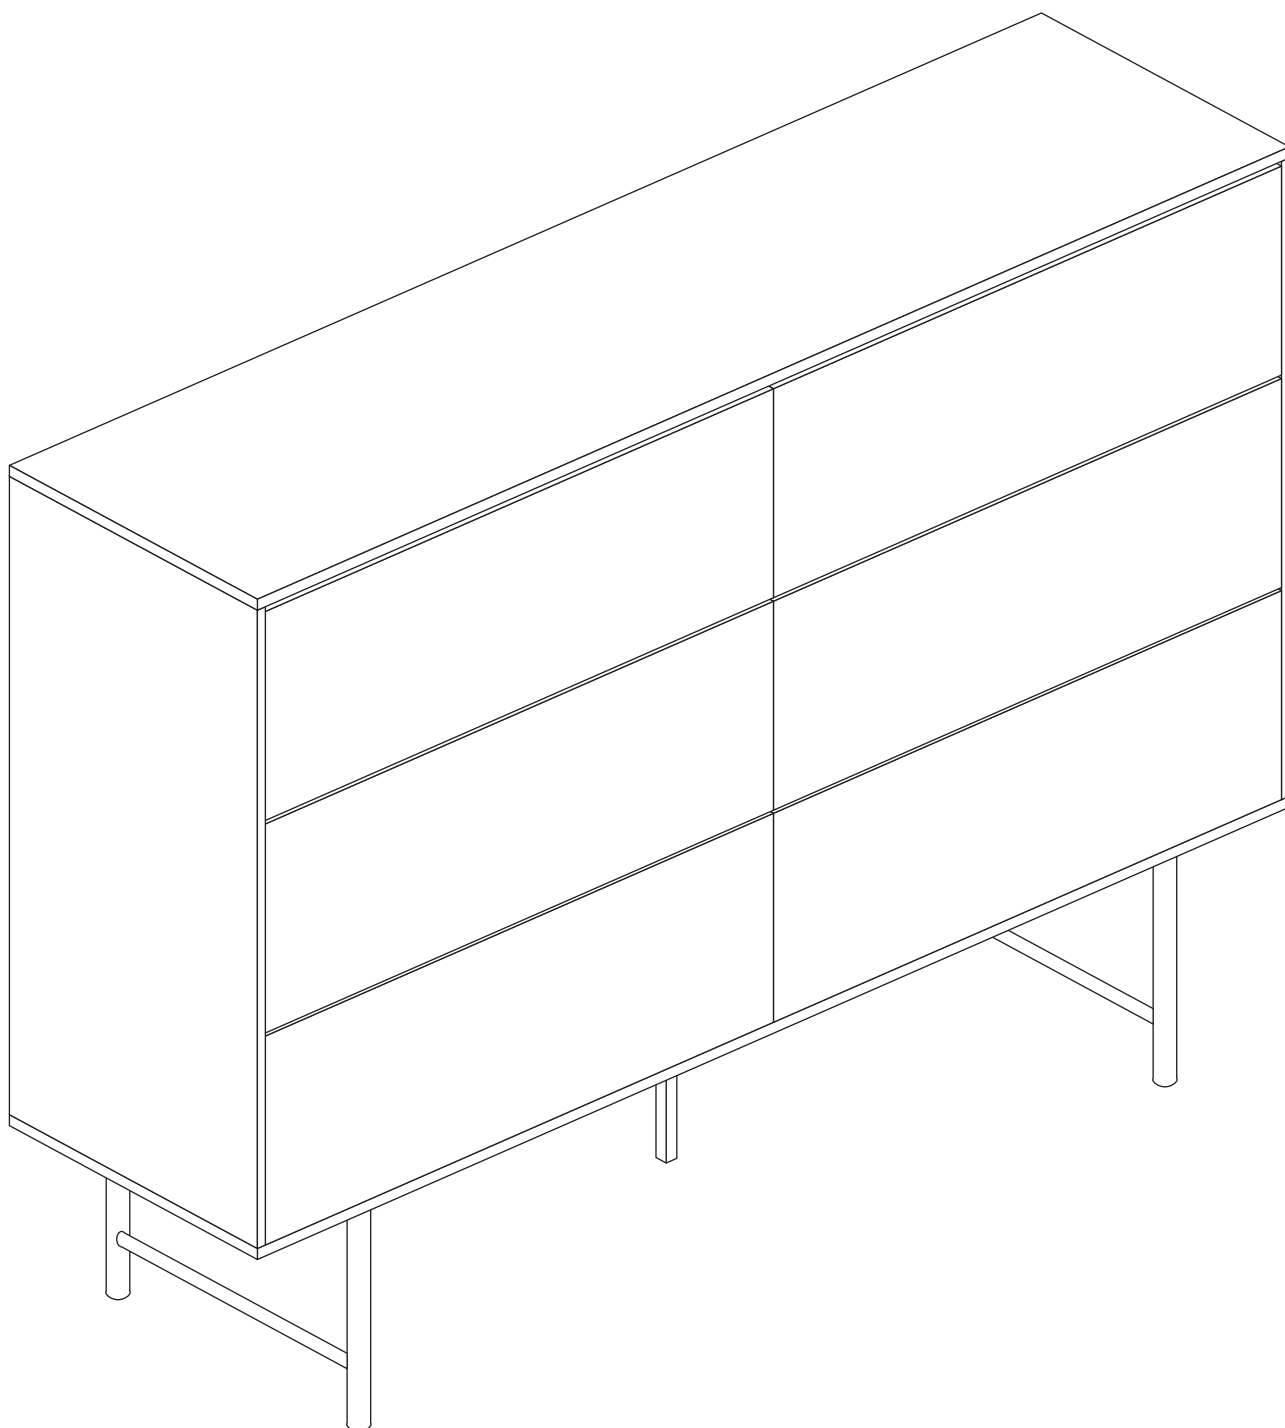 


TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

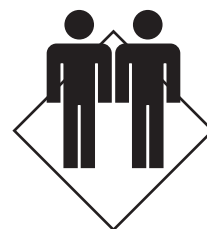

ASSEMBLY REQUIREMENTS

 - ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 2 hour assembly time approx.



ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

 
For more information, visit <https://www.productsafety.gov.au>



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

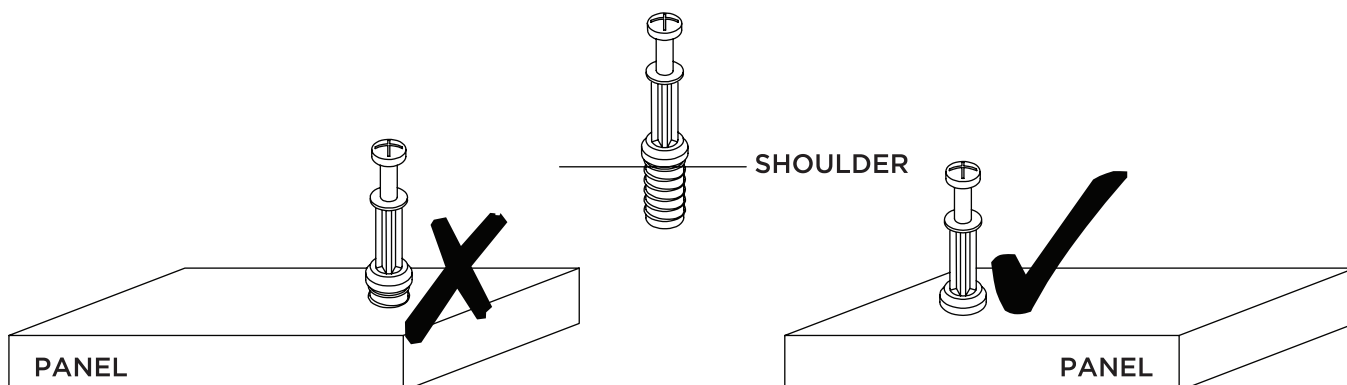


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

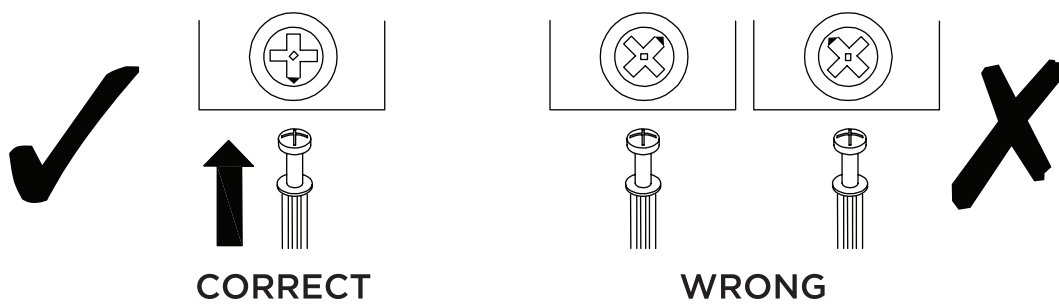

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

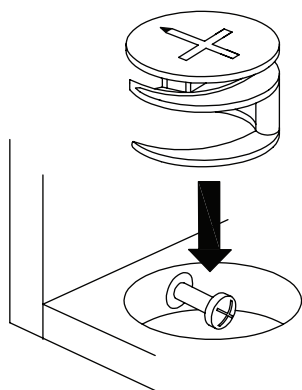


Turn cam lock clockwise to tighten.

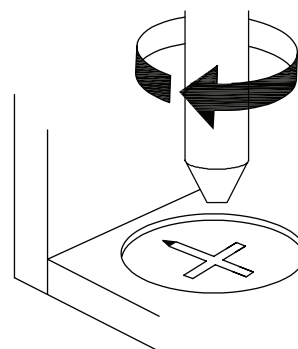 


DRAWER SLIDE GUIDE

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

 Inner Drawer Runner Left (DL)




Inner Drawer Runner Right (DR)

 


The Drawer Slide components shown above are attached to the **drawers**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

 Outer Drawer Runner Left (CL)

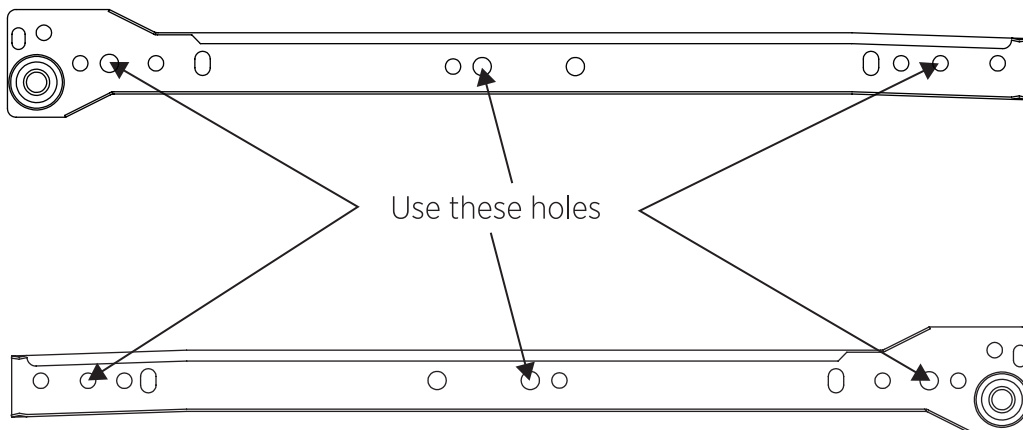

 
Outer Drawer Runner Right (CR) on part 2

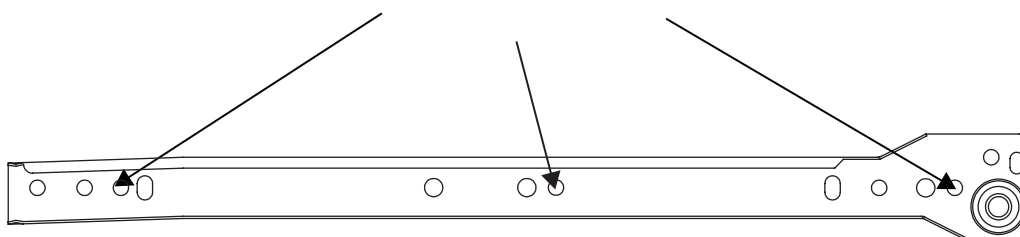

Outer Drawer Runner Right (CR) on part 3

The Drawer Slide components shown above are attached to the **drawers**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for steps 10, 11 and 12.

 
HARDWARE LIST




52 x A
Quickfit Screw



 
52 x B
Cam Lock



16 x C
Wooden Dowel

 


8 x D
Screw

 

6 x E
Magnetic Catch



 2 x F
Screw



8 x G
Wedge



 
78 x H
Screw



2 x I
Wooden Dowel



2 x J
Wall Plug




2 x K
Wall Strap




8 x L
Screw



 
2 x M
Bolt




6 x N
Magnet

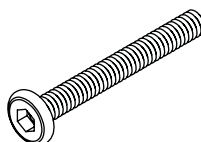 

8 x O
Bolt

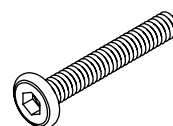 


4 x P
Bolt

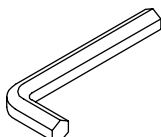 


1 x Q
Allen Key



 12 x R
Screw



30 x S
Screw

 


6 x T
Bracket


HARDWARE LIST



 
4 x U
Washer




6 x DL
Inner Drawer Runner

 

6 x DR
Inner Drawer Runner

 


6 x CL
Outer Drawer Runner

 


6 x CR
Outer Drawer Runner

 
PARTS LIST




1
1 PC

 


2
1 PC

 


3
1 PC

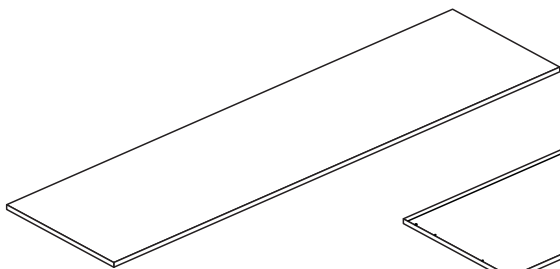 


4
1 PC

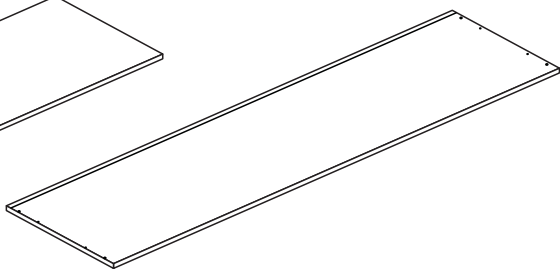 


5
1 PC

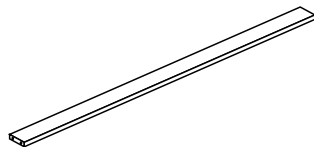 


6
4 PCS

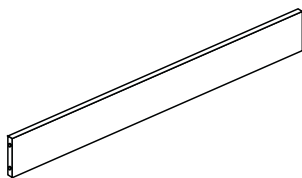 


7
2 PCS

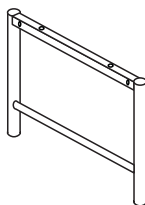 


8
2 PCS

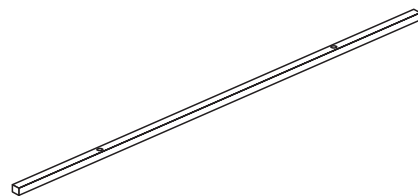 


9
2 PCS

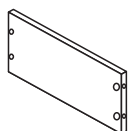 

10
6 PCS

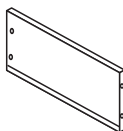 


11
6 PCS

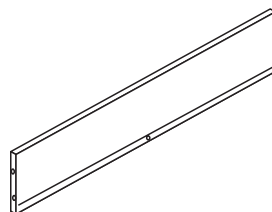 


12
6 PCS

 
PARTS LIST

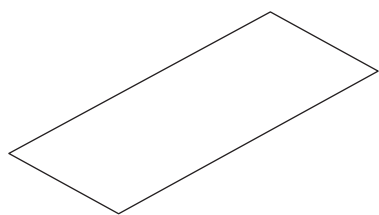


13
6 PCS

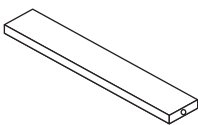 


14
6 PCS

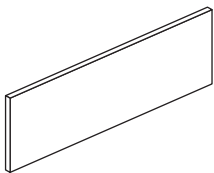 


15
1 PC

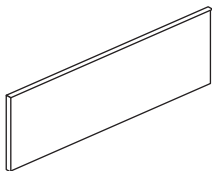 


16
1 PC

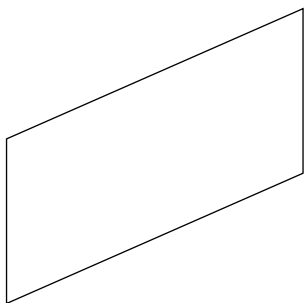 


17
4 PCS

 

18
1 PC

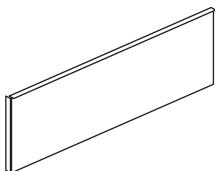 

19
2 PCS

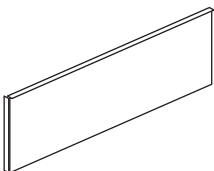 

20
2 PCS

ASSEMBLY INSTRUCTIONS

STEP 1

Fix quickfit screws (A) to parts 19.

Attach magnets (N) to parts 19 using screws (H), as shown.



 
A x 10



H x 2



N x 2

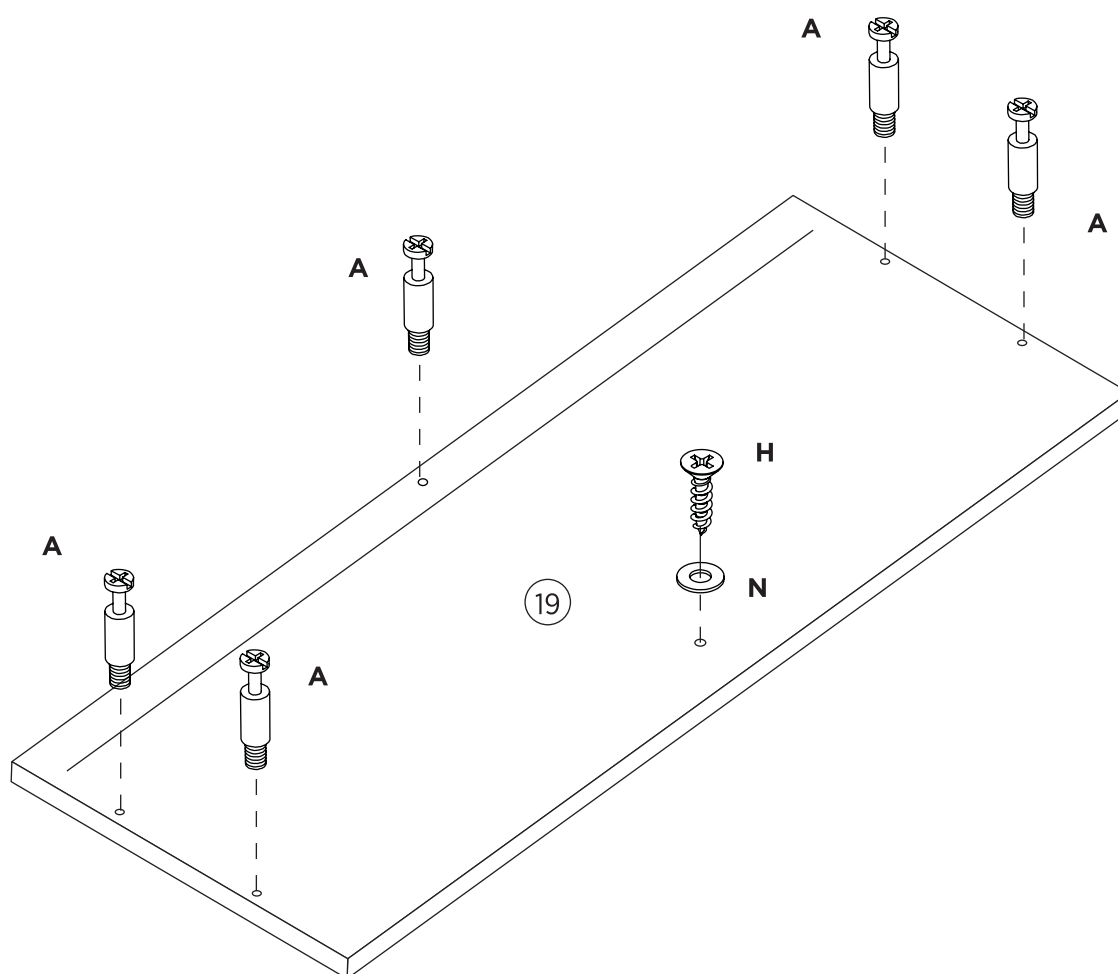


x2

ASSEMBLY INSTRUCTIONS

STEP 2

Fix quickfit screws (A) to part 15.

 Attach magnet (N) to parts 15 using screws (H), as shown.




A x 5



H x 1



 N x 1

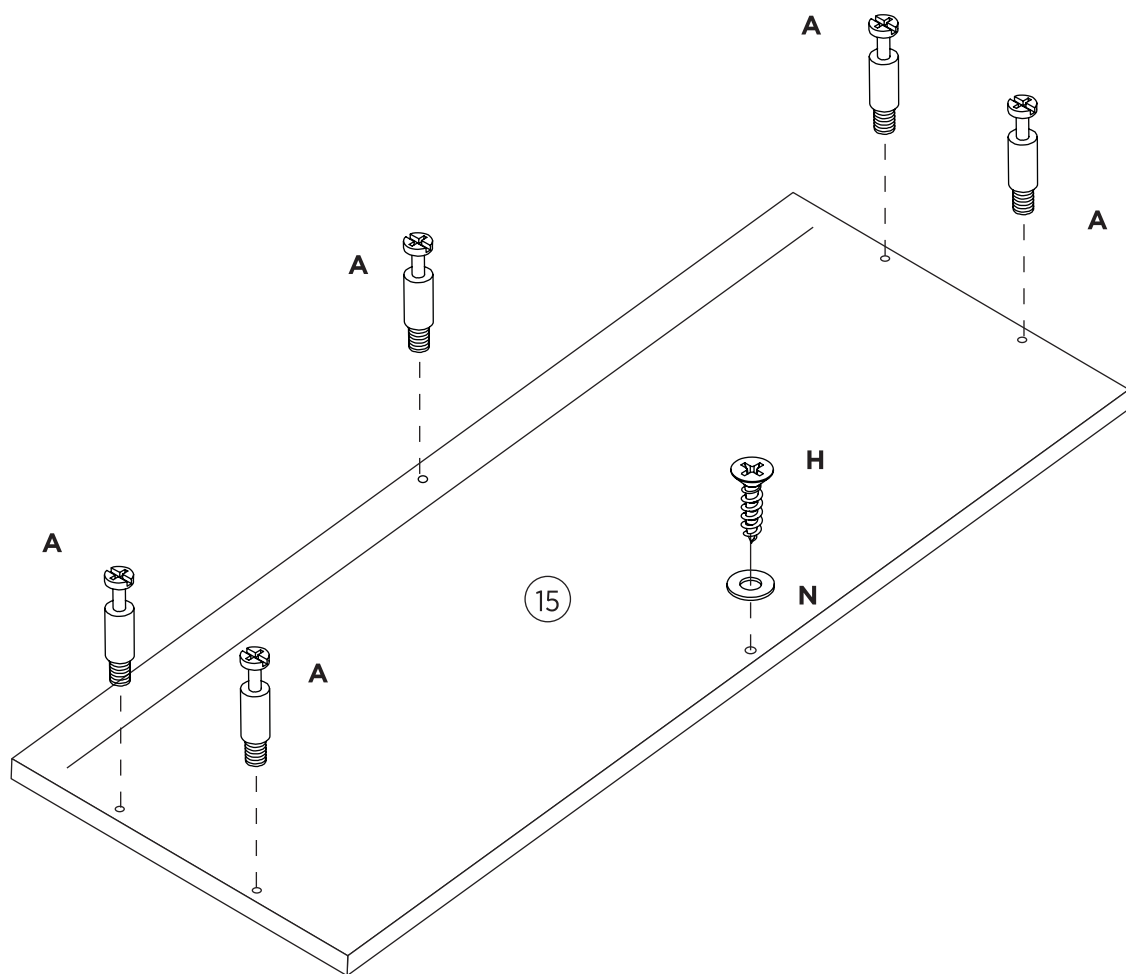


ASSEMBLY INSTRUCTIONS

STEP 3

Fix quickfit screws (A) to parts 20.

 Attach magnets (N) to parts 20 using screws (H), as shown.




A x 10



H x 2



 N x 2

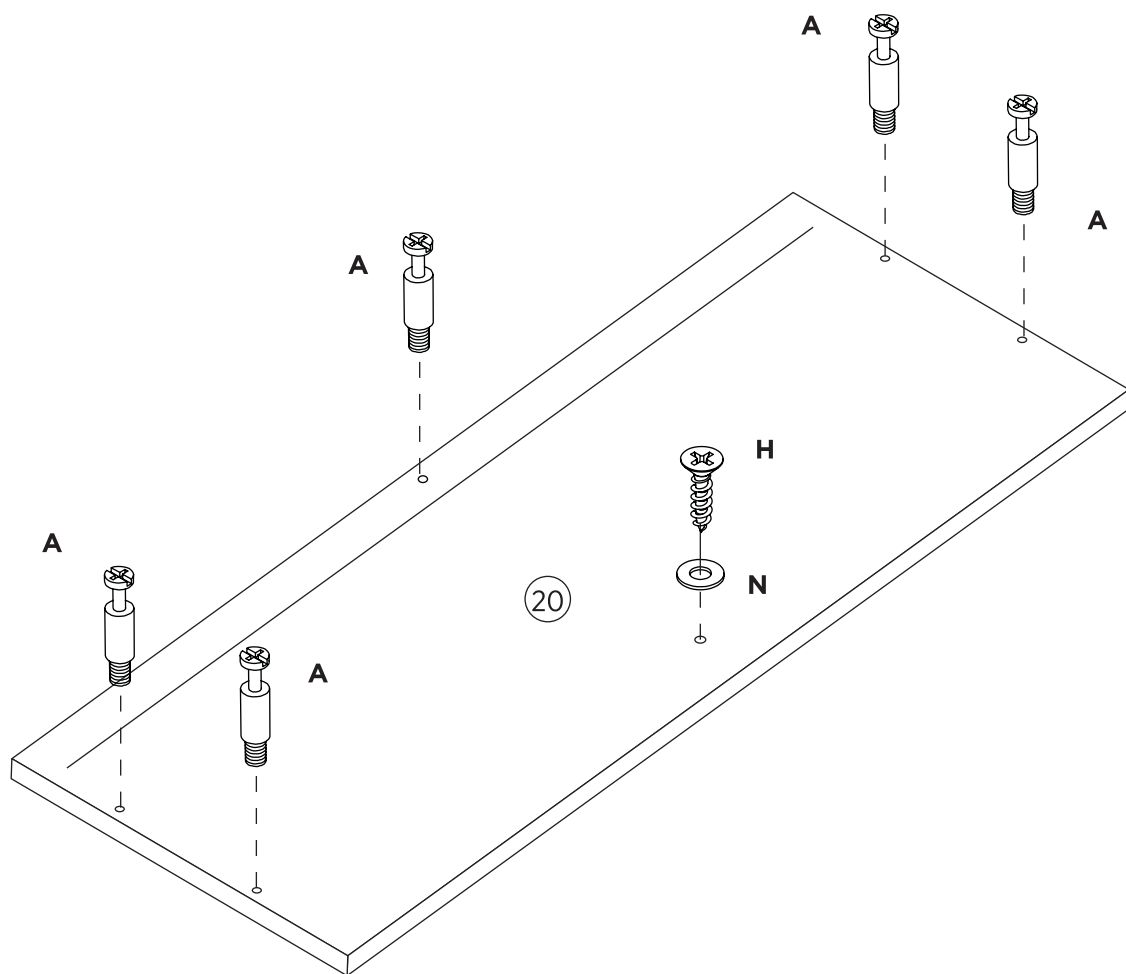


x2

ASSEMBLY INSTRUCTIONS

STEP 4

Fix quickfit screws (A) to part 16.

 Attach magnet (N) to part 16 using screws (H), as shown.




A x 5



H x 1




 
N x 1

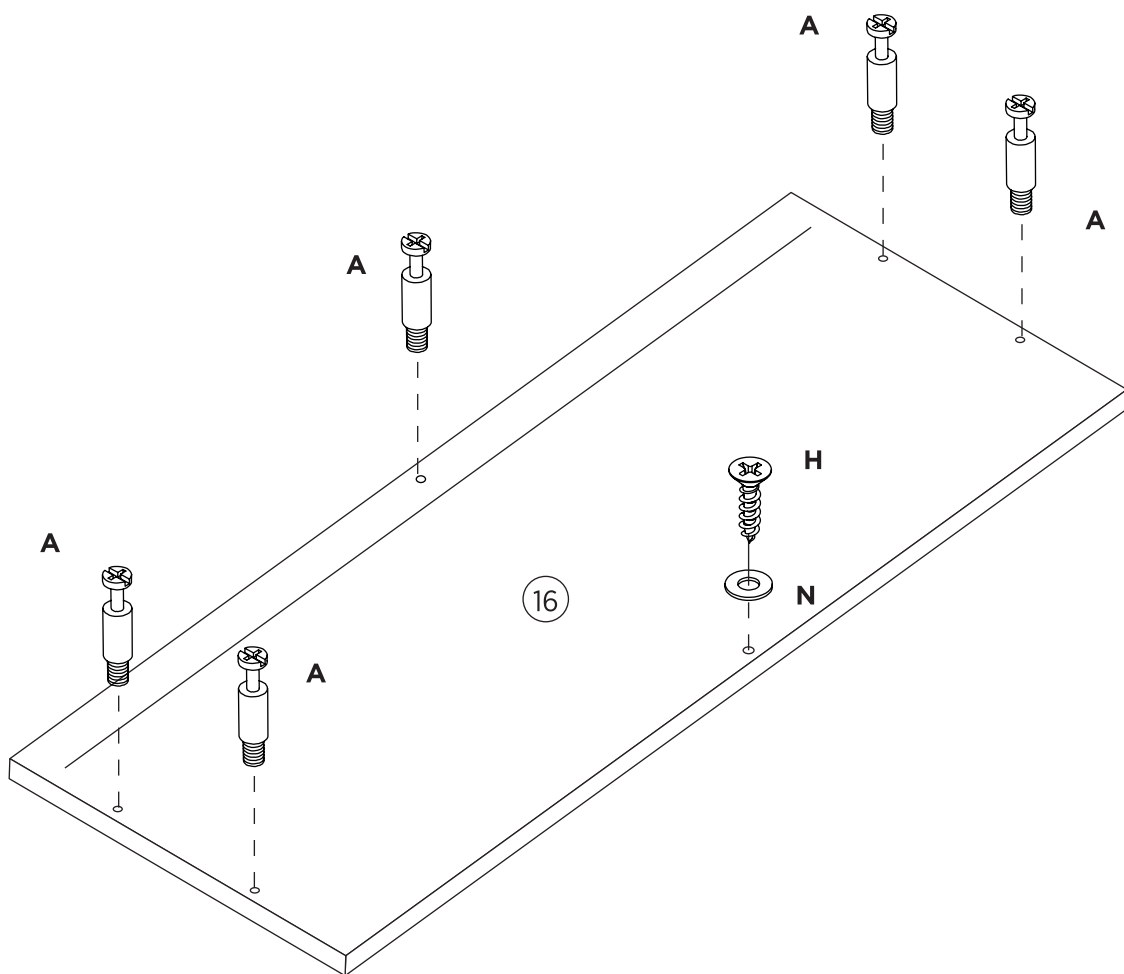

ASSEMBLY INSTRUCTIONS

STEP 5

  Attach part 12 to parts 10, 11 and 14 using screws (S), as shown.

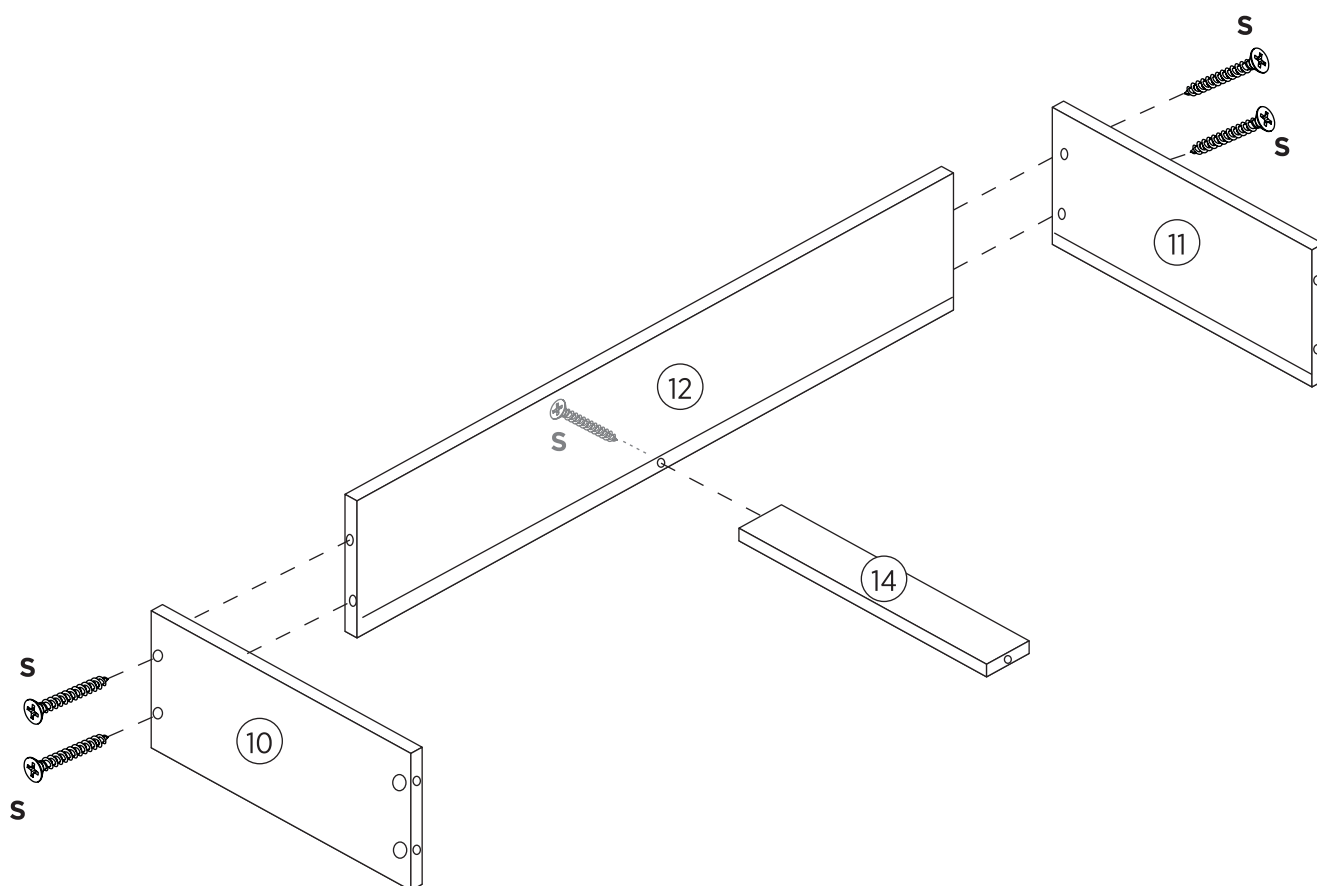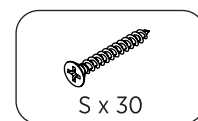

x6

ASSEMBLY INSTRUCTIONS

STEP 6

Insert parts 13 into grooves between parts 10, 11 and 12.

 
Insert cam locks (B) to parts 10, 11 and 14.

Fix part 19 to parts 10, 11 and 14, as shown.

Turn cam locks (B) clockwise to tighten.



B x 10

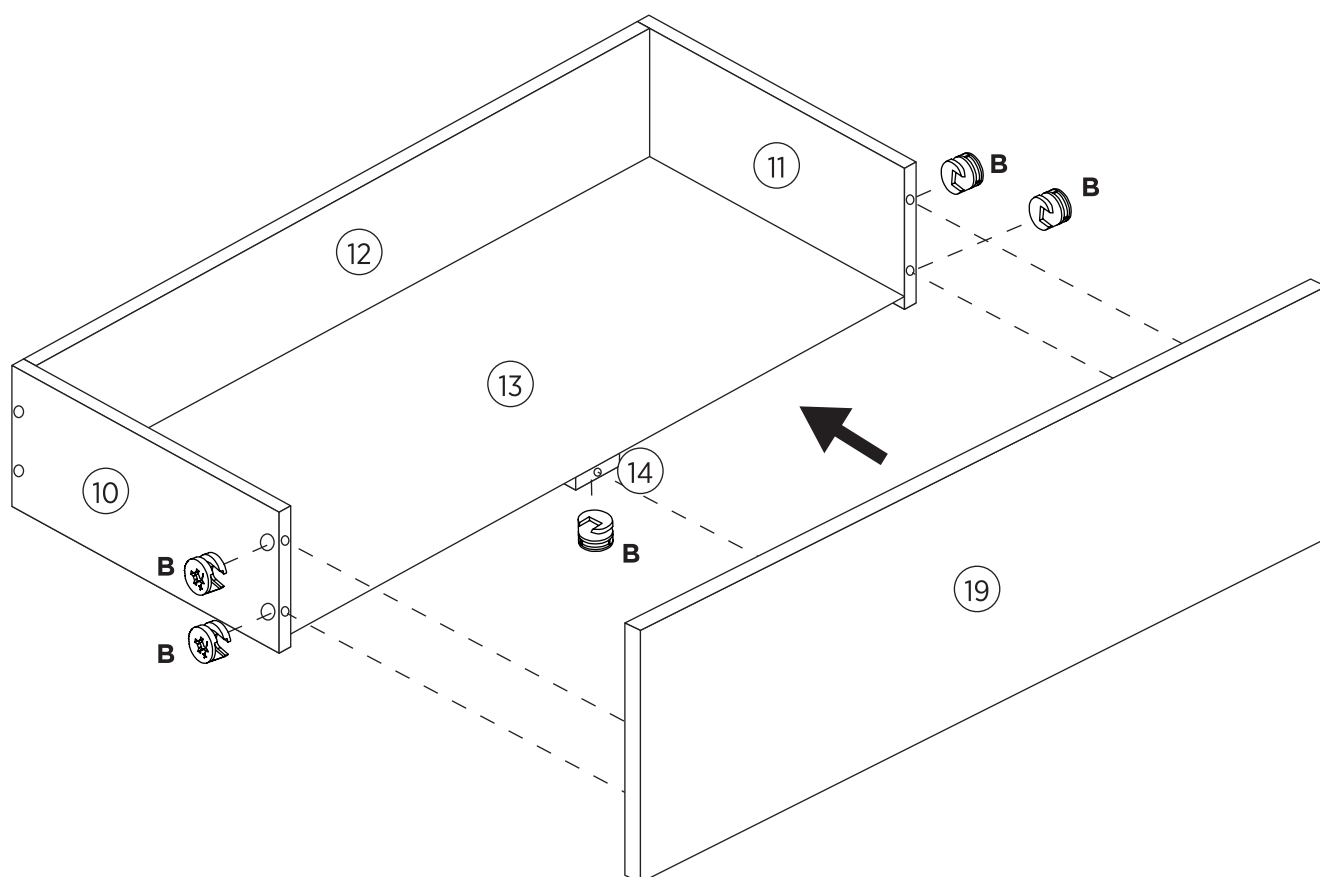

x2

ASSEMBLY INSTRUCTIONS

STEP 7

Insert part 13 into grooves between parts 10, 11 and 12.

 
Insert cam locks (B) to parts 10, 11 and 14.

Fix part 15 to parts 10, 11 and 14, as shown.

Turn cam locks (B) clockwise to tighten..



B x 5

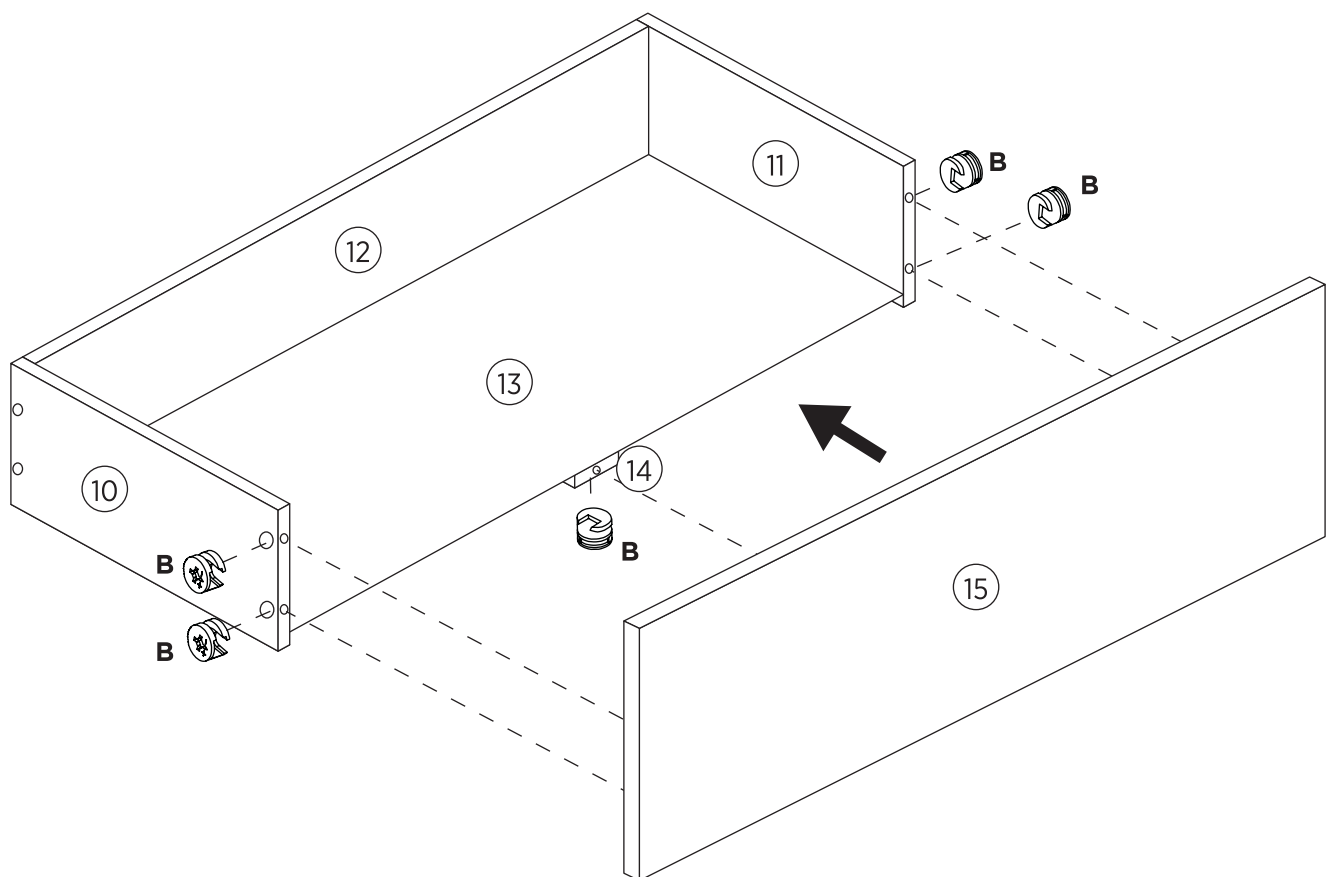

ASSEMBLY INSTRUCTIONS

STEP 8

 
Insert cam locks (B) to parts 10, 11 and 14.

Fix parts 20 to parts 10, 11 and 14, as shown.

Turn cam locks (B) clockwise to tighten.



B x 10

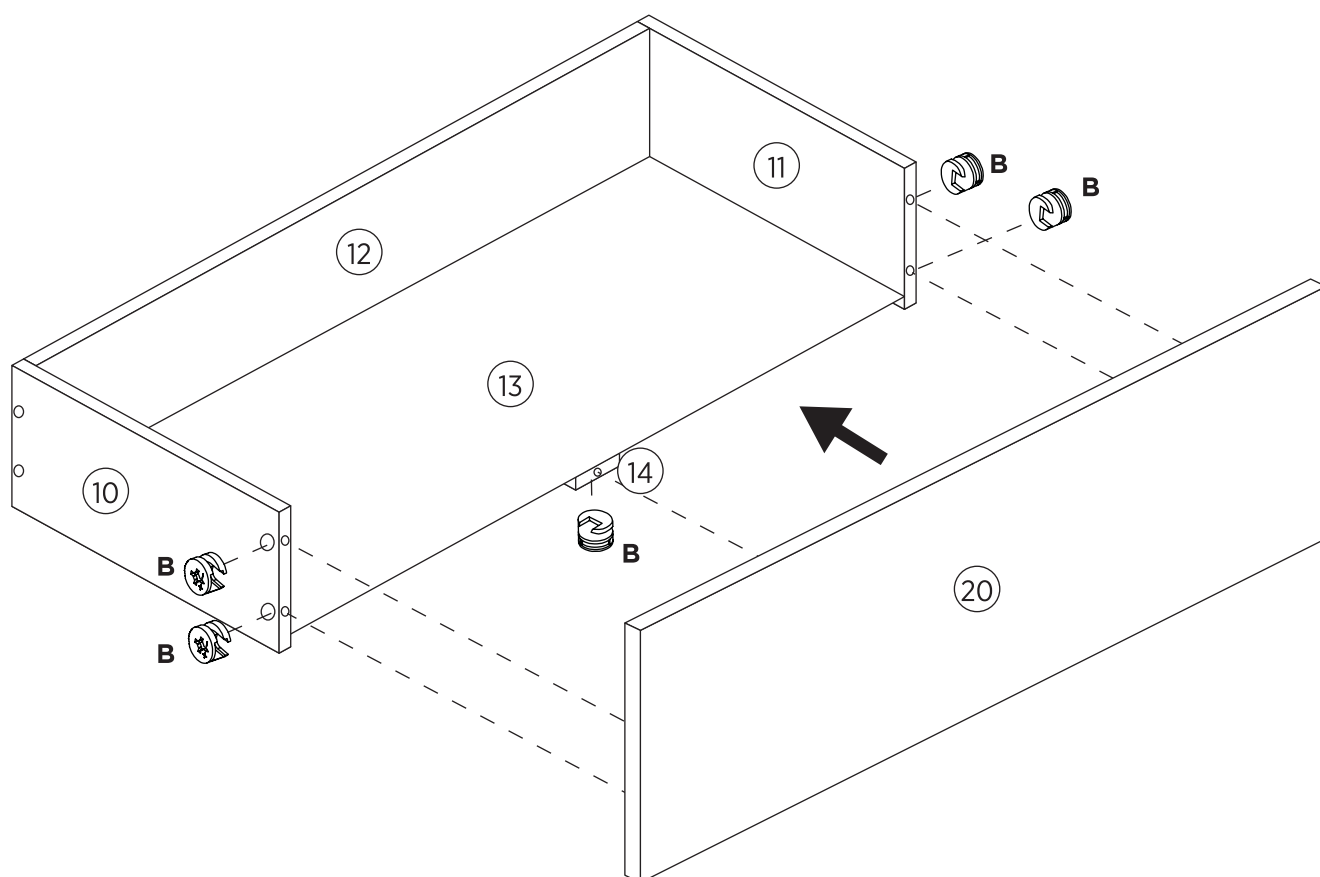

x2

ASSEMBLY INSTRUCTIONS

STEP 9

 
Insert cam locks (B) to parts 10, 11 and 14.

Fix part 16 to parts 10, 11 and 14, as shown.

Turn cam locks (B) clockwise to tighten.



B x 5

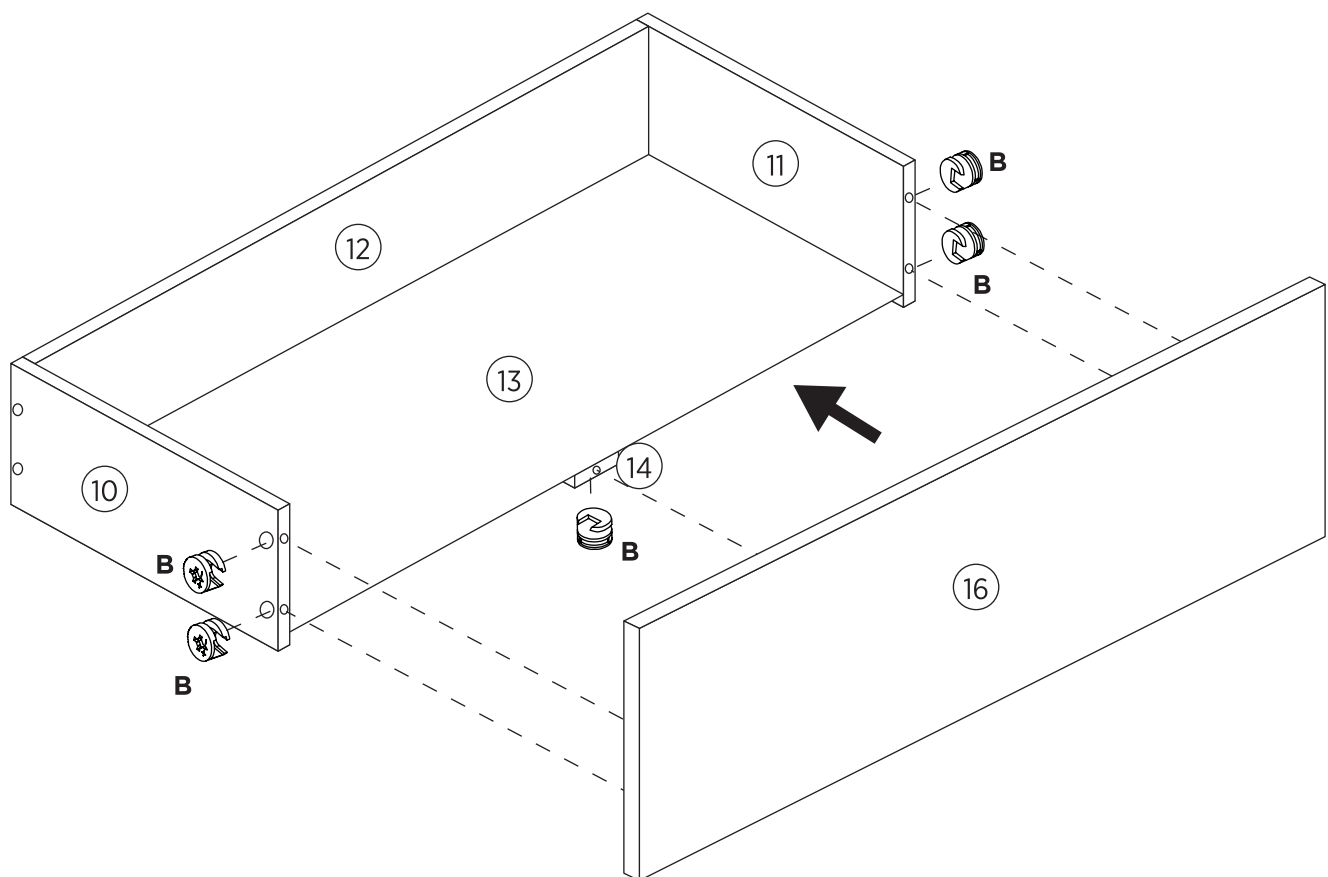

ASSEMBLY INSTRUCTIONS

STEP 10

Fix inner drawer runners (DL) to parts 10 using screws (H).

Fix inner drawer runners (DR) to parts 11 using screws (H), as shown.

WARNING

 
The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.




H x 36



DL x 6



DR x 6

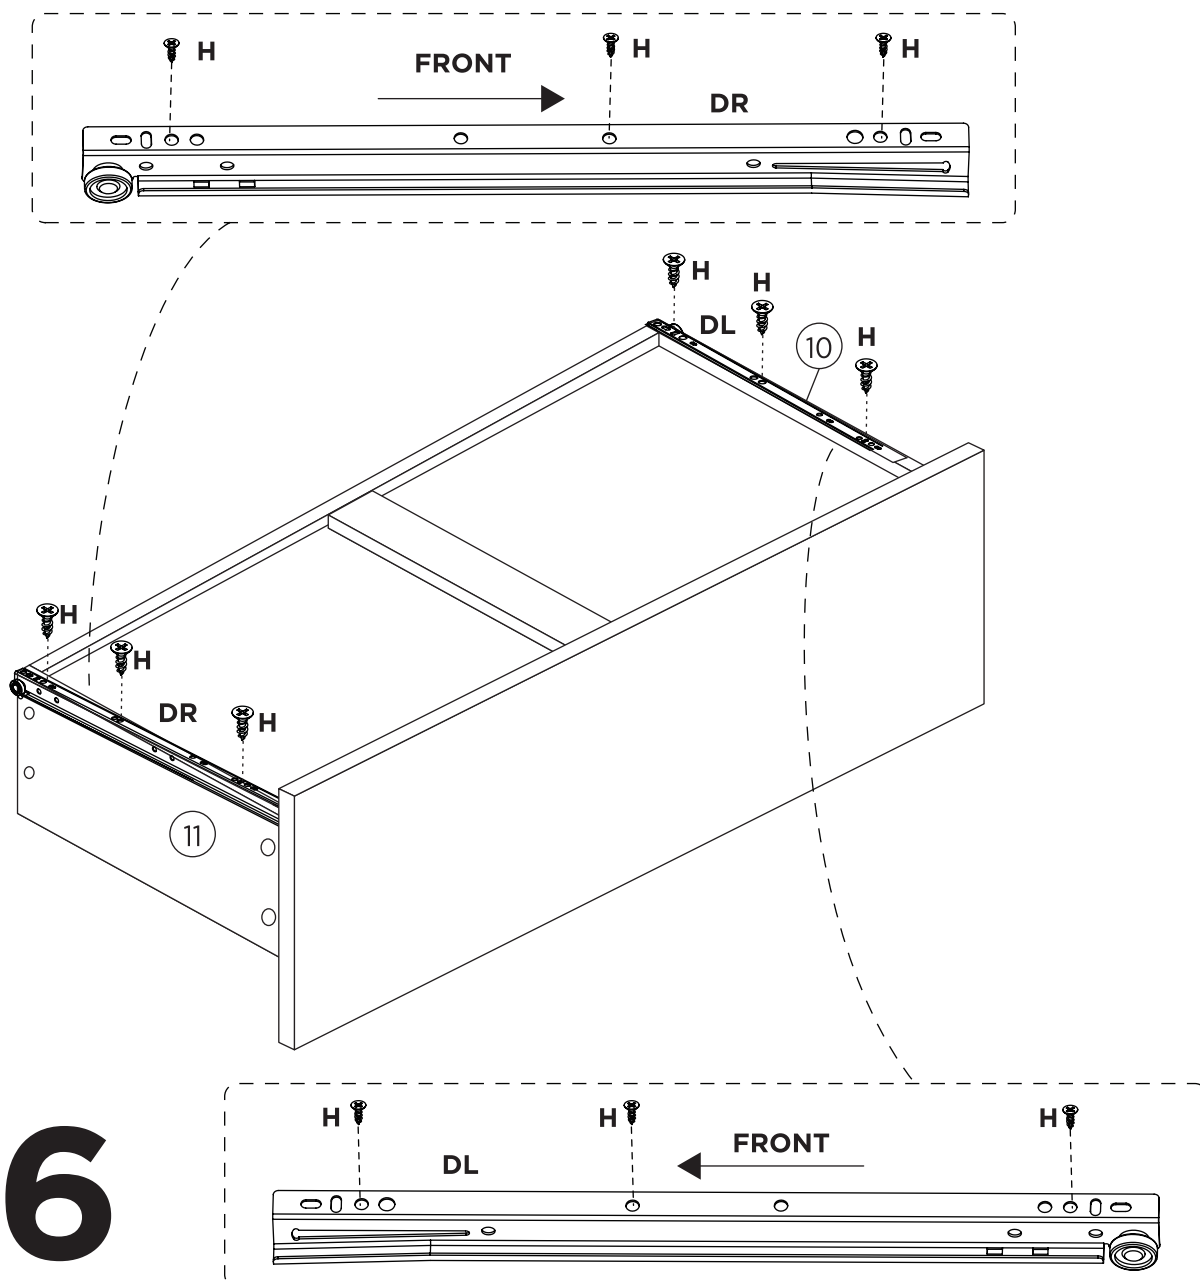 

ASSEMBLY INSTRUCTIONS

STEP 11

Fix outer drawer runners (CR) and (CL) to parts 2 and 3 using screws (H), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
 
 
H x 18



CR x 3



CL x 3

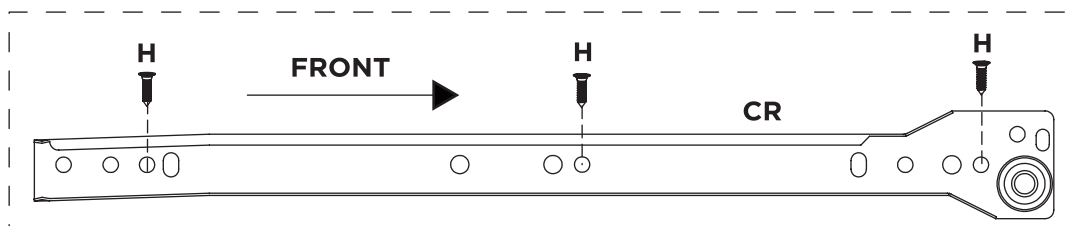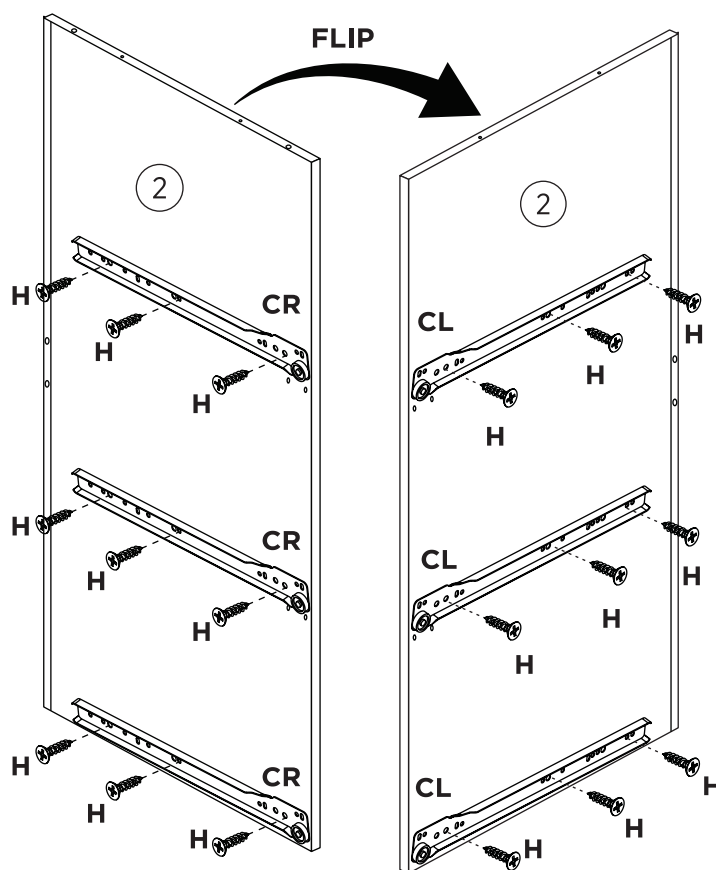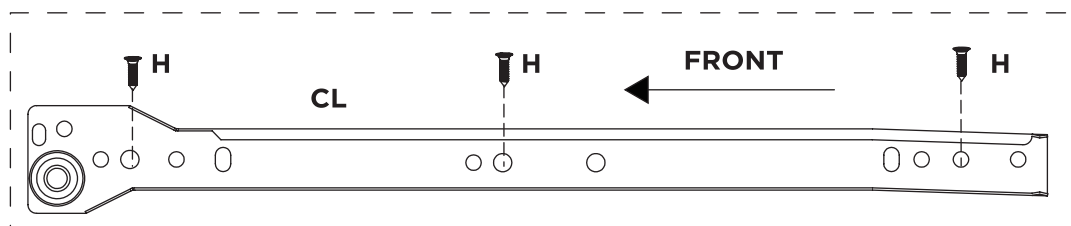

ASSEMBLY INSTRUCTIONS

STEP 12

Fix outer drawer runners (CR) and (CL) to parts 1 and 2 using screws (H), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
 
 
H x 18



CR x 3





CL x 3

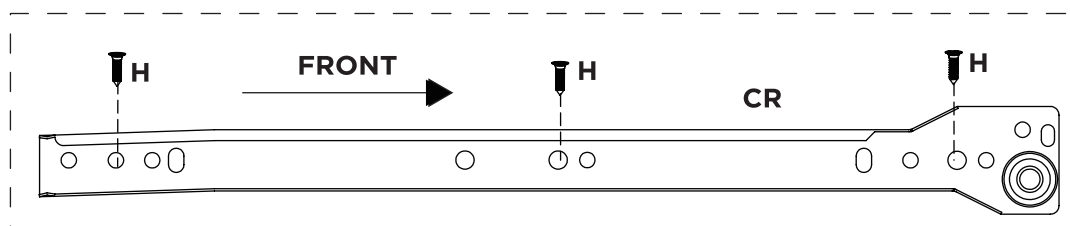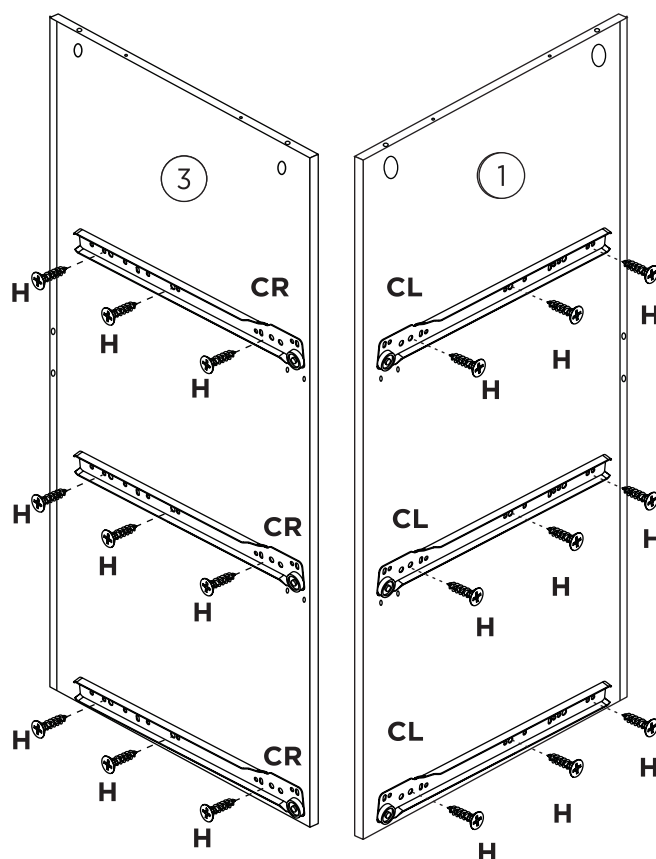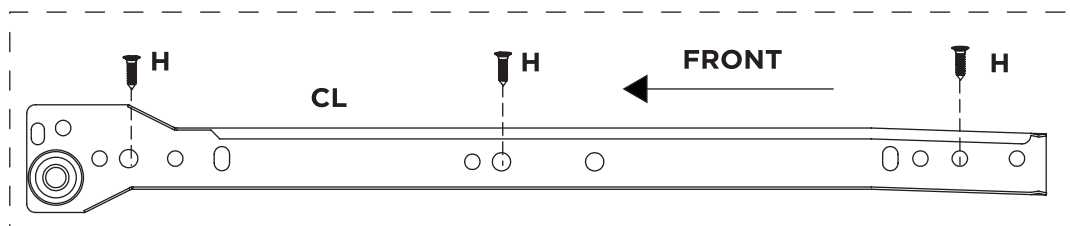

ASSEMBLY INSTRUCTIONS

STEP 13

  Fix brackets (T) to parts 6 using screws (R), as shown.

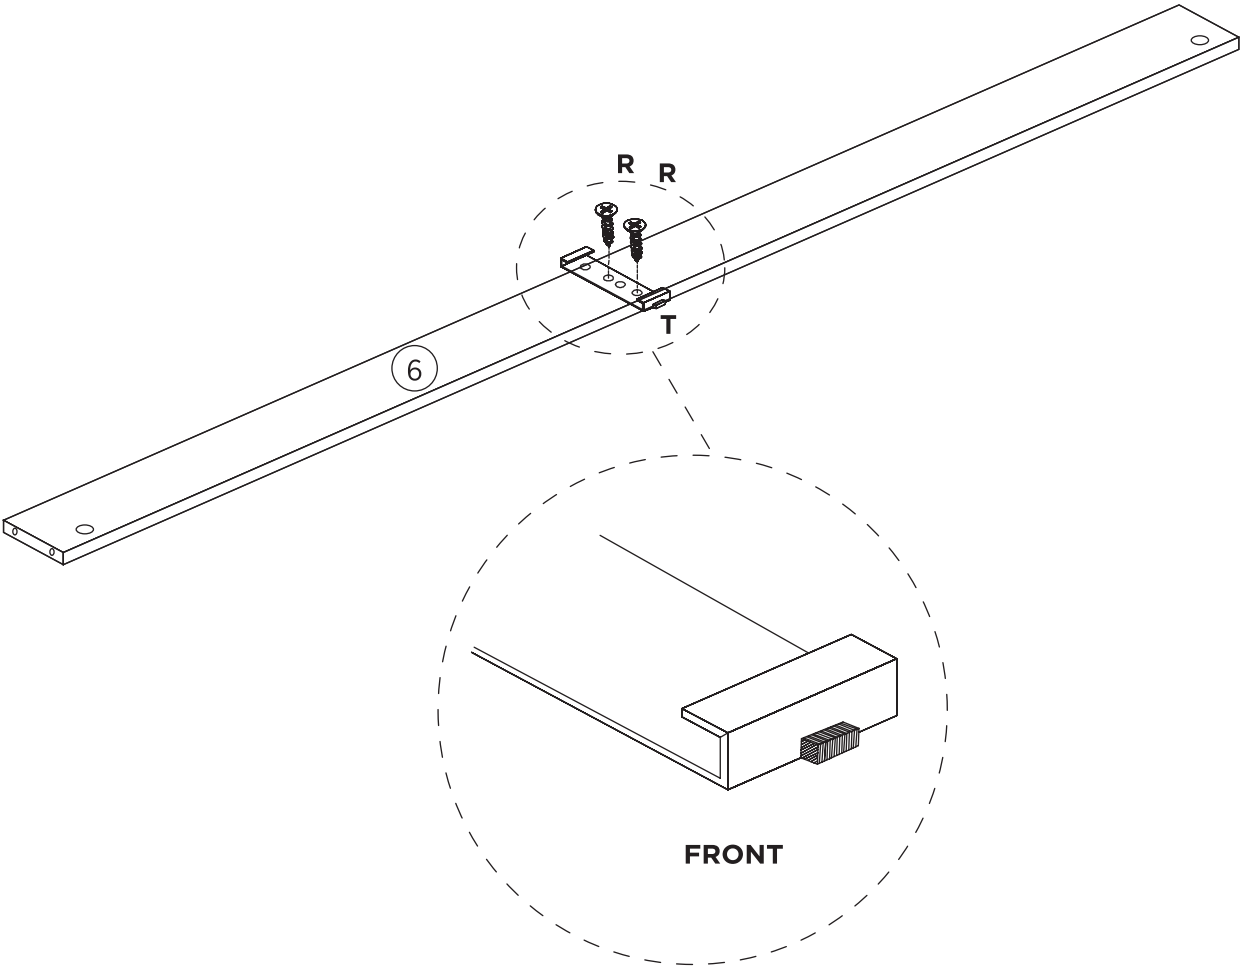
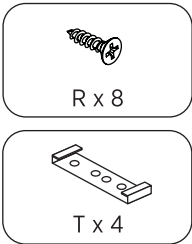


x4

ASSEMBLY INSTRUCTIONS

STEP 14

  Slide magnetic catch (E) to brackets (T), as shown.

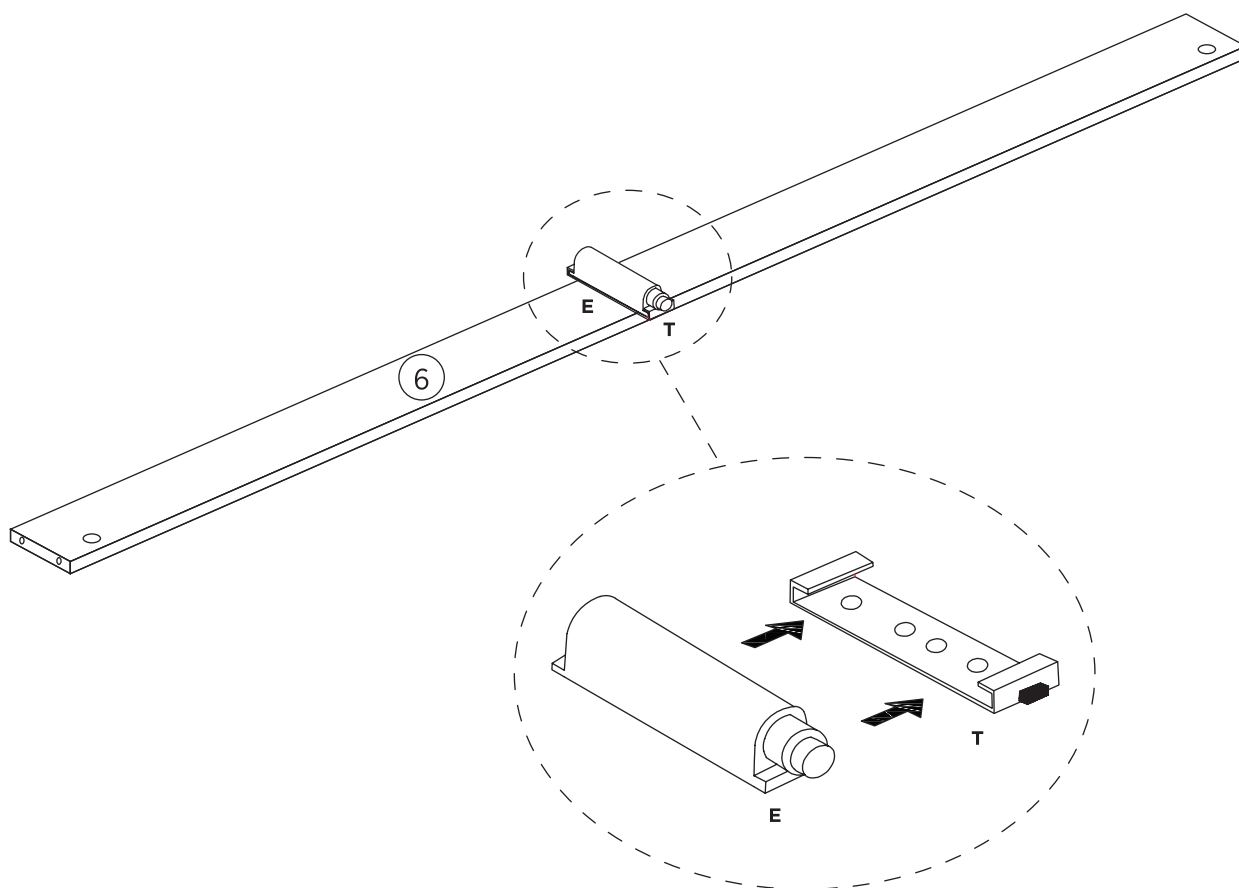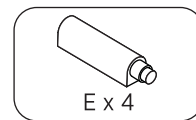

x4

ASSEMBLY INSTRUCTIONS

 
 
 
 
 
 
 
STEP 15

Insert quickfit screws (A) to part 4

Fix brackets (T) to part 4 using screws (R).

Slide magnetic catches (E) to brackets (T).

Fix wall straps (K) to part 4 using washers (U) and screws (F), as shown.

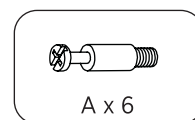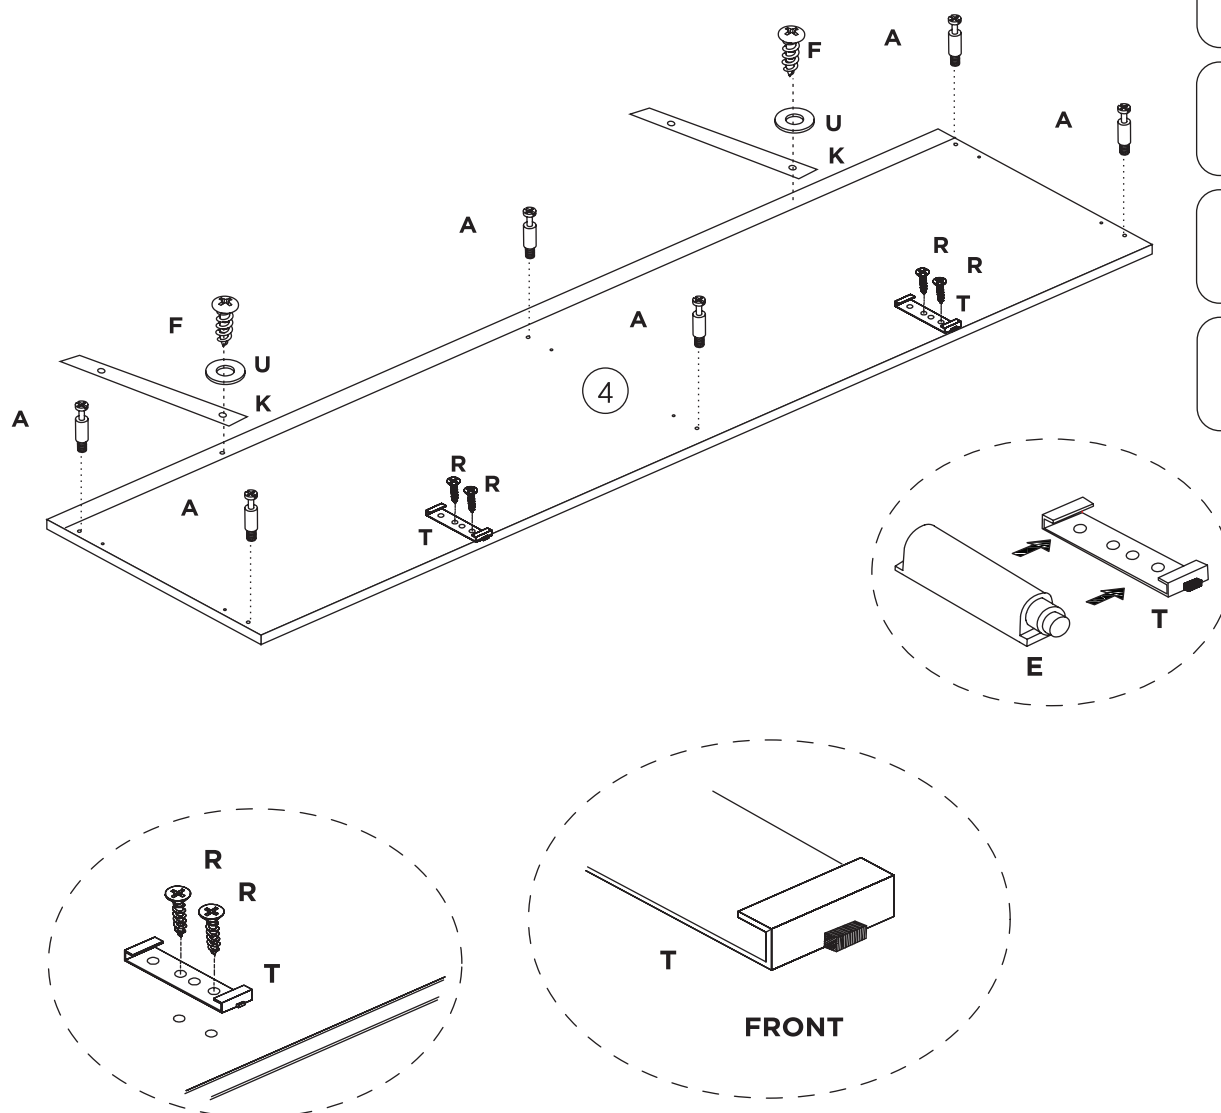

ASSEMBLY INSTRUCTIONS

STEP 16

 
Insert quickfit screws (A) to part 2

Insert wooden dowels (I) into part 2.

Insert cam locks (B) to parts 6 and 7.

Fix part 2 to parts 6 and 7, as shown.

Turn cam locks (B) clockwise to tighten.




A x 8



B x 8



 I x 2

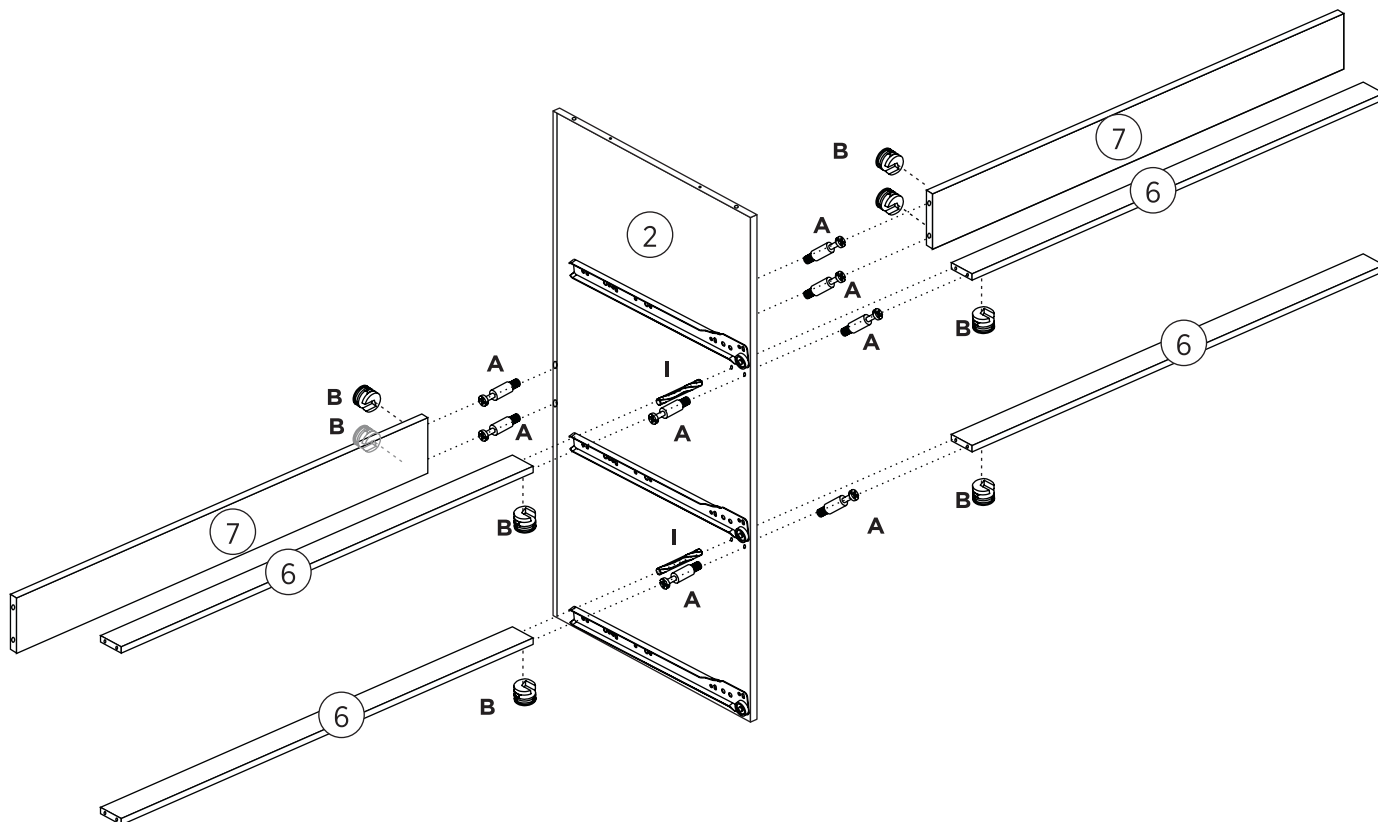

ASSEMBLY INSTRUCTIONS

STEP 17

 
Insert quickfit screws (A) to parts 7 and 6

Insert wooden dowels (C) to parts 6.

Insert cam locks (B) to parts 6 and 7.

Fix parts 1 & 3 to parts 6 and 7, as shown.

Turn cam locks (B) clockwise to tighten.




A x 8



B x 8



 
C x 4

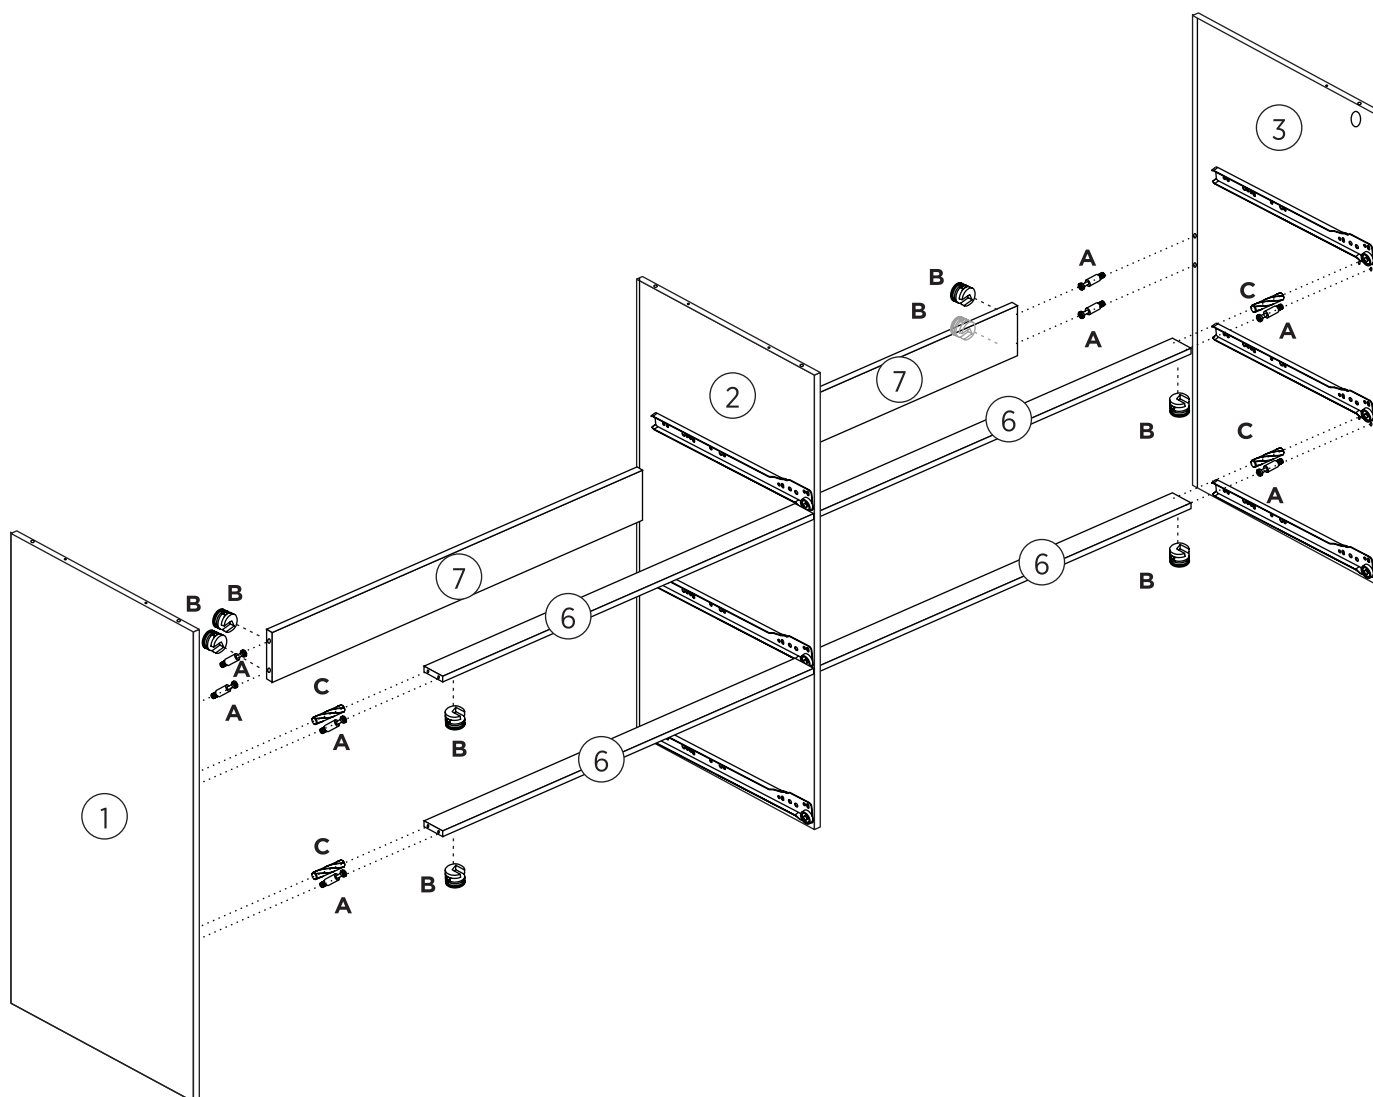

ASSEMBLY INSTRUCTIONS

STEP 18

 Insert parts 17 into the grooves between parts 1, 2, 3 and 7, as shown.

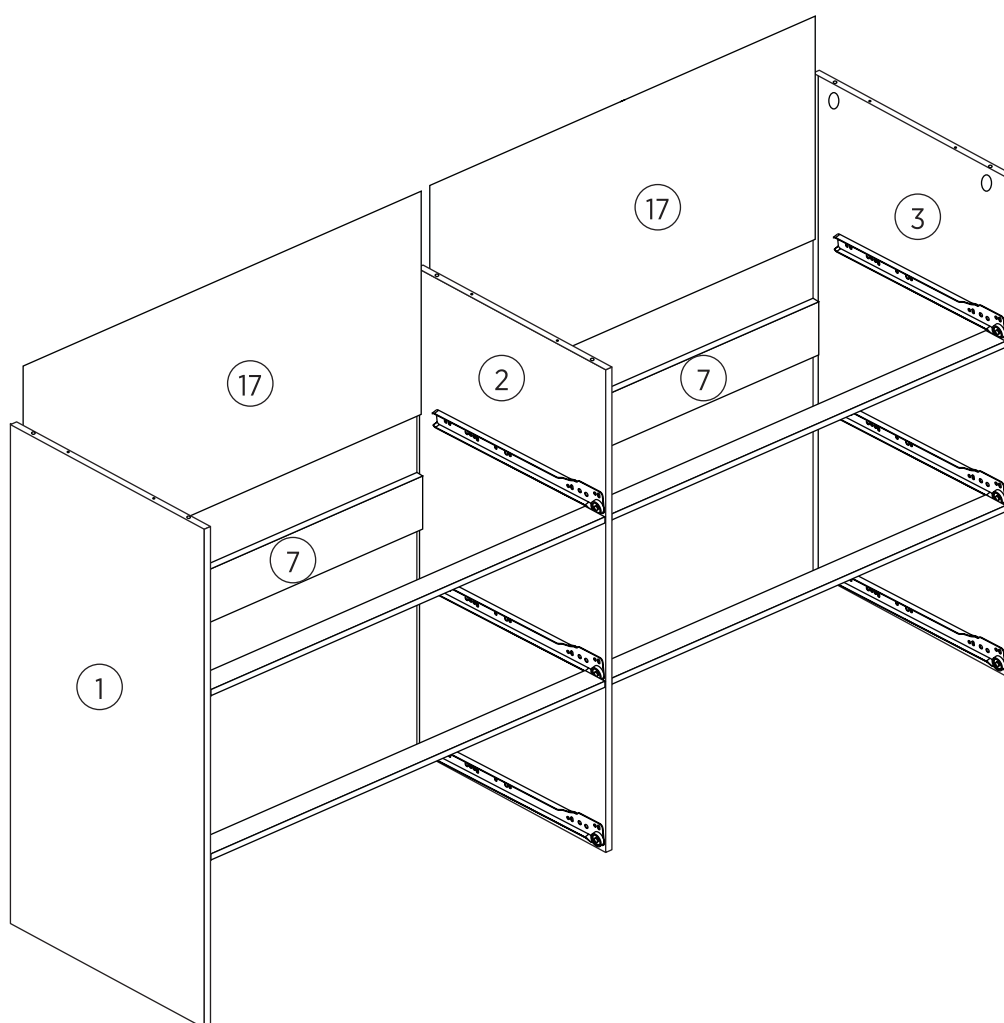

ASSEMBLY INSTRUCTIONS

STEP 19

Insert wooden dowels (C) to parts 1, 2 and 3.

Insert cam locks (B) to parts 1, 2 and 3.

Fix part 4 to parts 1, 2 and 3, as shown.

 
Turn cam locks (B) clockwise to tighten.



B x 6




C x 6

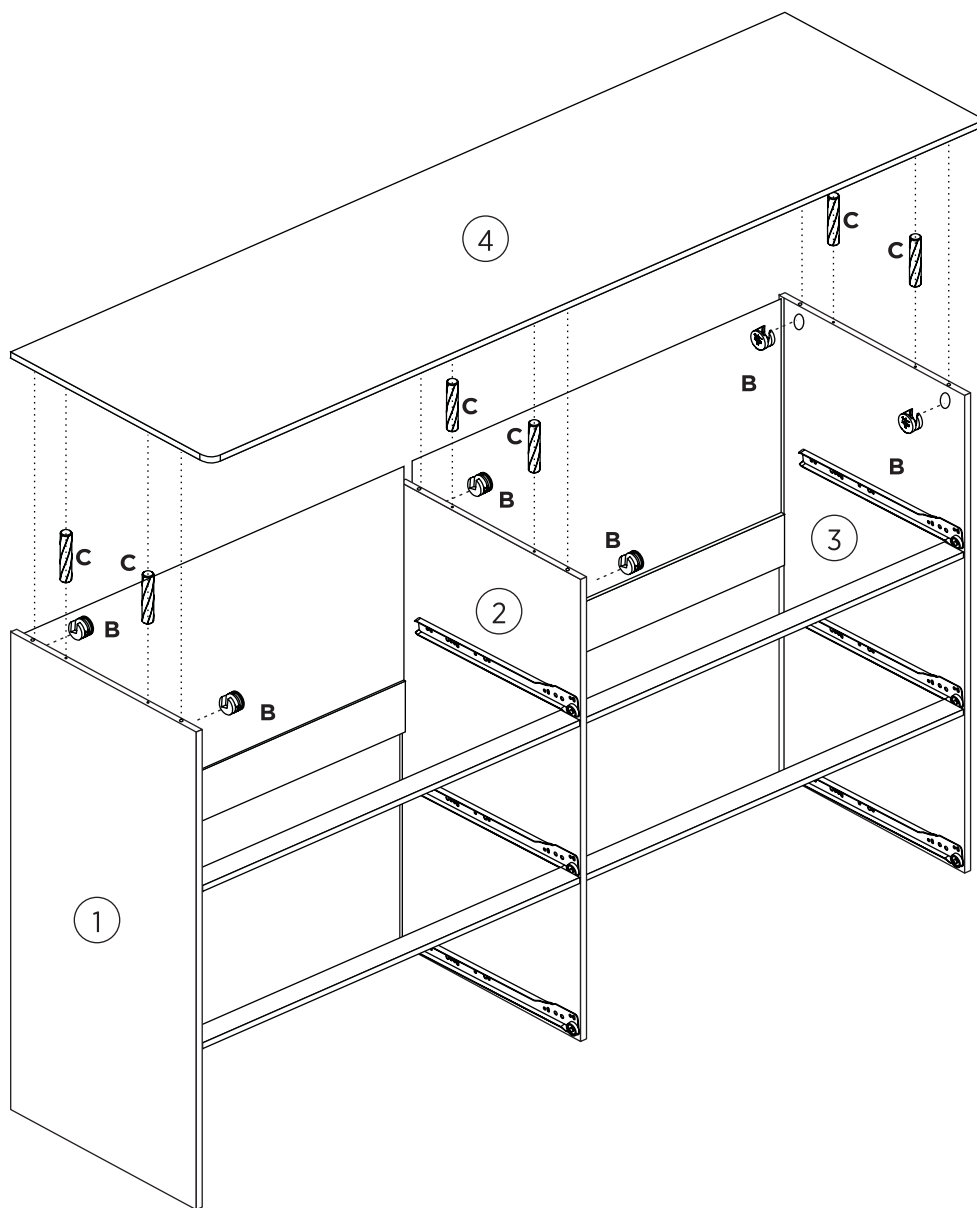

ASSEMBLY INSTRUCTIONS

STEP 20

 Insert parts 17 into the grooves between parts 1, 2, 3 and 7, as shown.

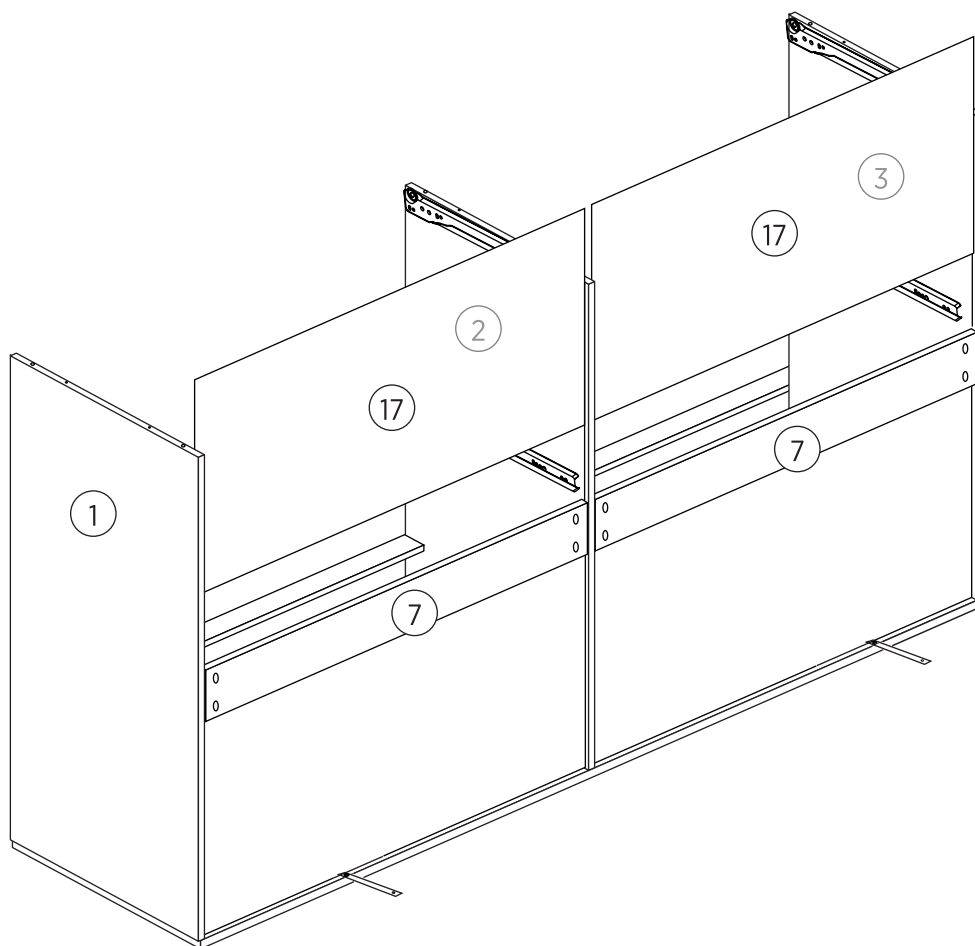

ASSEMBLY INSTRUCTIONS

STEP 21

Insert wooden dowels (C) to parts 1, 2 and 3.

 
Fix part 5 to parts 1, 2 and 3 using screws (D), as shown.



C x 6






D x 6

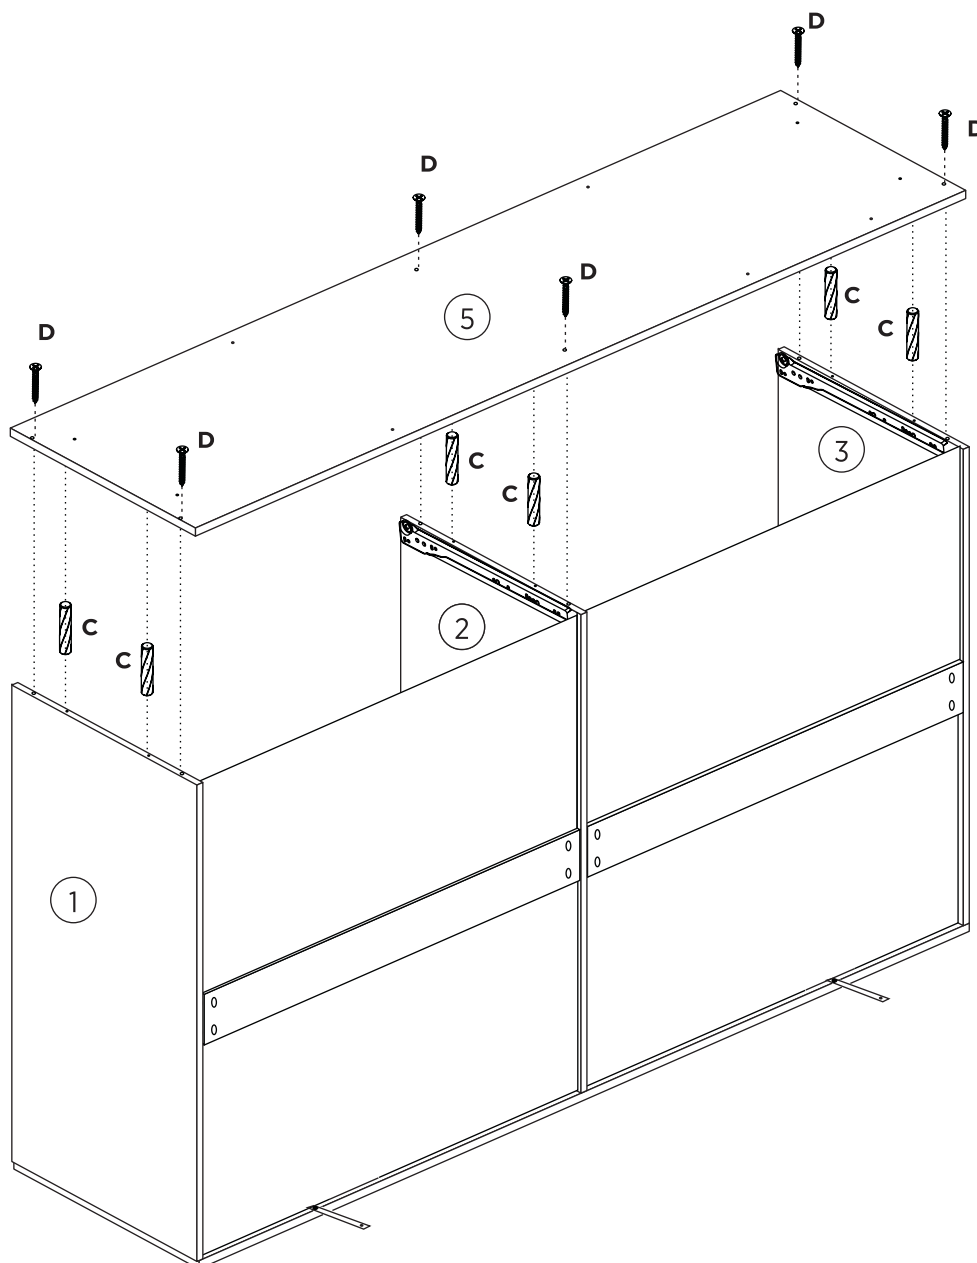

ASSEMBLY INSTRUCTIONS

STEP 22

   Fix parts 8 to parts 9 using bolts (P) and allen key (Q), as shown.

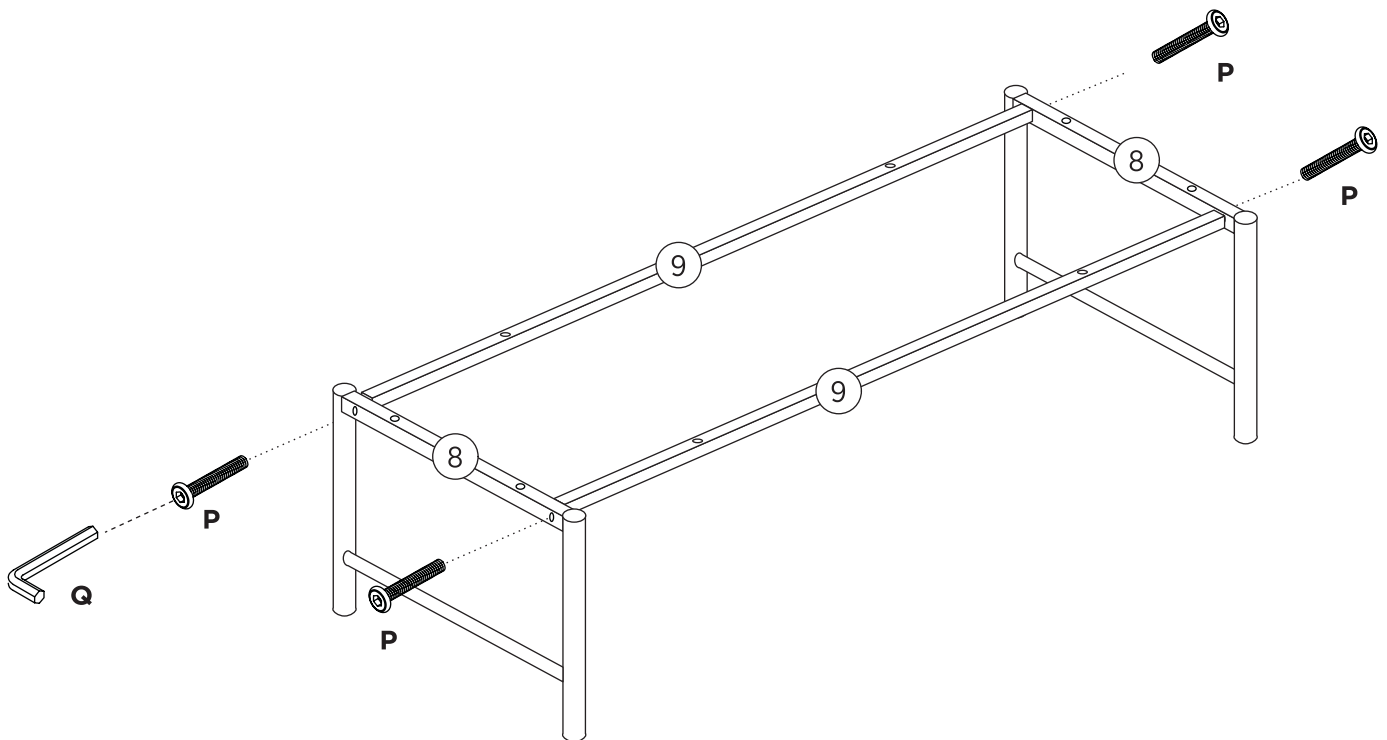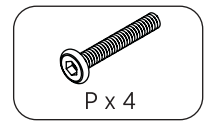

ASSEMBLY INSTRUCTIONS

STEP 23

Fix parts 8 and 9 to part 5 using bolts (O) and allen key (Q).

Fix part 18 to part 5 using screws (M) and allen key (Q), as shown.



 
M x 2



O x 8



Q x 1

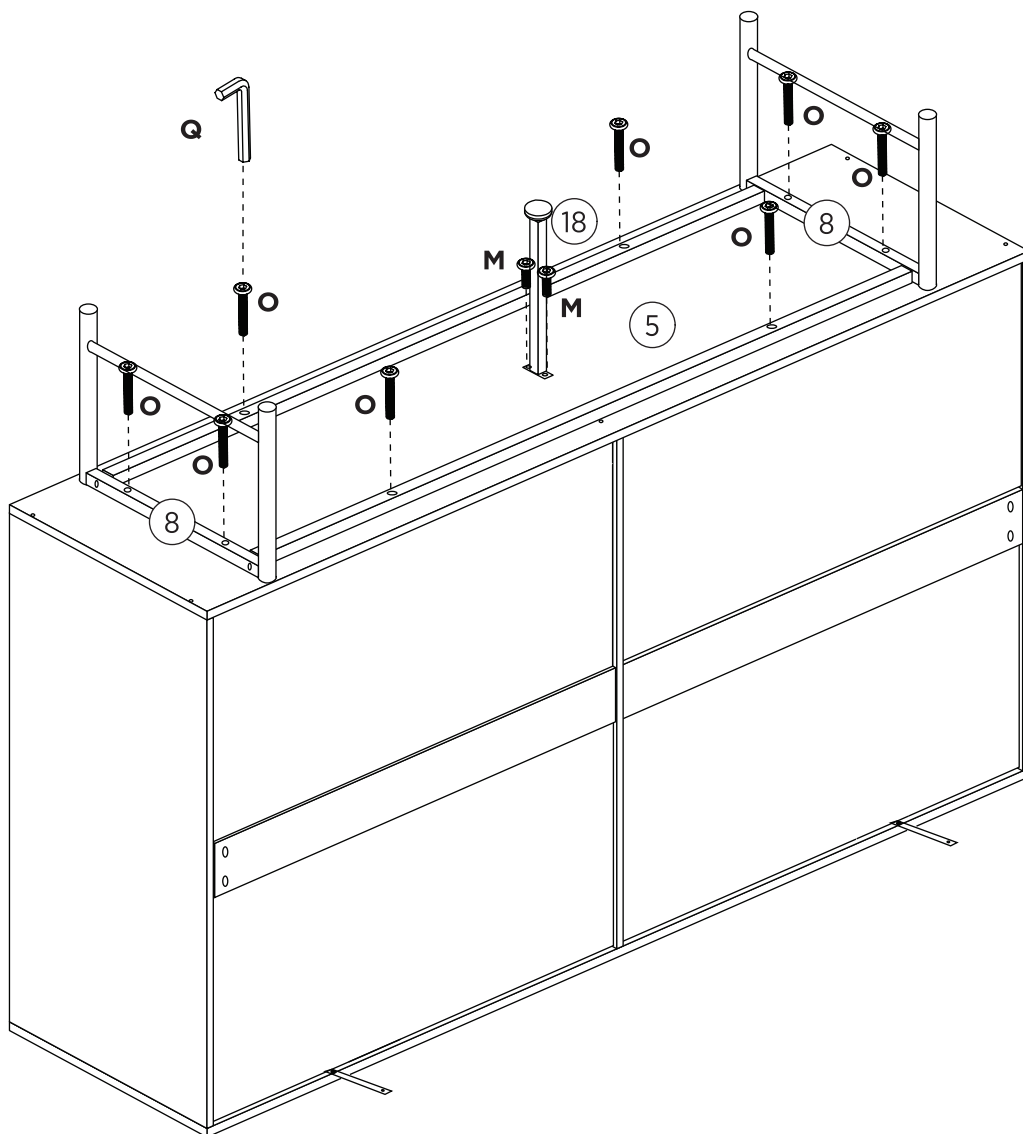

ASSEMBLY INSTRUCTIONS

STEP 24

 
Fix wedges (G) to parts 17 using screws (L), as shown.



G x 8



L x 8

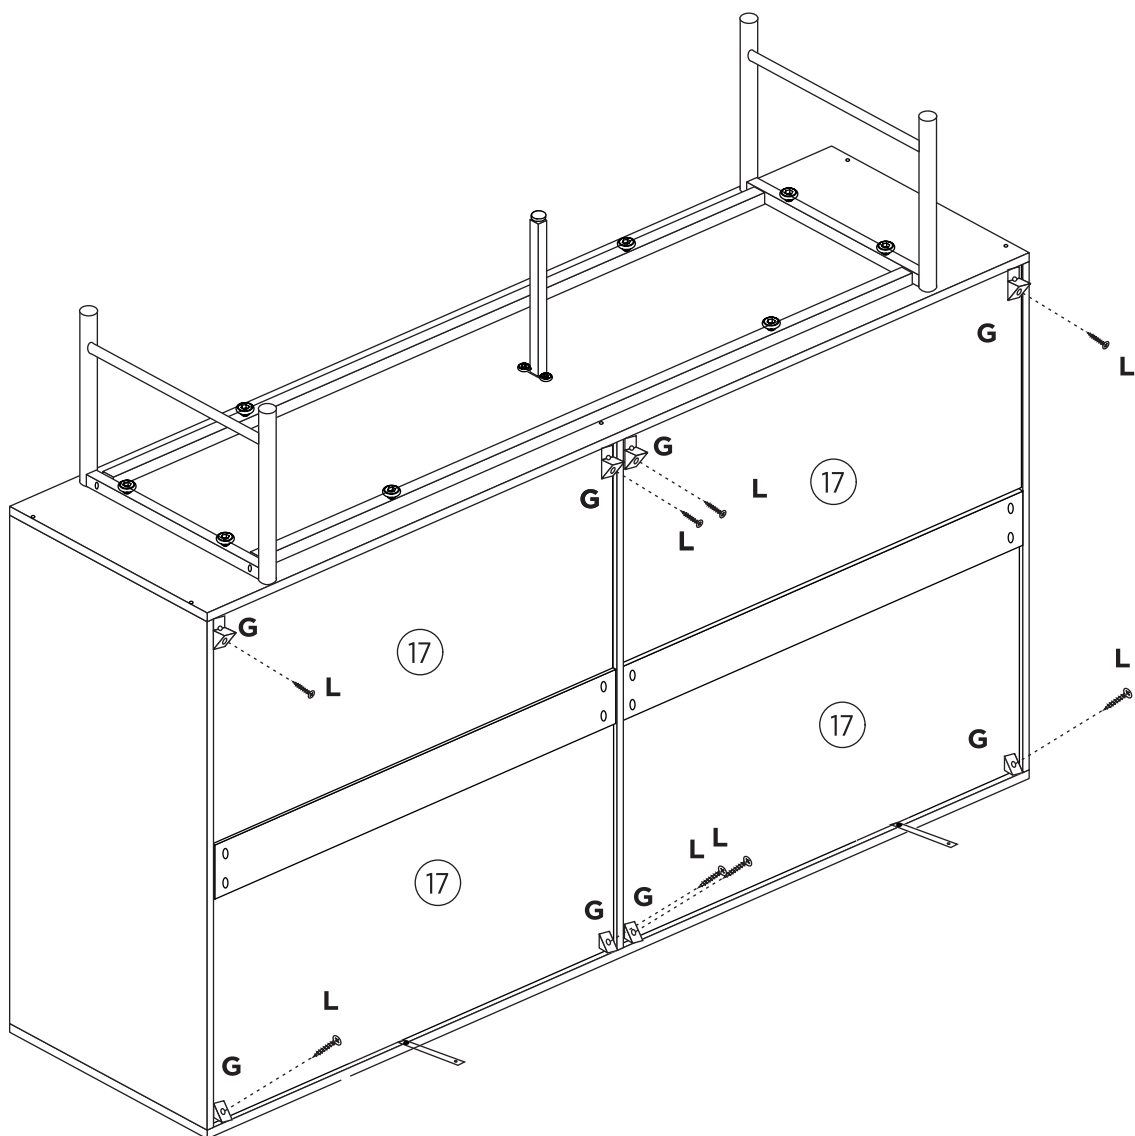

ASSEMBLY INSTRUCTIONS

 
STEP 25

For extra stability, you must fix your chest to the wall using the additional hardwares (J), (D) and (U) as shown.

Screw (D) is fixed through washers (U) and wall straps (K) and into the wall plugs (J).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your chest.

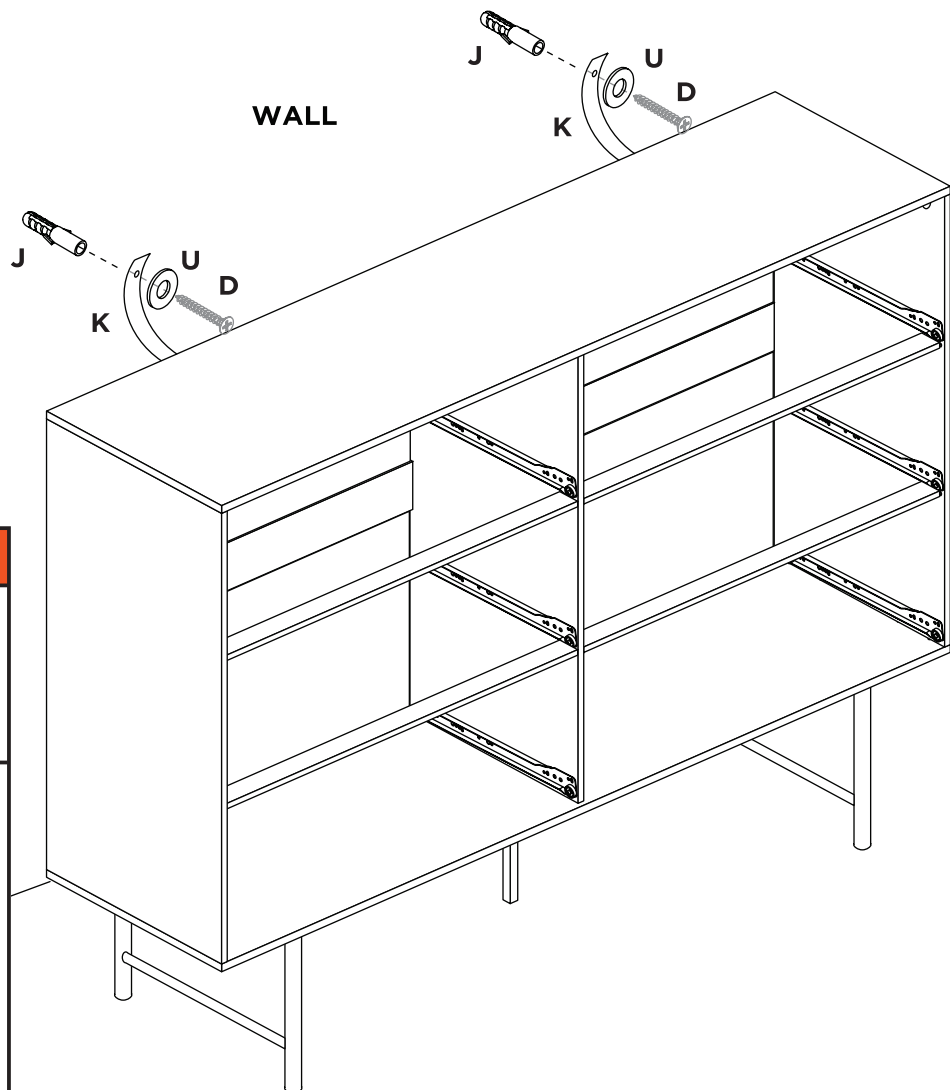

⚠ WARNING

Children have died from furniture tipover.

 
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

ASSEMBLY INSTRUCTIONS


STEP 26

Slide in drawers into the assembled unit, as shown.

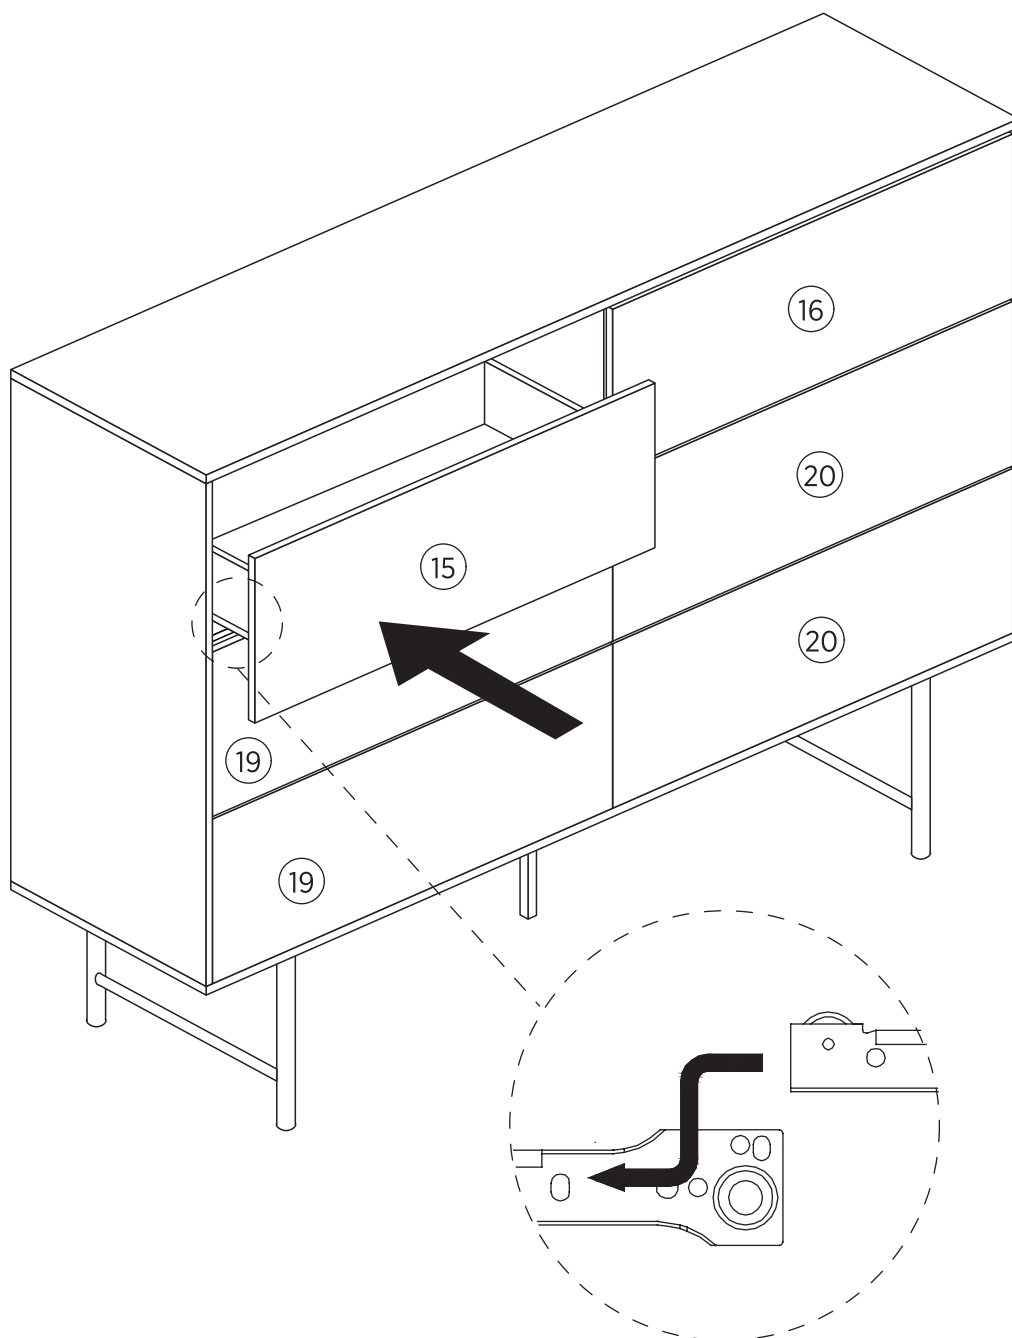

ASSEMBLY INSTRUCTIONS

 STEP 27

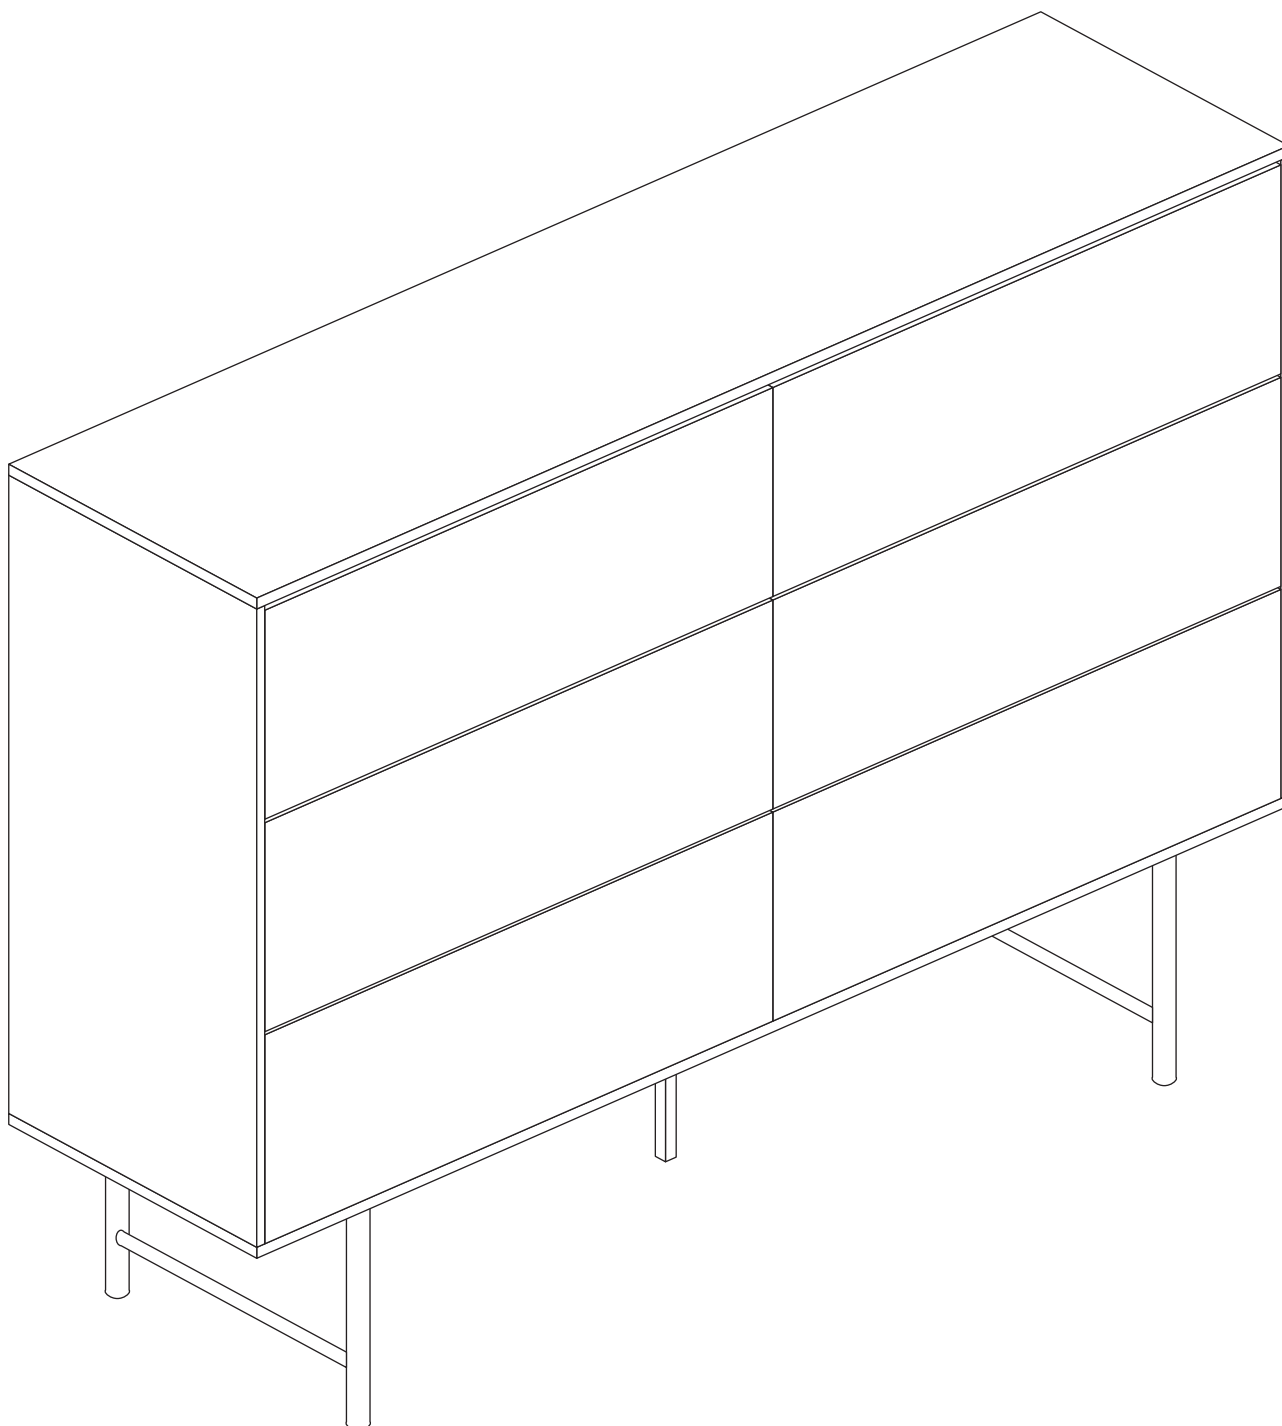

The maximum recommended weight is 15kg on Top and 5kg on each drawers.

Your Chest 2 X 3 Drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.

- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

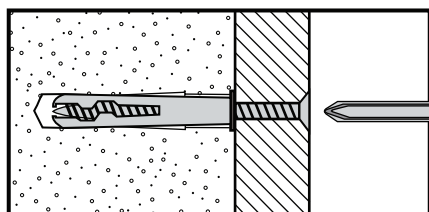


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

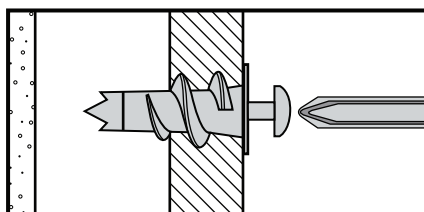


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

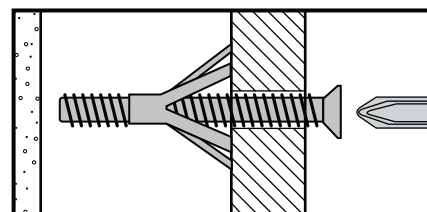


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

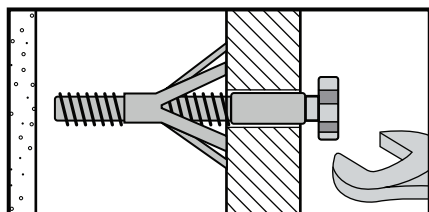


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

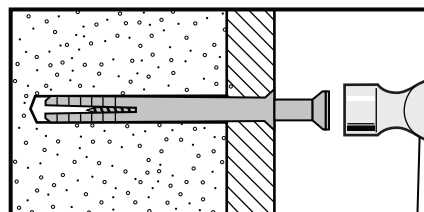

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

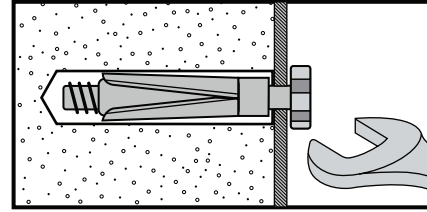

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.