

ASSEMBLY INSTRUCTION

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list






For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:


- 1.Do not FULLY –TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.
- 2.Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
- 3.Keep all hardware part out of reach of children.

MODEL: 168C



NO	PART LIST	QTY
A	BACK STRETCHER	3 PCS
B	FRONT RAIL	1 PC
C	BACK RAIL	1 PC
D	LEFT ARM	1 PC
E	RIGHT ARM	1 PC
F	DOWN STRETCHER	1 PC
G	CUSHION SEAT	1 PC

NO	DESCRIPTION	QTY
1	JCBC SCREW M6 X 50MM 	8 PCS
2	CSK SCREW M4 x 38mm 	4 PCS
3	WOOD DOWEL 	12 PCS
4	BARREL NUT M6 X 13MM 	8 PCS
5	M4 ALLEN KEY 	1 PC

STEP 1

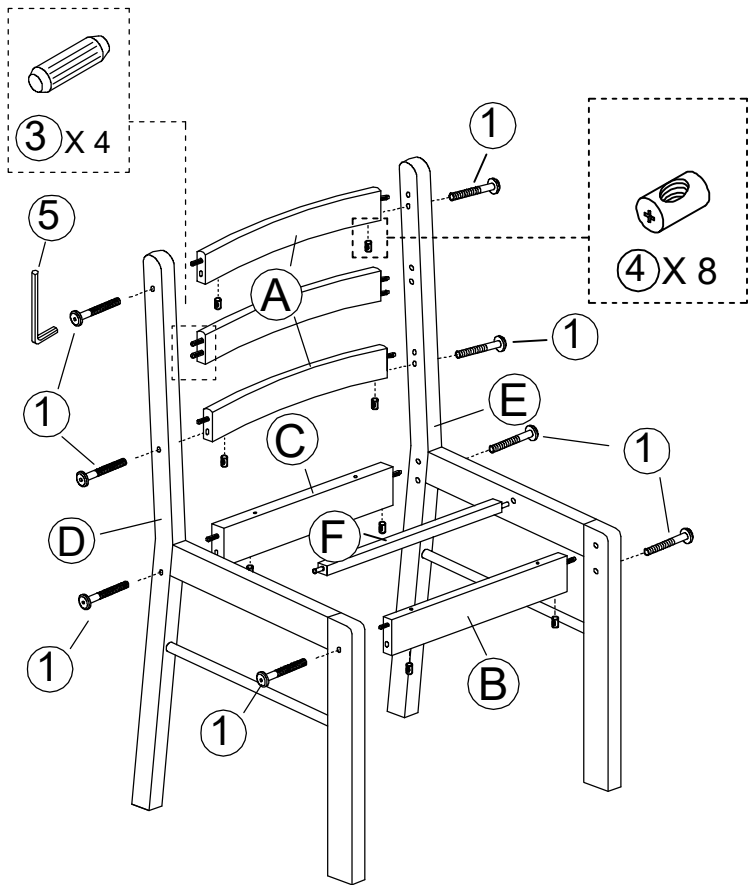

STEP 2

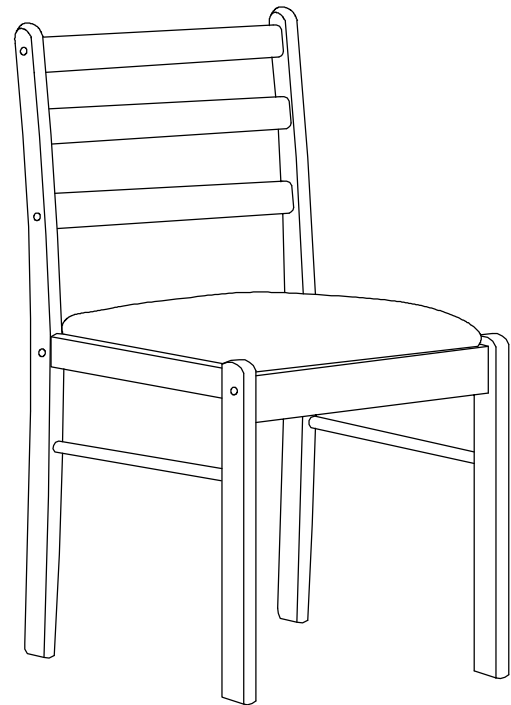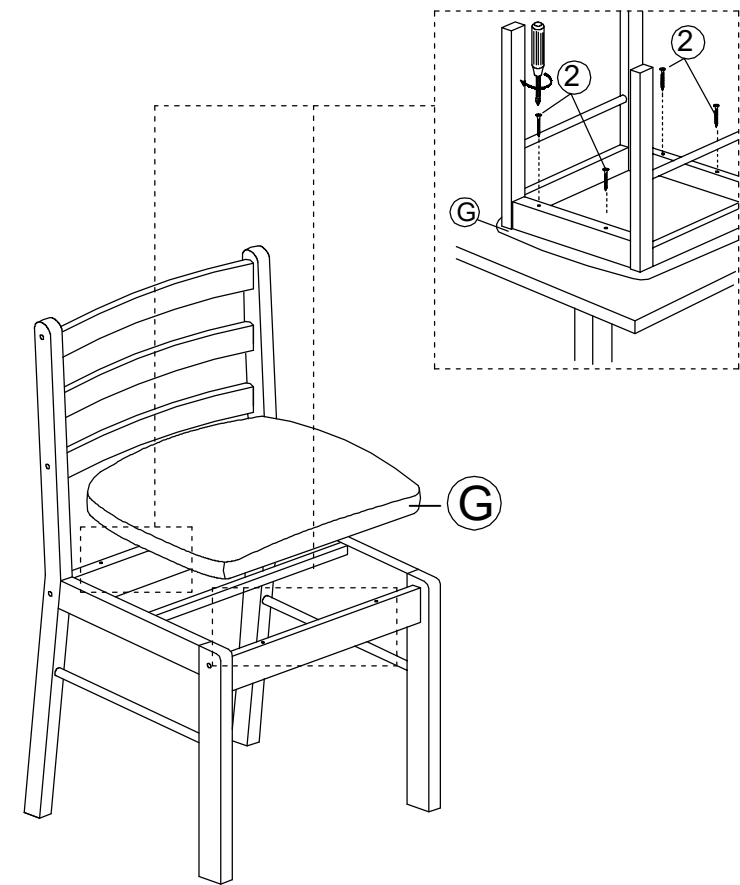

COMPLETED ASSEMBLY