

3020129-Kelly hanger and Shoe rack

Ax2	Bx2	Cx2	Dx2	Ex1	Fx1	
Gx2	①x9	②x8	③x10	④x4	⑤x4	⑥x4
	⑦x4	⑧x4	⑨x4	⑩x2	⑪x1	

1

③ x8
Ø6x40

④ x4
Ø6x35

2

⑥ x4

⑥ x4

3

③x2

②x8

⑤x4

② x8
Ø7x50

③ x2
Ø6x40

4

⑤ x4
Ø6x28

5

① x9

① x9

6

① x9

7

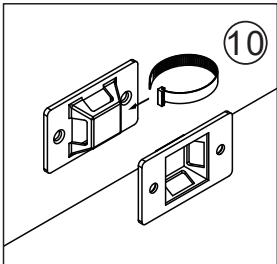
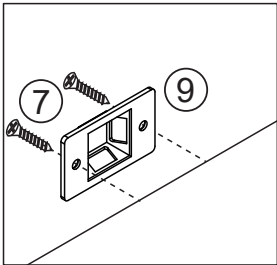
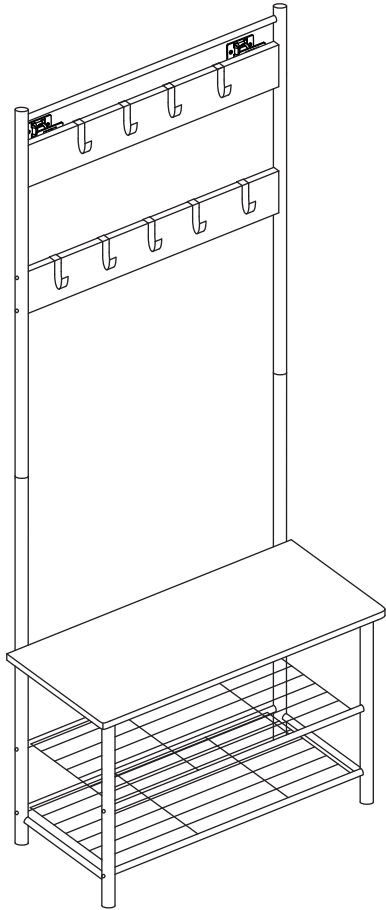
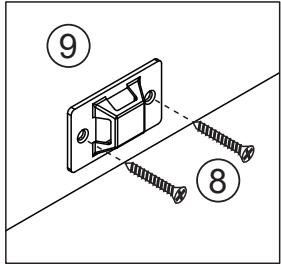
⚠ WARNING



 



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

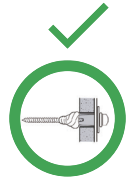
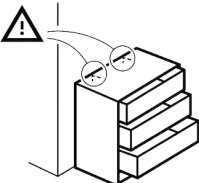


- | | | | |
|--|--|--|--|
|  x4 |  x4 |  x4 |  x2 |
| Ø4x12 | Ø4x40 | | |

WARNING

Serious or fatal crushing injuries can occur from furniture tipover.

To help prevent tipover:

Install tipover restraint or anchor device to secure safety



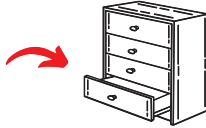
Never allow children to climb or hang on drawers, doors, or shelves.



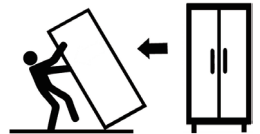
Unless specifically designed to accommodate, **do not** set TVs or other heavy objects on top of this product.



Never open more than one drawer at a time. (OR) Do not defeat or remove the drawer interlock system.



Place **heaviest** items in the lower drawers.



Always **secure** this furniture with an anchor device

Use of tipover restraints may only reduce, but not eliminate the risk of tip over.

*This is a permanent label.
Do not remove.*