


Play Pen Instruction Manual

! WARNING !

- Keep children away while assembling/disassembling the play pen.
- Do not leave your child unattended at any time whilst in or around the play pen.
- DO NOT use the play pen near naked heat source, bar heaters, open fires or exposed flames.
- Keep play pen clear of trailing cables and hanging cords.
- Keep medication and small items that a child could choke on, away from the play pen.

SAFETY INFORMATION

Read these instructions carefully before use. Keep these instructions in a safe place for future reference.

 One adult required for assembly. Follow instructions to ensure safety is not compromised. Your child may be hurt if you do not follow the instructions.



*Product may vary slightly from pictures and drawings.

babyhood[®]
AUSTRALIA

132 Compton Road Woodridge QLD Australia - 4114
sales@babyhood.com.au | www.babyhood.com.au

www.babyhood.com.au


© Copyright Bobby Bebe Pty Ltd. All rights reserved 2021


babyhood[®]
AUSTRALIA

(A)  90cm Tube x 8PCS

(B)  75cm Tube x8PCS

(C)  62cm Tube x8PCS

(D)  Tee Corner Connector x4PCS

(E)  Suction Cup Tee Corner Connector x4PCS

(F)  Equal Tee Connector x8PCS



(G) Fabric Cover

babyhood nursery products carry a 1 year from date of purchase manufacturer's fault warranty.

This warranty excludes:

- General wear and tear.
- Damage caused, by the product not being used in accordance with its instructions or the care instructions.
- Damage caused by misuse or negligence.
- Damage caused by improper transporting and handling including the packaging being opened incorrectly.
- Any product that may have been altered in design or colour.
- Any product that is not used for its intended purpose.

All warranty claims must be lodged directly with the store of purchase. An original and valid tax invoice must be provided to the store of purchase to lodge a warranty claim.

This warranty is a back to base warranty. The cost of freight to and from the store of purchase or the manufacturer is the responsibility of purchaser of the product.

If the product is under warranty, babyhood will replace or repair any defective part (at its complete discretion).

In the event of a product being replaced, as a whole unit or part thereof during the warranty period, the warranty on the replacement will expire 1 year from the original purchase date.

All warranty claims must be lodged at the place of original purchase together with proof of purchase (which must be provided in order to lodge a warranty claim) and the actual part in question. Your babyhood stockists will be able to lodge your claim in writing through our babyhood customer service department.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

Thank you for purchasing a quality babyhood product

We have compiled some tips on how you can enjoy your babyhood product for longer:

General Care

The correct use and maintenance of this play pen is essential. In some climates mould and mildew can affect the fabric on the play pen. This play pen requires regular maintenance.

Cleaning

The cover may be gently spot cleaned. For heavy soiling the cover may be removed and hand washed in cold water using a very mild detergent solution. Lie cover flat and dry in a well ventilated area out of direct sun light. Do not use bleach, ammonia based or abrasive cleaning chemicals. Do not dry clean. The frame and plastics may be cleaned with a damp cloth and a mild detergent solution and dried with a soft cloth. Clean any spills immediately with a soft, clean and damp (not wet) cloth and do not use abrasive cleaners.

Maintenance

Regularly inspect all tubes and fixings. Ensure that all are secure before each use of the product. Do not use the play pen if any components are broken or missing, or the product is not assembled correctly. Regularly inspect fabric and stitching and check that it is undamaged. Do not use accessories or replacement parts other than those approved by the manufacturer.

Proper Storage

If you need to put your play pen in storage for any period of time do not store them in a damp or hot dry environment. Allow air movement around the play pen and do not stack anything on top of it.

Failure to do this may invalidate your warranty.


Step 1 - Assemble the bottom

Install the bottom tubes A and B into the bottom of Fabric Cover G by using the corresponding connectors: The middle sections are connected by using 4x F (Equal Tee Conectors). The bottom corners are connected by using 4x E (Suction Cup Tee Connector) as shown below:



Step 2 - Assemble the middle sections

Insert the 8x tubes C in the vertical sections of the cover G with their corresponding connectors: The vertical sections are connected by using 4x F (Equal Tee Conectors). The top corners are connected by using 4x D (Tee Corner Connector) as shown below:

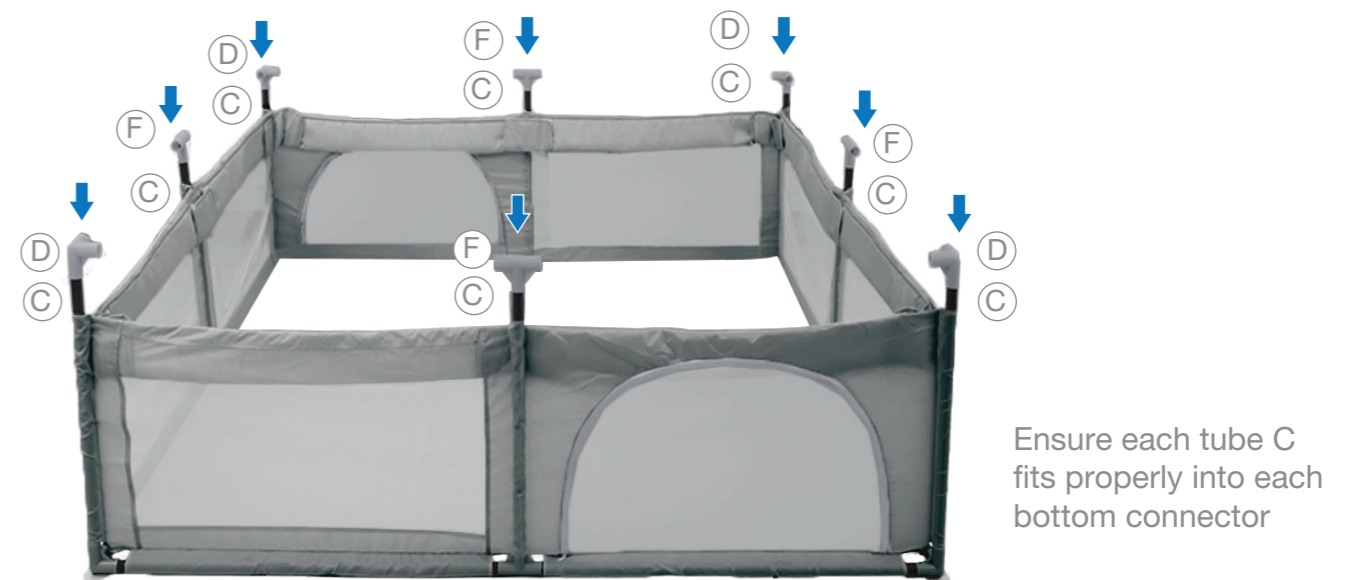

Step 3 - Assemble the top


Connect 4x tubes A and 4x tubes B with their corresponding connectors as shown below:



Ensure each tube fits properly into each connector

Step 4 - Secure the cover

Check each connection is properly done and then pull tightly the cover flaps to secure them at outer side of the cover. This way you ensure the attachment of the cover to the piping structure and the top connections are covered.

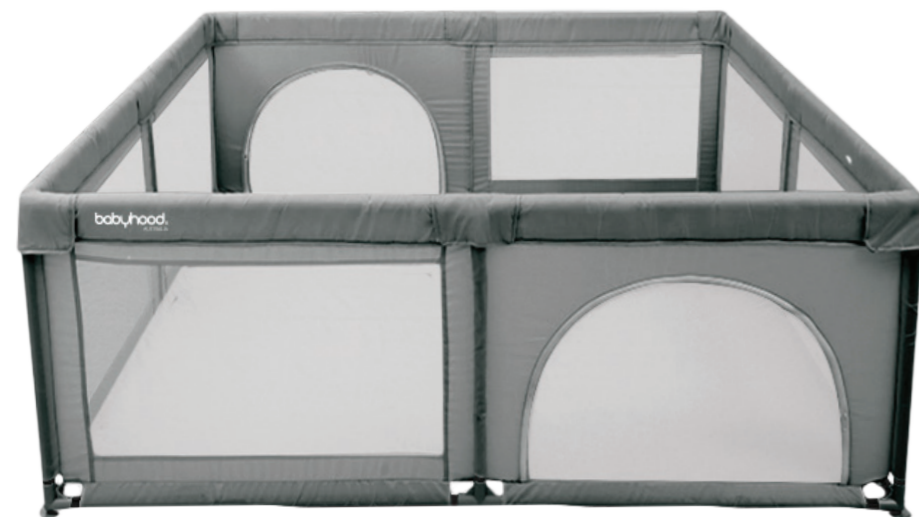

Before each use, press the suction corners to the floor so the play pen is firmly into place and it does not move.

Dust and dirt on floor or play mat may prevent the suction cup from working properly.

When in use, always keep the openings fully zipped.

IMPORTANT | REFERENCE – READ CAREFULLY

BEFORE USE, REMOVE AND DISPOSE OF ALL PLASTIC BAGS AND PACKAGING AND KEEP THEM OUT OF REACH OF CHILDREN

- Adult assembly required.
- Adult supervision is required at all times.
- Your child is your responsibility. Do not leave your child unattended at any time whilst in or around the play pen.
- To prevent serious injury or death, securely install gate or enclosure and use according to these instructions.
- Incorrect installation can be dangerous.
- Check that the play pen is properly assembled and safe prior to each use.
- Do not use the safety barrier if any components are damaged, missing or disassembled.
- Do not use it upside down
- Suitable for children from 6 months to the earlier of 36 months or when your child can climb over the play pen.
- Ensure the opening is zipped fully at all times, unless in use with strict adult supervision.
- Do not sit or rest any weight on the sides of the play pen.
- Do not place any accessories or objects against the frame of the play pen. The frame is not designed to carry weight.
- The play pen must be placed on a flat safe surface, away from cords, blinds, heaters or other heat sources, stair cases, near water, and other dangerous obstructions.
- The play pen is for domestic use only.
- Regularly inspect the product and all its components to detect any damage and/or tear and wear sign, unstitching and tearing, prior to every use.