



Installation for bottle trap

TP B/TRAP32 & TP B/TRAP40 in Chrome or Matte black

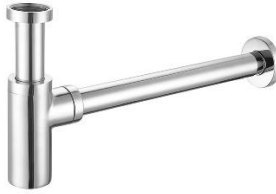


Product drawing:

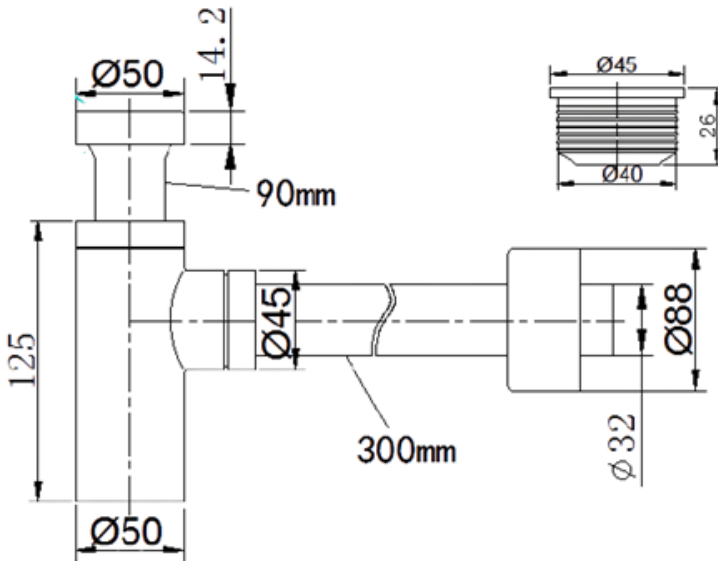


Installation for bottle trap


1. To calculate the length of the Outlet Pipe, fit the pre-assembled bottletrap to the basin and measure from the bottletrap shoulder (A) to elbow coupling (B). Add 25mm for internal pipe connection. (Pic A).

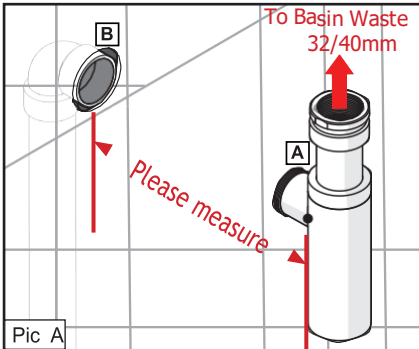


2. Cut the the Outlet Pipe to the calculated length removing all swarf material from the end of the pipe. (Pic B)

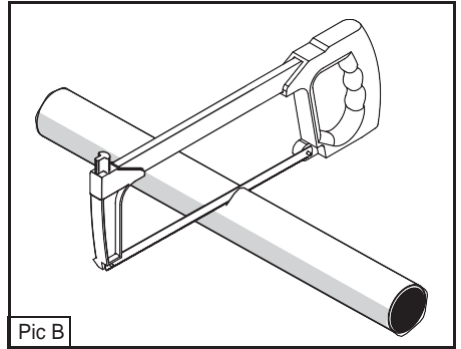

3. Once the Bottletrap is removed from the basin and seals lubricated, slide the Outlet Pipe (12) into the Bottletrap shoulder and tighten with the Outlet Retaining Nut.(Pic C)

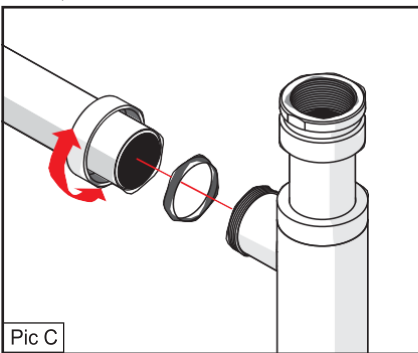

4. Slide the Cover Plate and Kee RubberSeal onto the Outlet Pipe. (Pic D)

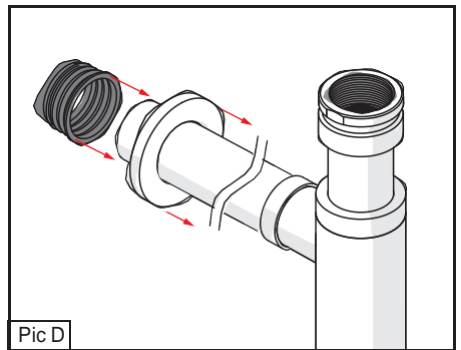

5. Lubricate the Kee seal and push-fit the Bottletrap and Outlet Pipe assembly into the elbow coupling. (Pic E)

Fit the Bottletrap to the basin waste ensuring the height is adjusted to allow fall of water.

Test to ensure the fittings are secure and the Bottletrap is water tight.

