 
 




 







 


 

 







 

 
 




Instruction

4" Foostable



Part List

 X 2	 X 2	 X 1	 X 2	 X 2	 X 2
 X 2	 X 1	 X 4	 X 2	 X 2	 X 11
 X 11	 M4*20 X 22	 M4*20 X 4	 M4 X 26	 X 1	 X 4
 X 16	 X 16	 3.5*40 X 16	 3.5*18 X 4	 3.5*20 X 8	 M6*30 X 12
 Ø6.5*16 X12	 3.5*12 X 8	 X 2	 X 4	 X 2	 X 2
 X 8	 X 8	 X 2			

Assembling Guide

Step 1


Install Part A. Choose 3 holes pole (9) first, wear player (12), stopper ring (18), plastic washer (19), plastic spring (20) in turn. Use screw (14) and nut (16) in proper hole position to secure player (12) and use screw (15) and nut (16) to secure stopper ring (18).

Install Part B. Choose 2 holes pole (10) first, wear player (12), plastic washer (19), plastic spring (20) in turn. Use screw (14) and nut (16) in proper hole position to secure player (12).

Install Part C. Choose 3 holes pole (9) first, wear player (12), plastic washer (19), plastic spring (20) in turn. Use screw (14) and nut (16) in proper hole position to secure player (12).

Install Part D. Choose 5 holes pole (11) first, wear player (12), plastic washer (19), plastic spring (20) in turn. Use screw (14) and nut (16) in proper hole position to secure player (12).


Use same steps to install part E, F, G, H

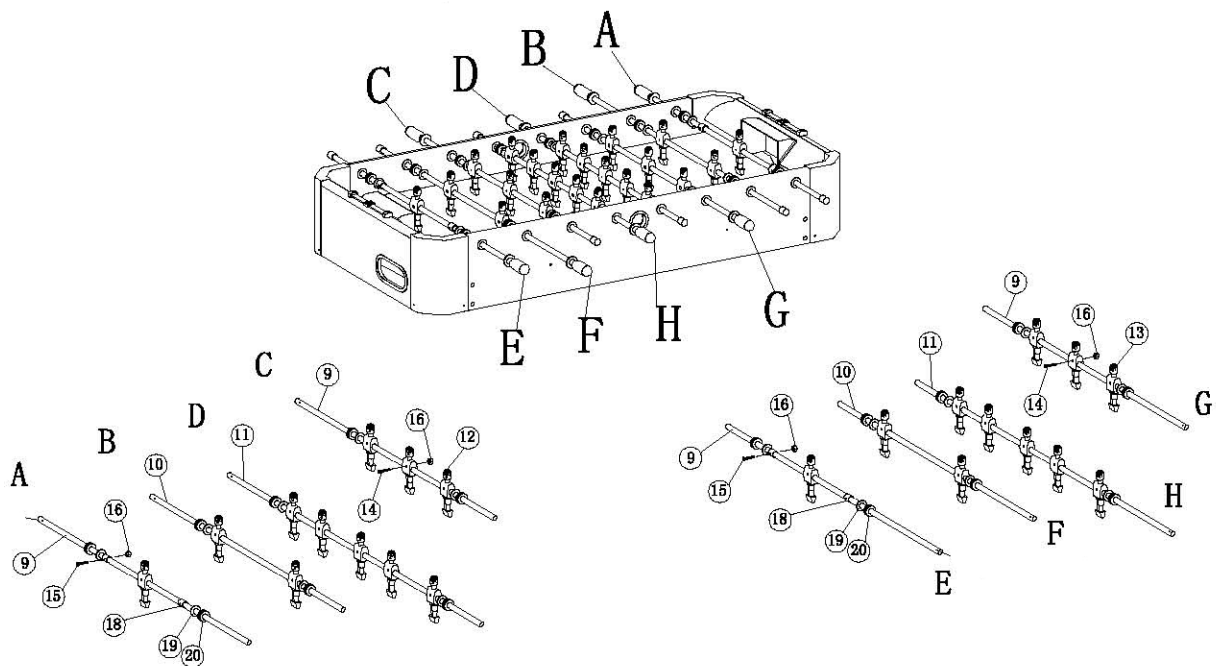

Step 2


Follow the below image, insert the part A, B, C, D into the plastic holes on panels i.

Please make sure the small hole on each pole to be in one side. The player's head down when install. Same steps to install part E, F, G, H. The small hole need to be in the other side

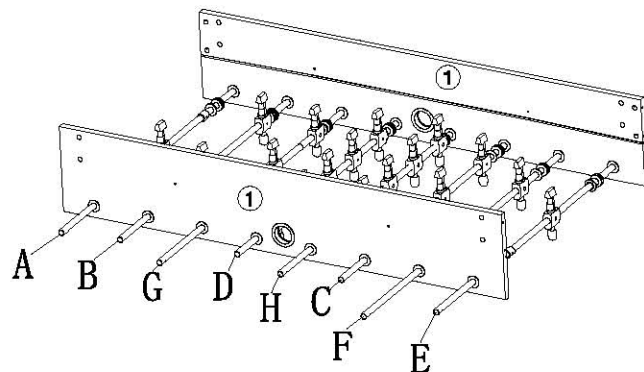


Step 3

Put end panel 2 between side panel 1 and fasten it using screw 21

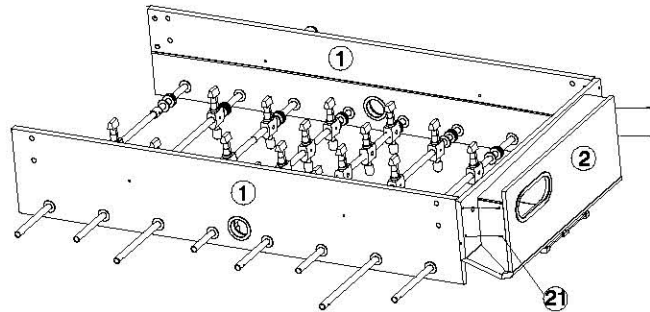


Step 4

Slide bottom panel from notch of side panel 1, make sure white side face down. Fasten another end panel using screw 21

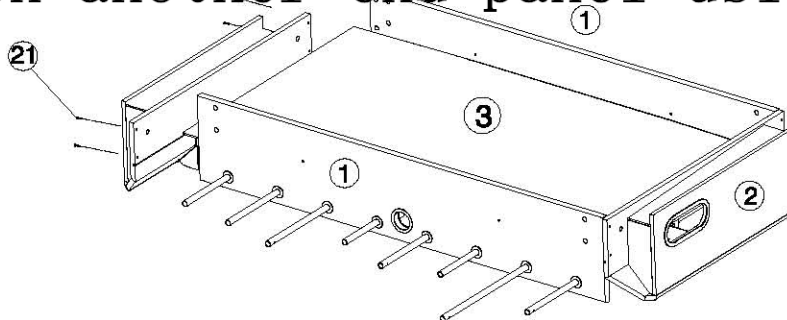


Step 5

Put 2 bottom support between side panel 1, and fasten them using screw 21

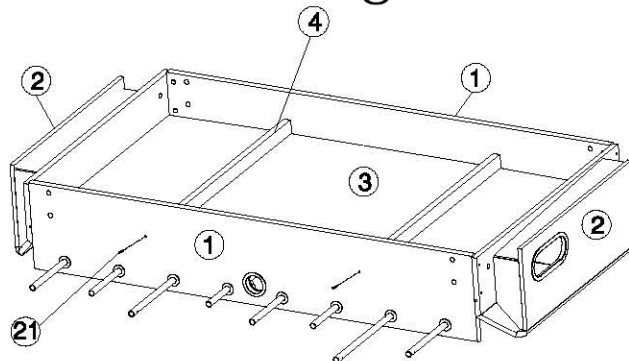


Step 6

Use hardware 24,25 to assemble leg 5 and 6.
Please do not tighten screws in this step

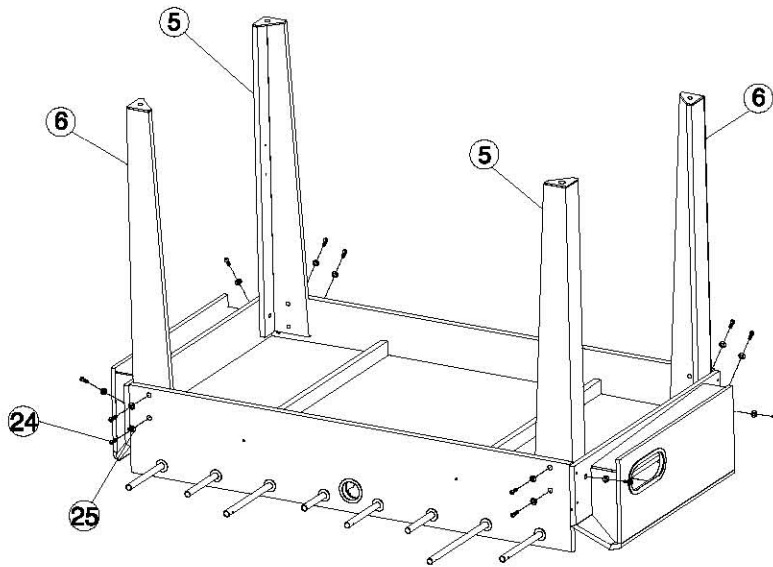


Step 7

Assemble leg support 7 in the middle of leg 5 and 6 using screw 23

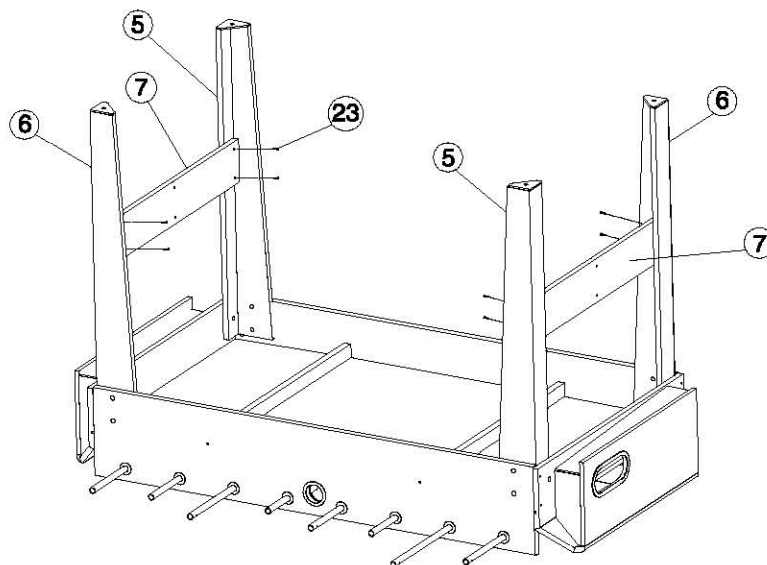

Step 8

Put panel 8 between leg support panel 7, fasten using screw 21
Screw height adjuster screw in leg 5 and 6.
Check if all the screws are in position, tighten all the screws

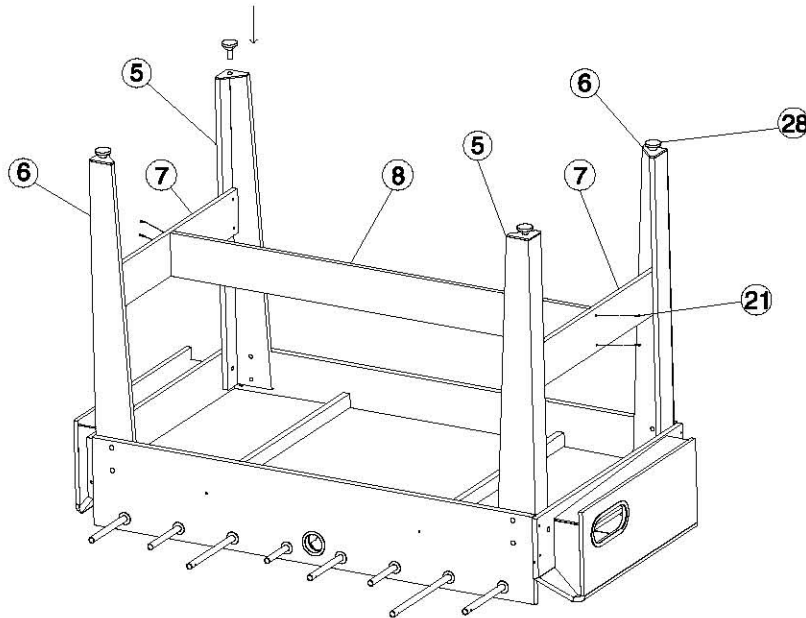

Step 9

Turn the foostable over (2 adults needed)

Put Left corner 39 between side panel 1 and end panel 2, and fasten using screw 26. Do the same on right corner 30.

Insert handle 31 into steel pipe, insert the pipe cap at the other end

Install the Scorer 33 using screw 22

