 


ASSEMBLY INSTRUCTION MANUAL

MODEL NO:
CAPRI1800

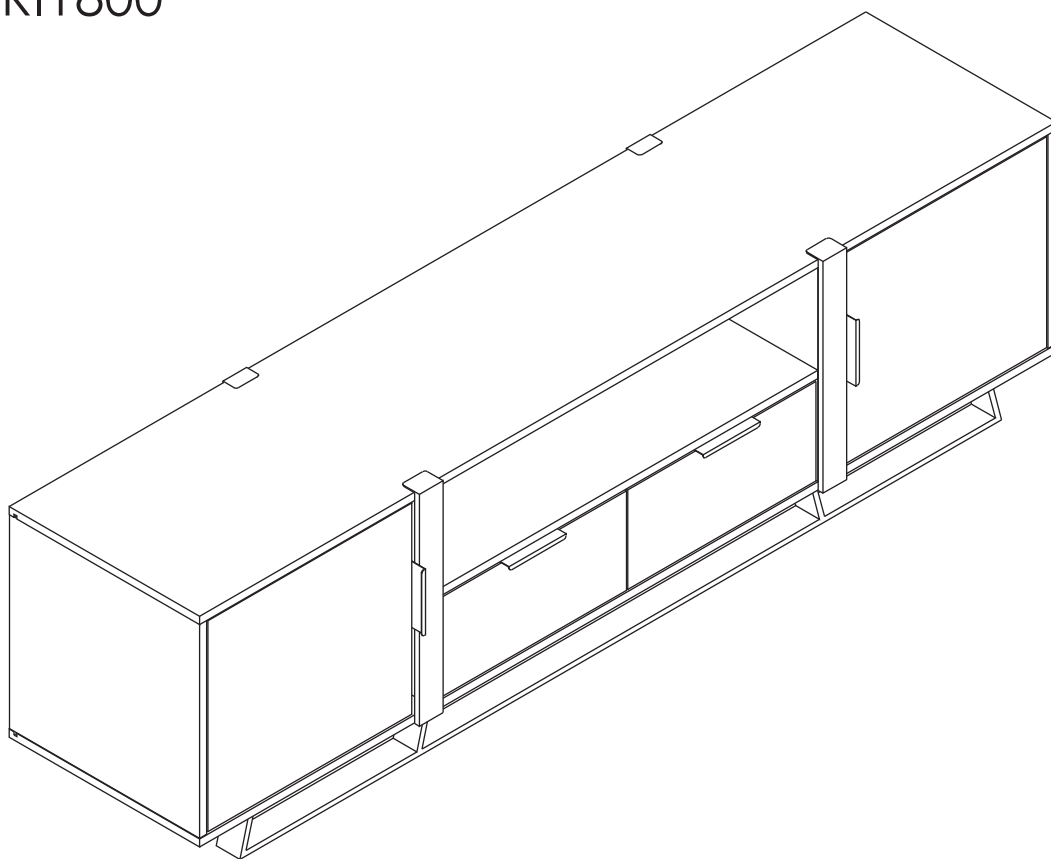

Note:
Ready to Assemble

IMPORTANT:

Please read through the instructions carefully before assembly and keep them for future reference.



CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall (anchor device not included).

For a complete range of bracket options please visit:
www.tauris.com.au/collections/brackets



Congratulations on your purchase of a new Criterion furniture item.

To increase the longevity of your item, please follow these assembly instructions to save you time, make assembly easier and prevent possible damage to your new unit.

PLEASE NOTE:

- Correct assembly is your responsibility.
- We suggest the use of hand tools only to tighten screws and fittings, as power tools can strip threads if over-tightened.
- When moving this furniture item, always carry the unit. Dragging or sliding the unit could damage the unit and the floor surface.
- It is important to assemble the unit on a soft surface like carpet to prevent damage. If you don't have carpet, place a blanket down before starting.

CUSTOMER SERVICE:

Missing or Faulty Parts:

Please recheck the instructions and packaging to ensure the parts are missing before contacting the store you purchased the item from.

The store will need the following information:

- Copy of purchase slip or receipt.
- Model number of the unit purchased.
- Description or part number of the missing or faulty part.
- Quantity of parts needed.

If for whatever reason you cannot contact the store, please contact Criterion directly at <http://www.criterionhome.com.au>

Product of RVM Australia Pty Ltd

13 Merino Entrance
Cockburn Central
Western Australia 6164
PH: 1300 883 109

 


PANELS & PARTS LIST:

Please check you have all parts listed before you begin.





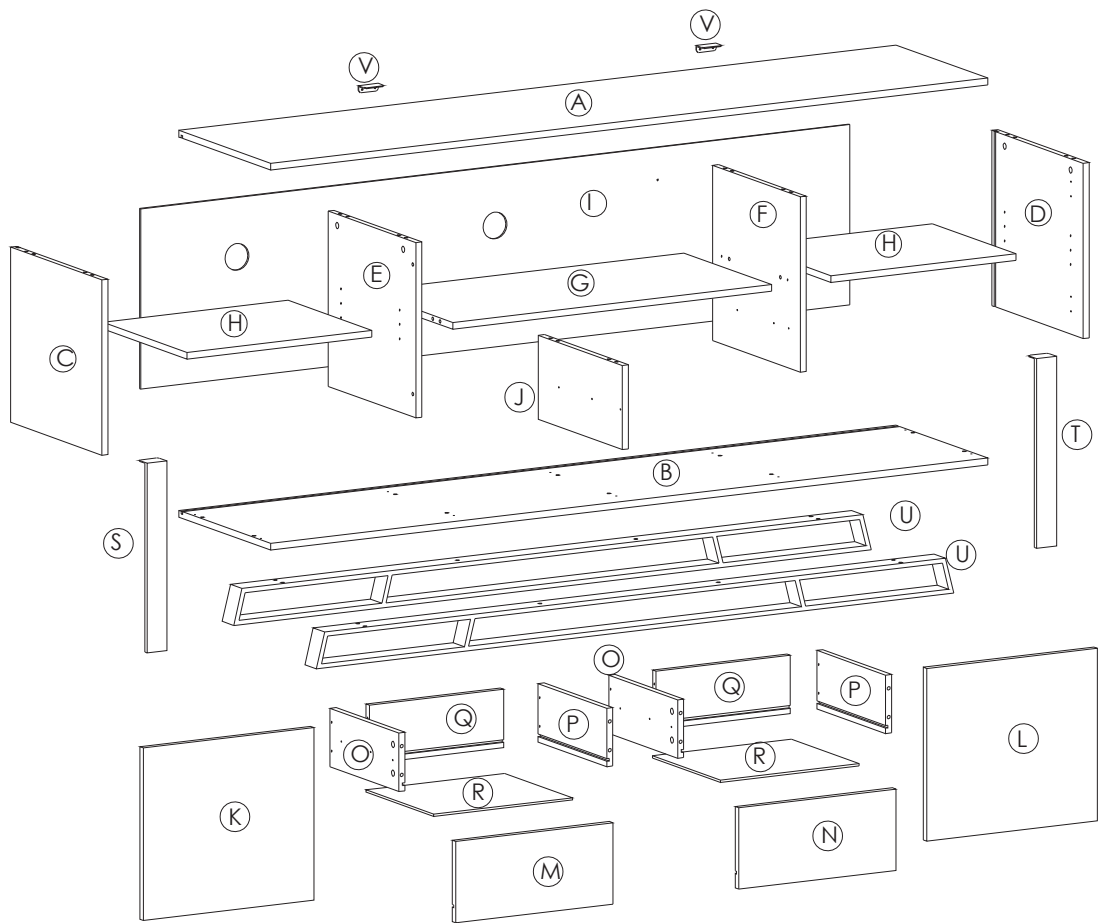

 
 














CARTON 1		
Part #	Description	Qty
A	Top	X1
B	Base	X1
C	Left side	X1
D	Right side	X1
E	Left divider	x1
F	Right divider	X1
G	Component shelf	X1
H	Cupboard shelf	X2
I	Back	X1
J	Drawer divider	X1
K	Left door	X1

CARTON 1		
Part #	Description	Qty
L	Right door	X1
M	Left drawer front	X1
N	Right drawer front	X1
O	Drawer side (Left)	X2
P	Drawer side (Right)	X2
Q	Drawer back	X2
R	Drawer base	X2
S	Left decorative metal	X1
T	Right decorative metal	X1
U	Legs	X1
V	Back decorative metal	X2



 HARDWARE LIST:

Please check you have all parts listed before you begin.

PACK 1			
1	Dowel		X24
2	Camlock		X22
3	Quick Fit		X22
4	Bolt 6 x 11mm		X10
5	Screw M6 x 20mm		X12
6	Screw M6 x 12mm		X4
7	Screw 4 x 30mm		X12
8	Screw 3.5 x 14mm		X24
9	Screw 3.5 x 12mm		X36
10	Runner set		X2
11	Handle		X4
12	Hinge		X4
13	Non-slip feet		X6
14	Shelf support		X8
15	Door bumper		X2
16	Bumper		X4
17	Screw 3 x 18mm		X4
18	Allen key M4		X1
19	Screw M4 x 36mm		X2
20	Screw M4 x 12mm		X2
21	Strap		X2
22	Wall plug		X2

Tools you will need (Not Included):

- Phillips head screwdriver.

IMPORTANT INFORMATION:

 
- Max weight for a centre pedestal TV: 30kgs.
- Max weight for a 2 foot TV: 80kgs.
- Take caution when placing larger TVs on the unit.

INSTALLING DRAWER RUNNER TIPS:

- Runners must be separated before assembly.
- After separating the runner, set aside until needed for assembly.


Step 1

- Fully extend the runner.

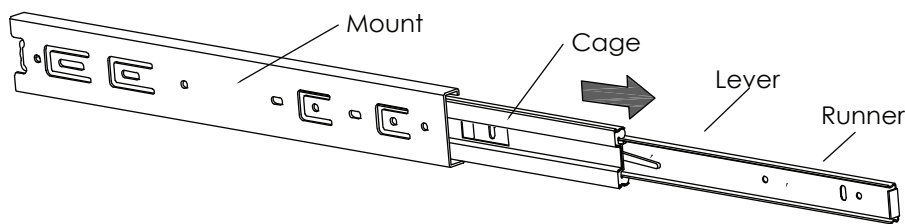


Step 2

 - Push the lever up to release the inside of the runner.

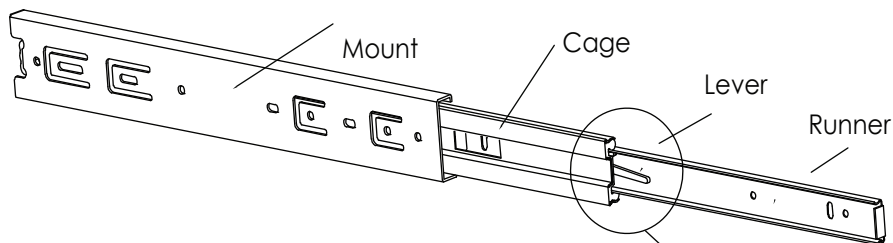


Step 3

 - Remove the inside of the runner.

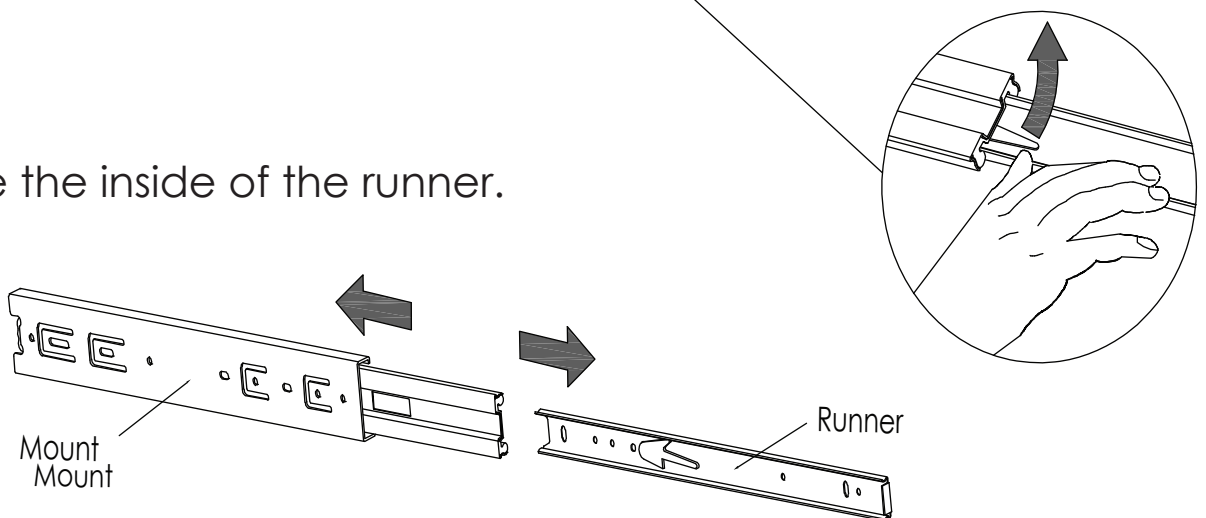

QUICK TIP:

 
Make sure that when installing the runner you are using the correct holes.

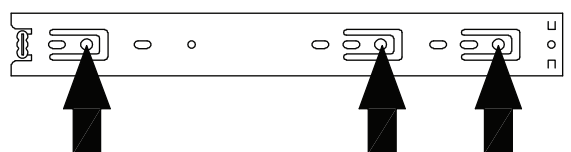

INSTALLING CAM LOCK TIPS:


Quick Fit

 - Tighten the quick fit until the shoulder is flush with the panel.
- DO NOT under tighten or over tighten.

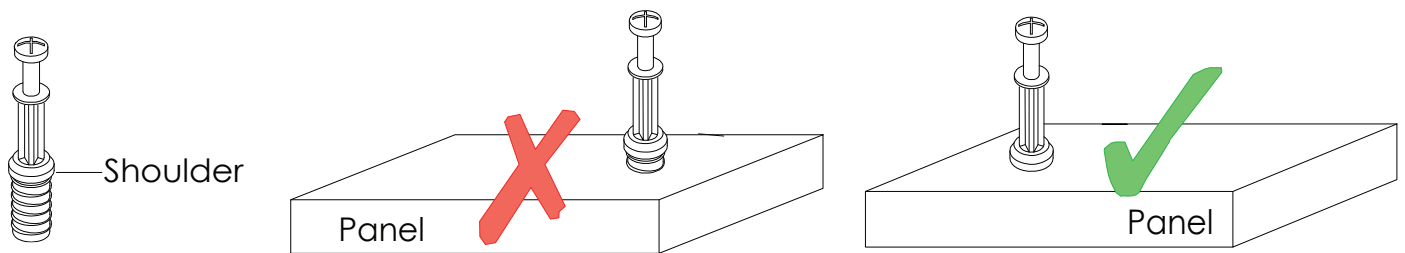


Cam Lock

 
- When fitting a cam lock, ensure the starting position is correct before connecting the quick fit.

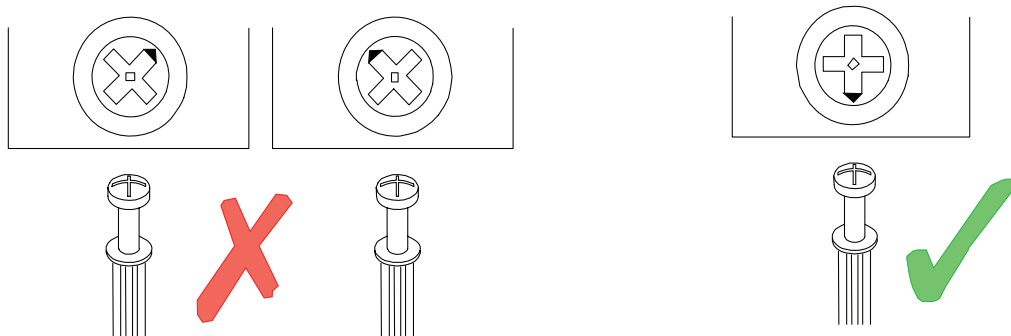

 
- The quick fit head will then be in the center of the cam lock when the panels are joined.
- Turn the cam lock clockwise.

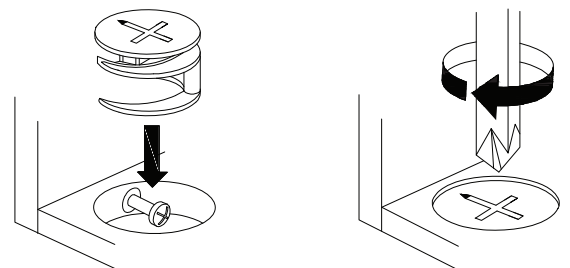

 
STEP 1:

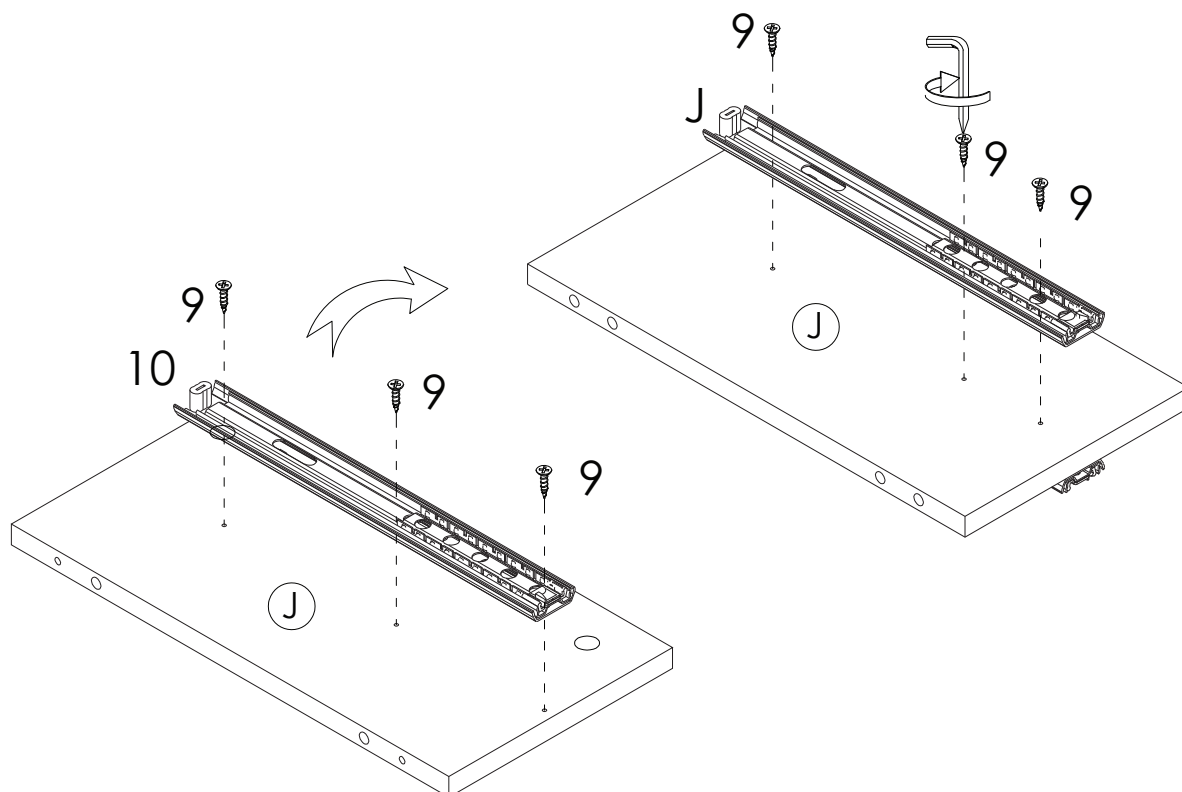

 
STEP 2:

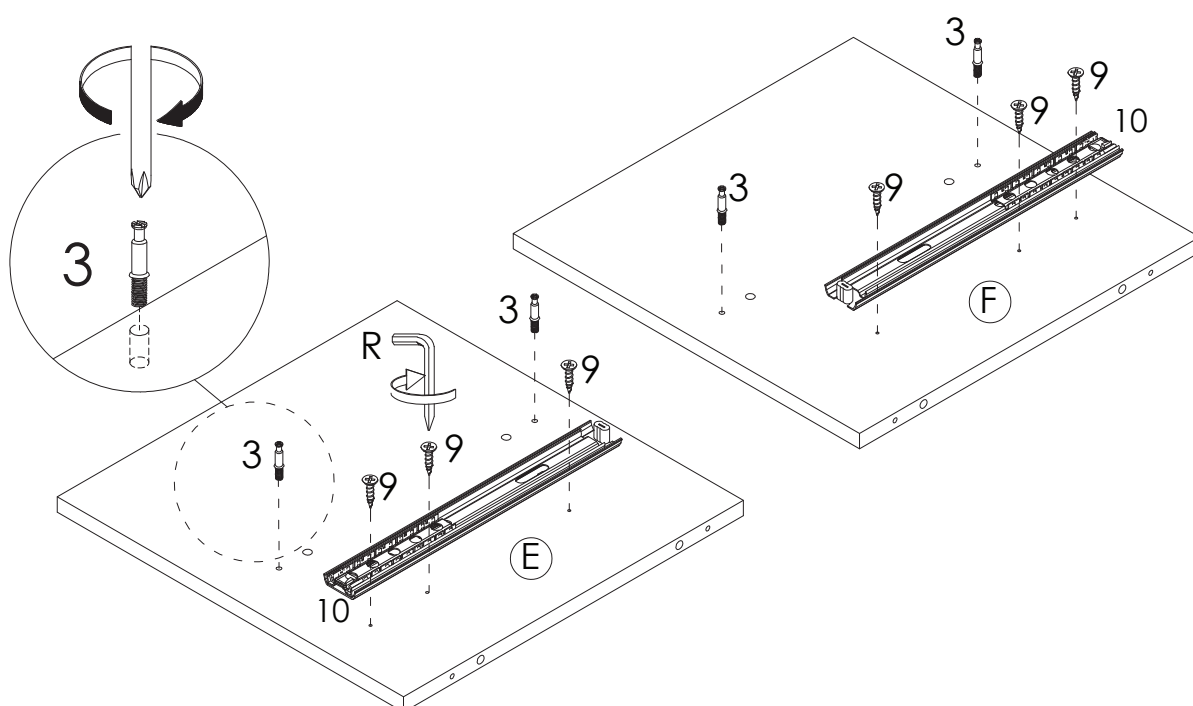

 
STEP 3:

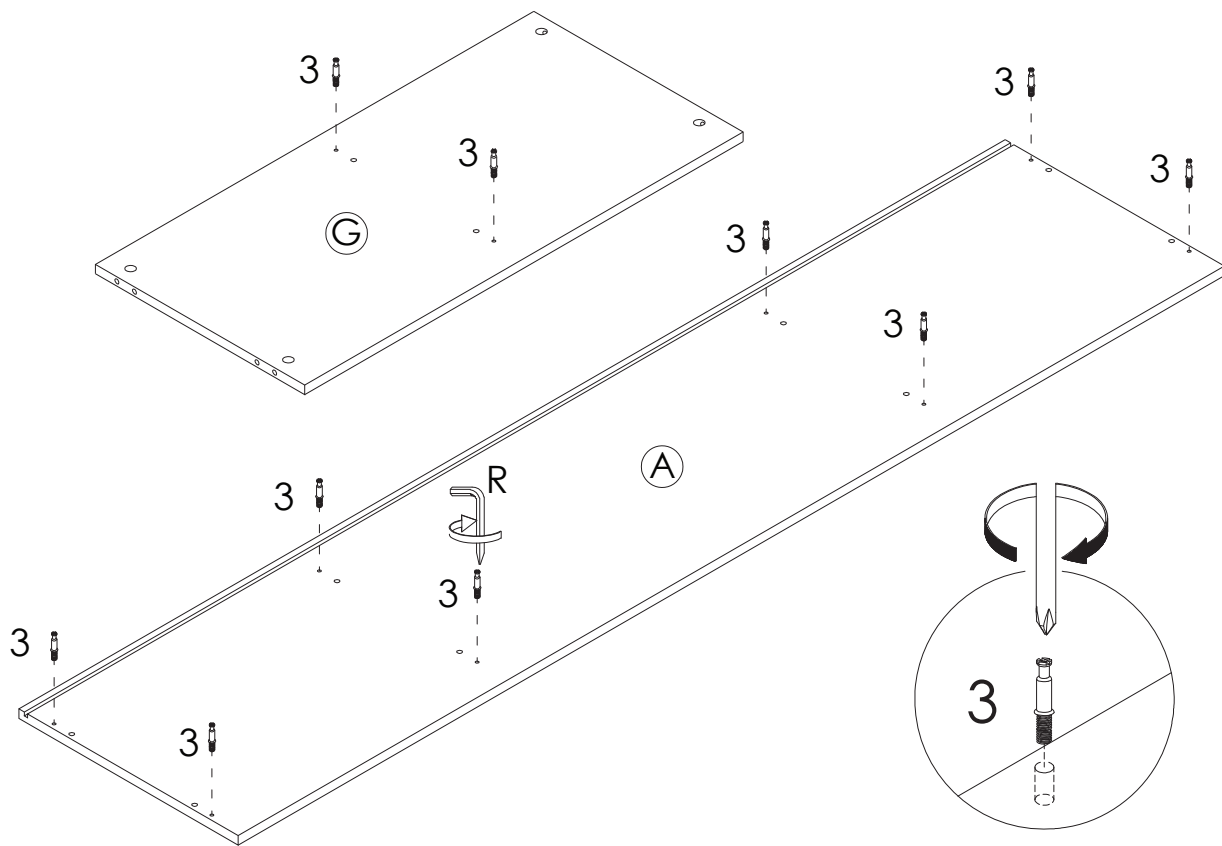

 
STEP 4:

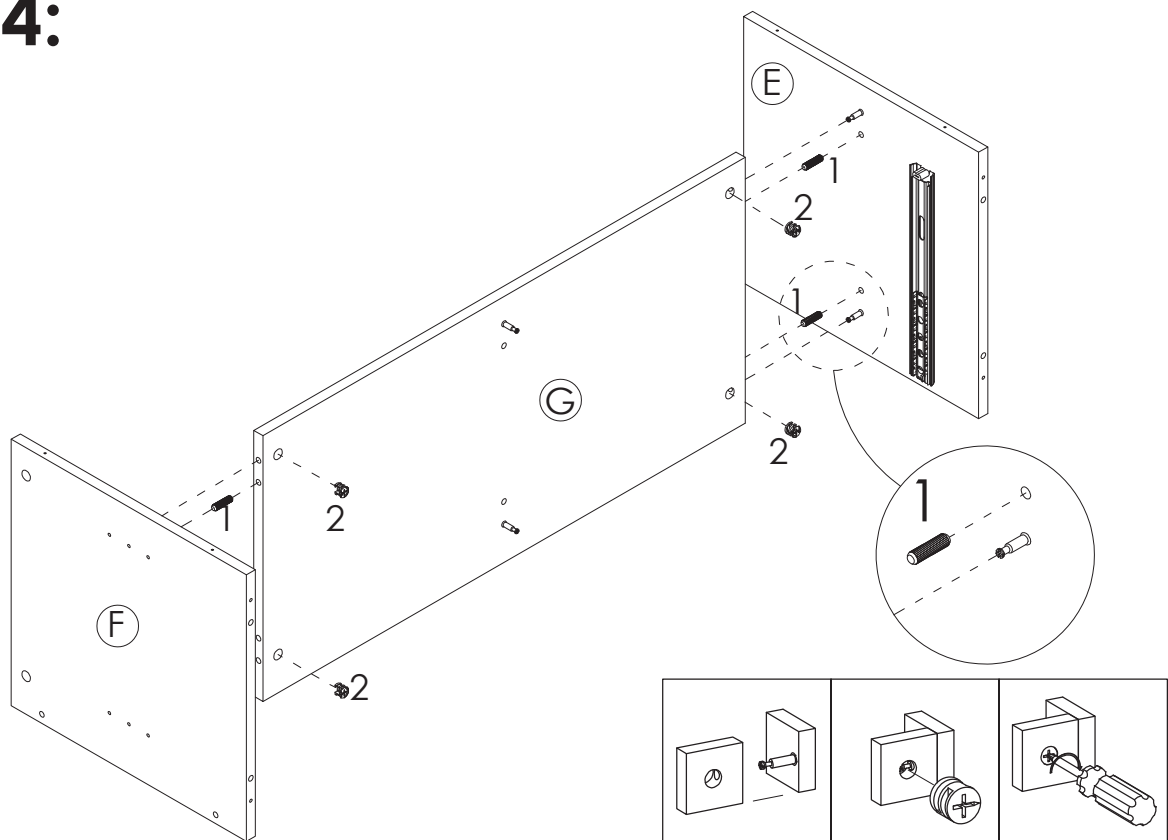

 
STEP 5:

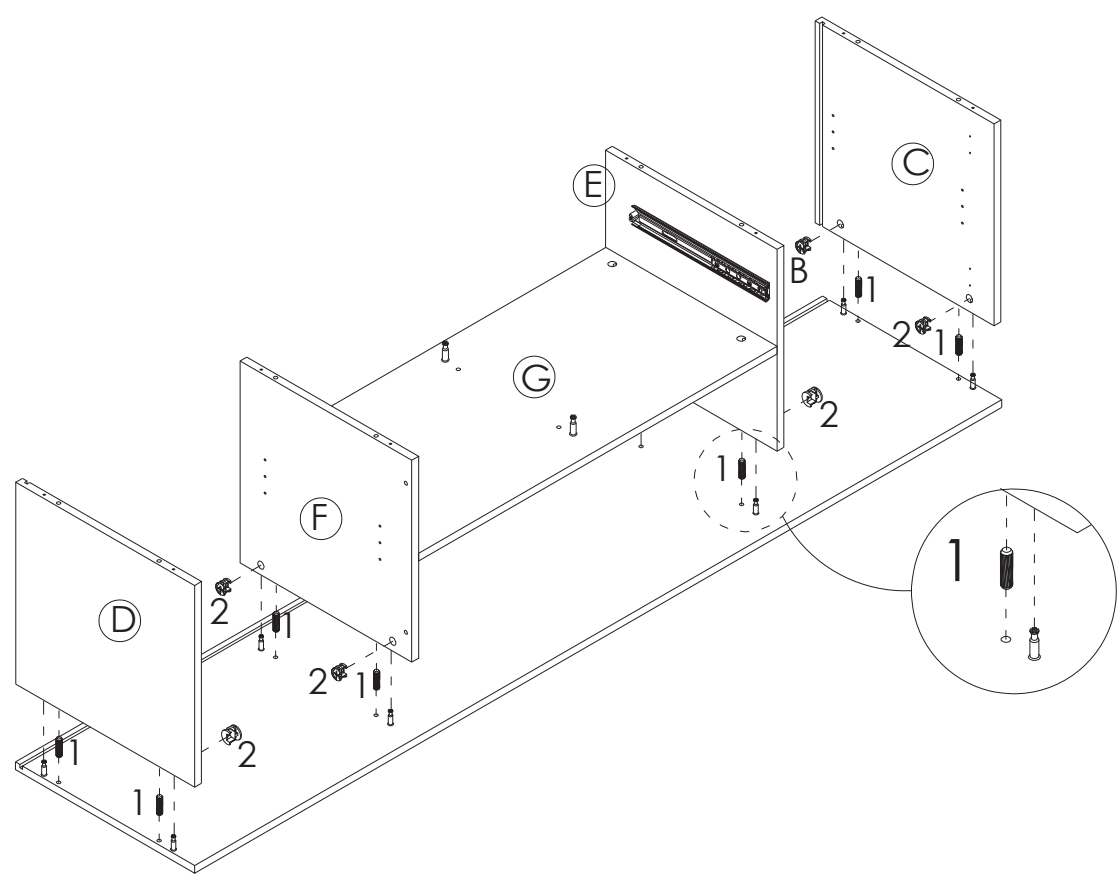

 
STEP 6:

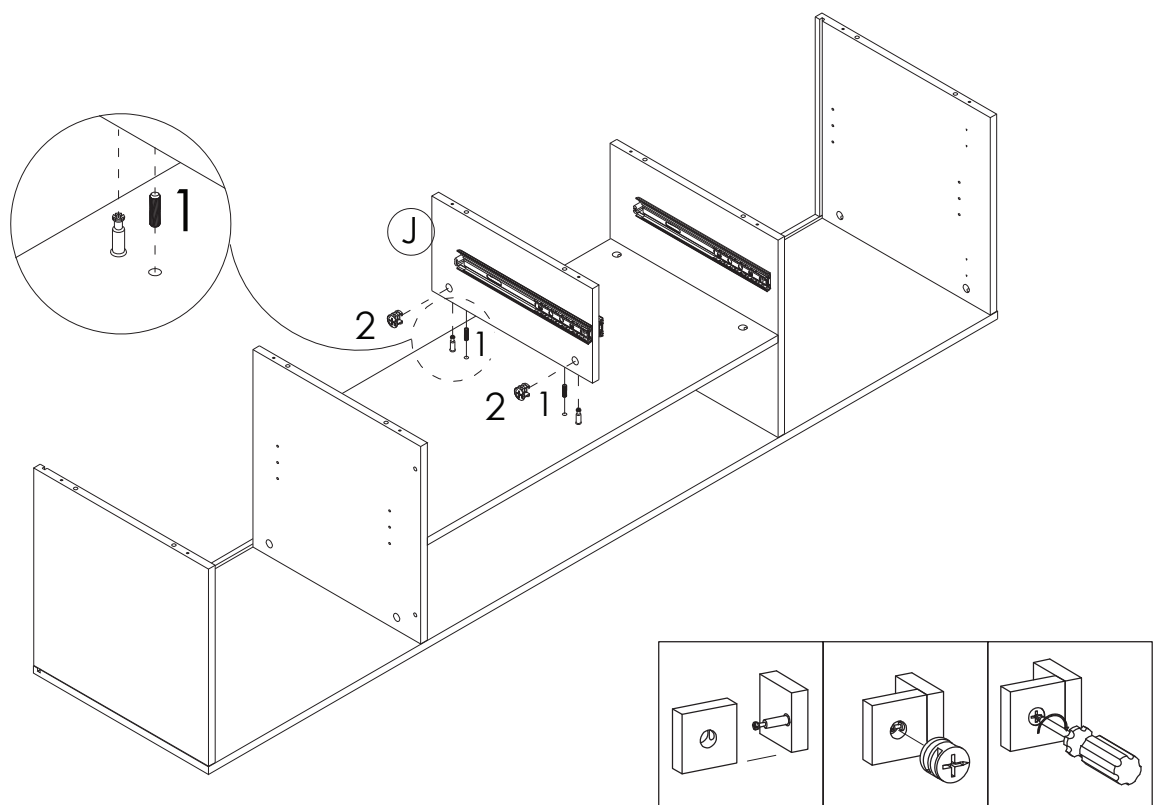

 
STEP 7:

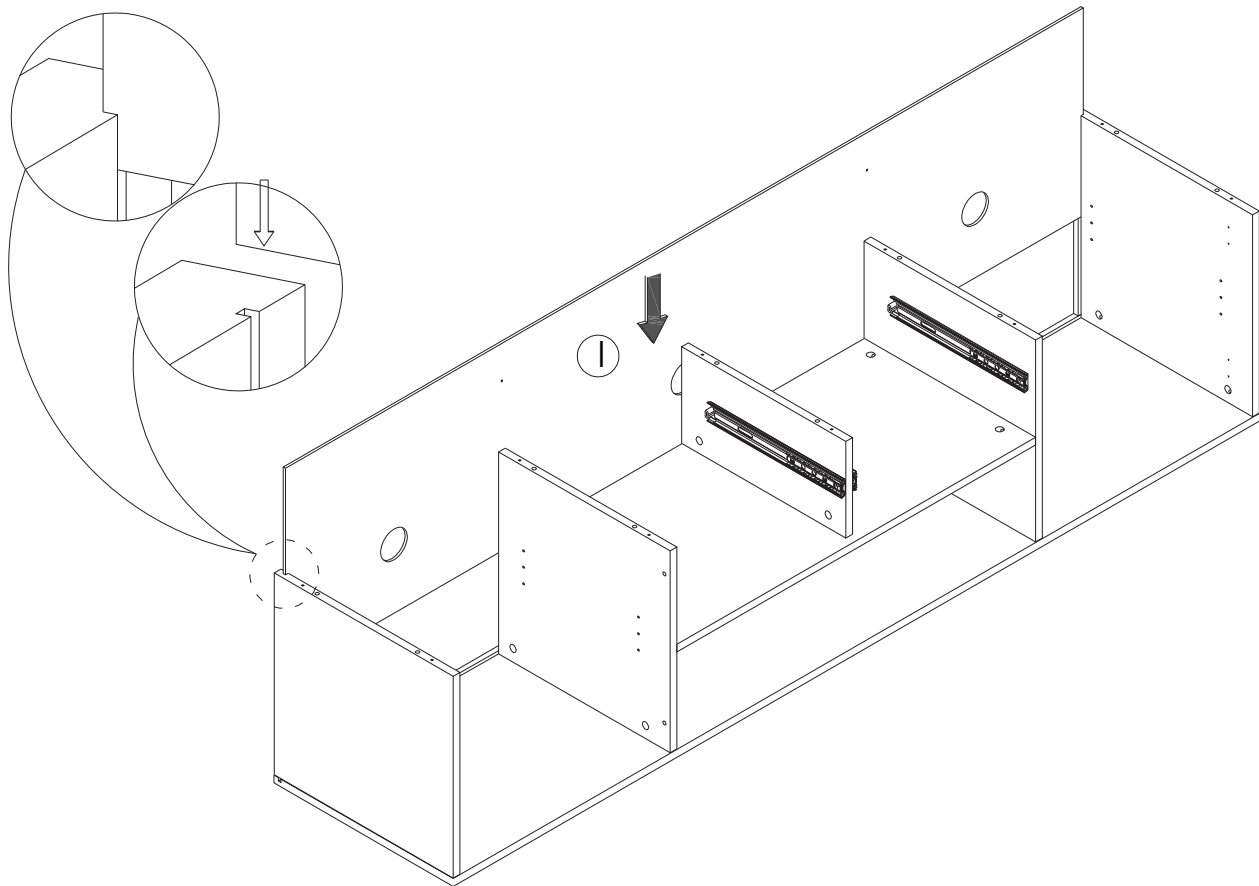

 
STEP 8:

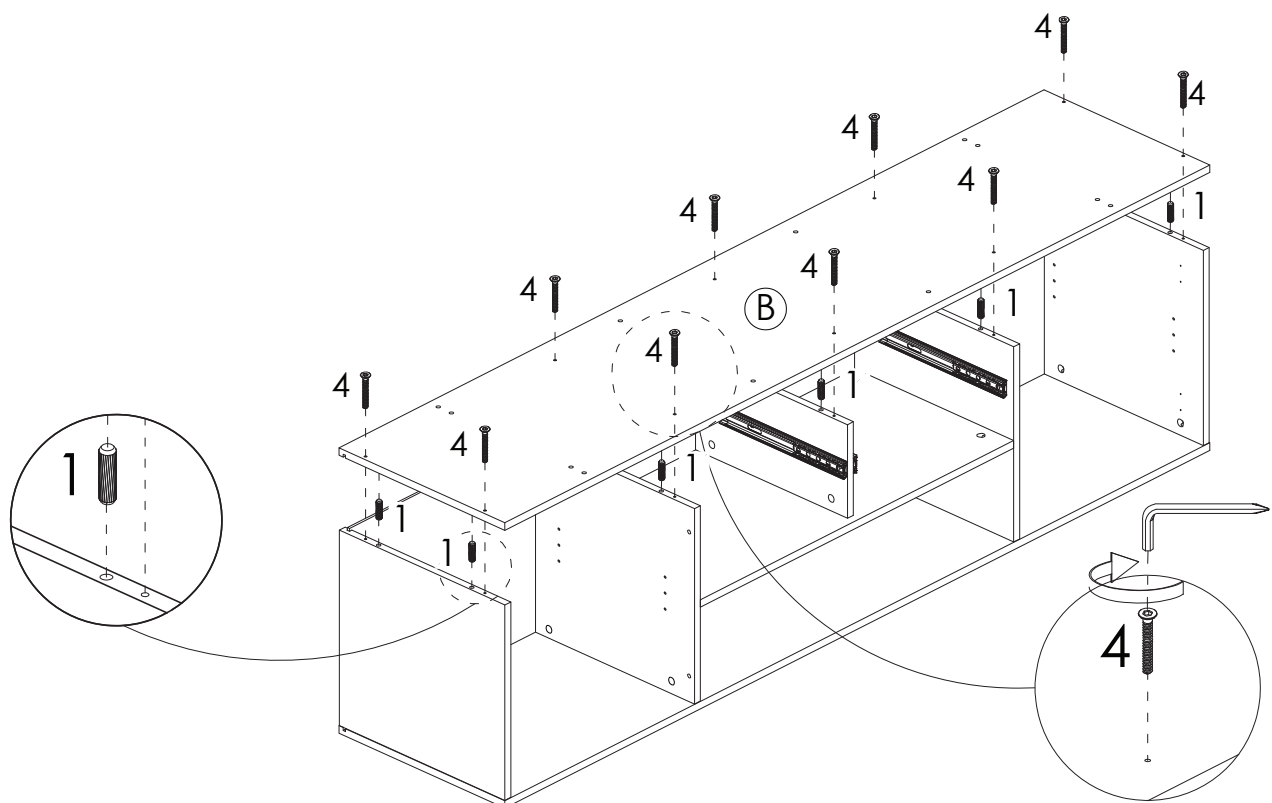

 STEP 9:

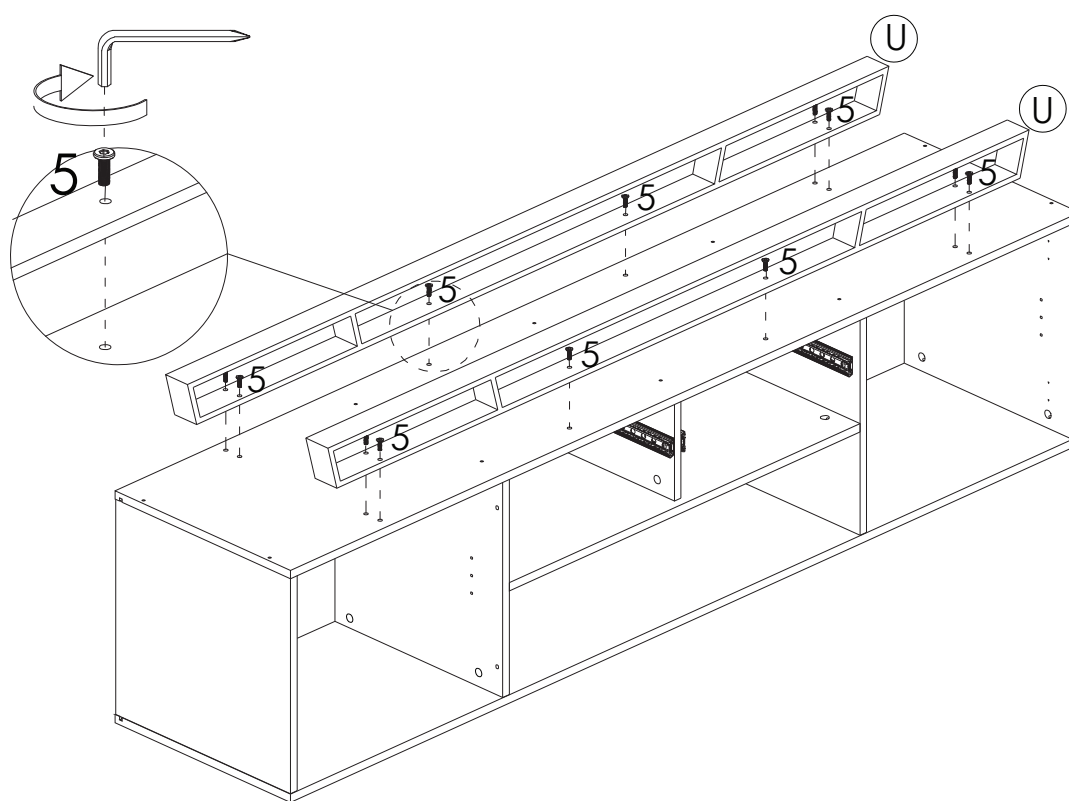


 STEP 10:

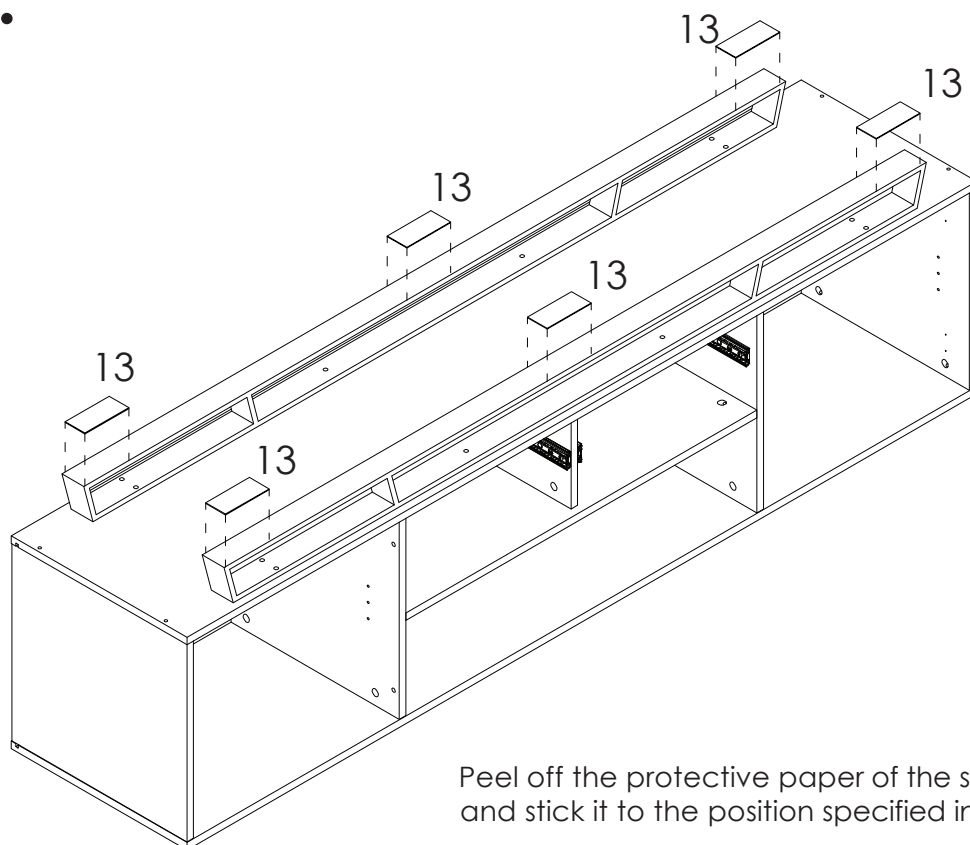


Peel off the protective paper of the self-adhesive and stick it to the position specified in the figure.

 
STEP 11:

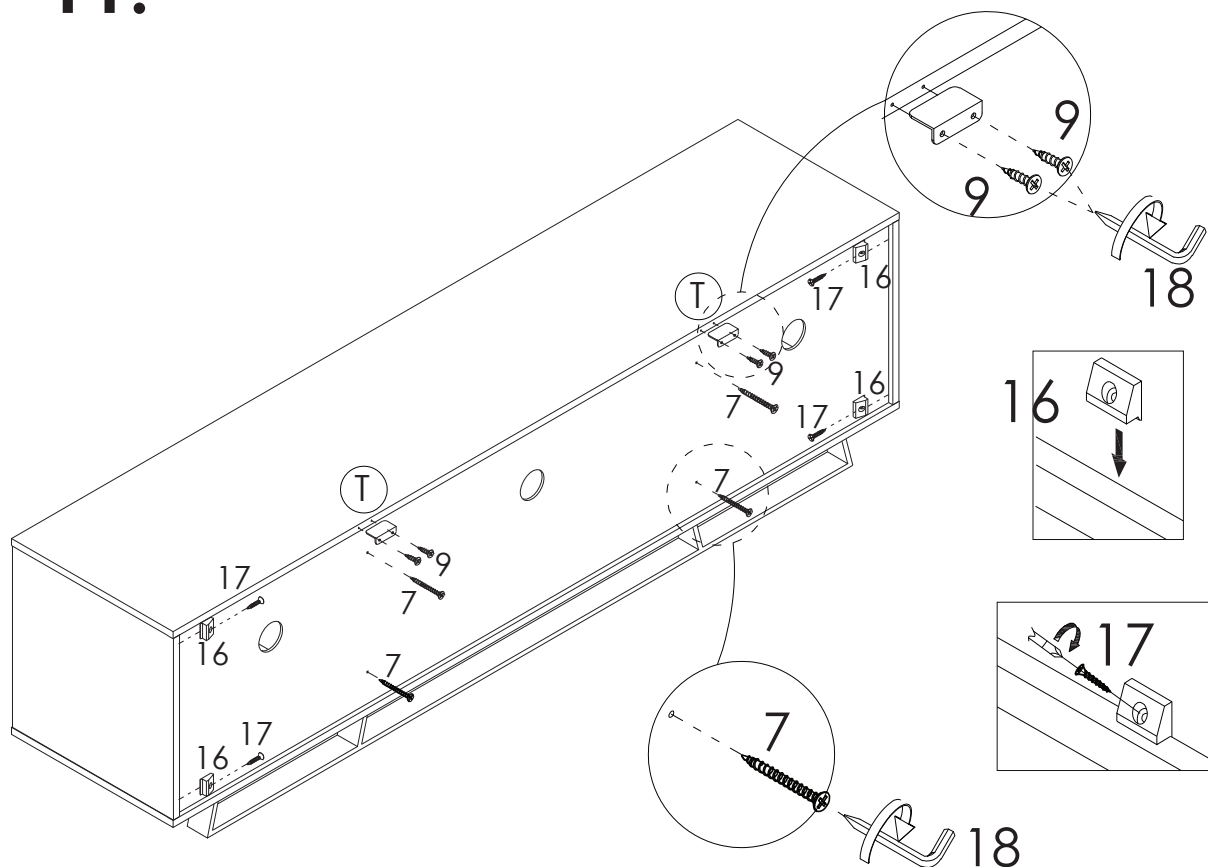


 
STEP 12:

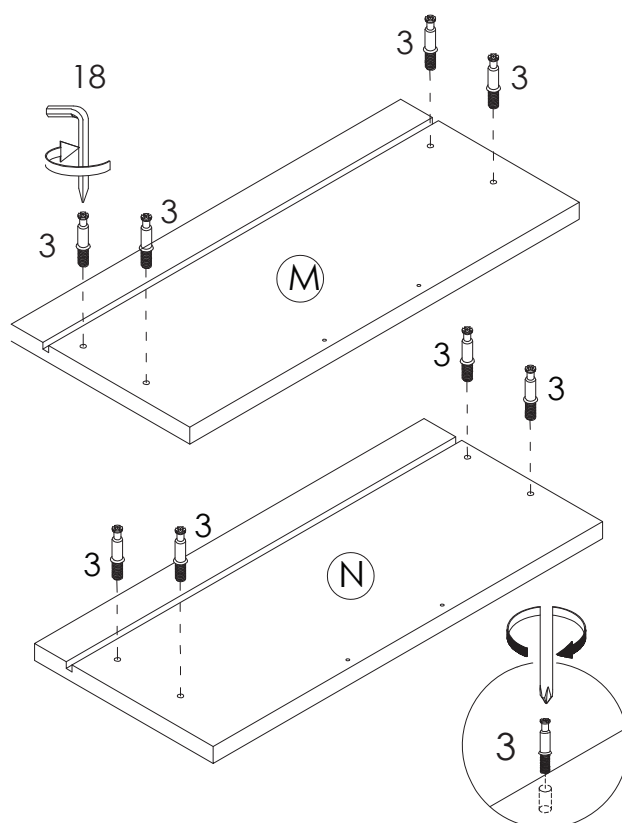

 
STEP 13:

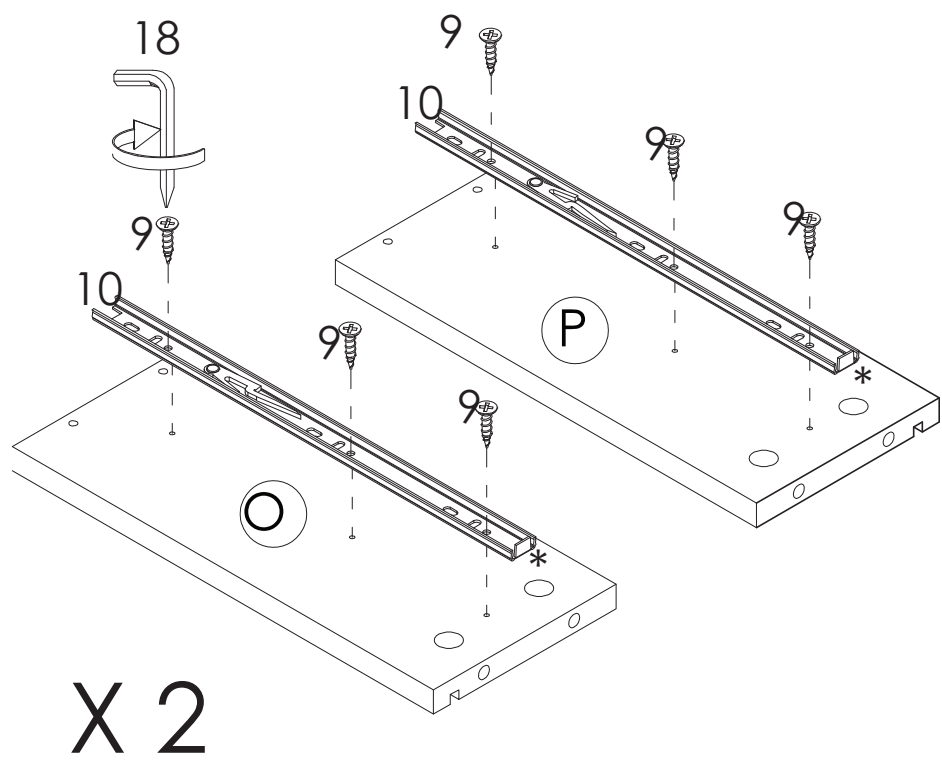

  
STEP 14:

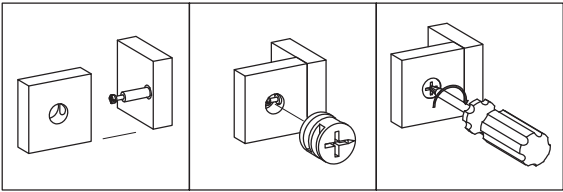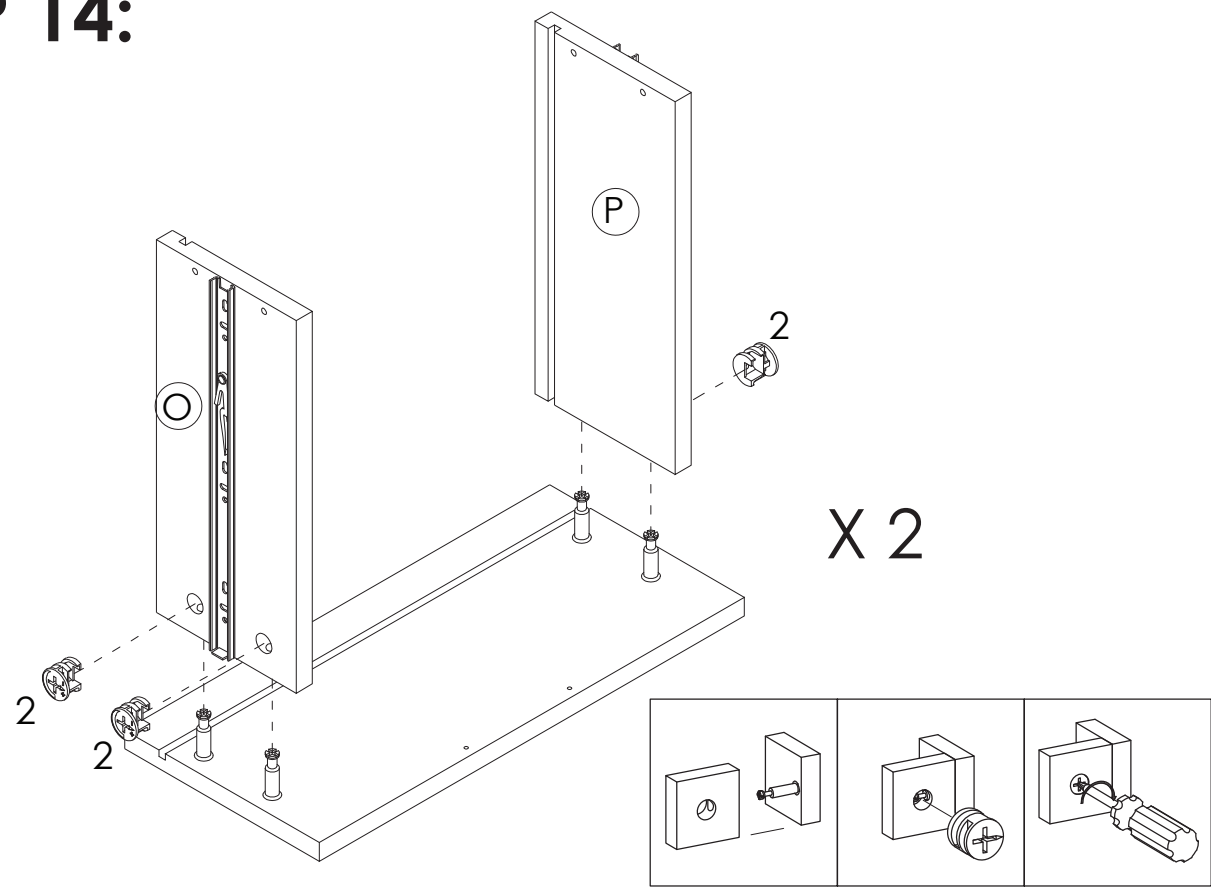

 
STEP 15:

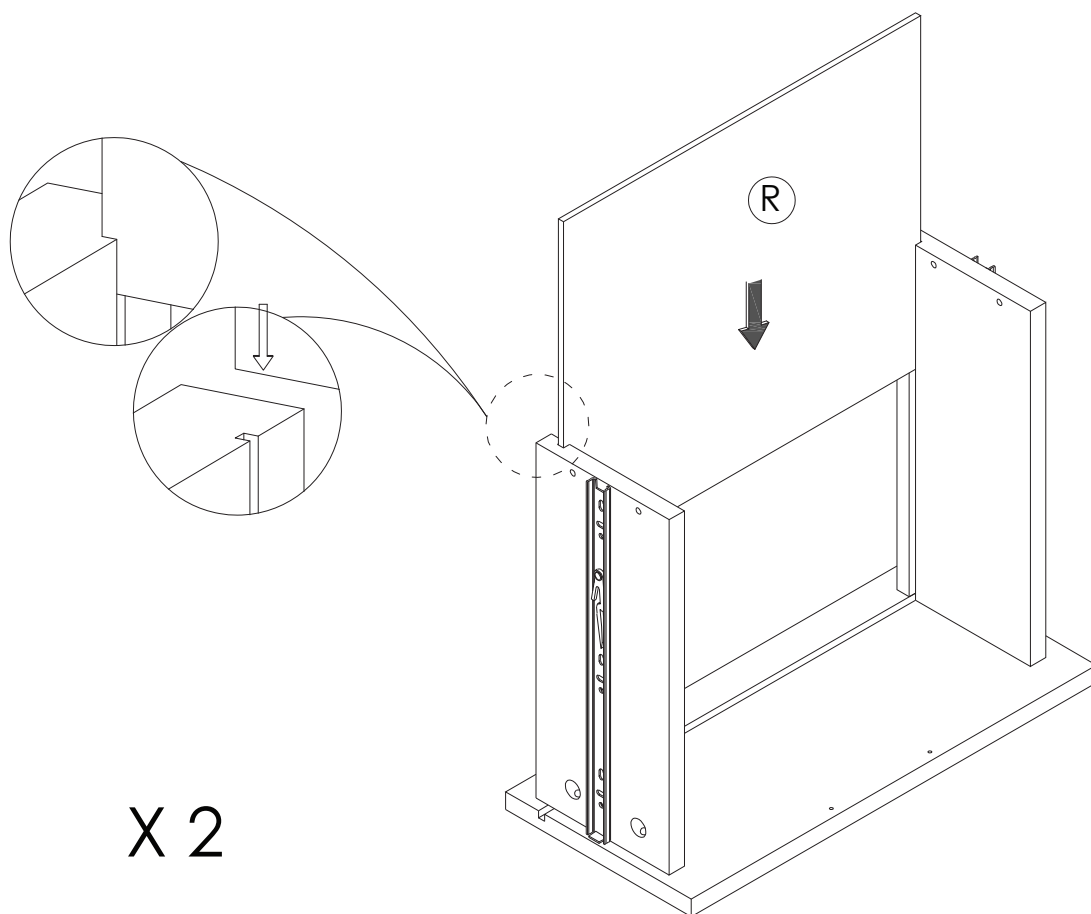

 
STEP 16:

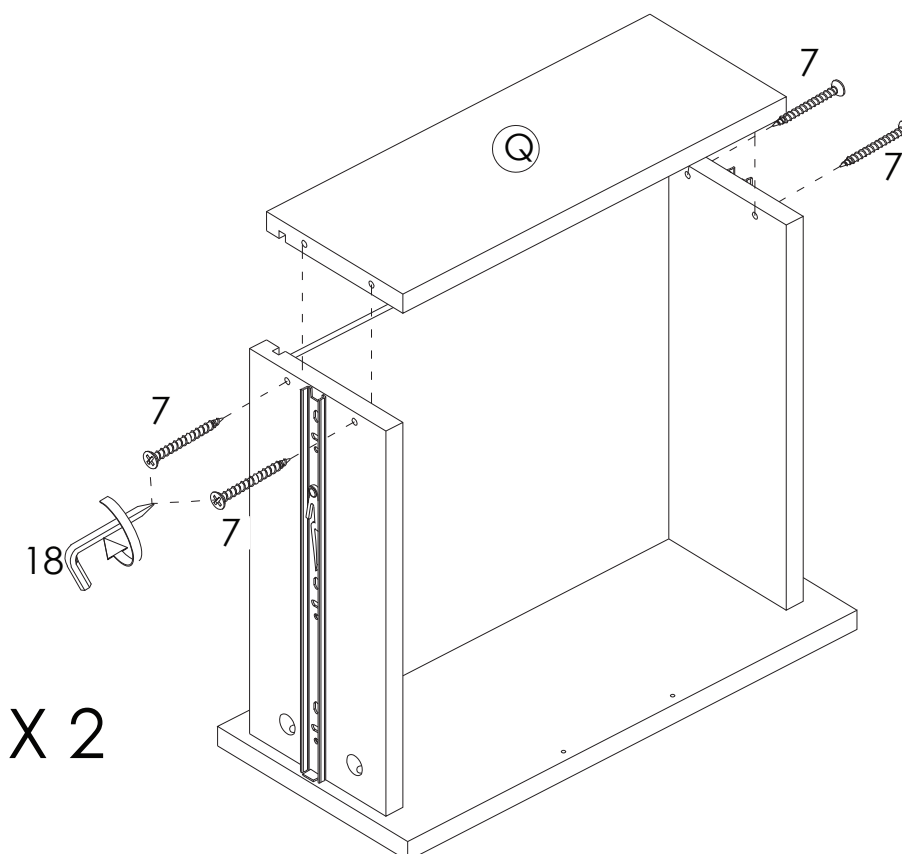

 
STEP 17:

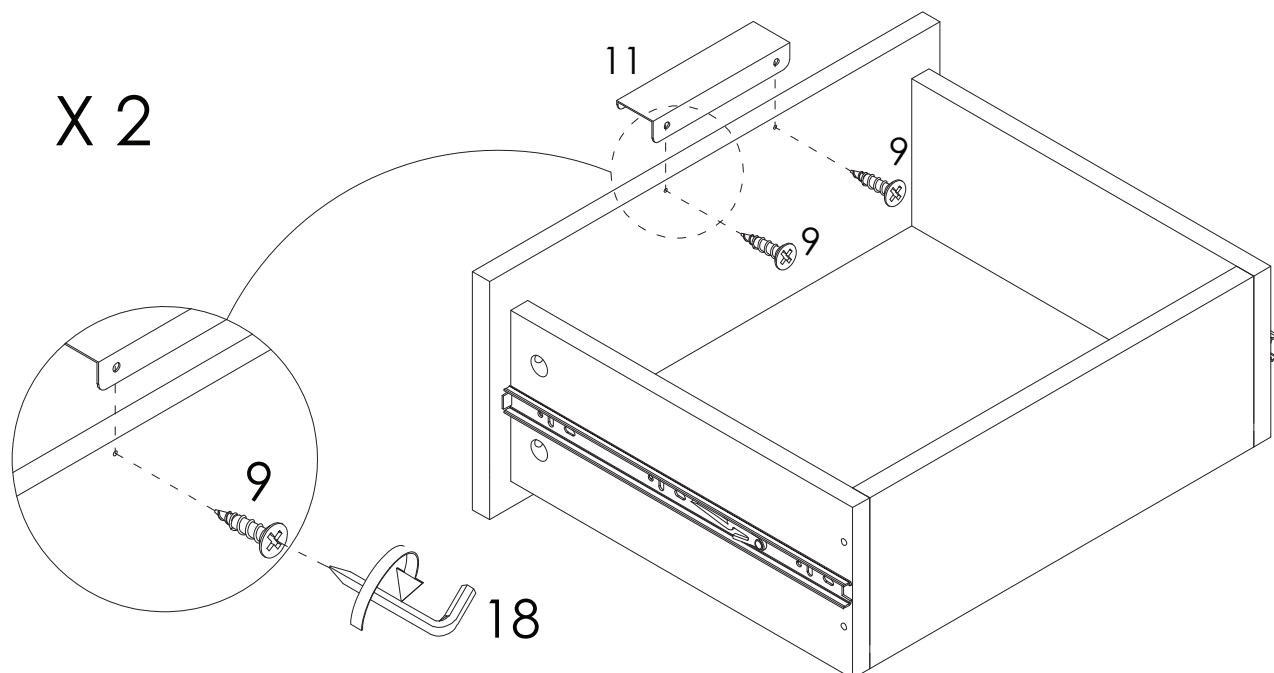

 
STEP 18:

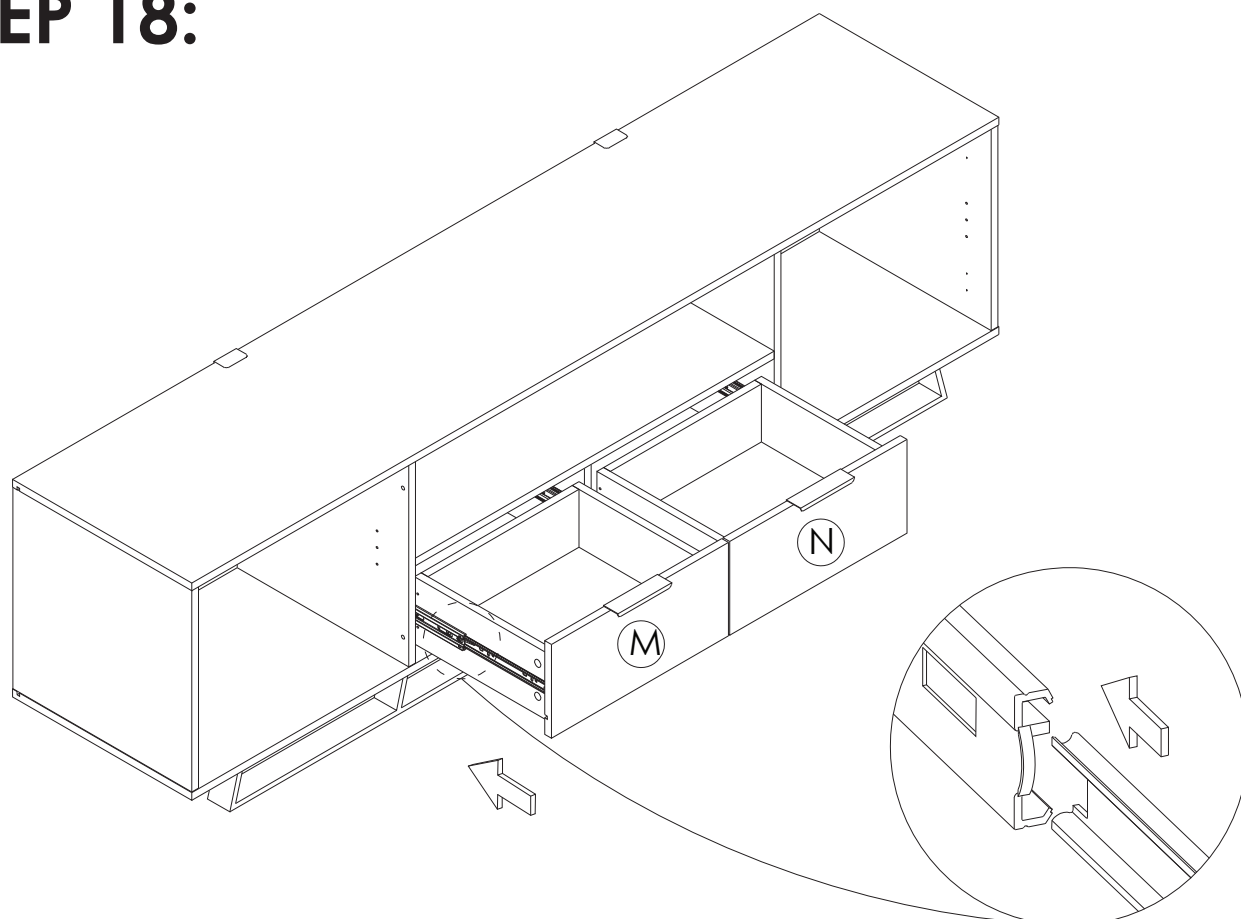

 
STEP 19:

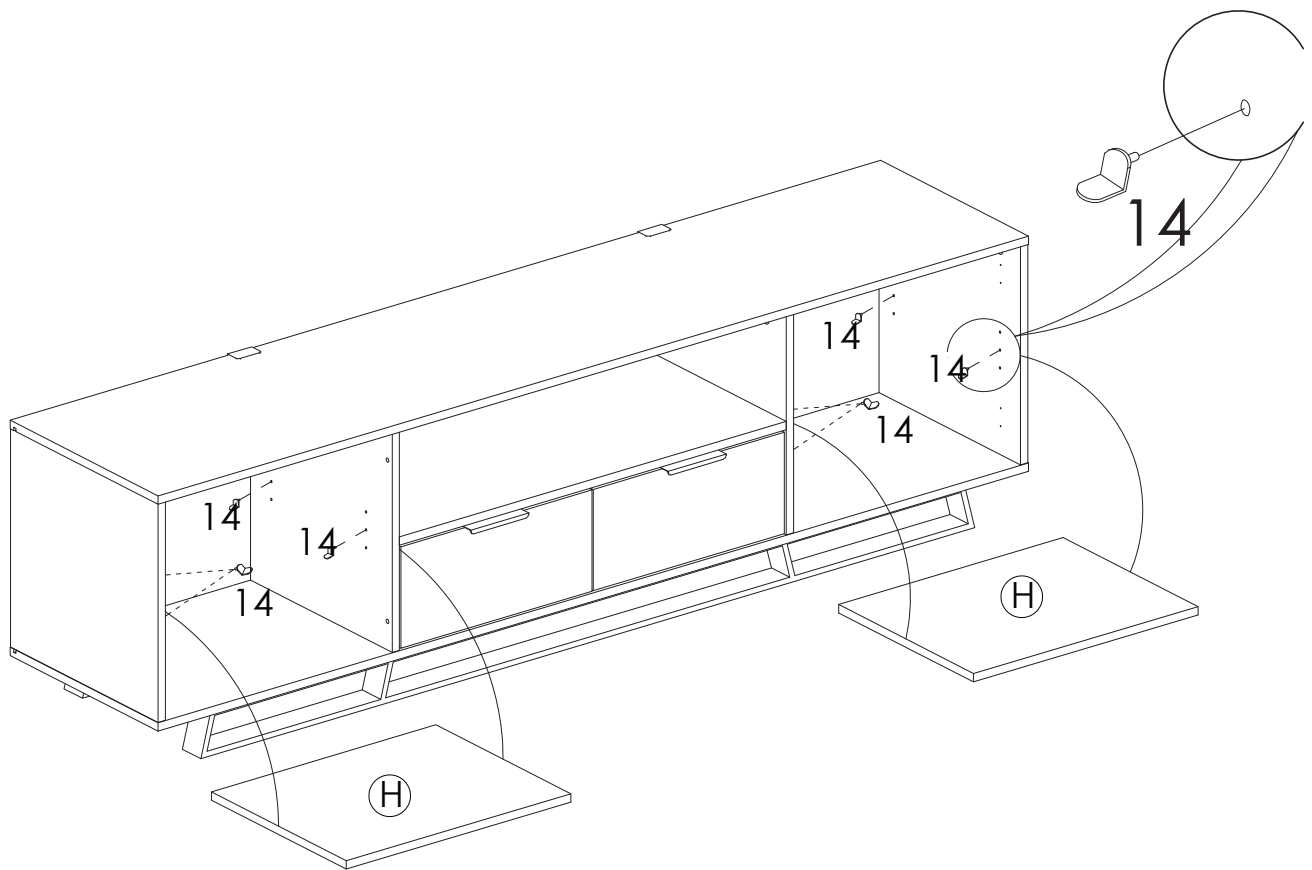

 
STEP 20:

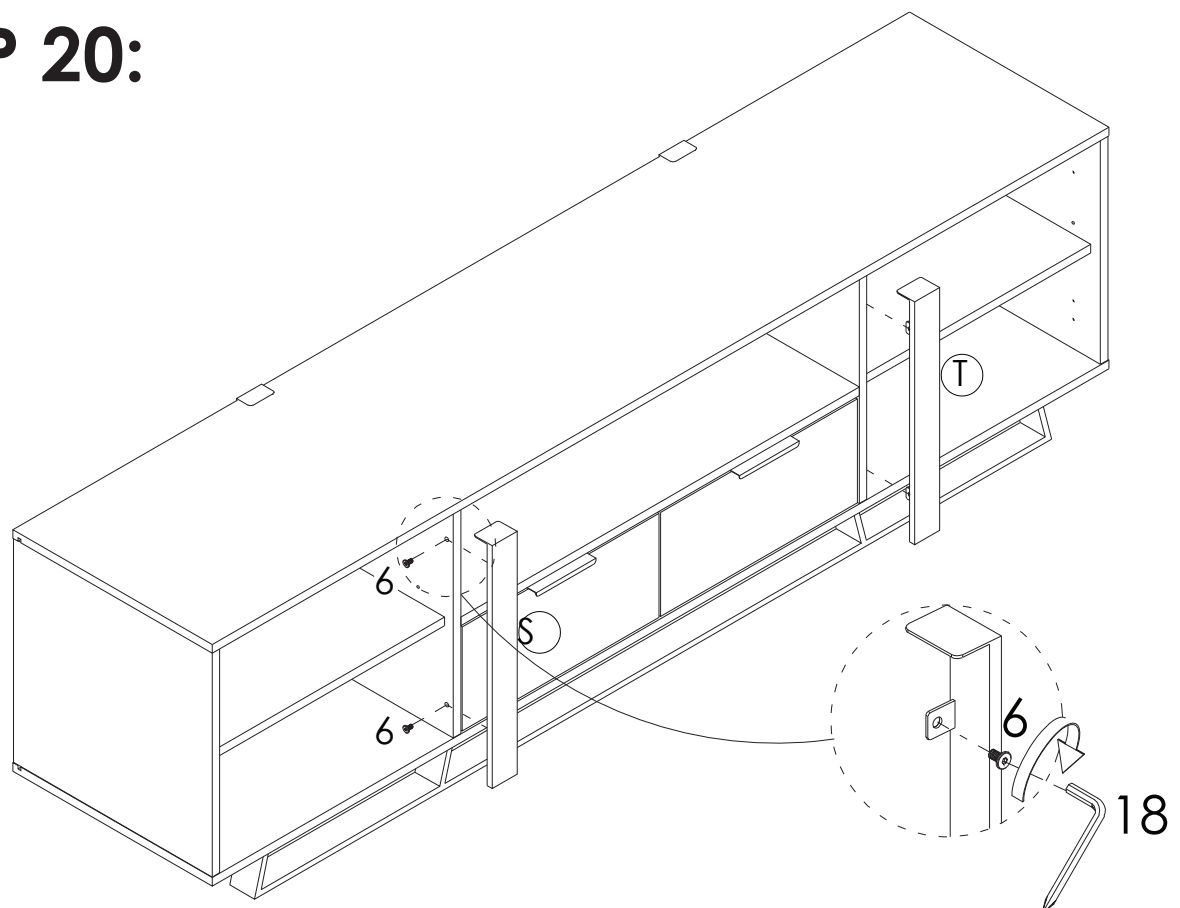

 
STEP 21:

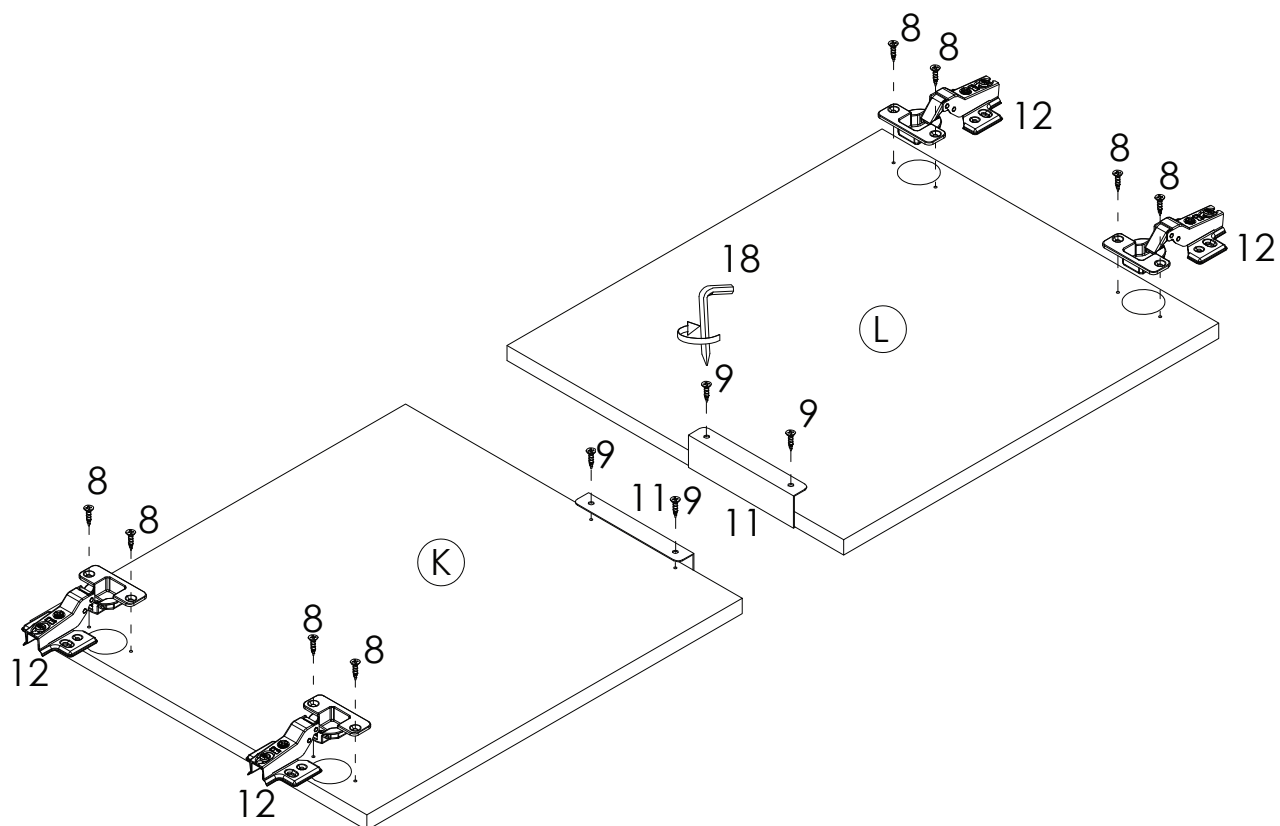

 
STEP 22:

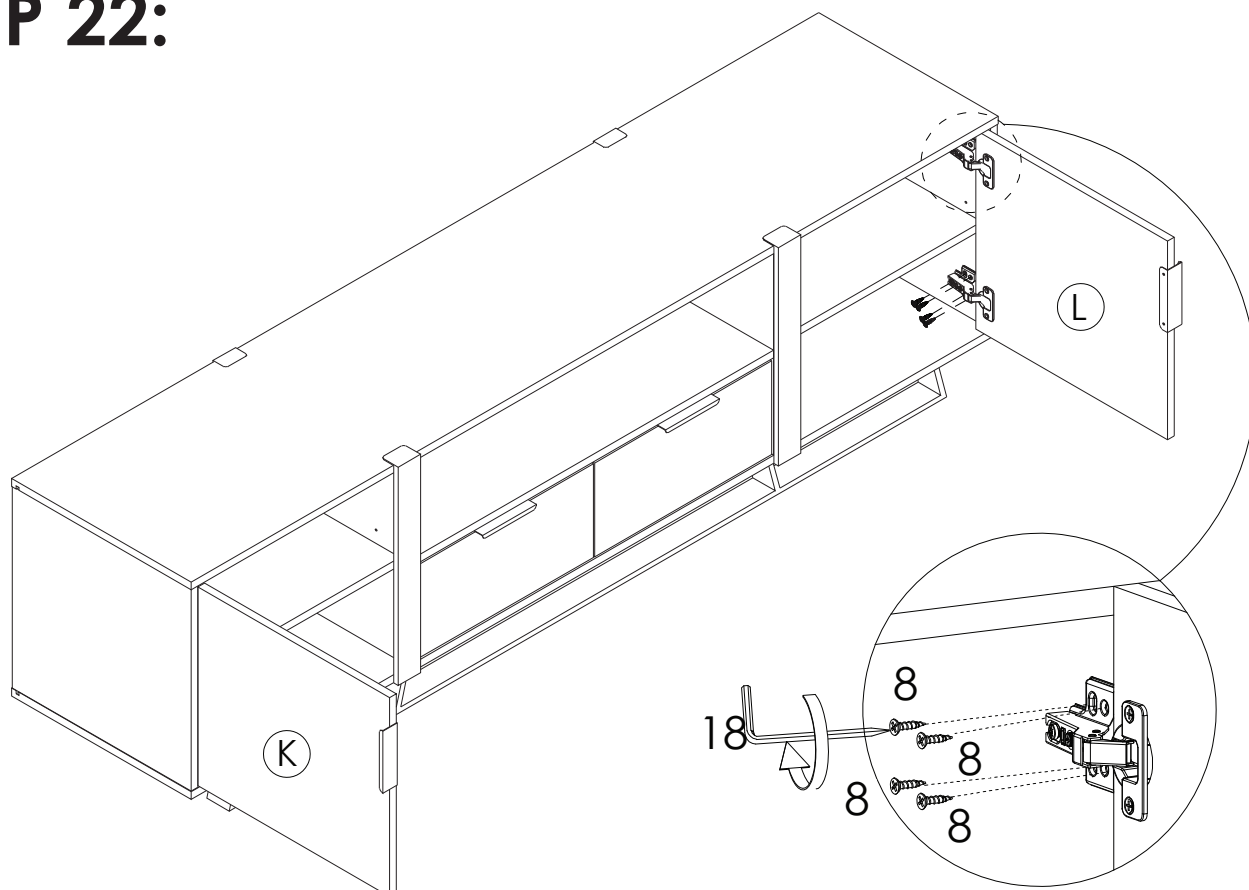

 
STEP 23:

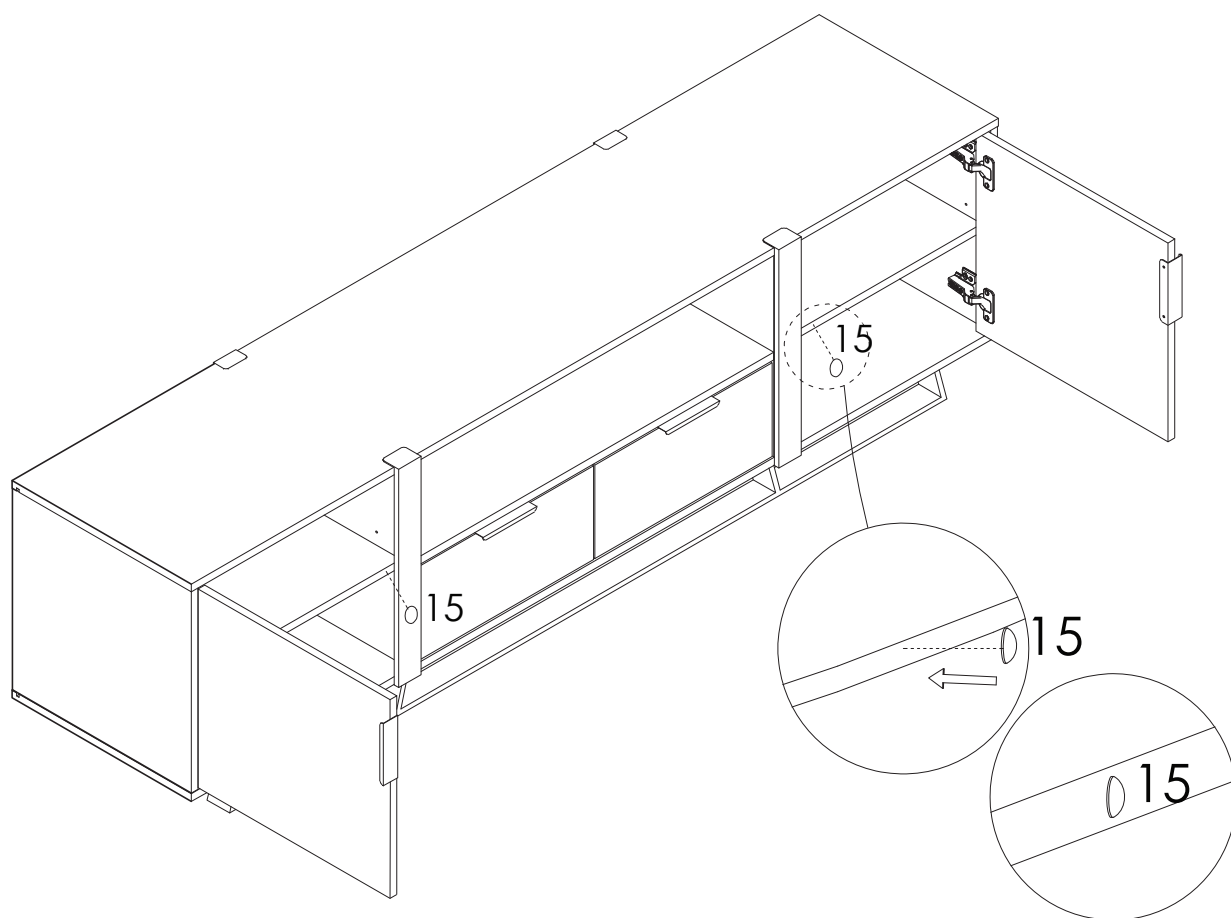

 STEP 24:

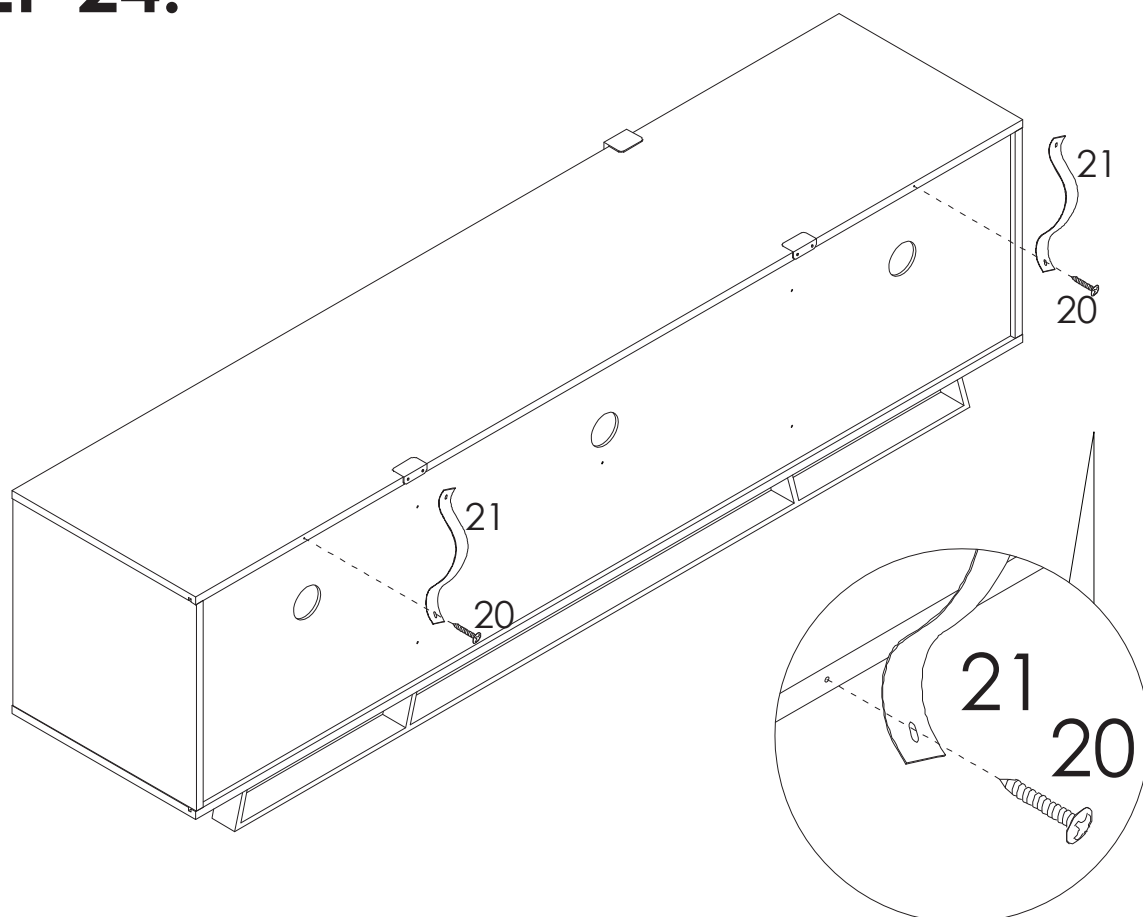

 STEP 25:

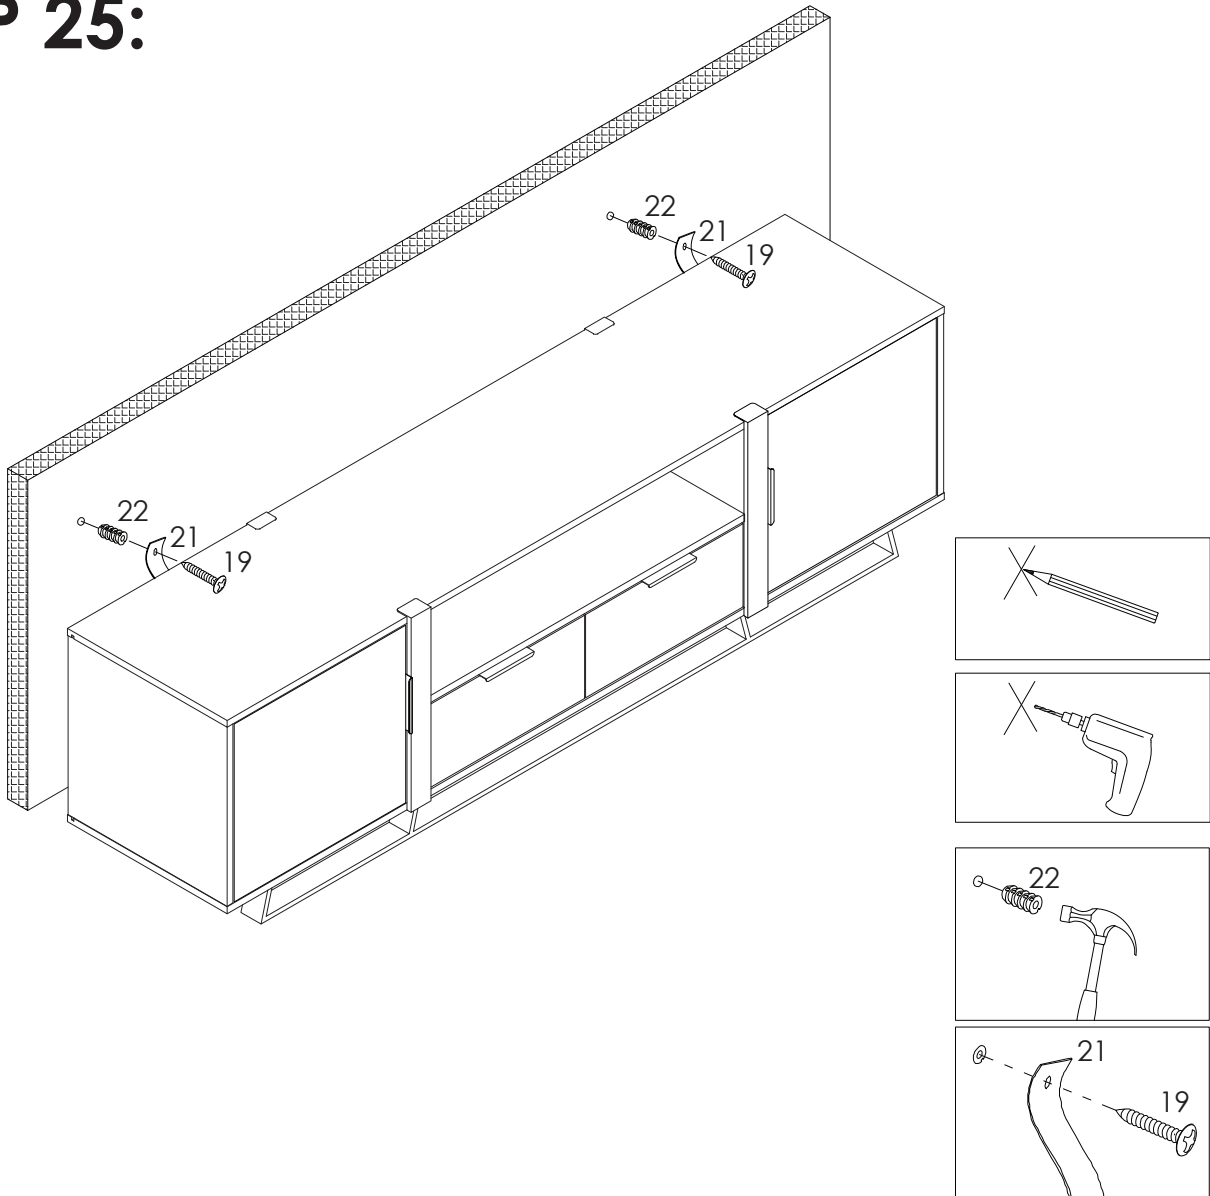

Well done on completing the assembly of your new Criterion TV unit.

Please share how it looks in your space and tag us on:



@Criterionhome



@Criterion

Our complete range can be found at
www.criterionhome.com.au



TOPPLING FURNITURE GUIDE:

 
 
WE RECOMMEND THAT A PROFESSIONAL INSTALLS THIS PRODUCT

Under Australian Toppling Furniture regulations all category 1 and category 3 furniture (over 686mm) must be secured to the wall.

All furniture of these categories are supplied with an anchor and a strap/cable to secure the unit to the wall.



Gyprock:

- Use a stud finder to ensure the strap is being secured into the stud.
- Once you have secured the strap, connect this to the anchor attached to the furniture.

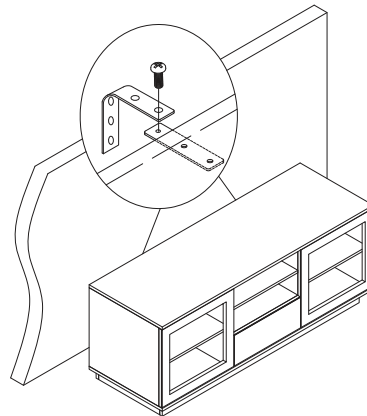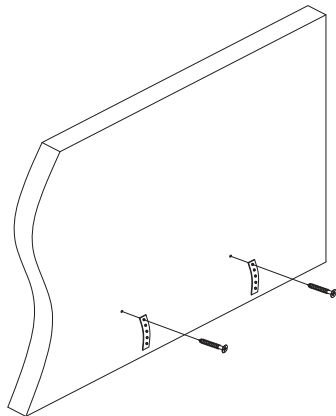


Brick

  - Before starting make sure that the anchor point is brick.
- Never anchor into mortar.
- Check your wall type and choose the wall plug accordingly.
- Once you have secured the strap connect this to the anchor attached to the furniture.

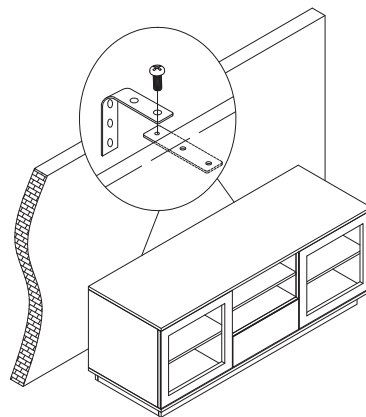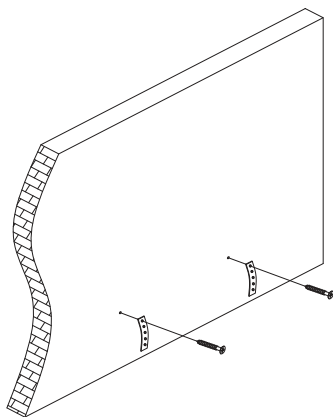


ADJUSTING DOOR HINGES:

 - Hinges come ready to install, though they can be adjusted to be sure that the doors sit square and flush to the piece of furniture.
- There are 3 screws on the hinge that can help adjust its position.

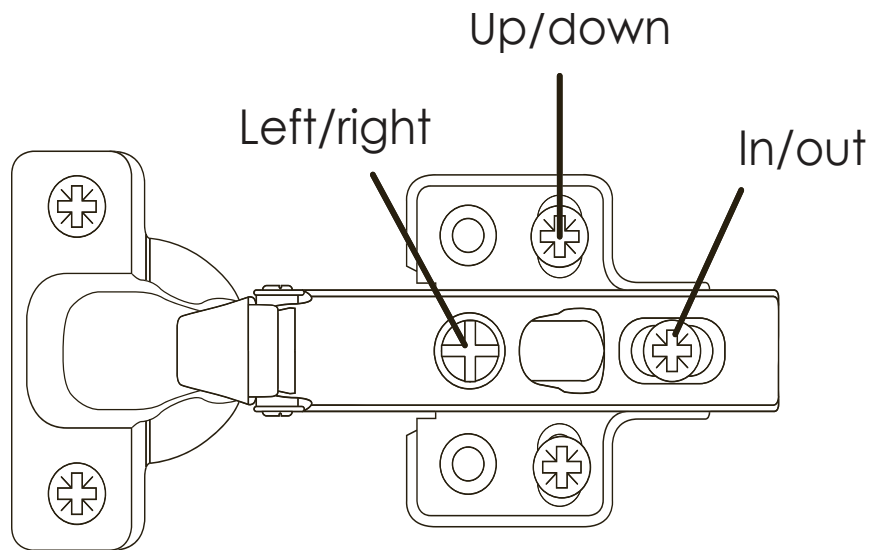


Inside screws:

 - The inside screws move the hinge in and out.

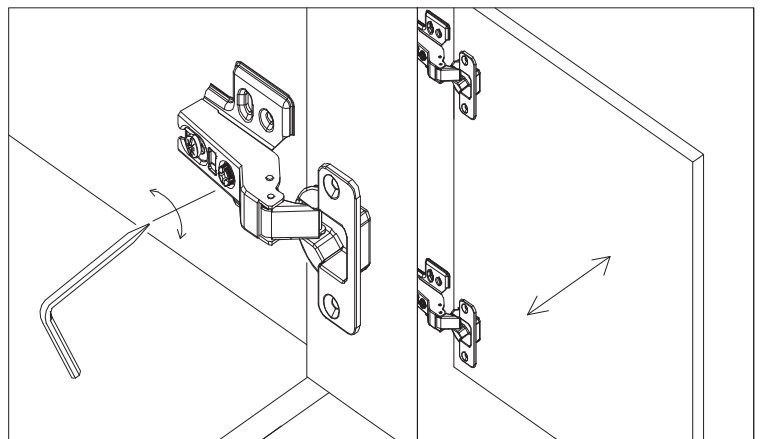


Outside screws:

 - The outside screws move the hinge left and right.

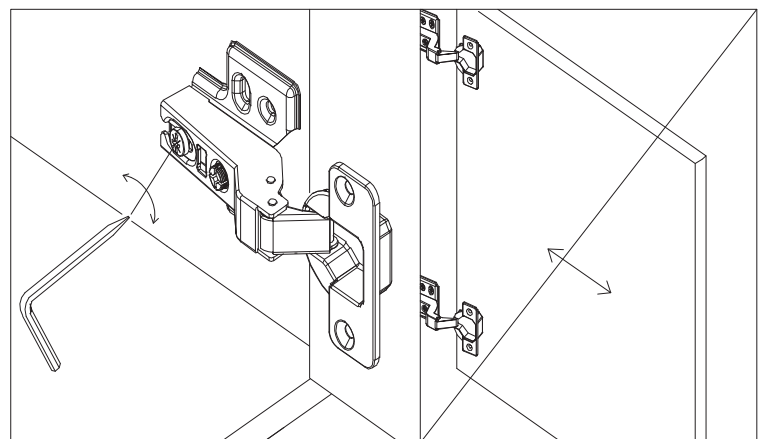


ADJUSTING DRAWER FRONTS:

 - If the drawer front panel is NOT level after being assembled it can be adjusted.

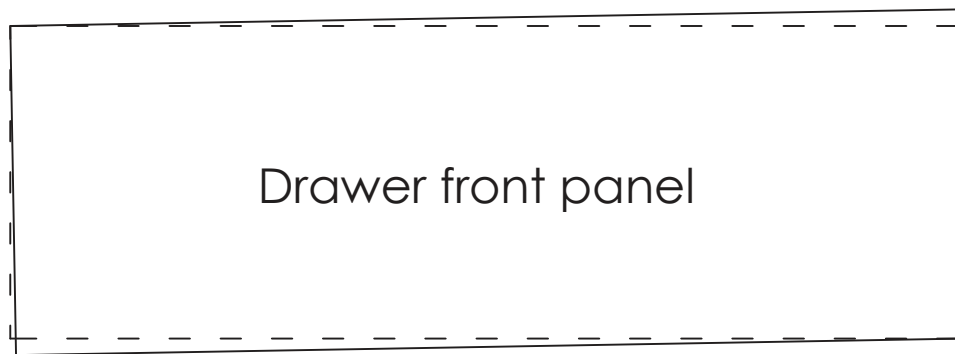

 - Loosen the screws on the runners either side of the drawer, then you can move the drawer slide to adjust the drawer front.
- Once you are happy with the position, you can then tighten the screws to secure.

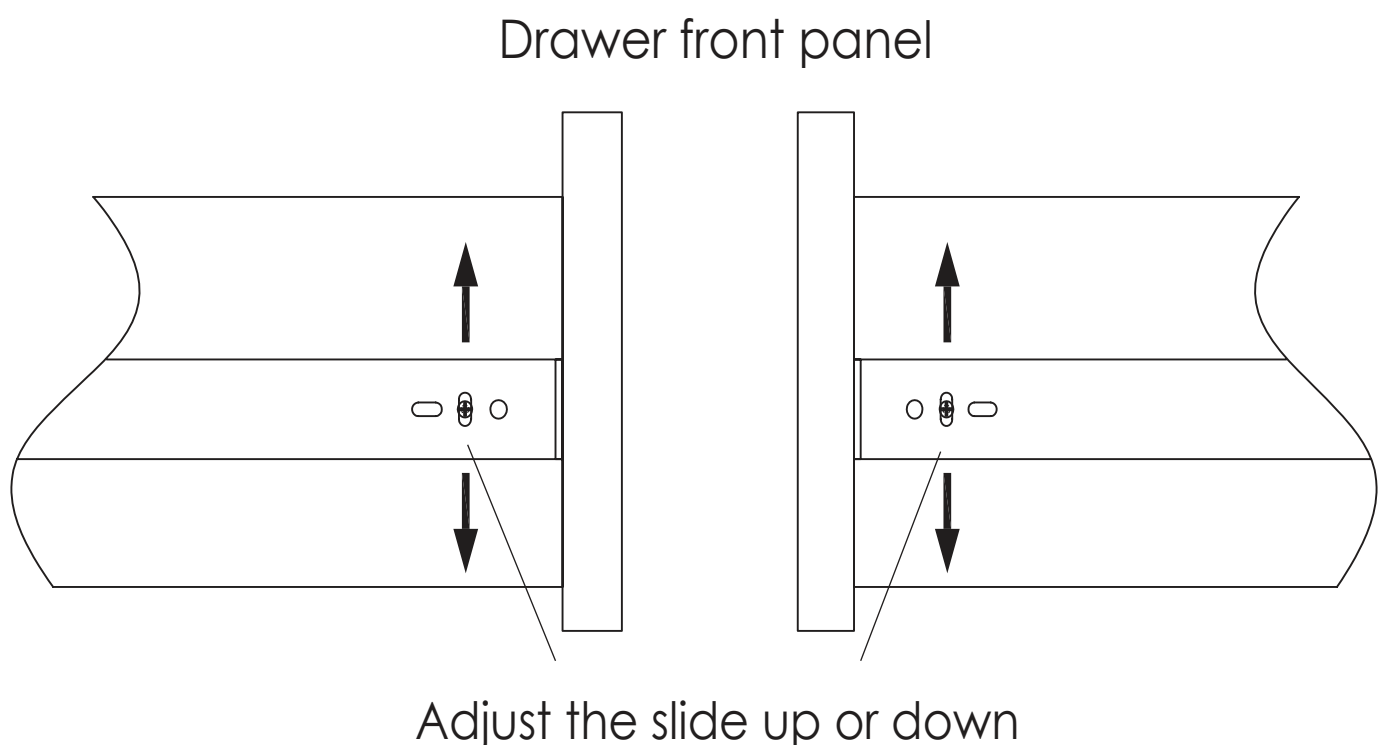

SURFACE CARE INSTRUCTIONS

A little care and attention will extend the life and look of your furniture. Take care when using materials that might spill, be sharp or abrasive on the surface of your furniture.

NORMAL CLEANING:

For normal cleaning use a soft, dry, clean cloth. In the case of spills/stains use warm water.



GLASS CLEANING:

You may use normal glass cleaning products on all standard glass. Use a soft cloth to remove light dust and fingerprints.



VINYL CLEANING:

DO NOT use solvent-based cleaners or any abrasive materials. Only use a slightly damp, soft, clean cloth on this surface. Do not scrub.



FROSTED GLASS CLEANING:

DO NOT use glass cleaner or solvent-based cleaners on the surface of the glass that has a frosted finish.



CAUTION:

DO NOT expose to direct sunlight or extreme temperature. This will result in irreparable damage and discolouration.

WARRANTY POLICY

1. Nothing in this warranty affects the consumer's rights under the Australian Consumer Law. The benefits to the consumer under this warranty are in the addition to the rights and remedies of the Buyer under any consumer guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality.

2. Subject to Clause 1, the Seller warrants that CRITERION branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this 12 Month Warranty extends only to the Owner of the property in which the products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty period.
4. If within the Warranty period a manufacturing defect is discovered in the product, or the product fails to perform to the Seller's specifications as a result of some defect in the material or workmanship, then the Seller will replace or repair the goods under Warranty or refund the purchase price paid by the Owner. Except if the failure is a major failure.
5. The Warranty does not apply to a product that:
 - a) Has failed due to excessive wear.
 - b) Has been misused or neglected.

WARRANTY POLICY

- c) Has been damaged accidentally or by acts of God including fire and flood.
- d) Has been used or operated contrary to the operating or maintenance instructions.
- e) Has been damaged in transit from the Seller's store to the Owner, either by the Owner or a third party authorised to act for the Owner.
- f) Was correctly assembled or installed.

6. In order to make a claim under the Warranty, the Owner must provide proof of purchase in all cases.

7. The Seller will examine any return products and if the Seller determines that there is an apparent defect through no fault of the owner, the Seller will:

- a) Make a note of the Owner's contact details, including the Owners telephone number which the Owner can be contacted during business hours, postal address and email address.
- b) Make note of the defect/s reported by the Owner.
- c) Take back the defective goods from the Owner and determine within reasonable time through dialogue with the Owner whether the goods are defective.
- d) Advise the Owner within a reasonable time frame whether the goods are defective.
- e) If the seller accepts the return of the product, the seller must arrange to have:
 - i) The product repaired or,
 - ii) Replace the damaged or faulty product or,
 - iii) Refund the purchase price

8. The Seller will not accept any returned product which has not been returned strictly in accordance with this warranty.

WARRANTY POLICY

9. For the purpose of this warranty:

- a) Australian Consumer Law means the law set out in Schedule 2 of Competition and Consumer Act 2010 (Cth).
- b) Consumer means purchaser of the goods.
- c) Consumer means a Consumer as that term is set out in Section 3 of the Australian Consumer Law.
- d) Consumer Guarantees mean the guarantees under the Australian Consumer Law.
- e) Implied terms mean guarantees, conditions, warranties, or other terms implied by an Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
- f) Owner has the meaning set out in Clause 3.
- g) Warranty means this Warranty.
- h) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
- i) Warranty Period means:

In relation to Furniture: 12 Months Limited Warranty.