 




TAURIS

ASSEMBLY INSTRUCTION MANUAL

MODEL NO:
BURBANK-HIFI

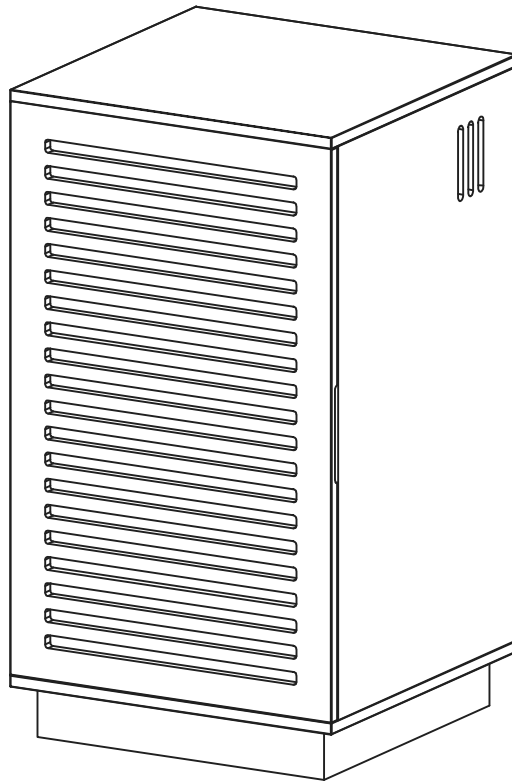

Note:
Ready to Assemble

IMPORTANT:

Please read through the instructions carefully before assembly and keep them for future reference.



CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- ALWAYS secure it to a wall with an anchor.
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer/door at a time.
- ALWAYS place heavy items down below.

**NEVER put a TV
on this furniture.**



Congratulations on your purchase of a new Tauris furniture item.

To increase the longevity of your item, please follow these assembly instructions to save you time, make assembly easier and prevent possible damage to your new unit.

PLEASE NOTE:

- Correct assembly is your responsibility.
- We suggest the use of hand tools only to tighten screws and fittings, as power tools can strip threads if over-tightened.
- When moving this furniture item, always carry the unit. Dragging or sliding the unit could damage the unit and the floor surface.
- It is important to assemble the unit on a soft surface like carpet to prevent damage. If you don't have carpet, place a blanket down before starting.

CUSTOMER SERVICE:

Missing or Faulty Parts:

Please recheck the instructions and packaging to ensure the parts are missing before contacting the store you purchased the item from.

The store will need the following information:

- Copy of purchase slip or receipt.
- Model number of the unit purchased.
- Description or part number of the missing or faulty part.
- Quantity of parts needed.

If for whatever reason you cannot contact the store, please contact Tauris directly at www.tauris.com.au

Product of RVM Australia Pty Ltd

 
13 Merino Entrance
Cockburn Central
Western Australia 6164
PH: 1300 883 109



PANELS & PARTS LIST:





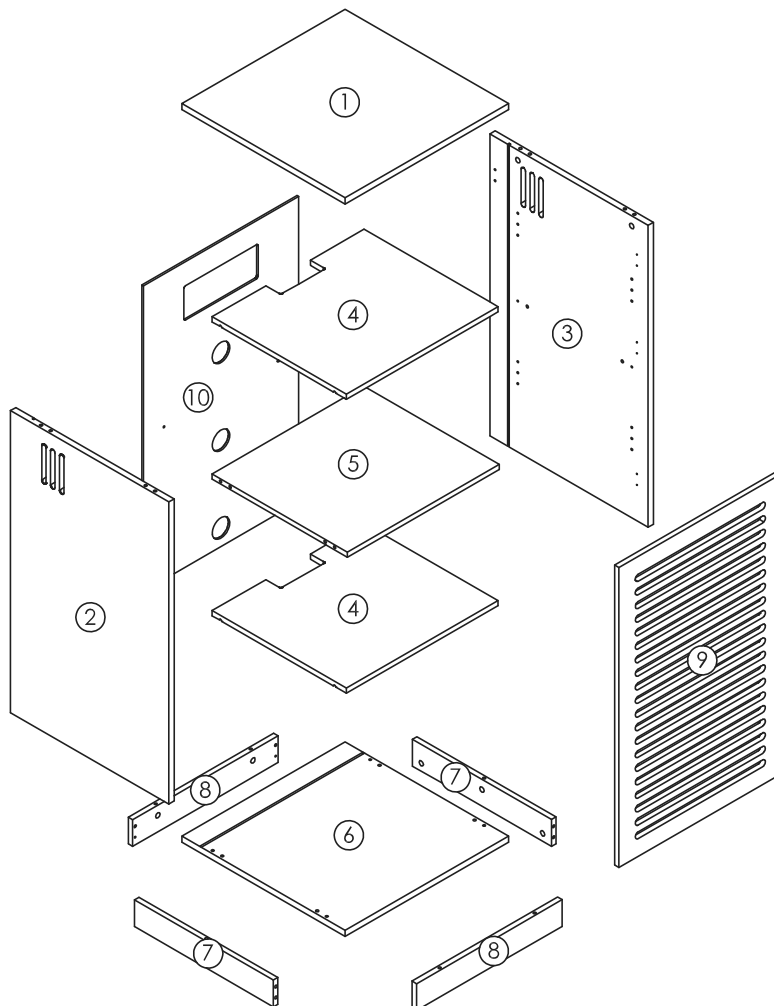








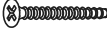



Please check you have all parts listed before you begin.

CARTON 1		
Part#	Description	Qty
1	Top panel	x1
2	Left side panel	x1
3	Right side panel	x1
4	Shelf	x2
5	Fixed shelf	x1
6	Bottom panel	x1
7	Plinth connect board	x2
8	Plinth front and back	x2
9	Door	x1
10	Back panel	x1



HARDWARE LIST:

Please check you have all parts listed before you begin.

Pack1			
Part#	Hardware name	Image	Qty
A	Cam lock		x18
B	Cam bolt		x18
C	Wood dowel		x16
D	Shelf support		x8
E	Hinge		x3
F	Screw Ø4x16		x18
G	Screw Ø7x48		x4
H	Allen key		x1
I	Hole cover		x4
J	Screw Ø3.5x16		x2
K	Anti-tip kit	K1 	x4
		K2 	x4
		K3 	x4
		K4 	x4
		K5 	x2
L	Back insert		x10
M	Screw Ø3x16		x10

Tools you will need (Not Included):

- Phillips head screwdriver

 
IMPORTANT INFORMATION:

- We recommend a professional installs this product.
- Be sure to refer to toppling furniture regulations when securing this unit.

INSTALLING CAM LOCK TIPS:


Quick Fit

- Tighten the quick fit until the shoulder is flush with the panel.
- DO NOT under tighten or over tighten.

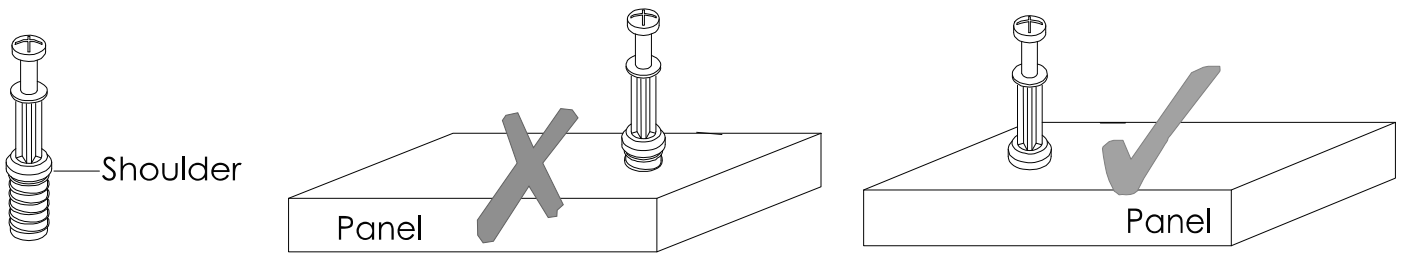


Cam Lock

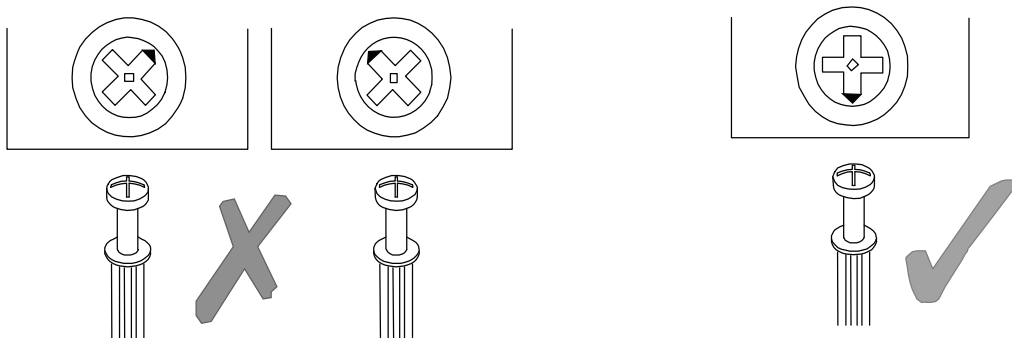 

 
- When fitting a cam lock, ensure the starting position is correct before connecting the quick fit.

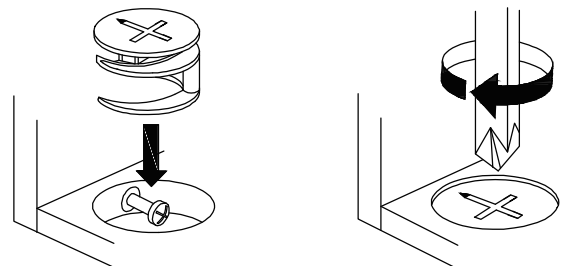


 - The quick fit head will then be in the center of the cam lock when the panels are joined.
- Turn the cam lock clockwise.





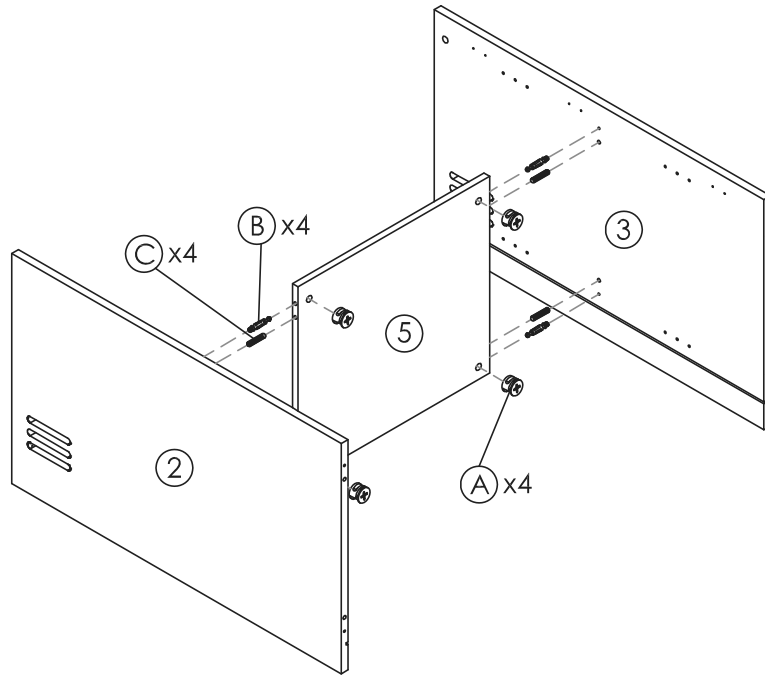


STEP 1:

-  (A) x4
-  (B) x4
-  (C) x4




  STEP 2:


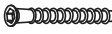


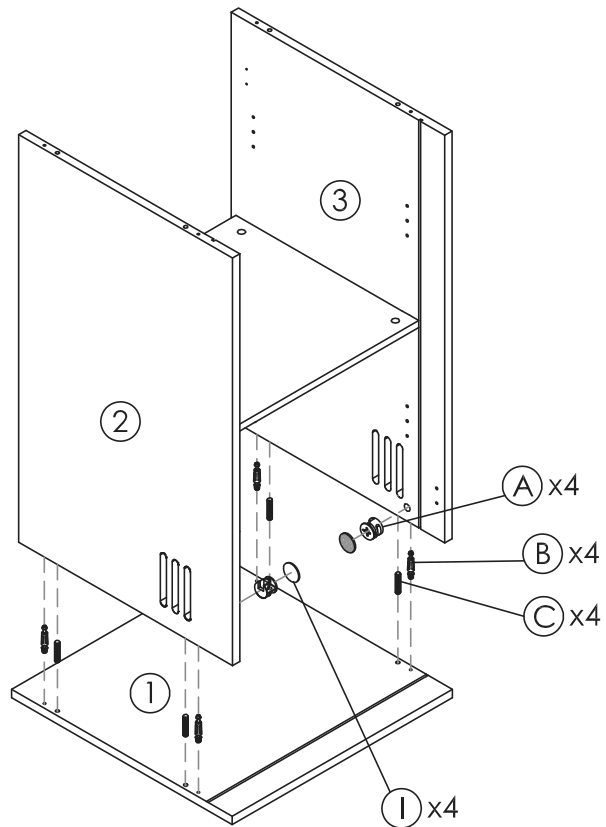-  (A) x4
-  (B) x4
-  (C) x4
-  (I) x4

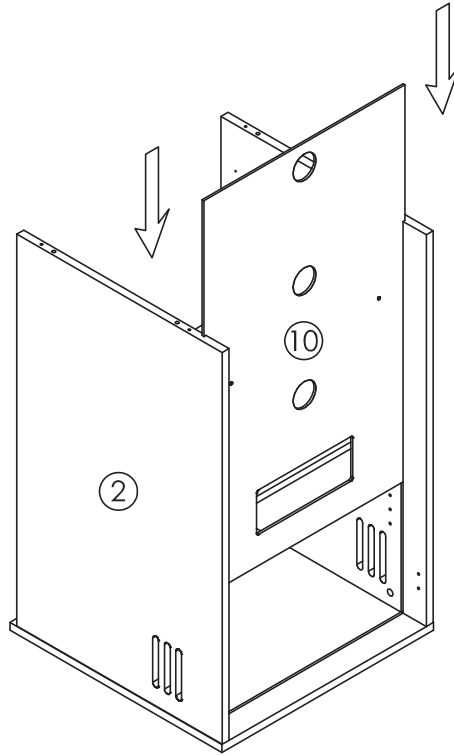 


STEP 3:






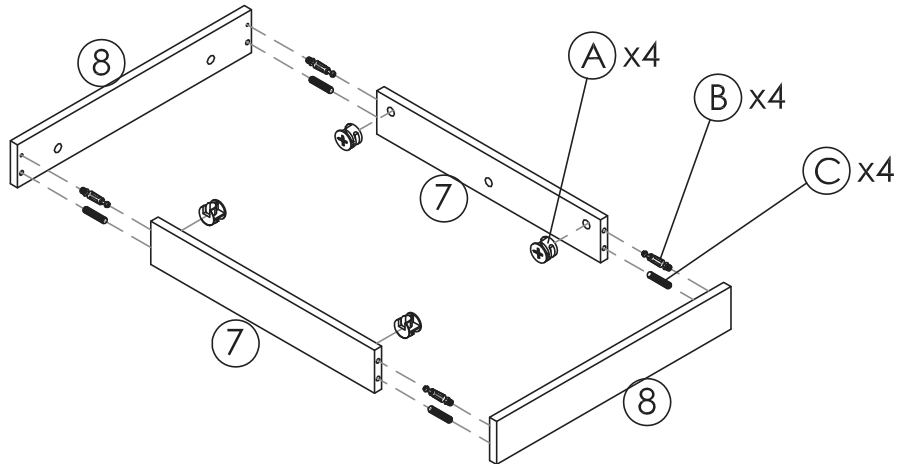 
STEP 4:

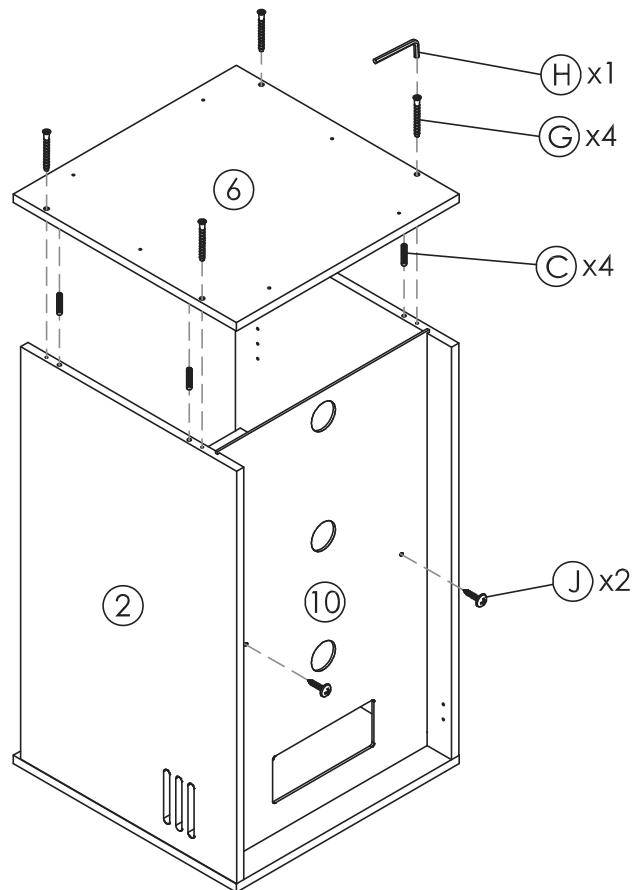-  (C) x4
-  (G) x4
-  (H) x1
-  (J) x2







 
STEP 5:

-  (A) x4
-  (B) x4
-  (C) x4




STEP 6:


-  (A) x6
-  (B) x6
-  (L) x10
-  (M) x10

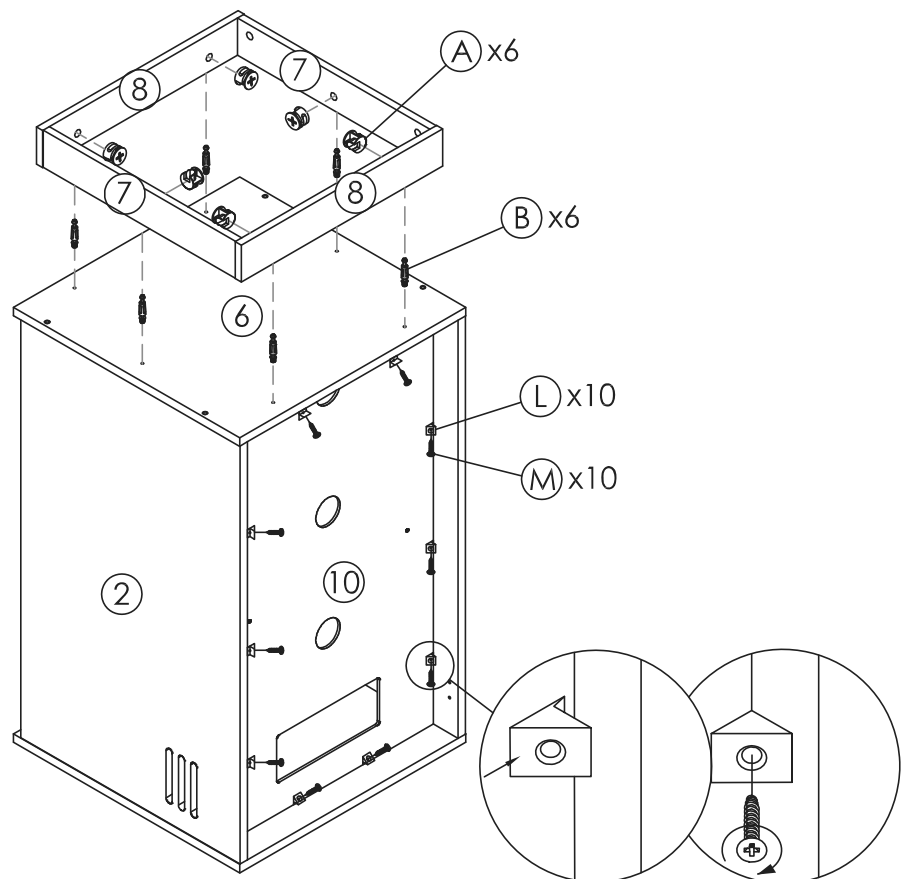

 STEP 7:



 (D) x8

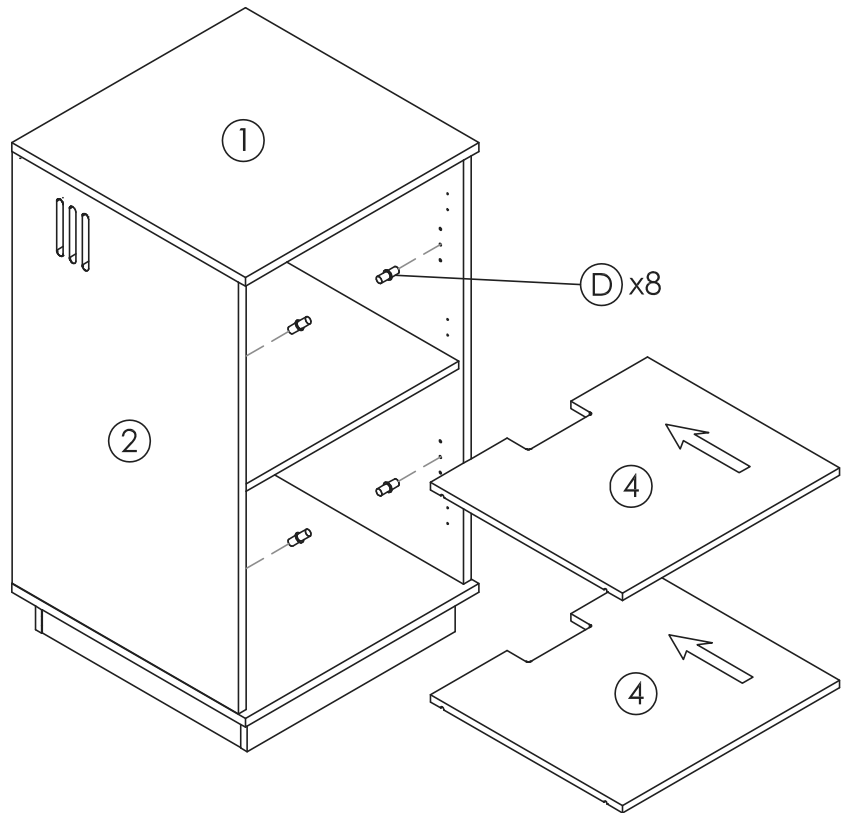

STEP 8:

 
RIGHT HAND DOOR ASSEMBLY



(E) x3




(F) x18

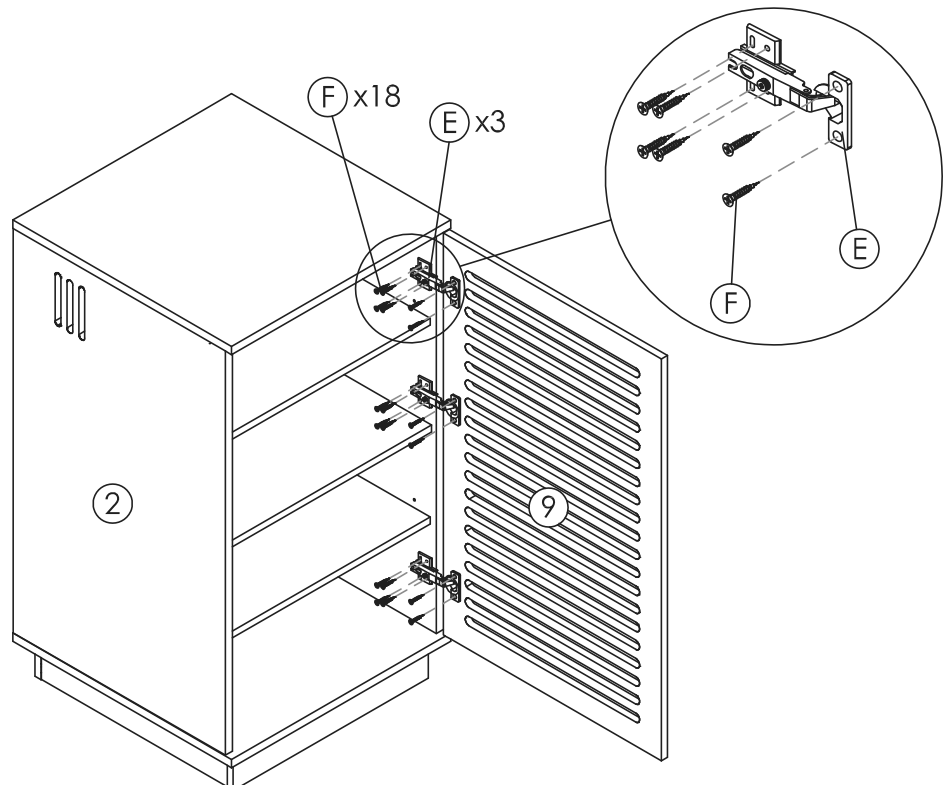

STEP 8:

 
LEFT HAND DOOR ASSEMBLY



(E) x3



 (F) x18

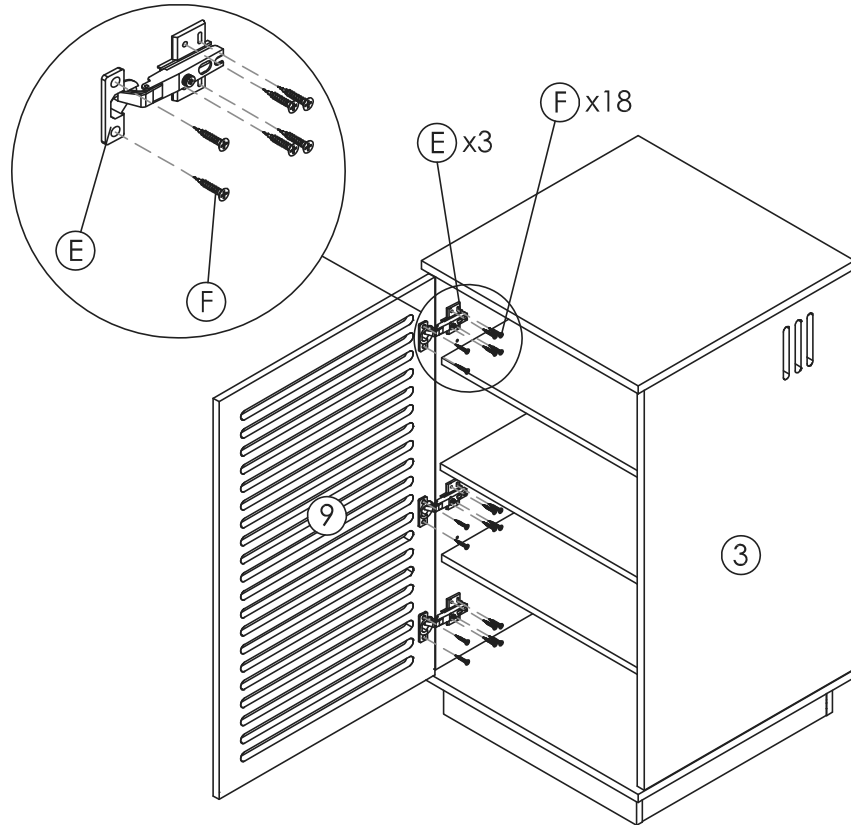


STEP 9:





(K1) x4



 
(K2) x2

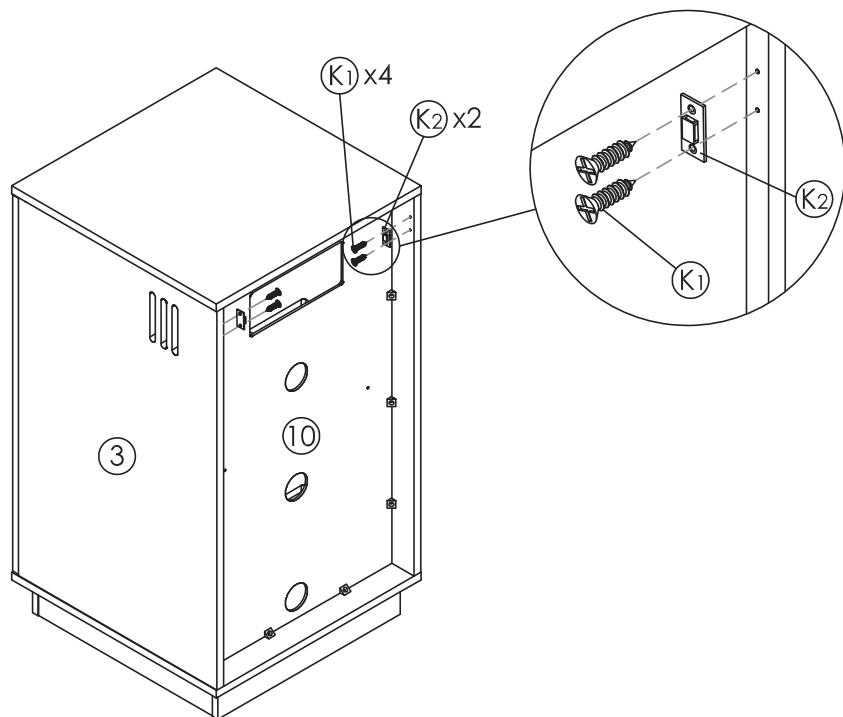

  STEP 10:

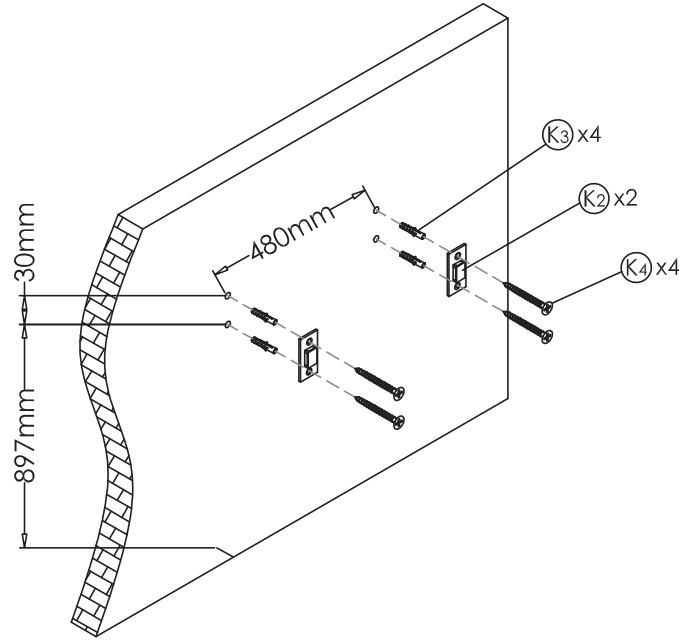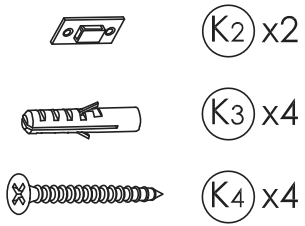

 STEP 11:

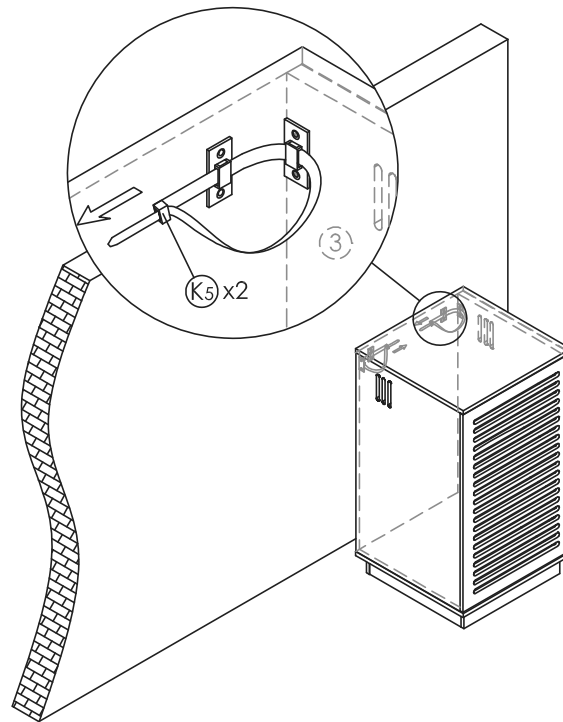

Well done on completing the assembly of your new Tauris HiFi unit. Please share how it looks in your space and tag us on:



@Taurisav



@Tauris



Our complete range can be found at www.tauris.com.au

TOPPLING FURNITURE GUIDE:

 
WE RECOMMEND THAT A PROFESSIONAL INSTALLS THIS PRODUCT

Under Australian Toppling Furniture regulations all category 1 and category 3 furniture (over 686mm) must be secured to the wall.

These furniture categories are supplied with an anchor and a strap/cable to secure the unit to the wall.


Gyprock:

- Use a stud finder to ensure the bracket is being secured into the stud.
- Once you have secured the brackets, loop the cable through to secure the unit.

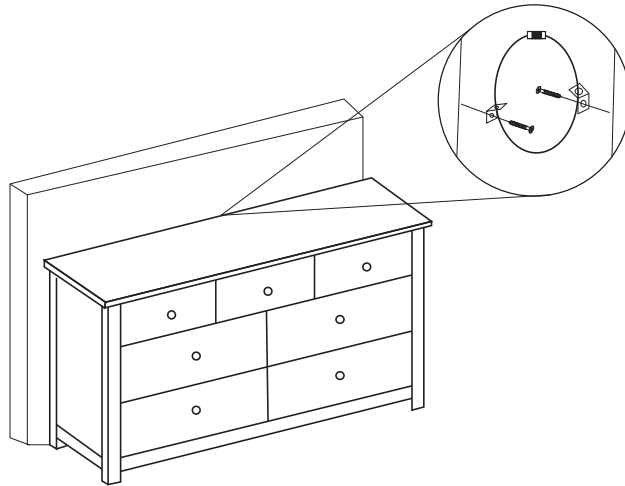


Brick

 - Before starting make sure that the anchor point is brick.
- Never anchor into mortar.
- Check your wall type and choose the wall plug accordingly.
- Once you have secured the brackets, loop the cable through to secure the unit.

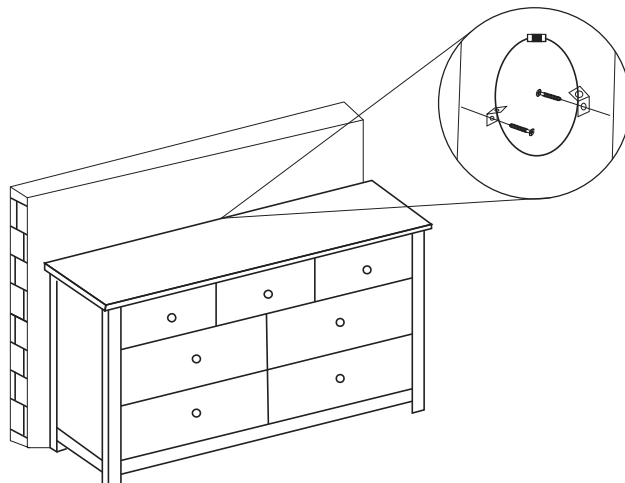


ADJUSTING DOOR HINGES:

 - Hinges come ready to install, though they can be adjusted to be sure that the doors sit square and flush to the piece of furniture.
- There are 3 screws on the hinge that can help adjust its position.

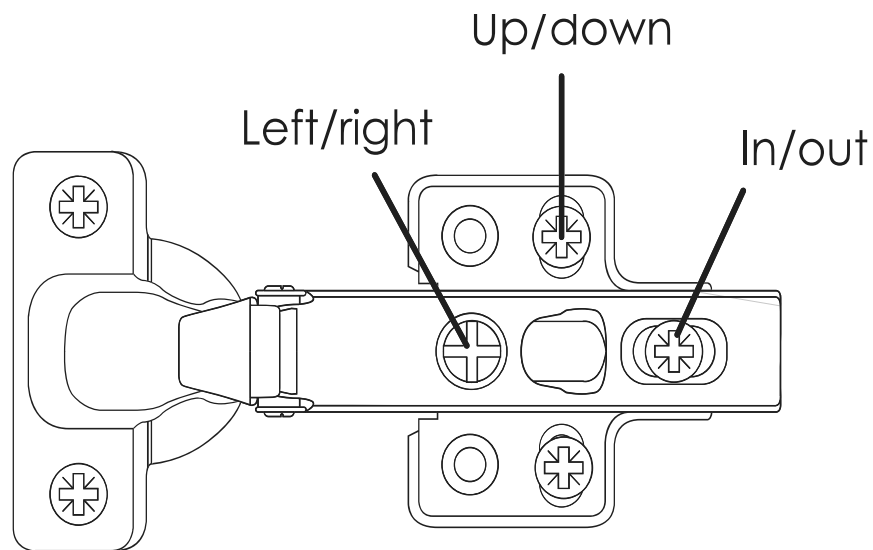


Inside screws:

 - The inside screws move the hinge in and out.

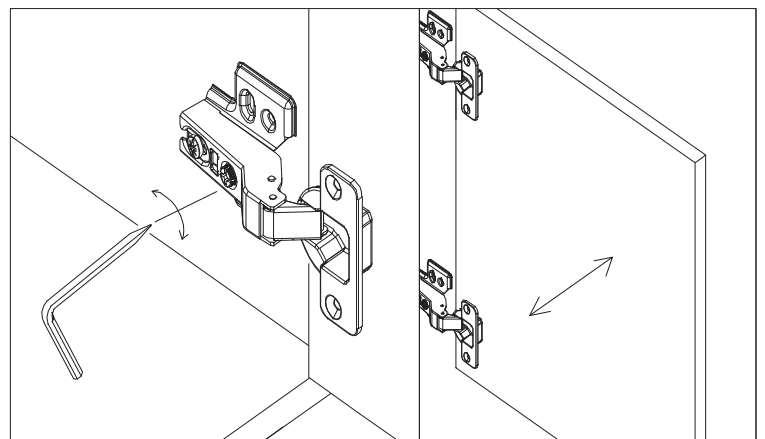

Outside screws:

 - The outside screws move the hinge left and right.

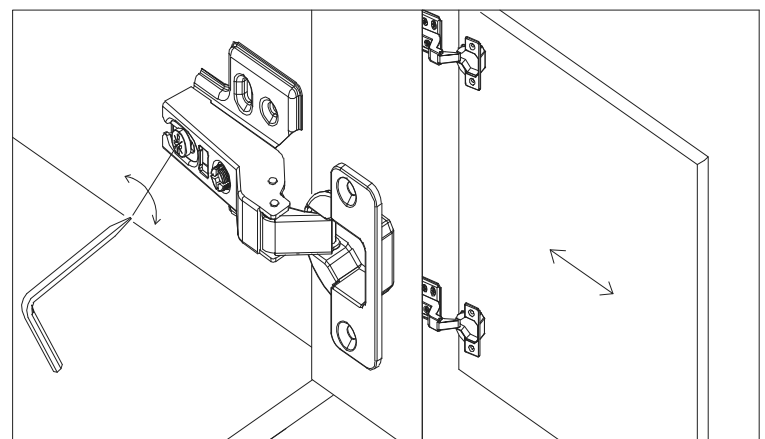




TAURIS

SURFACE CARE INSTRUCTIONS

A little care and attention will extend the life and look of your furniture. Take care when using materials that might spill, be sharp or abrasive on the surface of your furniture.

NORMAL CLEANING:

 For normal cleaning use a soft, dry, clean cloth. In the case of spills/stains use warm water.

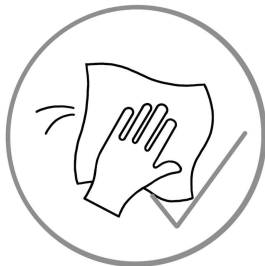

GLASS CLEANING:

You may use normal glass cleaning products on all standard glass. Use a soft cloth to remove light dust and fingerprints.



 
VINYL CLEANING:

DO NOT use solvent-based cleaners or any abrasive materials. Only use a slightly damp, soft, clean cloth on this surface. Do not scrub.



FROSTED GLASS CLEANING:

DO NOT use glass cleaner or solvent-based cleaners on the surface of the glass that has a frosted finish.

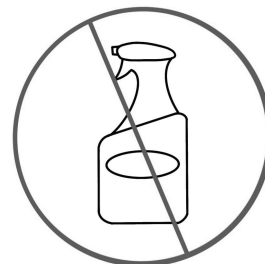

CAUTION:

DO NOT expose to direct sunlight or extreme temperature. This will result in irreparable damage and discolouration.



TAURIS

WARRANTY POLICY

1. Nothing in this warranty affects the consumer's rights under the Australian Consumer Law. The benefits to the consumer under this warranty are in the addition to the rights and remedies of the Buyer under any consumer guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality.

2. Subject to Clause 1, the Seller warrants that TAURIS branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this 12 Month Warranty extends only to the Owner of the property in which the products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty period.
4. If within the Warranty period a manufacturing defect is discovered in the product, or the product fails to perform to the Seller's specifications as a result of some defect in the material or workmanship, then the Seller will replace or repair the goods under Warranty or refund the purchase price paid by the Owner. Except if the failure is a major failure.
5. The Warranty does not apply to a product that:
 - a) Has failed due to excessive wear.
 - b) Has been misused or neglected.



TAURIS

WARRANTY POLICY

- c) Has been damaged accidentally or by acts of God including fire and flood.
 - d) Has been used or operated contrary to the operating or maintenance instructions.
 - e) Has been damaged in transit from the Seller's store to the Owner, either by the Owner or a third party authorised to act for the Owner.
 - f) Was correctly assembled or installed.
6. In order to make a claim under the Warranty, the Owner must provide proof of purchase in all cases.
7. The Seller will examine any return products and if the Seller determines that there is an apparent defect through no fault of the owner, the Seller will:
- a) Make a note of the Owner's contact details, including the Owners telephone number which the Owner can be contacted during business hours, postal address and email address.
 - b) Make note of the defect/s reported by the Owner.
 - c) Take back the defective goods from the Owner and determine within reasonable time through dialogue with the Owner whether the goods are defective.
 - d) Advise the Owner within a reasonable time frame whether the goods are defective.
 - e) If the seller accepts the return of the product, the seller must arrange to have:
 - i) The product repaired or,
 - ii) Replace the damaged or faulty product or,
 - iii) Refund the purchase price
8. The Seller will not accept any returned product which has not been returned strictly in accordance with this warranty.



TAURIS

WARRANTY POLICY

9. For the purpose of this warranty:

- a) Australian Consumer Law means the law set out in Schedule 2 of Competition and Consumer Act 2010 (Cth).
- b) Consumer means purchaser of the goods.
- c) Consumer means a Consumer as that term is set out in Section 3 of the Australian Consumer Law.
- d) Consumer Guarantees mean the guarantees under the Australian Consumer Law.
- e) Implied terms mean guarantees, conditions, warranties, or other terms implied by an Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
- f) Owner has the meaning set out in Clause 3.
- g) Warranty means this Warranty.
- h) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
- i) Warranty Period means:

Furniture: 12 Months Limited Warranty.

Homewares: 12 Months Limited Warranty.

TV mounts: 12 Months Limited Warranty.

Speaker stands: 12 Months Limited Warranty.