



## CAUTION

There is potential scald injury if you choose to supply your glass / cup rinser with hot water.

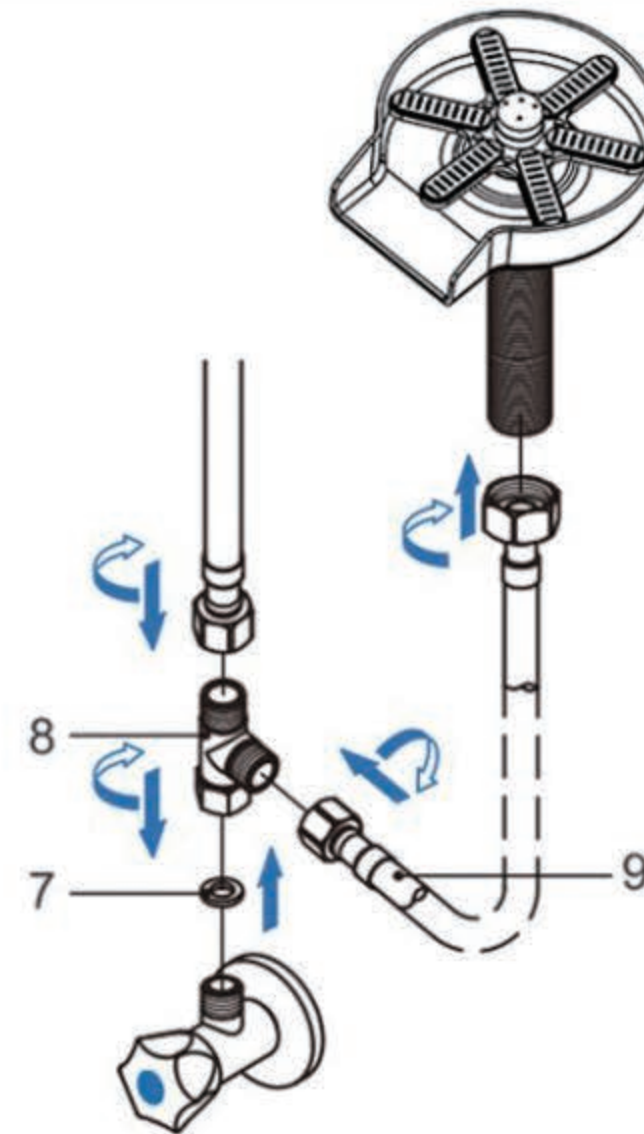

- Turn off both hot and cold water supply at the angle stop valve.
- Unscrew the tap hose from the angle stop valve.
- Firstly thread the tee(8) and rubber washer(7) on the angle stop valve, and then screw the tap hose to the threaded male tee(8).
- Screw one end of the supplied hose(9) to the threaded male tee(8) and the other end to the mounting shank.

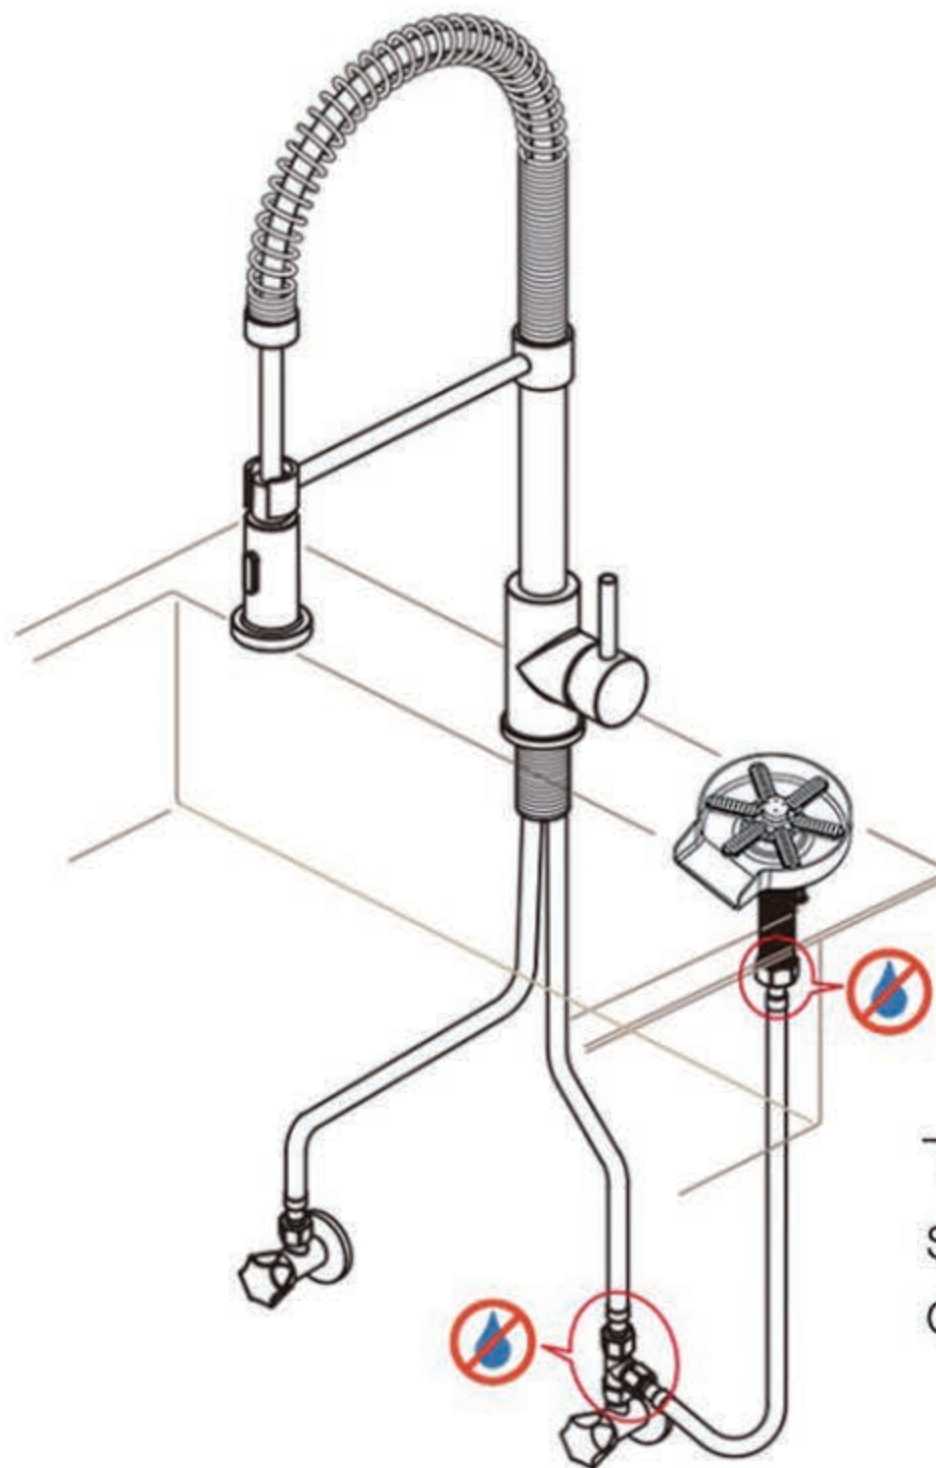

Turn on both water supplies at angle stop valve and check for leaks at all connections made during this installation.