




# **AWARNING**

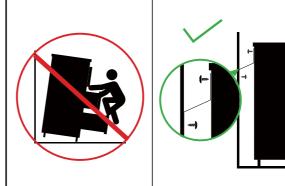


Children have died from furniture tipover.


- ALWAYS secure this furniture with an anchor device.
- NEVER allow children tostand, climb or hang ondrawers, doors, or shelves.

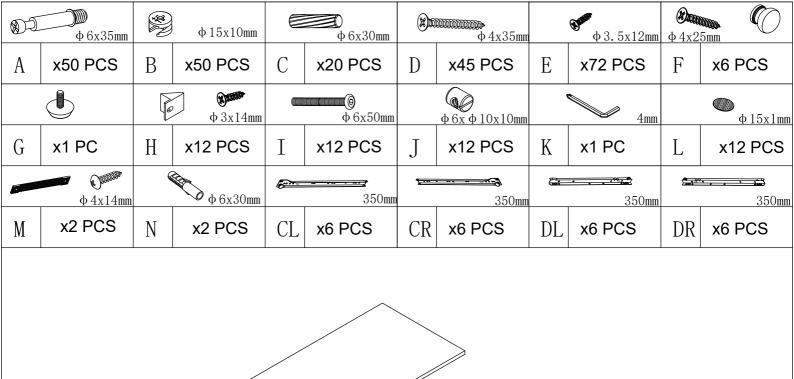

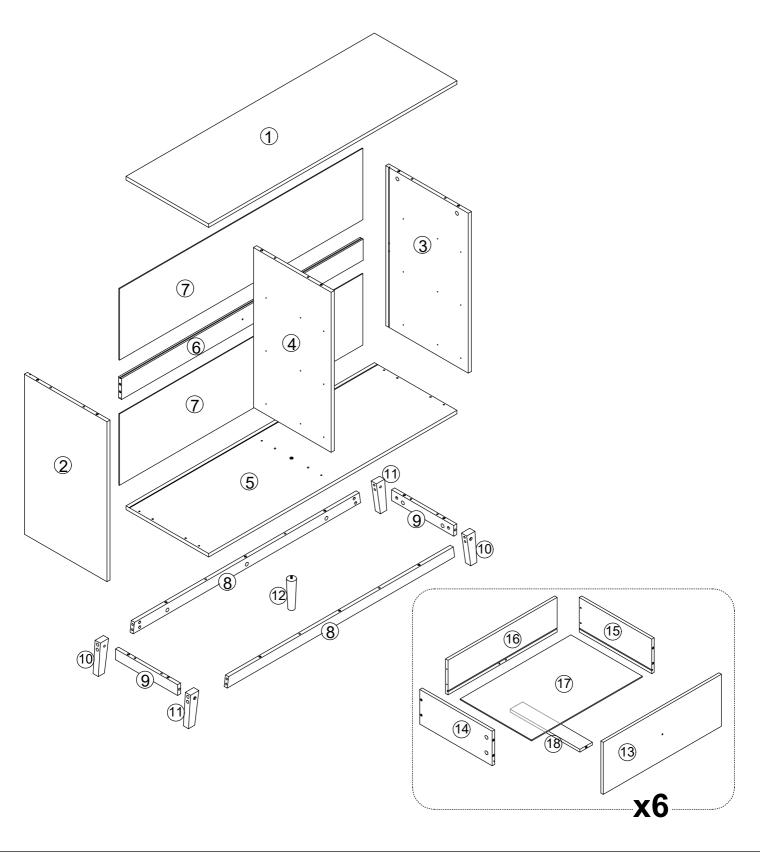


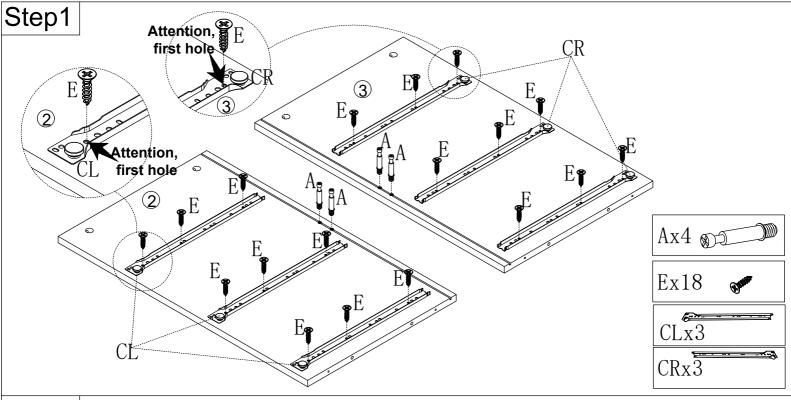





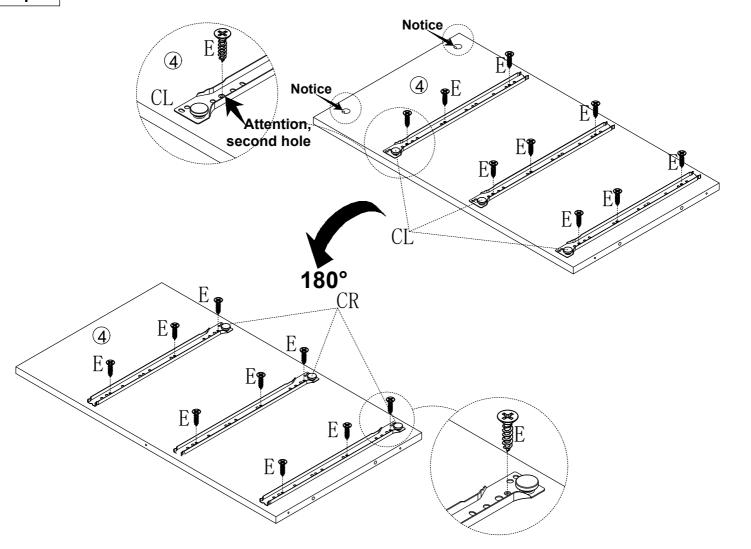



Place them in the correct positions relative to the existing structure. Fix with screws. Pay attention to the "second hole" and the 180° angle indication.

 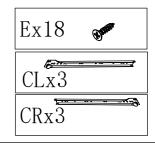


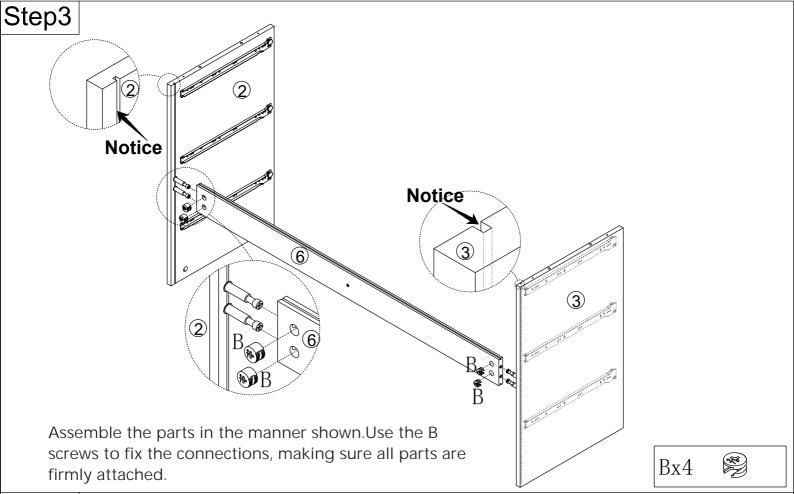


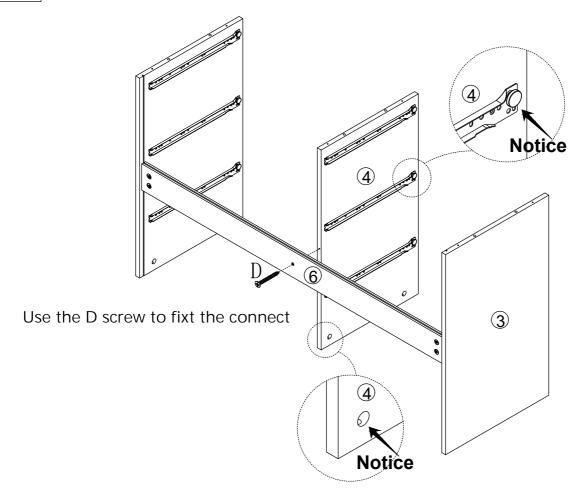

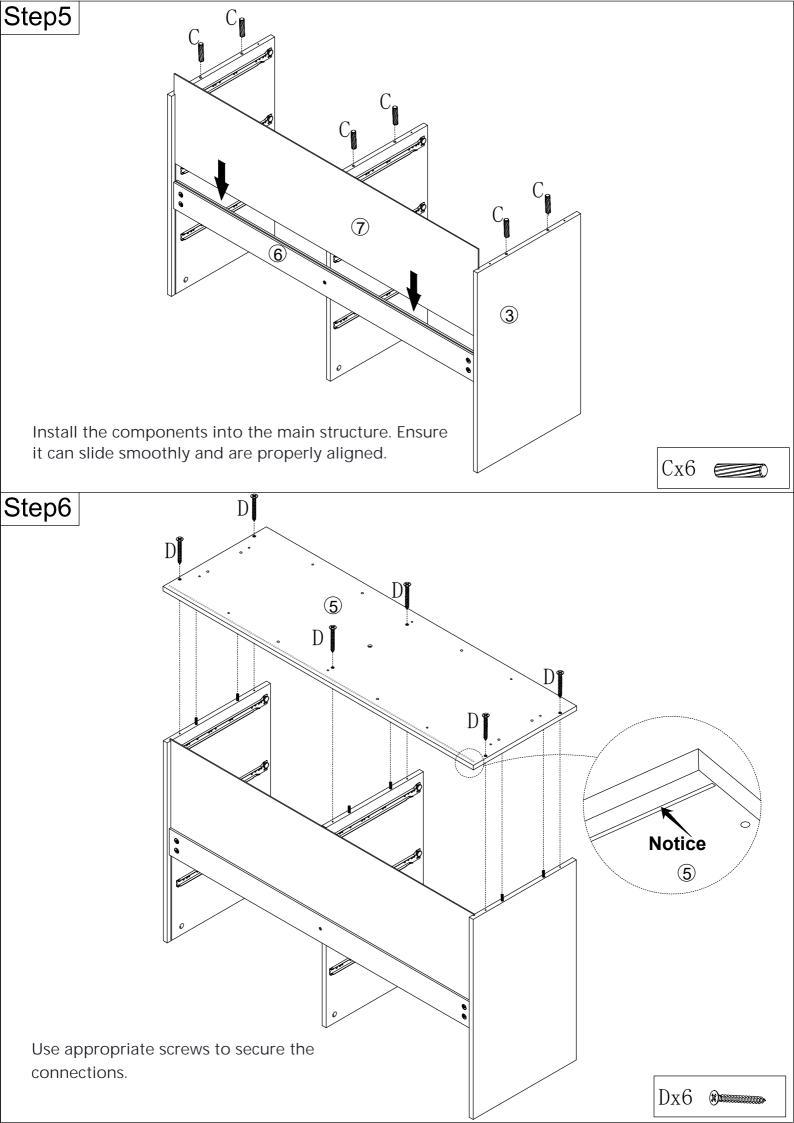


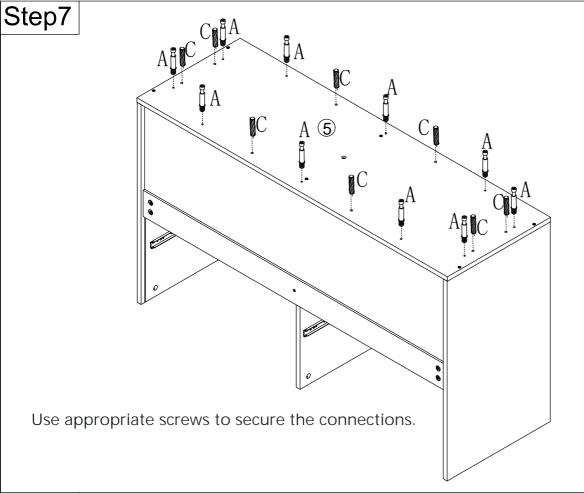





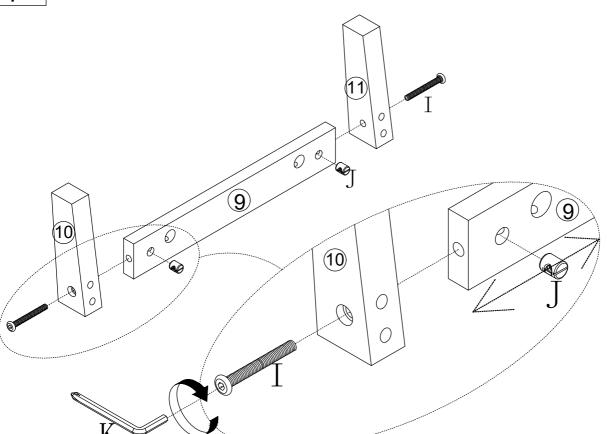



Fix the componets with I,J screws to ensure stability.

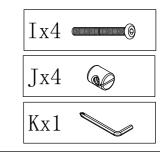


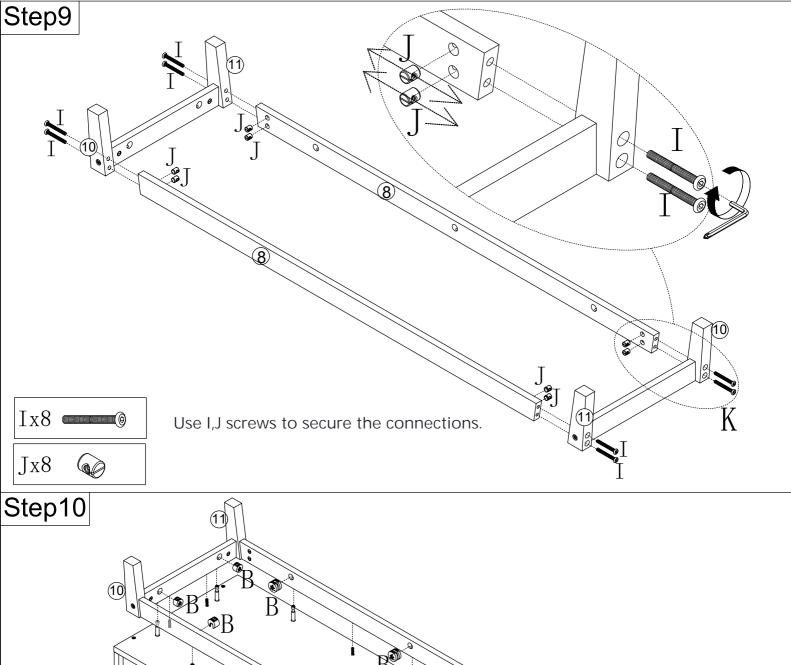

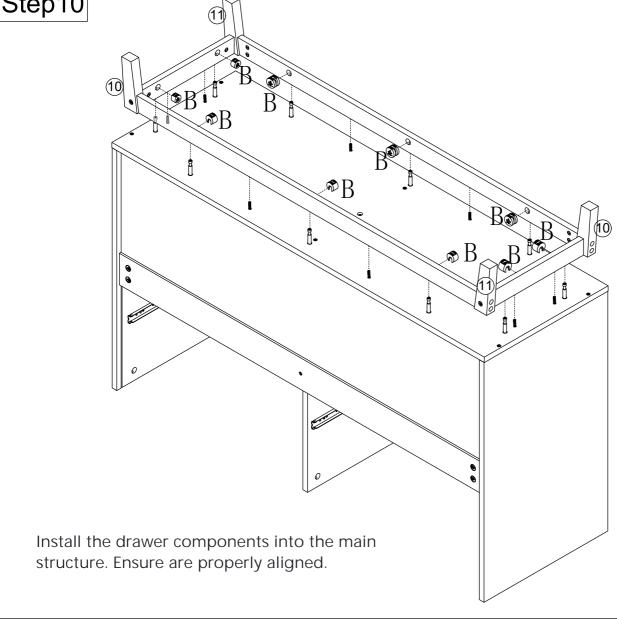


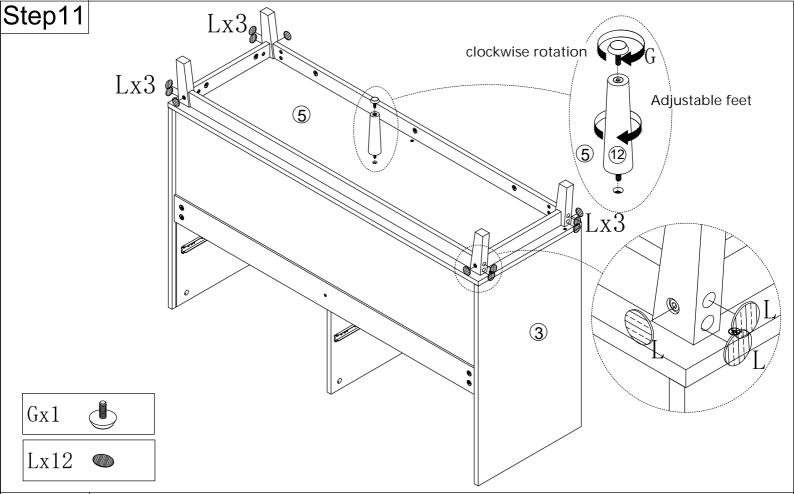


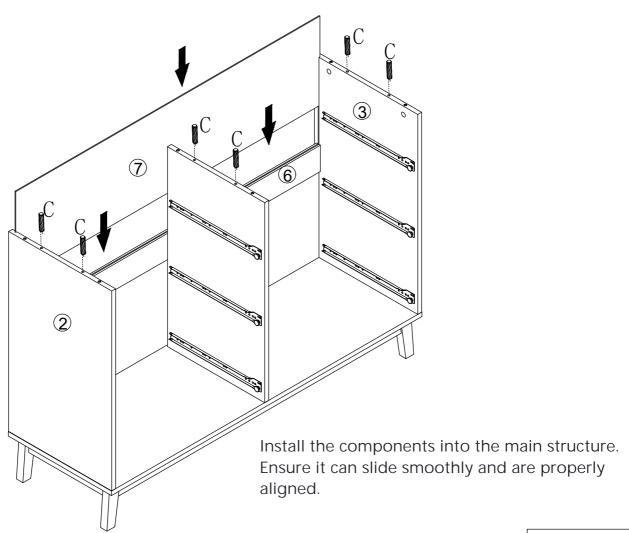

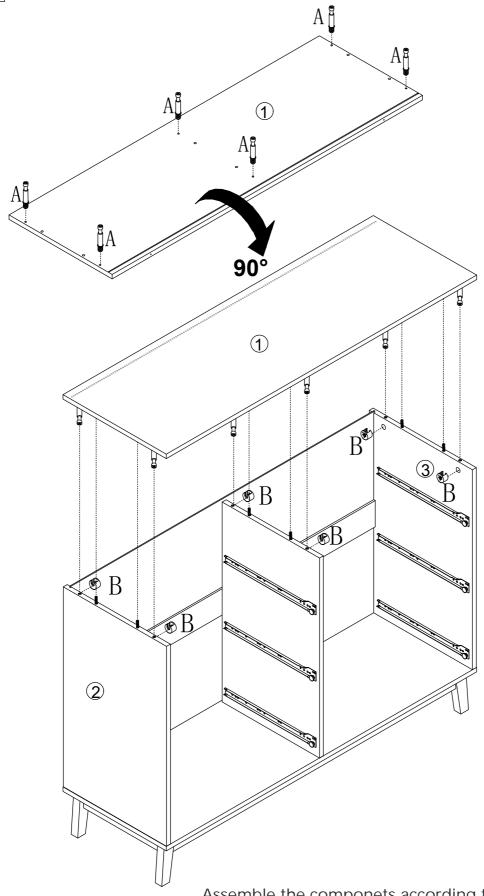


 Assemble the componets according to the diagram.



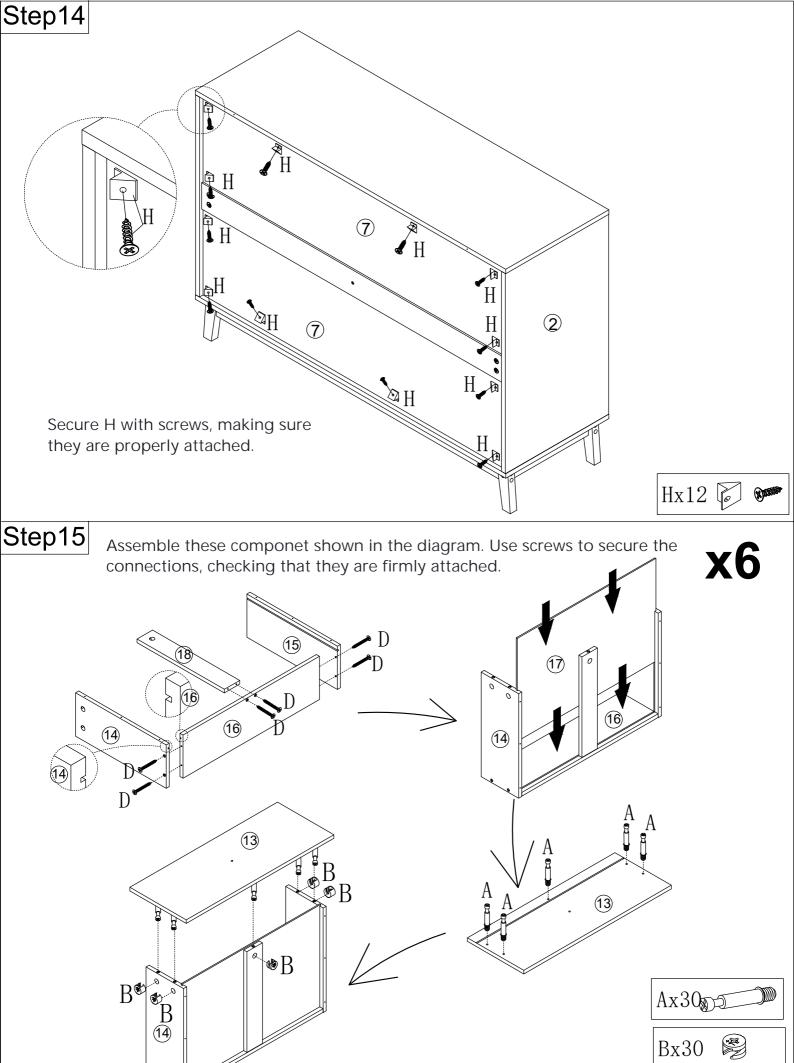


Dx36 (2) Description

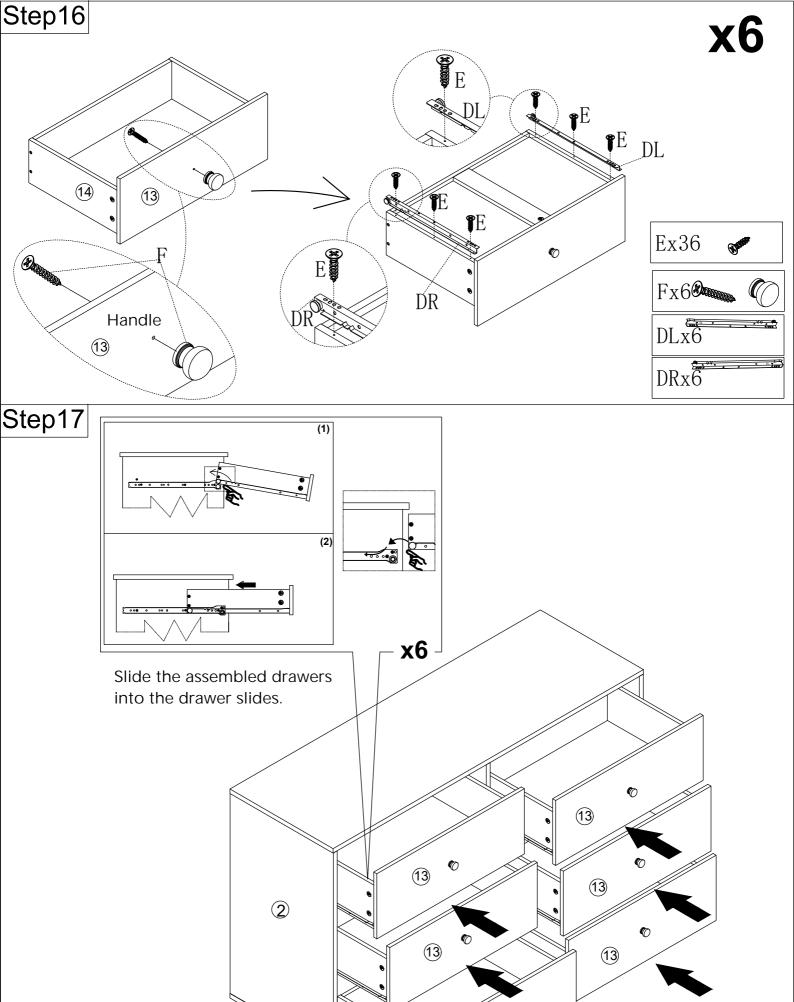

**©** 


13

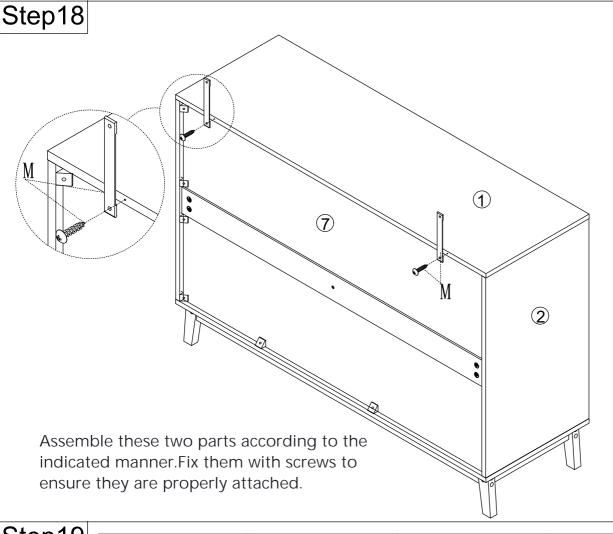

**WALL** 





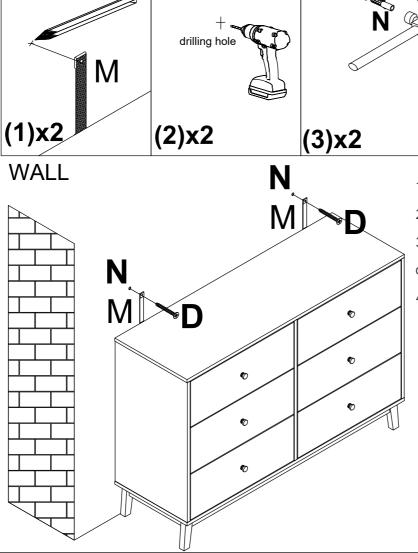

**WALL** 

1. Mark the drilling holes.

**WALL** 

Ņ

(4)x2

- 2. Drill holes in the marked.
- 3. Install the anchor devices into the drilled holes.
- 4. Ensure the furniture is firmly anchored to the wall to prevent tipover.

