


A WARNING

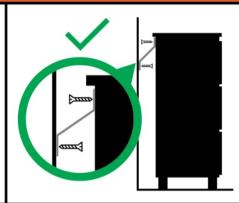




Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.


NEVER put a TV on this furniture



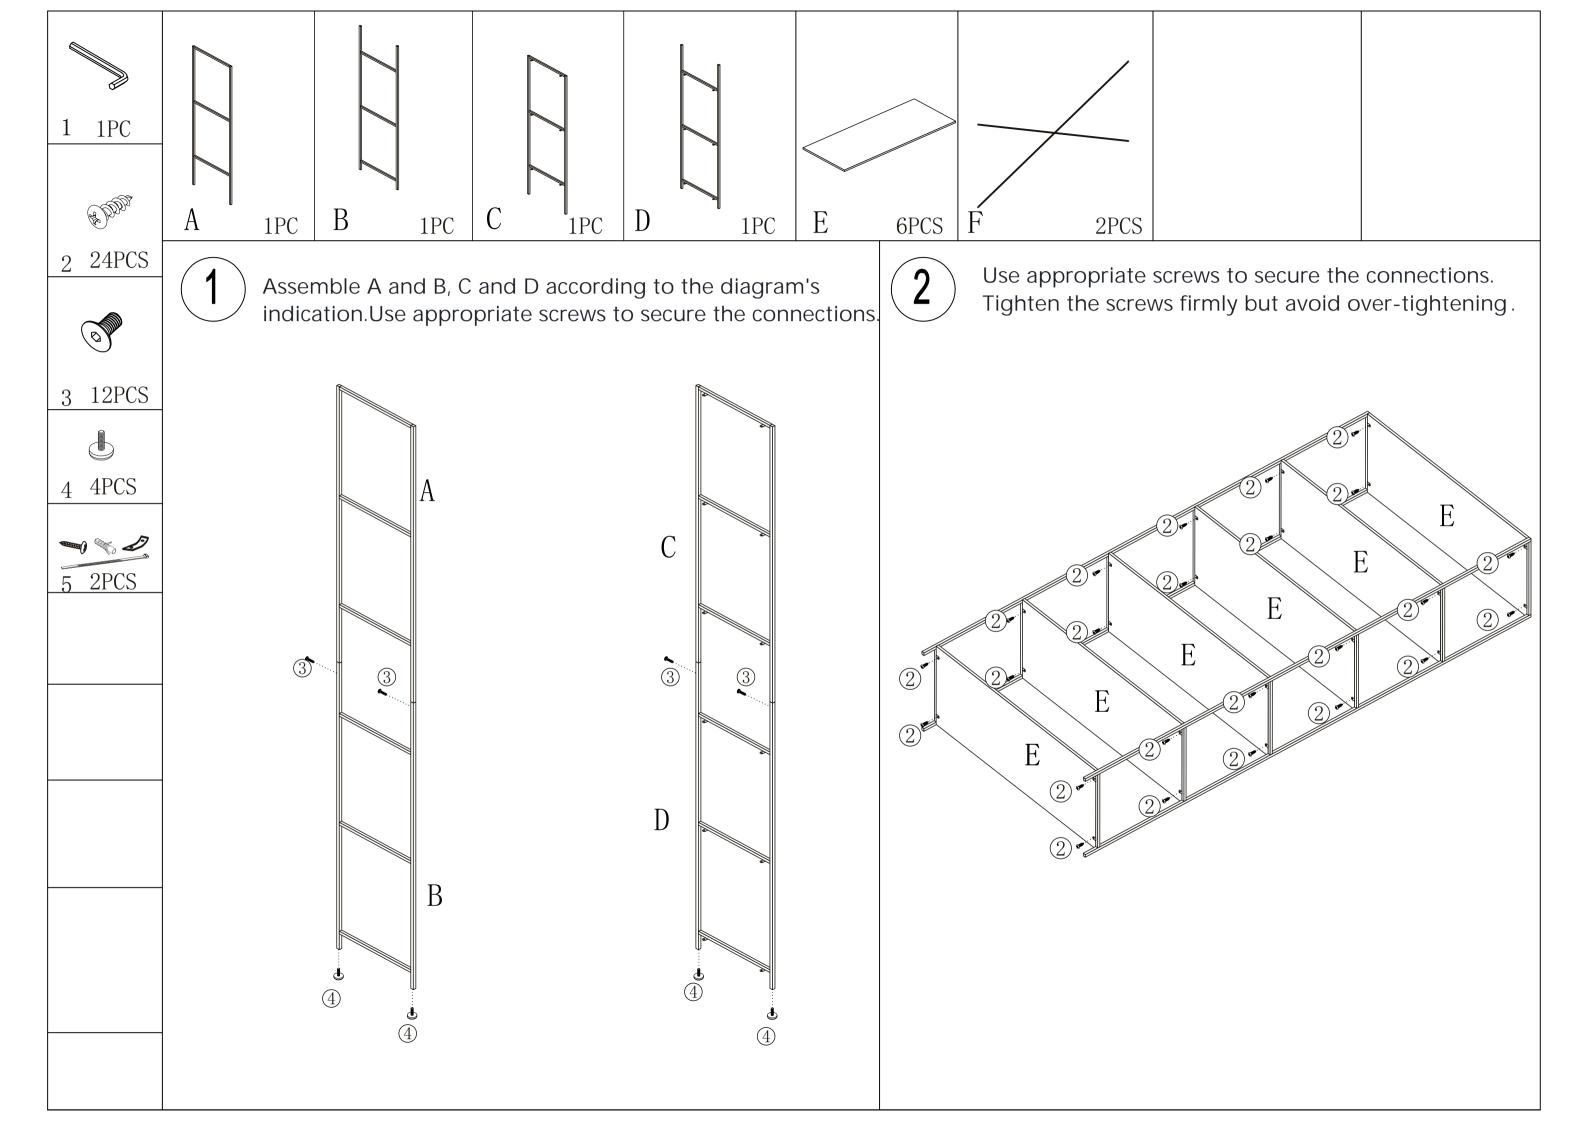



Assemble the X rode at the correct position, Use appropriate screws to secure the connections.

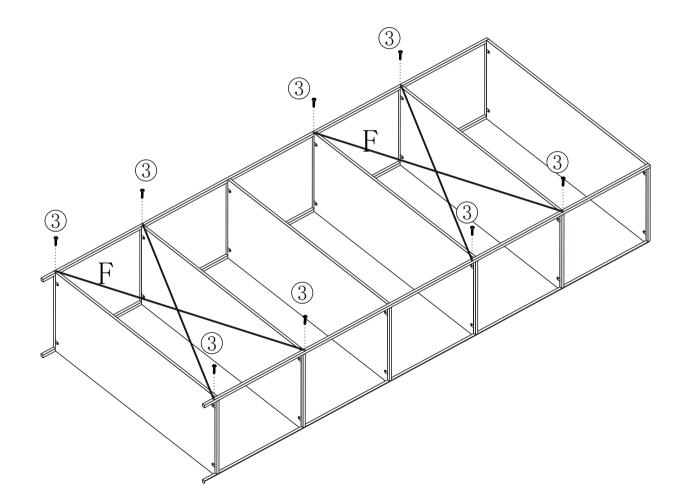



- 1. Mark the drilling holes.
- 2. Drill holes in the marked.
- 3. Install the anchor devices into the drilled holes.
- 4. Ensure the furniture is firmly anchored

