 
 
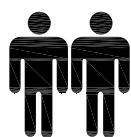 


# ASSEMBLY INSTRUCTION

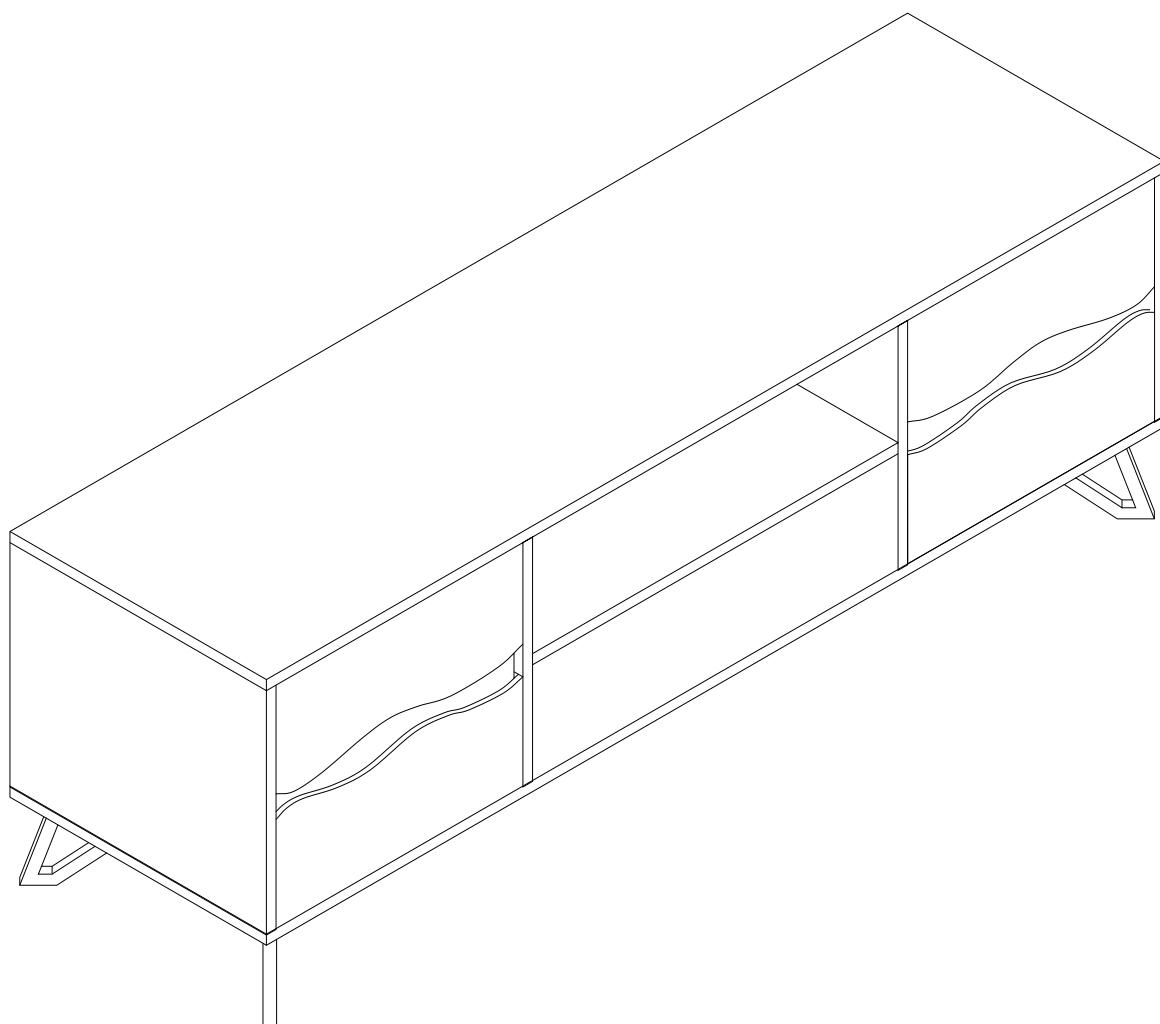 


2 PERS.

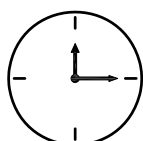

 
20 MIN

 


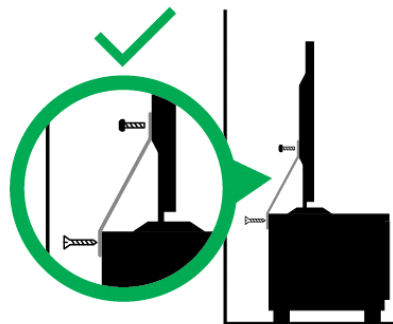


 

 


 
 
## **WARNING**

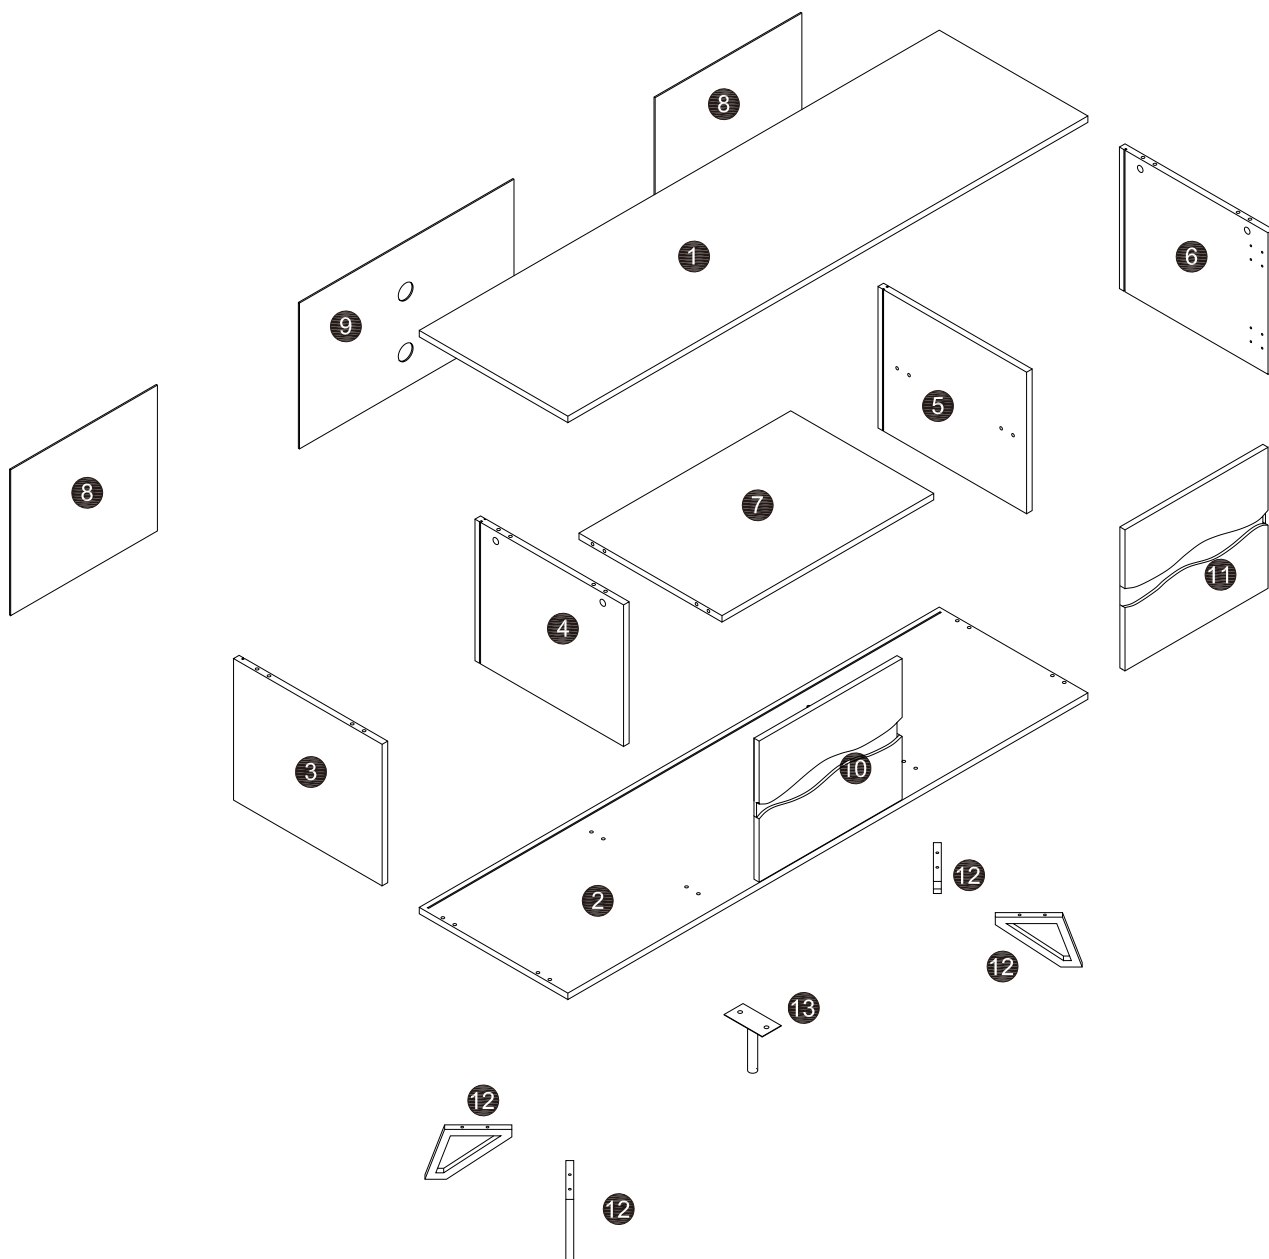

 
**Children have died from furniture tipover.**

- ALWAYS secure your television with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.



 
<b>A</b>  ø6X35mm	<b>B</b>  ø15X10mm	<b>C</b>  M6x35mm	<b>D</b>  ø6x30mm	<b>E</b>  M4x30mm
<b>F</b>  M3.5x12mm	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
<b>K</b> 	<b>L</b> 	<b>M.</b> 		

 
# STEP 1

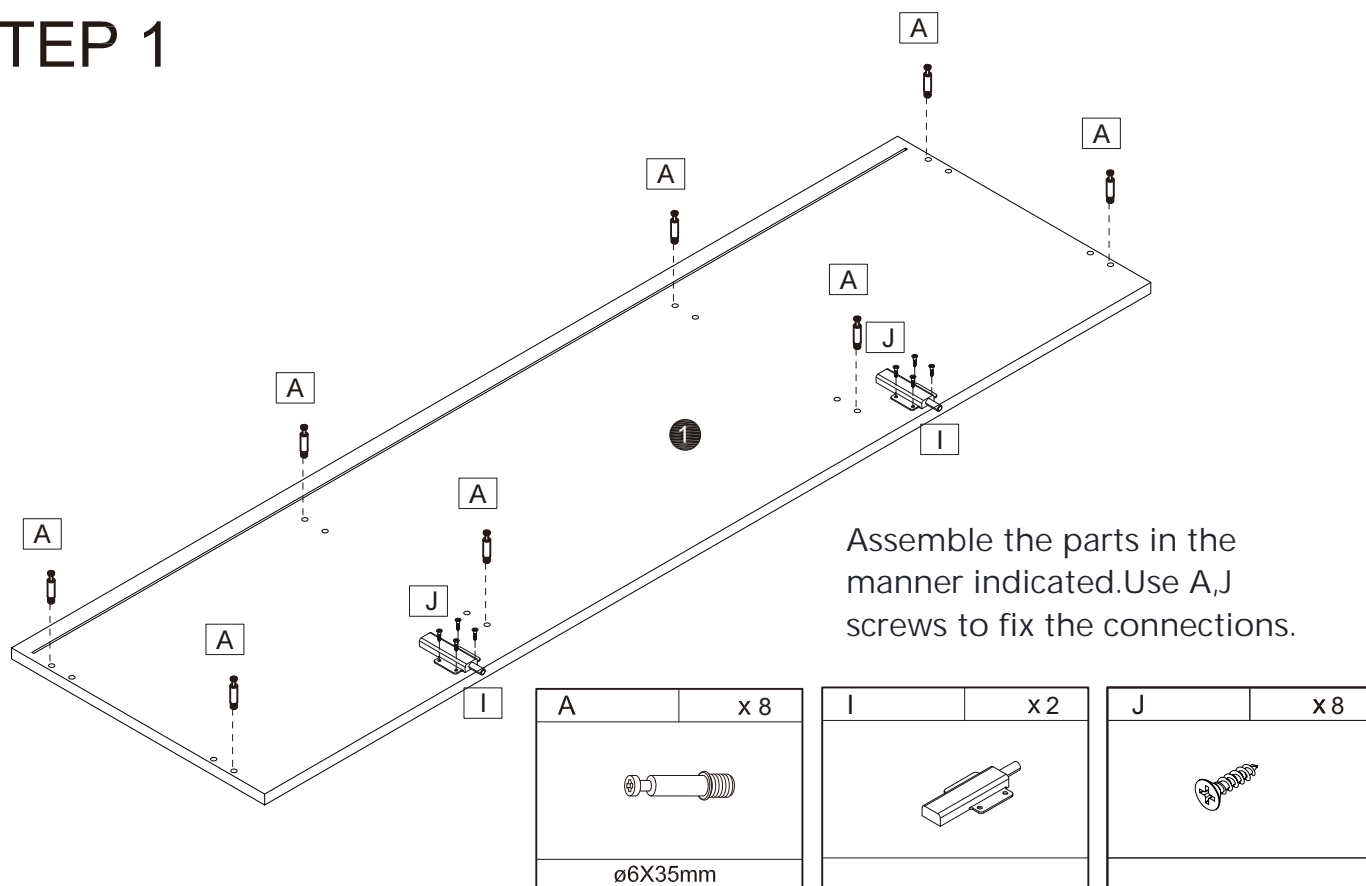

 
# STEP 2

Fix the assembled parts with A screws.

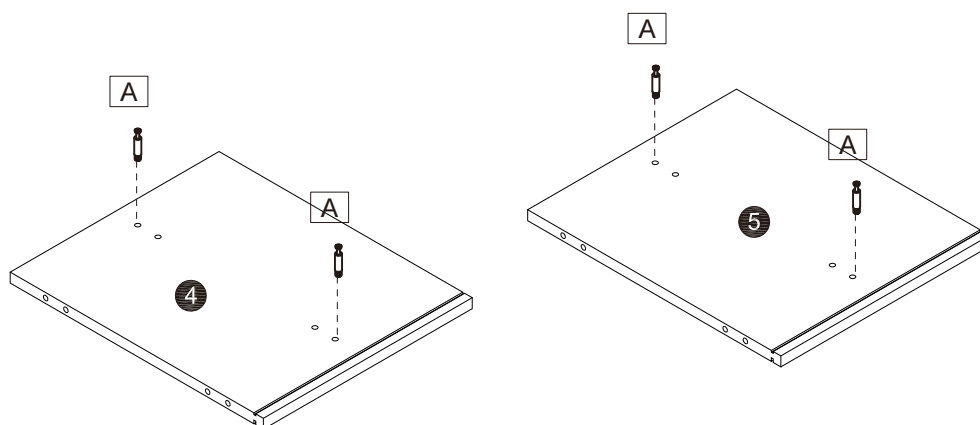



A	x 4
	
ø6X35mm	
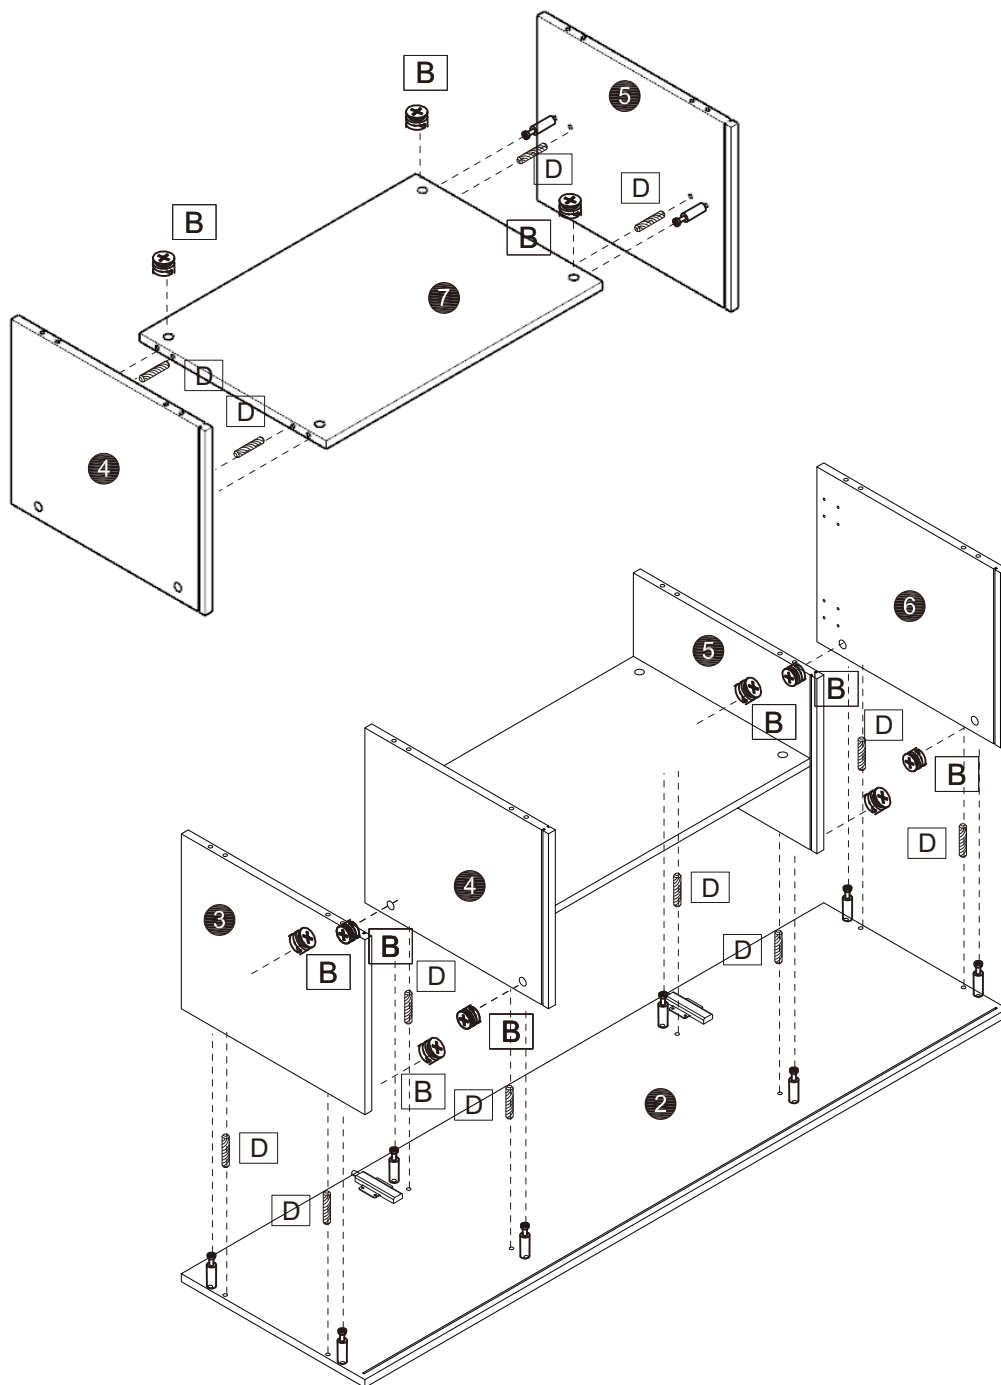
# STEP 3



 
Assemble the parts in the manner shown. Ensure that each part is installed in the correct position. Use B,D screws for fixing.


B	x12
	
ø15X10mm	

 
D	x 12
	
ø6x30mm	

# STEP 4

Place them in the correct positions relative to the existing structure.

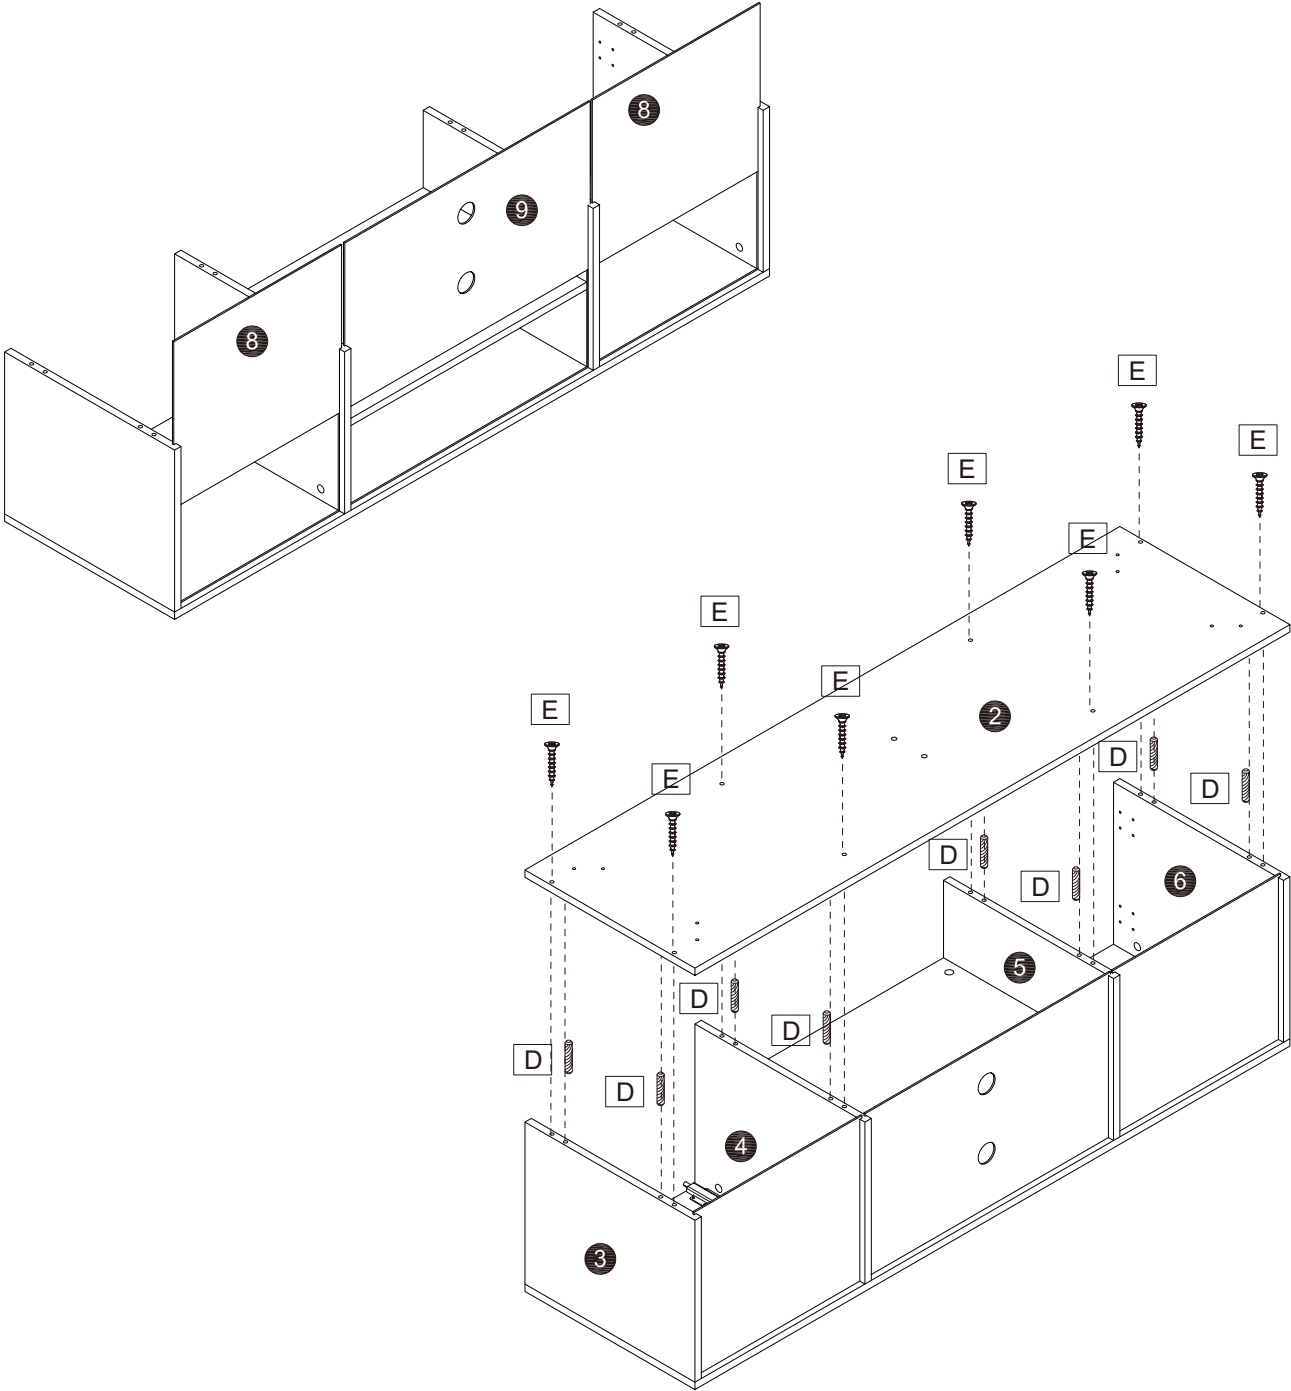
 



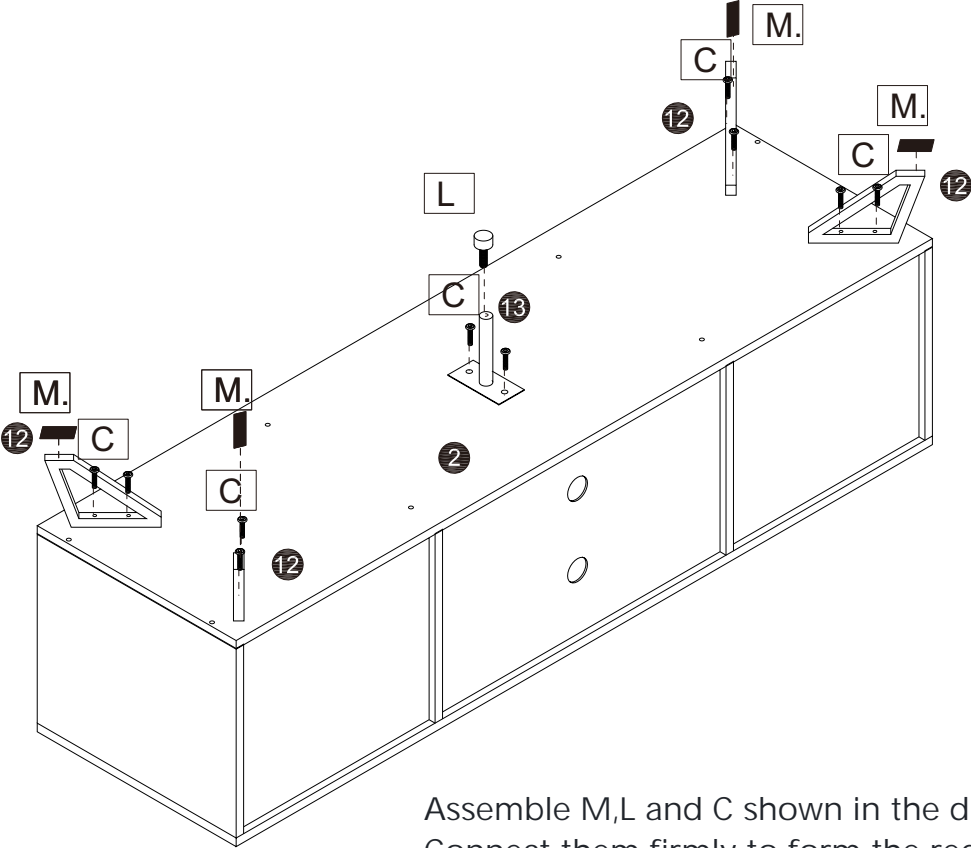 
E	x 8
	
M4x30mm	

D	x 8
	
ø6x30mm	

Use E,D screws for fixing

 
# STEP 5

 
M.	x 4
	
L	x 1
	
C	x 10
	
M6x35mm	




Assemble M,L and C shown in the diagram.  
Connect them firmly to form the required  
structure.

# STEP 6

 
K	x 12
	

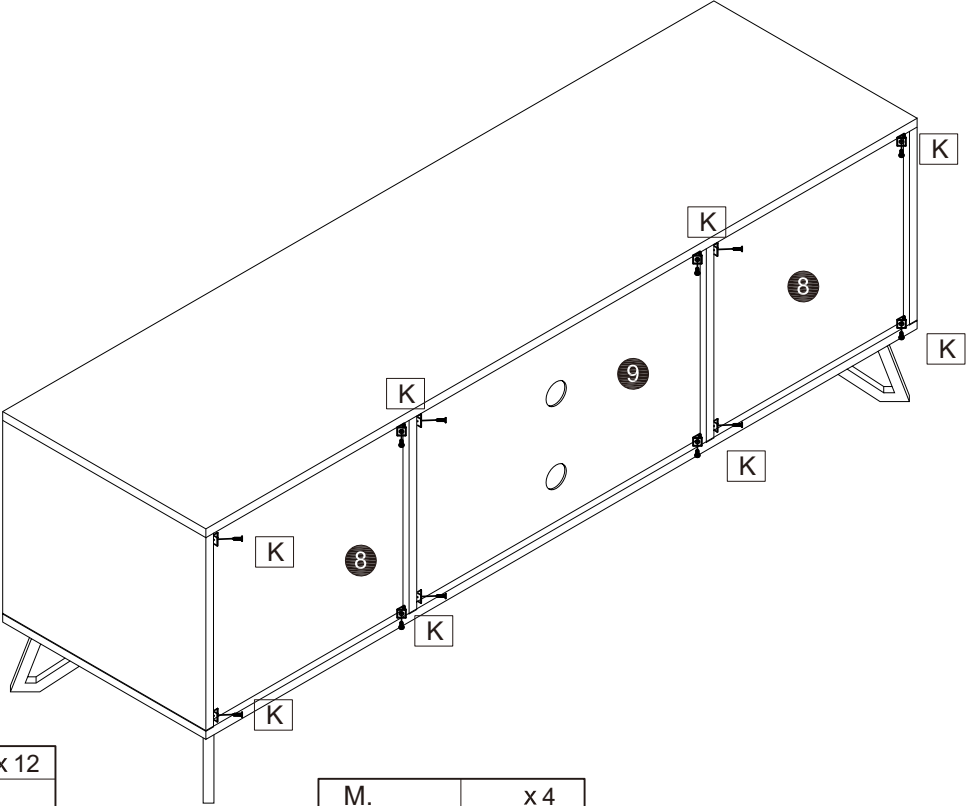



M.	x 4
	


# STEP 7

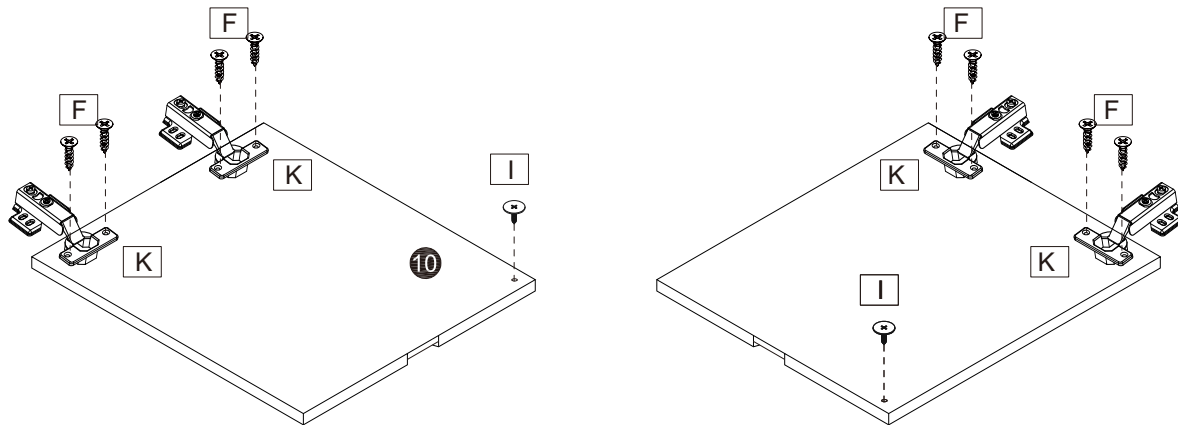Assemble the parts in the manner shown, use F, I screws to secure the connections.

 



F	x 8
	
M3.5x12mm	

H	x 4
	

I	x 2
	

# STEP 8

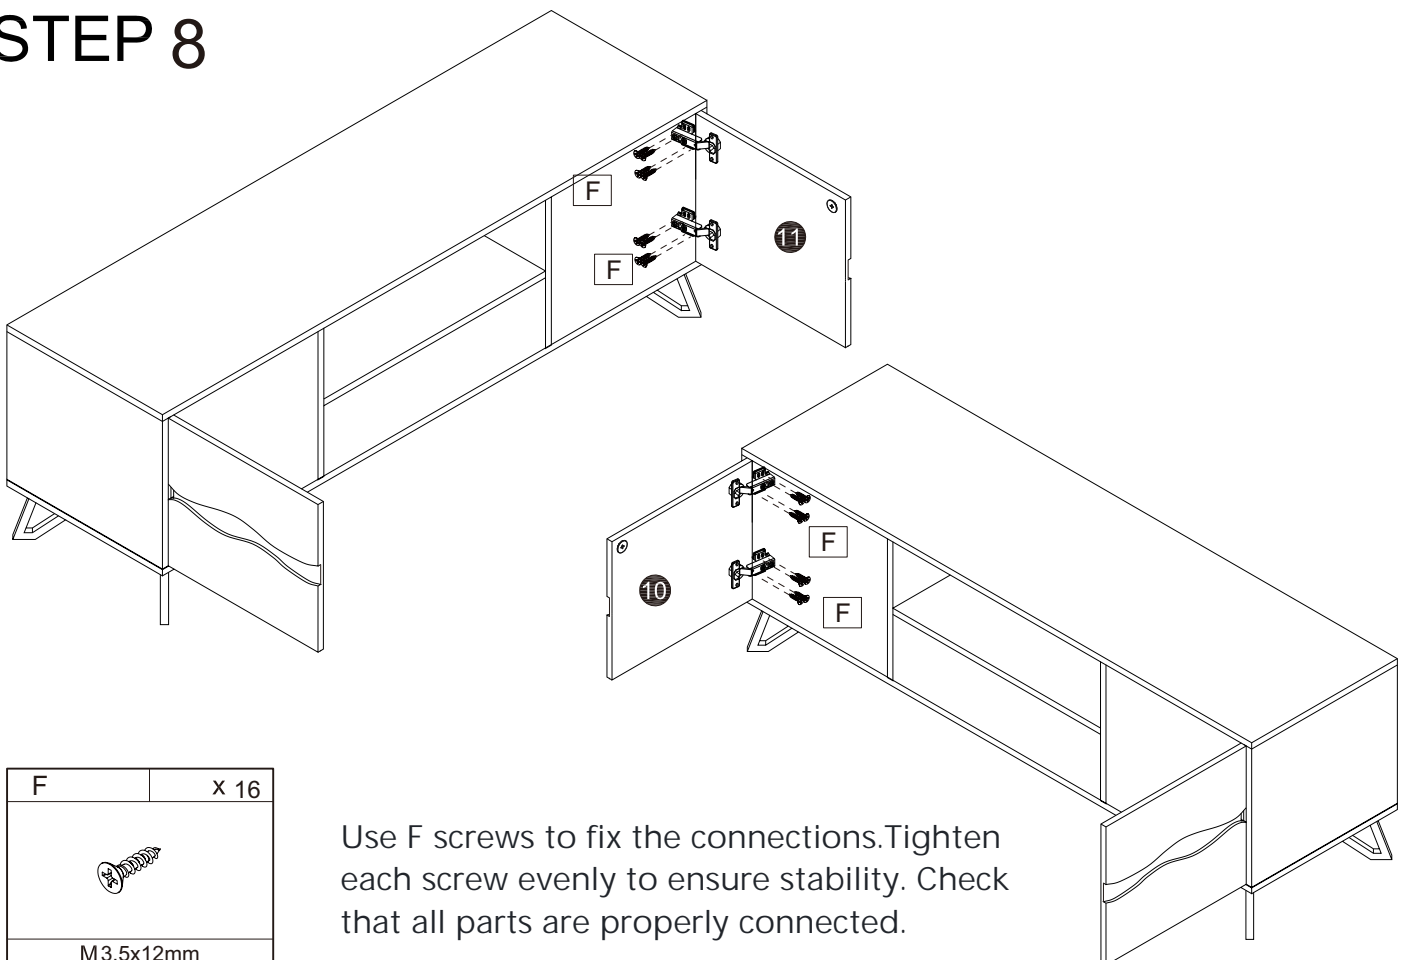

F	x 16
	
M3.5x12mm	

Use F screws to fix the connections. Tighten each screw evenly to ensure stability. Check that all parts are properly connected.