

Assembly instructions for lifting and lowering models

A		1 UN
B		1 UN
C		2 UN
D		2 UN
E		2 UN
F		1 UN
G		1 UN
H		1 UN
I		5 UN
J		18 UN
K		4 UN
L		10 UN
M		4 UN
N		1 UN
O		1 UN

①

Divide the armrest iron plates (D) on the left and right sides, and align them up and down with the hole positions, Install 5 6x12 screws on each side (note to twist 5 screws first Don't tighten it inside and then tighten it together

②

Align the back (A) with the hole position of the armrest iron sheet from the inside out 4 6x12 screws (note to twist the 4 screws first Don't tighten it inside and then tighten it together

③

Clip the 7-shaped iron plate into the armrest, 2 capsules 6 × 16 screws from outside to inside Twist the face in (note: first twist two screws) Don't tighten it inside and then tighten it together

④

Place the armrest on the iron plate and align it Three roaring positions, three 6x20 screws from Twist up from below (note: first, tighten the three screwsTwist it in without tightening it, and then tighten three screws

⑤

Insert the wheel into the wheel hole of the five star foot (press it in with some force)

⑥

First, twist out the four 6x25 screws on the chassis and align the chassis with the four holes, Screw in this screw again (be careful not to tighten it, and finally tighten it together)

⑦

The small end of the atmospheric rod is inserted into the chassis rear

⑧

Put the five star feet onto the air rod

⑨

The main chair is installed

⑨

The main chair is installed