


 








# Domestique 68L Twin/Triple Slide Out Concealed Waste Bin - 600mm Cupboard

**ELITE**<sup>®</sup>  
STORAGE SOLUTIONS

## Contents List

	Item Name	Image	Quantity
1	Saddle Brackets		4 PCS
2	PA4X16		16 PCS
3	PA4X25		6 PCS
4	KA4X50		4 PCS
5	KA4X60		4 PCS
6	Side Stabiliser		4 PCS
7	Nuts & Bolts for Door Mount Kit		6 PCS
<b>For Door Mount</b>			
5	M6x16mm		2 PCS
6	M5x10mm		6 PCS
7	Door connector (PRE-ATTACHED TO THE FRAME IN SOME MODELS)		2 PCS

## Models


### ELITEPOB-600-2-0219-D

- Twin 68L pull-out – 2 x 34L
- Suits standard 600mm wide cabinet (external)
- Includes optional door mount kit to attach frame to cabinet door
- 25kg weight limit


### ELITEPOB-600-3-0499-D

- Triple 68L pull-out – 1 x 34L + 2 x 17L
- Suits standard 600mm wide cabinet (external)
- Includes optional door mount kit to attach frame to cabinet door
- 25kg weight limit

## Dimensions

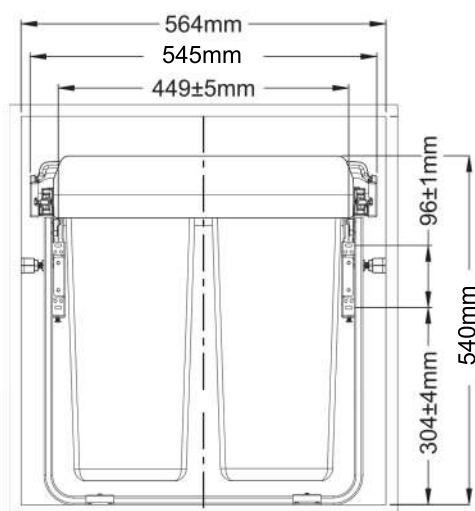

Unit Dimensions

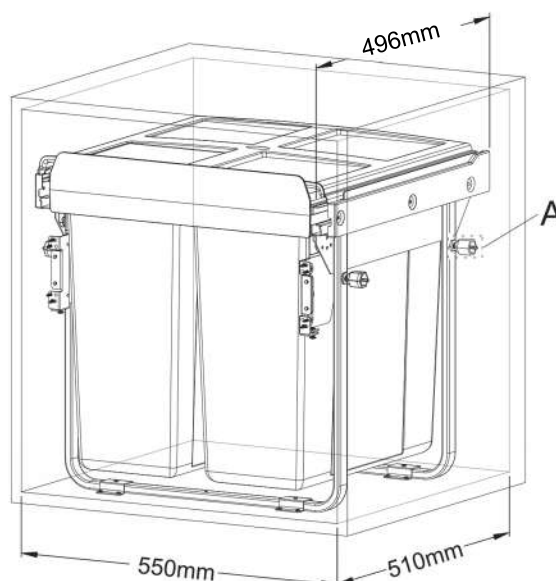


Minimum Cabinet Interior  
Dimension Requirements

# Domestique 68L Twin/Triple Slide Out Concealed Waste Bin - 600mm Cupboard

**ELITE®**  
STORAGE SOLUTIONS

## STEP 1: Mount frame to cabinet base

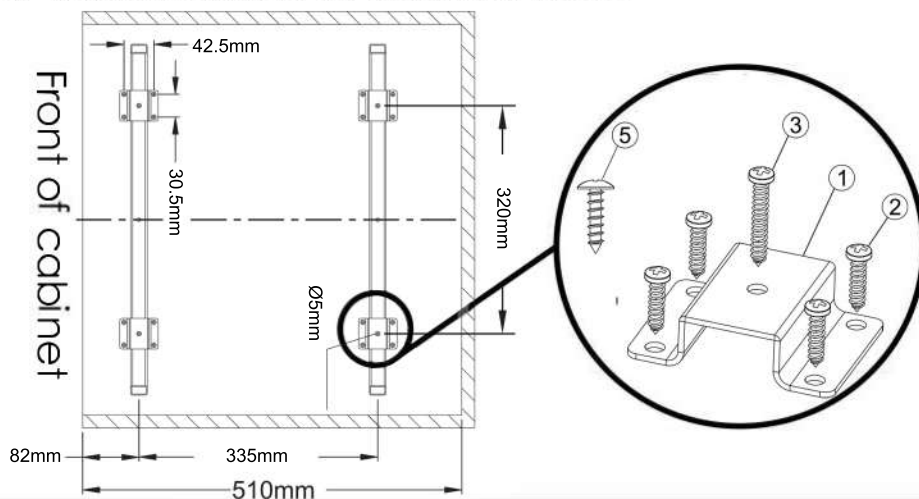



Position frame on cabinet floor (see diagram)

Affix saddles (1) to frame using screws (2) and screws (3) – (see diagram)



## STEP 2: Affixing side stabilisers (optional)

NOTE: It is recommended to install the stabilisers to enhance the stability of the installed product

Adjust the stabiliser width to suit cabinet width.

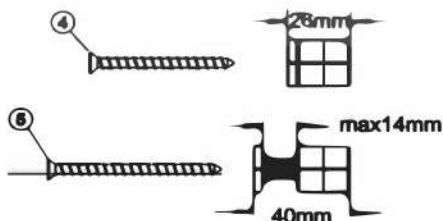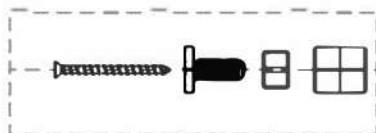

Attach stabiliser to frame using part 4 or part 5 screw to suit cabinet

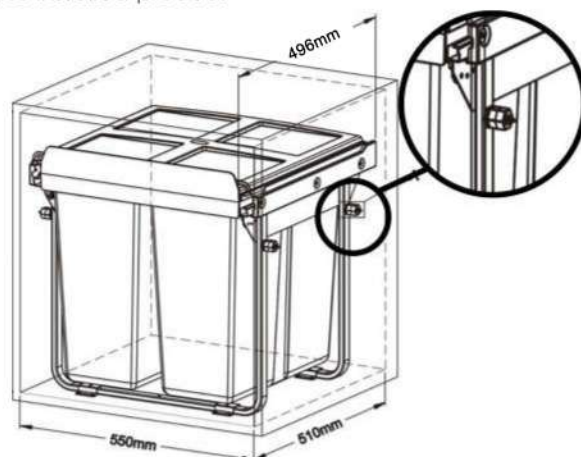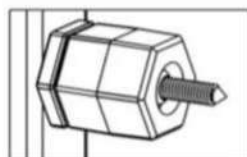

## STEP 3: Affixing door (optional)

Mounting the cabinet door to the frame allows the bin to slide out when the cabinet door is pulled out. The optional door mount kit is included in the box (if you purchased the door mount version).

1. Lift the locking levers and remove the front part of the runner
2. Put the cabinet door on a flat surface, front facing down. Place the front part of the runner with the door connector on the top of the door
3. Measure and make sure the door will be aligned with the cabinet before drilling the hole and screw the door connector onto the door.
4. Put the front part of the runner (with the door attached) back to the frame, push it back into the runner until it clicks.
5. Align the door to the cabinet using the adjustment screws.

