 


# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

 
2.0 HR

APPROXIMATE ASSEMBLY TIME

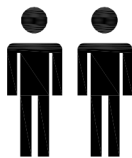

2 PERSON  
ASSEMBLY

FLOOR AREA  
2.5M X 2.0M

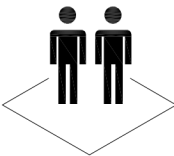


REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



 
POZI SCREWDRIVER




HAMMER

 

MEASURING TAPE

 

DRILL

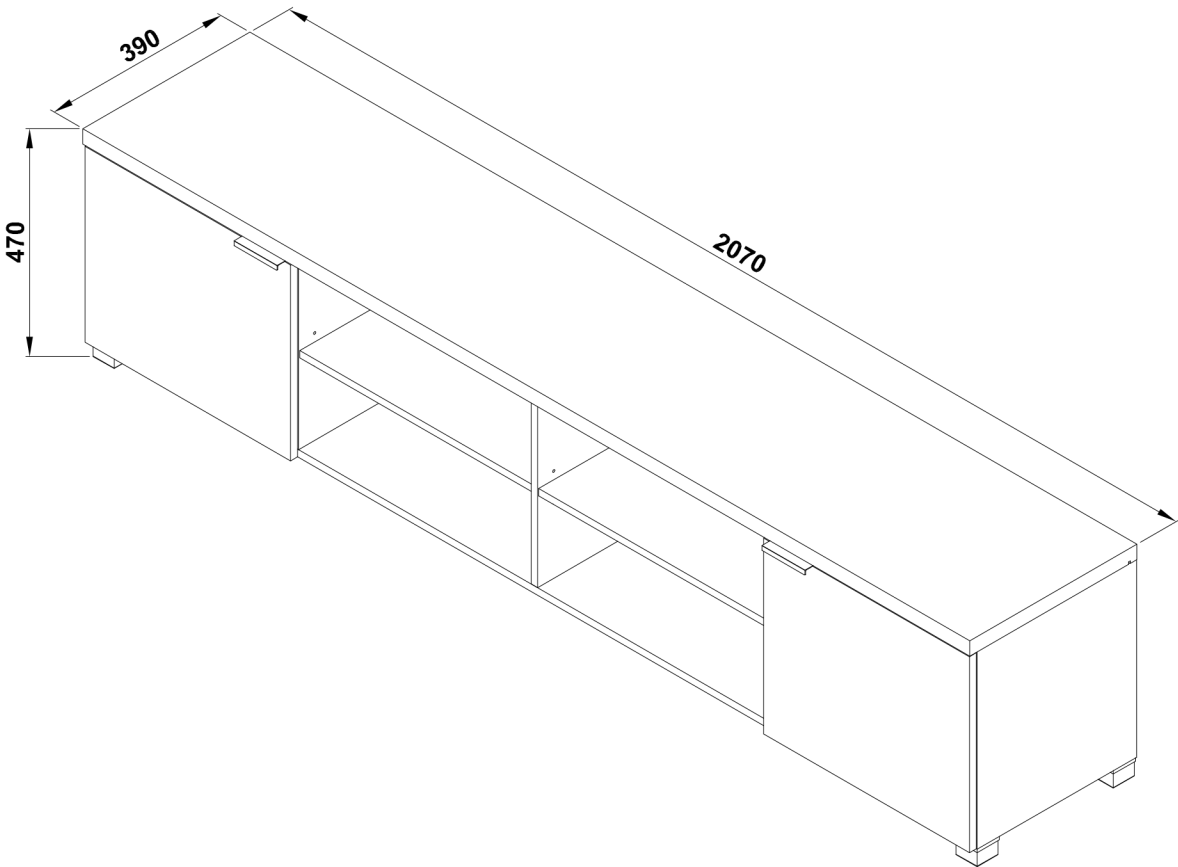 

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## **Tips before you start:**

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people ( as indicated on page 1 ) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

## **Care and Maintenance of your Furniture**


- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot item ( e.g. hot drinks ) directly on to the wood surface.
- ☒ Please do not drag or pull your furniture.

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## Tips before you start:

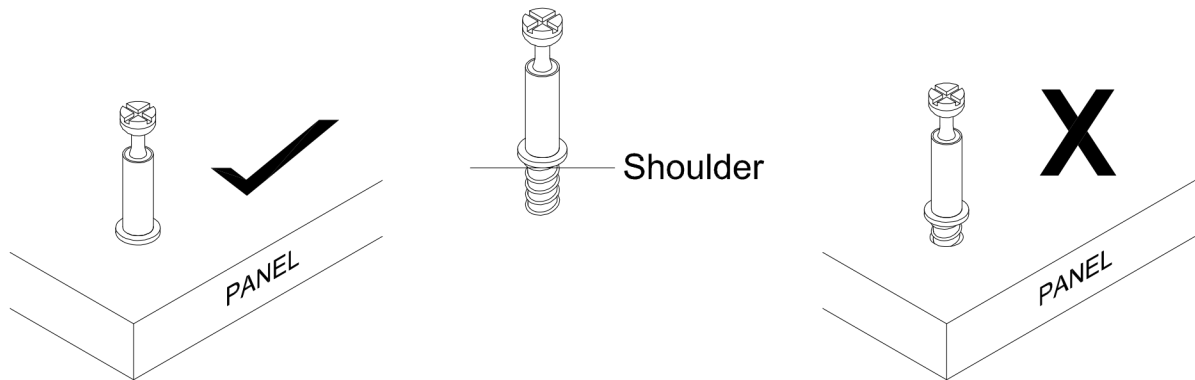

 
Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

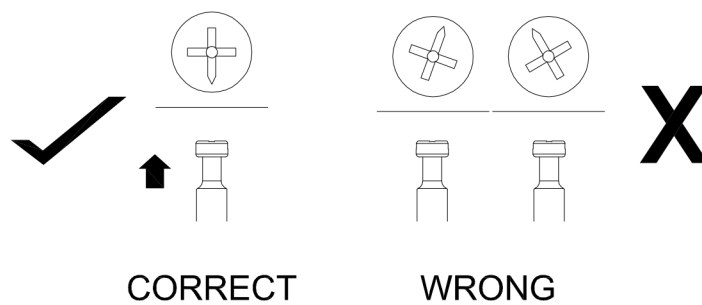

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

 
Cam lock should be inserted before quickfit.

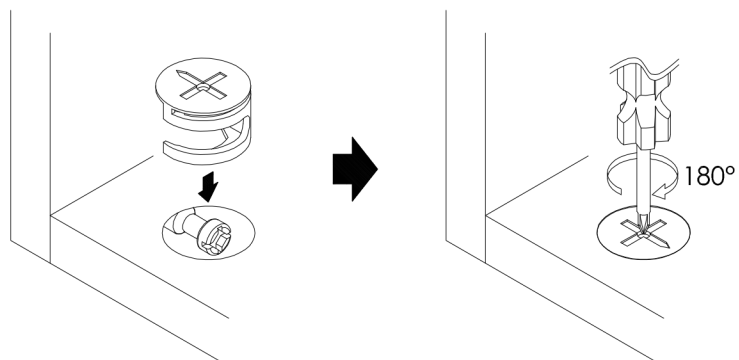

Turn camlock clockwise to tighten.

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

 PART LIST:

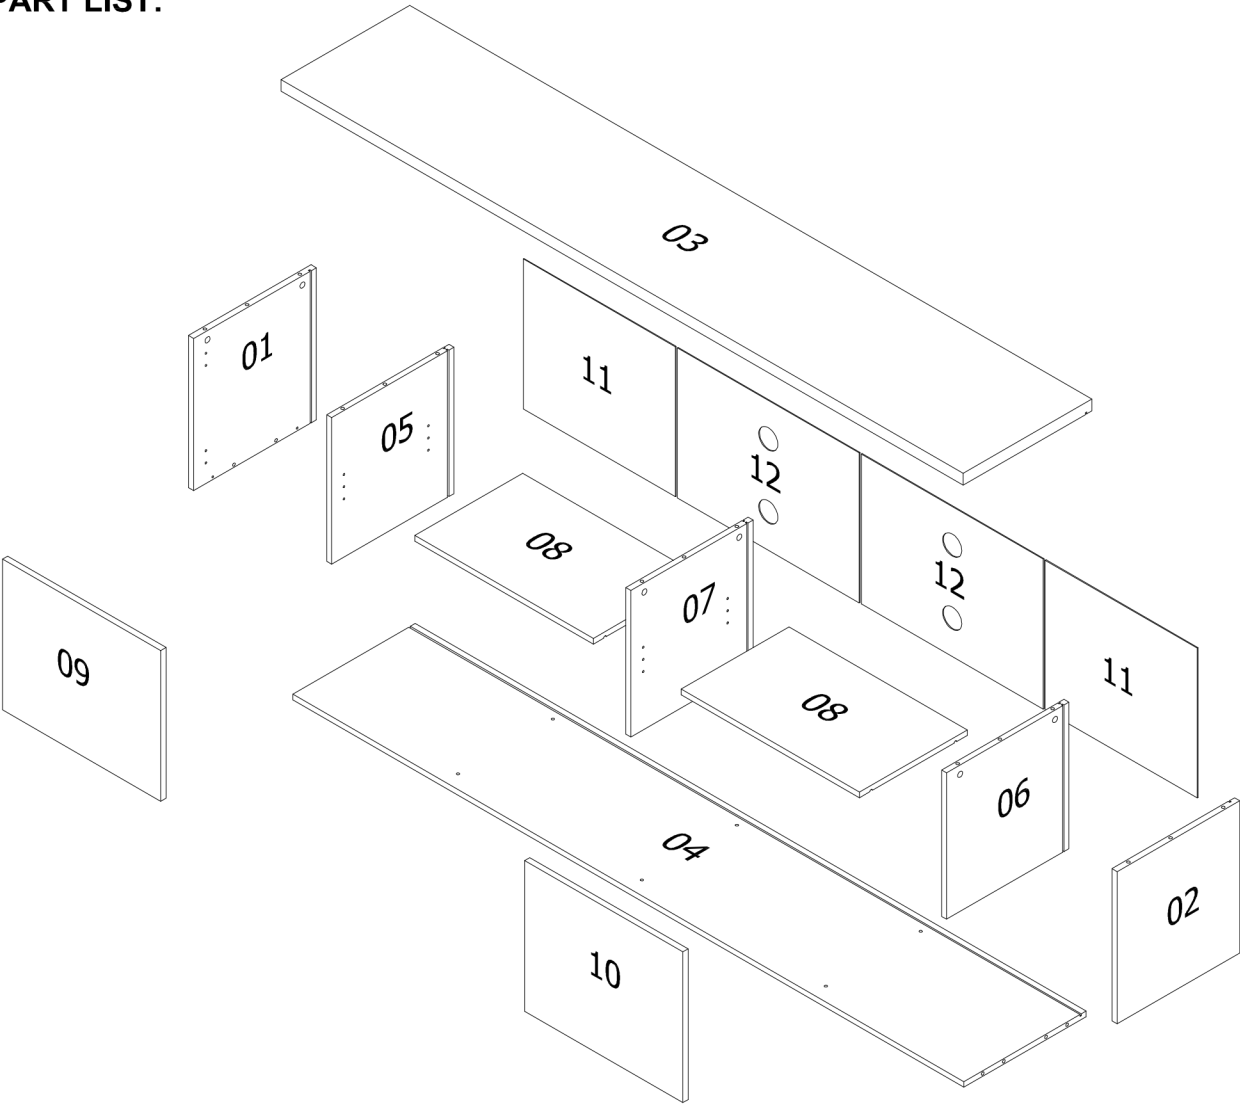 


 
 
 
 


 

 
 
 


NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1	7	DIVIDER PANEL (CENTER)	1
2	SIDE PANEL (RIGHT)	1	8	SHELF PANEL	2
3	TOP PANEL	1	9	DOOR PANEL (LEFT)	1
4	BOTTOM PANEL	1	10	DOOR PANEL (RIGHT)	1
5	DIVIDER PANEL (LEFT)	1	11	BACK PANEL (SIDE)	2
6	DIVIDER PANEL (RIGHT)	1	12	BACK PANEL (CENTER)	2



# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

 
## HARDWARE LIST

<div><div>A</div><div>X24</div><div></div><div>CSK SCREW M3.5 X 15MM</div></div>	<div><div>B</div><div>X8</div><div></div><div>EURO SCREW M6 X 13MM</div></div>	<div><div>C</div><div>X6</div><div></div><div>JCBC(W) SCREW M6 X 40MM</div></div>	<div><div>D</div><div>X9</div><div></div><div>WOOD DOWEL Ø8 X 25MM</div></div>
<div><div>E</div><div>X14</div><div></div><div>9047975 BOLT DOWEL DU319 20X5MM</div></div>	<div><div>F</div><div>X14</div><div></div><div>9064684 CAM 15/15</div></div>	<div><div>G</div><div>X4</div><div></div><div>METAL CONCEALED HINGES (5/8") W/SPRING</div></div>	<div><div>G2</div><div>X4</div><div></div><div>HINGES PLATE</div></div>
<div><div>H</div><div>X2</div><div></div><div>ALUMINIUM U SHAPE HANDLE (100 X 64MM)=(1PC) WITH SCREW (M3.5 X 15MM)=(2PC)</div></div>	<div><div>J</div><div>X7</div><div></div><div>PLASTIC SQUARE (H39MM)=1PC WITH SCREW (M3.5 X 15MM)=4PCS</div></div>	<div><div>K</div><div>X8</div><div></div><div>METAL ADJUSTABLE SHELF STUD</div></div>	<div><div>L</div><div>X1</div><div></div><div>ALLEN KEY M4</div></div>
<div><div>M</div><div>X16</div><div></div><div>BACKPLY STOPPER</div></div>	<div><div>N</div><div>X1</div><div></div><div>GLUE</div></div>		

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT


## STEP 1

Using glue (N) insert dowel (D) into pieces (1 , 2 , 4 , 5 , 6 & 7) as shown.

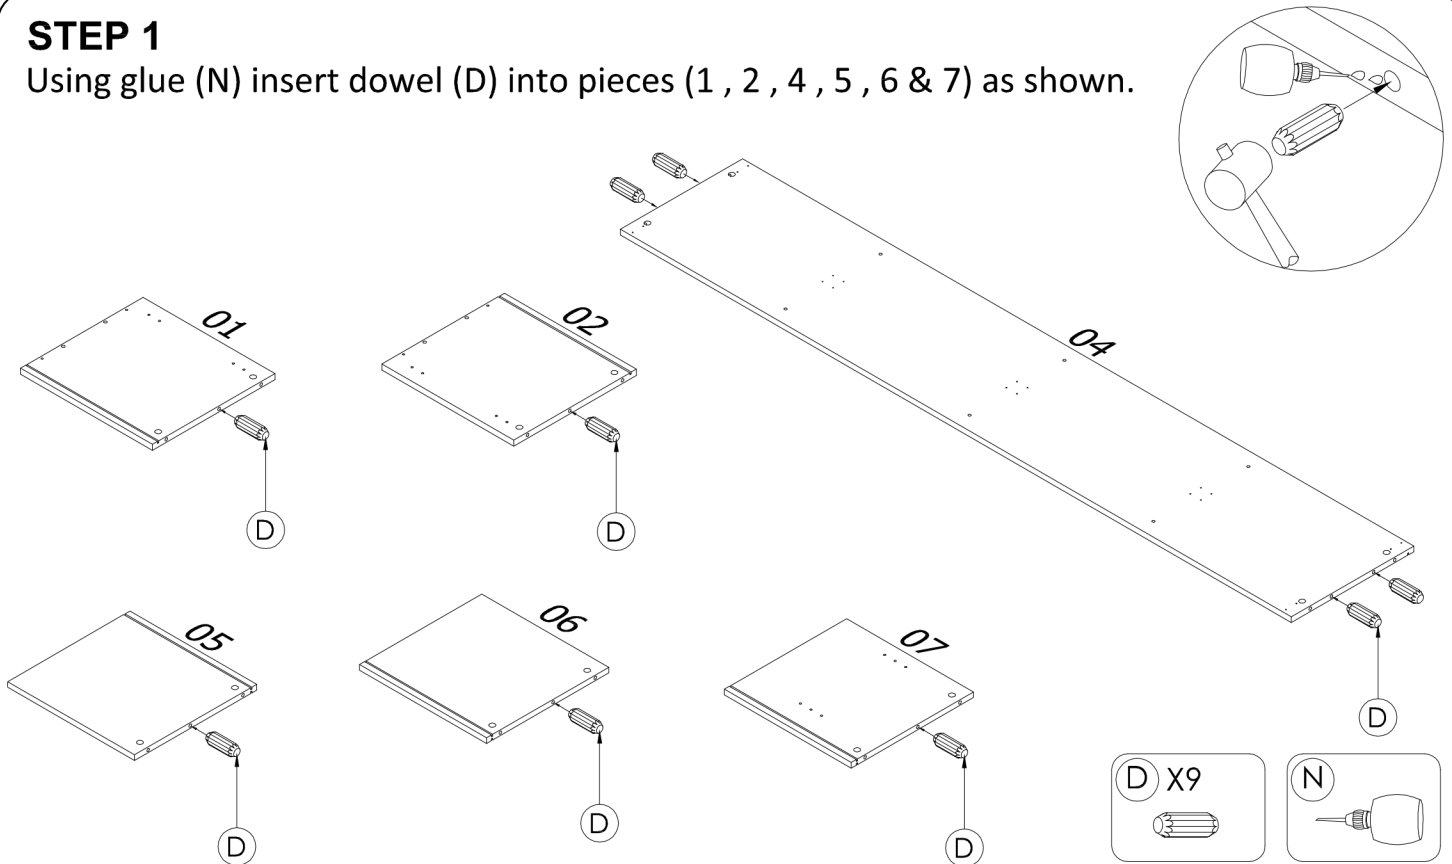

## STEP 2




 
Take all panels (1 , 2 & 3), using a drill on low speed / torque or a phillips head screw driver cam pins (E) as shown.

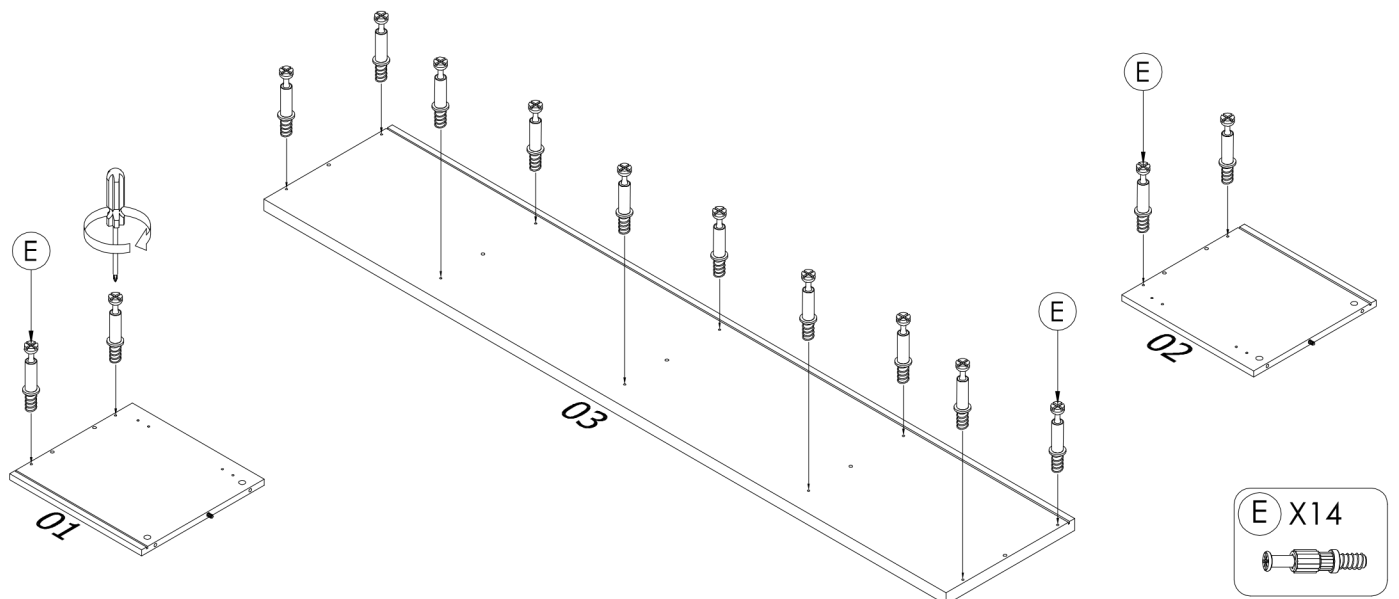

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT





## STEP 3

    Affix the hinges plate (G2) with screw (B) and to side panel (1 & 2) as shown.

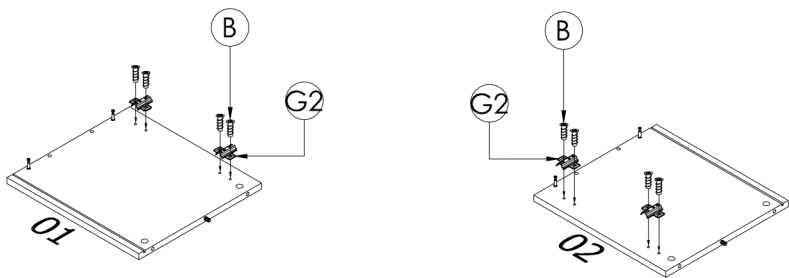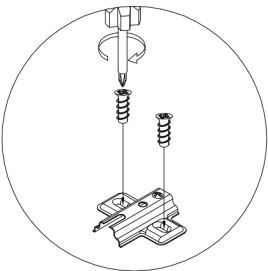

## STEP 4

 
 
 
 
Attach bottom panel (4) to divider panel (5 , 6 & 7) using 40mm as shown.

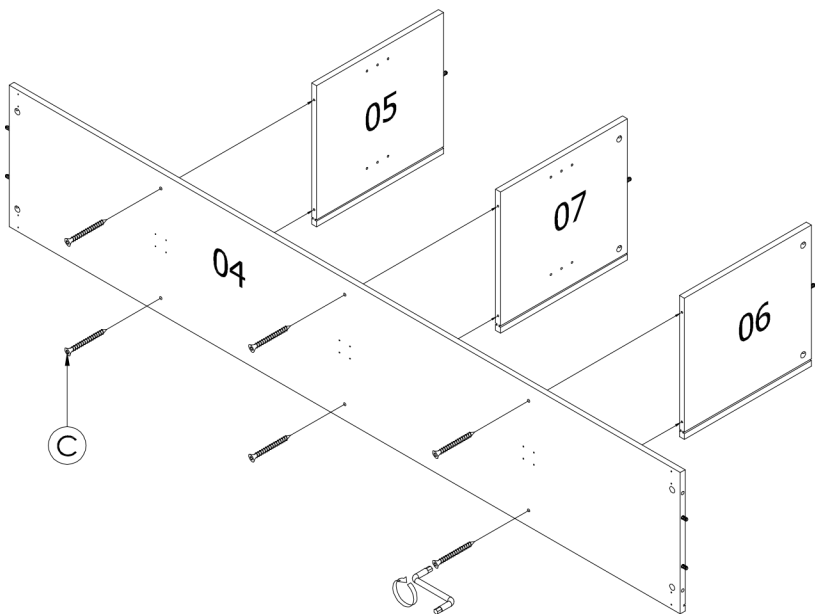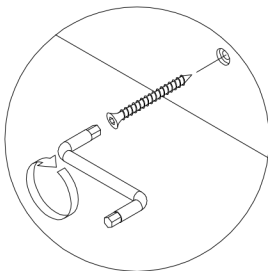

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## STEP 5

    Attach panels (1 & 2) to panel (4) using glue (N) with cam lock (F) as shown.

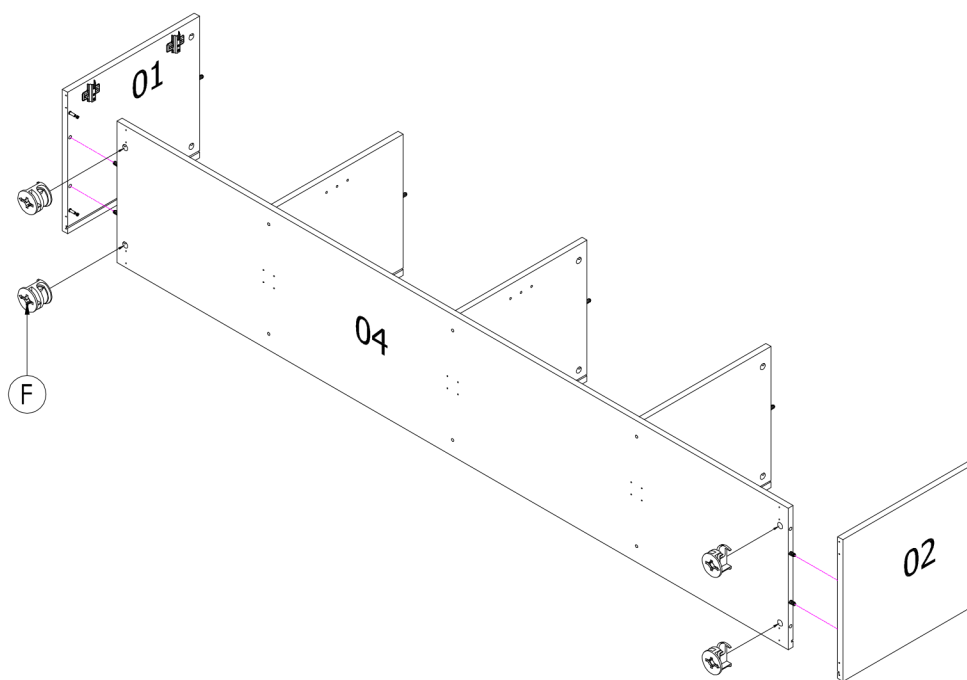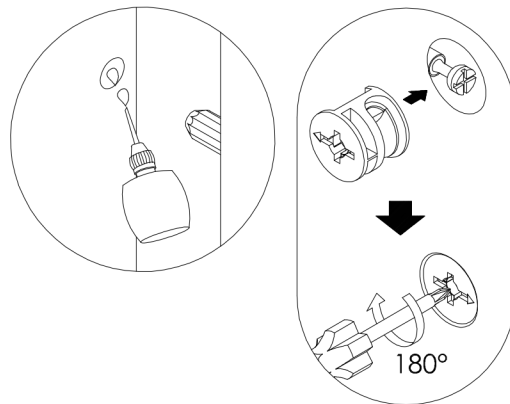


# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT


## STEP 6

Attach plastic square leg (J) to bottom of chest as shown.



 
STEP 1

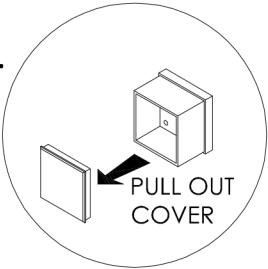

 STEP 2

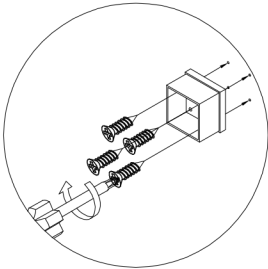

   
STEP 3

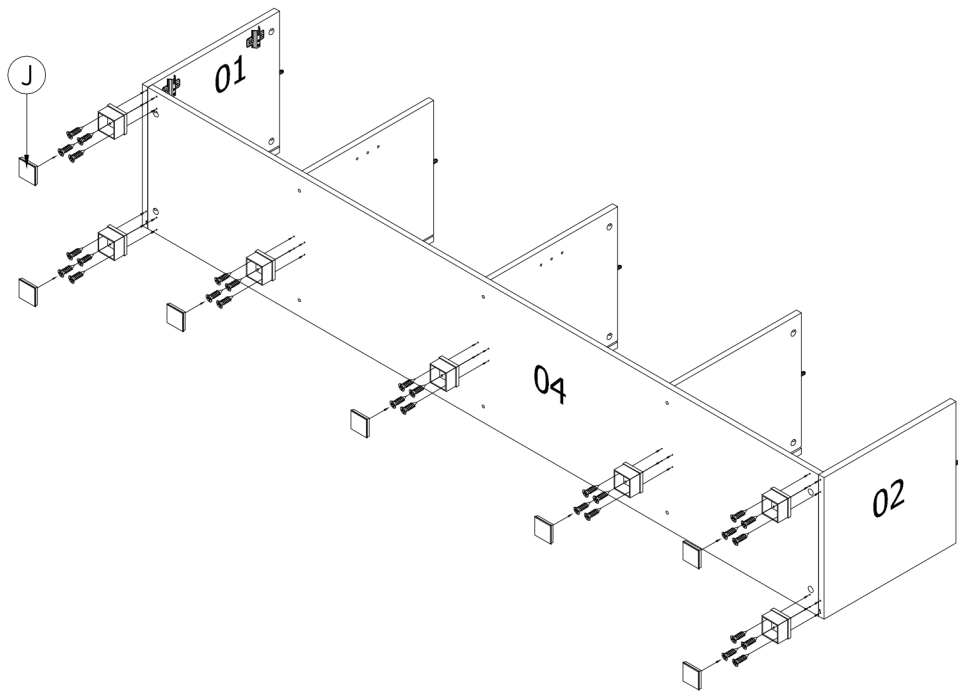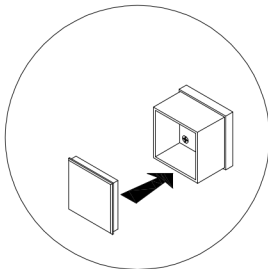

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## STEP 7



 
Slot panels (11 & 12) to frame.

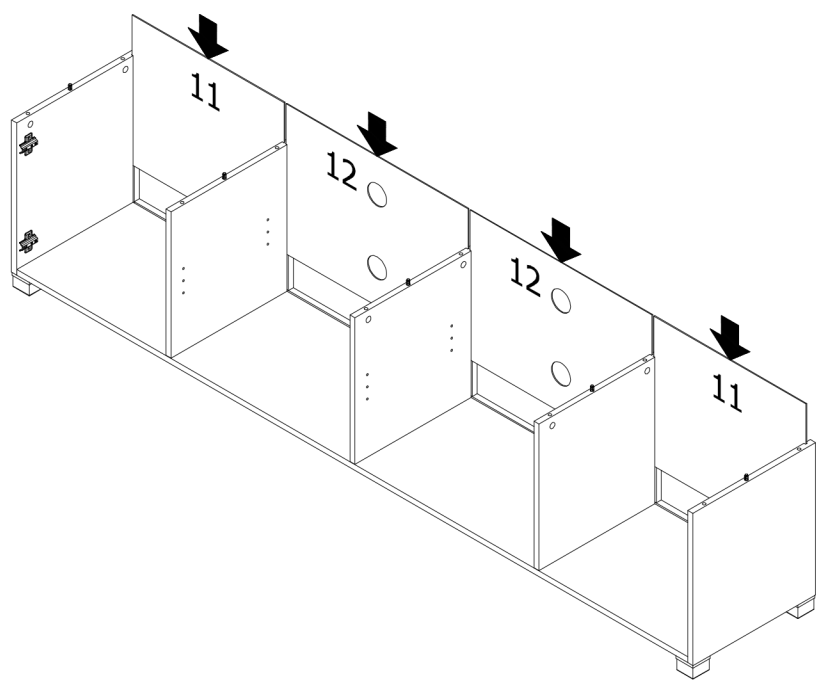

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## STEP 8

  
 
Using glue (N) attach top panel (3) to frame.  
Fasten into place using cam locks (F) as shown.

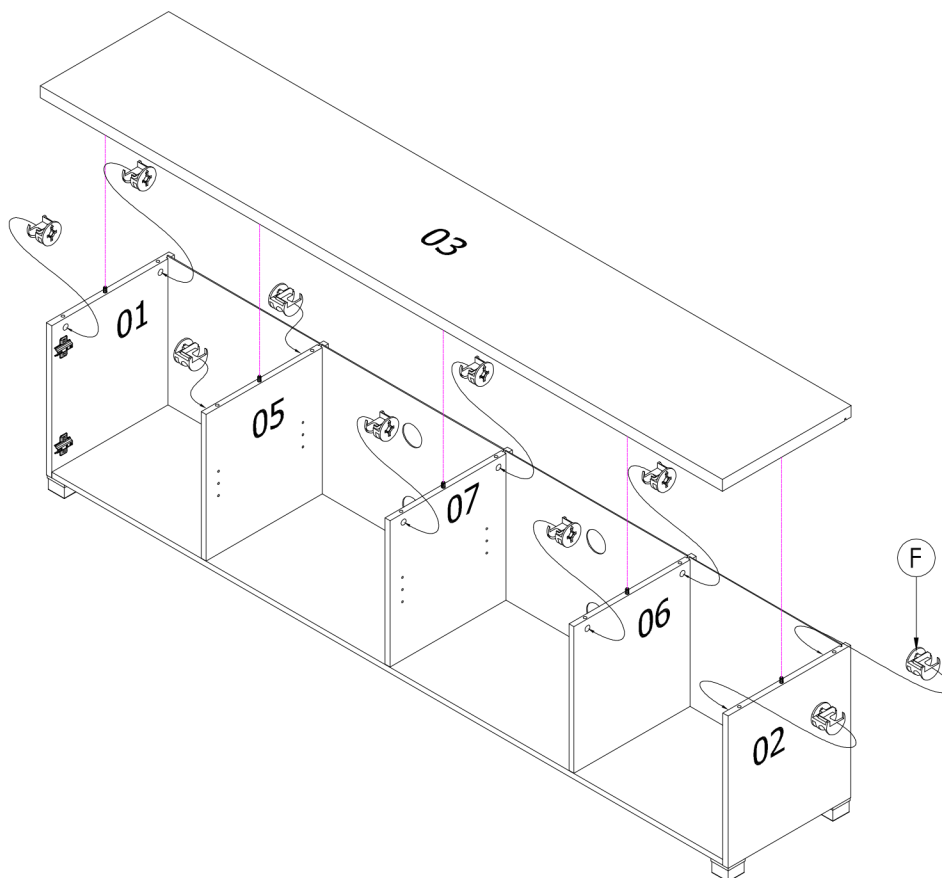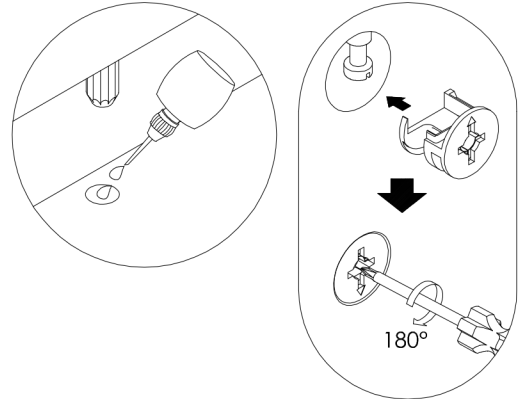

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## STEP 9

  Insert the metal adjustable shelf stud (K) to panel (5, 6 & 7), then slot the shelf panel (8) into the body as shown.


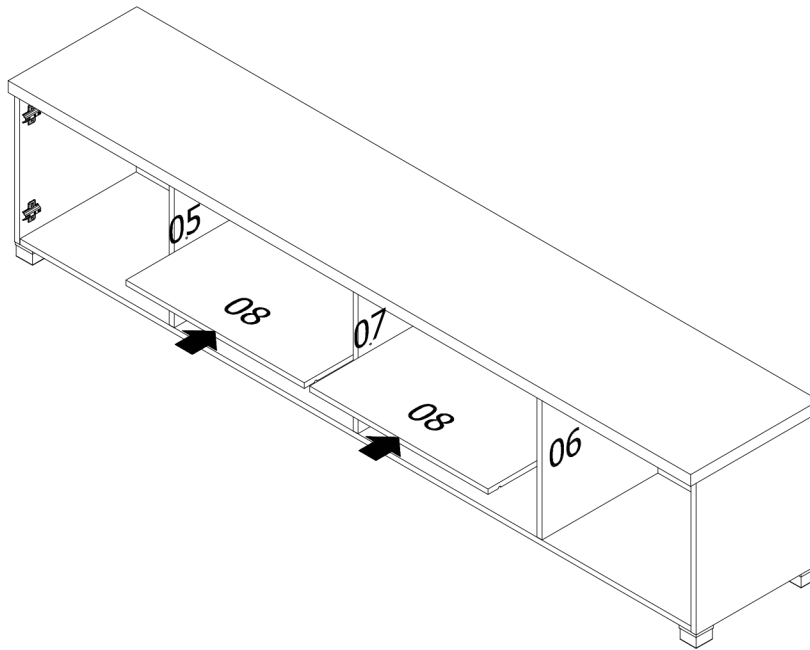
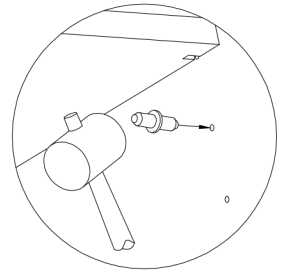


K X8



## STEP 10

   Affix the hinges (G1) with screw (A) and to the door panel (9 & 10) as shown.

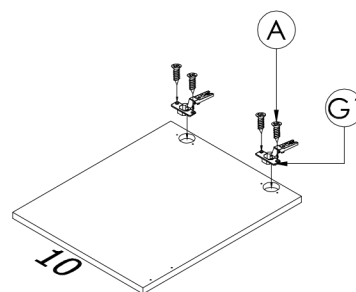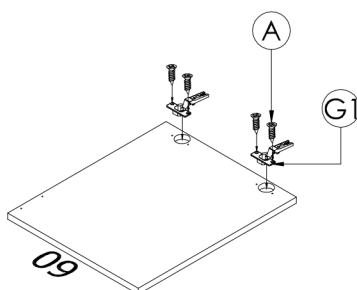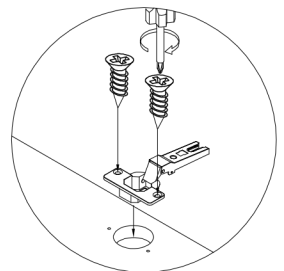

A X8



G1 X4












# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT
       
## STEP 11

Attach the handle (H) to door panel (9 & 10) as shown.



Then attach the door panel (9 & 10) to side panel (1 & 2).

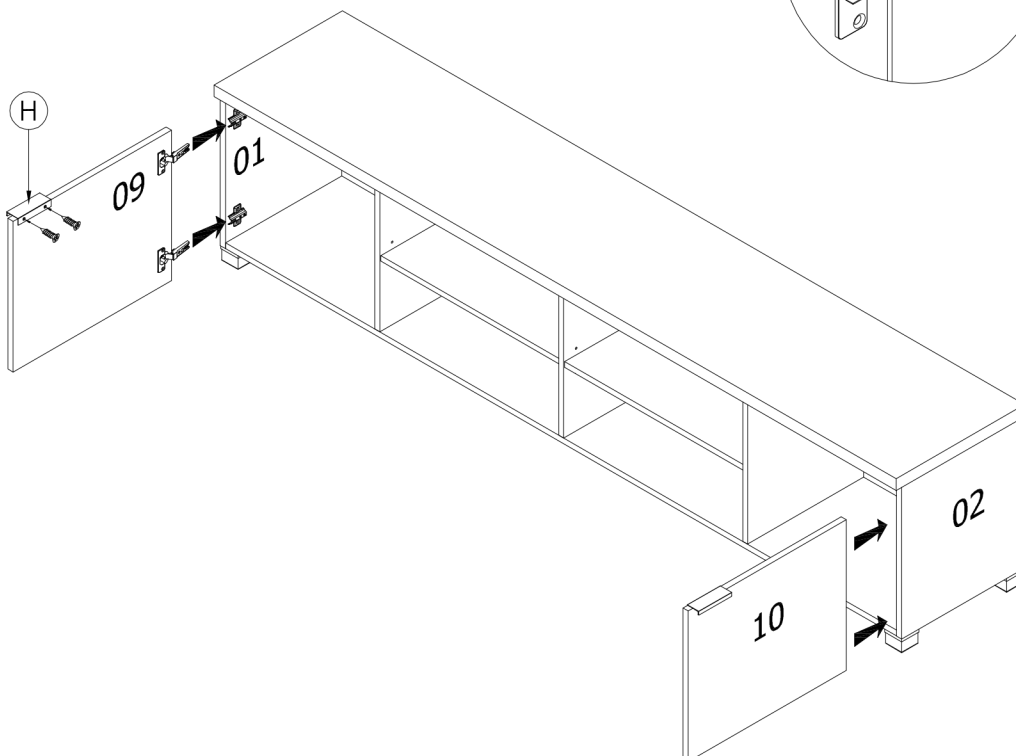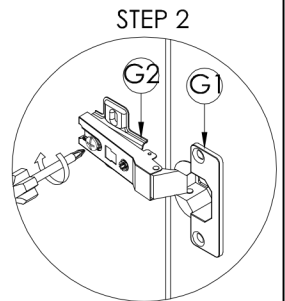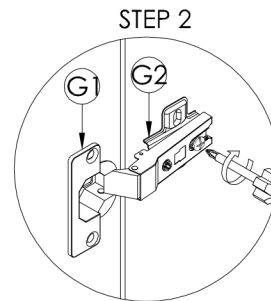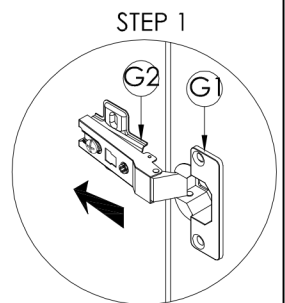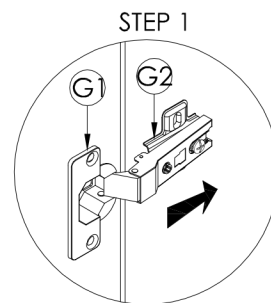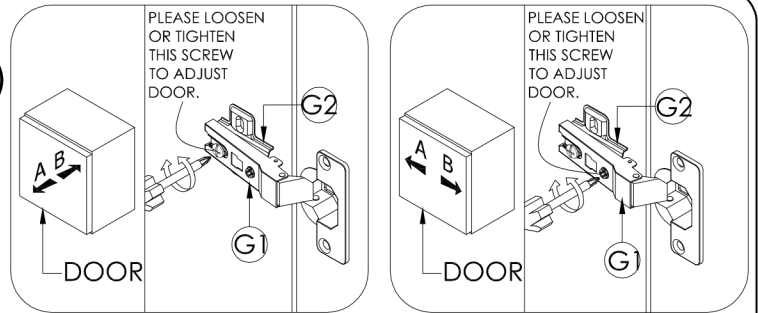

# KYANA HIGH GLOSS 4 COMPARTMENTS 2 DOOR ENTERTAINMENT UNIT

## STEP 12

  Attach the backply stoppers (M) to the back panels (11 & 12) using 15mm screw (A).

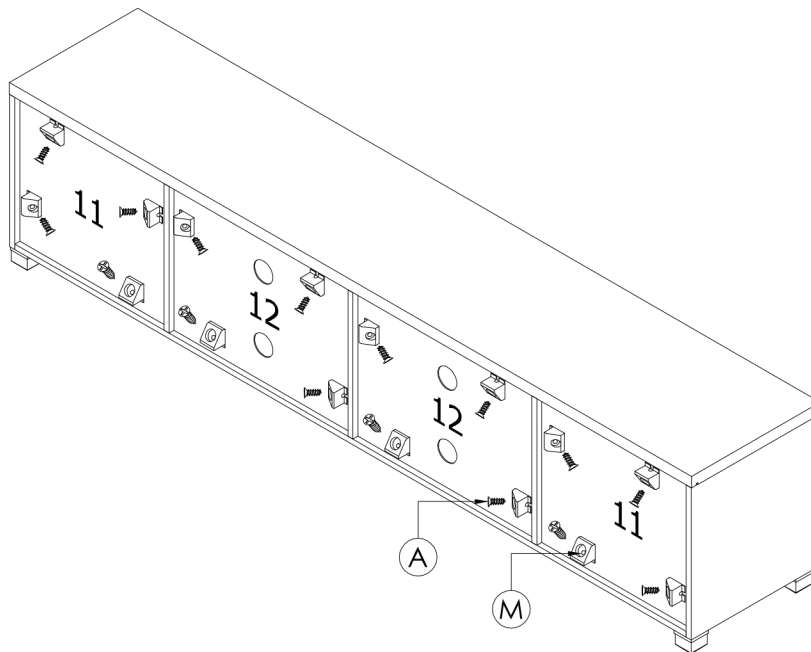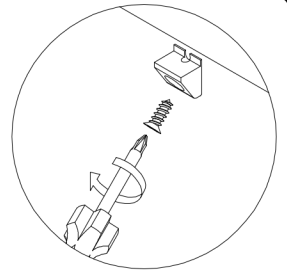

A X16



M X16



**ASSEMBLY IS COMPELETE**

