

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

 
**1.5 HR**

APPROXIMATE ASSEMBLY TIME




**2 PERSON  
ASSEMBLY**

**FLOOR AREA  
2.0M X 2.0M**

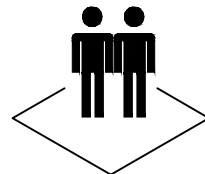


**REQUIRED ASSEMBLY SPACE**

 
## REQUIRED ASSEMBLY TOOLS



**POZI SCREWDRIVER**

 

**HAMMER**

 


**MEASURING TAPE**



**DRILL**
 
## ASSEMBLED DIMENSIONS

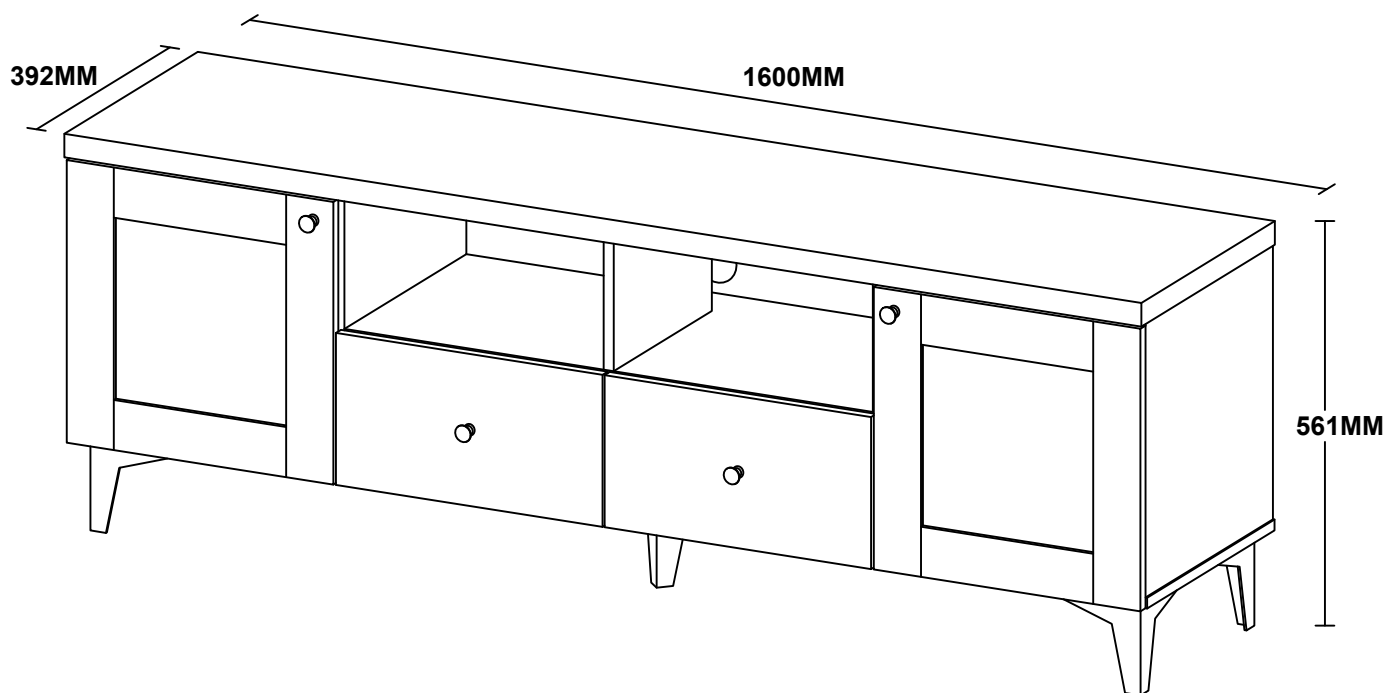

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## **Important :**

Please read these instructions carefully before use and keep for future reference.

- This product is intended for domestic use only and is not designed for commercial use.
- DO NOT assembly / use this item if any components are missing or damaged. Please contact the retailer straight away.
- DO NOT attempt to modify your item as this will void your warranty. Please call the retailer for required parts.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

**Please refer to separate Warranty Certificate for full warranty details and information.**

## **Tips before you start :**

- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## Assembly Tips:

1. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
2. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
3. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
4. During assembly please take care not to over-tighten, any fittings, as this may damage the product.
5. Always place the product on a flat, steady and stable surface.
6. Do not stand on the product. Do not use the product as a stepladder.
7. This product is intended for indoor, household use only as it is a non-industrial product.
8. Use of power tools is NOT recommended for assembling this product as over-tightening may occur and damage the product.
9. Due to the laminated finish of this item and the materials used to construct it, when first opening the carton and assembling a slight smell may be noticeable. This will dissipate over a short period of time. Please contact the retailer you purchased this item from if you have any concerns.
10. Please use caution and care when lifting the product to avoid personal injury and / or damage.

## Care and Maintenance of your Furniture

 
 
 
- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean. Never use harsh chemicals or strong detergents as this could damage the finish of your product.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot / cold items (e.g. hot drinks) directly on to the surface.
- Do not pull or drag your item. Ensure it is evenly supported and lifted while moving it.
- Avoid placing sharp objects on the surface as this may scratch the surface. It is recommended to use trivets or coasters under flowerpots, vases, cups etc to avoid damage to your item.

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201


Tips before you start :

## QUICKFIT

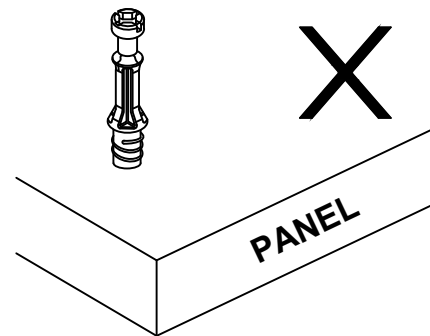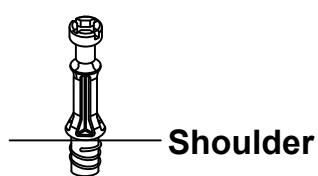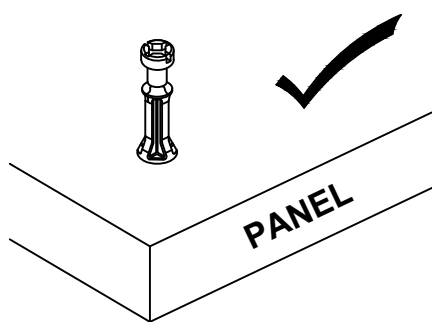

Tighten quickfit until shoulder is flush with panel . Do not overtighten or undertighten.


## CAM LOCK

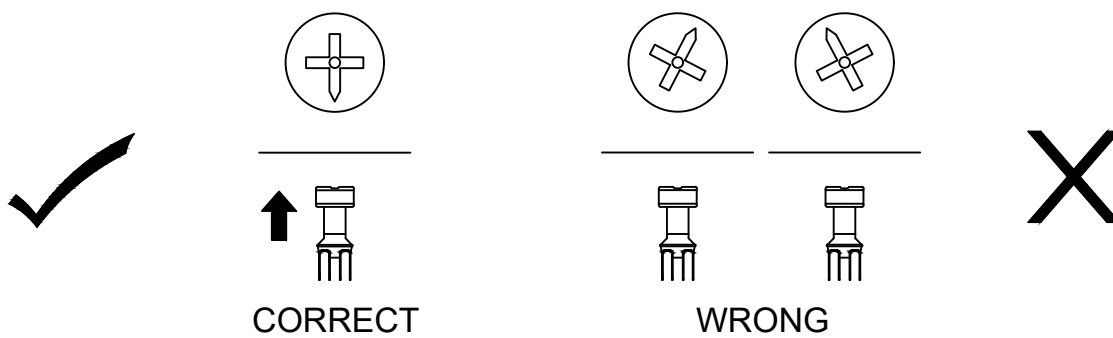 

When fitting cam lock , ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the center of the cam lock when the two panels are joined .

 Cam lock should be inserted before quickfit

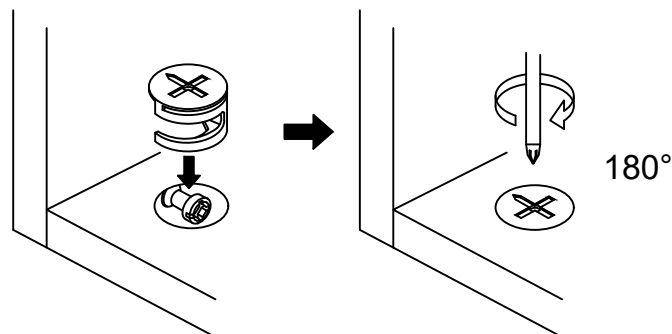



Turn cam lock clockwise to tighten.

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

  
ITEM CODE : TVS 201

## DRAWER INSTALLATION GUIDE

- Before you insert the drawers into the frame, please ensure that the ball bearing sliders (on the assembled unit) have been placed to the front of the main unit. If the bearings are in the middle of the slider it will be difficult to install the drawers correctly.

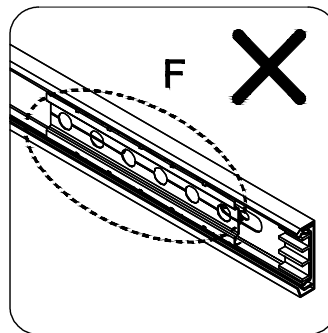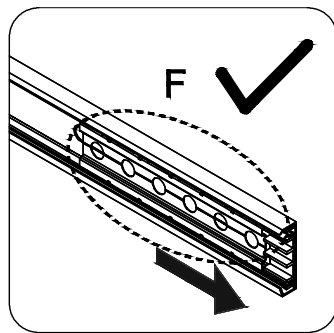

 - Insert the drawer into the assembled frame as show below. Keep each side of the drawer straight and aligned correctly to the sliders on the assembled frame.

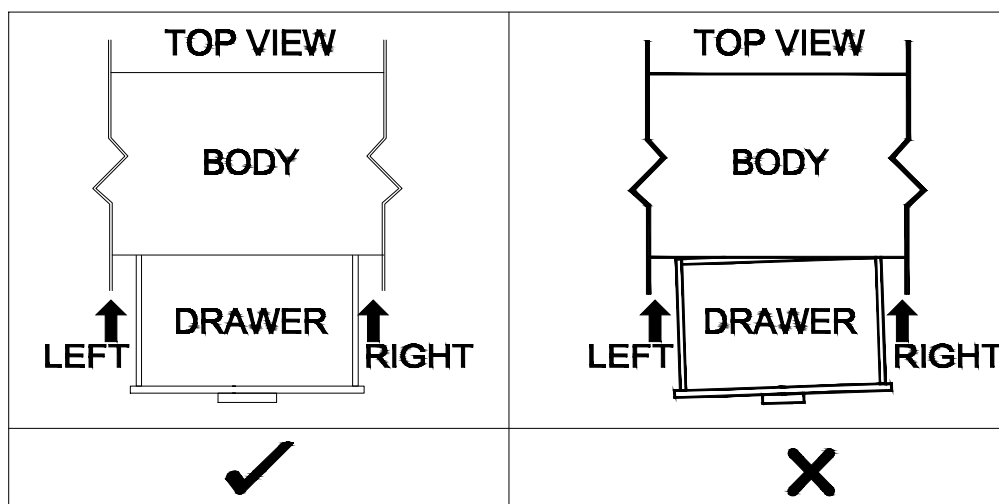


- Gently start to push the drawer into position, the drawer sliders should start to connect with the sliders on the assembled frame. Once connected apply even pressure to each side and gently push the drawer into place.
- The ball bearings should catch the drawer sliders, once they do you may find that you need to apply more pressure, this is perfectly normal as long as you are keeping the drawers straight, push the drawers 100% of the way in. Finally slide drawer in and out a few times to ensure the ball bearings are running smoothly in the slider. Installation is complete.
- At any stage throughout the install process you feel like the drawers are not evenly sliding into the assembled rame, please remove the drawers before they start to attach to the bearing slider and start the install steps again.


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

 ITEM CODE : TVS 201

## NOTE:

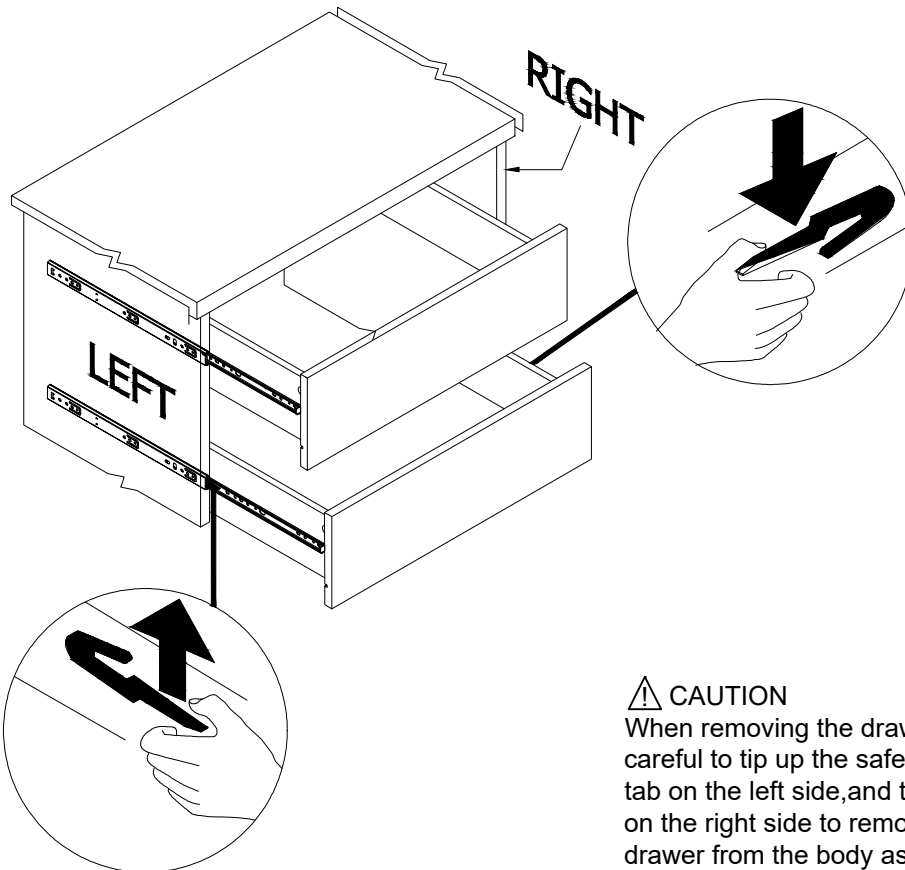

 
**⚠ CAUTION**  
When removing the drawer, be careful to tip up the safety release tab on the left side, and tip it down on the right side to remove the drawer from the body as shown.

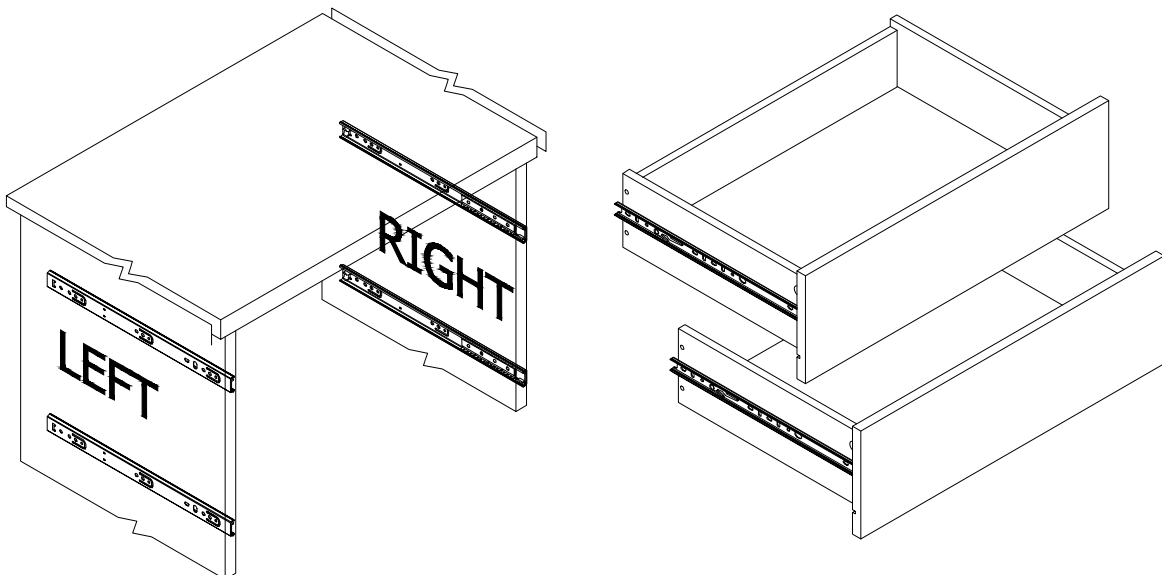

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201
 
## PART LIST:

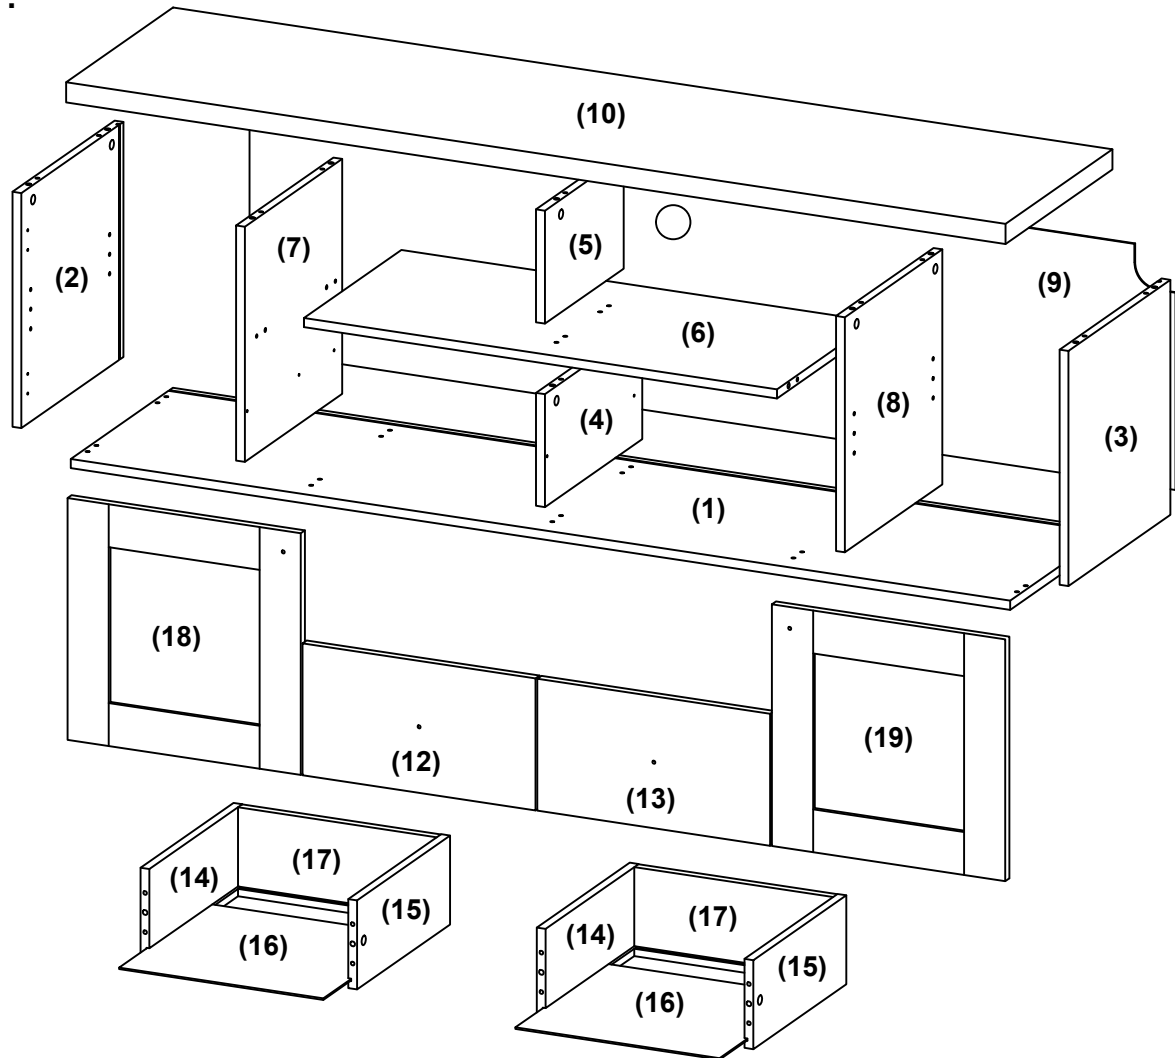








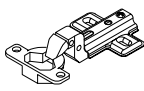
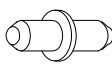

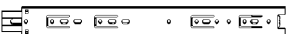
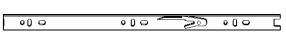
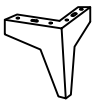

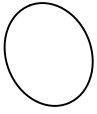
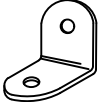


NO.	PART NAME	QTY	NO.	PART NAME	QTY
			10	TOP PANEL	1
1	BOTTOM PANEL	1	11	LAMINATE	2
2	SIDE PANEL (LEFT)	1	12	DRAWER (FRONT)	1
3	SIDE PANEL (RIGHT)	1	13	DRAWER (FRONT)	1
4	MIDDLE BOARD (BOTTOM)	1	14	DRAWER SIDE PANEL (LEFT)	2
5	MIDDLE BOARD (UP)	1	15	DRAWER SIDE PANEL (RIGHT)	2
6	HORIZONTAL PLATE (MIDDLE)	1	16	DRAWER BOTTOM PANEL	2
7	MIDDLE BOARD (LEFT)	1	17	DRAWER BACK PANEL	2
8	MIDDLE BOARD (RIGHT)	1	18	DOOR (LEFT)	1
9	BACK PANEL	1	19	DOOR (RIGHT)	1

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## HARDWARE LIST
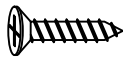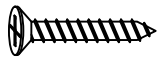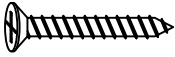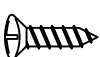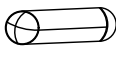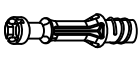
<p><b>A</b> x 24</p>  <p>C/B SCREW M3.5 x 12mm</p>	<p><b>B</b> x 18</p>  <p>C/B SCREW M3.5 x 16mm</p>	<p><b>C</b> x 10</p>  <p>C/B SCREW M3.5 x 20mm</p>	<p><b>D</b> x 8</p>  <p>C/B SCREW M4 x 38mm</p>
<p><b>E</b> x 12</p>  <p>C/B SCREW M4 x 45mm</p>	<p><b>F</b> x 20</p>  <p>SCREW M10 x 12mm</p>	<p><b>G</b> x 36</p>  <p>DOWEL Ø6 x 25mm</p>	<p><b>H</b> x 20</p>  <p>CAM BOLT</p>
<p><b>I</b> x 20</p>  <p>CAM NUT</p>	<p><b>J</b> x 4</p>  <p>HINGE (5/8") W/SPRING</p>	<p><b>K</b> x 8</p>  <p>SHELF SUPPORT</p>	<p><b>L</b> x 4 SET</p>  <p>HANDLE</p>
<p><b>M1</b> x 2 PAIR</p>  <p>14" FULL EXTENSION SLIDE</p>	<p><b>M2</b> x 2 PAIR</p>  <p>14" FULL EXTENSION SLIDE</p>	<p><b>N</b> x 5</p>  <p>LEG</p>	<p><b>O</b> x 10</p>  <p>BACK PANEL CONNECTOR</p>
<p><b>P</b> x 2</p>  <p>STICKER</p>	<p><b>Q</b> x 2</p>  <p>L-BRACKET</p>		

### Tips before you start :

- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

 
 


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## STEP 1

Insert the Dowel (G) into the designated hole as shown.

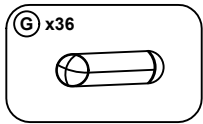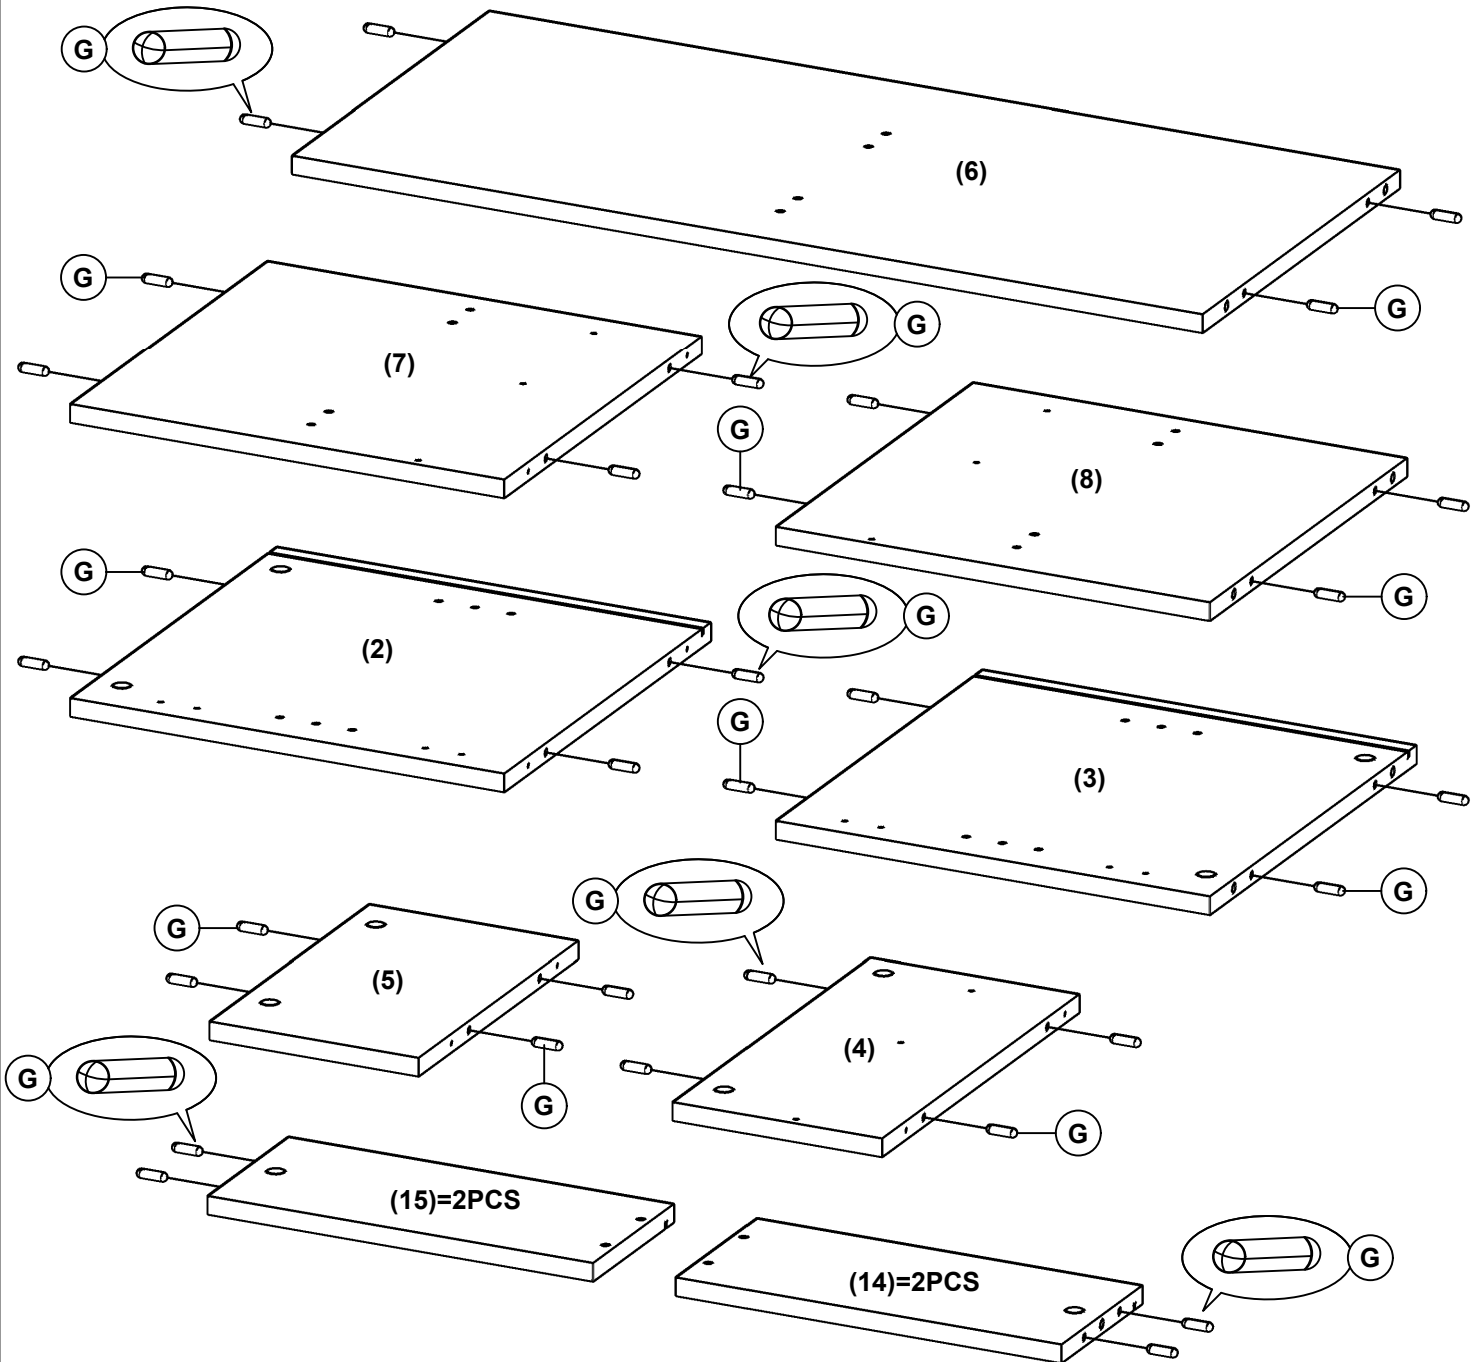


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT



## ITEM CODE : TVS 201

### STEP 2

 Pull out the (M) as in the illustration, then push the lever to reveal and remove the first component.

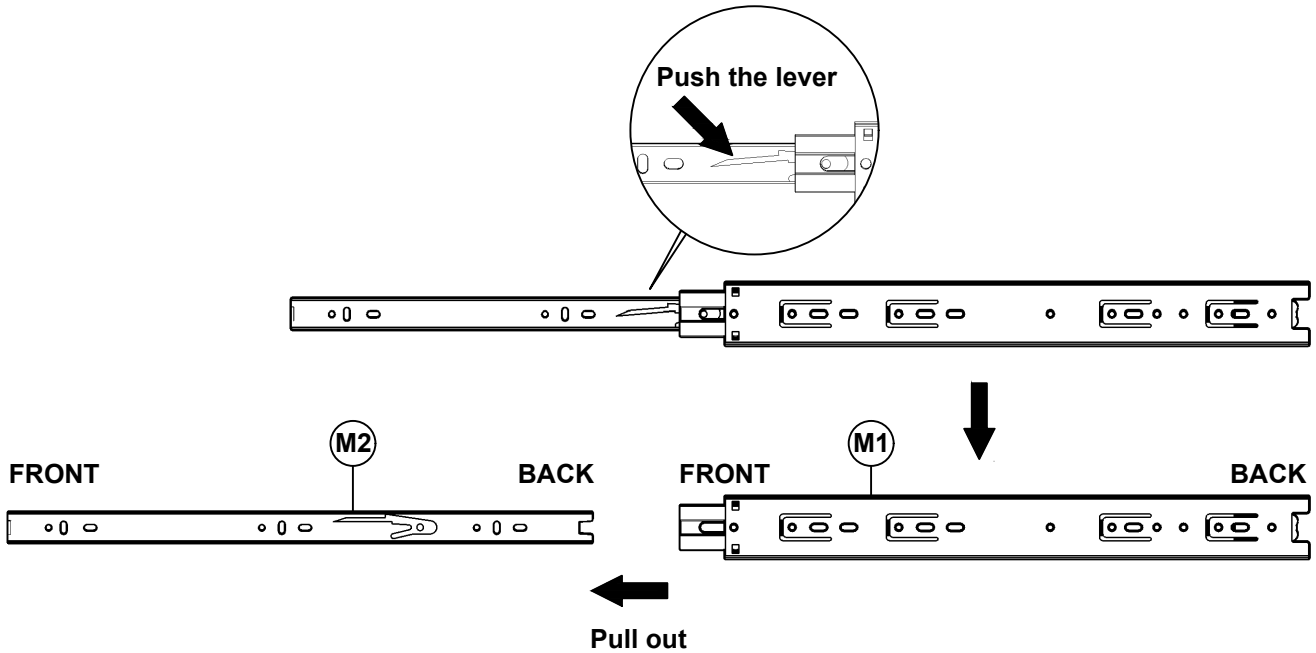

  Attach drawer glide casing (M1) to panels 7,8 using A screw as shown. Ensure the runner lines up with the holes shown on the diagram for correct placement.

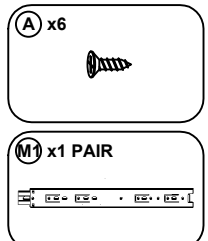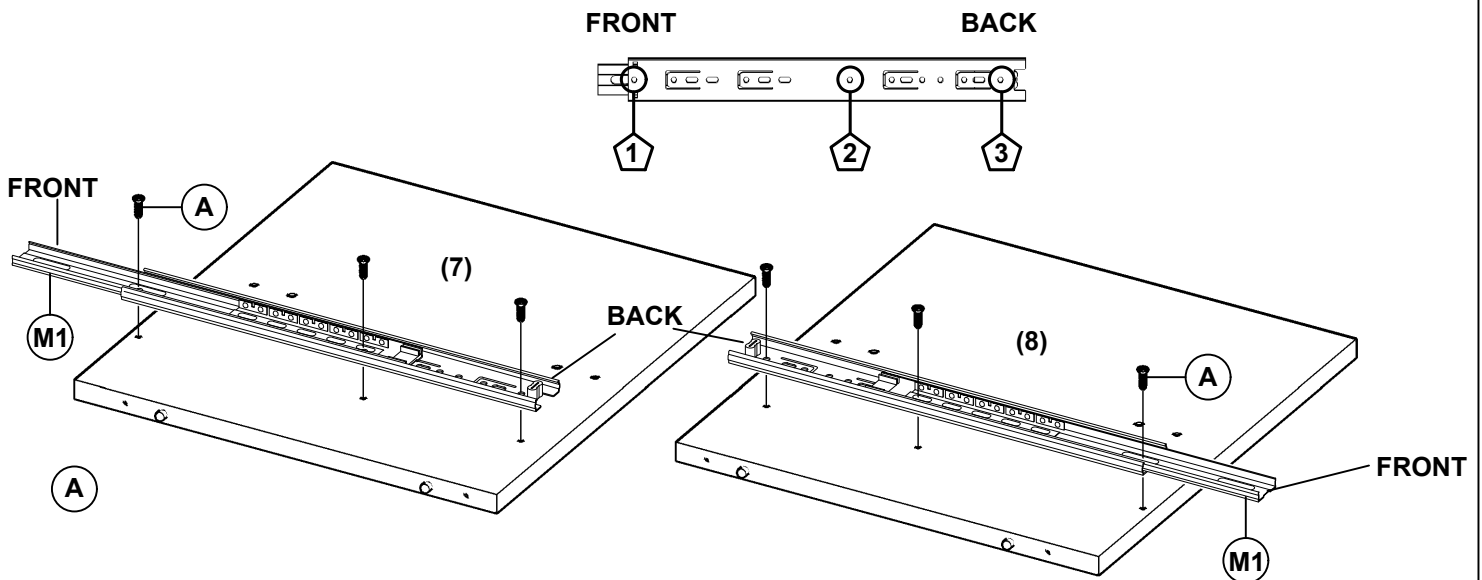


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201


## STEP 3

 Attach drawer glide casing (M1) to panels 4 using A screw as shown. Ensure the runner lines up with the holes shown on the diagram for correct placement.

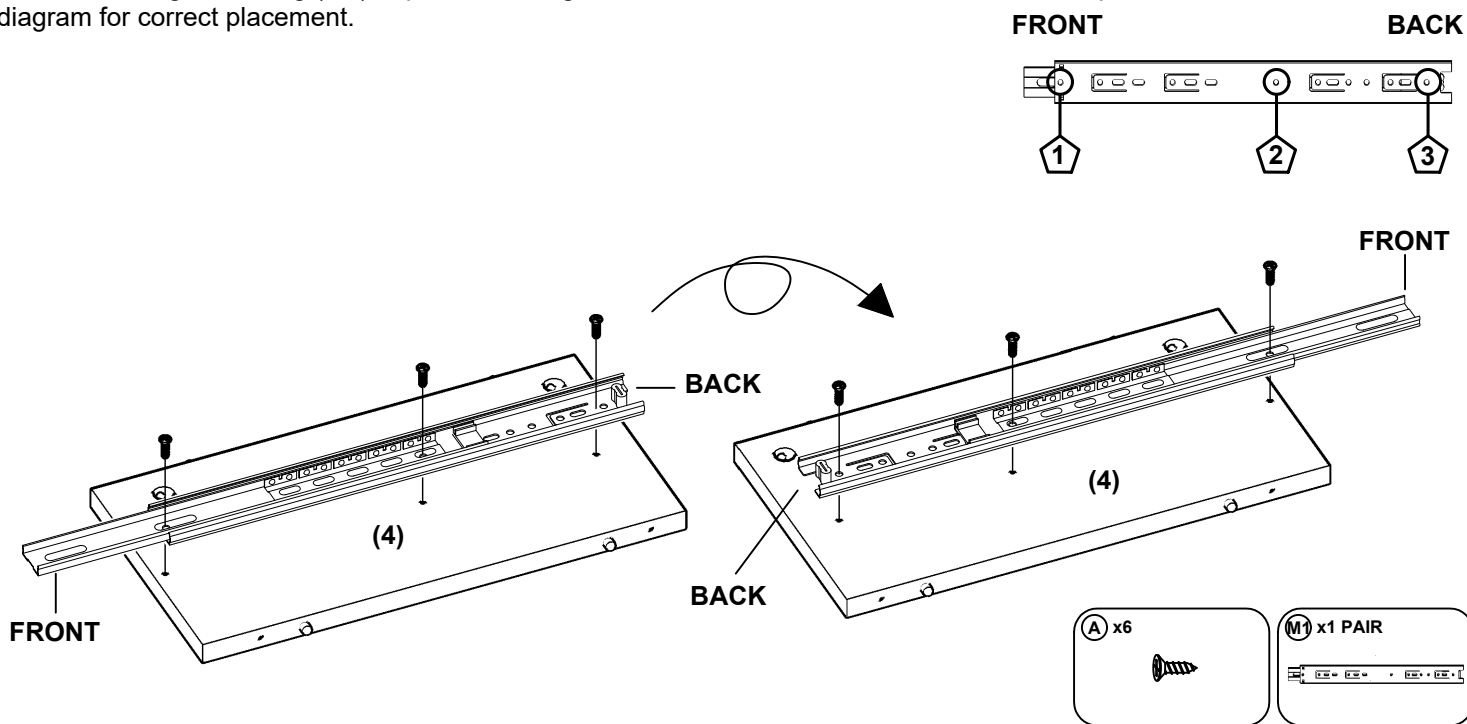

## STEP 4

 Secure hardware (H) to panels 6, 7, 8, 10, 12, 13 as shown

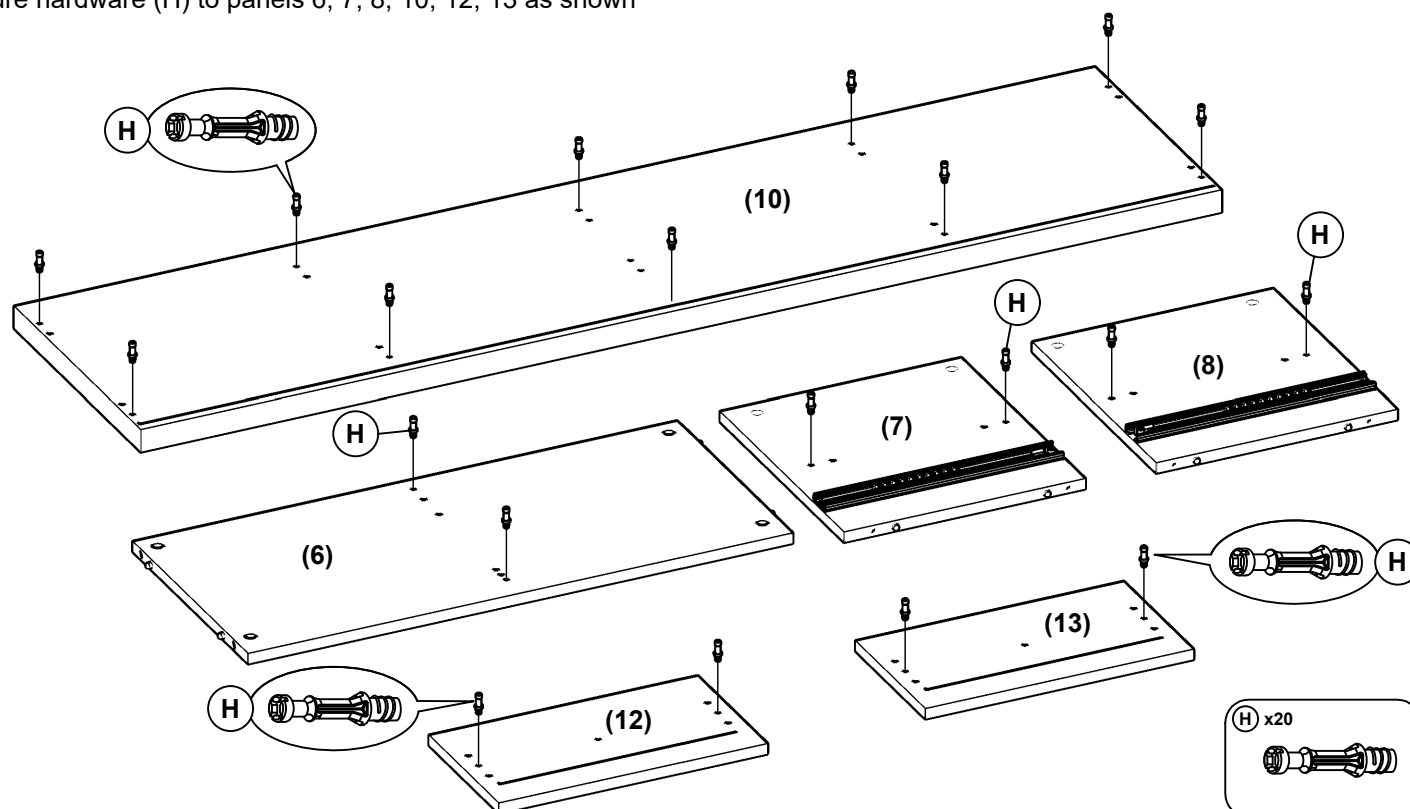


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201


## STEP 5

 Fix Hinge(J) to the designated hole of the door with screw(B) and tighten it.

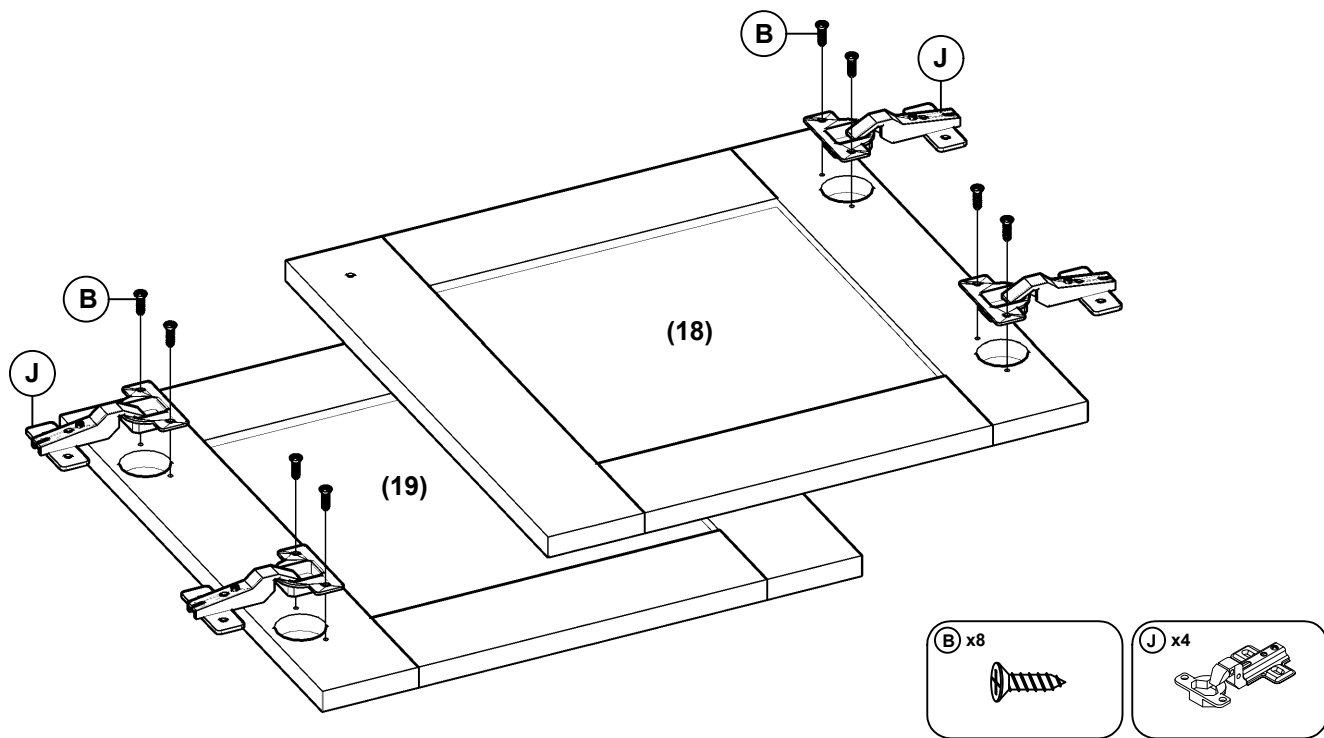

## STEP 6

As shown in the picture, the bottom of No. 1 board faces upwards. Align the LEG (N) and screw (F) with the marked holes on the base plate and tighten.

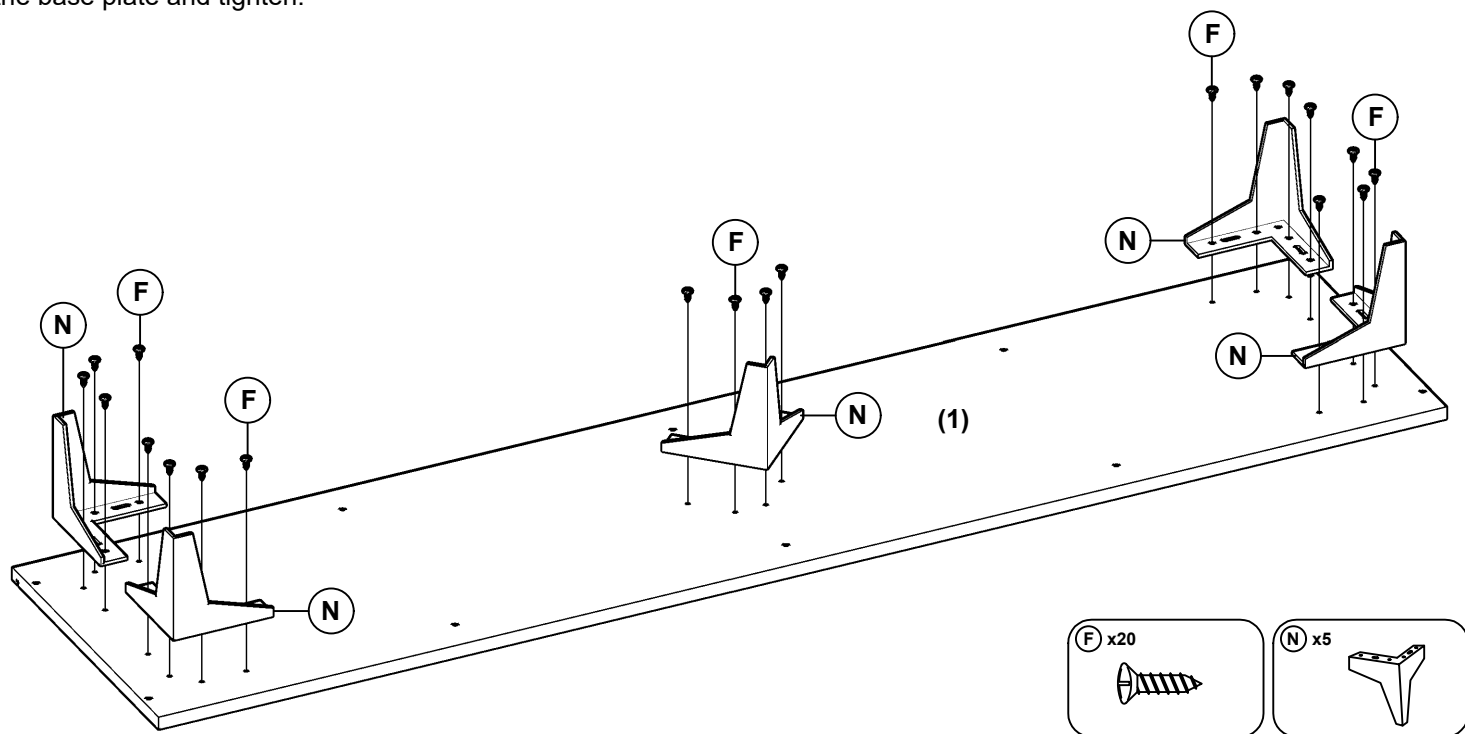 


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT


ITEM CODE : TVS 201

## STEP 7

 As shown in the picture, 14, 15, 17 panels are fixed with screws (D) and tightened.

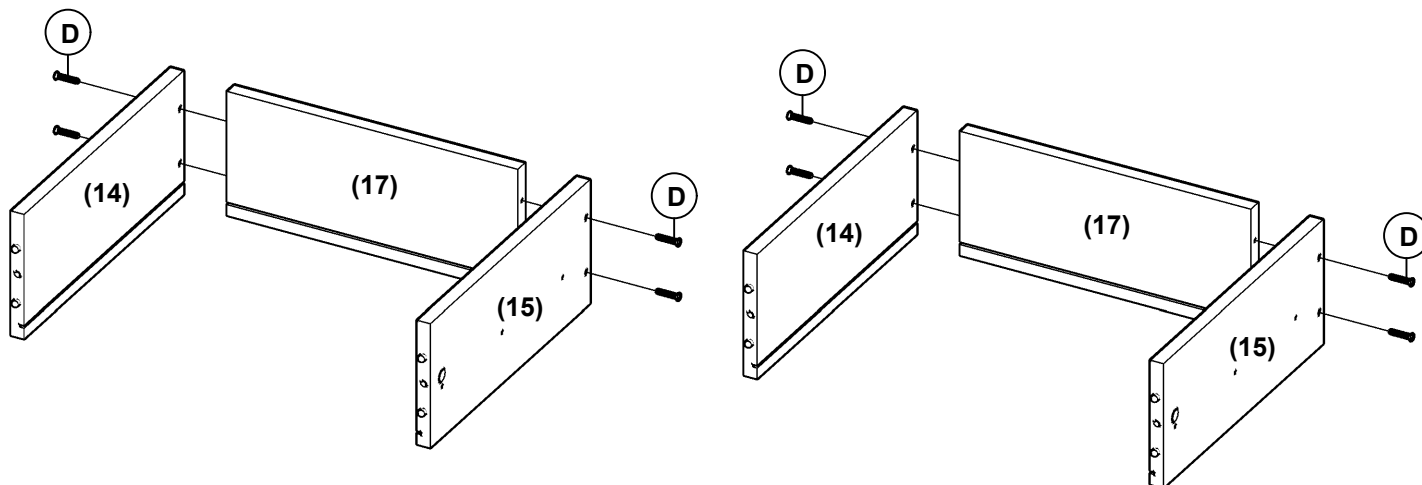


 Note: Its important not to over-tighten screws on the drawer sides until all sides are aligned and the drawer base is inserted. Always keep drawer flat in this step so the groove for the base will align correctly.

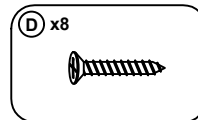

## STEP 8

 Put panel 16 into slots 14 and 15 as shown in the picture.



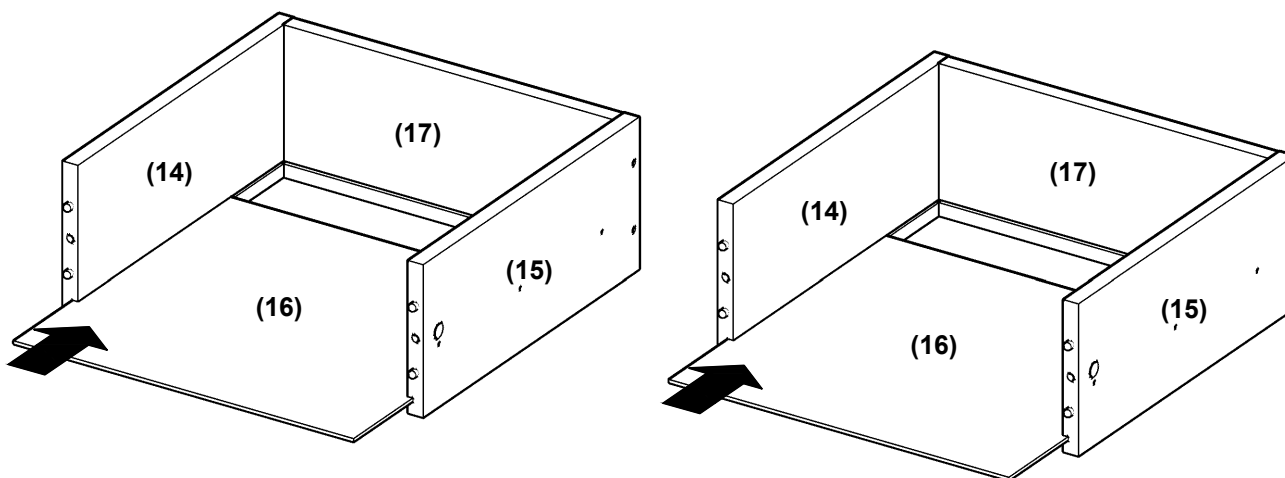


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201



## STEP 9

   As shown in the figure, align panels 12 and 13 with the designated holes on panels 14 and 15, insert and fix them, and then use the cam nut (I) to tighten them at 180° to the designated holes.

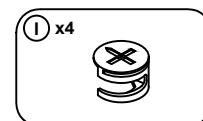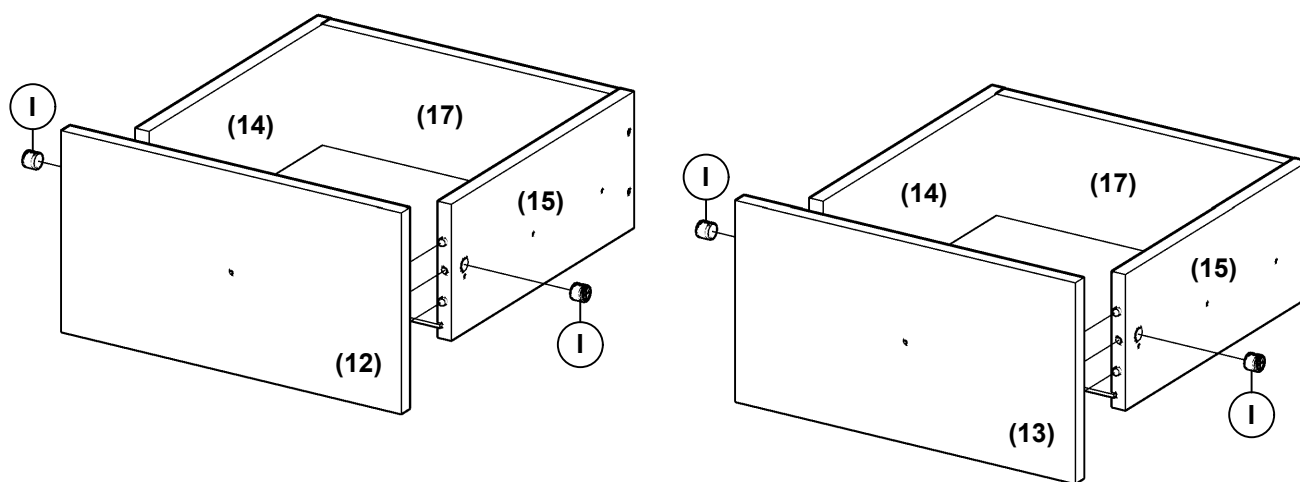

## STEP 10

  As shown in the picture, fix the HANDLE(L) on the 12&13 panel with screws.

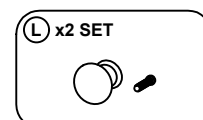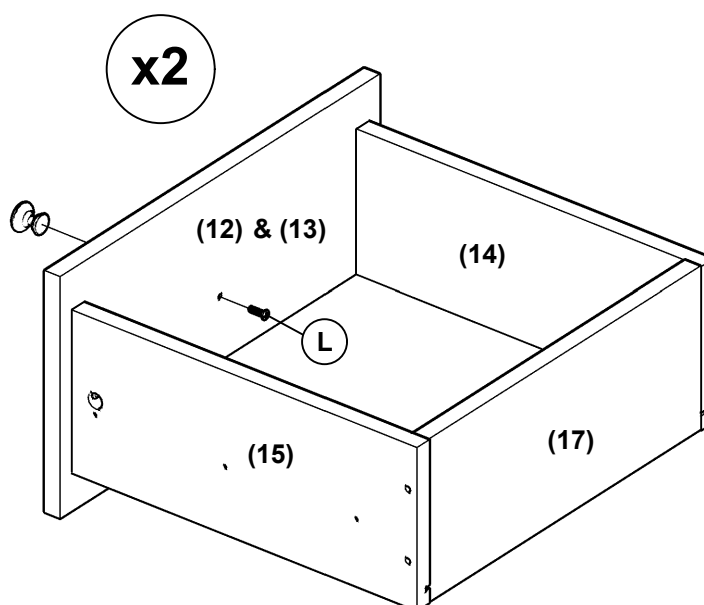


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201


## STEP 11

 Secure the first part of the full extension rail (M2) to the panels 14 and 15 of the two drawers with screws (A) as shown.

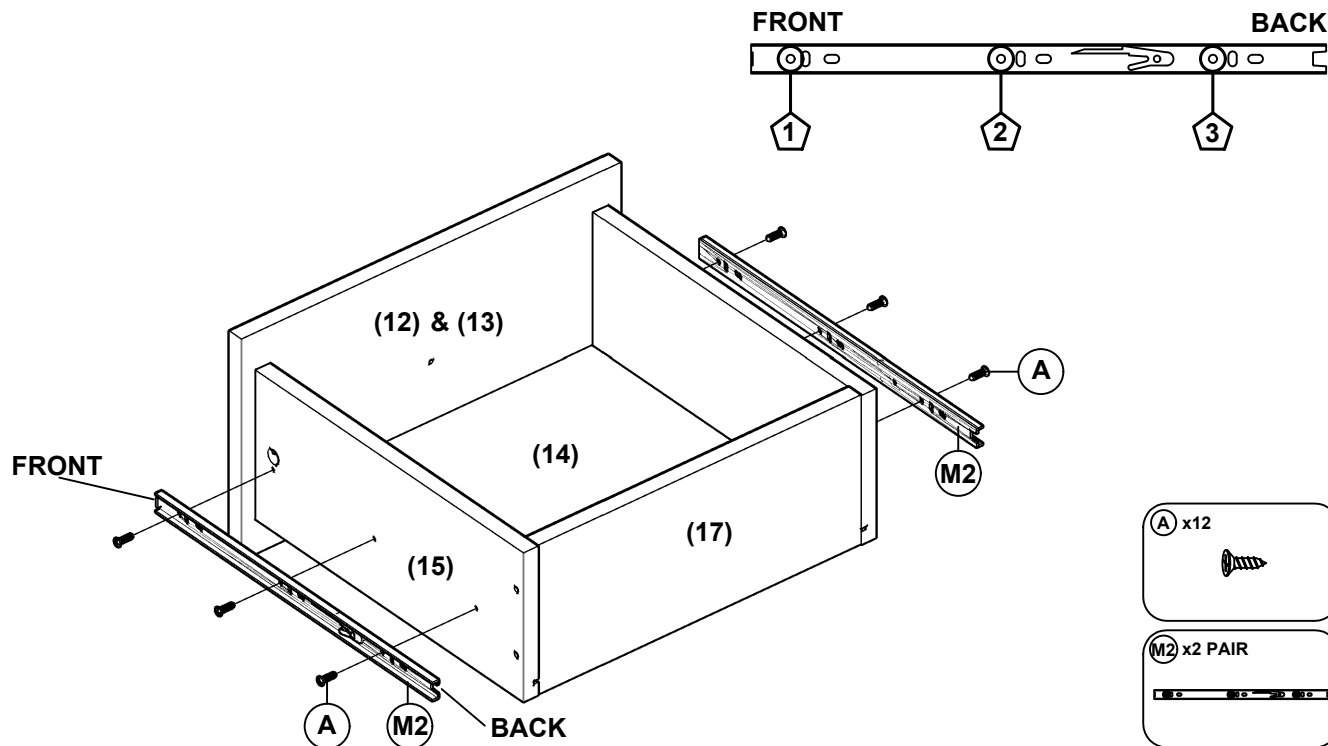

## STEP 12

As shown in the picture, align the DOWEL on the bottom of No. 5 panel with the hole on the top of No. 6 panel, assemble and fix with screw (E) and tighten.


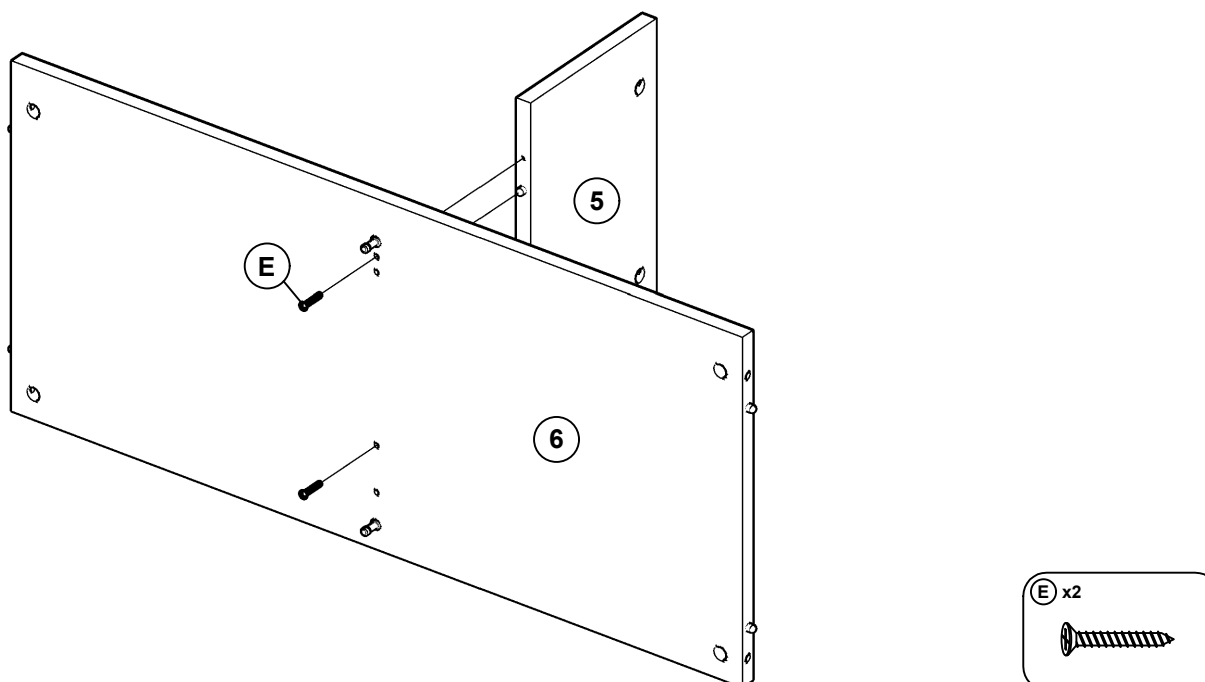 


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT


ITEM CODE : TVS 201

## STEP 13

As shown in the picture, align the pin on the top of No. 4 panel with the hole on the bottom of No. 6 panel, then put the Cam Nut (I) into the designated hole and tighten it at 180°

 
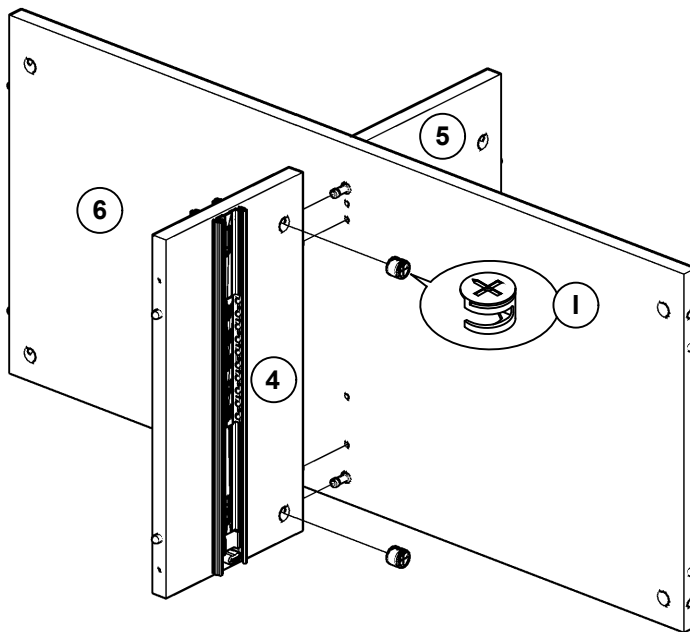 


2 PERSON  
ASSEMBLY

 


## STEP 14

As shown in the picture, align the pins of No. 7 & No. 8 panels with the left and right holes of No. 6 panel, then put the Cam Nuts (I) into the designated holes and tighten them at 180°

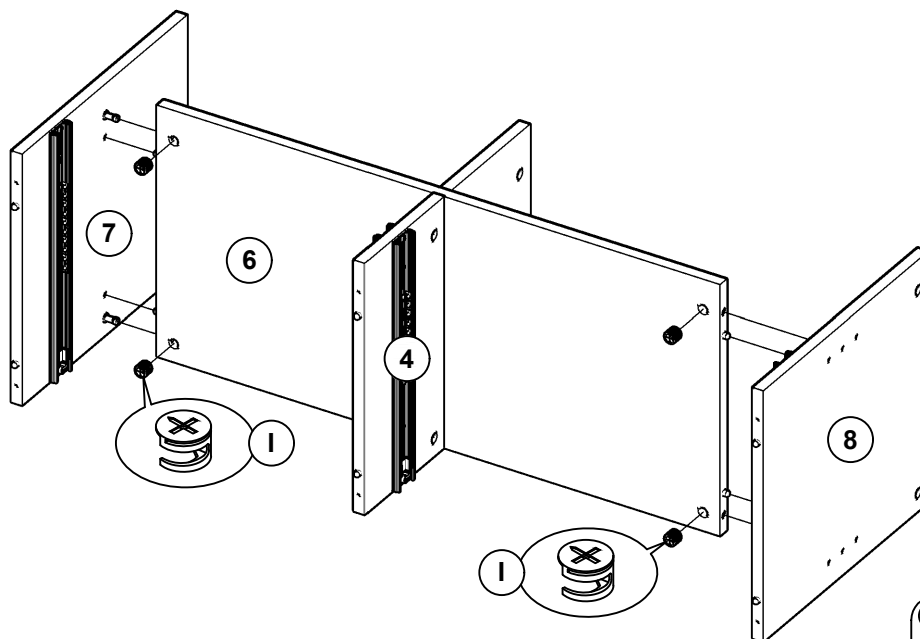  

2 PERSON  
ASSEMBLY

 




# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201


## STEP 15

 As shown in the figure, align the dowels at the bottom of panels 2, 3, 4, 7, and 8 with the designated holes on the top of panel 1 and assemble them with screws (E).

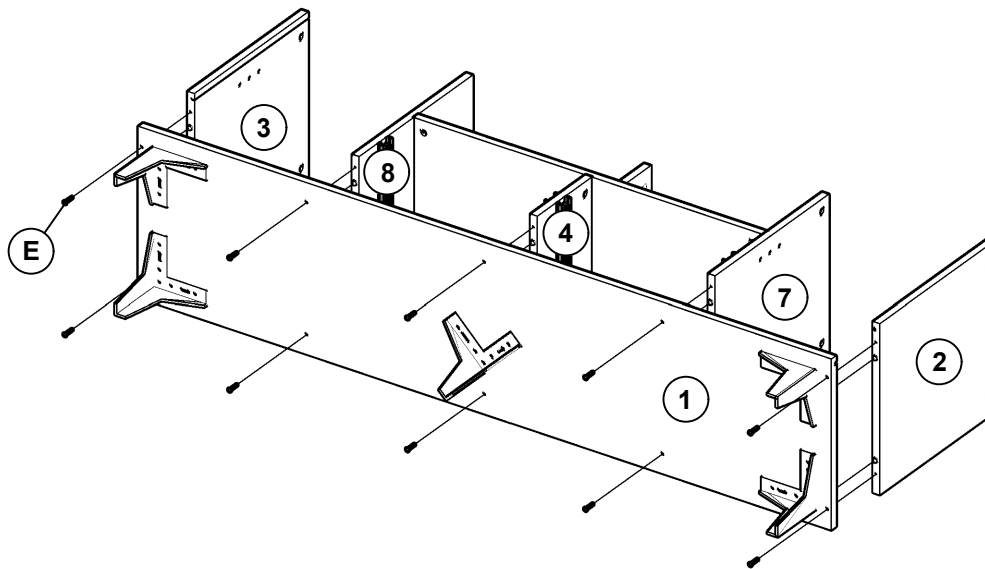


**2 PERSON  
ASSEMBLY**

 Note: Always use atleast 2  
adults to stand the item upright



## STEP 16

 As shown in the picture, insert the rear plate NO.16 into the slotted position

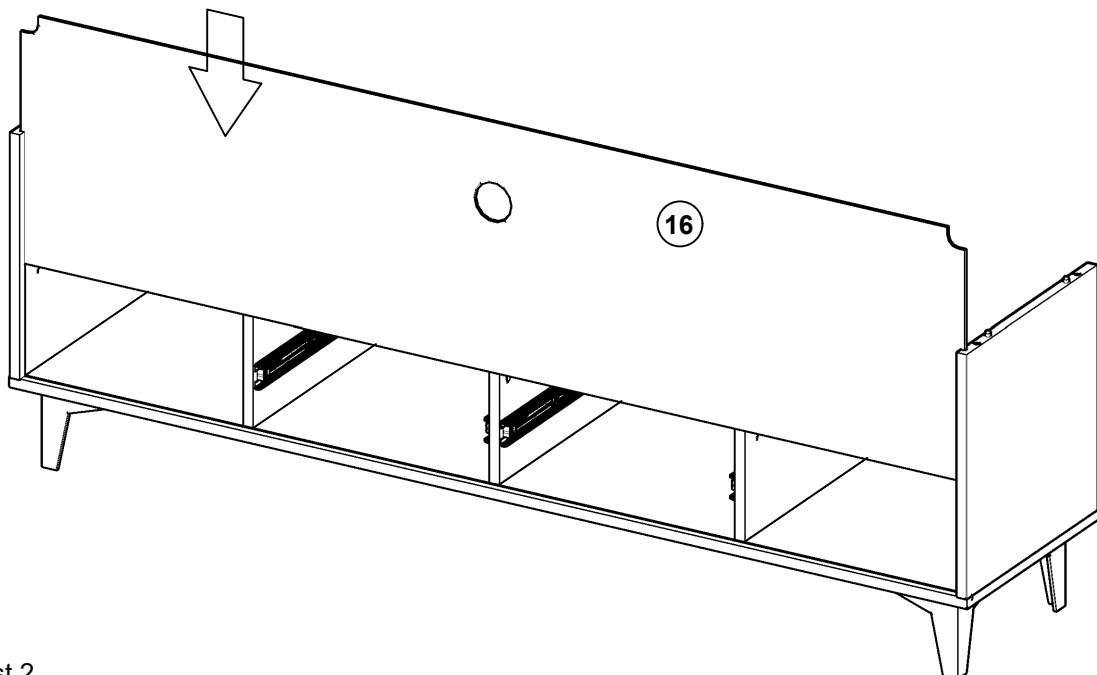

**2 PERSON  
ASSEMBLY**

Note: Always use atleast 2  
adults to stand the item upright




# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## STEP 17


As shown in the picture, align the hole at the bottom of No. 10 panel with the Dowel on the top of No. 2, 3, 5, 7, and 8 panels, then put the Cam Nut into the designated hole and tighten it at 180°.

   **Note:** Please always ensure cams are correctly locked to secure and support your item. Refer the cam lock guidelines at the beginning of this manual for further information.

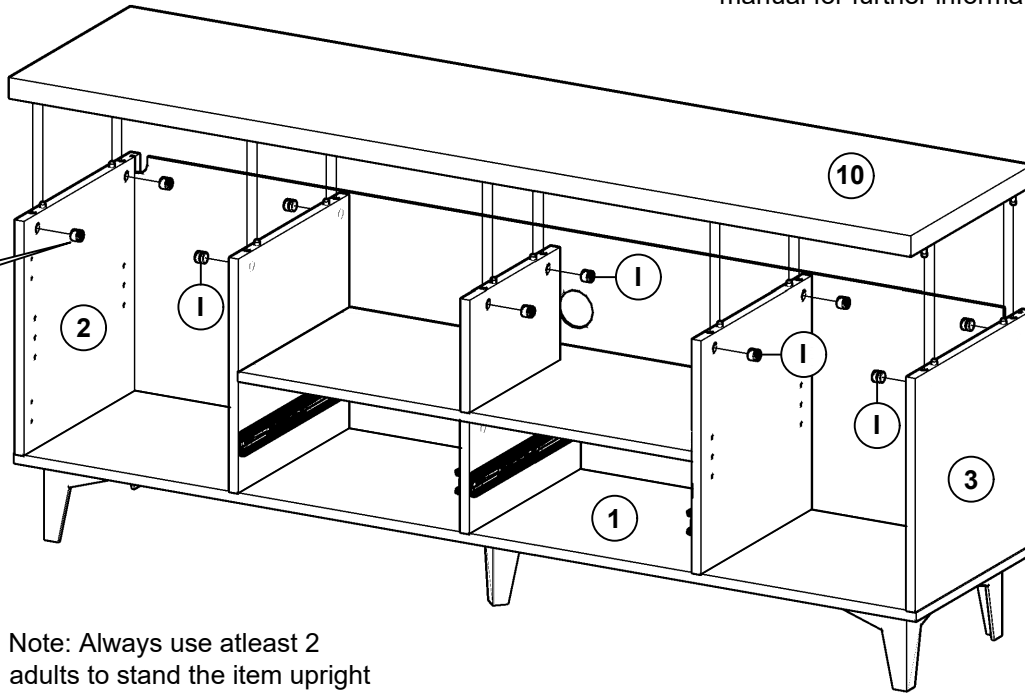



**2 PERSON ASSEMBLY**

 Note: Always use atleast 2 adults to stand the item upright

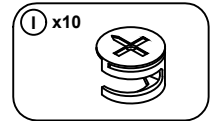

## STEP 18

  Place the shelf brackets (K) into the designated holes as shown.

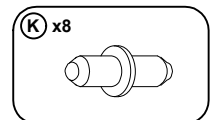
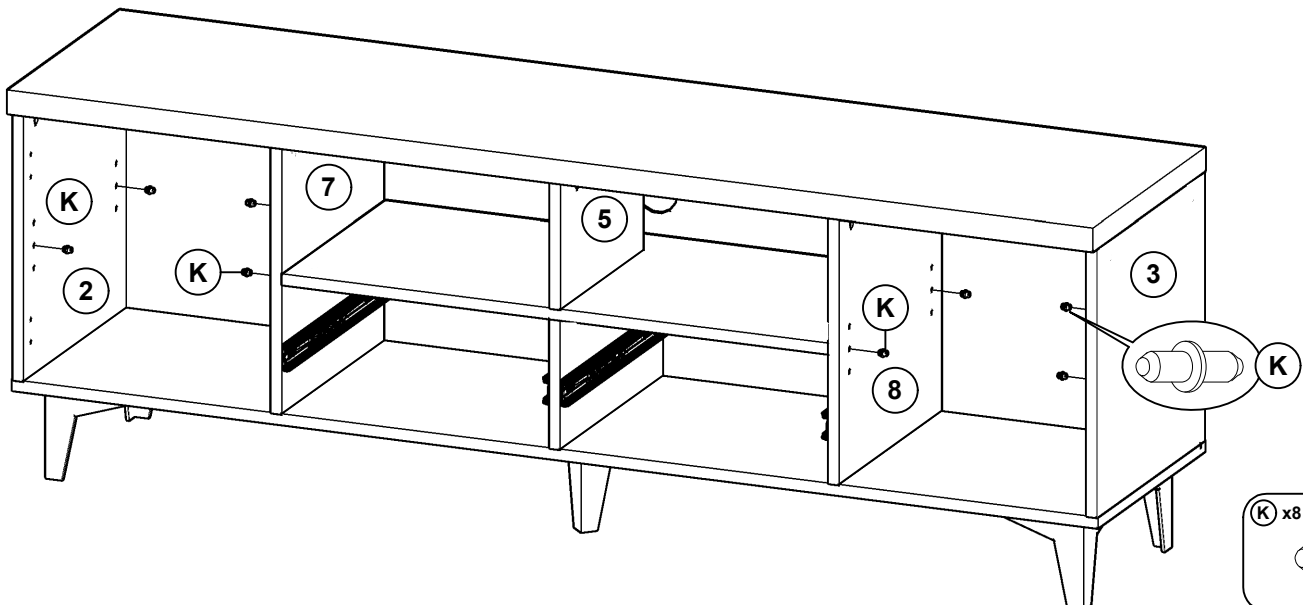


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## STEP 19

  As shown in the picture, place the shelf (11) on the shelf support.  
Next use the sticker (P) to attach to the cam nut on panel 5.

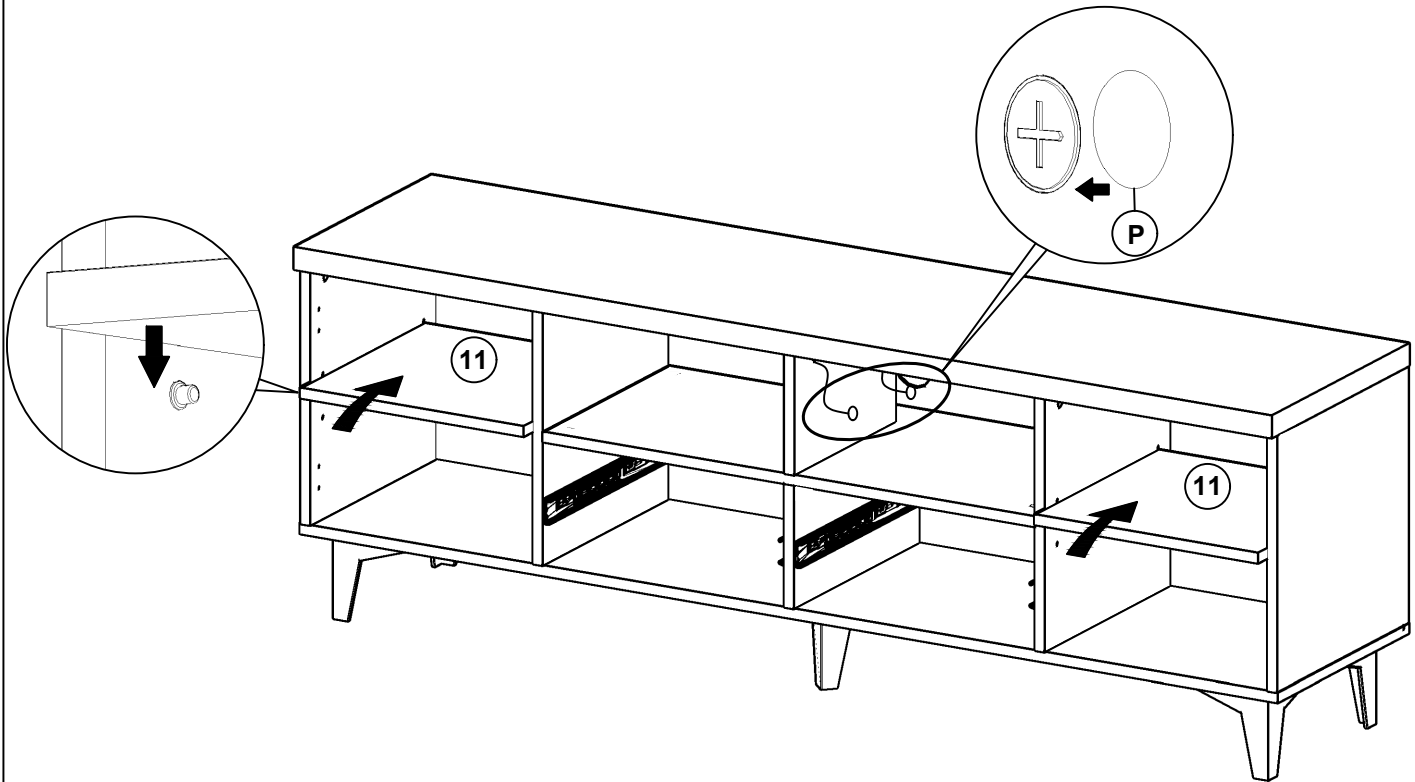


# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT



ITEM CODE : TVS 201

## STEP 20

 As shown in the picture, then pull out the fully extended slide rail to align with the first section on the drawer, and push it in.



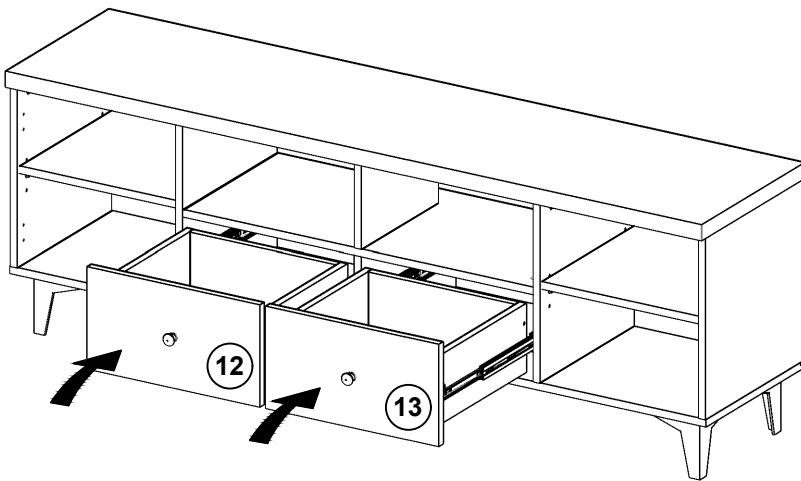


A

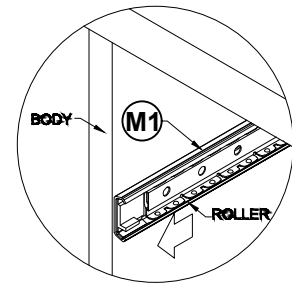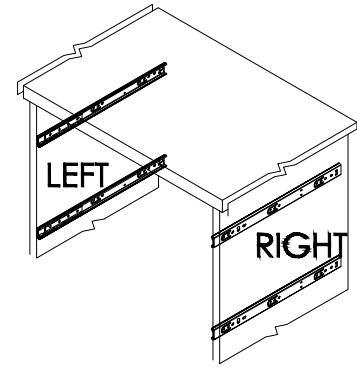  


- PUSH THE ROLLER OF M1 TO THE FRONT SIDE OF THE BODY.

   B

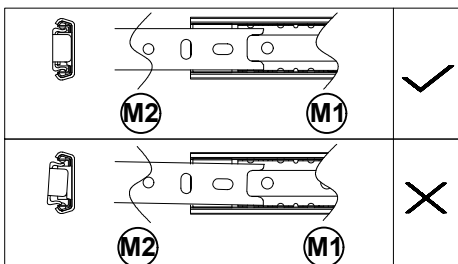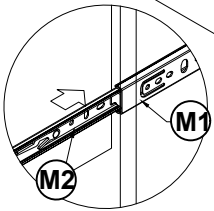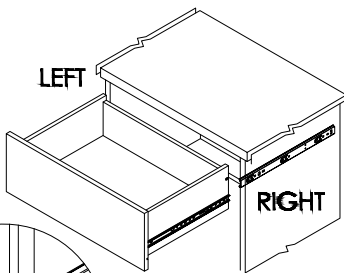

- ALIGN K2 ON LEFT & RIGHT TO K11 AT THE CORRECT POSITION.

 C

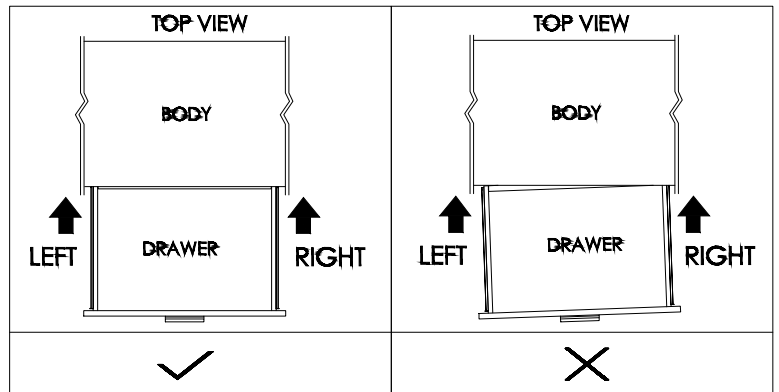


- PUSH IN LEFT & RIGHT SIDE OF THE DRAWER INTO THE BODY SIMULTANEOUSLY.
- WHEN THE DRAWER IS PUSHED IN HALF WAY, THE STOPPER ON M2 WILL BE ENGAGED INTO M1. THIS WILL CAUSE THE PUSHING A BIT TIGHT. [PULL OUT THE DRAWER A LITTLE BIT AND SLOWLY PUSH IN THE DRAWER AGAIN TO CHECK WHETHER THE DRAWER IS STUCK | THE DRAWER GLIDE IS INSTALLED CORRECTLY.]
- DO NOT PUSH IN THE DRAWER IF THE DRAWER IS STUCK OR CANNOT BE PUSHED IN SMOOTHLY. TAKE OUT THE DRAWER AND REPEAT STEP 1 & 2.

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

 ITEM CODE : TVS 201

## STEP 21

Align the hinge holes on the door with the holes marked on the panel as shown and tighten with screws (B). Next, screw the handle (L) into the designated hole in the door.


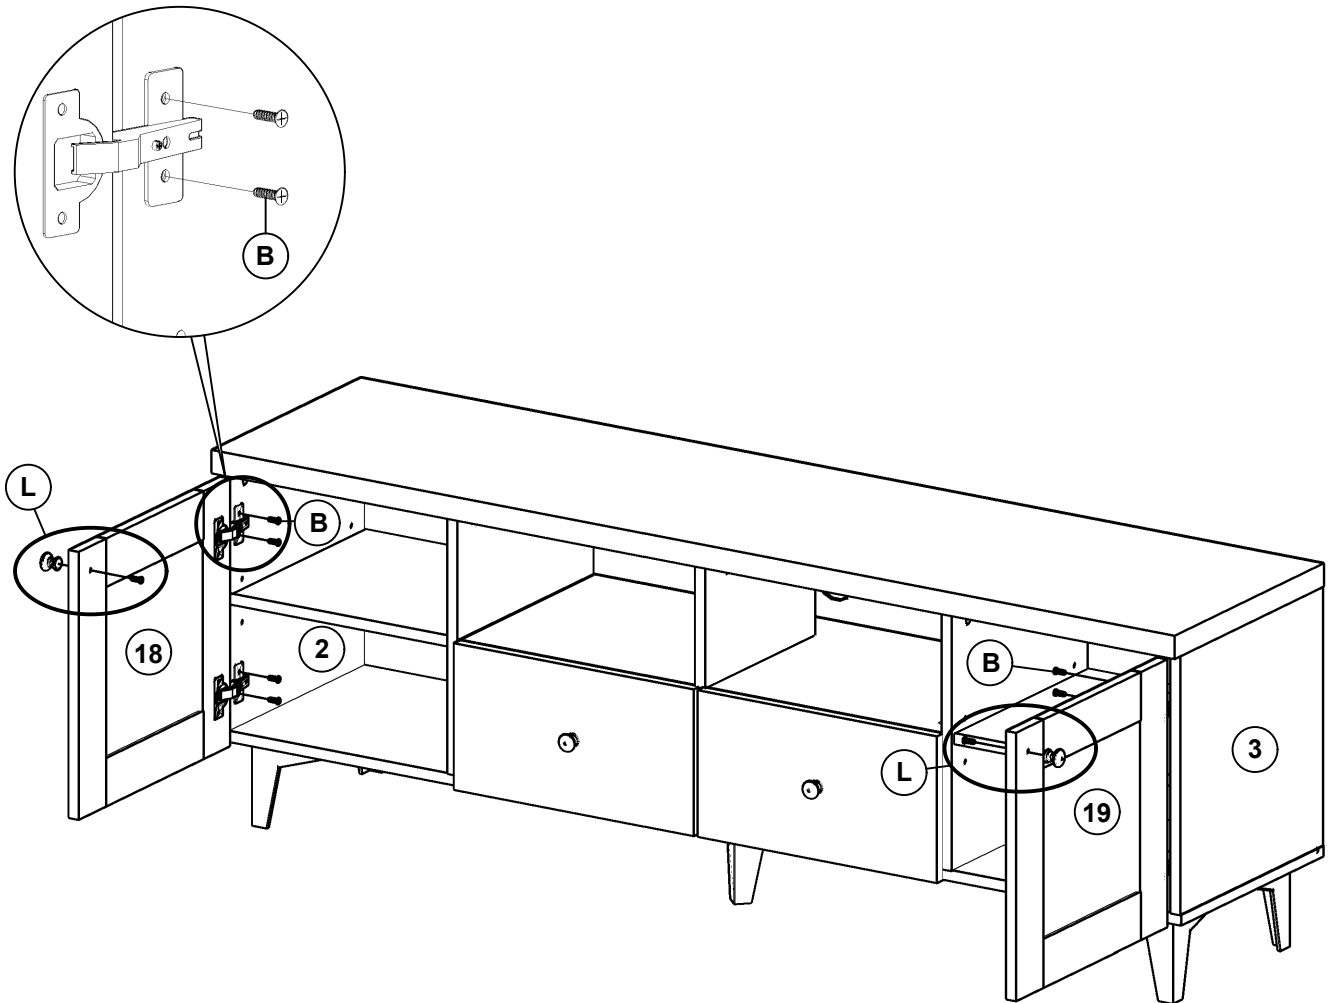


Note: Ensure that there is a second person holding and supporting the door while the hinges are being installed to the side panel.

**TIP:** You might find this step easier if you loosely tighten all screws first into the hinge plates so that they can take the weight of the door and help to keep it straight before you fully tighten and complete the step. Hinges must be secured straight so that the door will function correctly.



  
2 PERSON

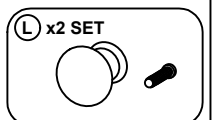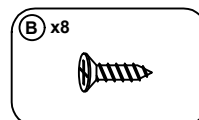

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201
 
## HOW TO ADJUST YOUR HINGES AND ALIGN THE DOORS

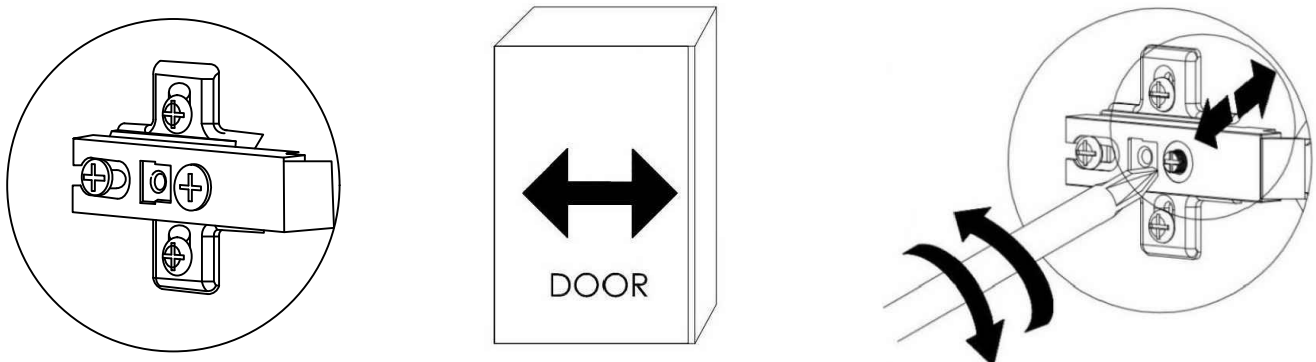

This adjustment is used if your doors are overlapping in the middle OR there is a large gap through the middle that you want to even out.

Before you begin always ensure your cupboard is on a flat even surface, as rugs and carpet / uneven tiles can affect the position of the doors.



To begin, carefully tighten/loosen the screw as shown in the diagram it will move your doors to the left or the right.

This step usually takes small adjustments and then closing doors to see if the gaps have evened out.


Sometimes just half a turn of the screw can make a big impact to the gap.

# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

  
ITEM CODE : TVS 201

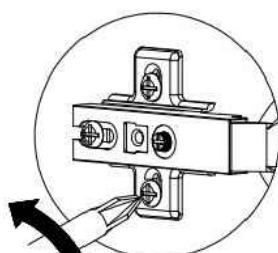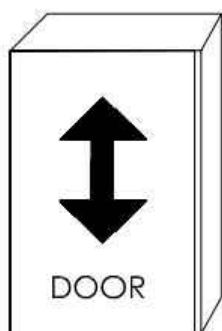

 **STEP 1**  
Please loosen the screw to adjust the door.


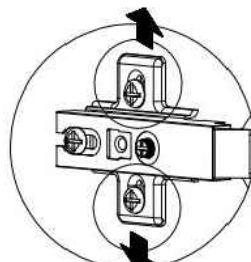


**STEP 2**  
Adjust the door.

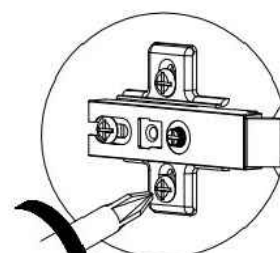 


**STEP 3**  
After adjust, tighten the screw.

  
This adjustment is used if your doors have a big gap at the top or the bottom, or if one door sits straight but is lower than the other door.

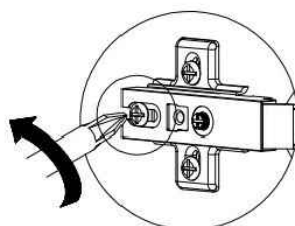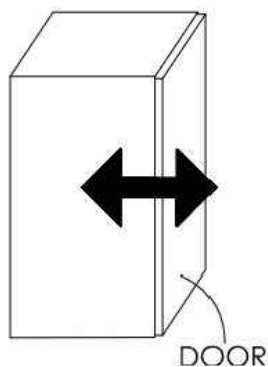

 **STEP 1**  
Please loosen the screw to adjust the door.

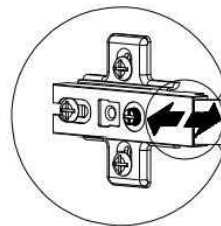

**STEP 2**  
Adjust the door.

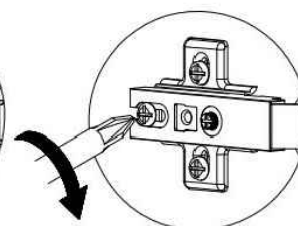 

**STEP 3**  
After adjust, tighten the screw.

This adjustment is used if your doors are TOO CLOSE to the main cavity. You can loosen the screw and then move the door hinge closer or further out depending on the outcome you want to achieve




# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

   ITEM CODE : TVS 201

## STEP 22

As shown in the picture, insert the Back Panel Connector (O) into the gap on the edge of the back panel and fix it with the screw (C).




**Note:** It is important to correctly attach the back ply stoppers as this will help support and stabilise your item

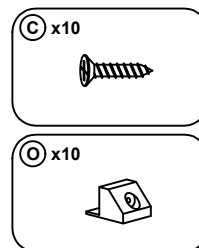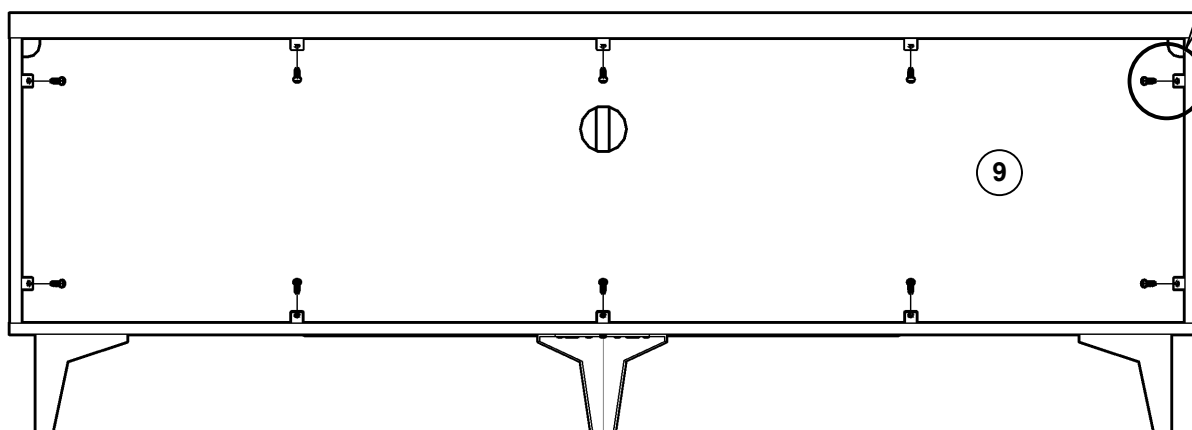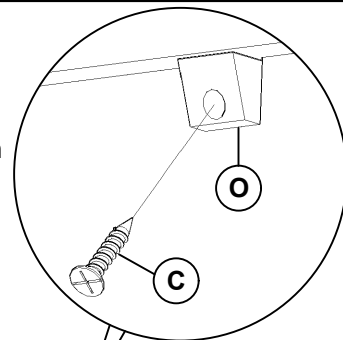

## STEP 23

As shown in the picture, fix the L-BRACKETS (P) to the bottom of the left and right sides of No. 10 panel with screws (B).

   **Note:** Please refer to the following page for full information on wall bracket

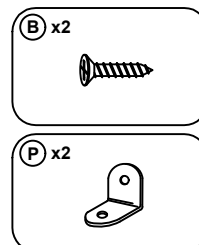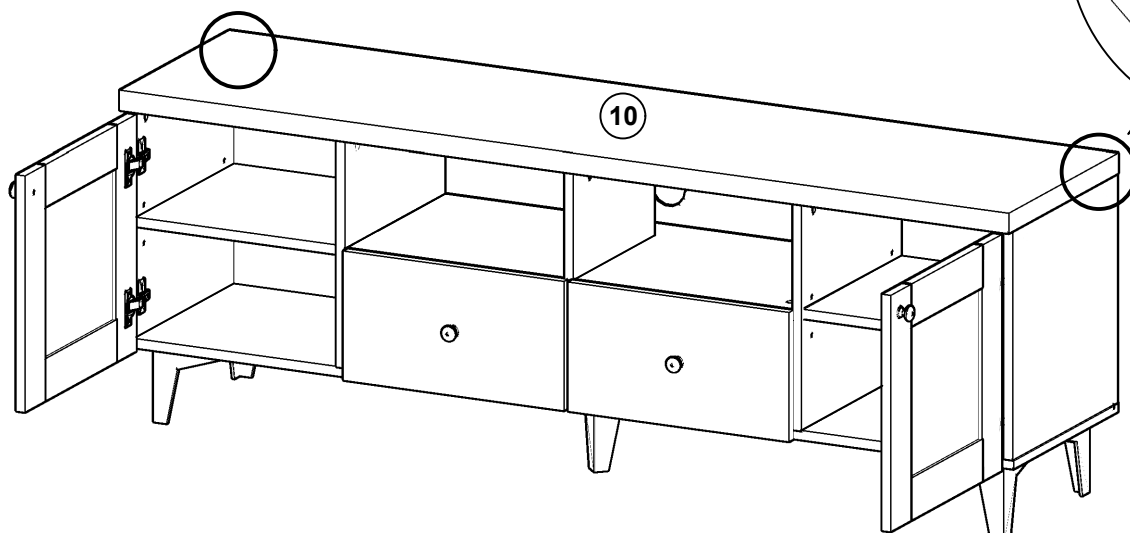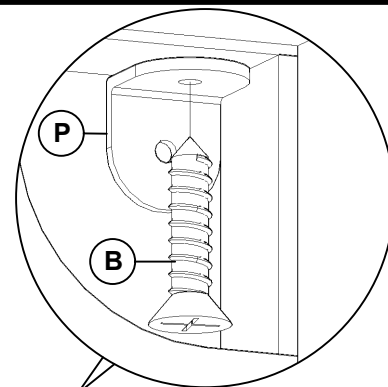



# BAYVILLE 2 DOOR 2 DRAWER ENTERTAINMENT UNIT

ITEM CODE : TVS 201

## ASSEMBLY IS COMPLETE



### WARNING

Serous or fatal crushing can occur from furniture tip over. To help prevent tip over :

- Install all tip over restraints provided with your product.
- Place heaviest Item insjde the lower doors.
- Do not sit TV's or other heavy objects on top of this product,
- Never allow children to climb or hang on drawers, doors, shelves.
- Never open more than one door at a time.

Use a tip over restraints may only reduce, but will not ellminate, the risk of tip over.

### Bracket Fixing

The horizontal arms of the brackets are to be secured to the underside of shelf so that it is out of sight when the cabinet is installed into position.

After assembling the unit place it against the wall where it will be permently positioned.

Working from inside the cabinet place the bracket through the pre-cut hole in the rear wall of the cabinet as shown in diagram.

Use a pencil to mark through the screw hole in the bracket, where the bracket has to be attached to the wall.

• Move the cabinet away from the wall and secure the bracket to the wall at the marked position using a wall anchor suited to your wall surface.

With the wall brackets in position, move the cabinet back to the wall allowing the horizontal arm of the bracket to enter into

the cabinet through the pre-cut holes in the back wall of the cabinet.

Then using the screw supplied, secure the horizontal arm of the brackets to the underside of the shelf.

### WARNING:

 
 
#### ENSURE THAT WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY

To avoid any serious injury, this product has been supplied with a wall strap to prevent toppling.

We strongly recommend that this product is permanently fixed to the wall or other suitable surface.

Please seek professional advice if you are in doubt of what fixing should be use. Wall fixings can be purchased from your local hardware store.

wall

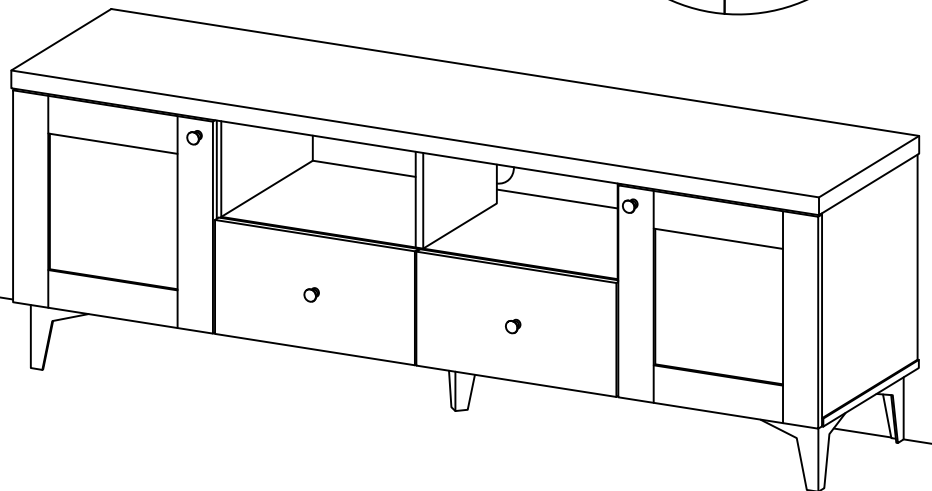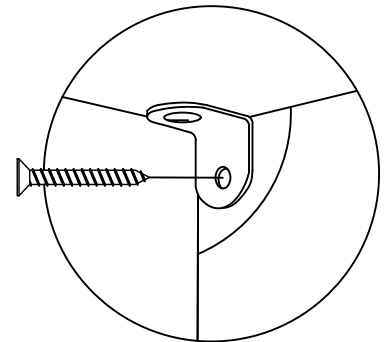



**MEUBILAIR**  
DIRECT IMPORTS

# Warranty Certificate

---

**Congratulations!** You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, **Meubilair Direct Imports** will provide you with a warranty against defects as follows:

## Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

## Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

## Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturers' operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

## MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Address: Unit 4, 16 Hickeys Road, Penrith, NSW, 2750

Opening hours: 9am to 4pm (Monday – Friday)

Contact Number: (02) 4701 5363

When making a return, please ensure the product is properly packaged, so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

---

## AFTER SALES SUPPORT

EMAIL : [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Product code: TVS201





**MEUBILAIR**  
DIRECT IMPORTS

## Warranty Certificate

PRODUCT NAME: Bayville 2 drawer 2 door entertainment unit

BRAND NAME: \_\_\_\_\_

PRODUCT CODE: TVS201

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_  
\_\_\_\_\_

EMAIL \_\_\_\_\_

DAYTIME TEL NO \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this Warranty certificate and **keep for your reference.**

In the event of a product fault, please email the Customer Service team. Please ensure that you include the product details (as shown on the card) at hand so that we are able to respond as quickly and efficiently as possible.

### MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Address: Unit 4, 16 Hickeys Road, Penrith, NSW, 2750

Opening hours: 9am to 4pm (Monday – Friday)

Contact Number: (02) 4701 5363

### AFTER SALES SUPPORT

EMAIL : [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Product code: TVS201

