 


TWO DOOR ENTERTAINMENT UNIT

2 hrs

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

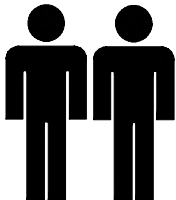 


FLOOR AREA
2M x 2M




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS




PHILLIPS SCREWDRIVER

 

FLAT HEAD SCREWDRIVER

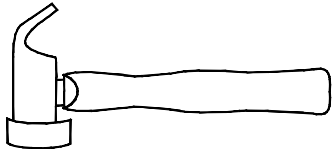 

HAMMER

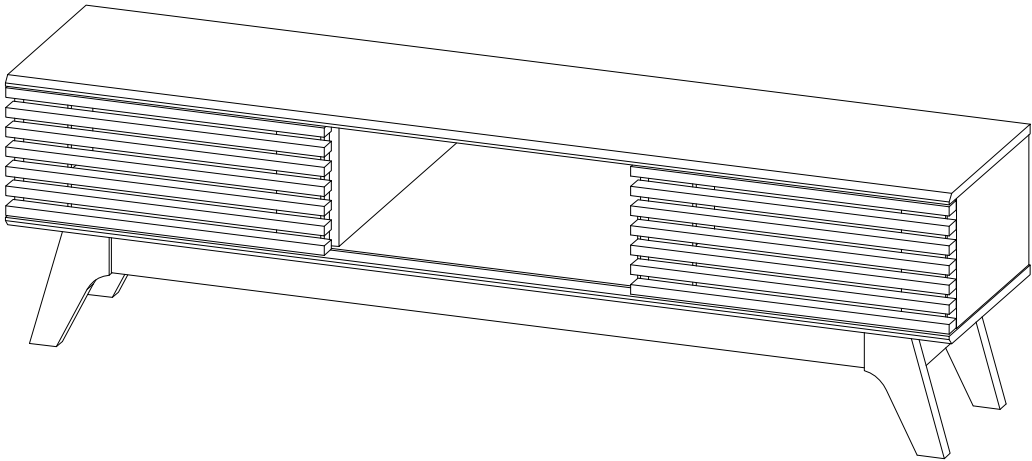 

TWO DOOR ENTERTAINMENT UNIT

Tips before you start:

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

Care and Maintenance of your Furniture

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag and pull your furniture.


TWO DOOR ENTERTAINMENT UNIT

QUICKFIT

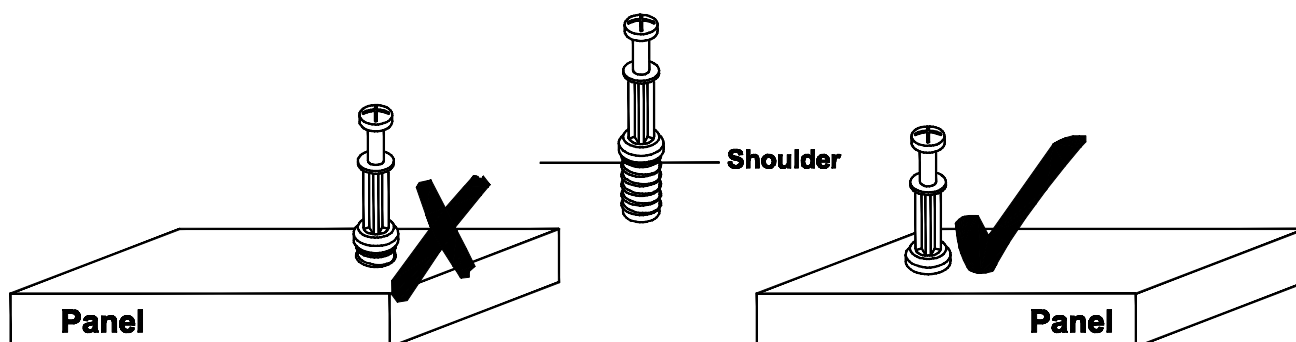

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

 
CAM LOCK

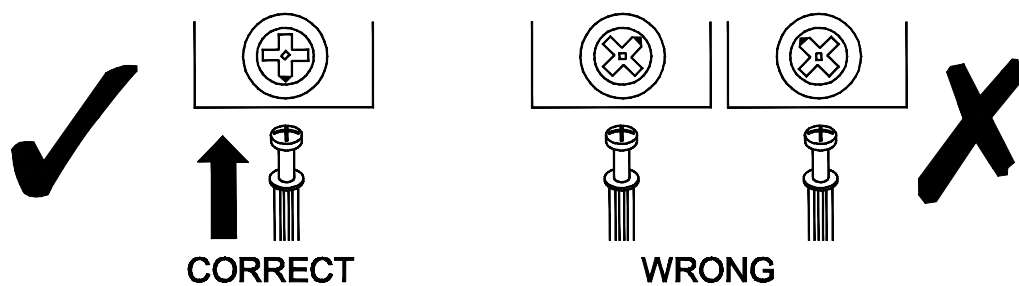

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

 Cam lock should be inserted before quickfit.

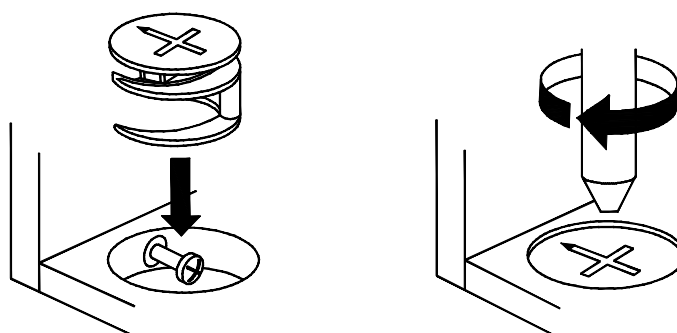


Turn cam lock clockwise to tighten.

TWO DOOR ENTERTAINMENT UNIT

HARDWARE LIST



 
**12 x A1
Cam
Lock**



**12 x A2
Quickfit
Screw**



 
**12 x A3
Cover**



**26 x B
Wooden
Dowel**



 **8 x C
Cap Wood
Screw**



**1 x D
Allen
Key**



**16 x E
Screw**



 
**2 x F
Screw**



**16 x G
Screw**



**5 x H
Nail
Leg**



 

 
 
 
 
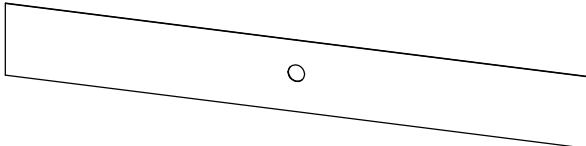 
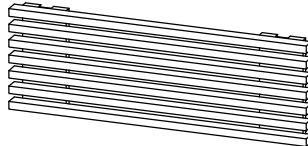 
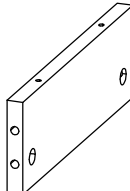 
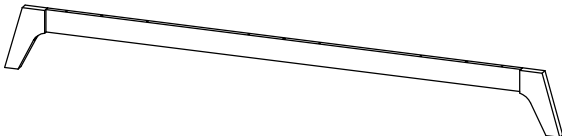 
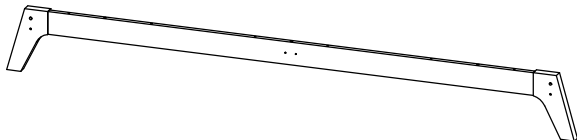 

**4 x I1
Roller**



**4 x I2
Roller**

TWO DOOR ENTERTAINMENT UNIT

PART LIST

											
1	1 PC			2	1 PC						
											
3	1 PC		4	1 PC		5	1 PC		6	1 PC	
											
7	1 PC			8	2 PCS			9	2 PCS		
											
10	1 PC			11	1 PC						
											
12	1 PC										

 
TWO DOOR ENTERTAINMENT UNIT

STEP 1

Insert hardware **A1** onto panel (3) ,(4) ,(5) and (6).
(Repeat 8 times.)

Insert hardware **A2** onto panel (1).
(Repeat 8 times.)

Insert hardware **B** onto panel (3) ,(4),(5) and (6).
(Repeat 16 times.)

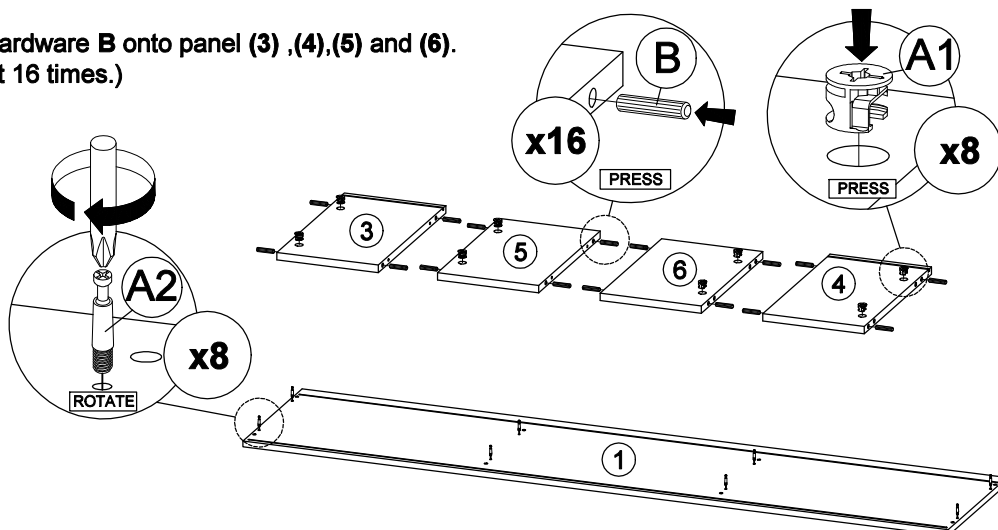

A1 x 8



A2 x 8



B x 16

 
Ensure the arrows on hardware **A1** point towards mounting positions.

STEP 2

Insert hardware **A1** onto panel (9).
(Repeat 4 times.)

Insert hardware **A2** onto panel (10).
(Repeat 4 times.)

Insert hardware **B** onto panel (9), (10) and (11).
(Repeat 10 times.)

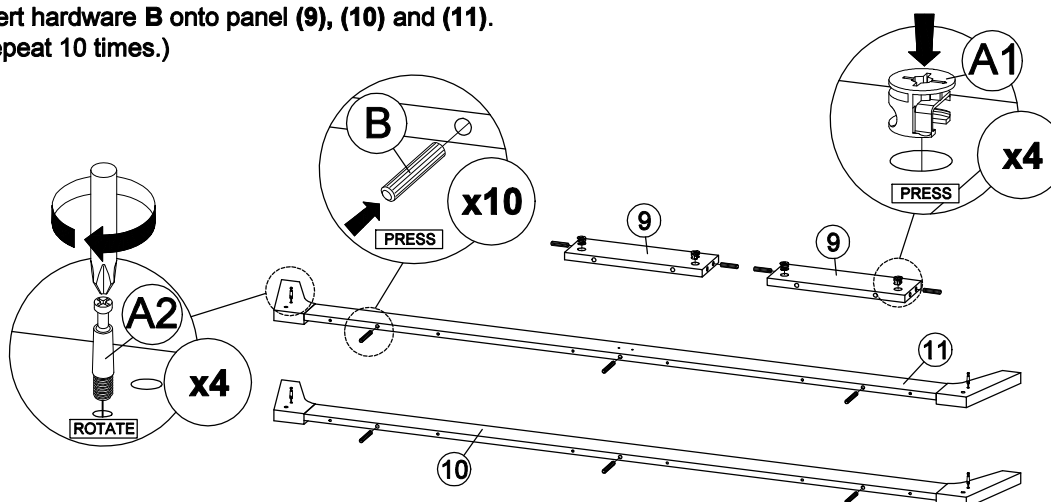

A1 x 4



A2 x 4



B x 10

Ensure the arrows on hardware **A1** point towards mounting positions.

TWO DOOR ENTERTAINMENT UNIT

STEP 3

 
Connect panel (2) to panel (3) ,(4) ,(5) and (6) by using hardware C and D.
(Repeat 8 times.)



D x 1




C x 8

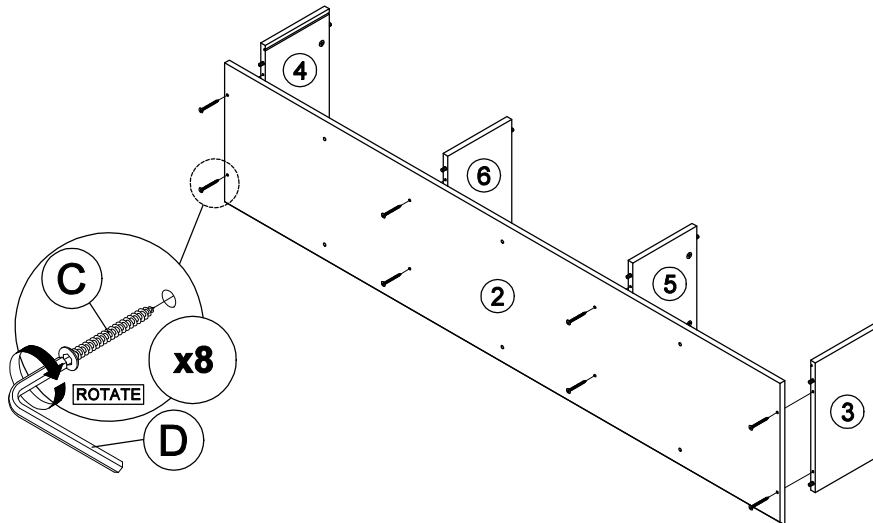

In this step hardware A1 and B are pre-inserted.

STEP 4

 Insert the panel (7) along the slot.
(Repeat 1 times.)

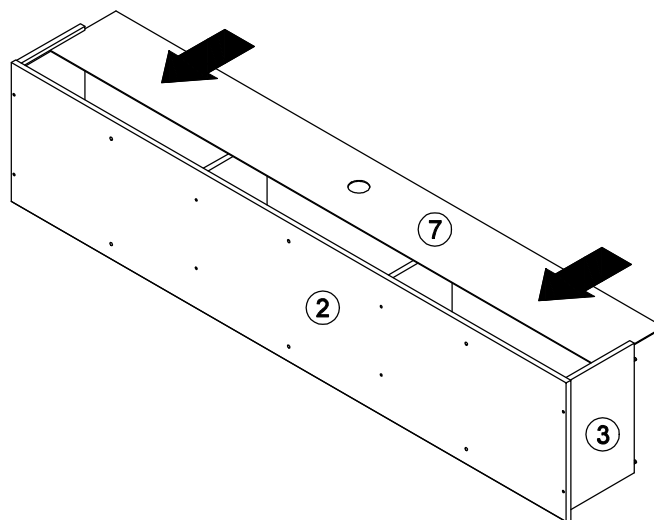

TWO DOOR ENTERTAINMENT UNIT

STEP 5

Attach panel (3) ,(4) ,(5) and (6) to panel (1).

 
Insert all hardware A2 into A1.

Rotate all A1 until tight.

Apply A3 onto all A1.
(Repeat 8 times.)



A3 x 8

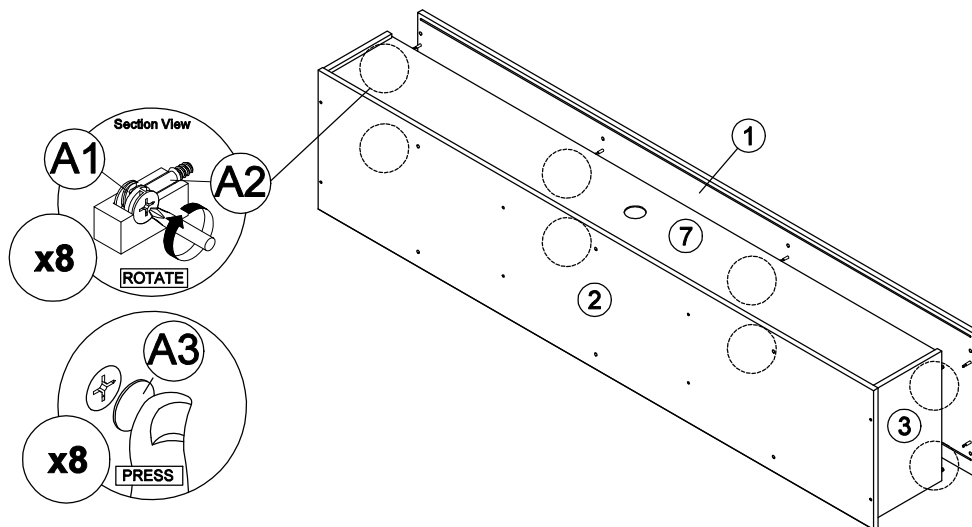

In this step hardware A1 ,A2 and B are pre-inserted.

STEP 6

Attach leg (9) to leg (10) and (11).

 
Insert all hardware A2 into A1.

Rotate all A1 until tight.

Apply A3 onto all A1.
(Repeat 4 times.)



A3 x 4

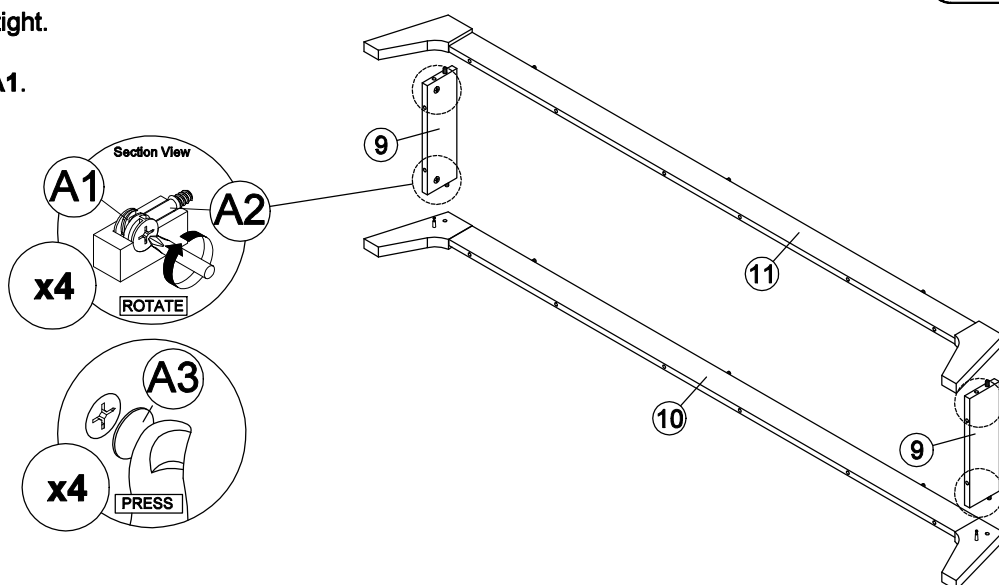


In this step hardware A1 ,A2 and B are pre-inserted.

TWO DOOR ENTERTAINMENT UNIT

STEP 7

 
Connect leg (9), (10) and (11) to panel (2) by using hardware G.
(Repeat 16 times.)

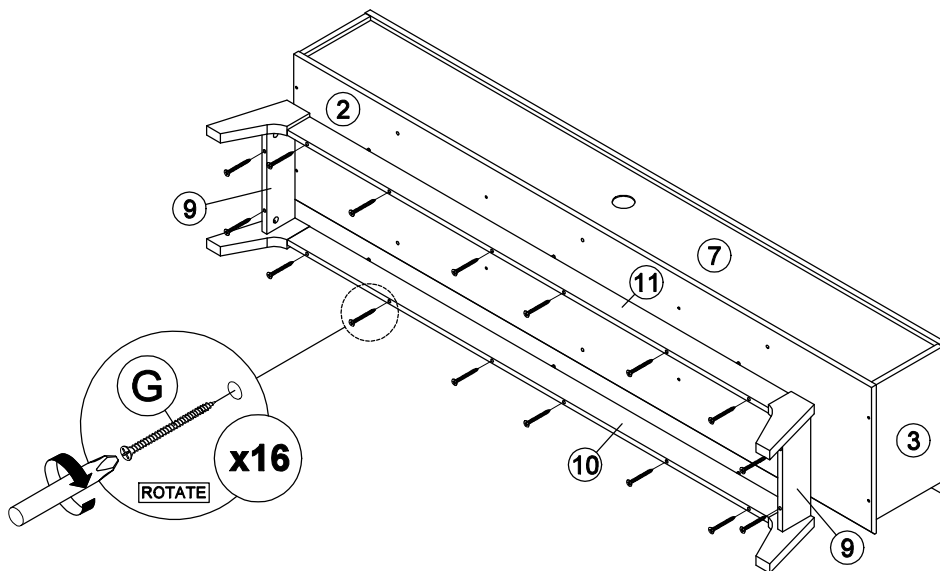

In this step hardware B are pre-inserted.

STEP 8

 Hit hardware H into bottom of panel (10) and (11).
(Repeat 4 times.)

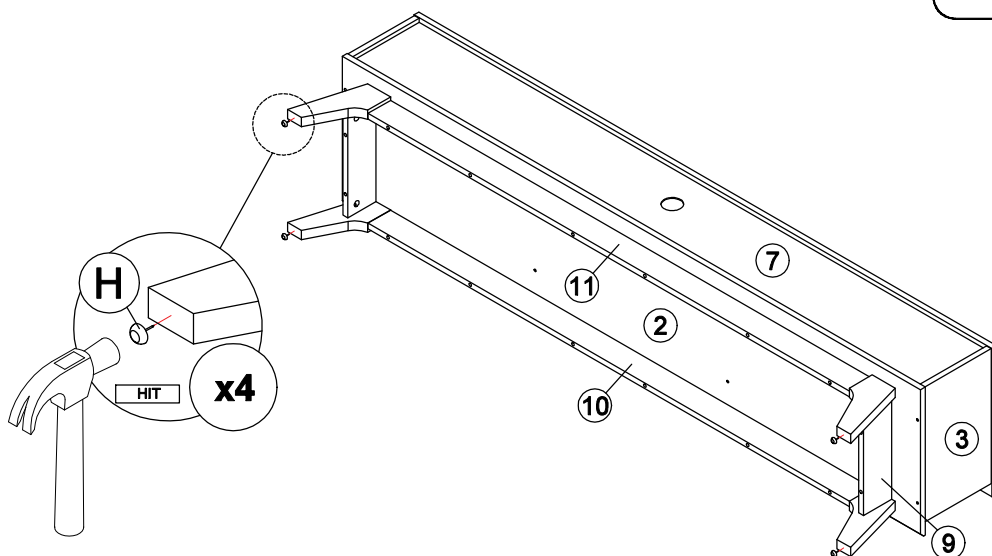


TWO DOOR ENTERTAINMENT UNIT

STEP 9

Connect panel (12) to panel (11) by using hardware F.
(Repeat 2 times.)

 Hit hardware H into bottom of panel (12).
(Repeat 1 times.)

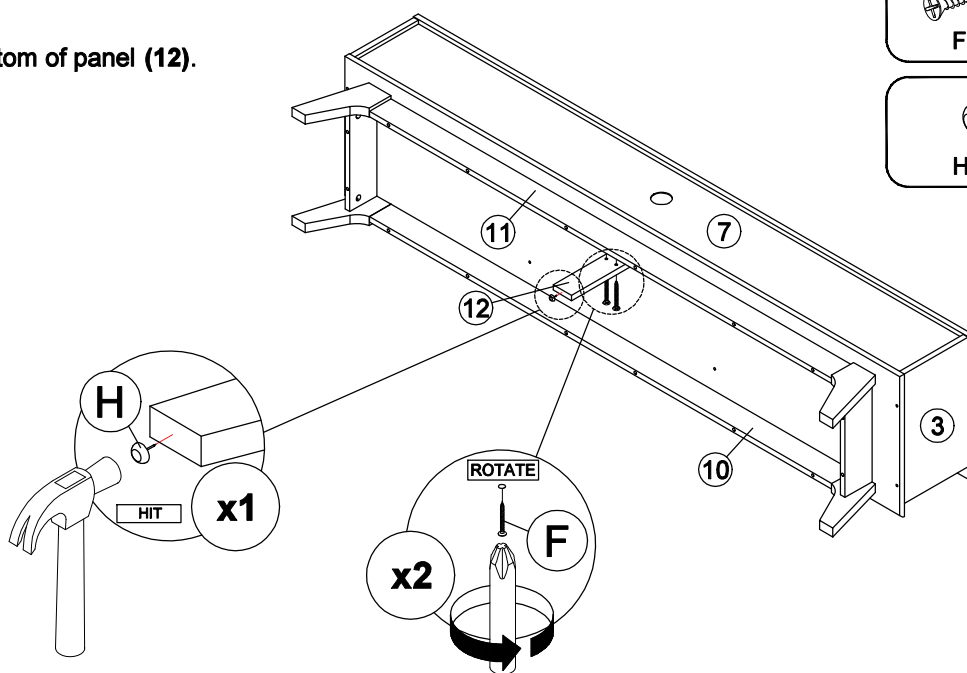


F x 2



H x 1

STEP 10

 Assemble hardware I1/I2 to two panel (8) with hardware E.
(Repeat 2 times for each hardware.)

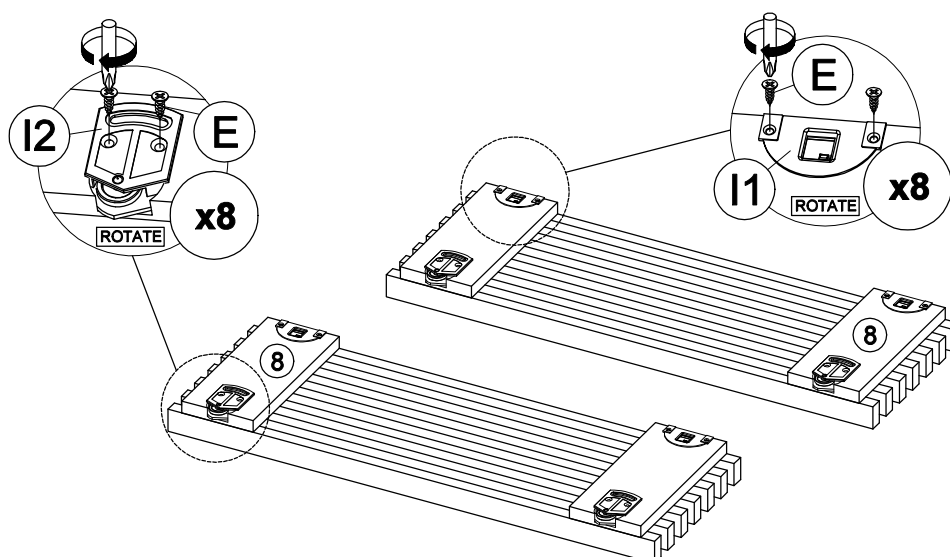

E x 16



I1 x 4

 


I2 x 4

TWO DOOR ENTERTAINMENT UNIT

STEP 11

Put the panel (8) in place.
(Repeat 2 times.)

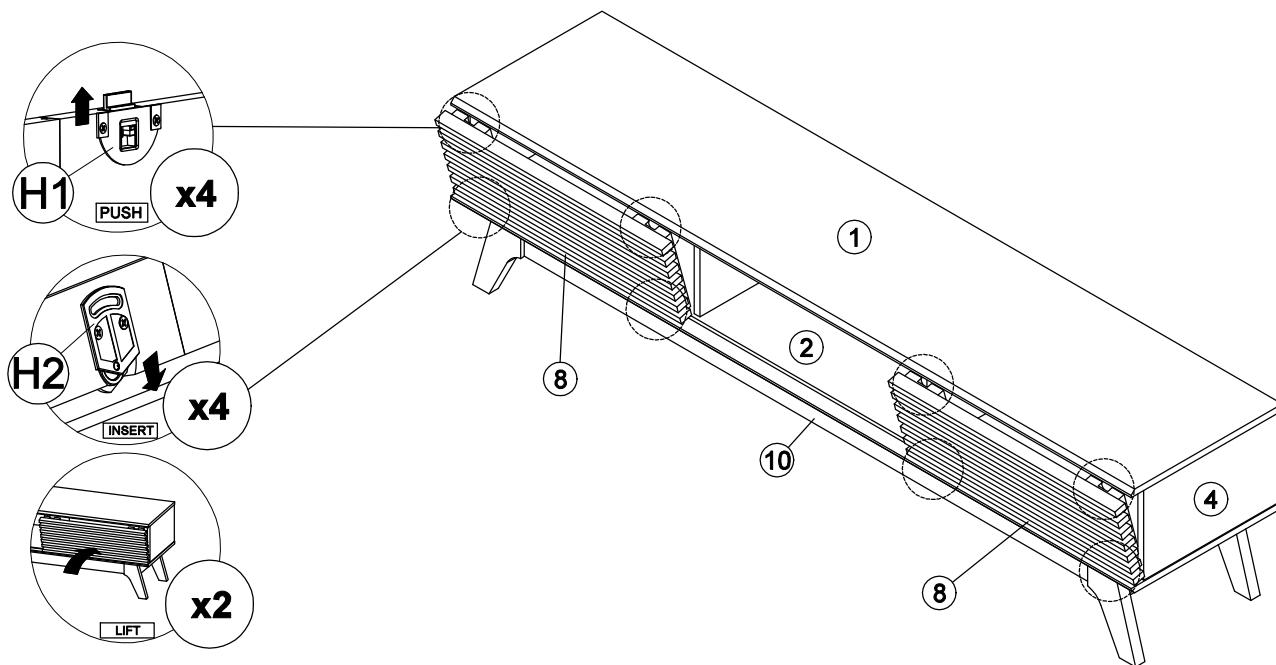

In this step hardware I1 and I2 are pre-inserted.