 


TV UNIT 3 DRAWERS

ASSEMBLY INSTRUCTIONS

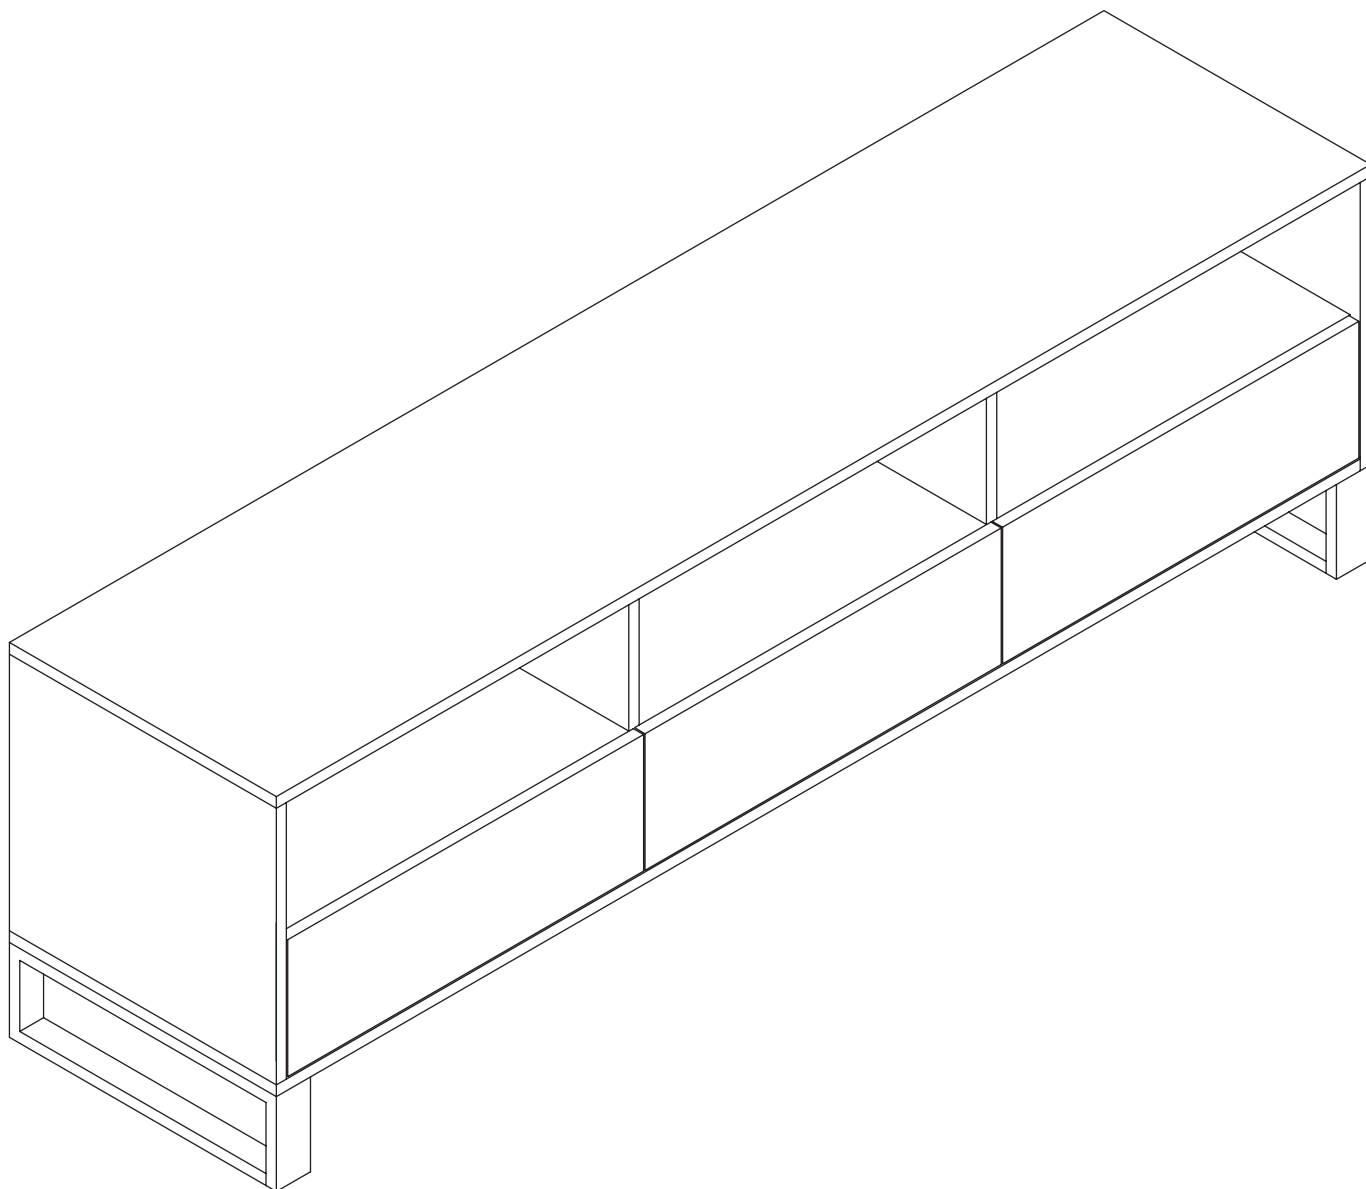

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 1 x adult required
- ✓ 1m x 1m assembly space required
- ✓ 1 hour assembly time approx.

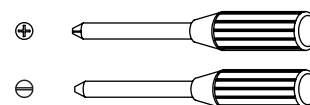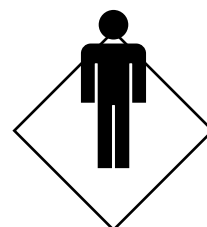

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

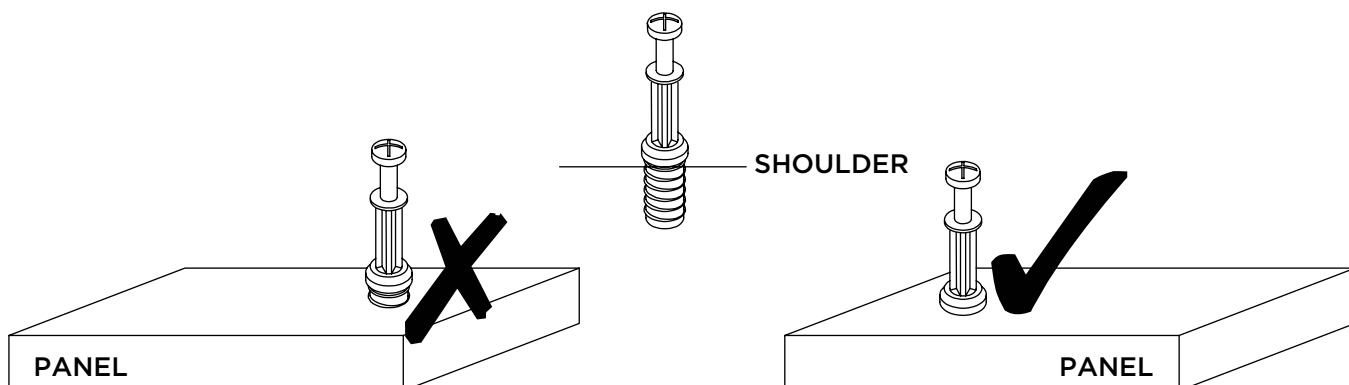



CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

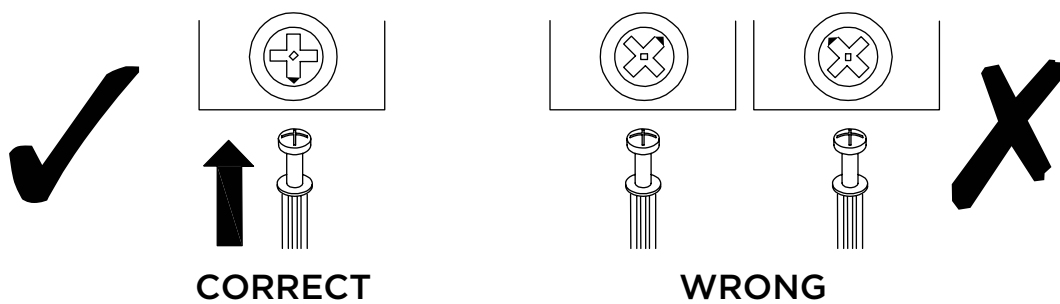


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

  
Turn cam lock clockwise to tighten.

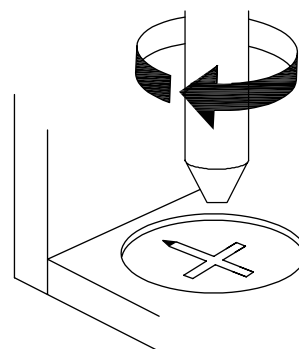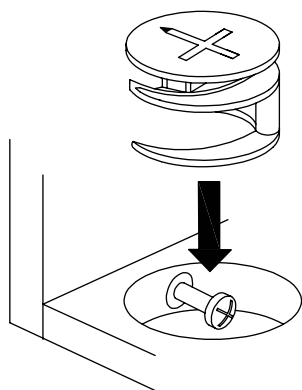

HARDWARE LIST

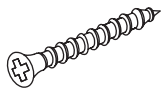 


8 x A
Screw

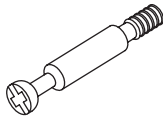 


24 x B
Quickfit
Screw



 
24 x C
Cam Lock




36 x D
Screw

 


3 x E
Outside Drawer
Runner

 

3 x F
Inside Drawer
Runner

 


3 x G
Inside Drawer
Runner

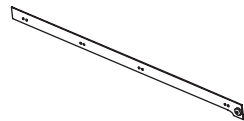 

3 x H
Outside Drawer
Runner



 
16 x I
Short Wooden
Dowel




16 x J
Nail



 
10 x K
Bolt




12 x L
Screw

 

4 x M
Pad

   
 
 
 
 
 
 
 
 

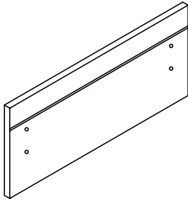 
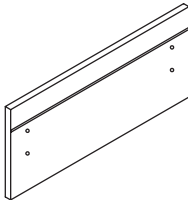 
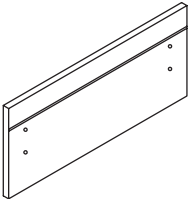 
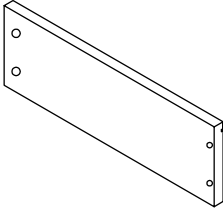 
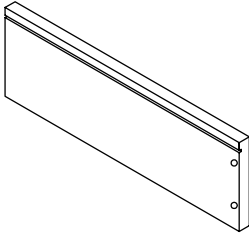 
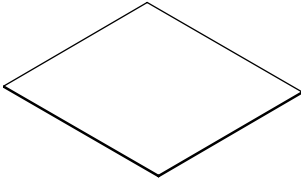 
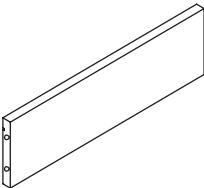 


4 x N
Long Wooden
Dowel



1 x O
Allen Key

PARTS LIST

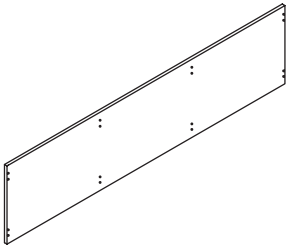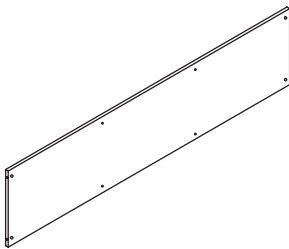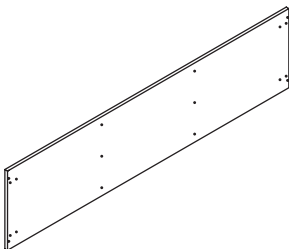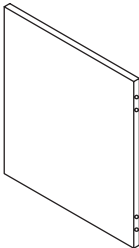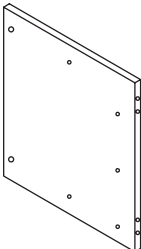

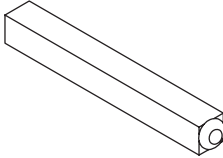
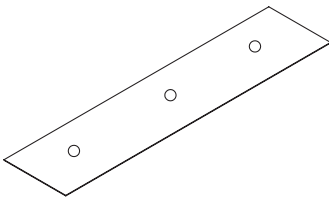
			
1 1 PC	2 1 PC	3 1 PC	4 1 PC
			
5 1 PC	6 2 PCS	7 2 PCS	8 2 PCS
			
9 2 PCS	10 2 PCS	11 2 PC	12 1 PC
			
13 1 PC	14 3 PCS	15 3 PCS	16 3 PCS
			
17 3 PCS			

ASSEMBLY INSTRUCTIONS

STEP 1

Insert quickfit screws (B) into part 1, as shown.

    Fix parts 8 to part 3 using bolts (K) and allen key (O), as shown.


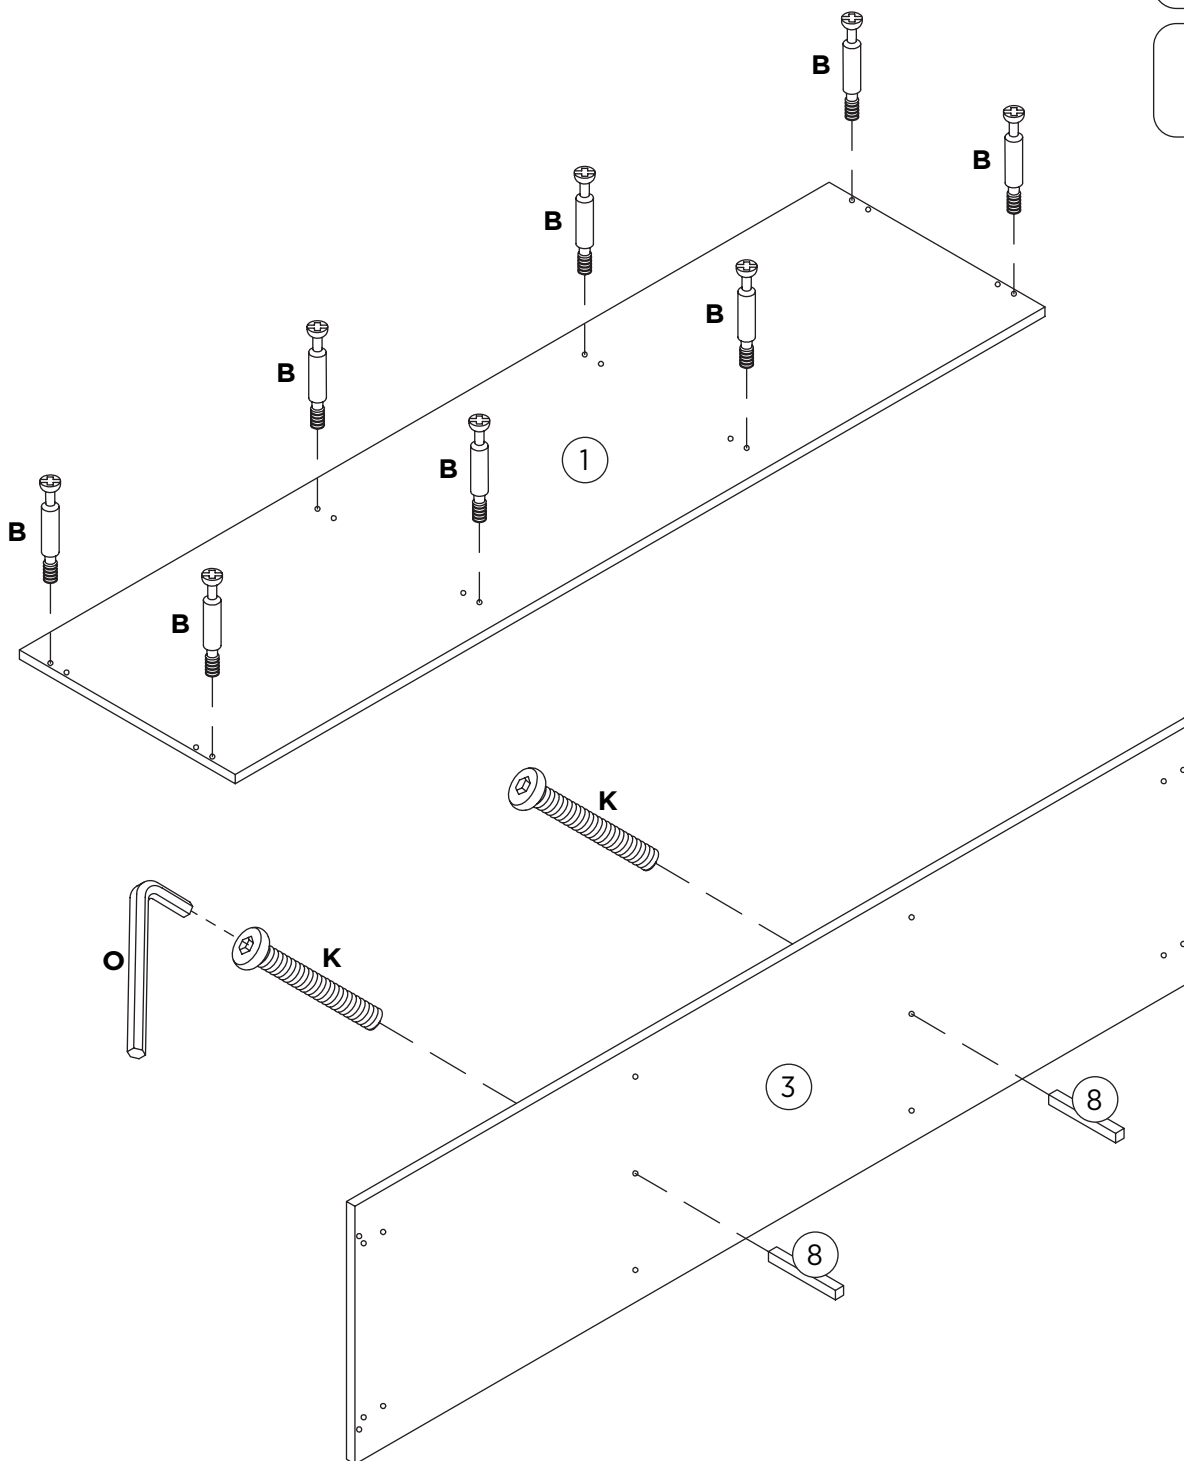





ASSEMBLY INSTRUCTIONS

STEP 2

Fix outside drawer runner (E) to part 4 using screws (D), as shown.

    
 
Fix outside drawer runner (H) to part 5 using screws (D), as shown.

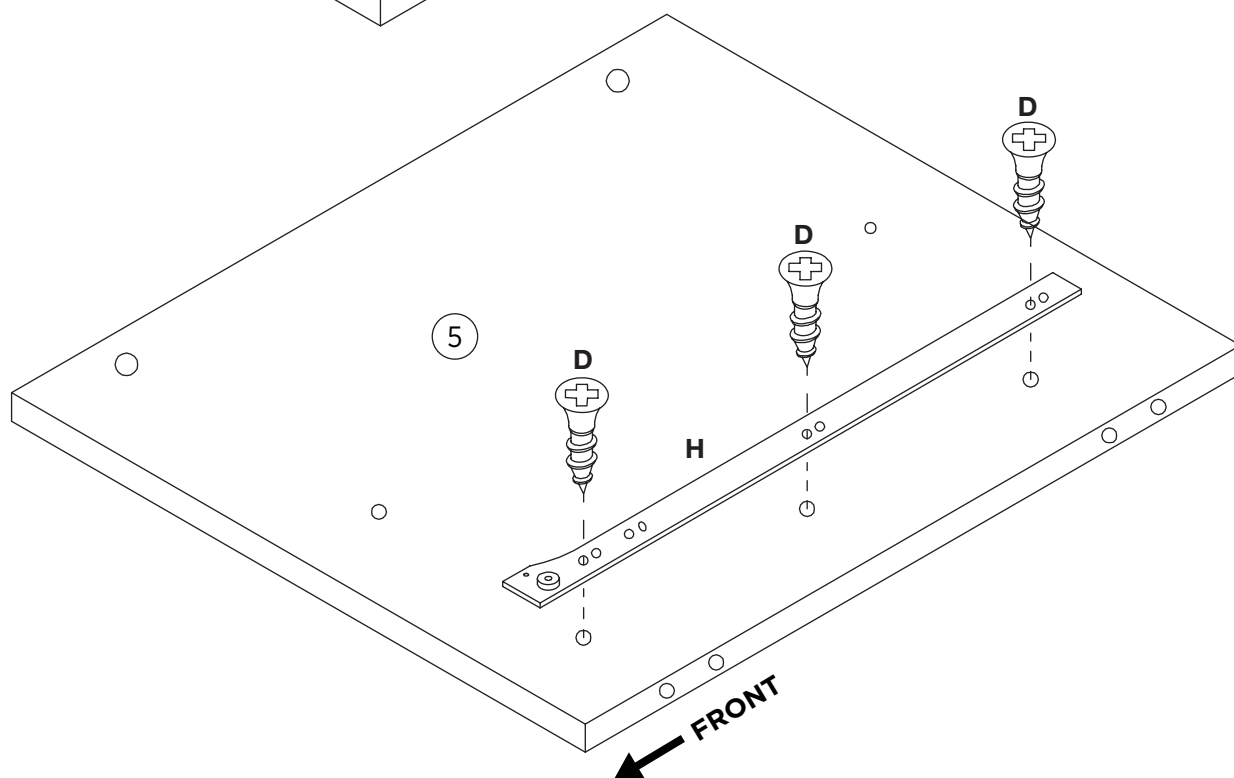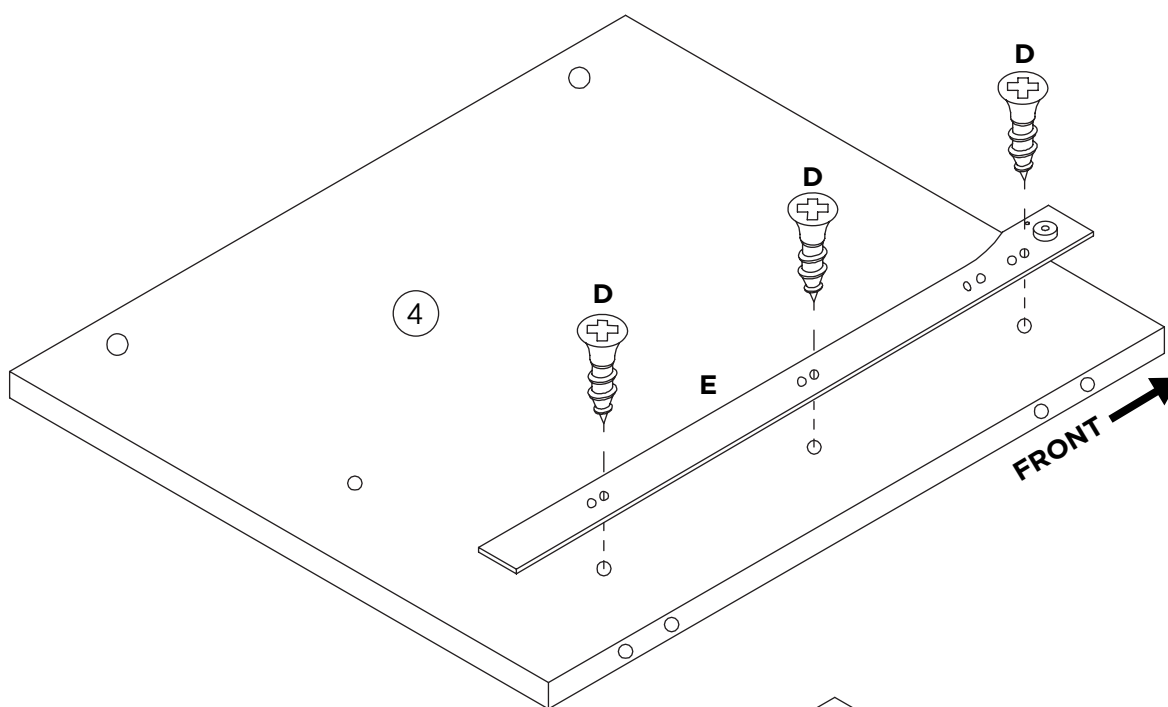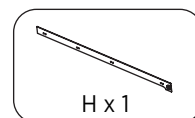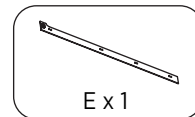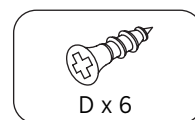

ASSEMBLY INSTRUCTIONS

STEP 3

 
 
Fix outside drawer runners (E) and (H) to part 7 using screws (D), as shown.

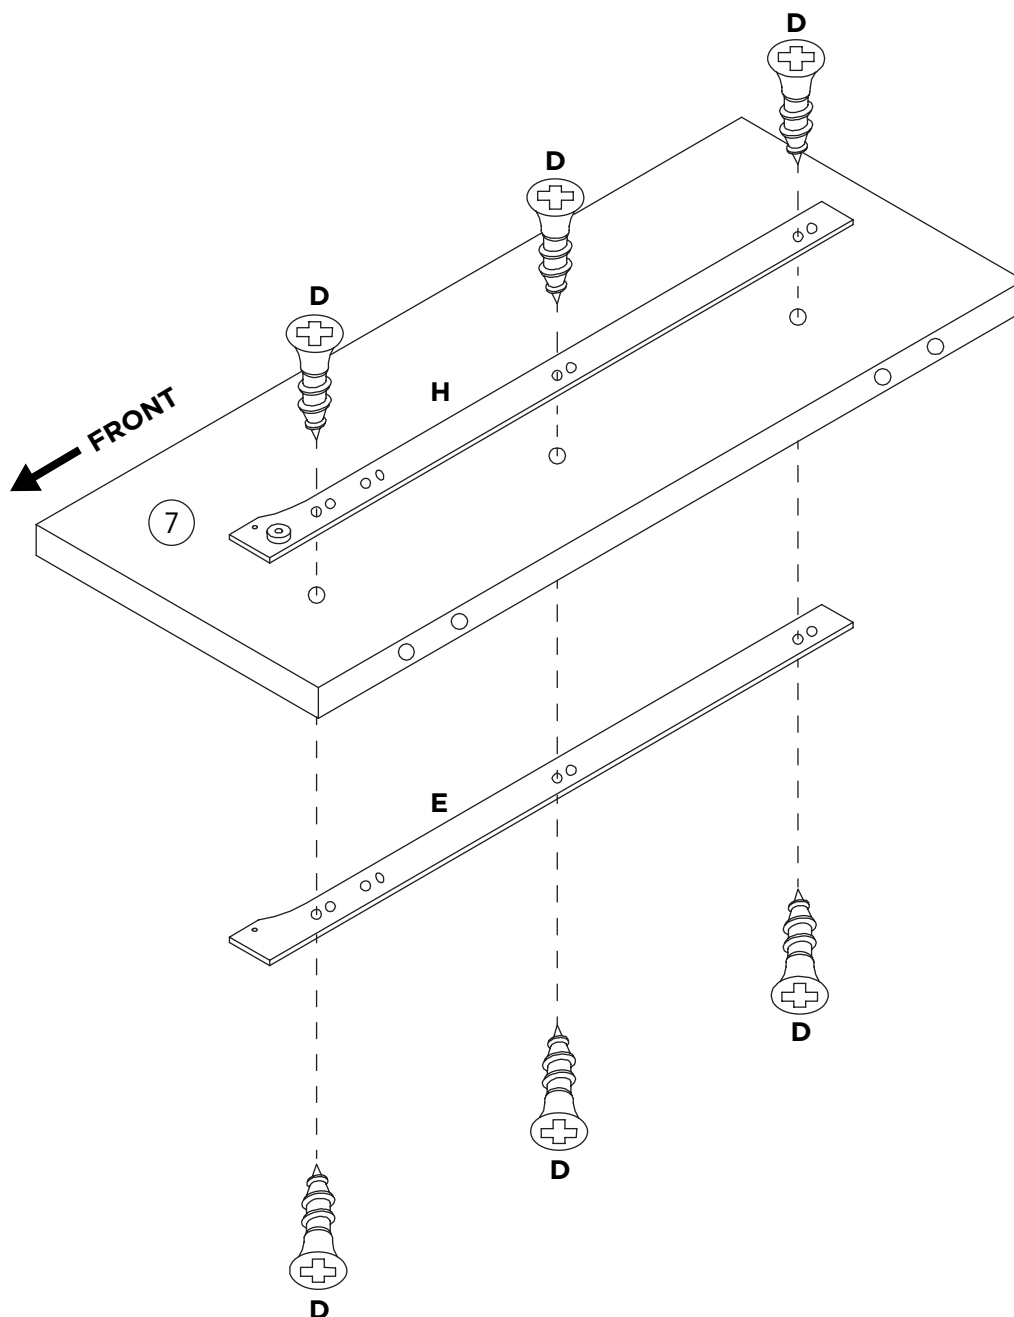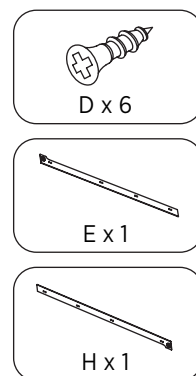

ASSEMBLY INSTRUCTIONS

STEP 4

  Insert long wooden dowels (N) through part 2 and attach parts 6 and 7, as shown.

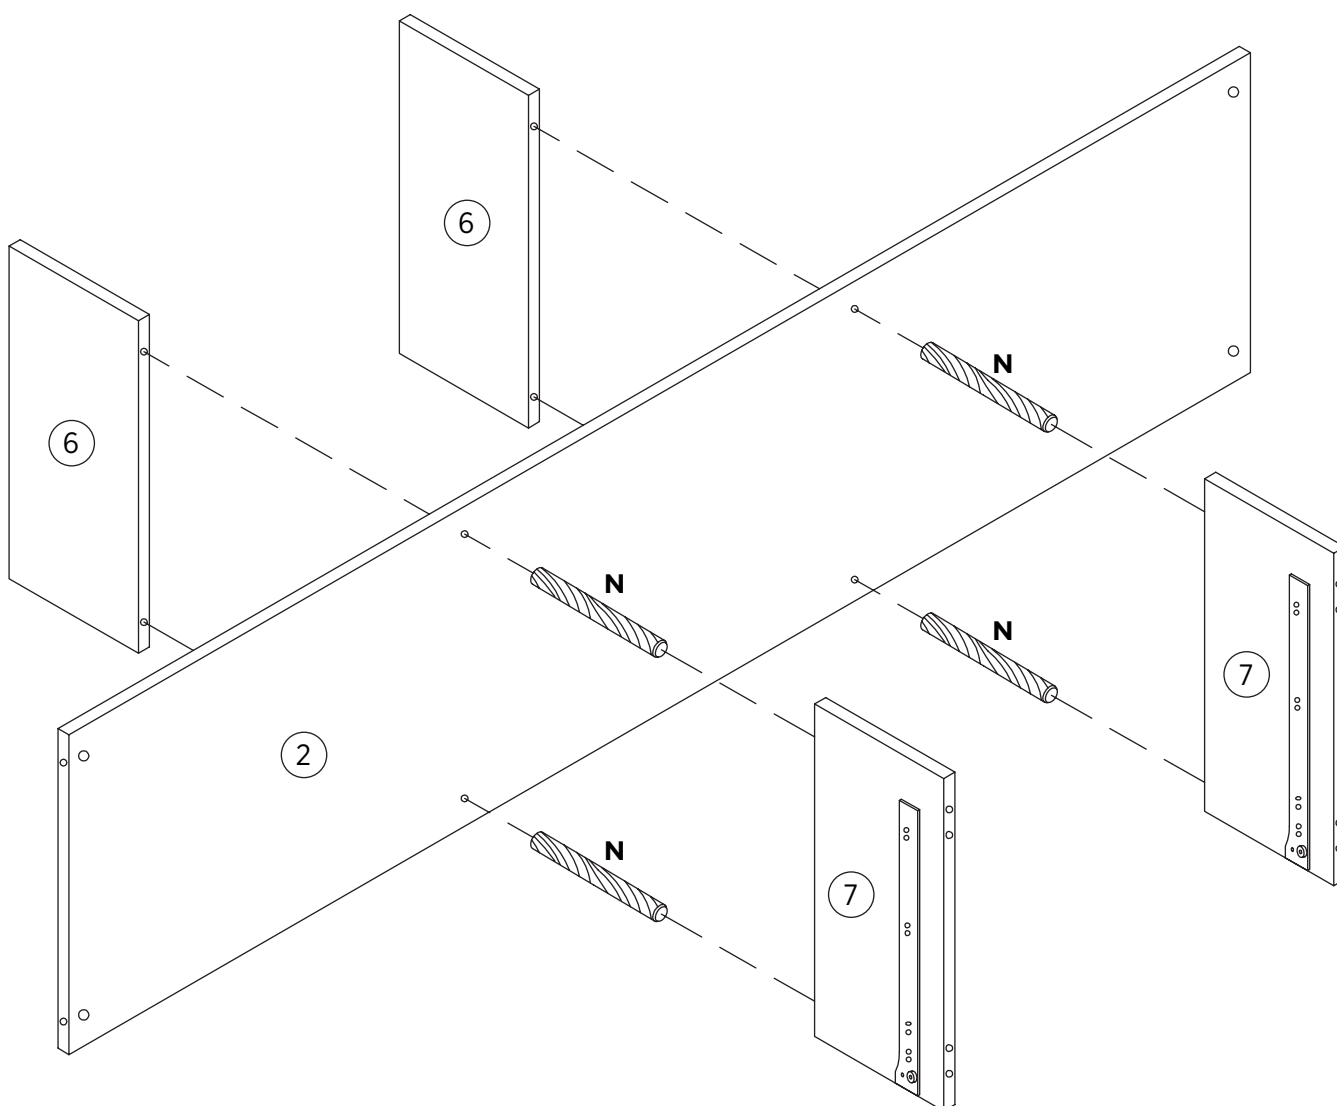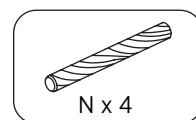

ASSEMBLY INSTRUCTIONS

 
 
STEP 5

Insert quickfit screws (B) into parts 4 and 5, as shown.

Insert cam locks (C) into part 2.

Fix parts 4 and 5 to part 2.

Turn cam locks clockwise to tighten.

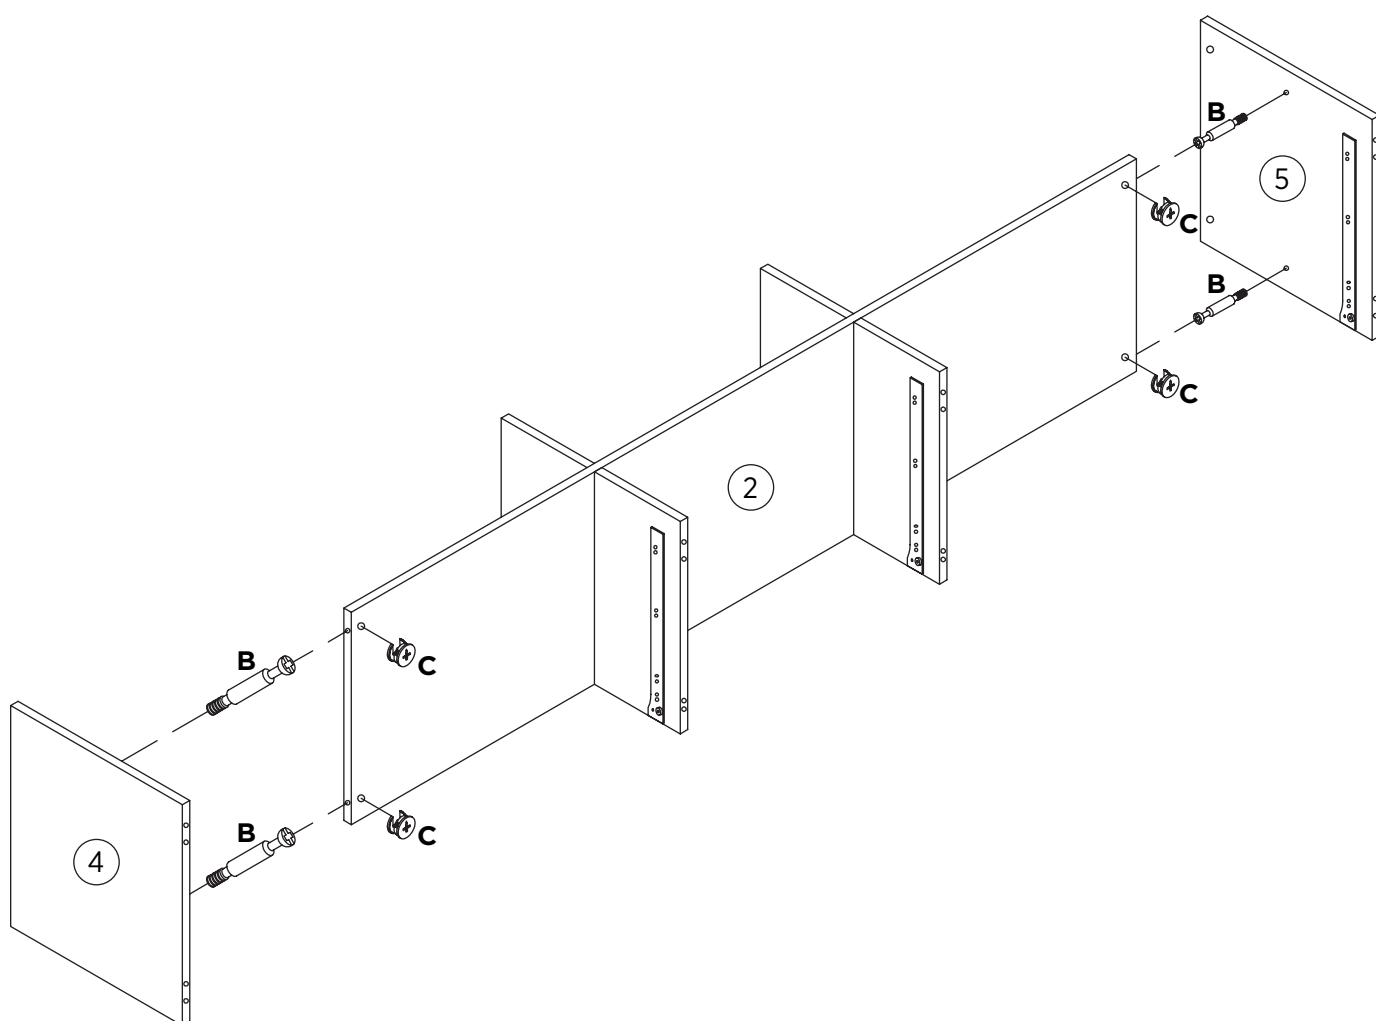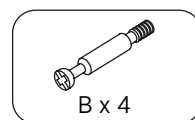

ASSEMBLY INSTRUCTIONS

STEP 6

 
Insert short wooden dowels (I) into parts 4, 5, 6 and 7, as shown.

Insert cam locks (C) into parts 4, 5 and 6.

Fix part 3 to parts 4, 5 and 7 using screws (A).

Fix part 1 to parts 4, 5 and 6.

Turn cam locks clockwise to tighten.

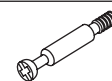


A x 8



C x 8



 I x 16

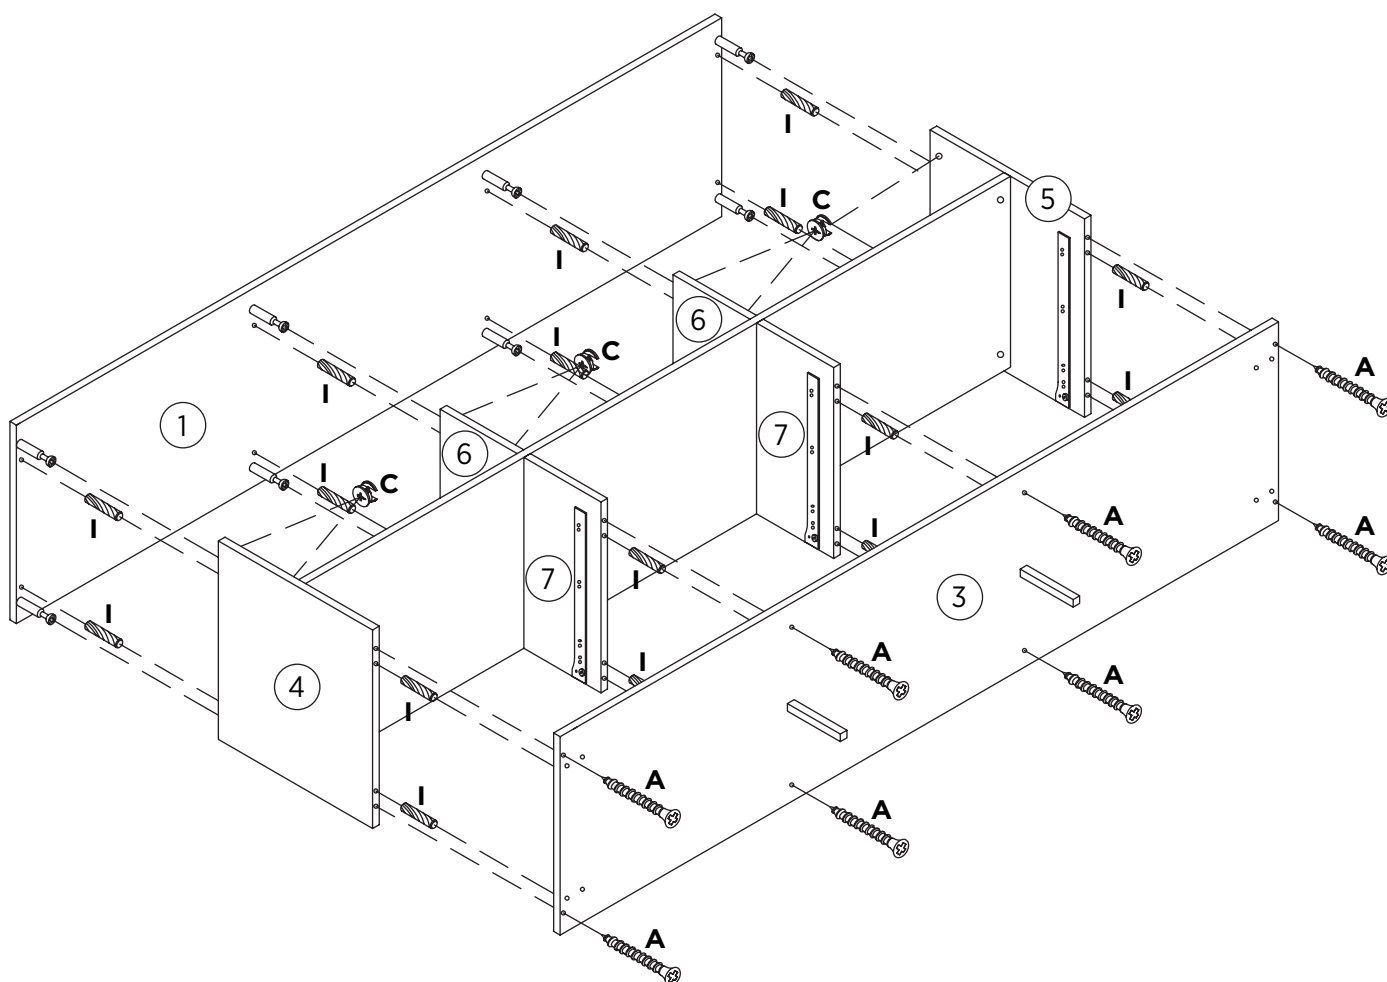






ASSEMBLY INSTRUCTIONS

STEP 7

Fix back panel 9 to rear of unit using nails (J), as shown.

Fix parts 10 to part 3 using bolts (K) and allen key (O).

     Stick pads (M) onto parts 10.

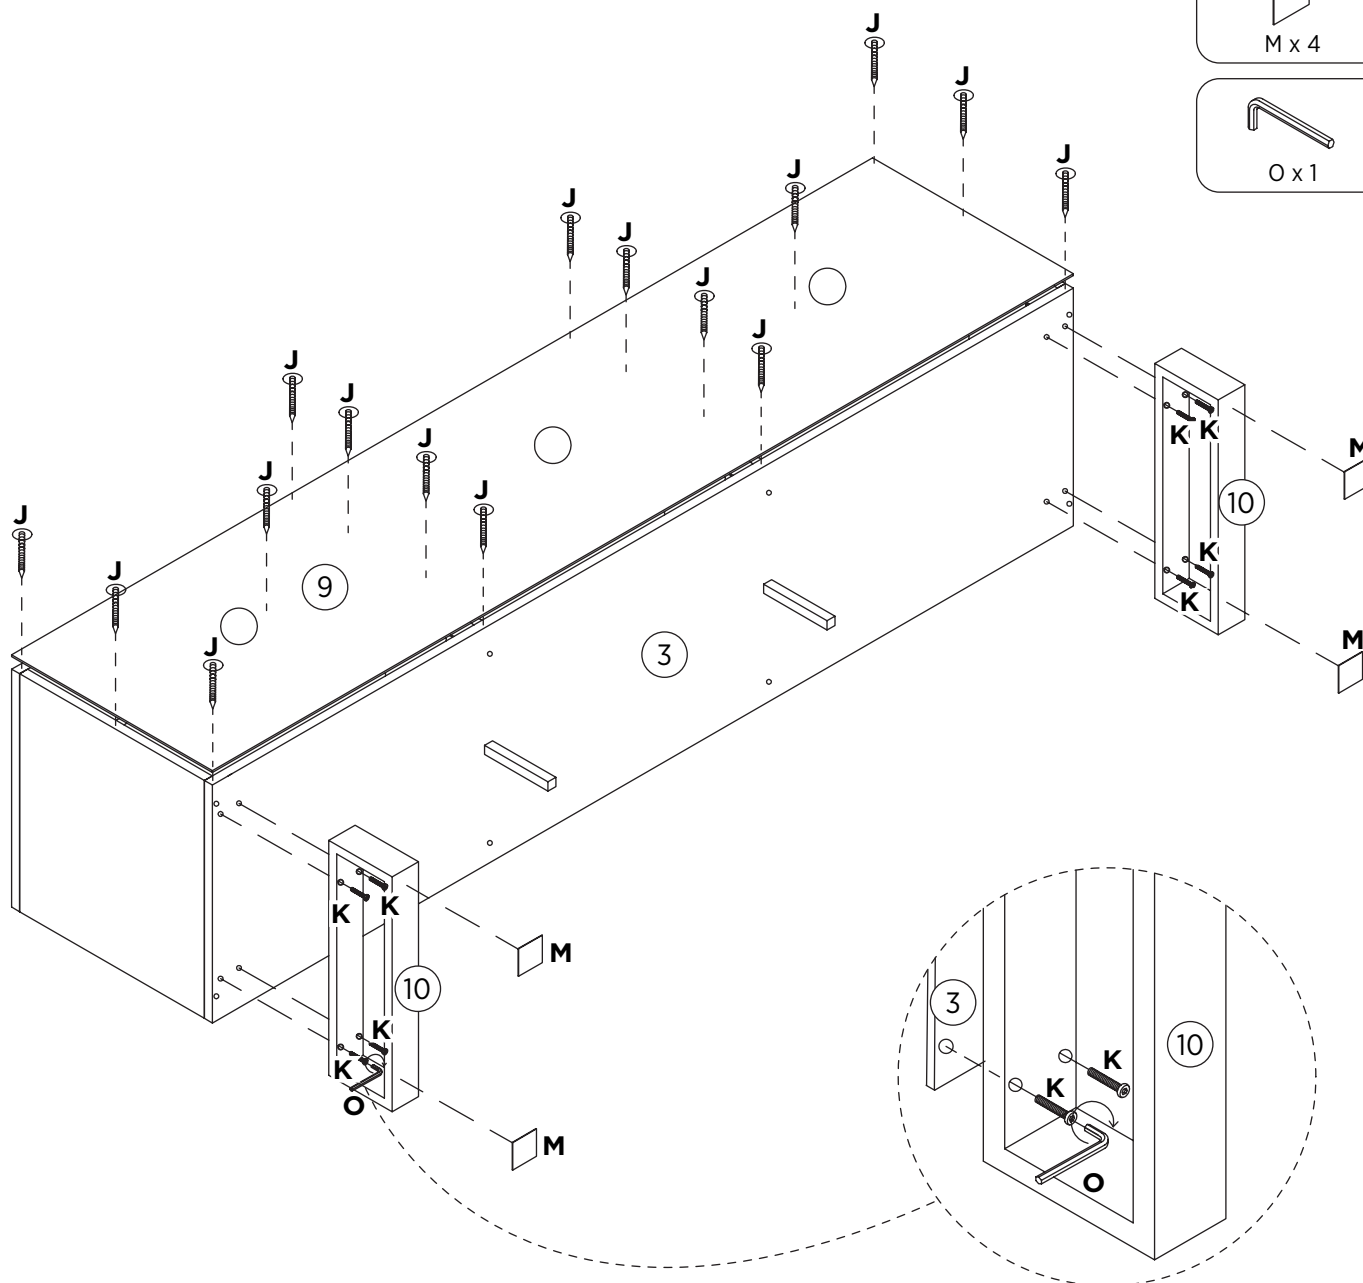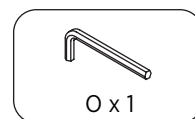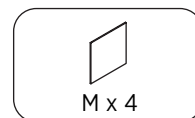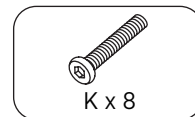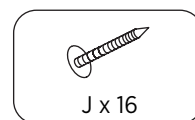

ASSEMBLY INSTRUCTIONS

 
 
STEP 8

Insert quick fit screws (B) into parts 11, 12 and 13, as shown.

Insert cam locks (C) into parts 14 and 15.

Fix parts 14 and 15 to parts 11,12 and 13.

Turn cam locks clockwise to tighten.

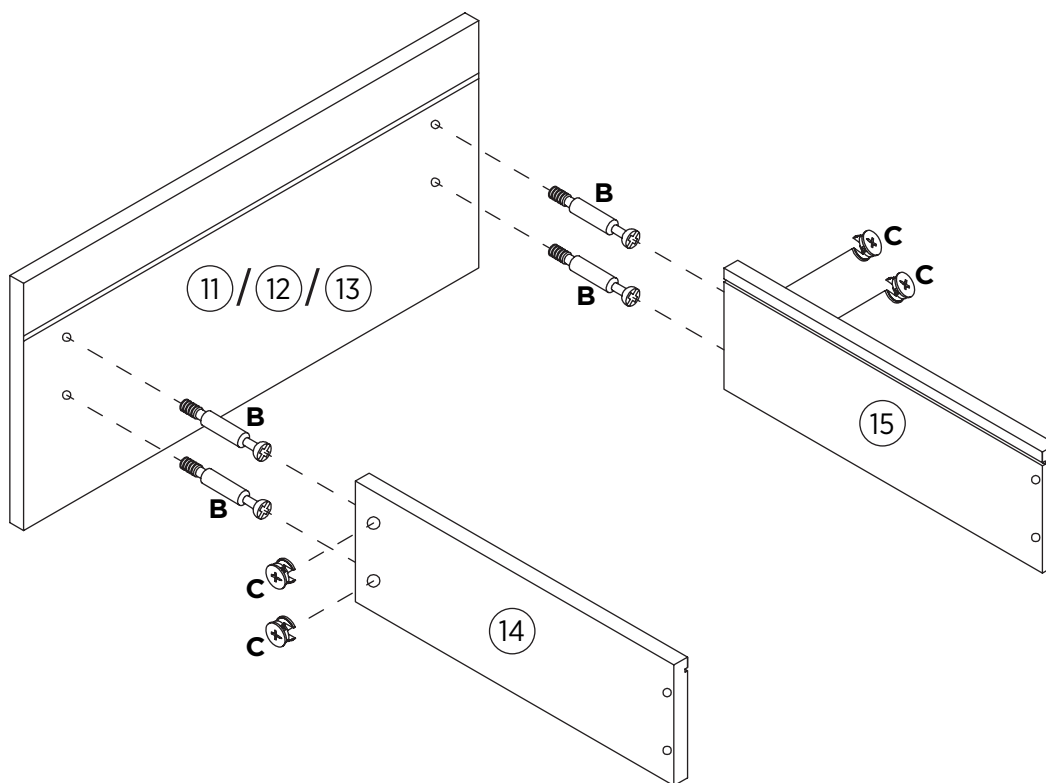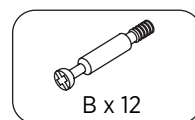


x3

ASSEMBLY INSTRUCTIONS

STEP 9

 Insert part 16 into grooves of parts 11, 12, 13, 14 and 15, as shown.


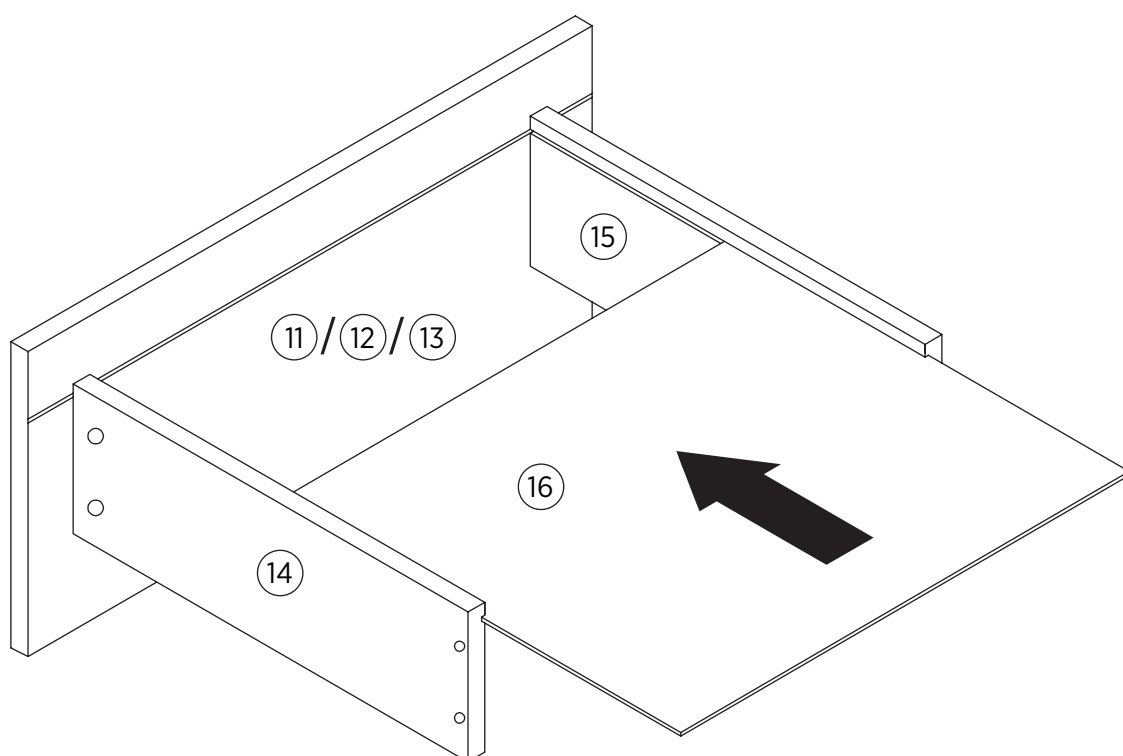


x3

ASSEMBLY INSTRUCTIONS

STEP 10

  Fix part 17 to parts 14 and 15 using screws (L), as shown.

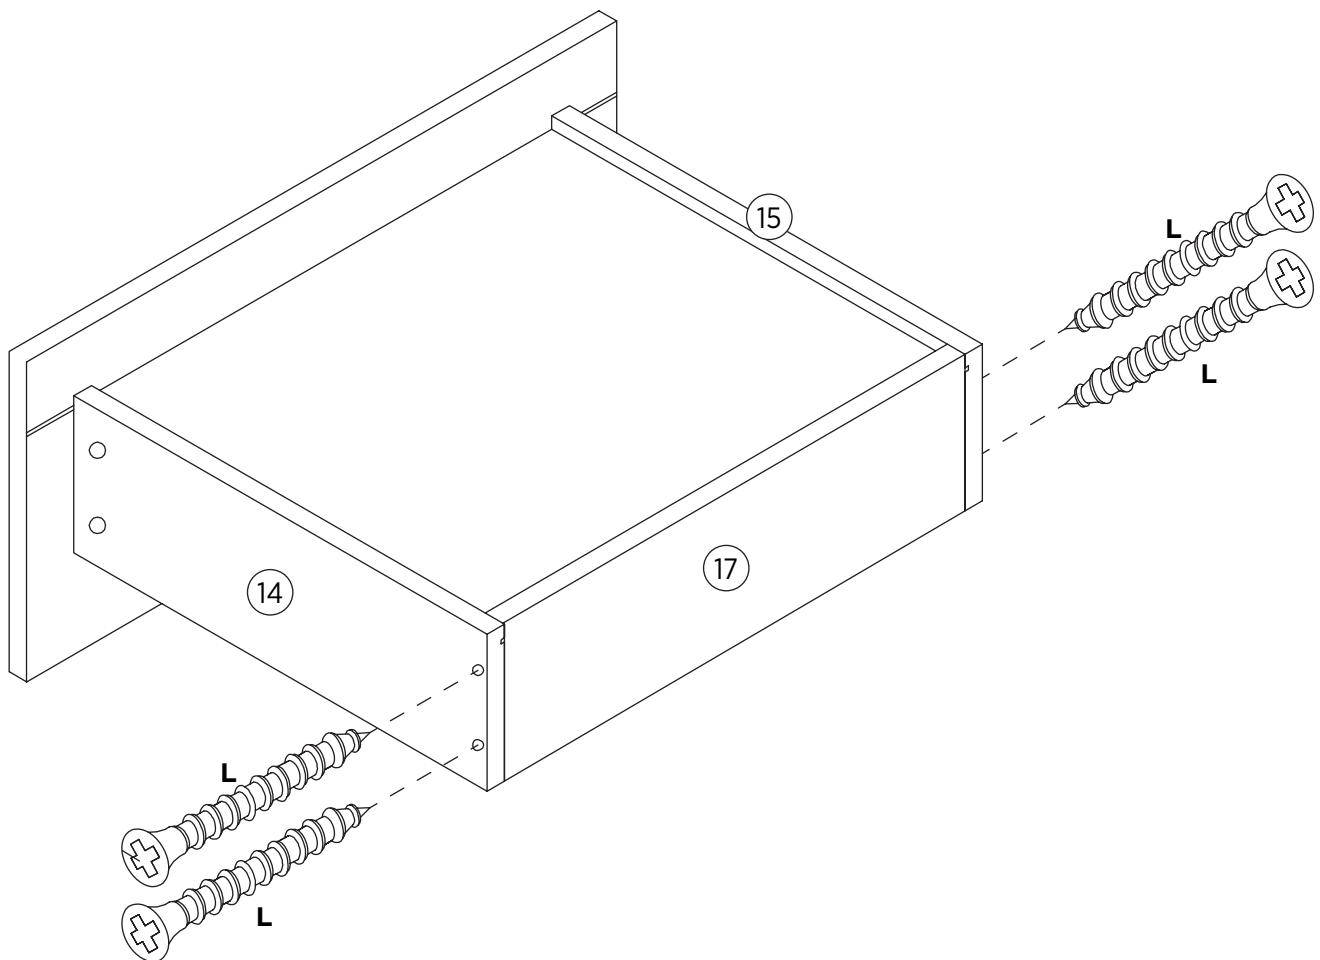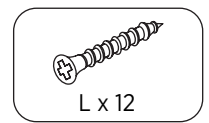

x3

ASSEMBLY INSTRUCTIONS

STEP 11

 
Fix inner drawer runners (F) and (G) to parts 14 and 15 using screws (D), as shown.




D x 18



F x 3

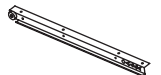

G x 3

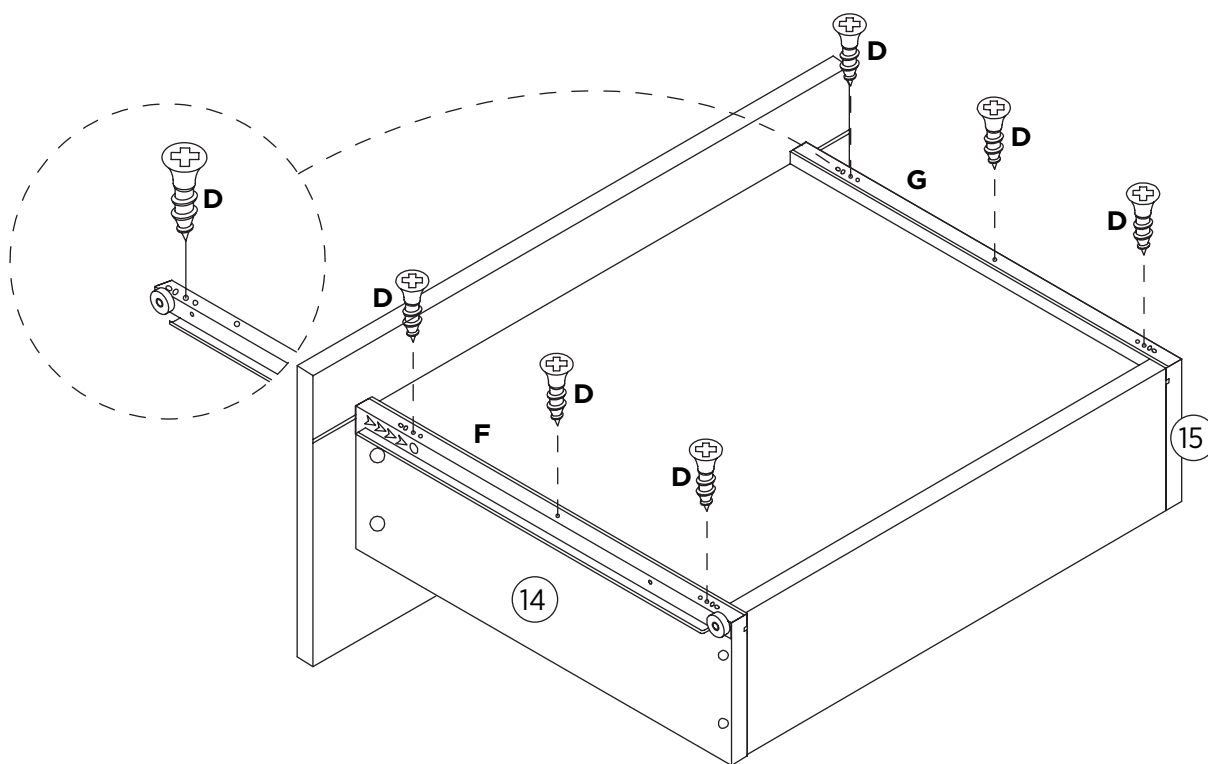 


x3

ASSEMBLY INSTRUCTIONS

STEP 12

 Insert drawers into assembled unit, as shown.

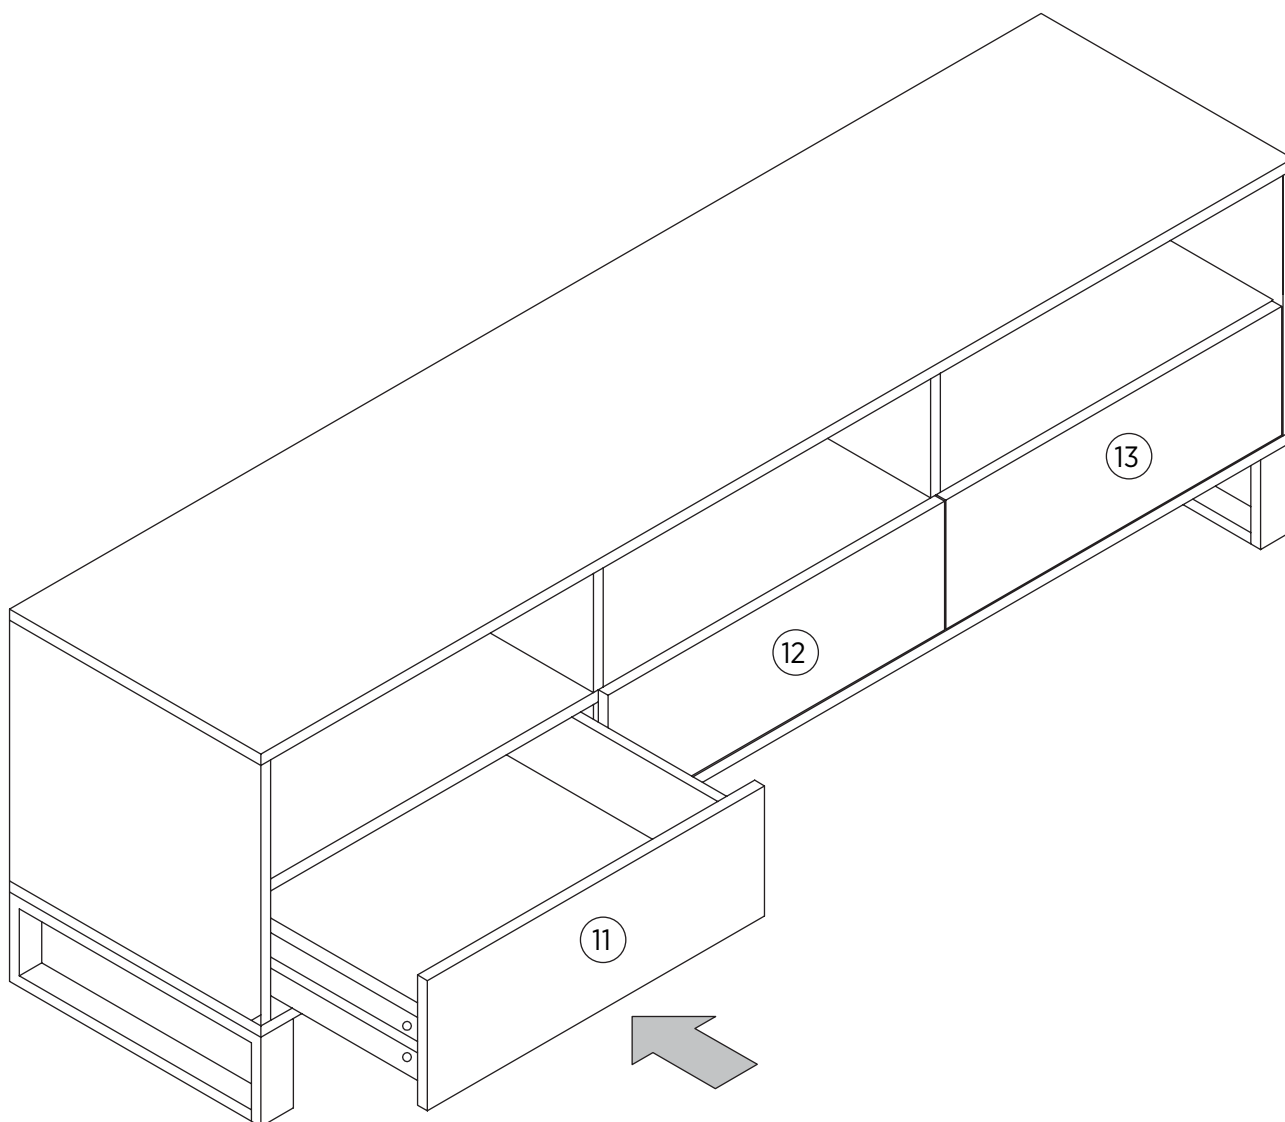

Please note: the maximum recommended weight is 10kg for top and 5kg for shelves.

Your TV Unit is ready for use.