 


TV UNIT 2 DOORS

ASSEMBLY INSTRUCTIONS

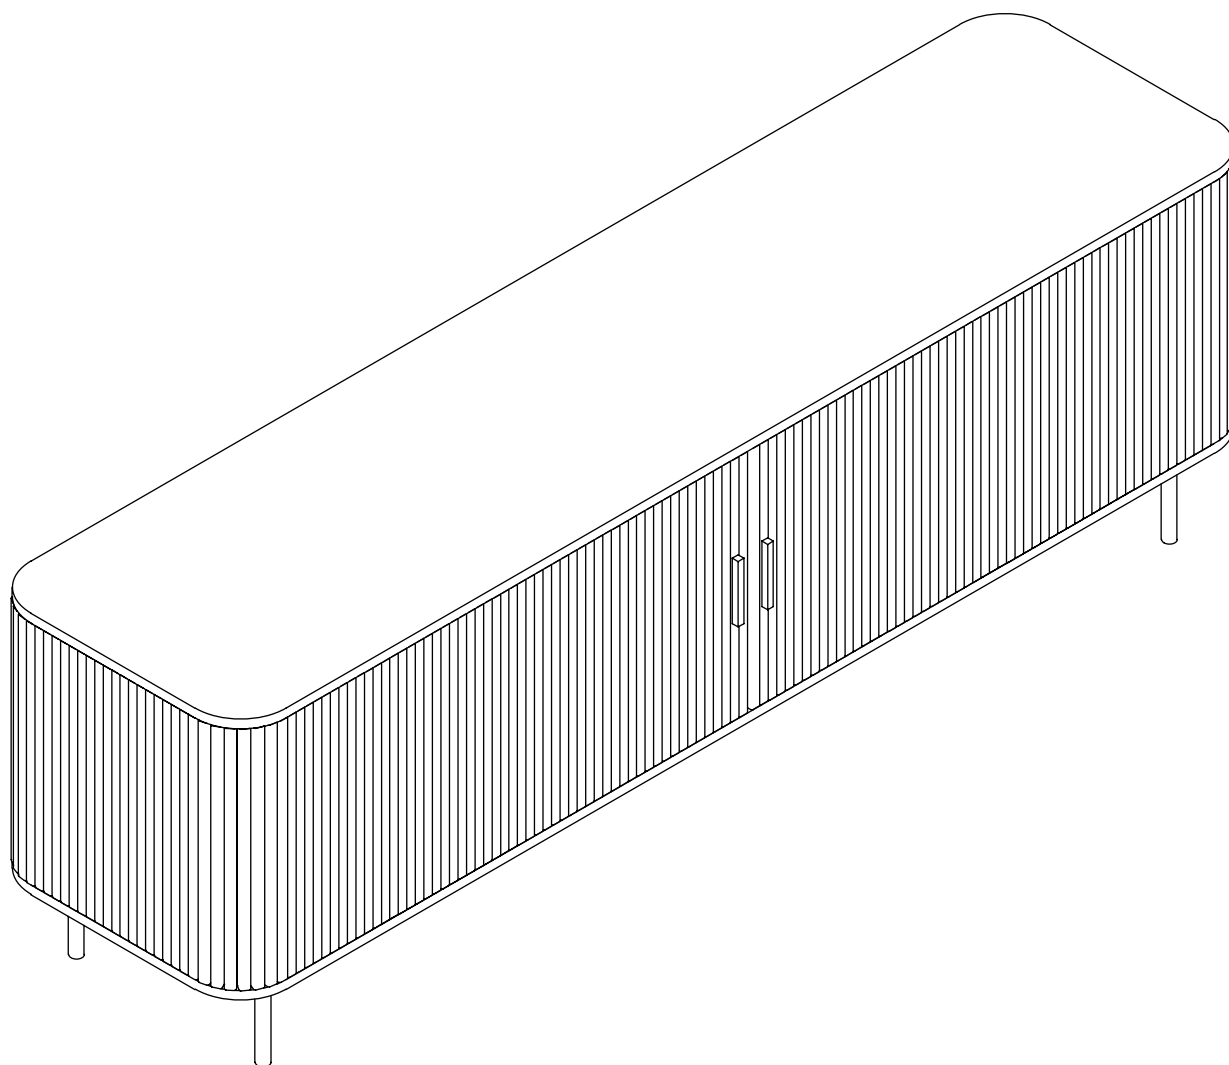

TIPS BEFORE YOU START

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver and hammer
- ✓ 1 x adults required
- ✓ 1m x 1m assembly space required
- ✓ 1 hour assembly time approx.



USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

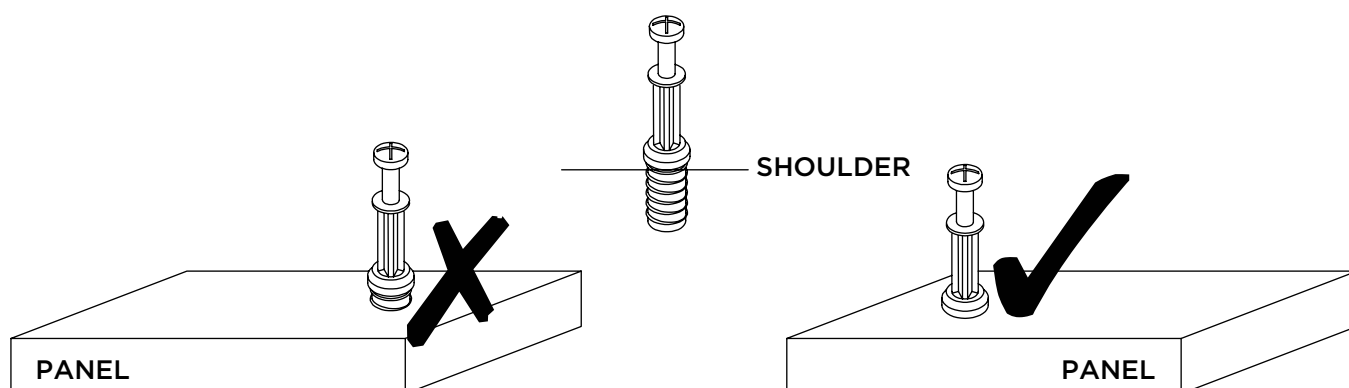


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

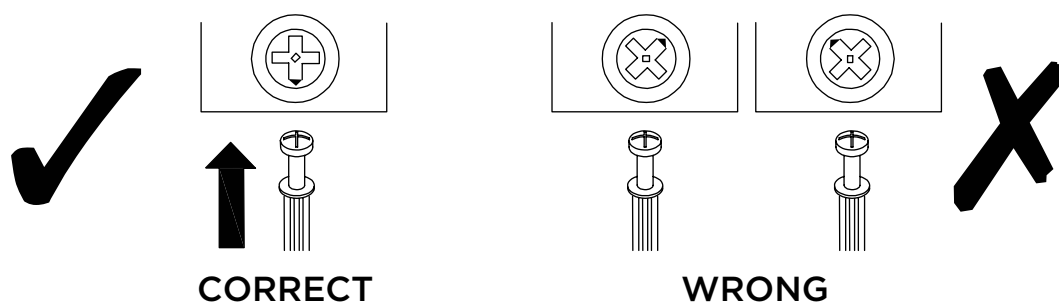

 
Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

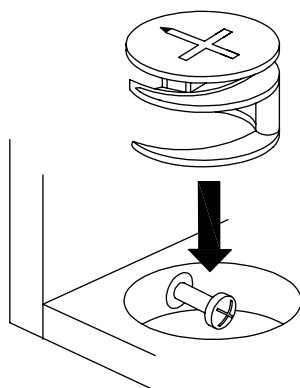


Turn cam lock clockwise to tighten.

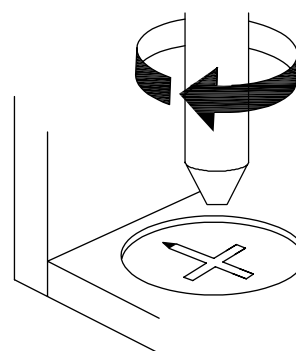 


HARDWARE LIST

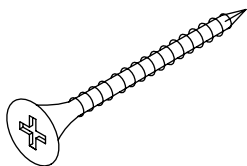 


15 x A
Screw

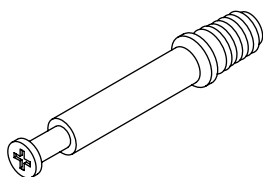 

22 x B
Quickfit Screw

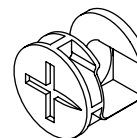 


22 x C
Cam Lock

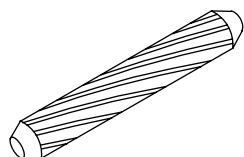 


32 x D
Wooden Dowel



 2 x E
Handle




4 x F
Screw

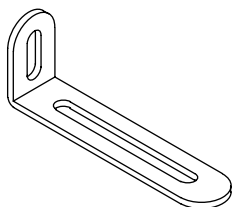 


1 x G
Wall Bracket



 
25 x H
Screw



16 x I
Screw














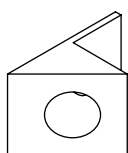 


16 x J
Wedge

 

1 x K
Wall Plug

            
 
 
PARTS LIST

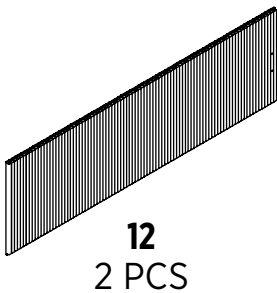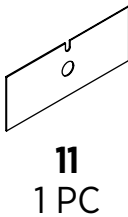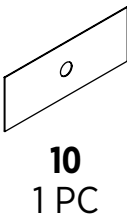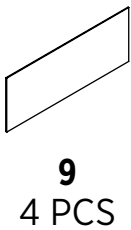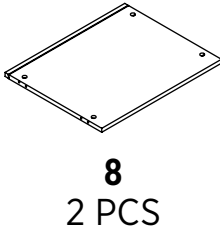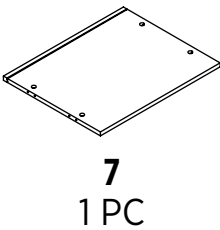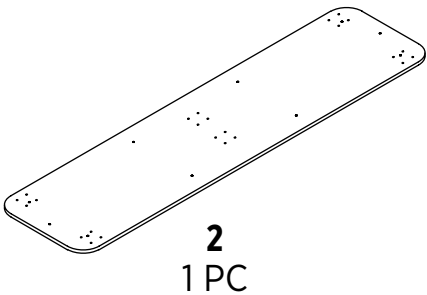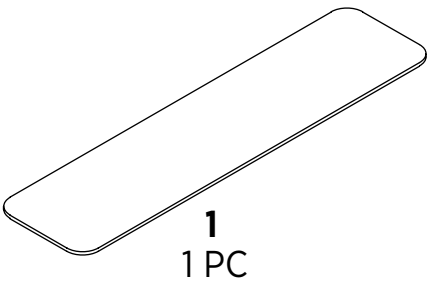

ASSEMBLY INSTRUCTIONS

STEP 1

  
 
Insert quickfit screws (B) to parts 3 and 4, as shown.

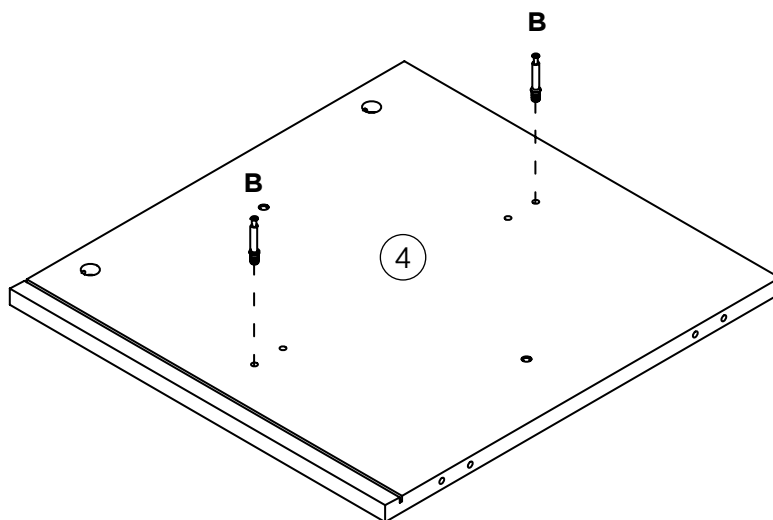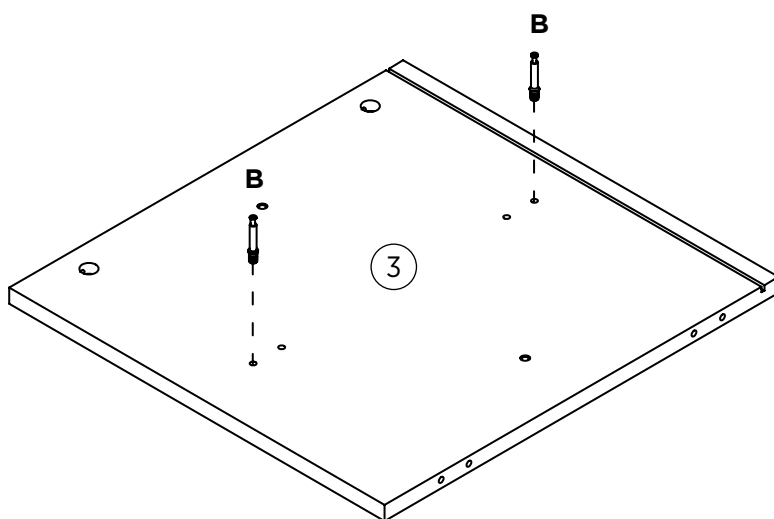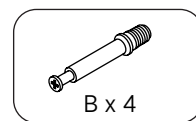

ASSEMBLY INSTRUCTIONS

STEP 2

 
 
Insert quickfit screws (B) to part 5, as shown.

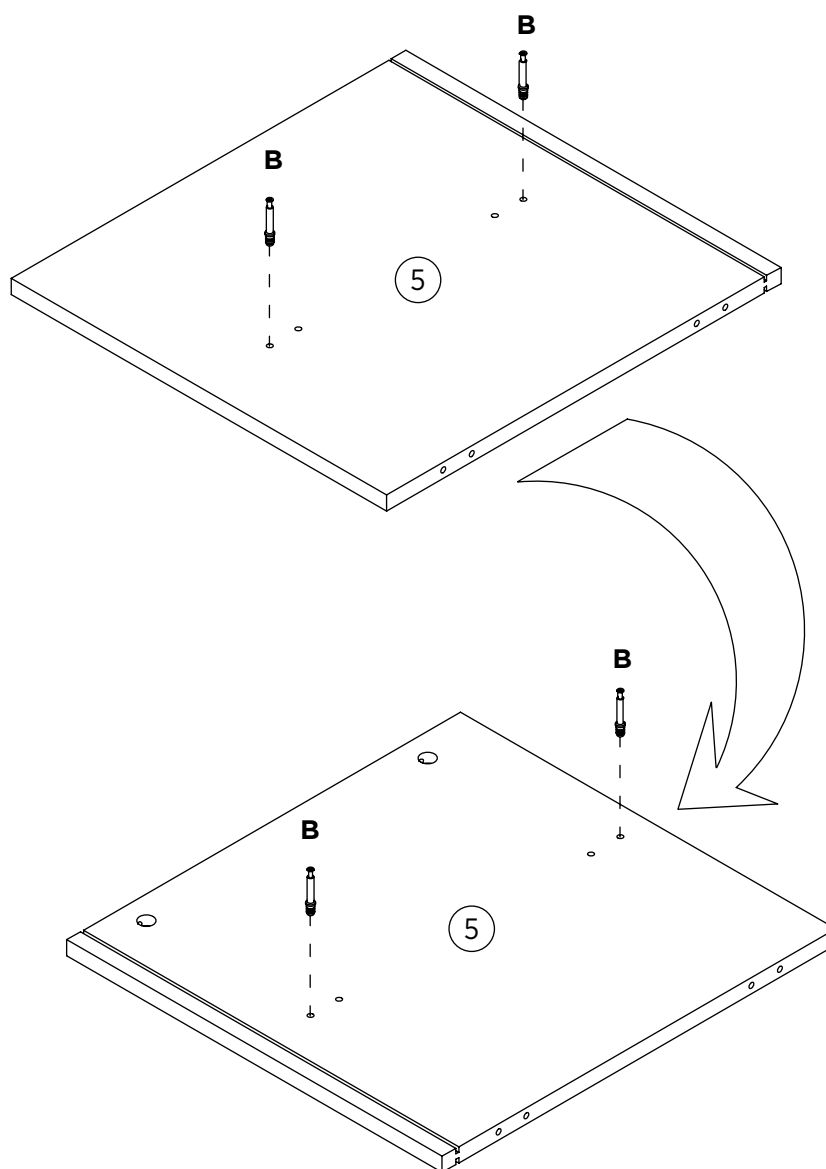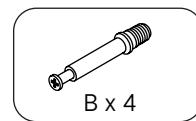

ASSEMBLY INSTRUCTIONS

STEP 3

  Insert quickfit screws (B) to part 6, as shown.

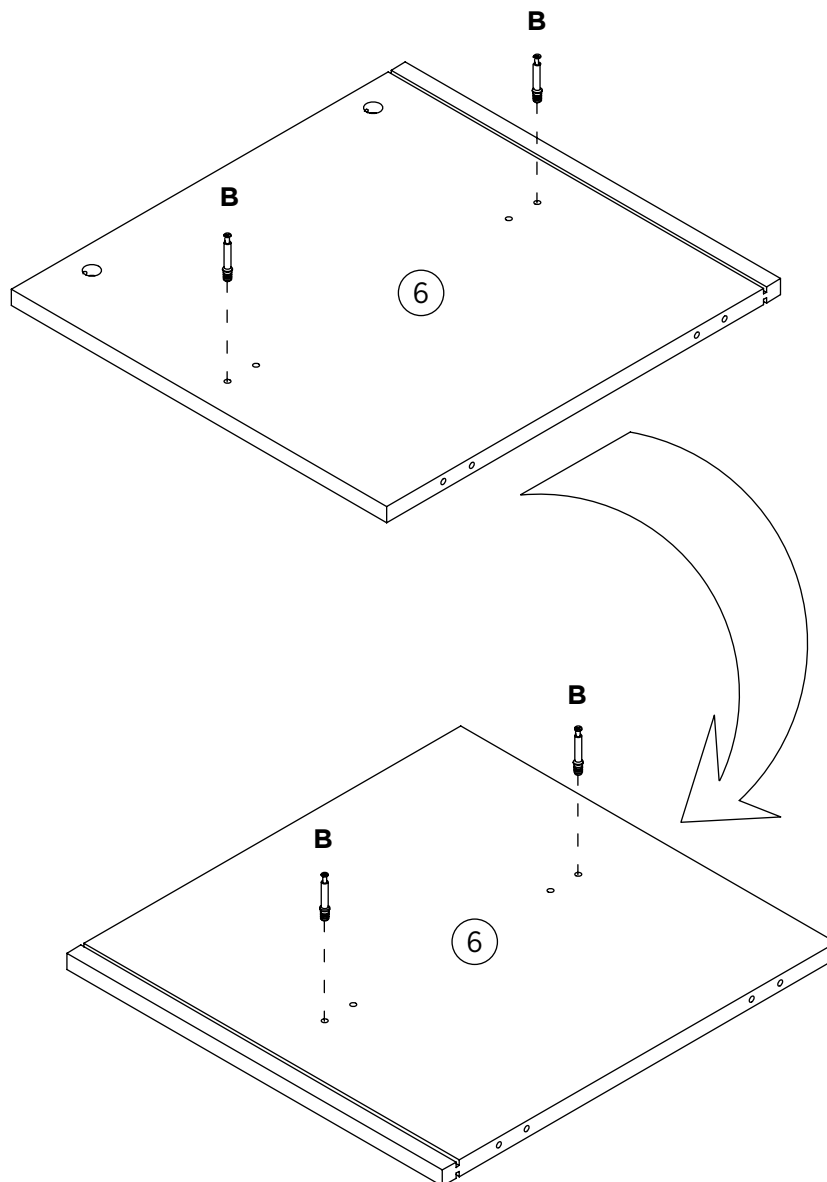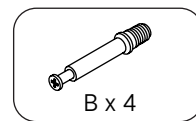

ASSEMBLY INSTRUCTIONS

STEP 4

Insert wooden dowels (D) to parts 15.

Fix part 3 to part 15 using screws (A).

Insert cam locks (C) and wooden dowel (D) to part 8.

Attach parts 3 and 5 to part 8, as shown.

Turn cam locks clockwise to tighten.



 
A x 2



C x 4



D x 6

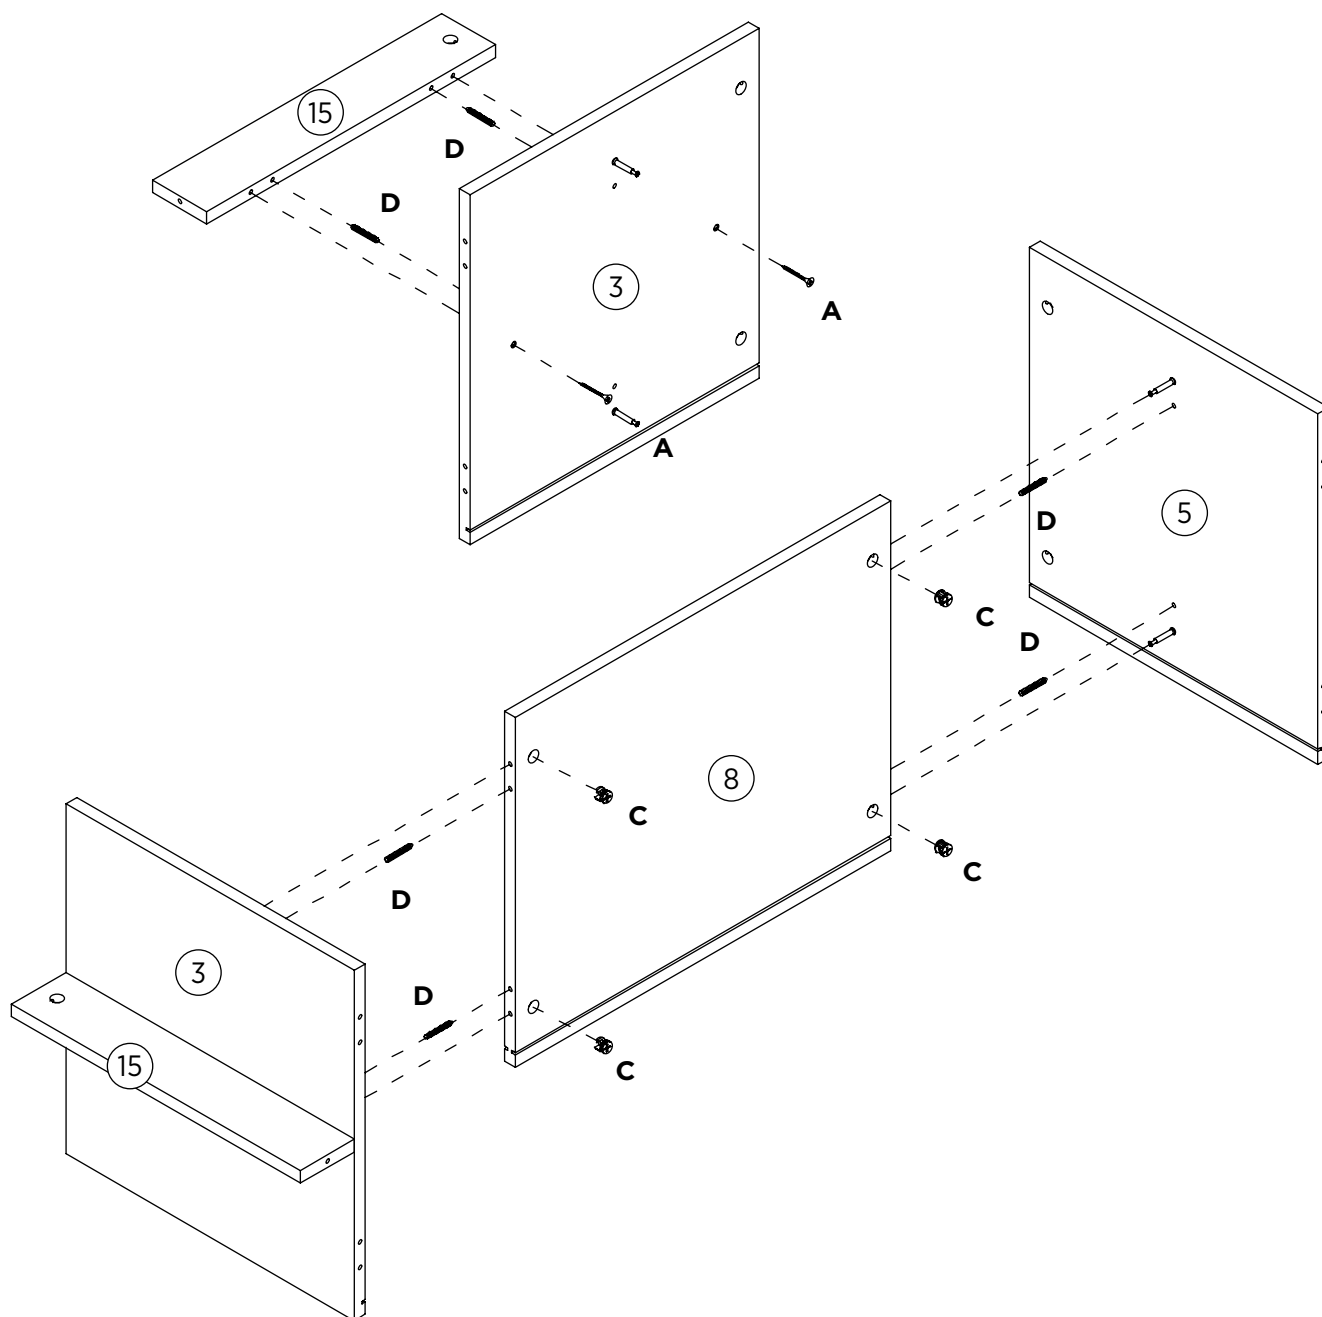

ASSEMBLY INSTRUCTIONS

STEP 5

 
 
Insert wooden dowels (D) to parts 16.

Fix part 4 to part 16 using screws (A).

Insert cam locks (C) and wooden dowel (D) to part 8..

Attach parts 4 and 6 to part 8, as shown.

Turn cam locks clockwise to tighten.

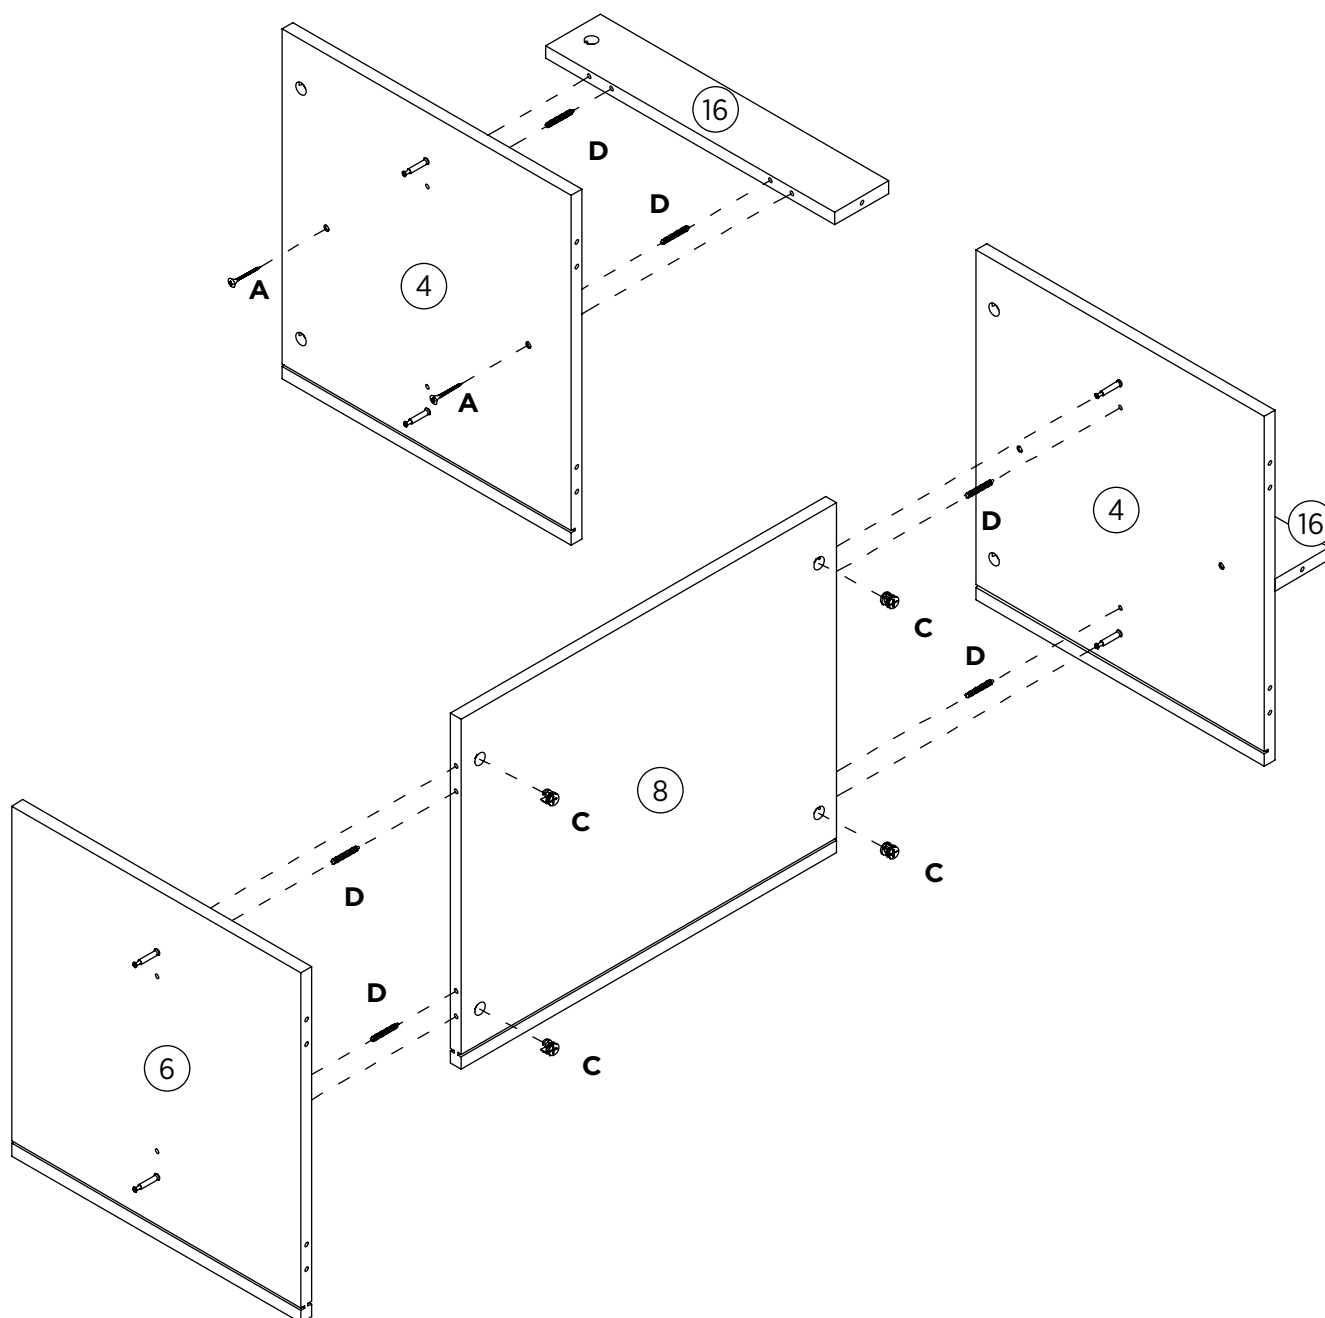


ASSEMBLY INSTRUCTIONS

STEP 6

Insert wooden dowels (D) and cam lock (C) to part 7.

Attach part 7 to part 5, as shown.

 Turn cam locks clockwise to tighten.

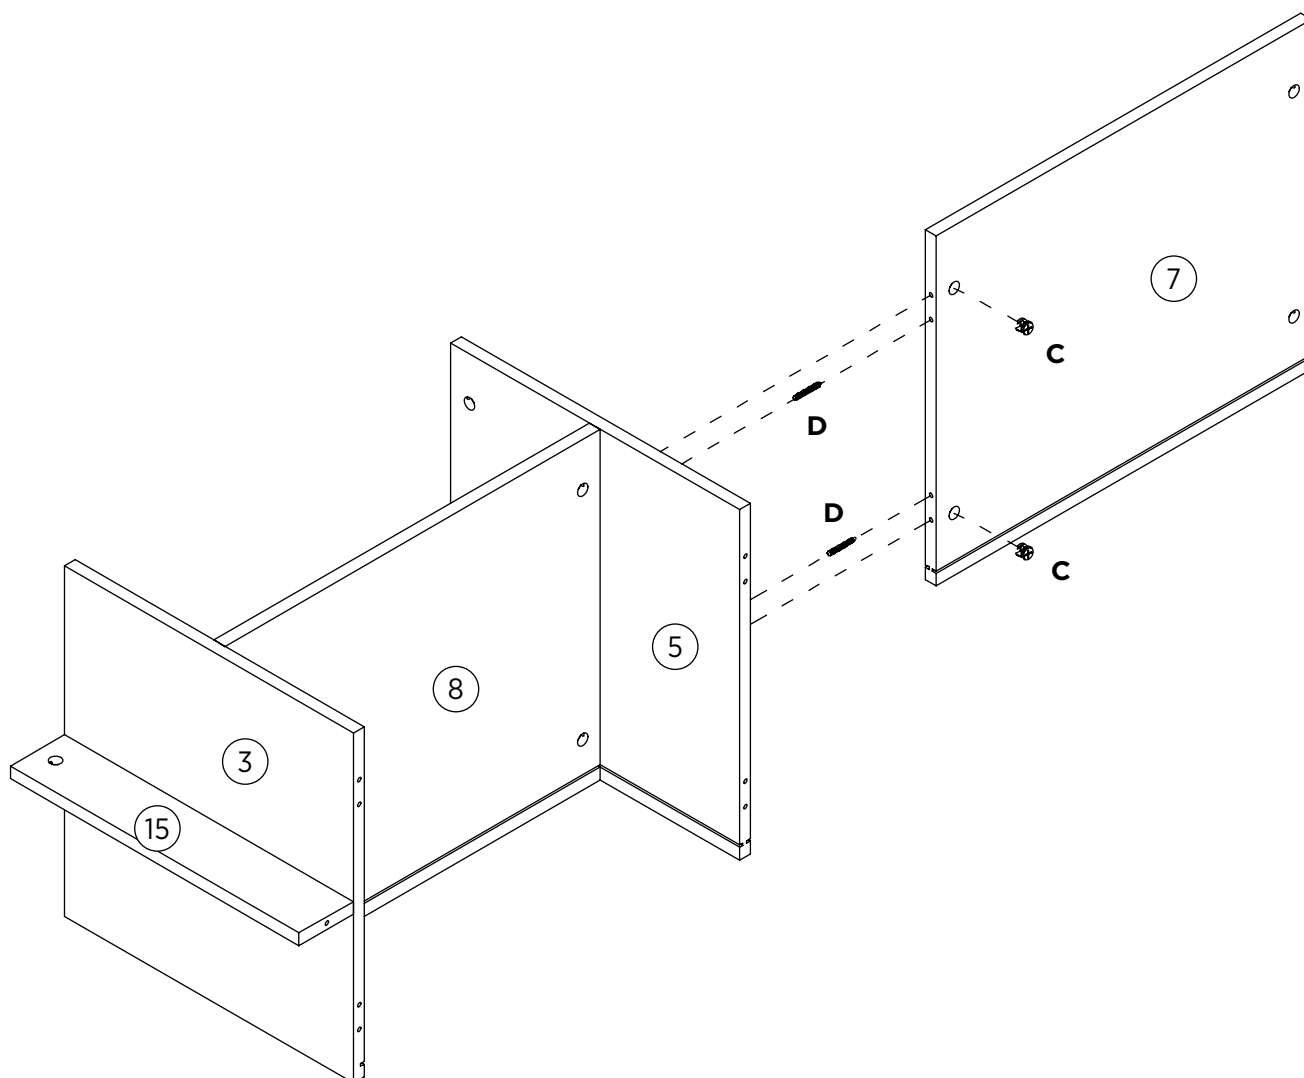

ASSEMBLY INSTRUCTIONS

STEP 7

Insert wooden dowels (D) and cam lock (C) to part 7.

Attach part 6 to part 7, as shown.

 
Turn cam locks clockwise to tighten.



C x 2



D x 2

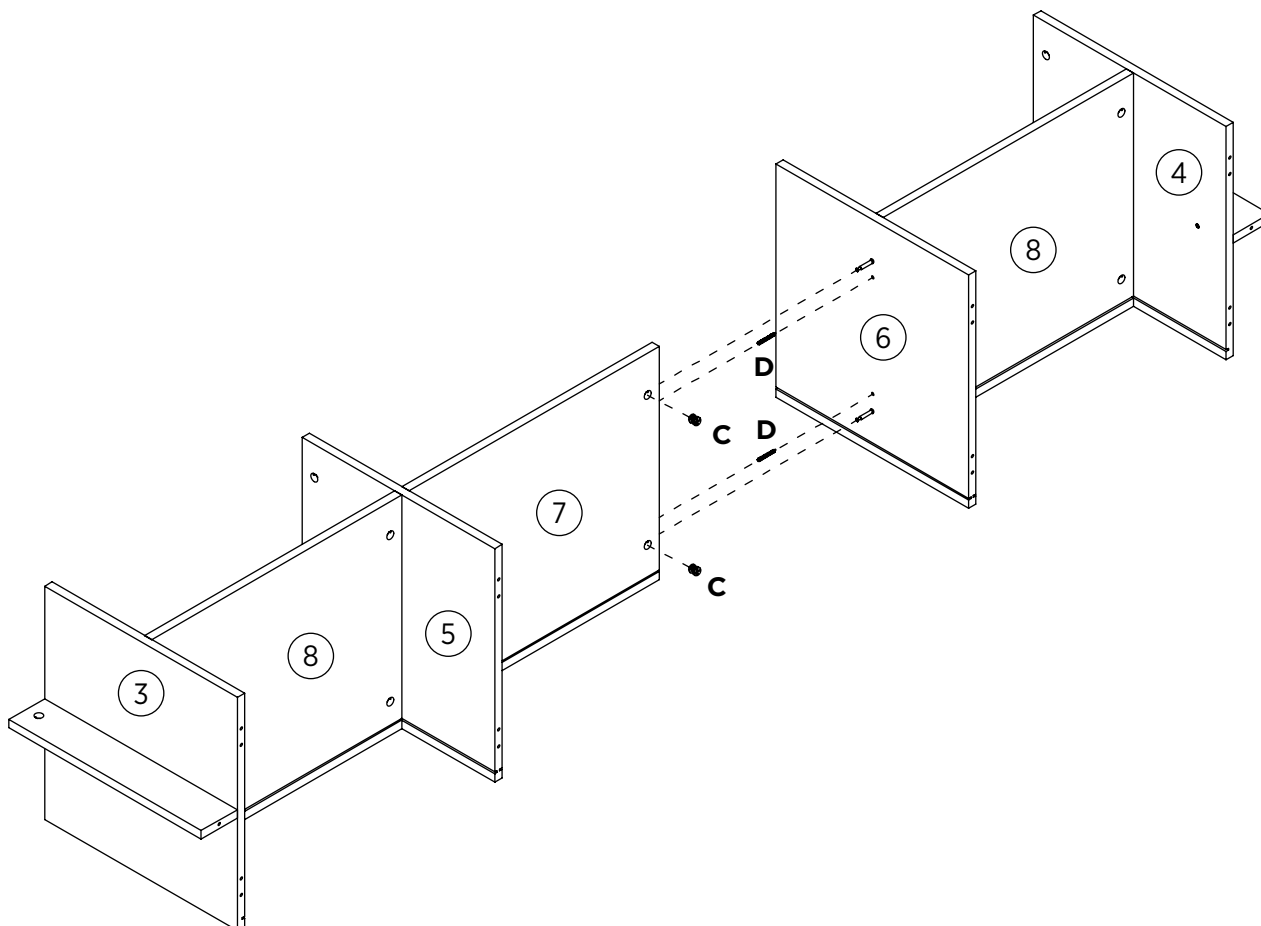


ASSEMBLY INSTRUCTIONS

STEP 8

Slide part 9 between grooves of parts 4, 6 and 8.

Slide part 9 between grooves of parts 3, 5 and 8.

 Slide part 11 between grooves of parts 5, 6 and 7, as shown.

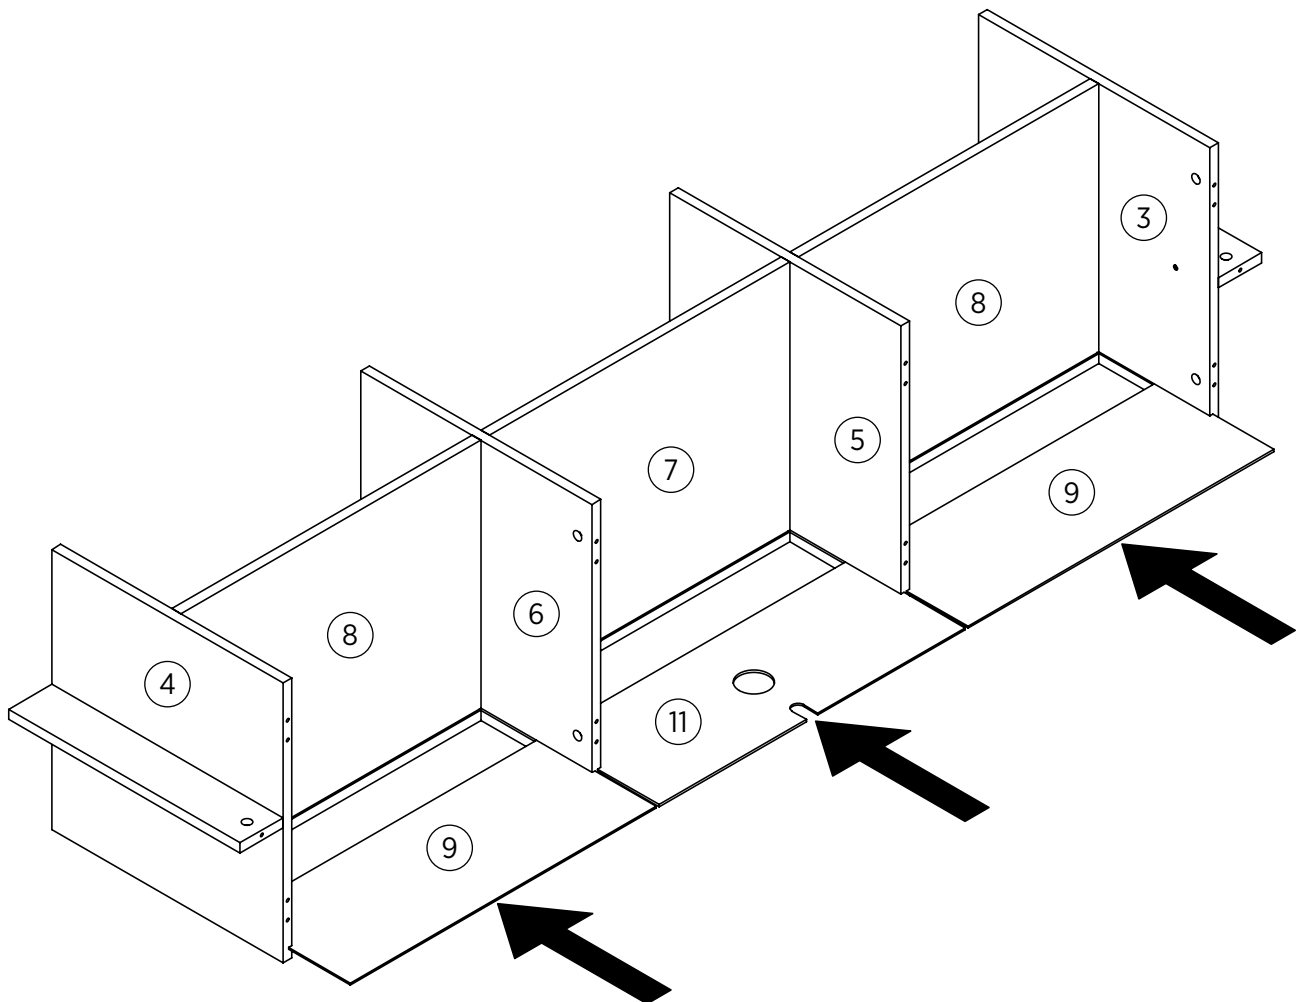


ASSEMBLY INSTRUCTIONS

STEP 9

Insert quickfit screws (B) to part 1.

 Fix wall bracket (G) to part 1 using screw (H), as shown.




B x 10



G x 1



 H x 1

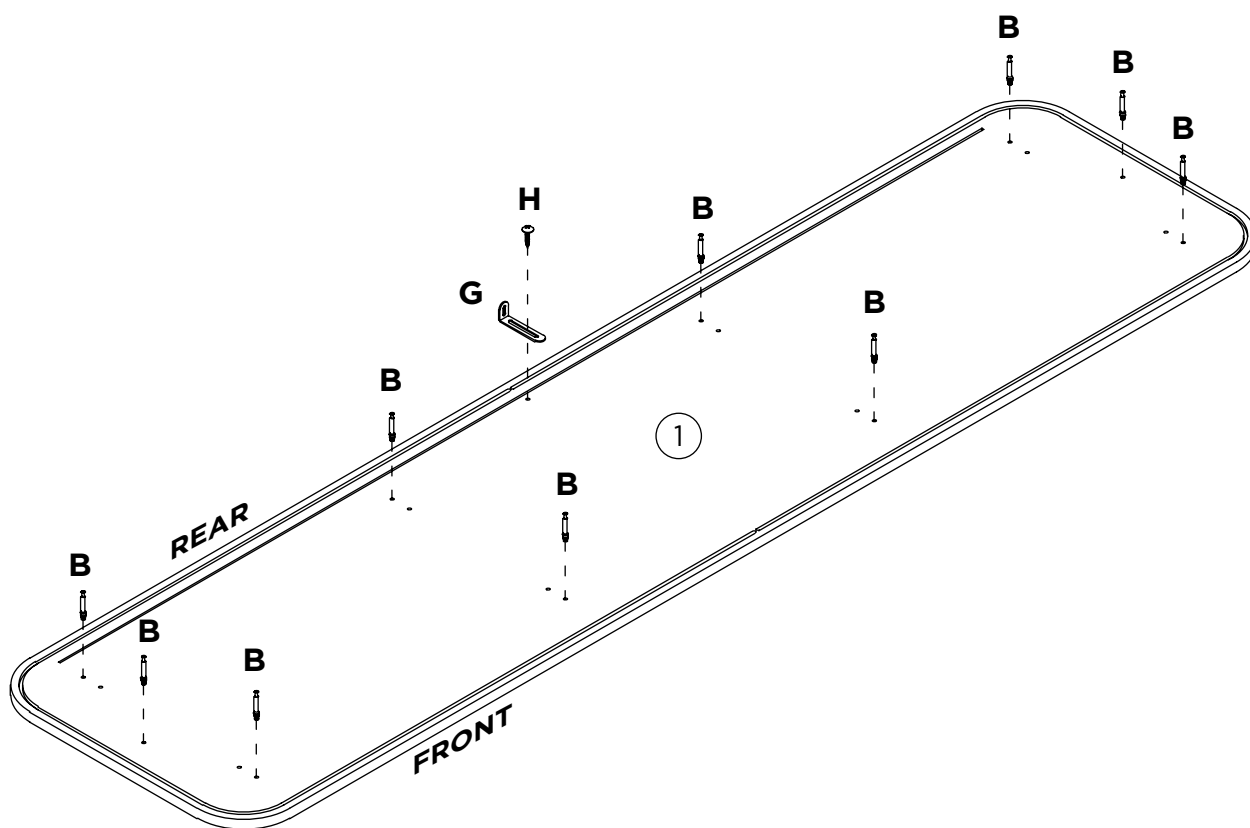

ASSEMBLY INSTRUCTIONS

STEP 10

Insert wooden dowels (D) to parts 3, 4, 5 and 6.

Insert cam locks (C) to parts 3, 4, 5, 6 and 15, 16.

Fix part 1 to parts 3, 4, 5, 6 and 15, 16, as shown.

 
Turn cam locks clockwise to tighten.



C x 10



D x 8

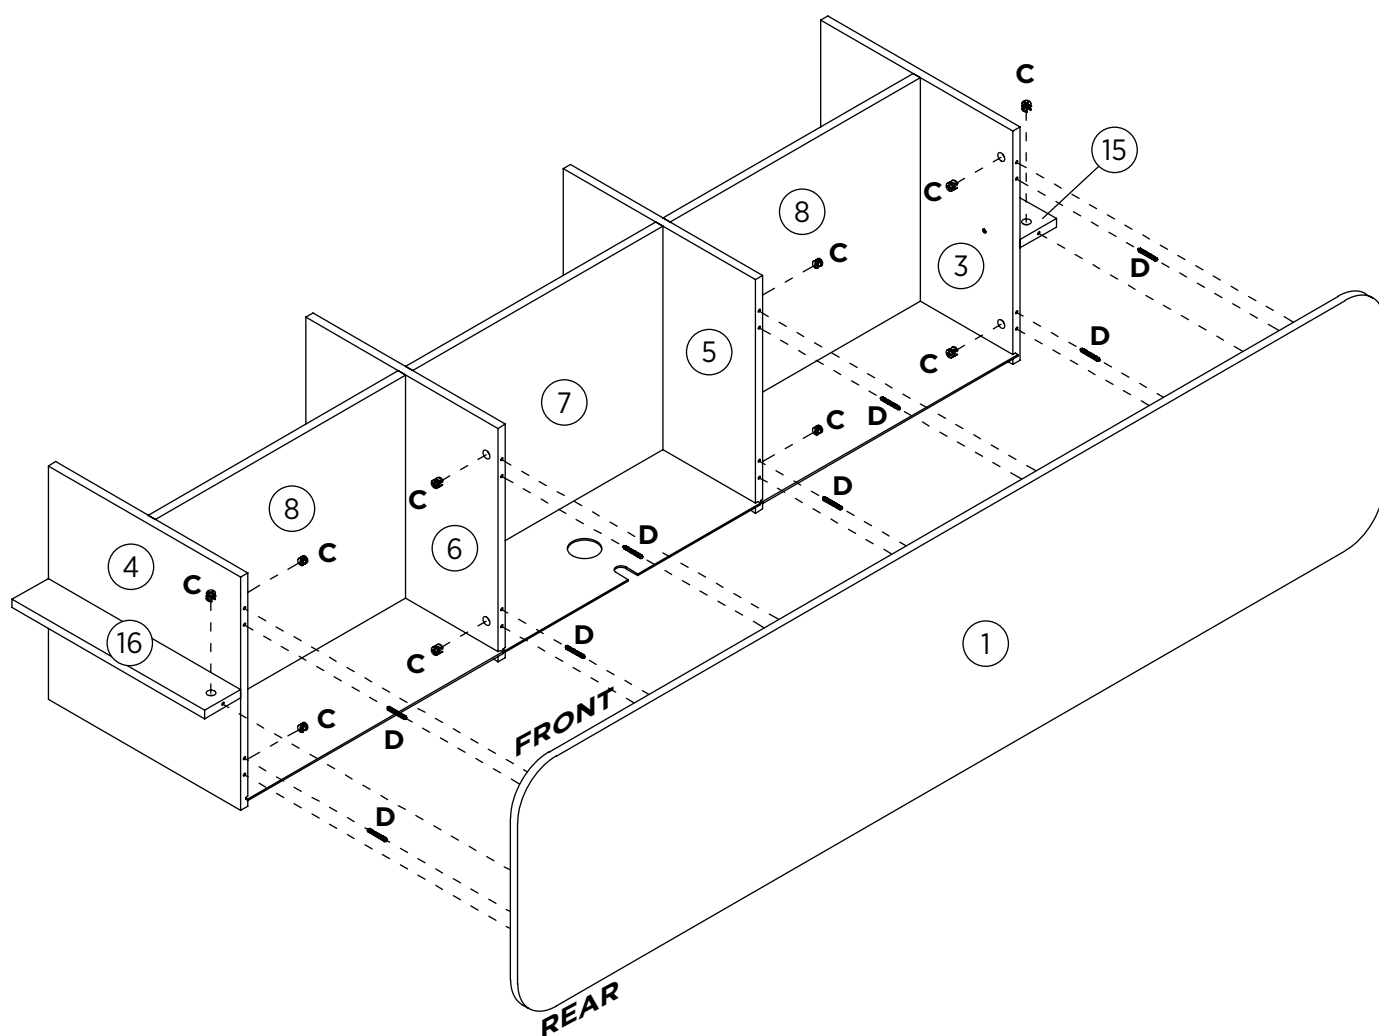


ASSEMBLY INSTRUCTIONS

STEP 11

Slide part 9 between grooves of parts 4, 6 and 8.

Slide part 9 between grooves of parts 3, 5 and 8.

 Slide part 10 between grooves of parts 5, 6 and 7, as shown.

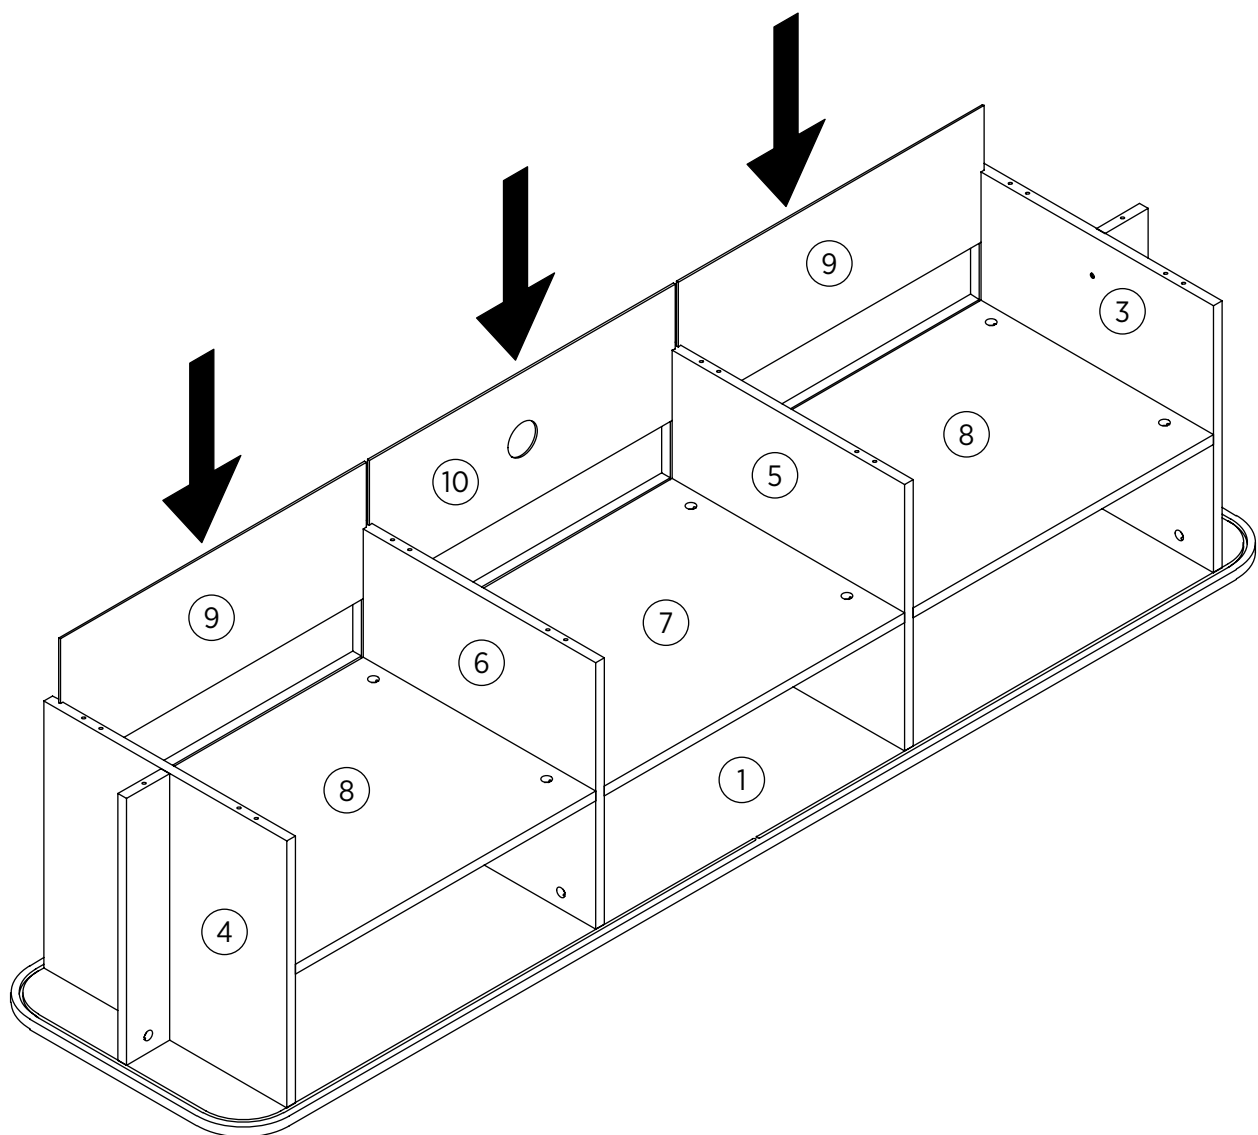


ASSEMBLY INSTRUCTIONS

STEP 12

Fix handle (E) to parts 12 using screws (F), as shown.

 
Repeat step twice.



E x 2



 F x 4

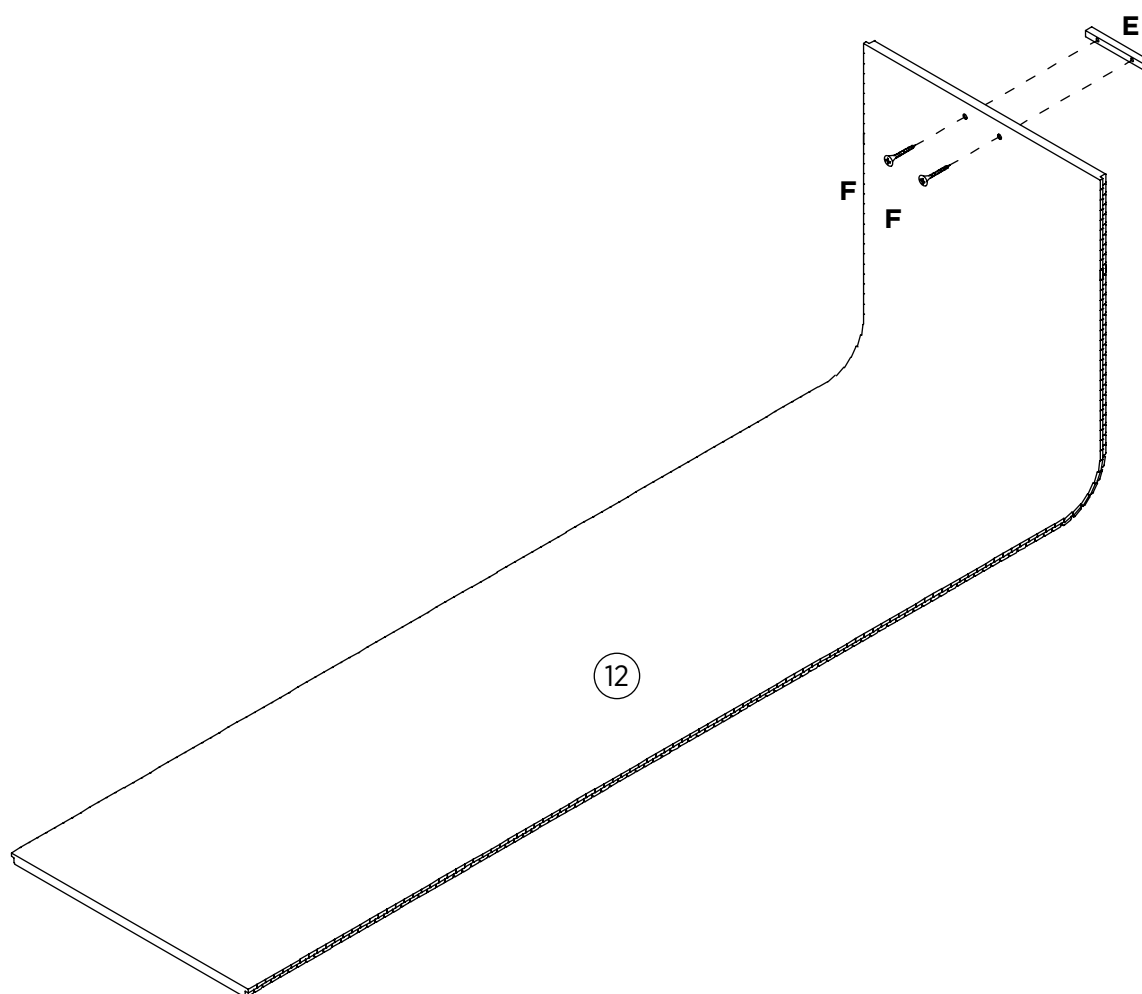


x2

ASSEMBLY INSTRUCTIONS

STEP 13

 Slide parts 12 into grooves of part 1.


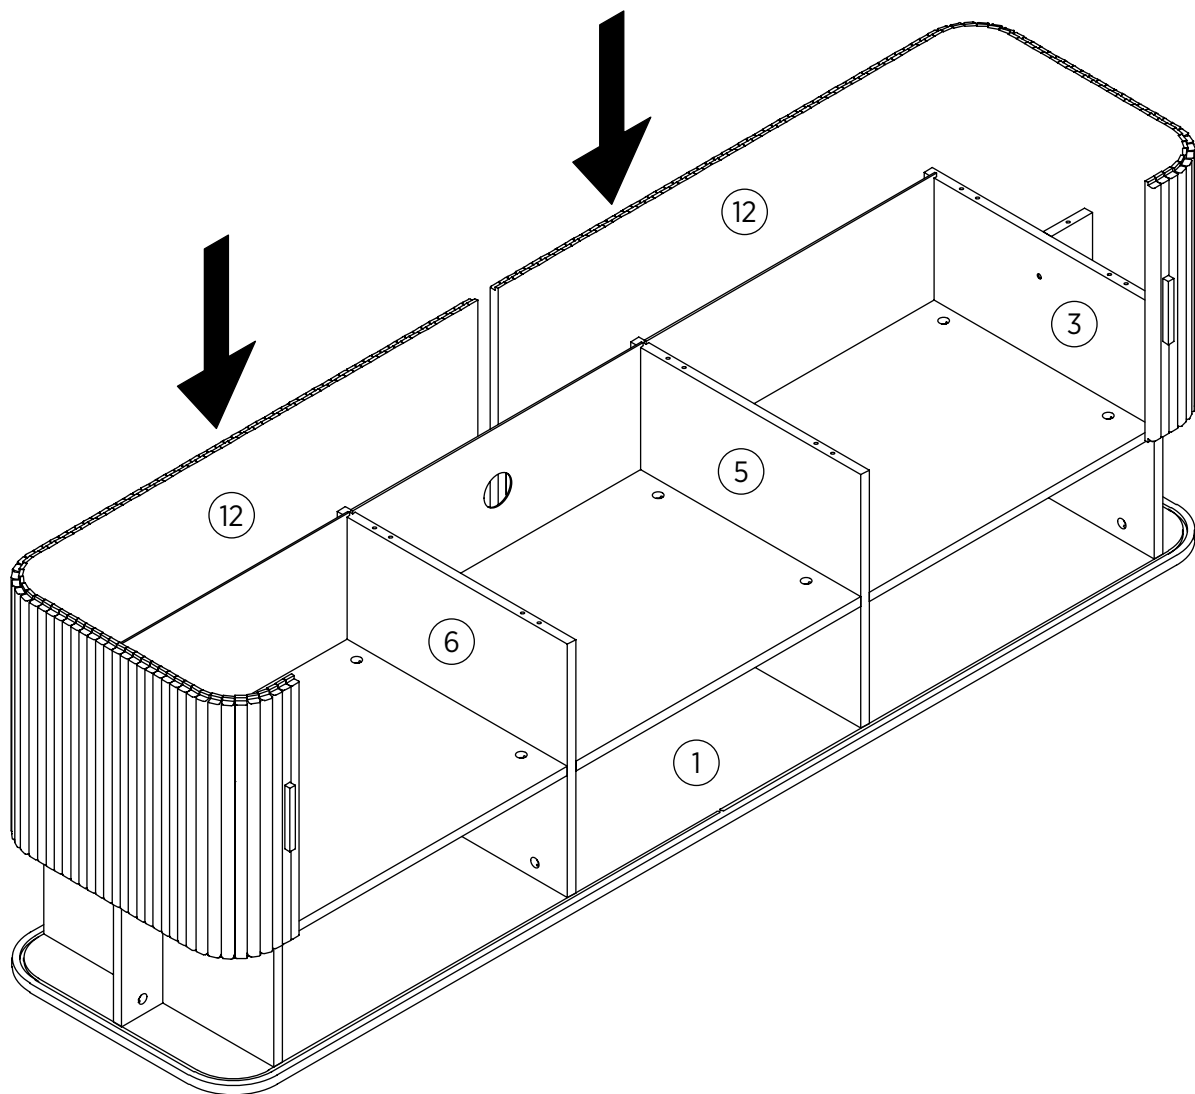


ASSEMBLY INSTRUCTIONS

STEP 14

Insert wooden dowels (D) to parts 3, 4, 5 and 6.

  Fix part 2 to parts 3, 4, 5, 6 and 12, 15, 16 using screws (A), as shown.

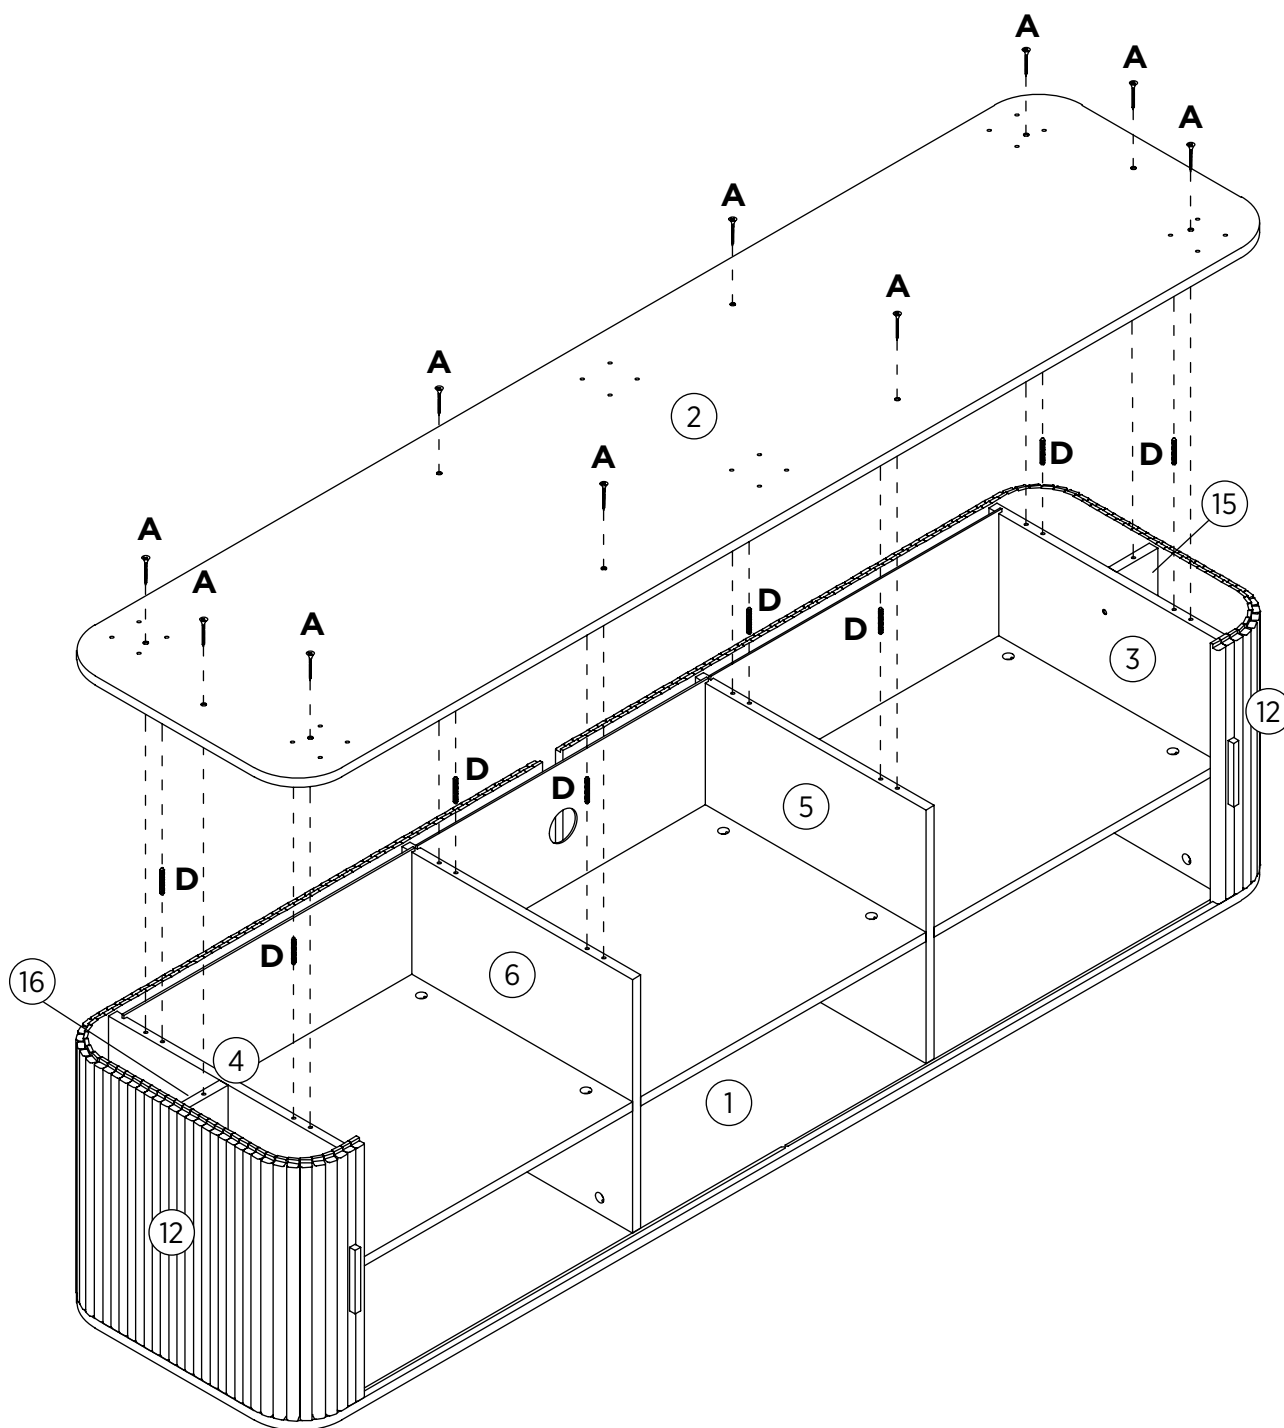


ASSEMBLY INSTRUCTIONS

STEP 15

Fix part 13 and 14 to part 2 using screws (H), as shown.





 
H x 24

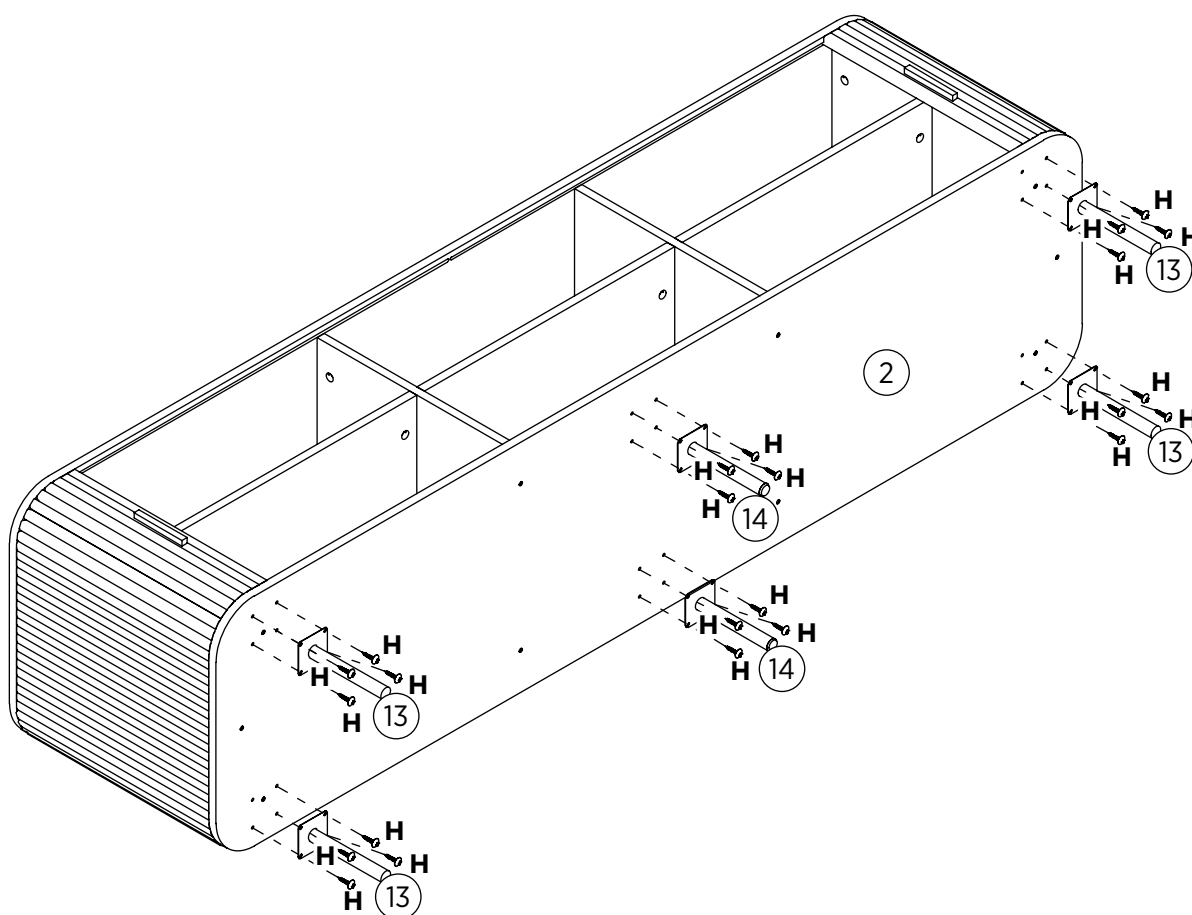

ASSEMBLY INSTRUCTIONS

STEP 16

   Secure parts 9, 10 and 11 by fixing wedges (J) with screws (I), as shown.

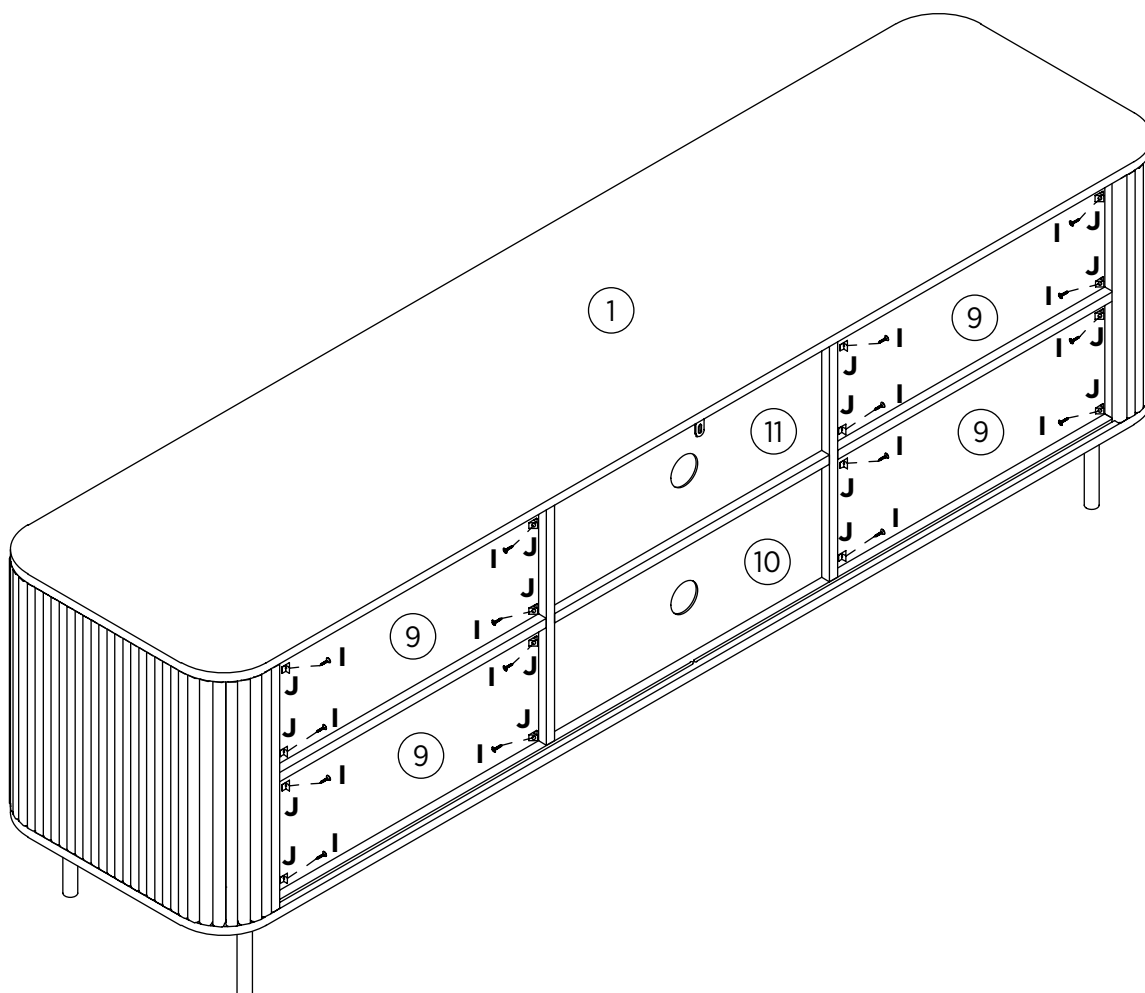

ASSEMBLY INSTRUCTIONS

 
 
 
 
STEP 17

For extra stability, you must fix your TV unit to the wall using the additional hardware (A), (G) and (K), as shown.

Screw (A) is fixed through the bracket (G) and into the wall plug (K).


Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your TV unit.

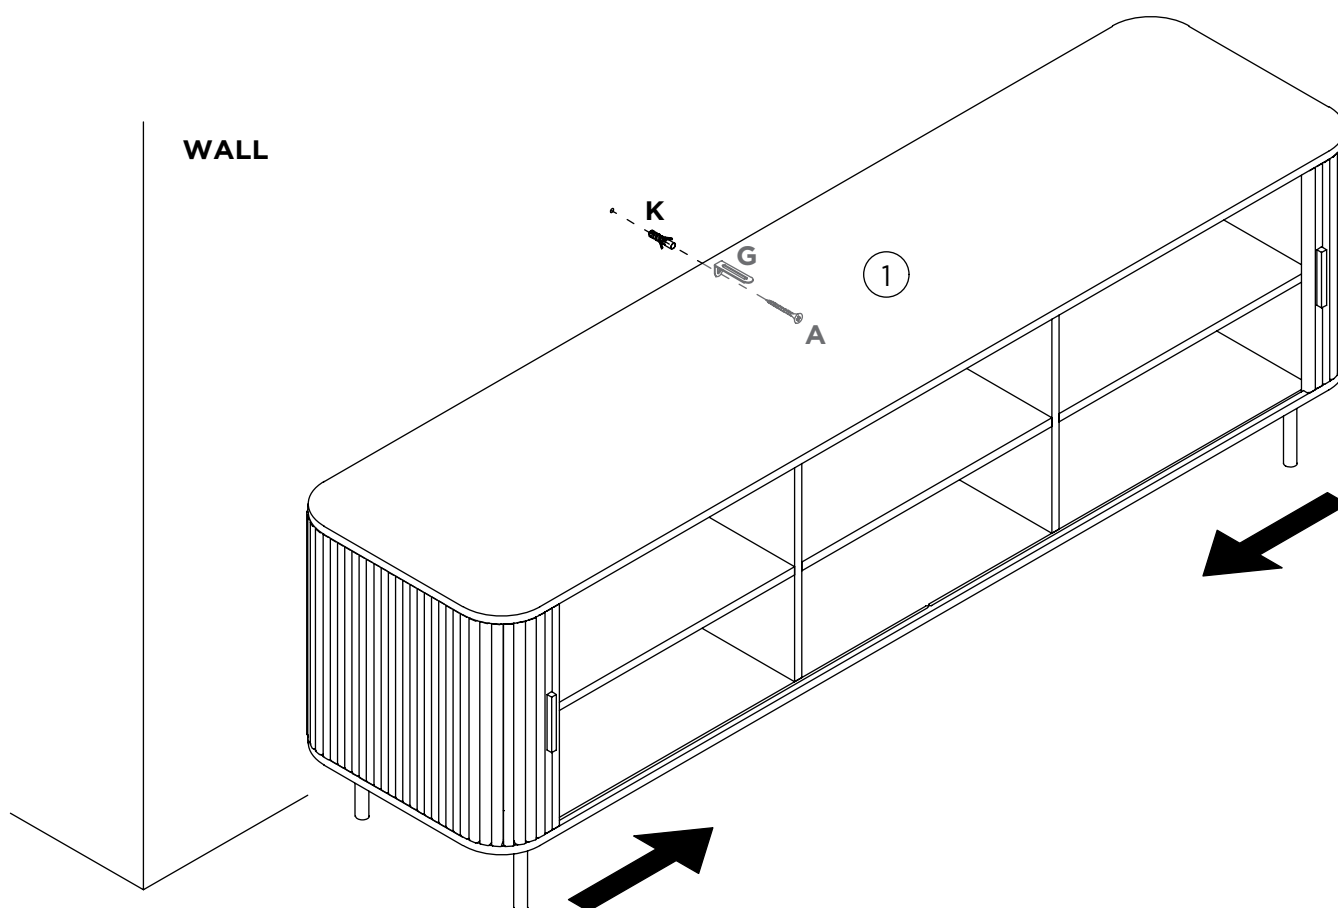

ASSEMBLY INSTRUCTIONS

 STEP 18

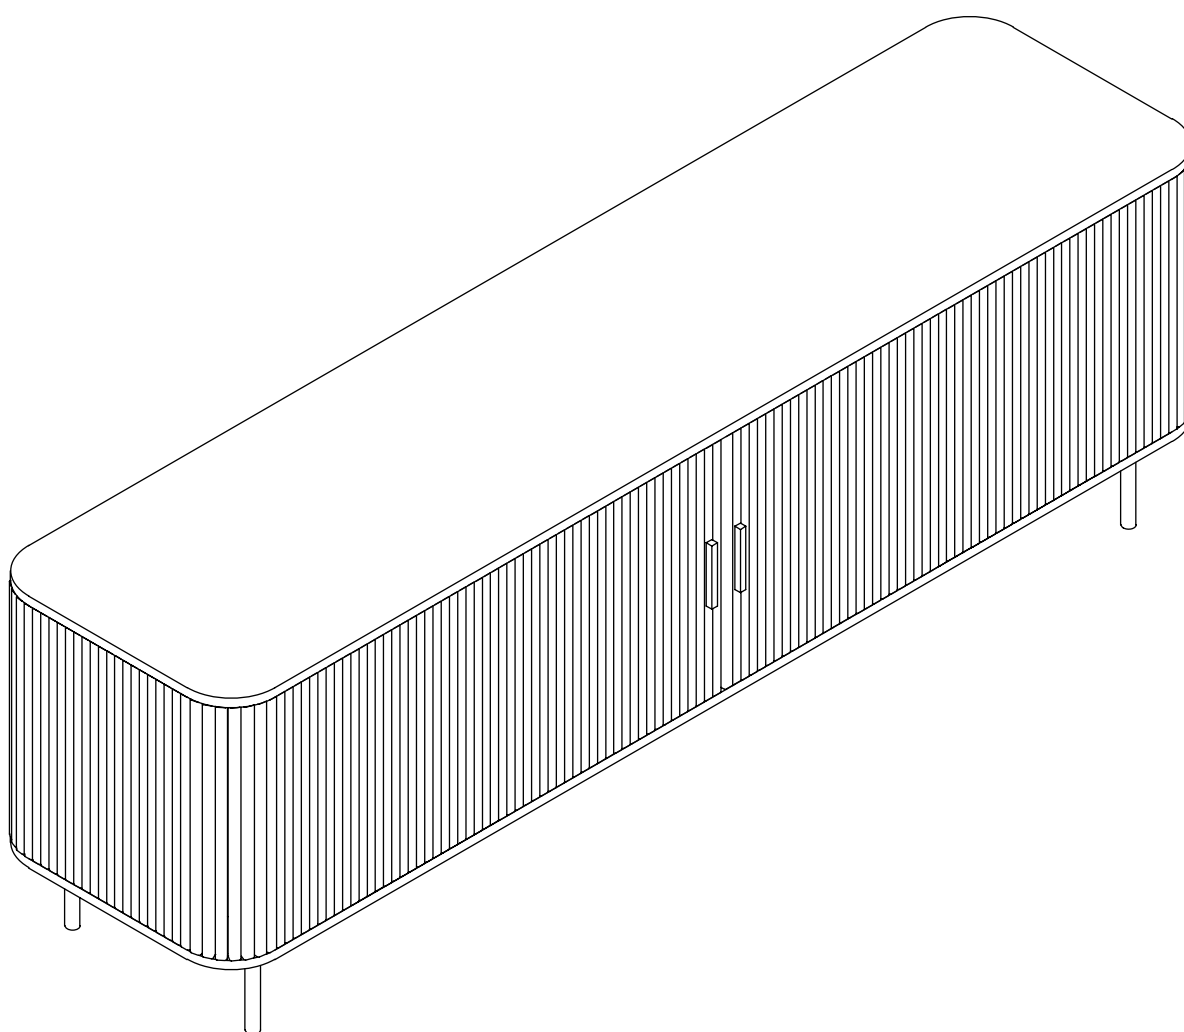

Maximum recommended weight is 15 kg on top, 5 kg inside each shelf.

Your TV unit 2 doors is ready for use.