 


CHEST OF 6 DRAWERS

ASSEMBLY INSTRUCTIONS

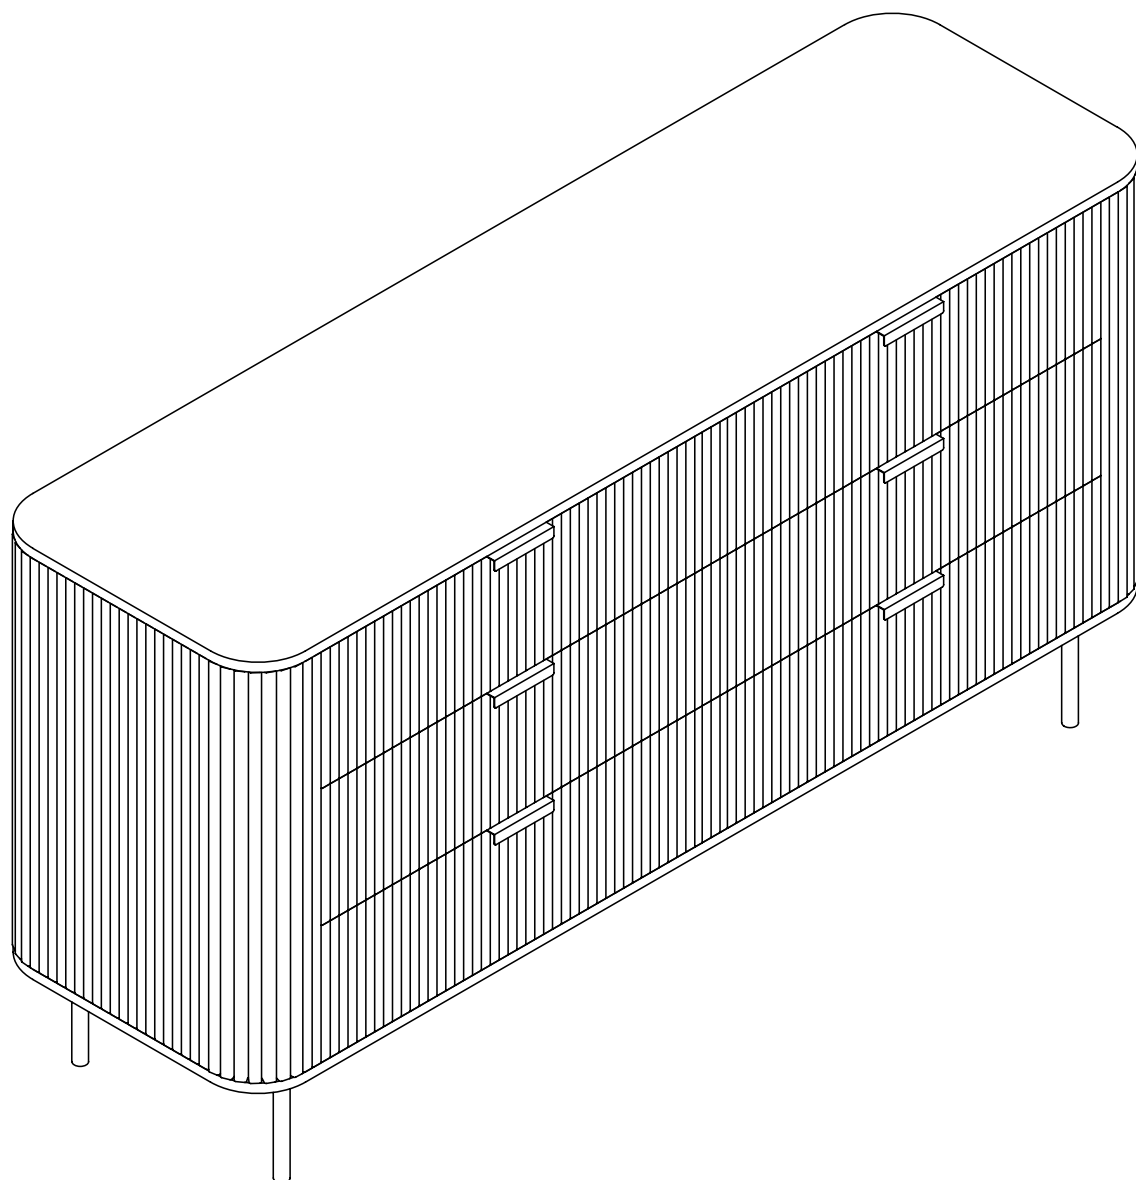

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

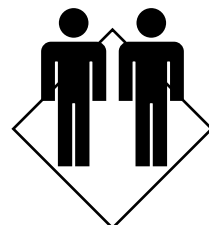

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

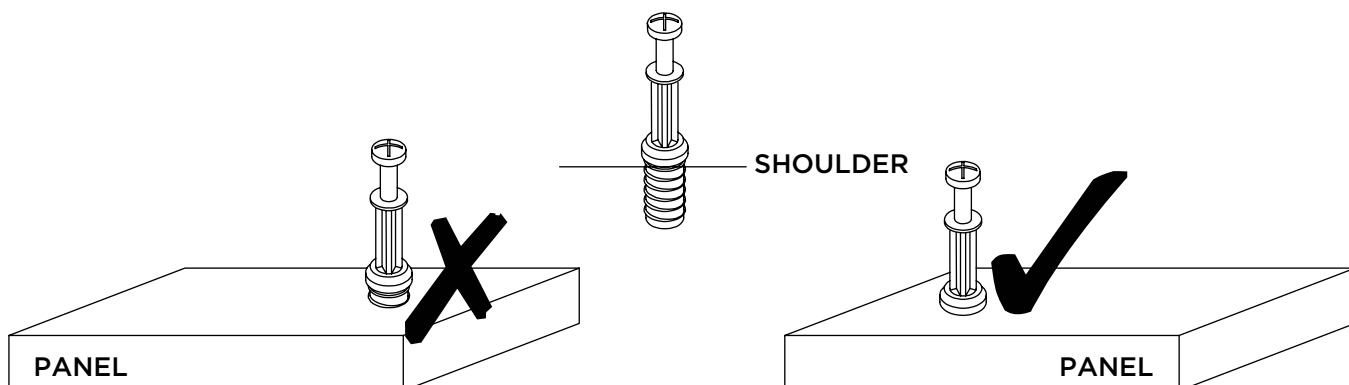


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

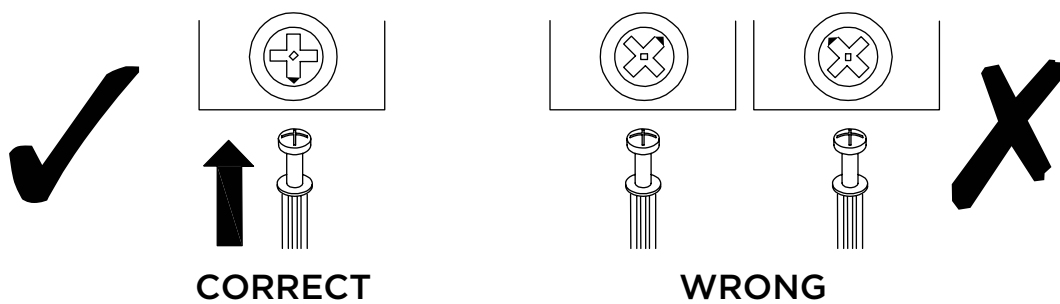

 
Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

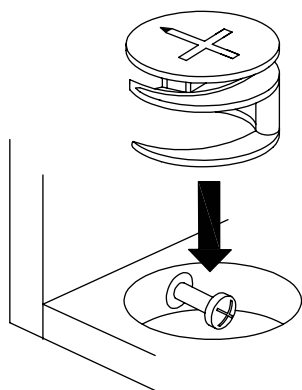

Turn cam lock clockwise to tighten.

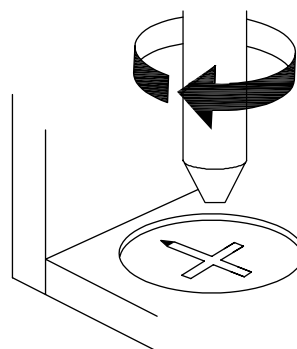 


HARDWARE LIST

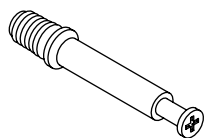 


54 x A
Quickfit Screw



 
54 x B
Cam Lock




24 x C
Wooden Dowel

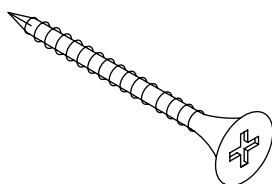 


44 x D
Screw

 


22 x E
Screw

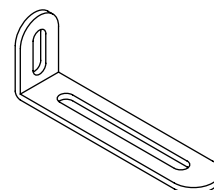 


2 x F
Wall Bracket

 


60 x G
Screw

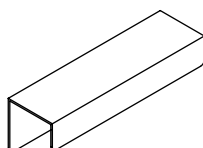 


6 x H
Handles

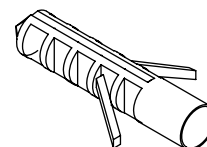 


2 x I
Wall Plug

 


16 x J
Screw

 


16 x K
Wedges

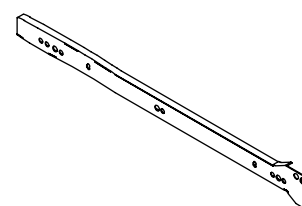 


6 x L
Outer Drawer Runner

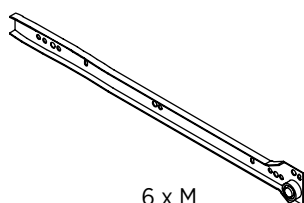 

6 x M
Outer Drawer Runner

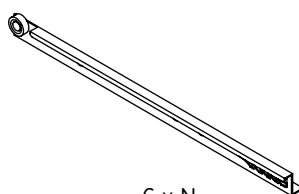 


6 x N
Inner Drawer Runner

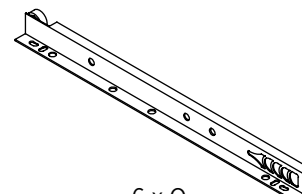 


6 x O
Inner Drawer Runner

 
PARTS LIST

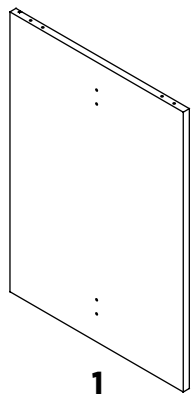


1
1 PC

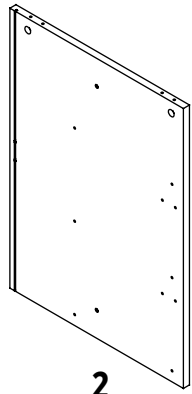 


2
1 PC

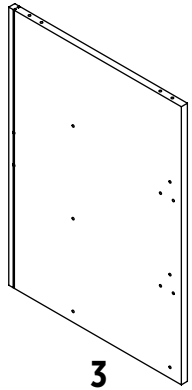 


3
1 PC

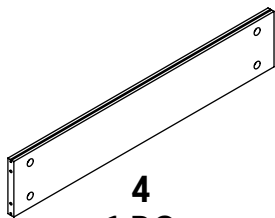 


4
1 PC

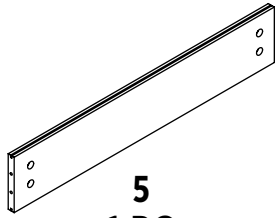 


5
1 PC

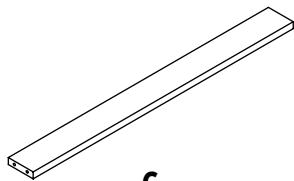 


6
4 PCS

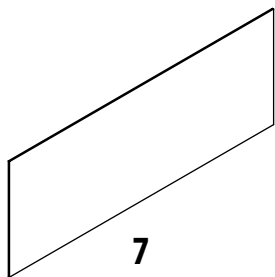 


7
2 PCS

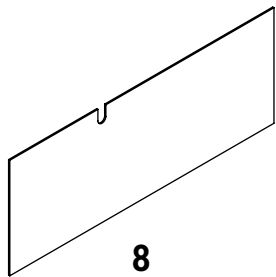 


8
2 PCS

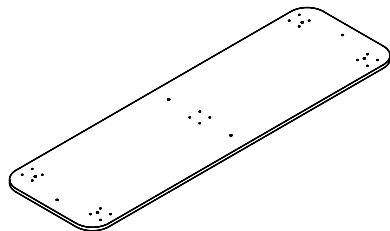 


9
1 PC

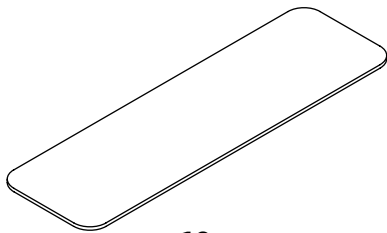 

10
1 PC

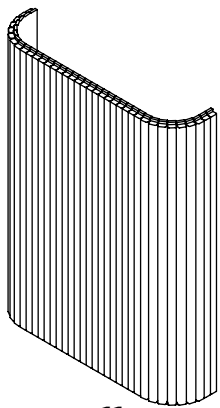 


11
2 PCS

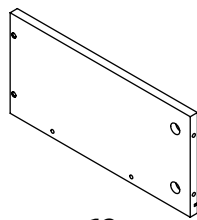 


12
6 PCS

 
PARTS LIST

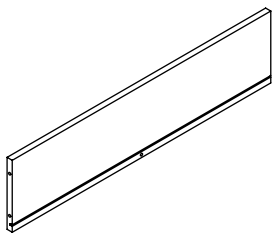


13
6 PCS

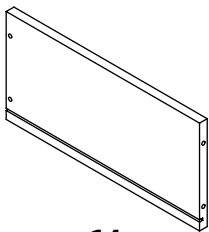 


14
6 PCS

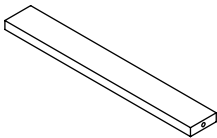 


15
6 PCS

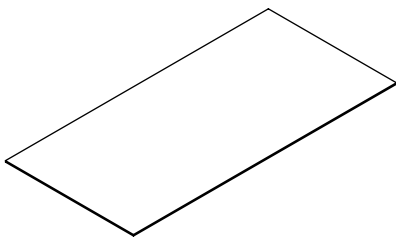 


16
6 PCS

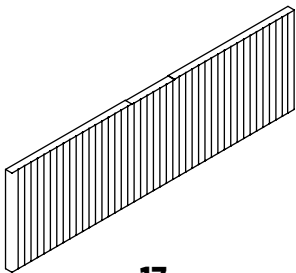 


17
3 PCS

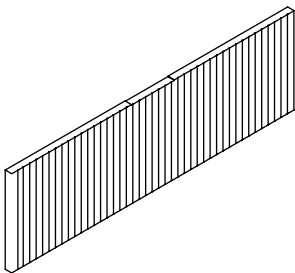 

18
3 PCS

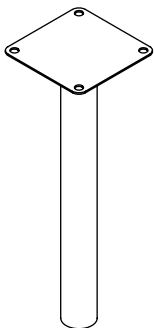 

19
4 PCS

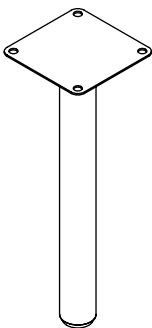 

20
1 PC



21
1 PC

 
 


22
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

Fix parts 12, 14 and 15 to part 13 using screws (D), as shown.

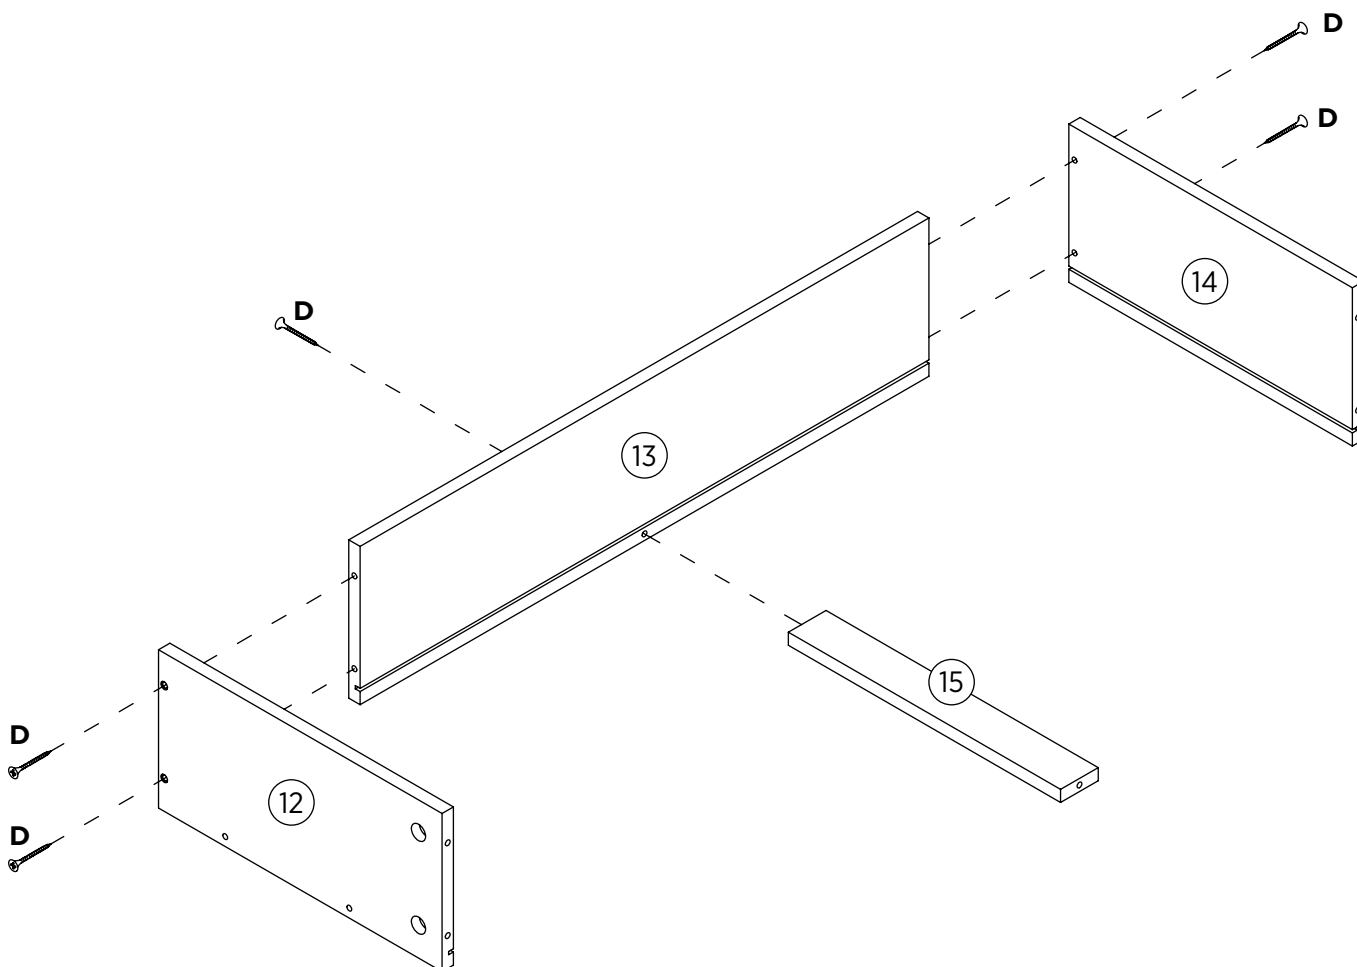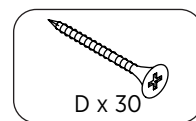


x6

ASSEMBLY INSTRUCTIONS

STEP 2

 Insert part 16 into grooves between parts 12, 13 and 14, as shown.


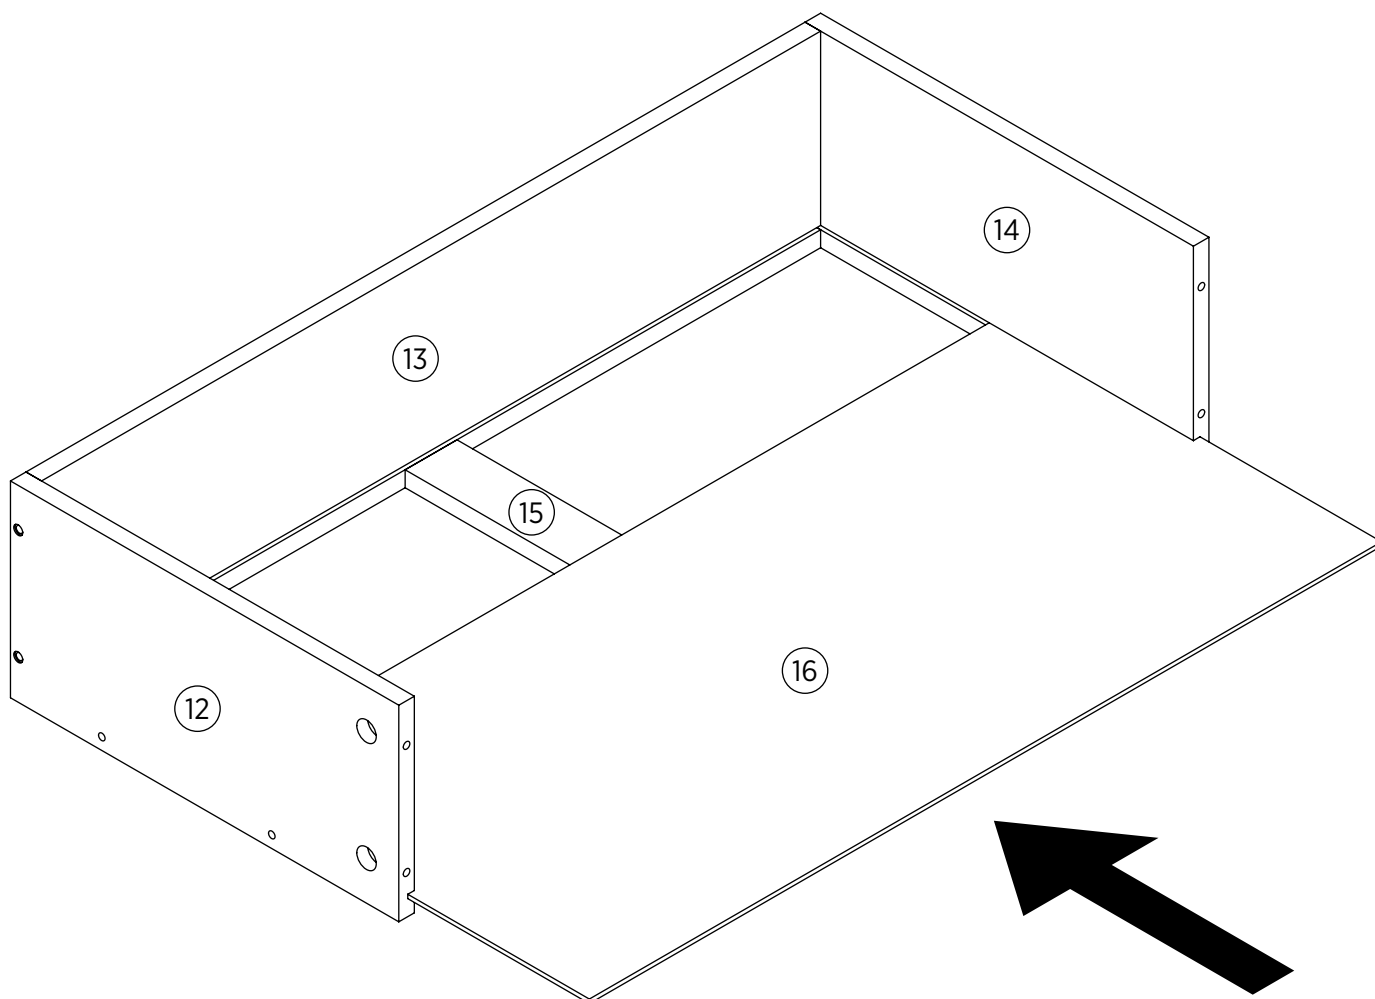


x6

ASSEMBLY INSTRUCTIONS

STEP 3

  Insert quickfit screws (A) to parts 17 and 18, as shown.

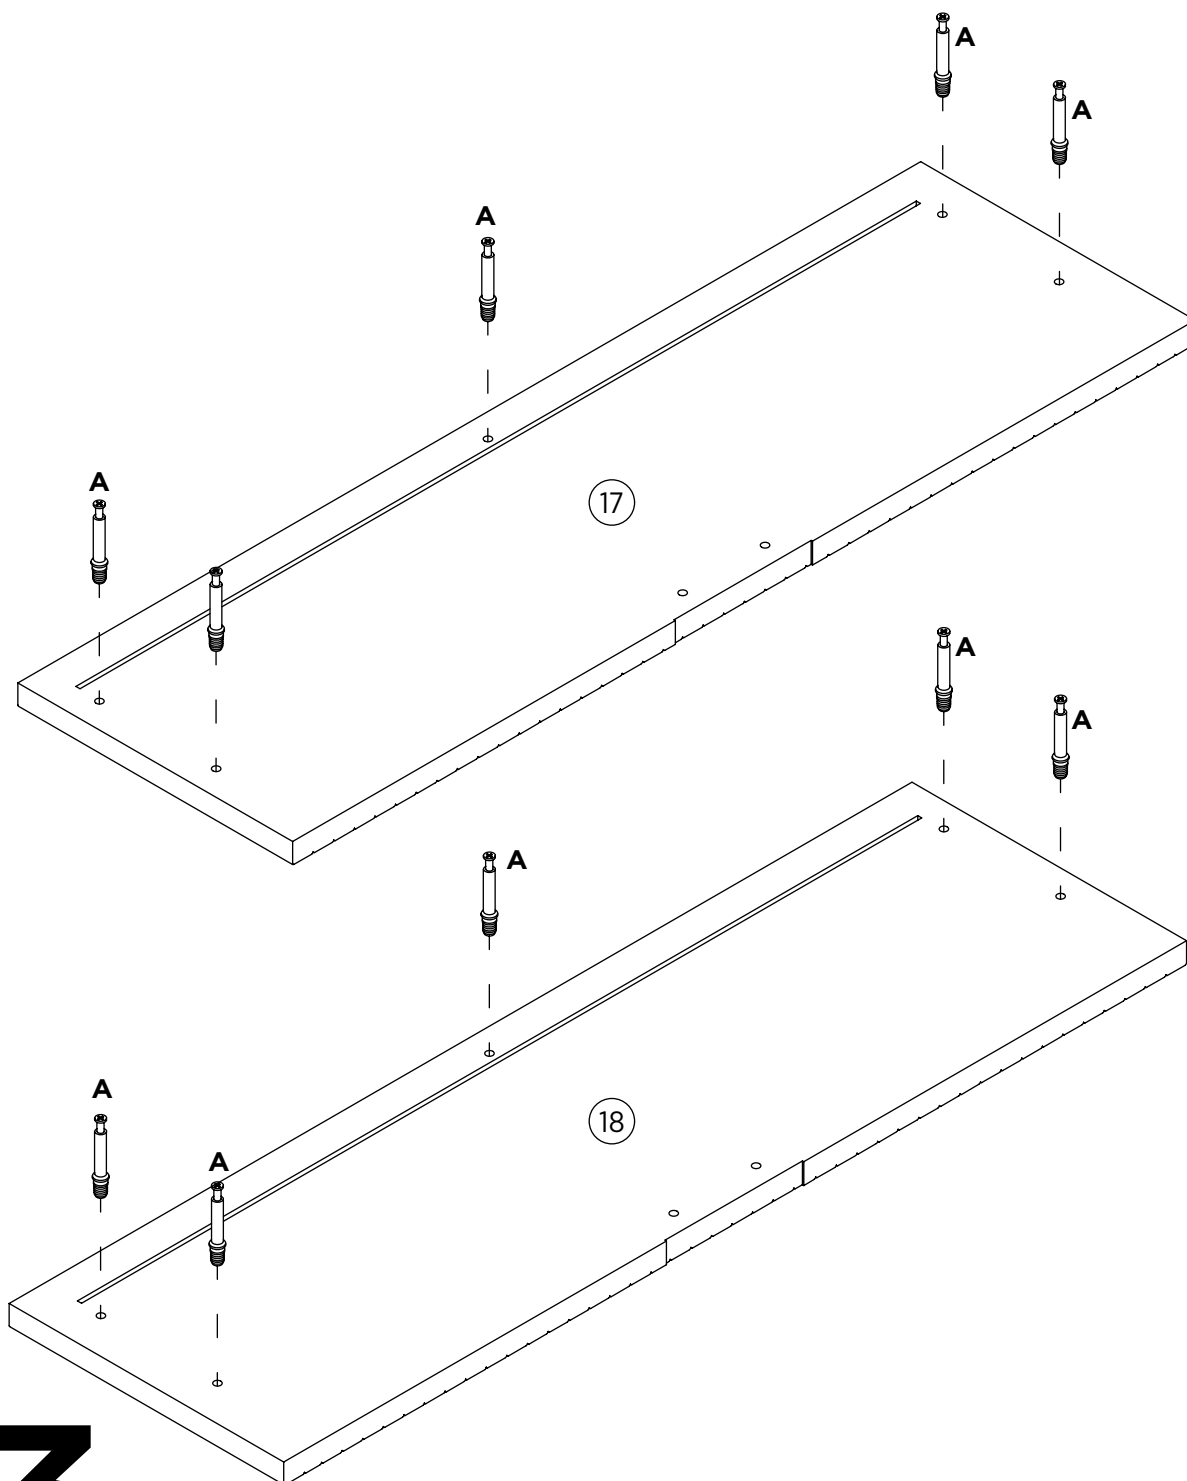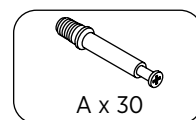

x3

 
 
ASSEMBLY INSTRUCTIONS

STEP 4

Insert cam locks (B) to parts 12, 14 and 15.

Attach parts 17 and 18 to parts 12, 14, 15 and 16, as shown.

Turn cam locks clockwise to tighten.





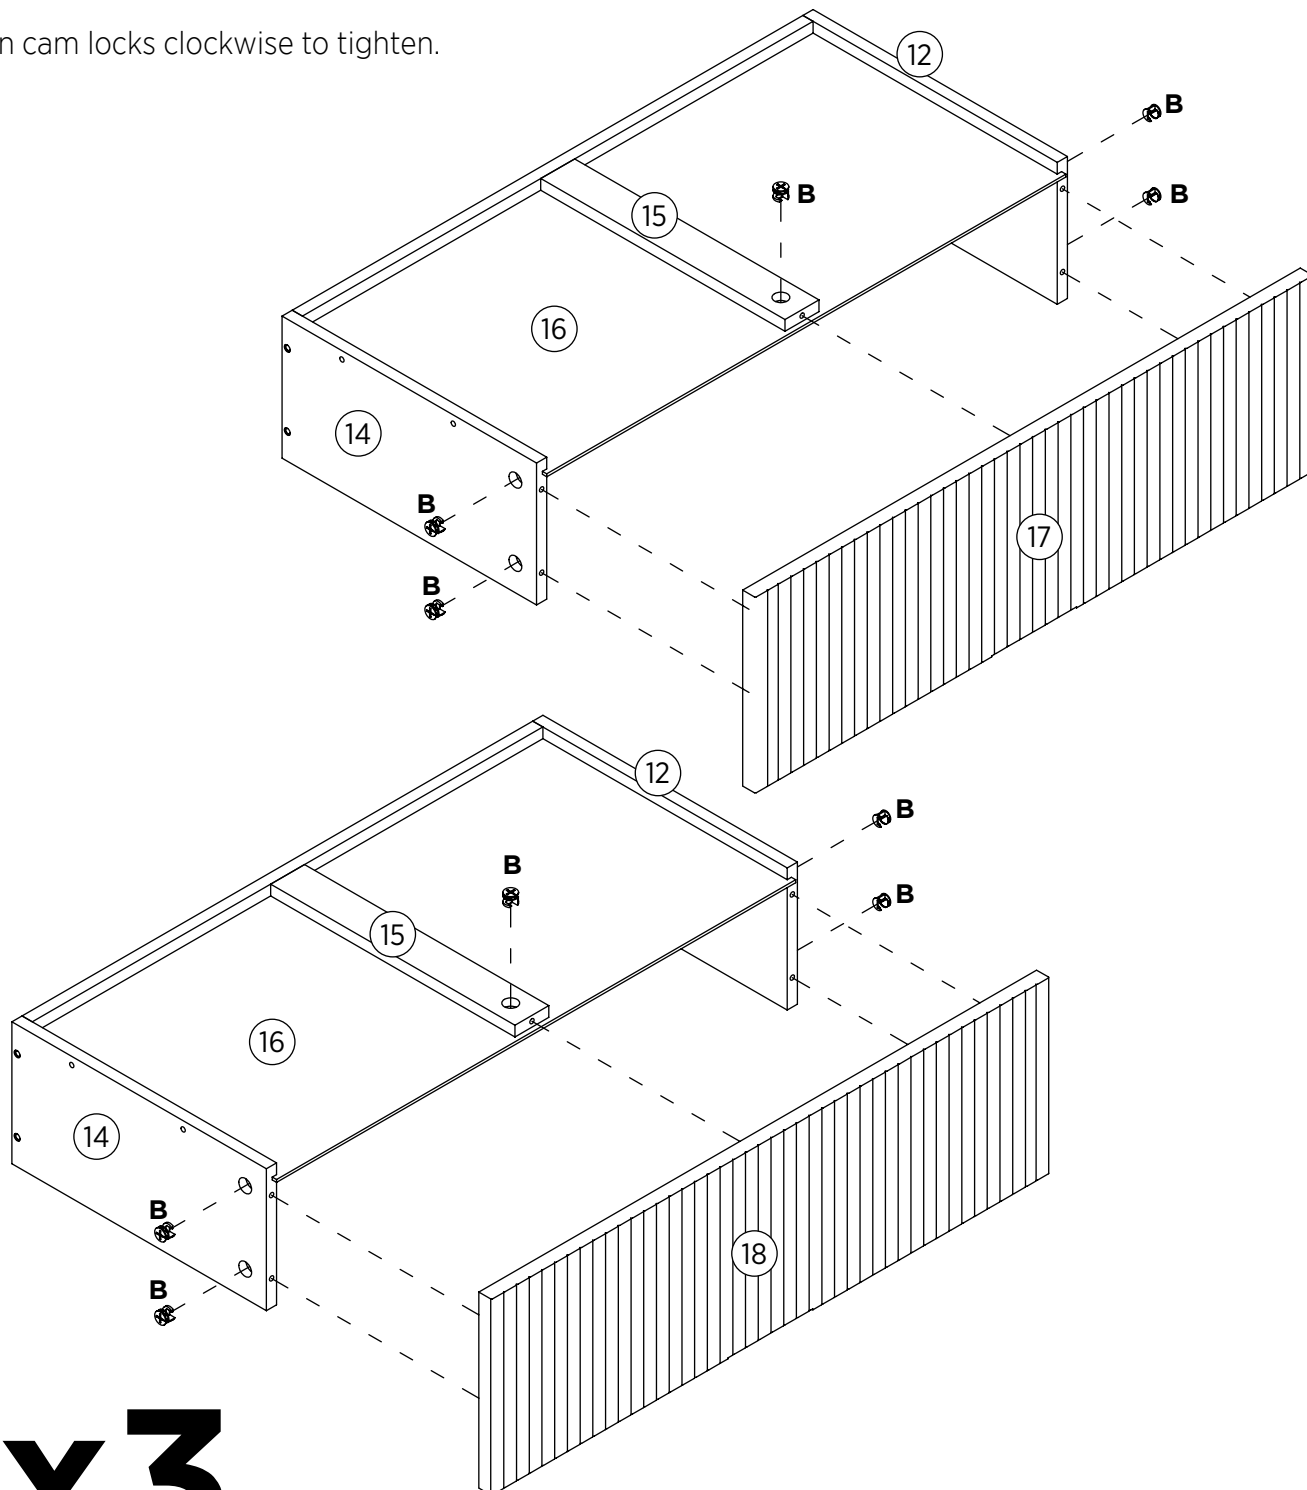
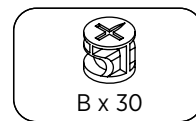


x3

ASSEMBLY INSTRUCTIONS

STEP 5

      Fix inner drawer runners (N) and (O) using screws (G), as shown.

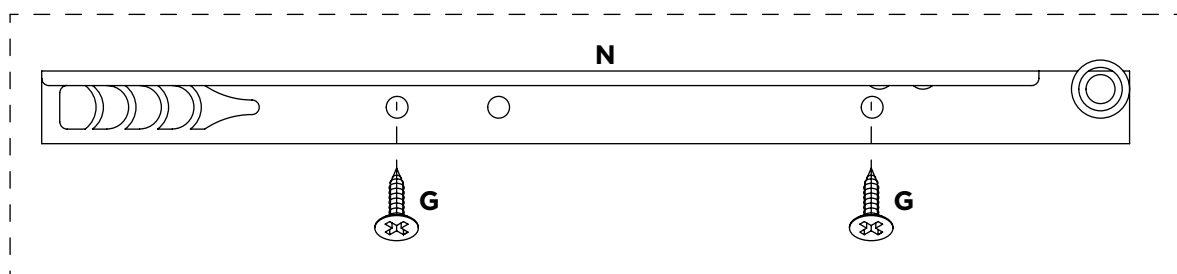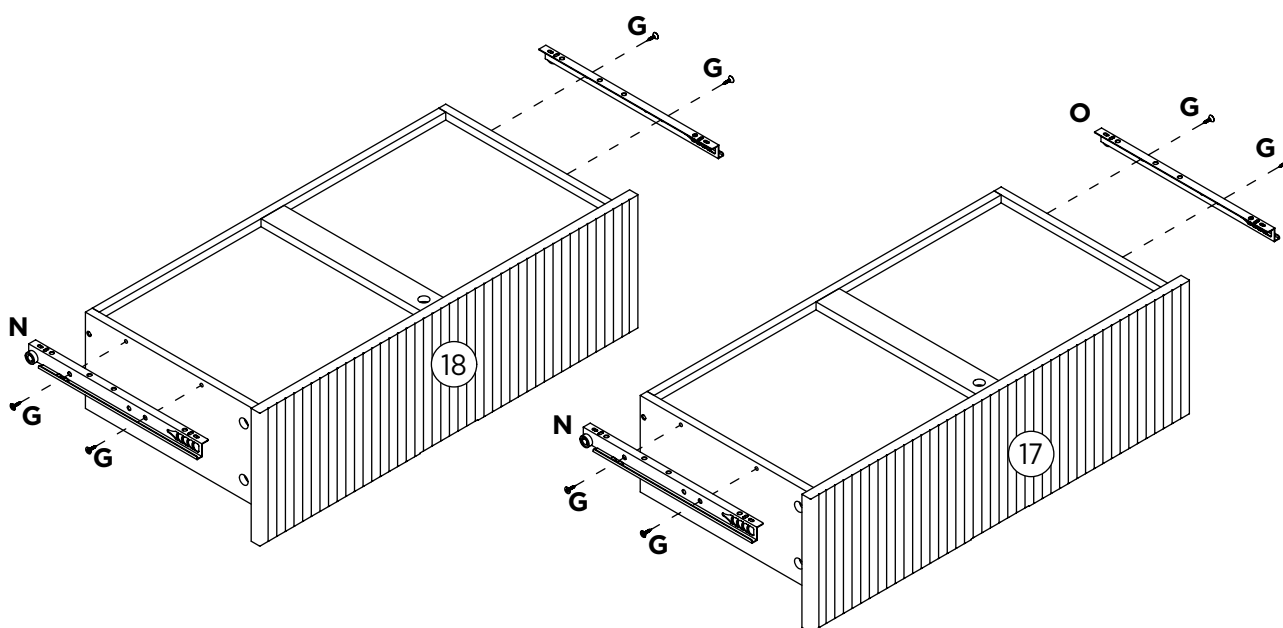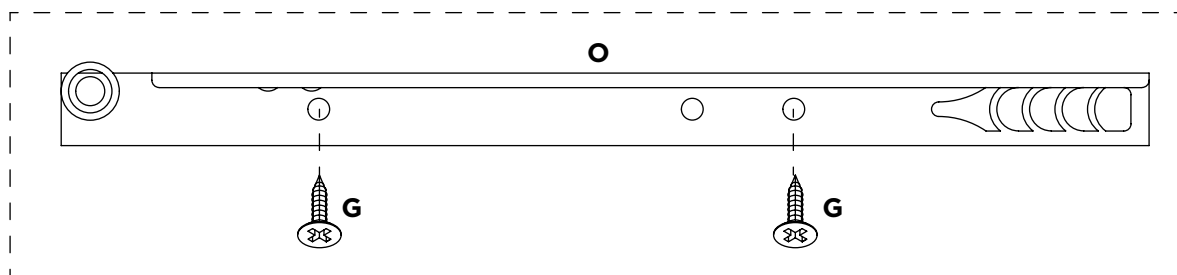


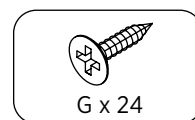


x3

ASSEMBLY INSTRUCTIONS

STEP 6

    Fix handles (H) to parts 17 and 18 using screws (G), as shown.

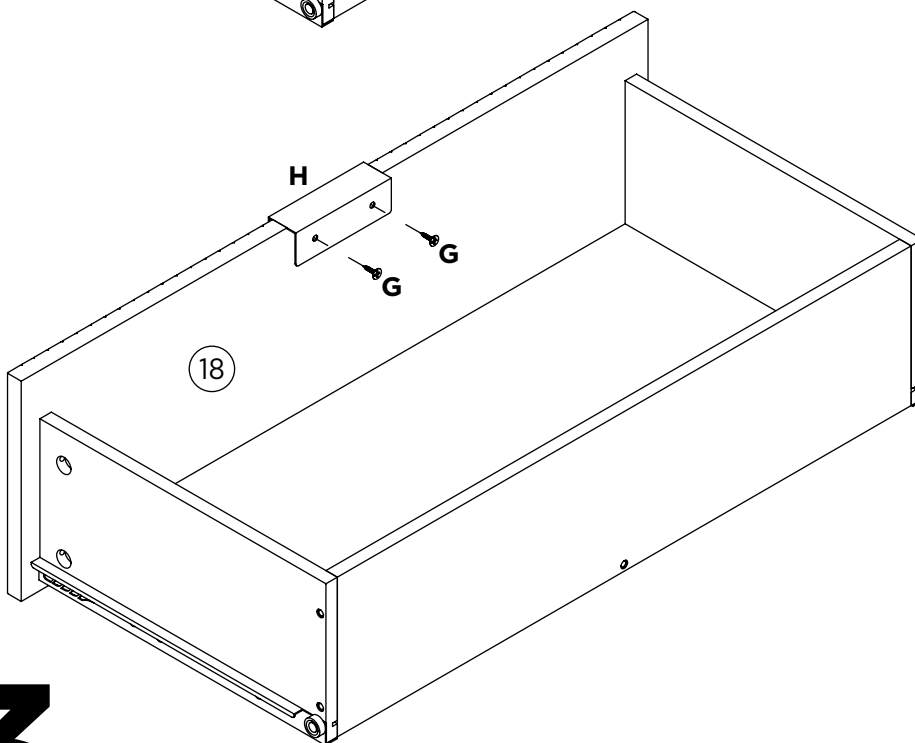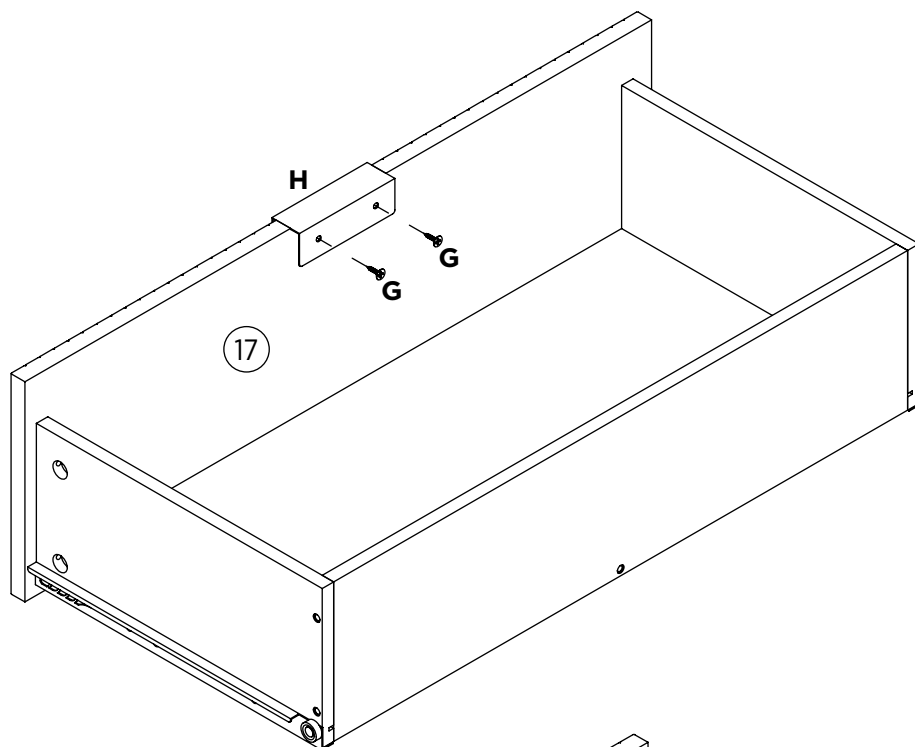








x3

ASSEMBLY INSTRUCTIONS

STEP 7

Insert quickfit screws (A) to parts 1 and 2.

       Fix outer drawer runners (L) and (M) to parts 1 and 2 using screws (G), as shown.

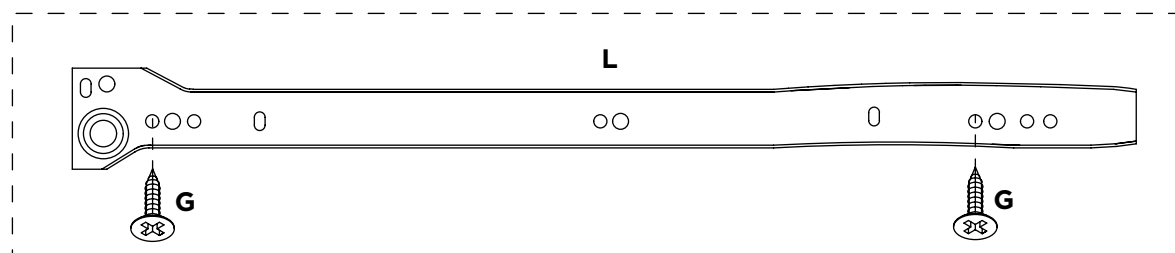
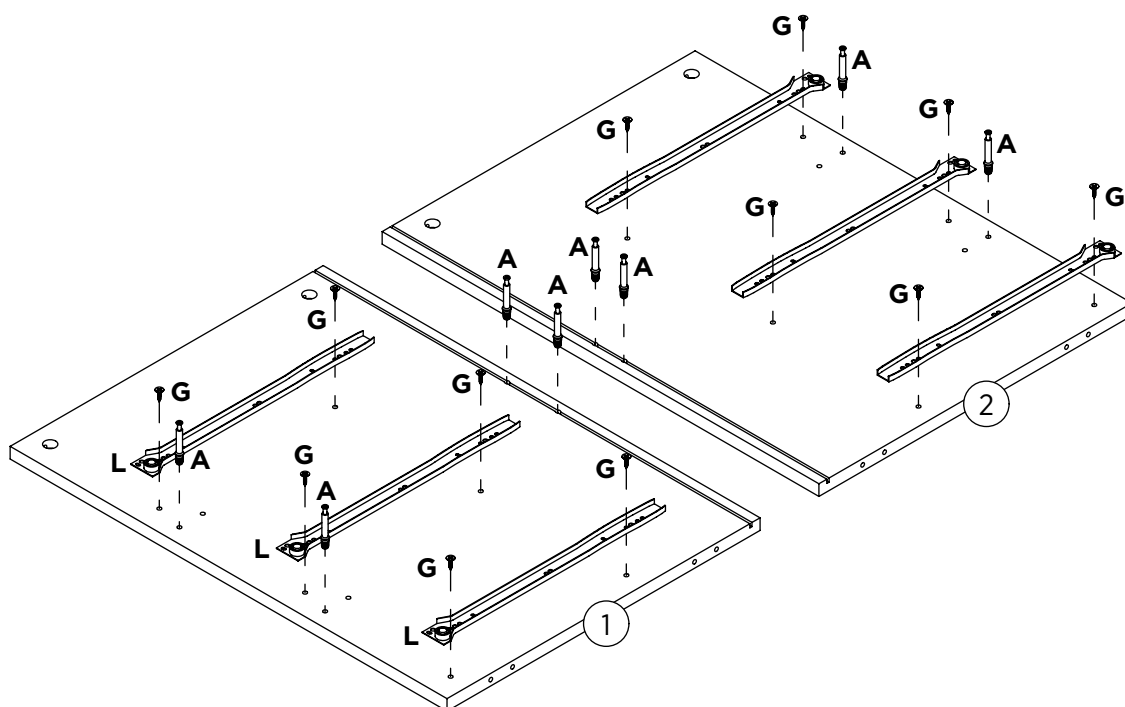
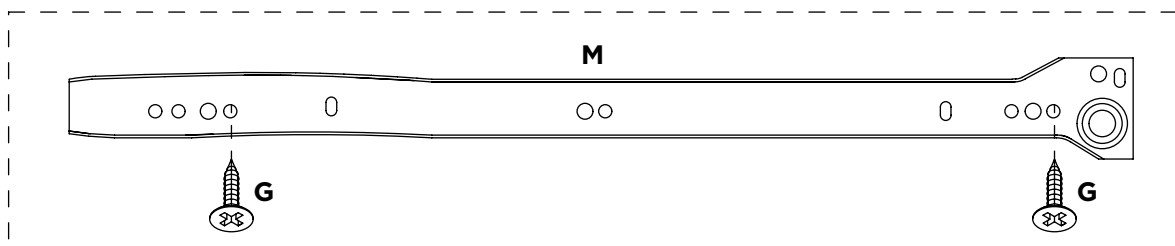






ASSEMBLY INSTRUCTIONS

STEP 8

Insert quickfit screws (A) to part 3.

       Fix outer drawer runners (L) and (M) to parts 3 using screws (G), as shown.

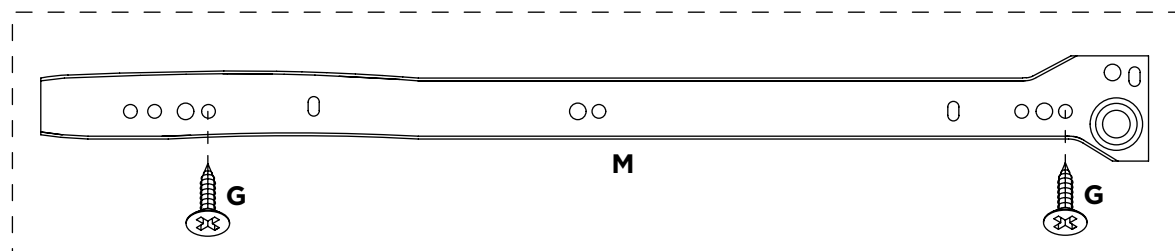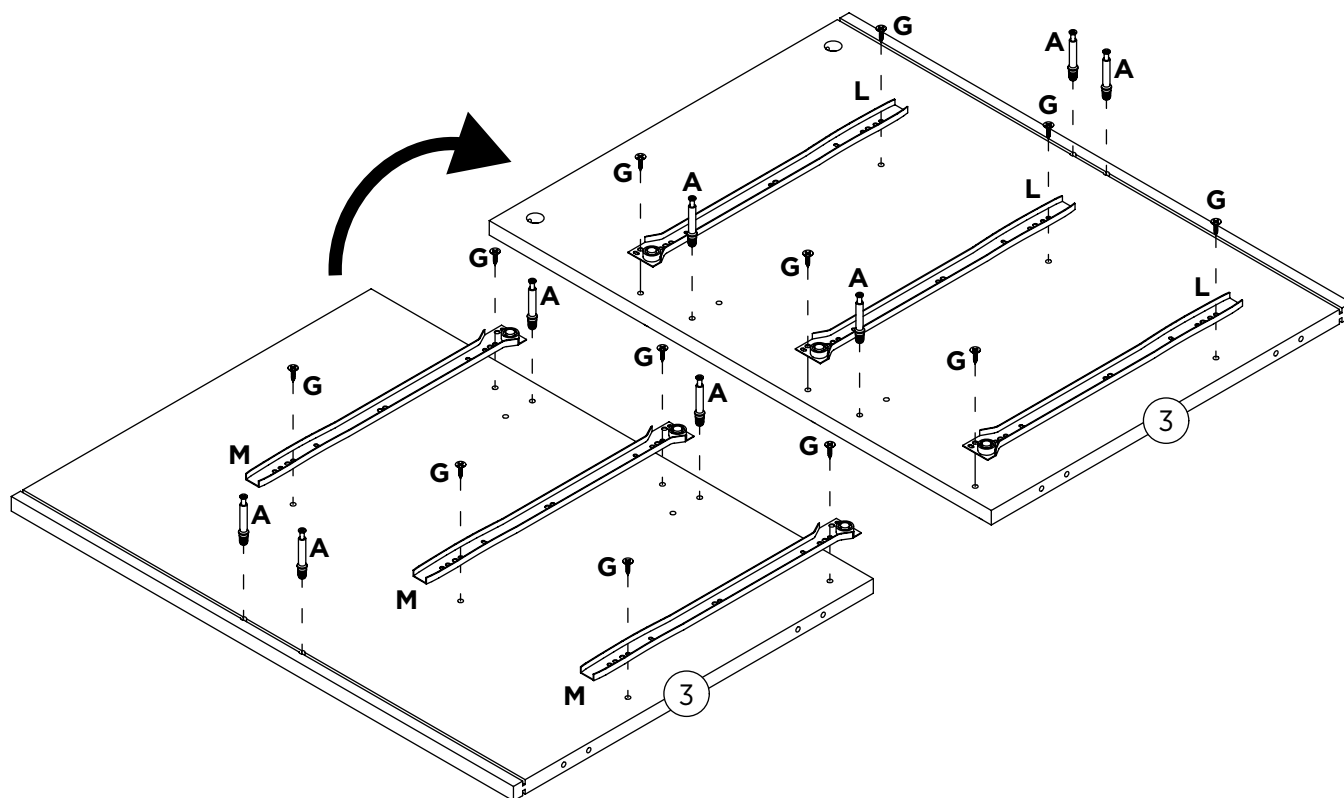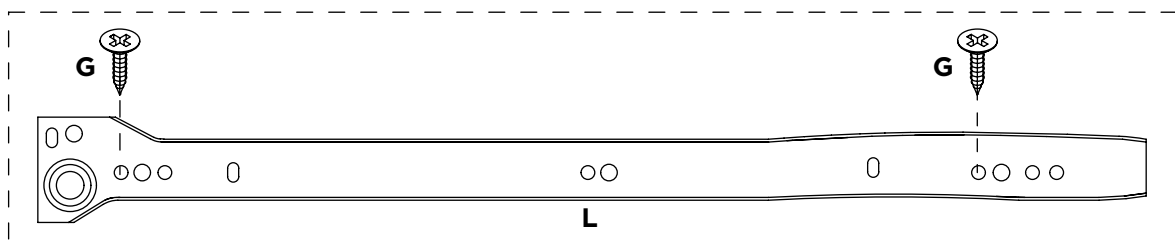




ASSEMBLY INSTRUCTIONS

STEP 9

Insert wooden dowels (C) to part 21.

   Fix part 21 to part 1 using screws (D), as shown.

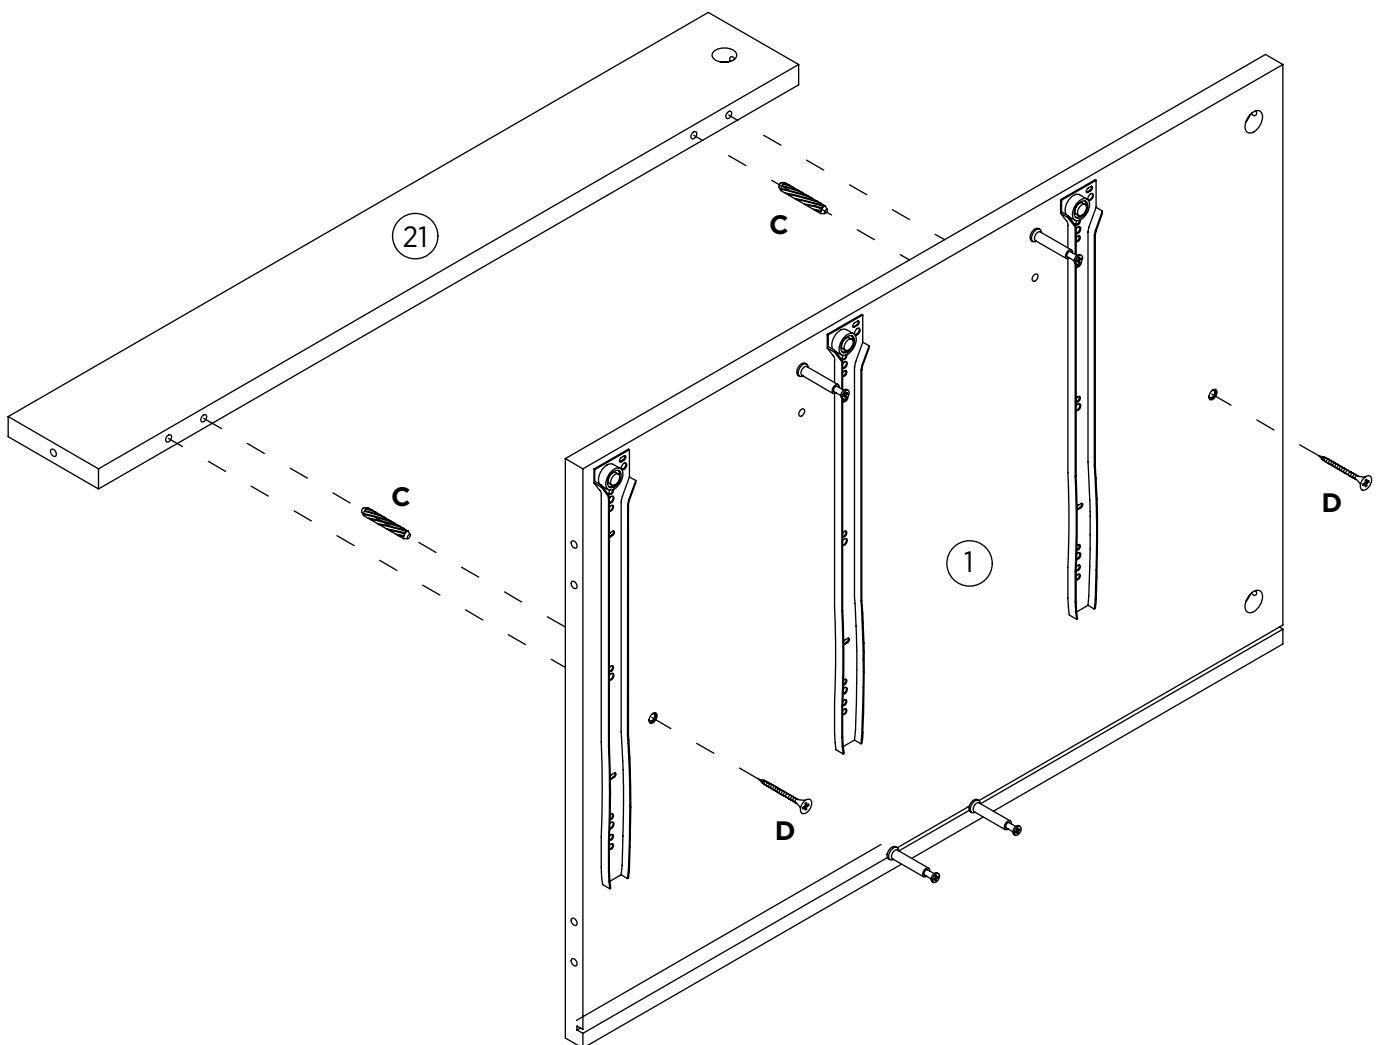

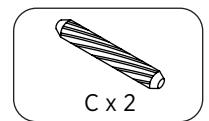


ASSEMBLY INSTRUCTIONS

STEP 10

Insert wooden dowels (C) to part 22.

   Fix part 22 to part 2 using screws (D), as shown.

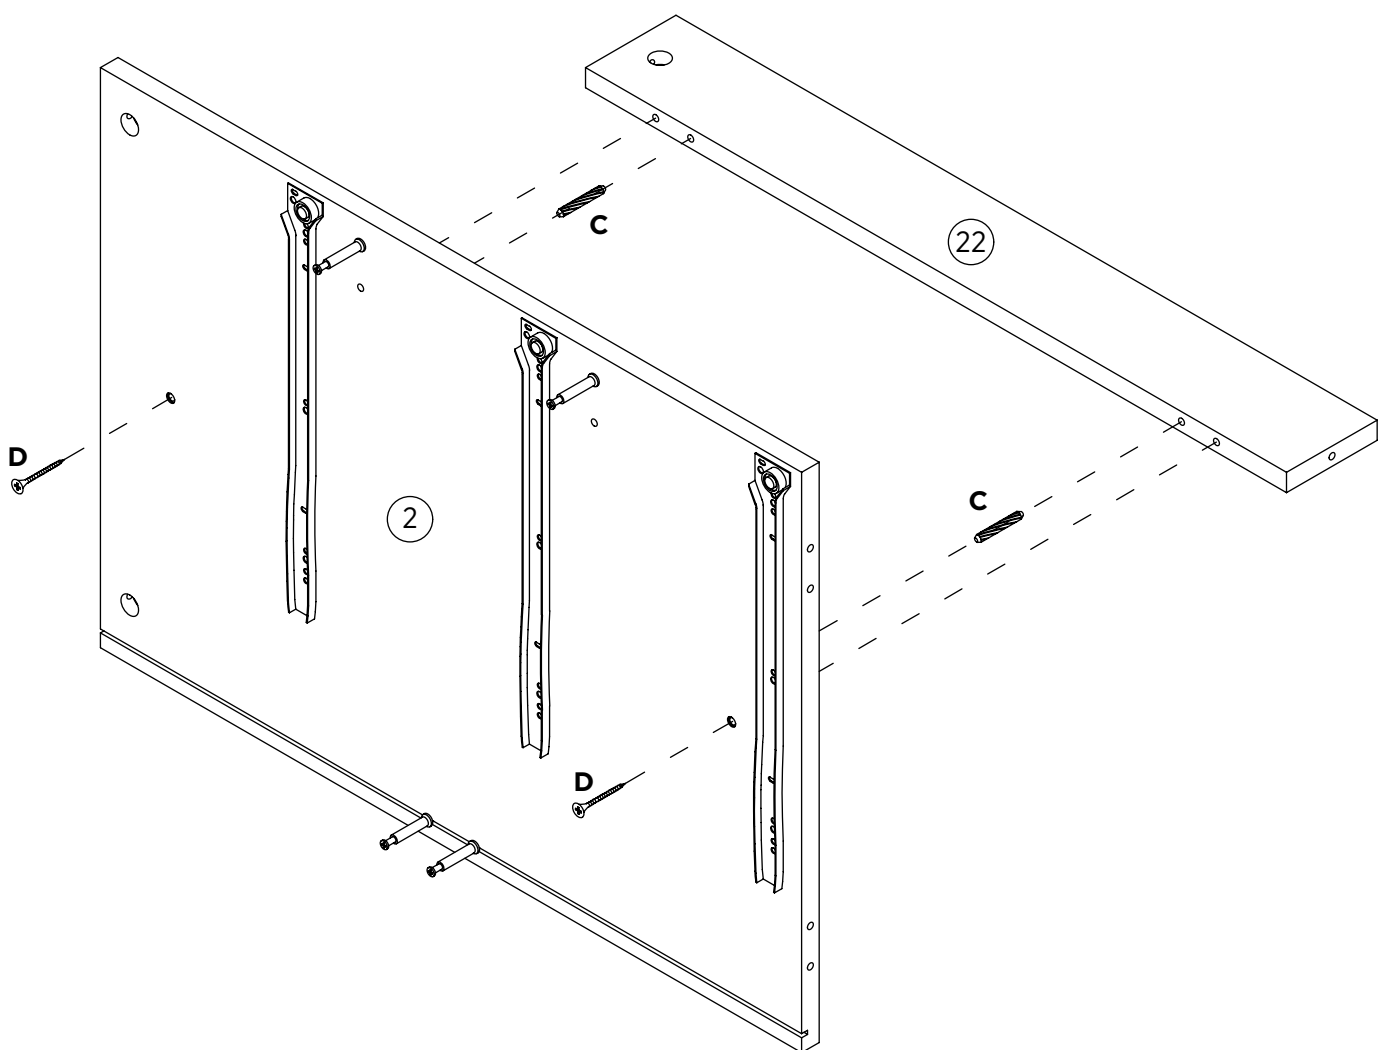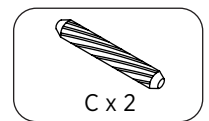

ASSEMBLY INSTRUCTIONS

 
 
STEP 11

Insert cam locks (B) to parts 4, 5 and 6.

Insert wooden dowels (C) to parts 6.

Attach parts 4, 5 and 6 to part 3, as shown.

Turn cam locks clockwise to tighten.

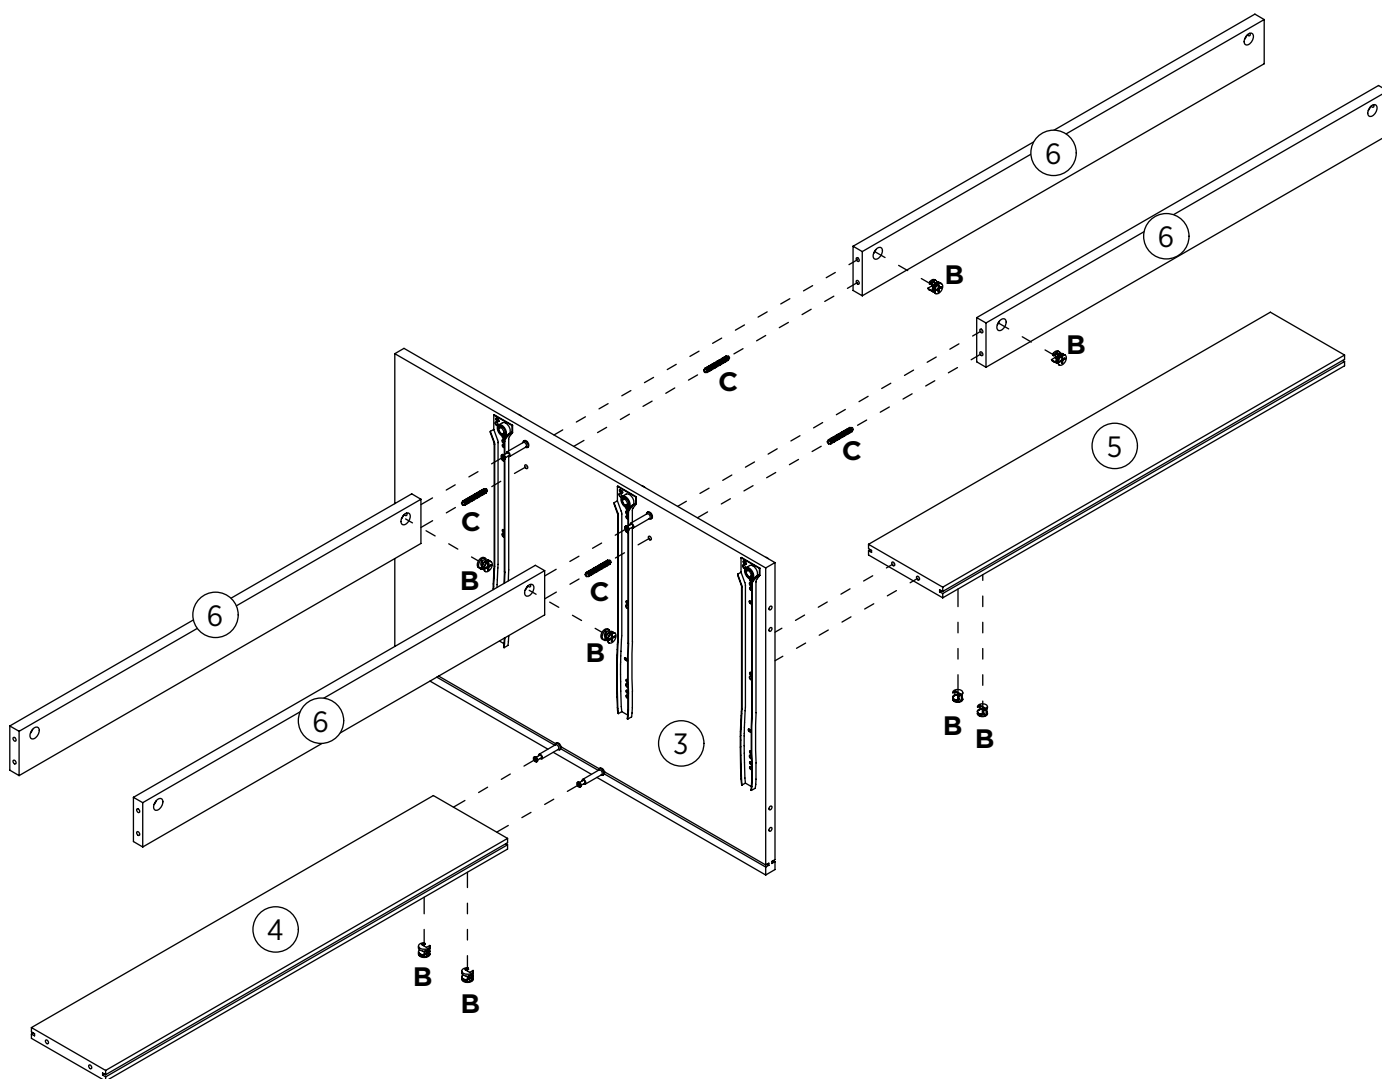

ASSEMBLY INSTRUCTIONS

 
 
STEP 12

Insert cam locks (B) to parts 4, 5 and 6.

Insert wooden dowels (C) to parts 6.

Attach parts 1 and 2 to parts 4, 5 and 6, as shown.


Turn cam locks clockwise to tighten.

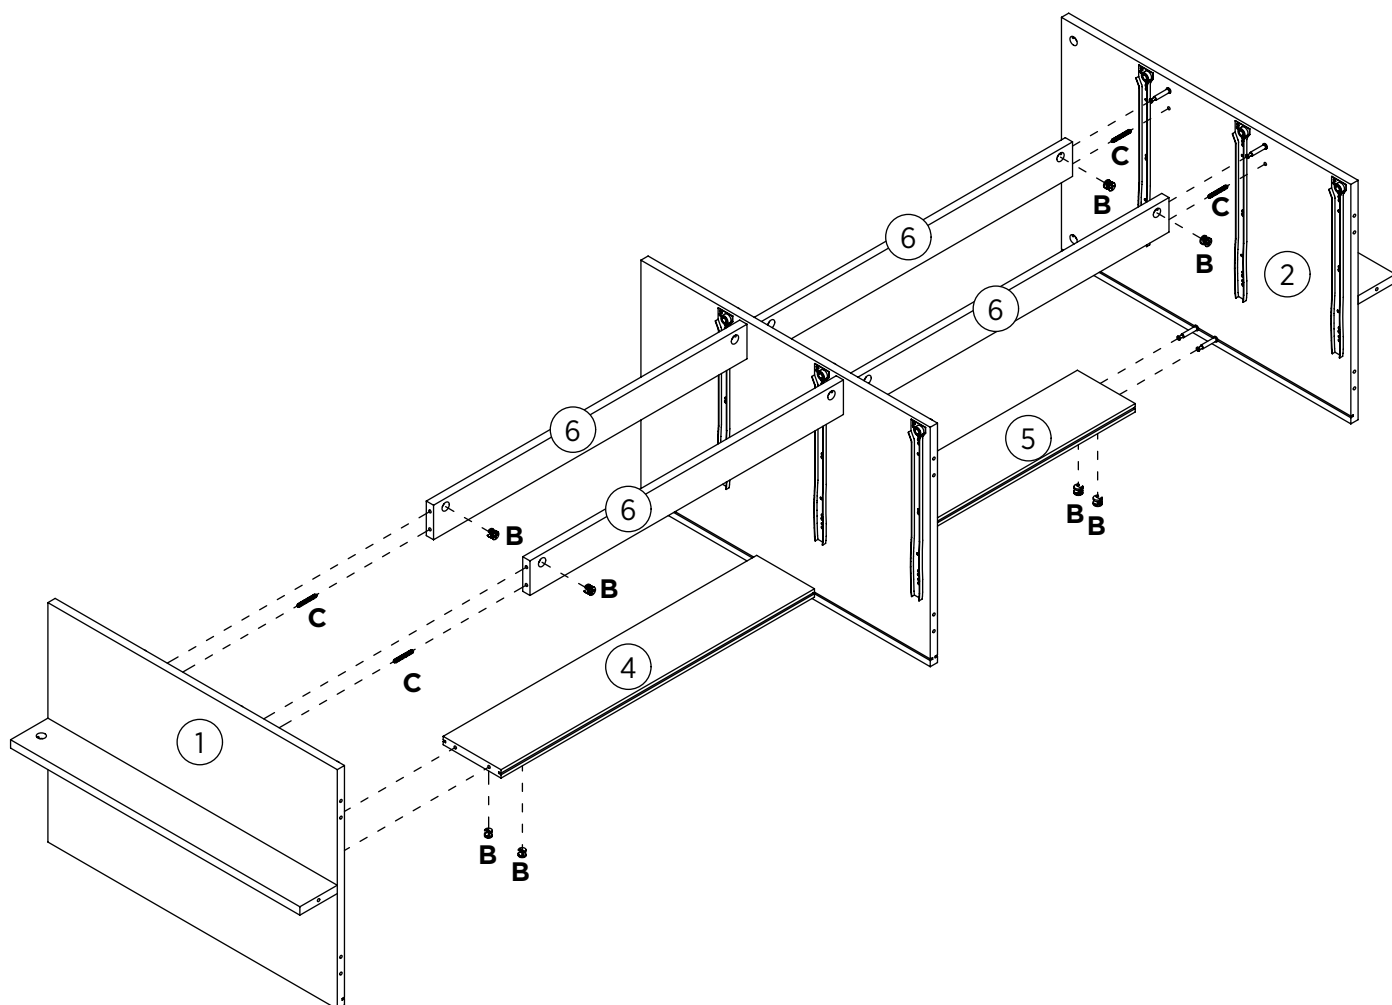

ASSEMBLY INSTRUCTIONS

STEP 13

 Insert parts 8 into grooves between parts 1, 2, 3 and 4, as shown.

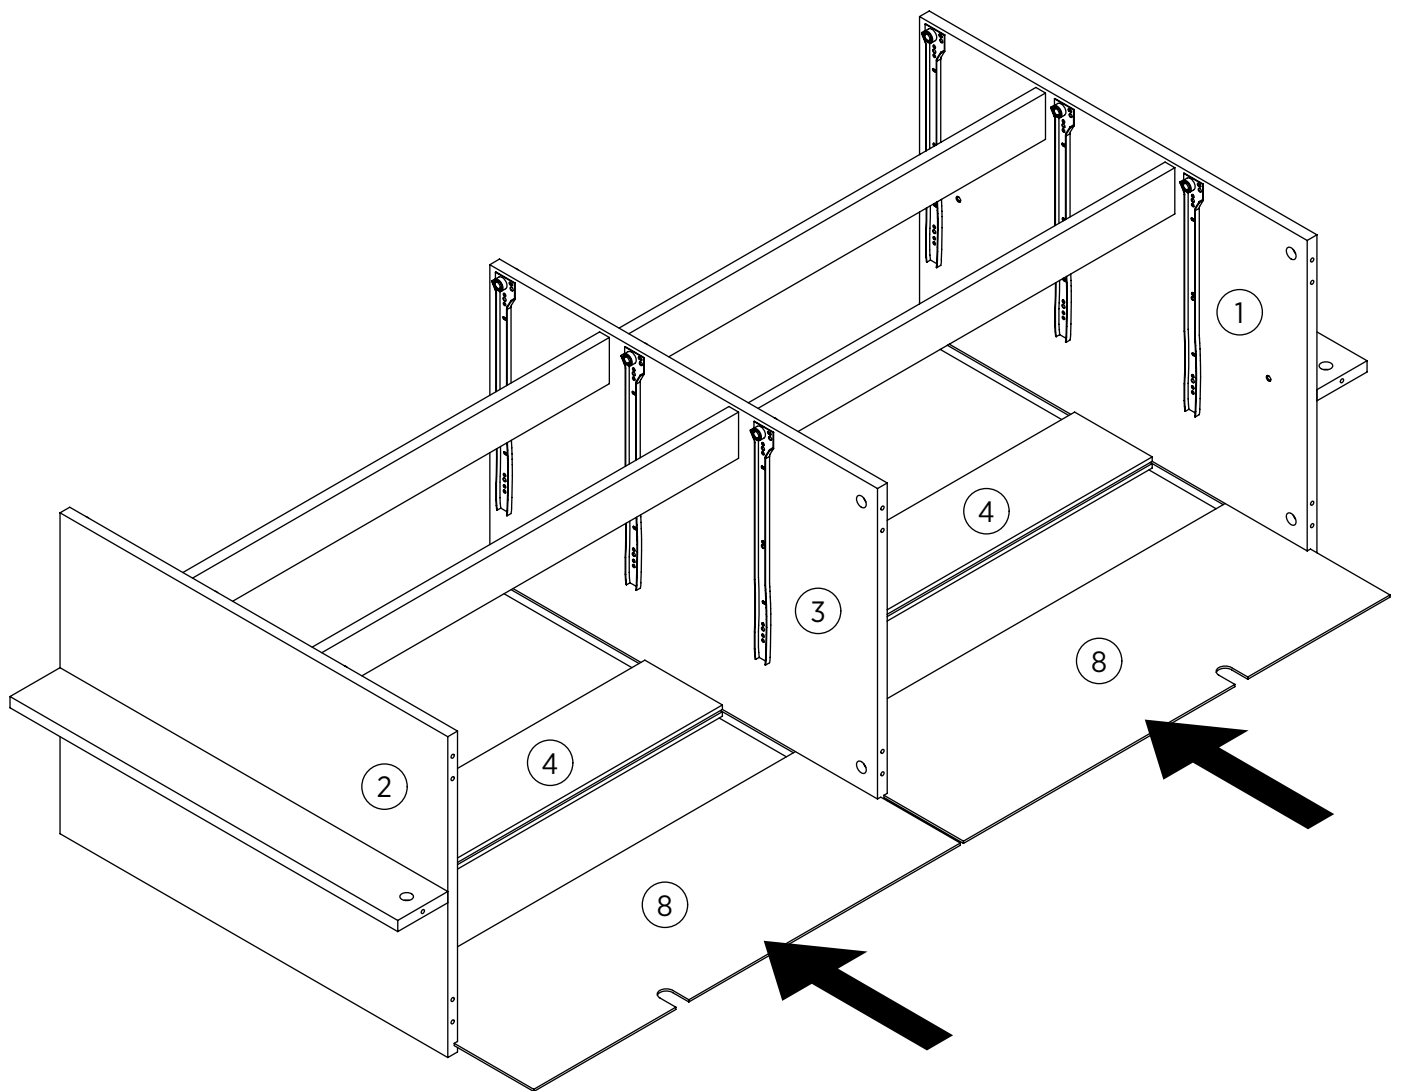


ASSEMBLY INSTRUCTIONS

STEP 14

Insert quickfit screws (A) to part 10.

 
Fix wall bracket (F) to part 10 using screws (E), as shown.




A x 8



 E x 2



F x 2

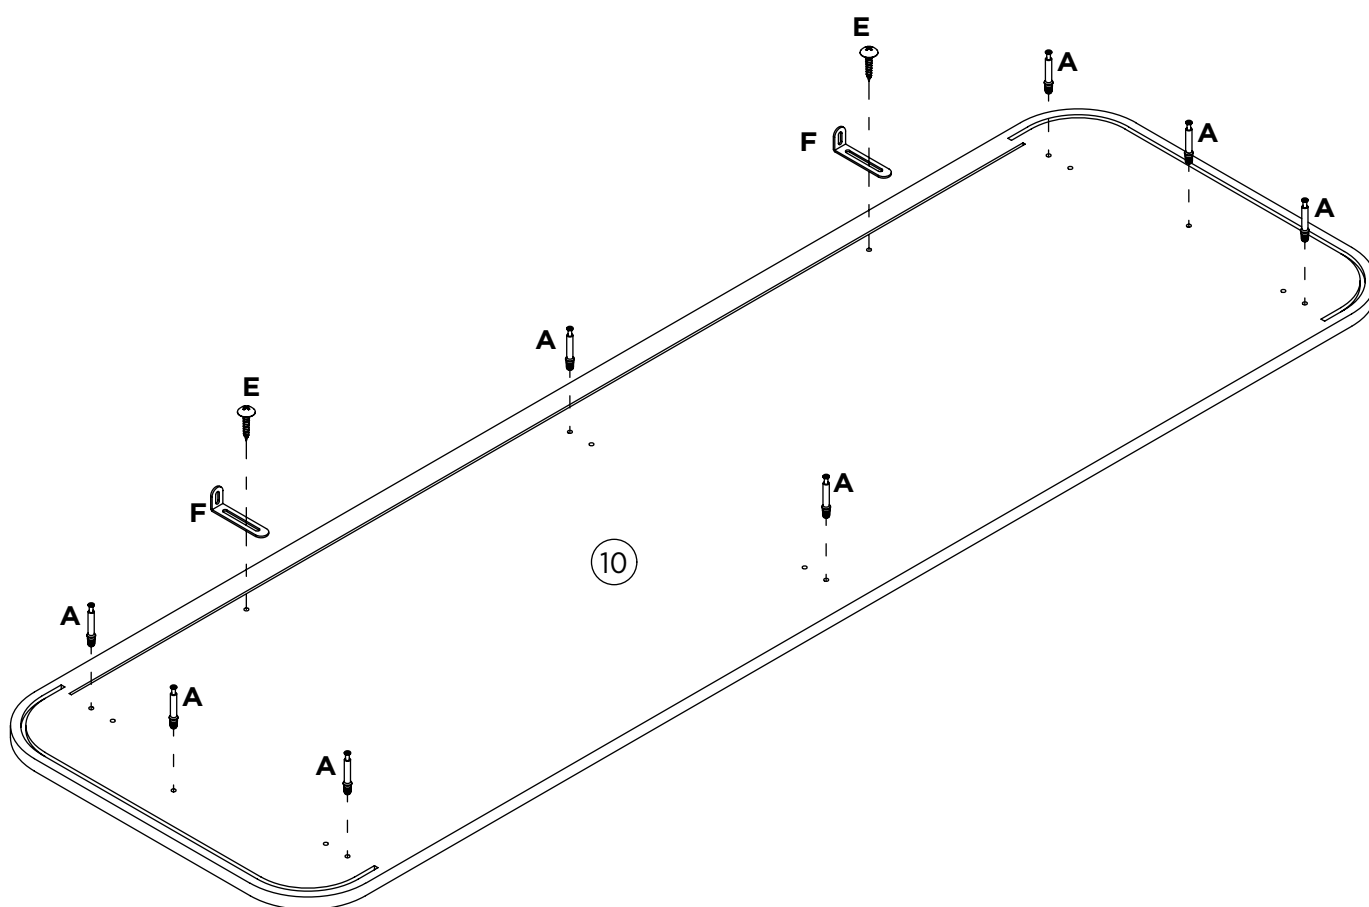 

ASSEMBLY INSTRUCTIONS

 
STEP 15

Insert cam locks (B) to parts 1, 2, 3, 21 and 22.

Insert wooden dowels (C) to parts 1, 2 and 3.

Attach part 10 to parts 1, 2, 3, 21 and 22, as shown.


Turn cam locks clockwise to tighten.

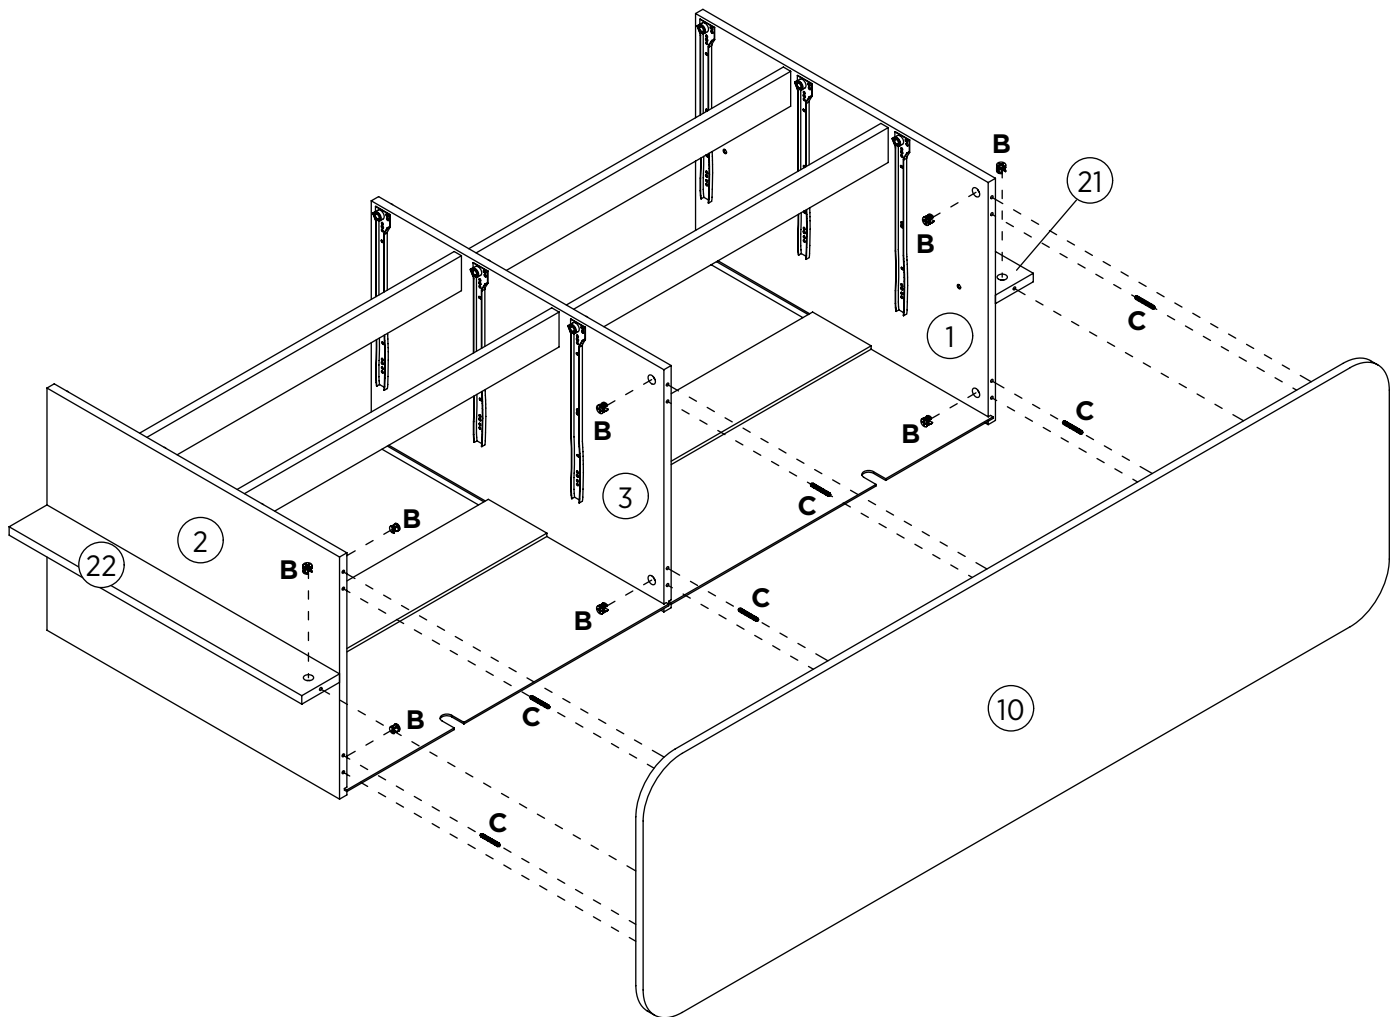

ASSEMBLY INSTRUCTIONS

STEP 16

 
Insert parts 7 into grooves between parts 1, 2, 3 and 4, as shown.

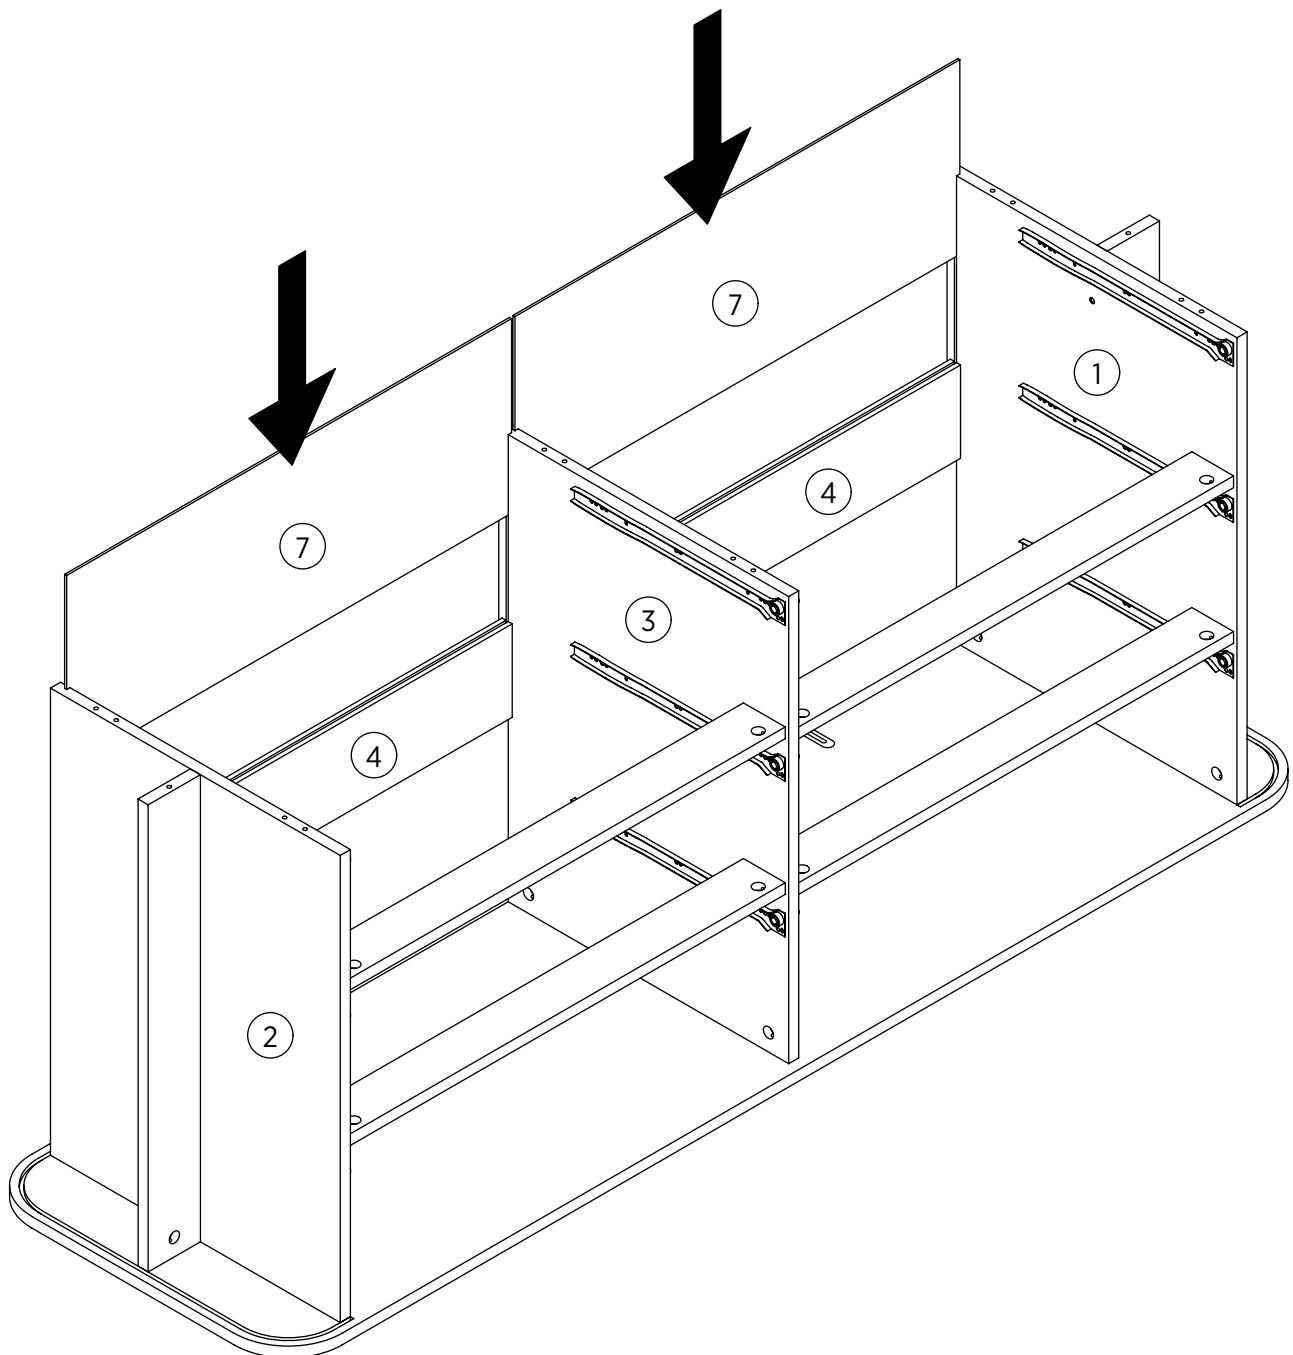

ASSEMBLY INSTRUCTIONS

STEP 17

 Insert parts 11 into grooves of part 10, as shown.



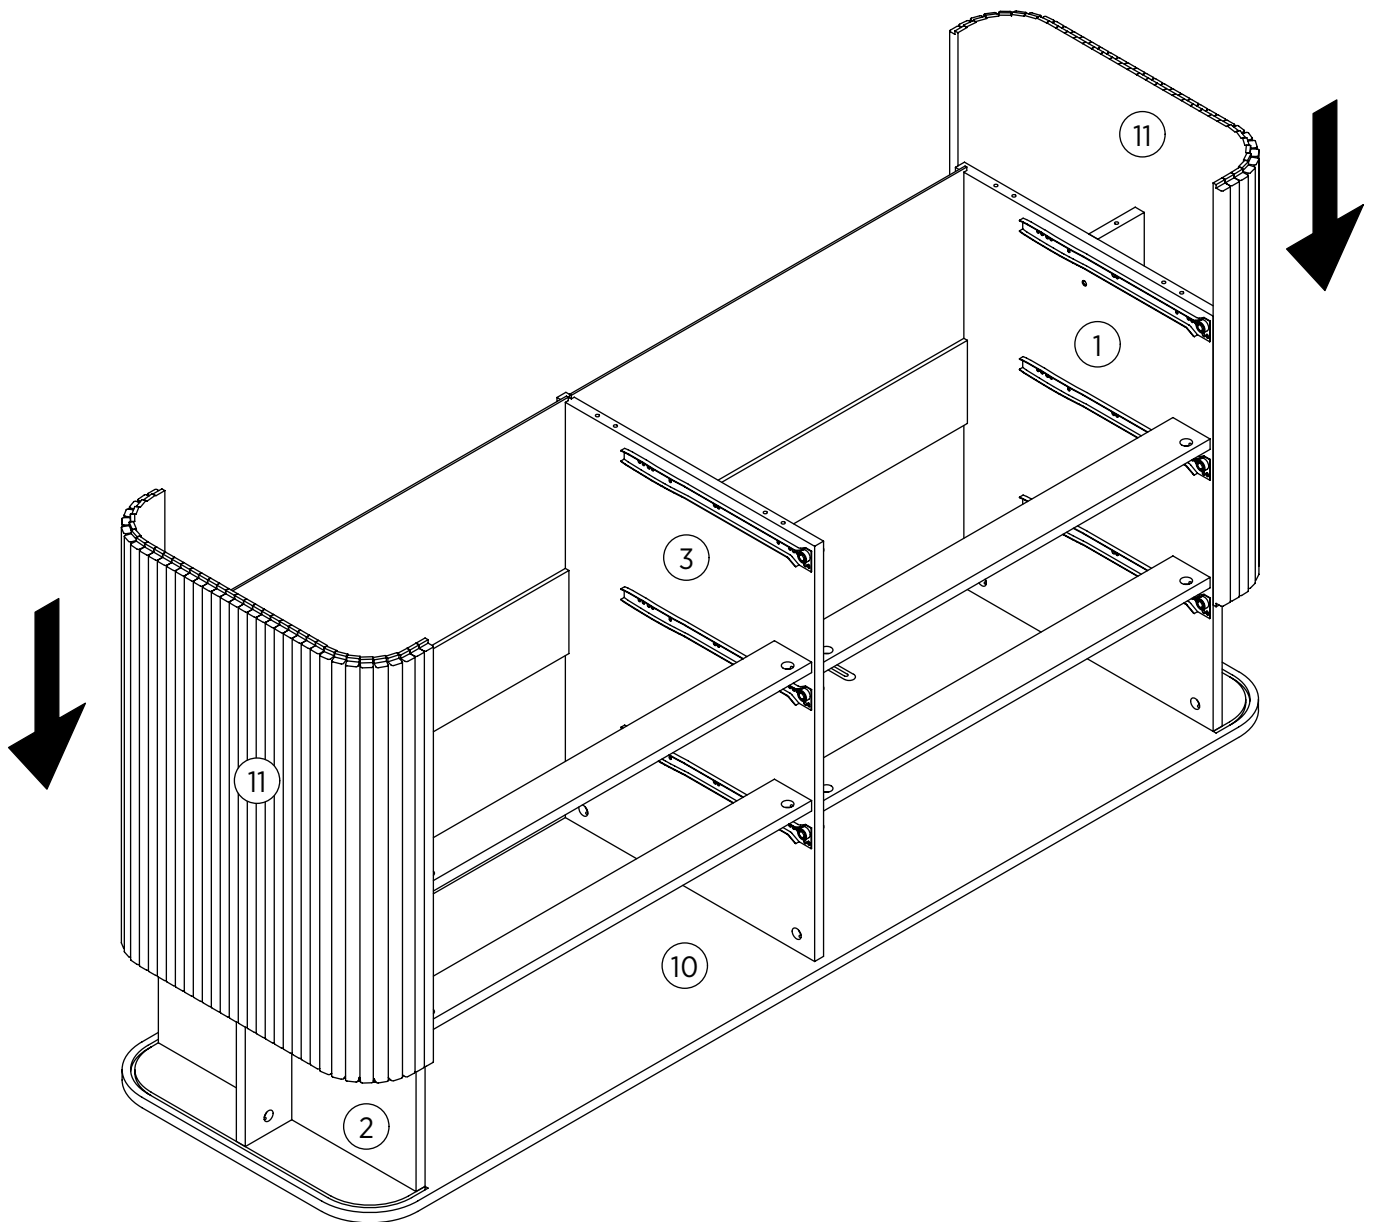


ASSEMBLY INSTRUCTIONS

STEP 18

Insert wooden dowel(C) to parts 1, 2 and 3.

   Fix part 9 to parts 1, 2, 3, 21 and 22 using screws (D), as shown.

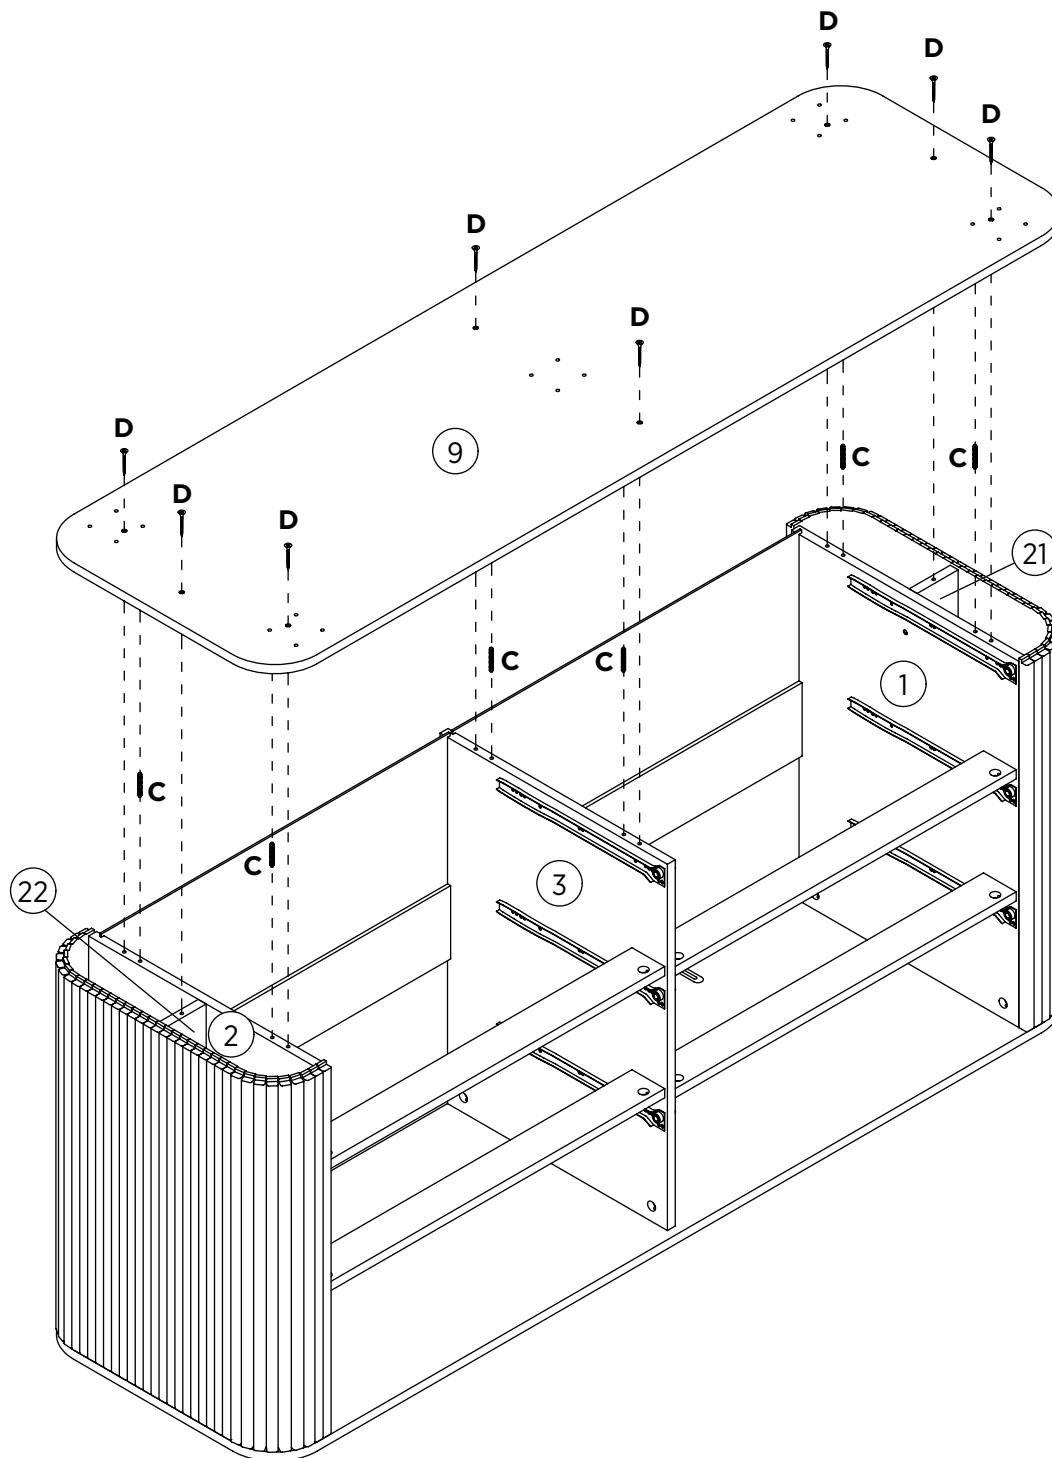


ASSEMBLY INSTRUCTIONS

STEP 19

Fix legs 19 and 20 to part 9 using screws (E), as shown.





 
E x 20

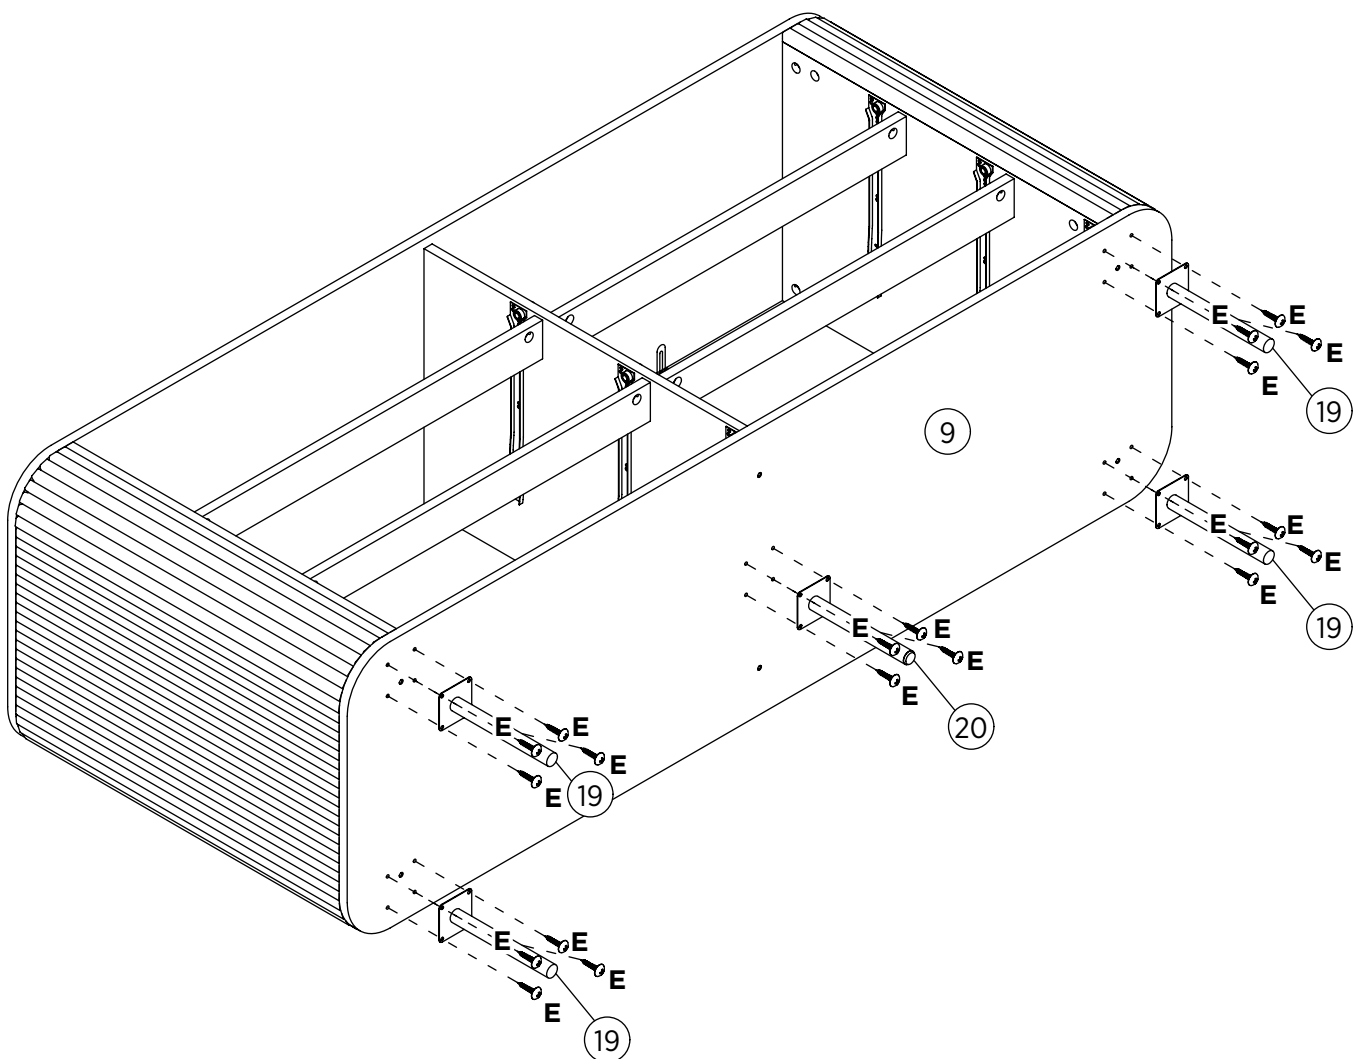

ASSEMBLY INSTRUCTIONS

STEP 20

   To secure backing panels, fix wedges (K) using screws (J), as shown.

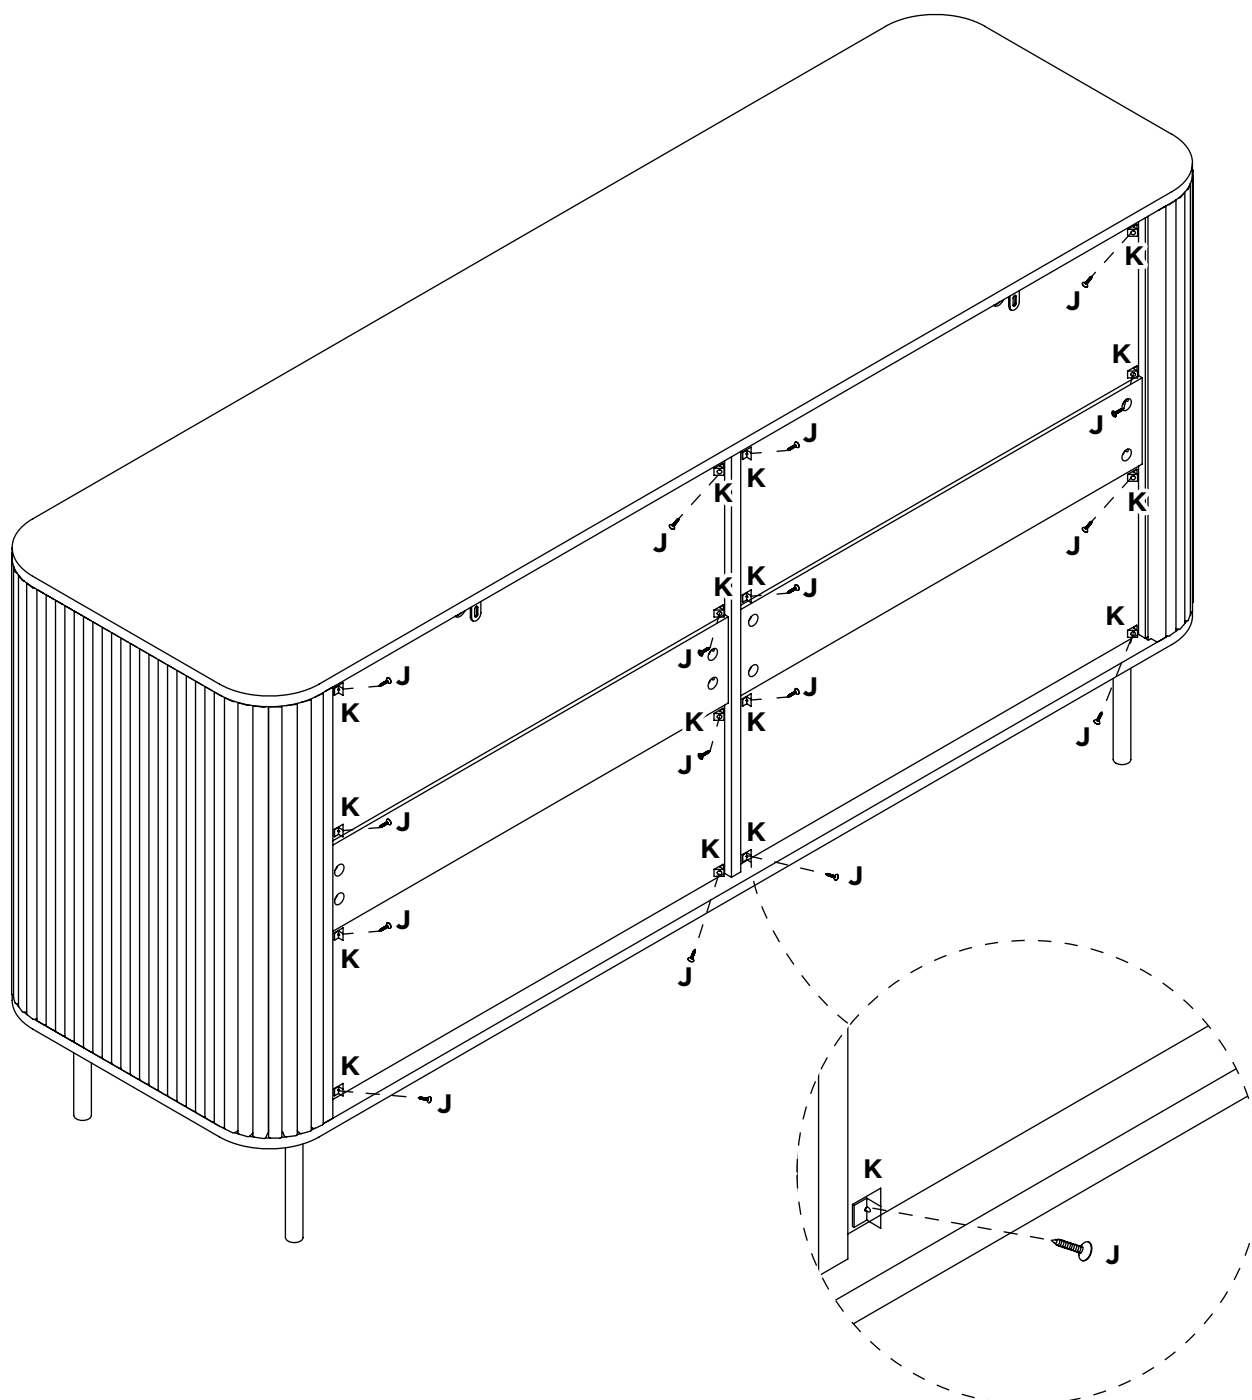

ASSEMBLY INSTRUCTIONS

 
 
STEP 21

For extra stability, you must fix your chest to the wall using the additional hardware (D) and (I), as shown.

Screw (D) is fixed through the bracket (F) and into the wall plug (I).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.


Please consider the wall mounting & fixing guide when securing your chest.

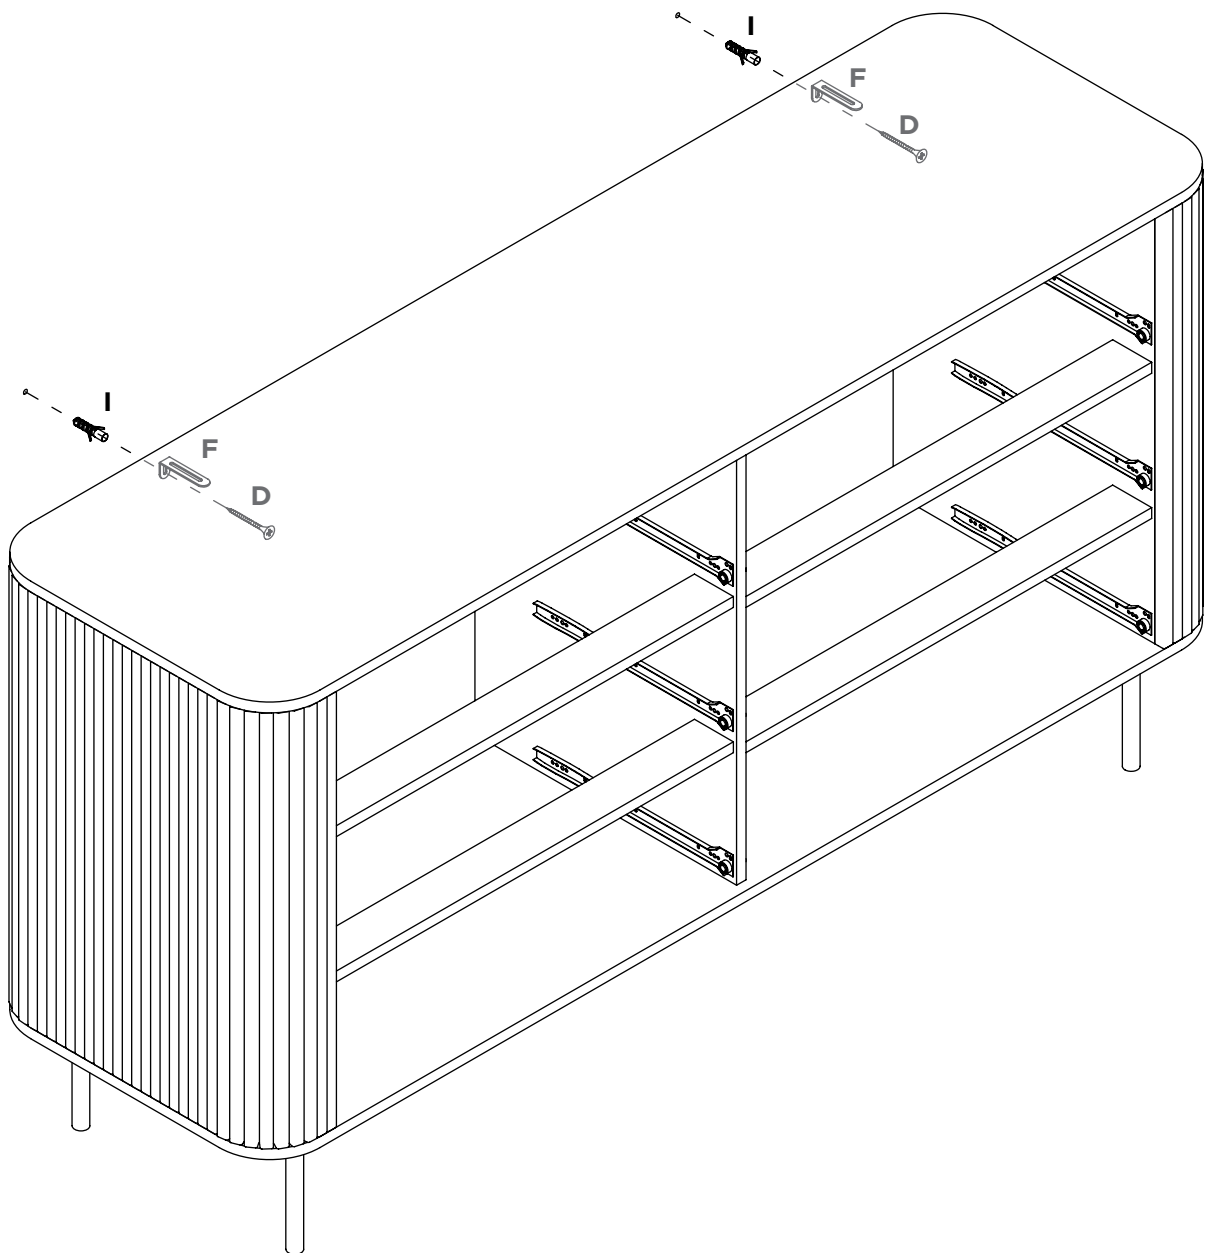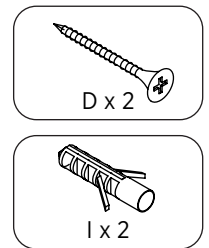

ASSEMBLY INSTRUCTIONS


STEP 22

 Insert drawers into assembled unit, as shown..

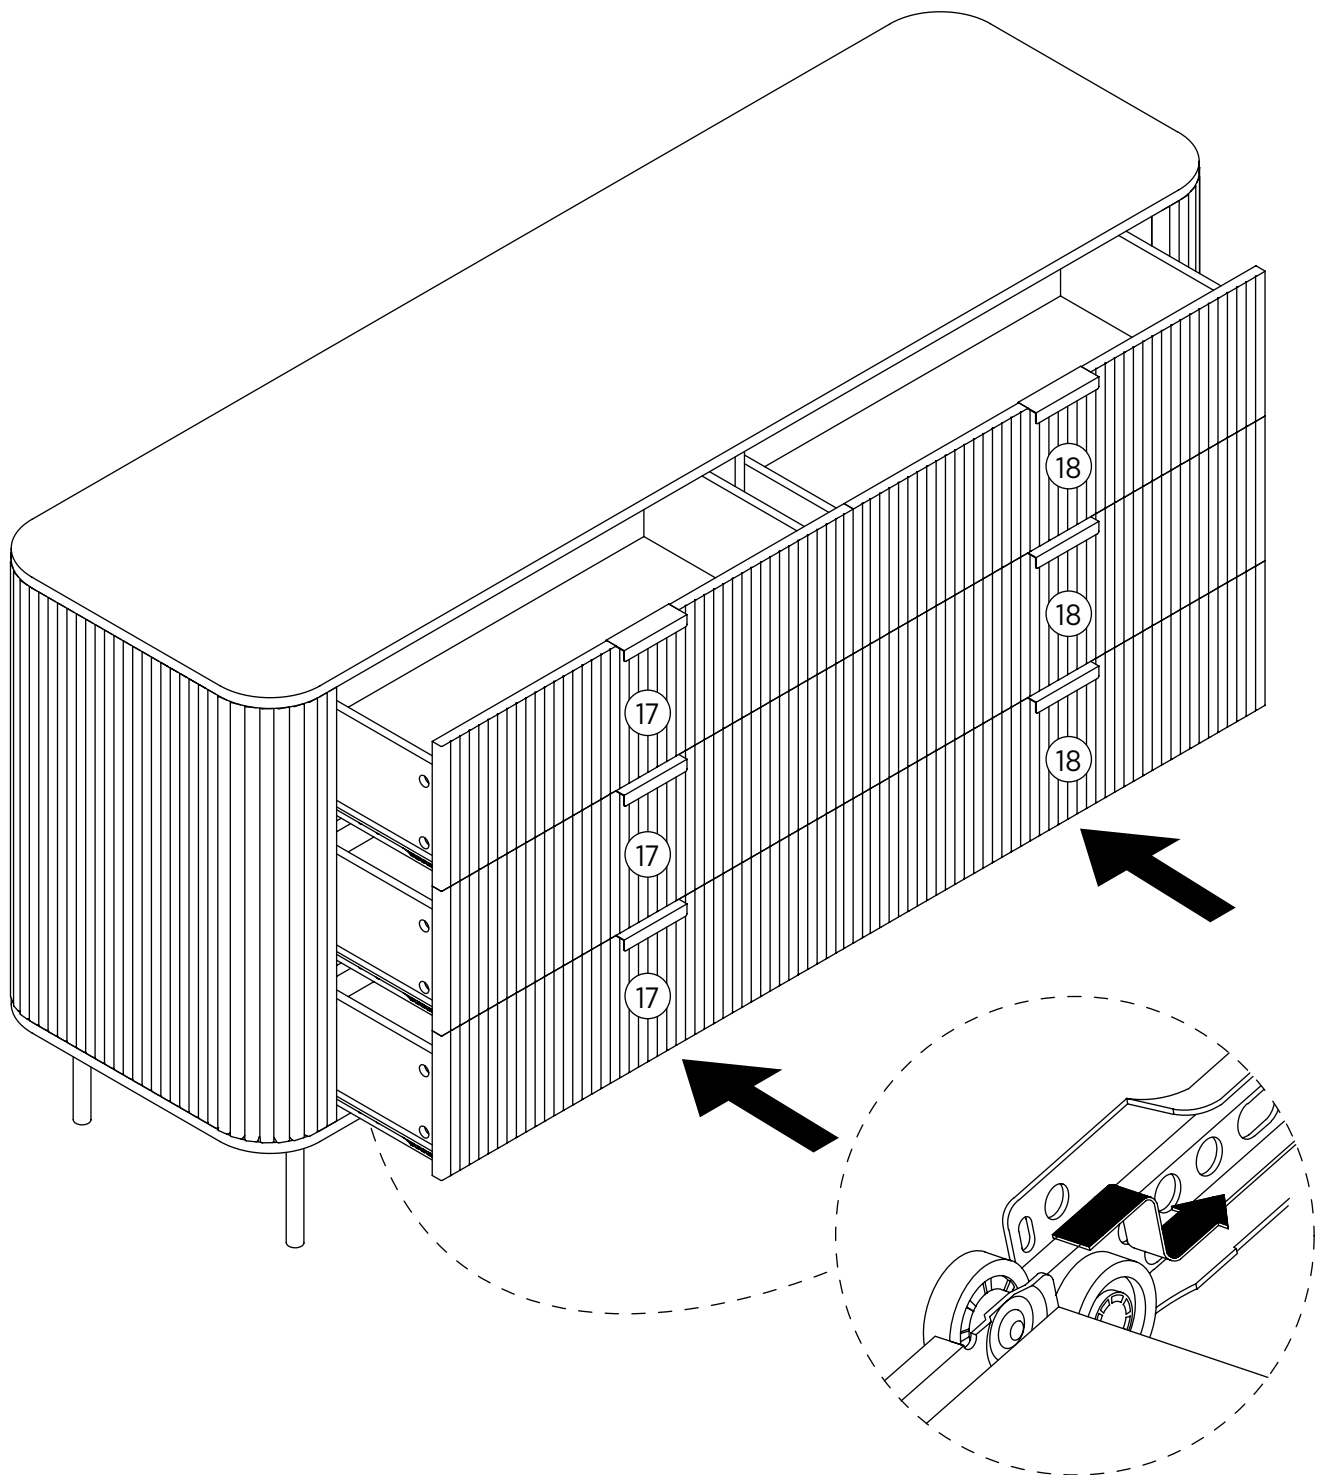

ASSEMBLY INSTRUCTIONS

 STEP 23

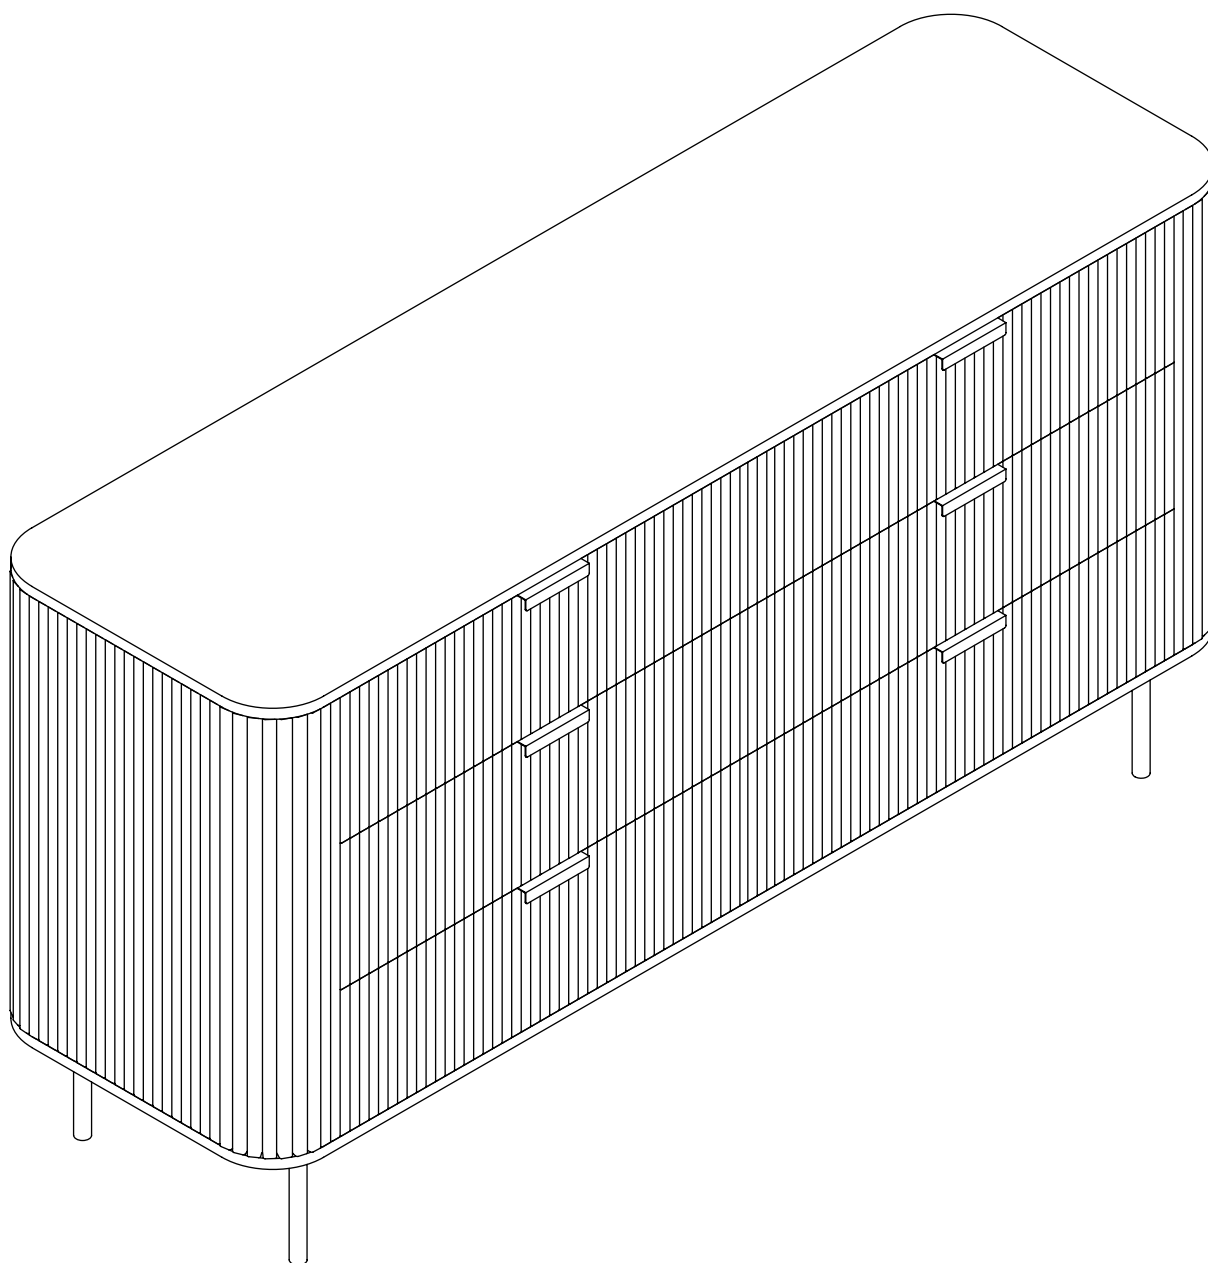

Maximum recommended weight is 15 kg on top, 5 kg inside each drawers.

Your chest of 6 drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

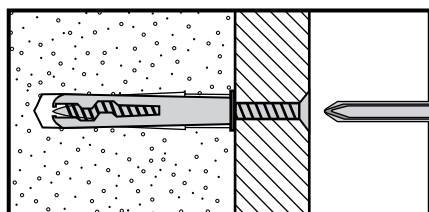


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

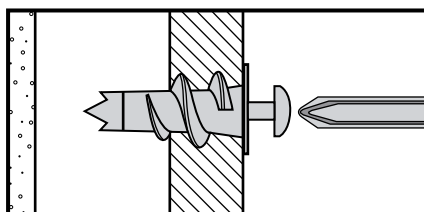


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

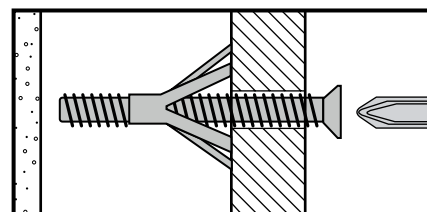


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

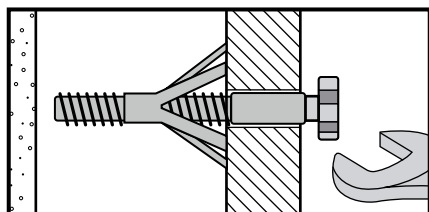


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

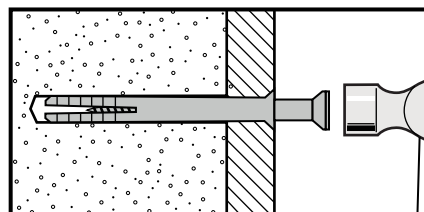

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

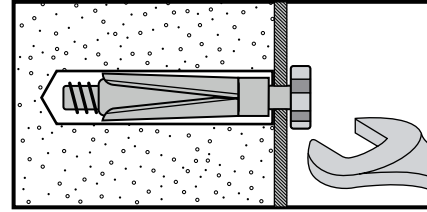

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.