 


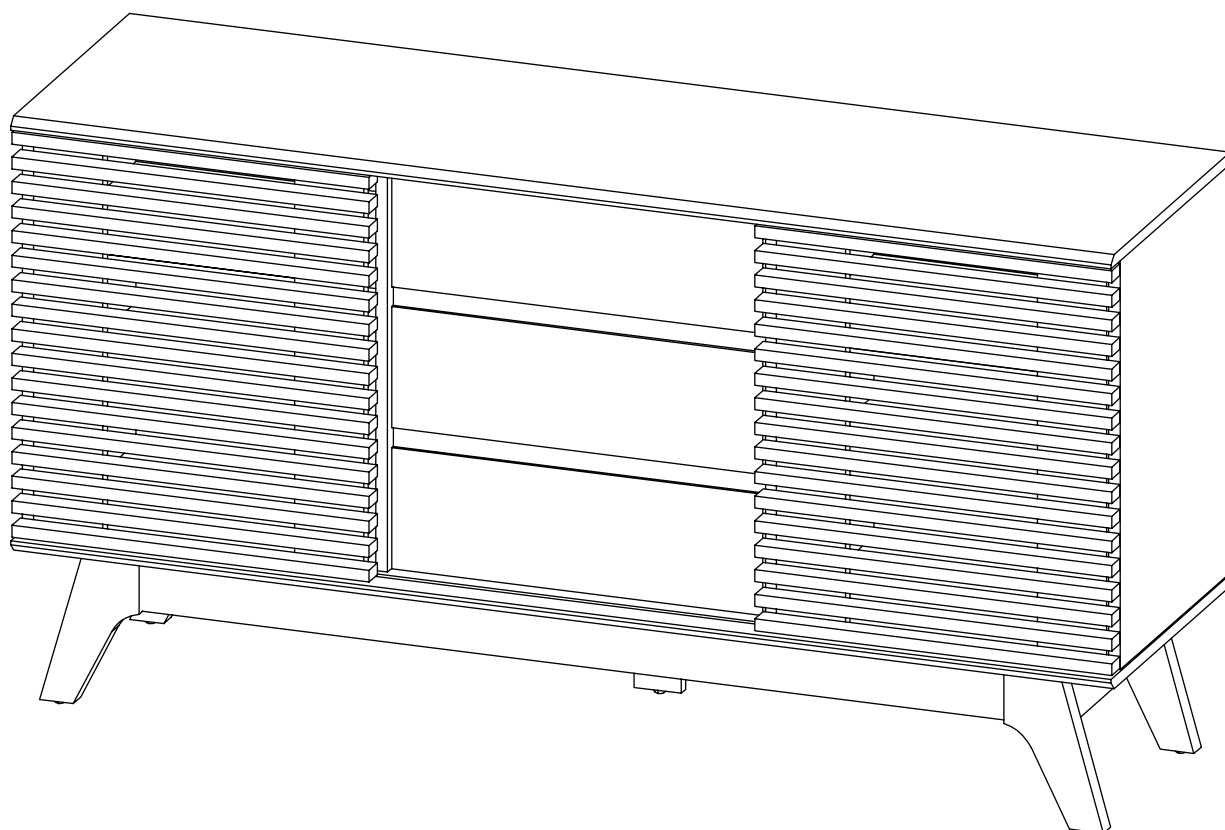

BUFFET

ASSEMBLY INSTRUCTIONS

 


TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.




CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

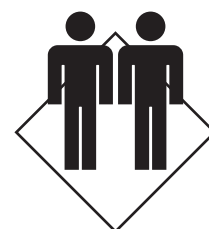

ASSEMBLY REQUIREMENTS

   
- ✓ Equipment: phillips head screwdriver, flat head screwdriver and soft rubber hammer
- ✓ 2 x adults required
- ✓ 1m x 2m assembly space required
- ✓ 2 hour assembly time approx.



USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

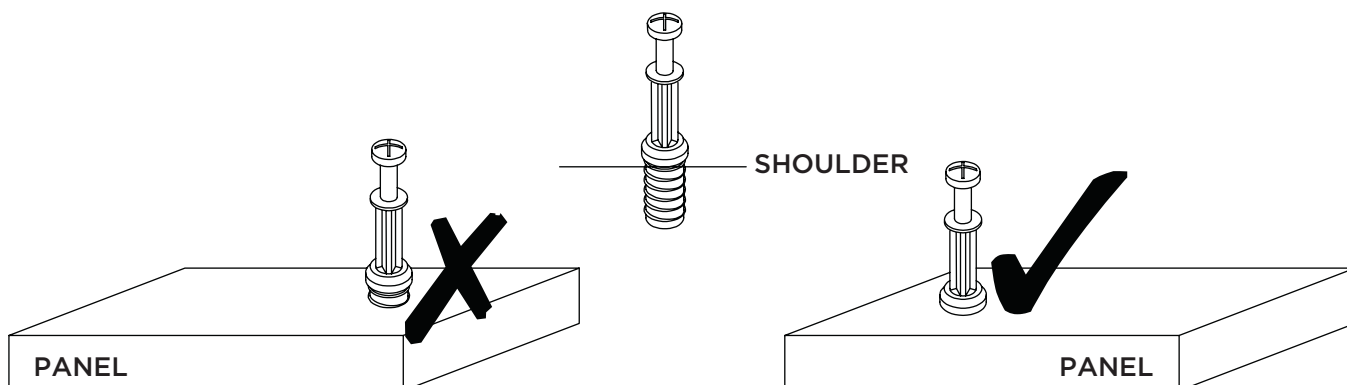


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

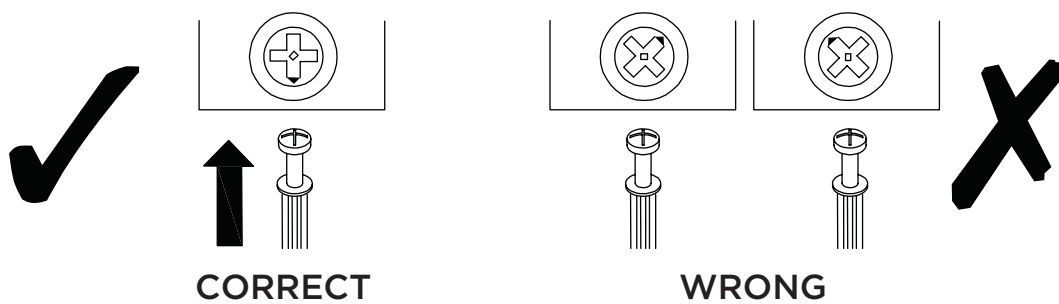

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

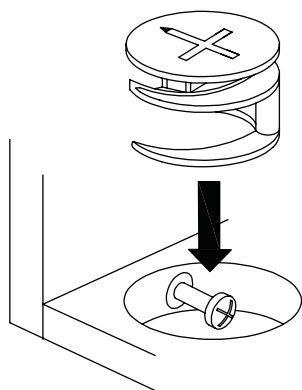


Turn cam lock clockwise to tighten.

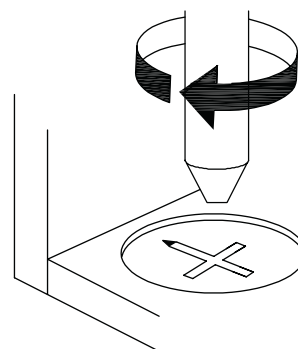 

HARDWARE LIST



 
22 x A
Cam Lock



22 x B
Quickfit
Screw



 22 x C
Cover



40 x D
Wooden Dowel



12 x E
Screw



1 x F
Allen Key



16 x G
Screw



44 x H
Screw



2 x I
Screw



 
12 x J
Screw



16 x K
Screw




5 x L
Leg



16 x M
Shelf Support



 
4 x N
L Bracket

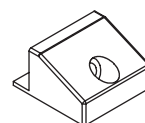


10 x O
Wedge



 10 x P
Screw

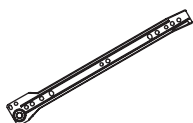

6 x Q
Outer Drawer Runner

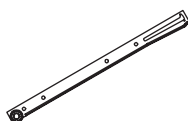 

6 x R
Inner Drawer Runner



4 x S
Roller



4 x T
Roller



 
4 x U
Wall Bracket



2 x V
Screw




2 x W
Screw

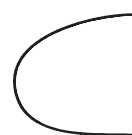


2 x X
Cable Tie

 
PARTS LIST

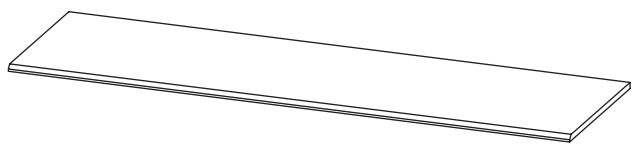

1
1 PC

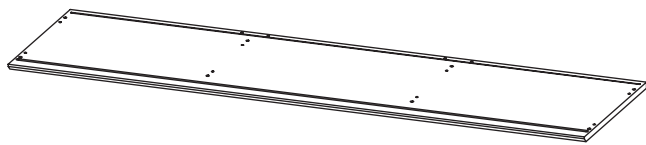 


2
1 PC

 

3
1 PC



 
4
1 PC




5
1 PC



 6
1 PC




7
2 PCS

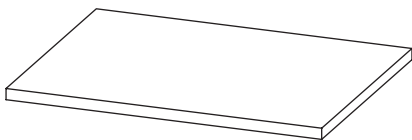 


8
4 PCS



 9
2 PCS

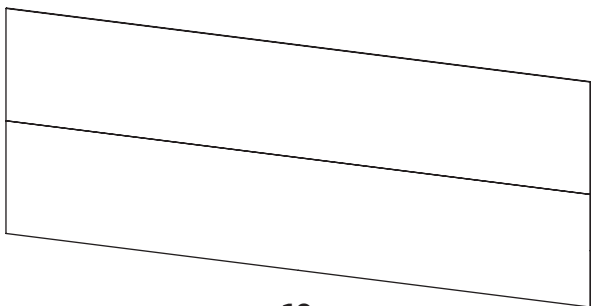


10
1 PC

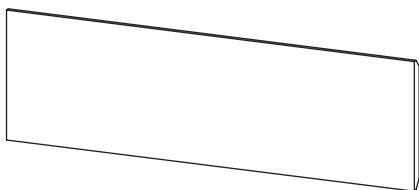 


11
3 PC

 
PARTS LIST (CONT.)

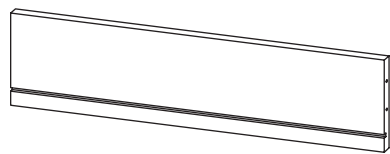


12
3 PCS

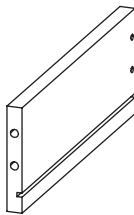 


13
3 PCS

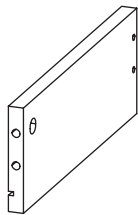 


14
3 PCS

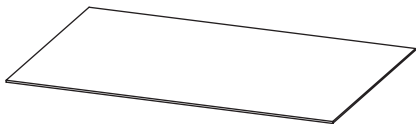 


15
3 PCS

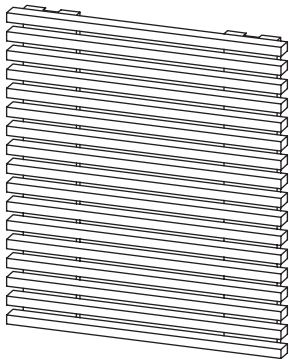 

16
2 PCS

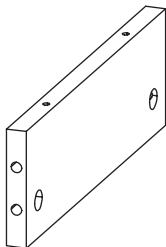 


17
2 PCS

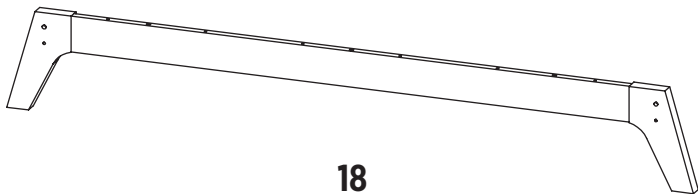 

18
1 PC



 20
1 PC


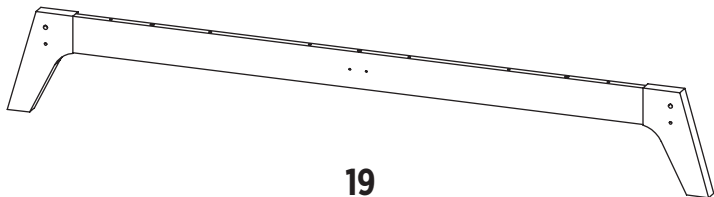


19
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

  Insert quickfit screws (B) to part 1.

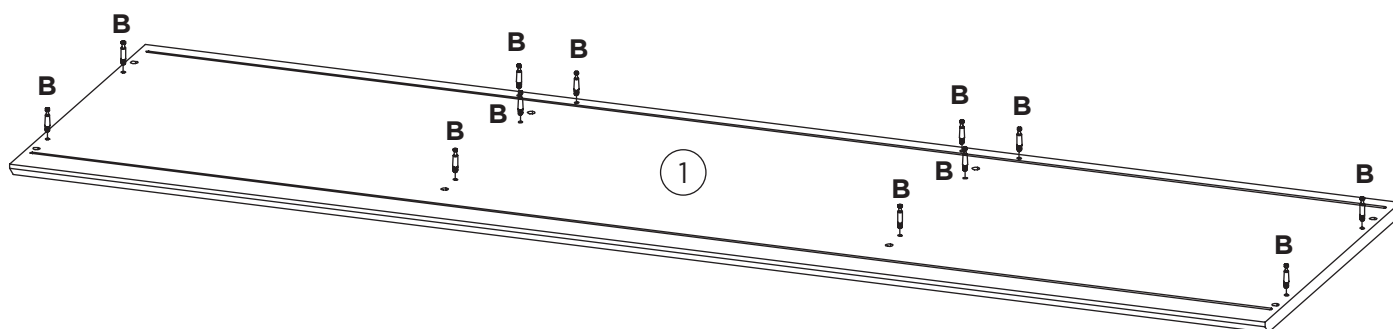

ASSEMBLY INSTRUCTIONS

 
STEP 2

Insert cam locks (A) to parts 3, 4, 5 and 6.


Insert wooden dowels (D) to parts 3, 4, 5, 6 and 7, as shown.



A x 8



D x 24

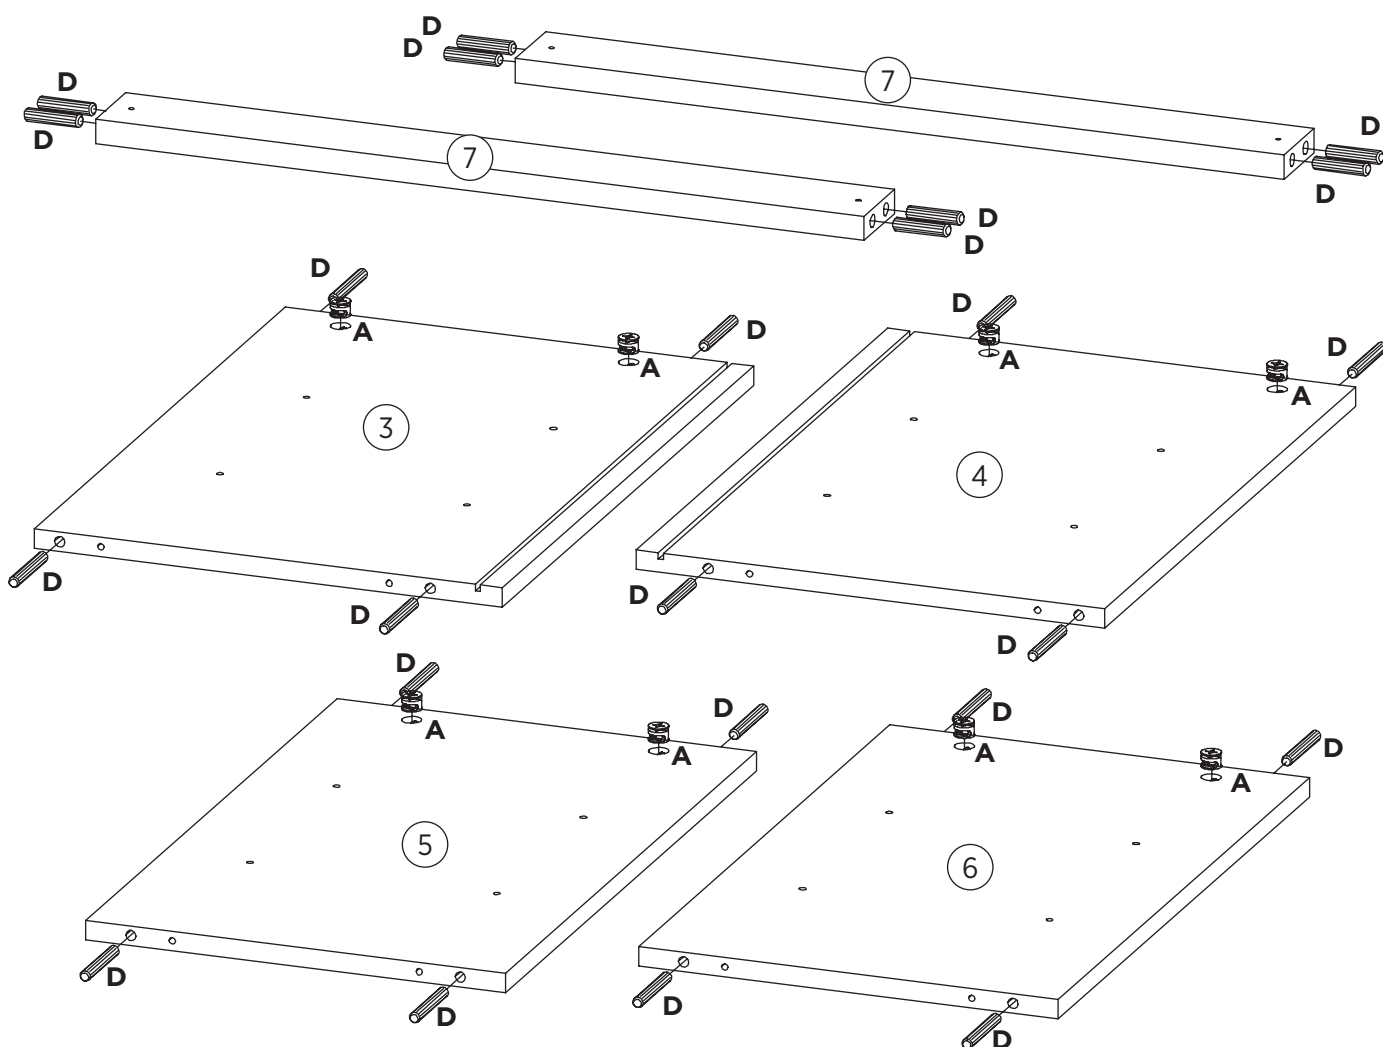 

ASSEMBLY INSTRUCTIONS

STEP 3

 
Insert cam locks (A) to parts 9, 13 and 14..

Insert quickfit screws (B) to parts 11.


Insert wooden dowels (D) to parts 13 and 14, as shown.




A x 10



B x 6

 

D x 6

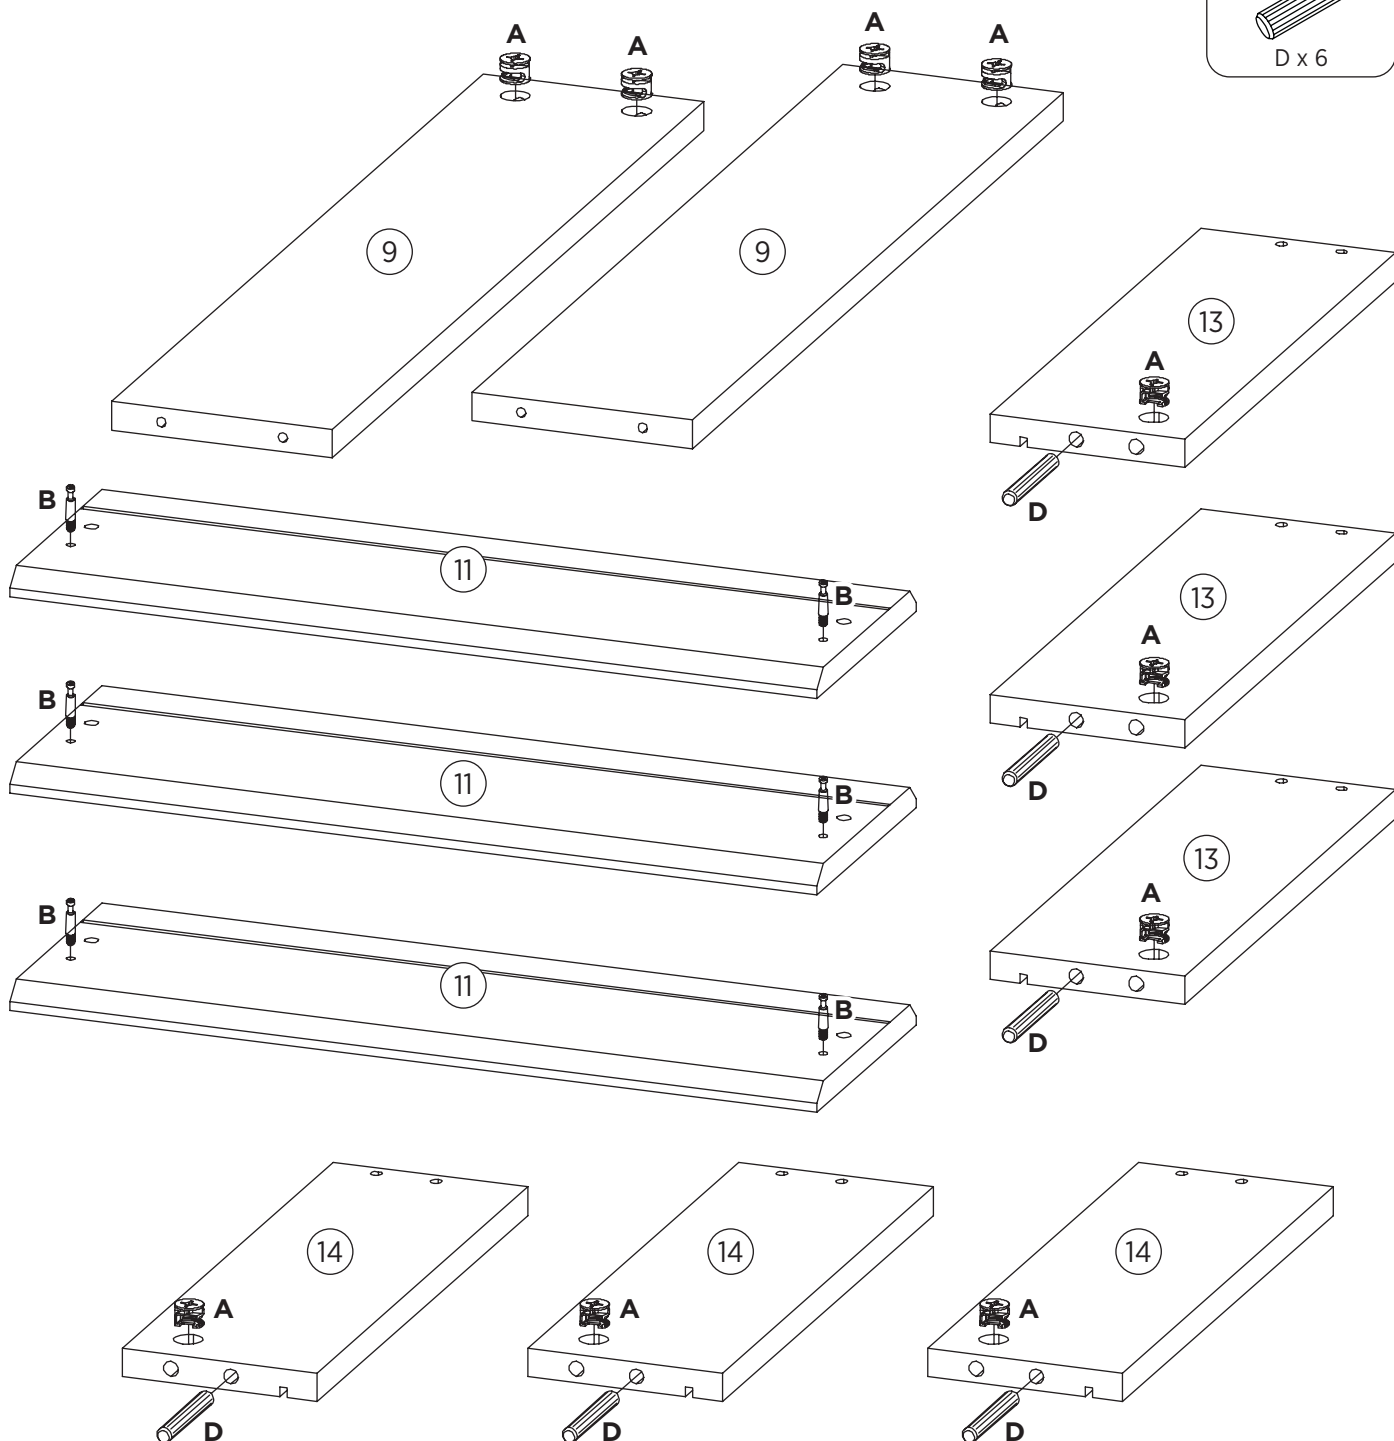 

ASSEMBLY INSTRUCTIONS

STEP 4

Insert cam locks (A) to parts 17.

Insert quickfit screws (B) to parts 18 and 19.

 
Insert wooden dowels (D) to parts 18 and 19, as shown.




A x 4



B x 4



D x 10

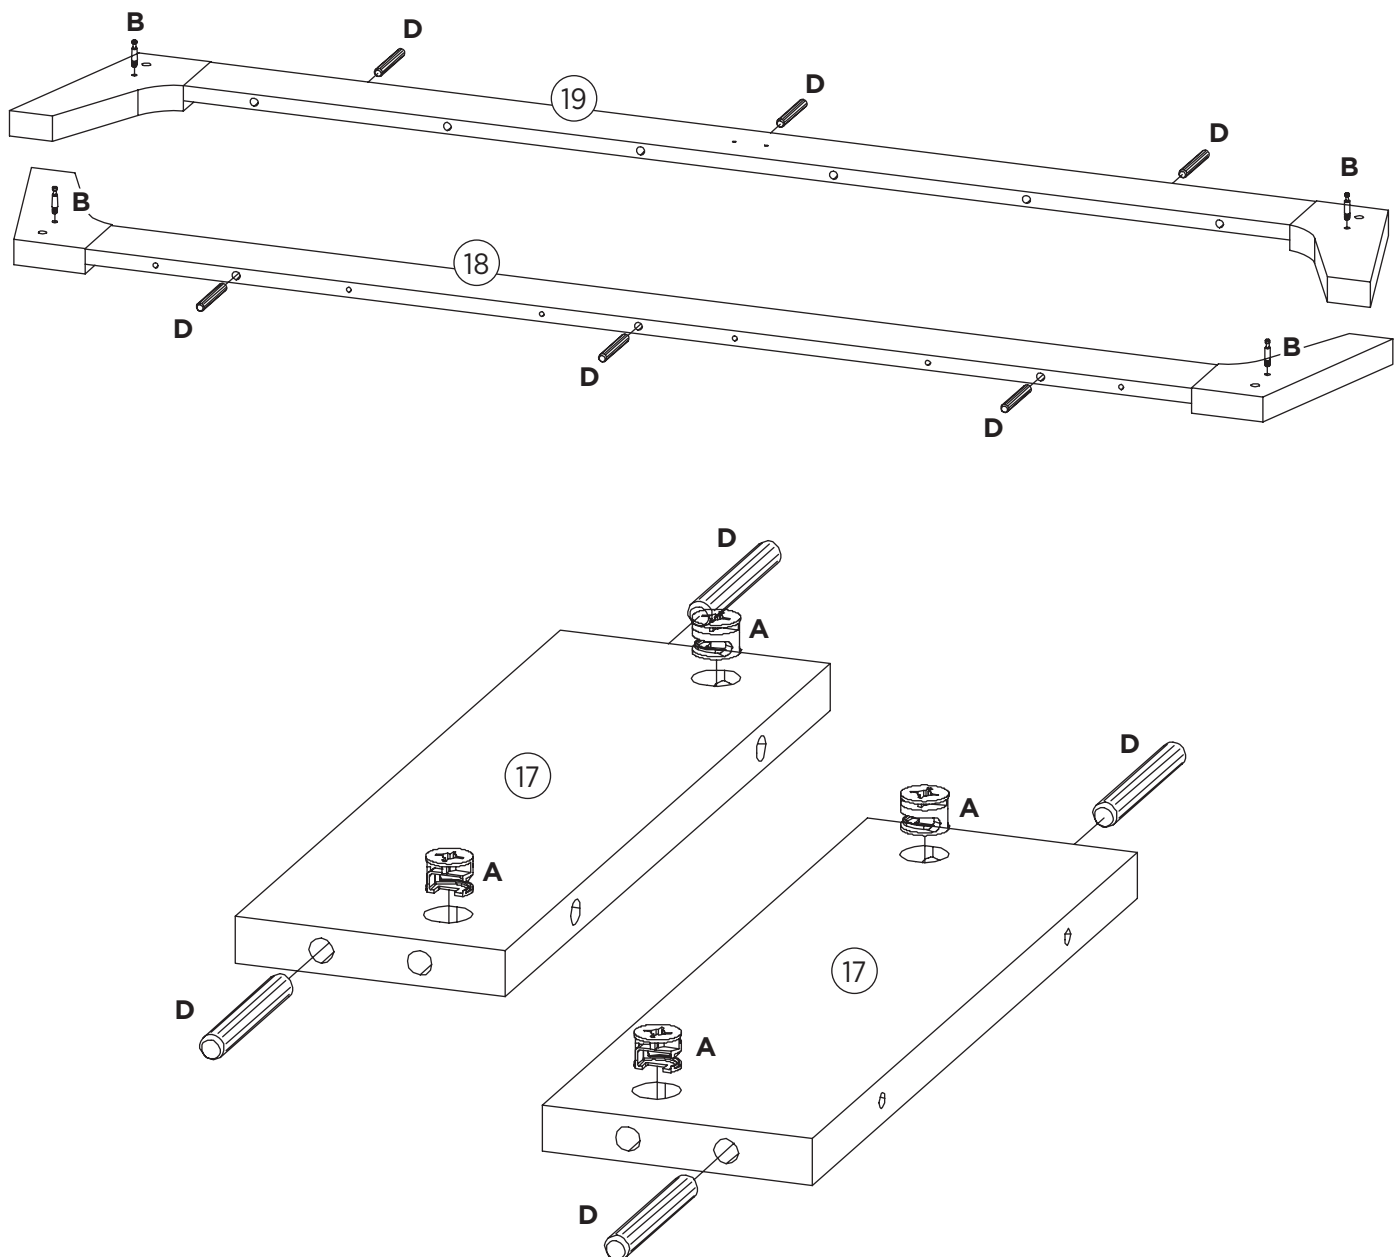 

ASSEMBLY INSTRUCTIONS

STEP 5

 
Fix outer drawer runners (Q) to parts 5 and 6 using screws (H), as shown.



H x 18



Q x 6

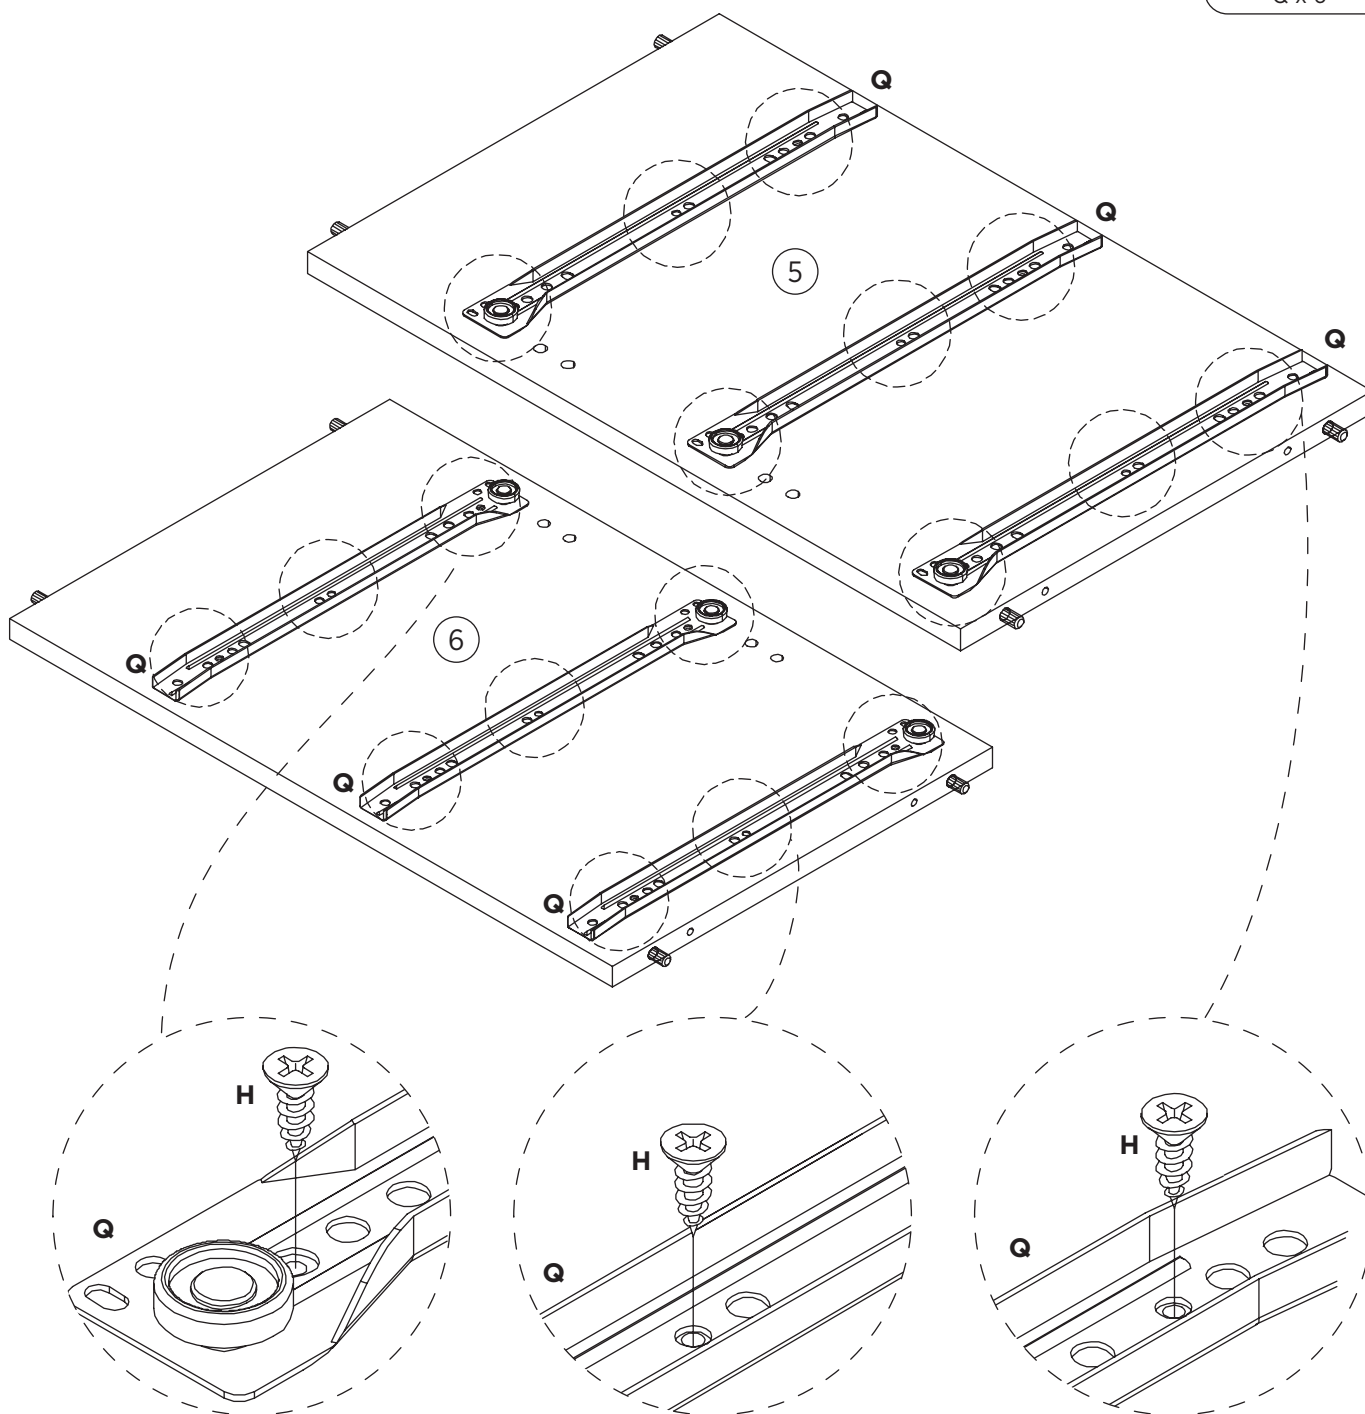

ASSEMBLY INSTRUCTIONS

STEP 6

 
Fix bracket (N) to parts 7 using screws (H), as shown.



H x 4



N x 4

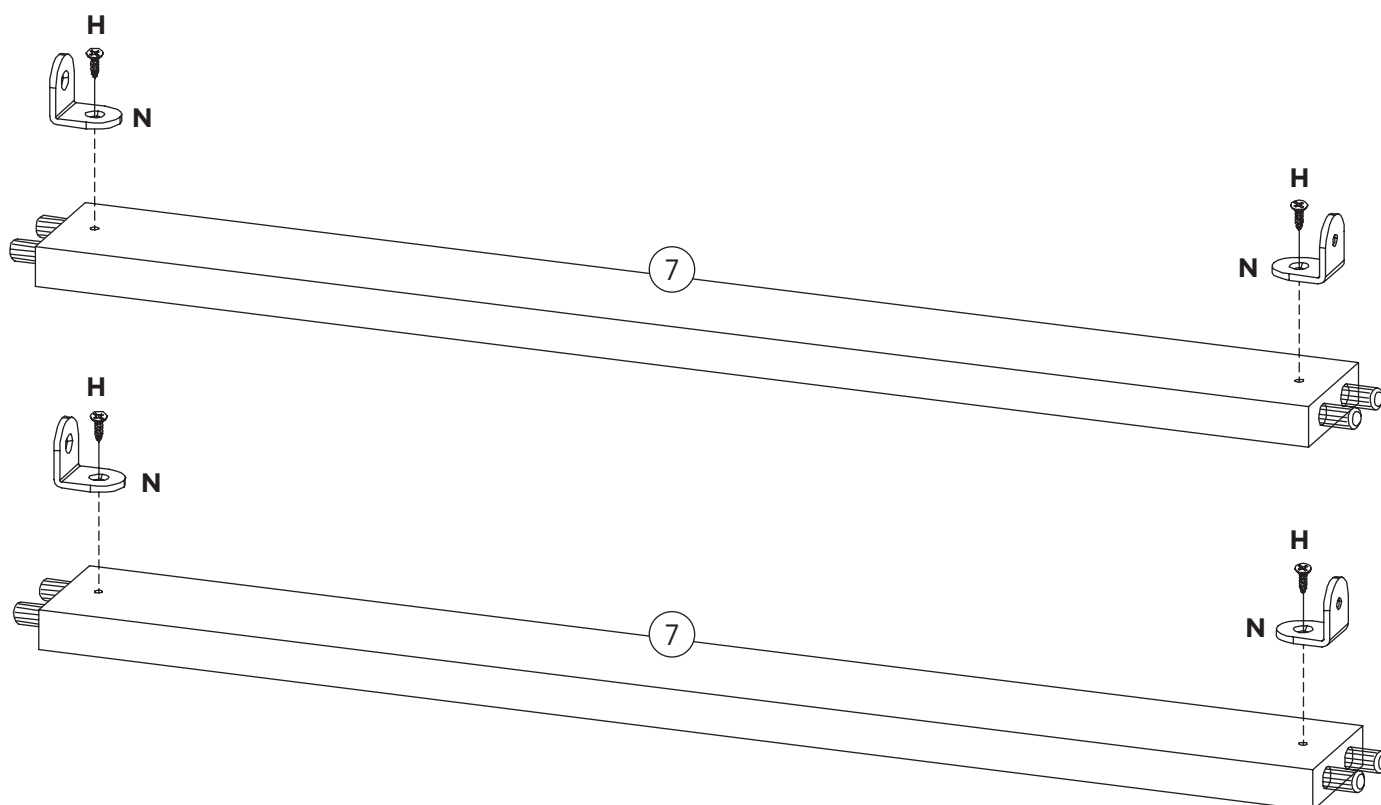


ASSEMBLY INSTRUCTIONS

STEP 7

Fix parts 7 to parts 5 and 6 using screws (H), as shown.



 H x 4

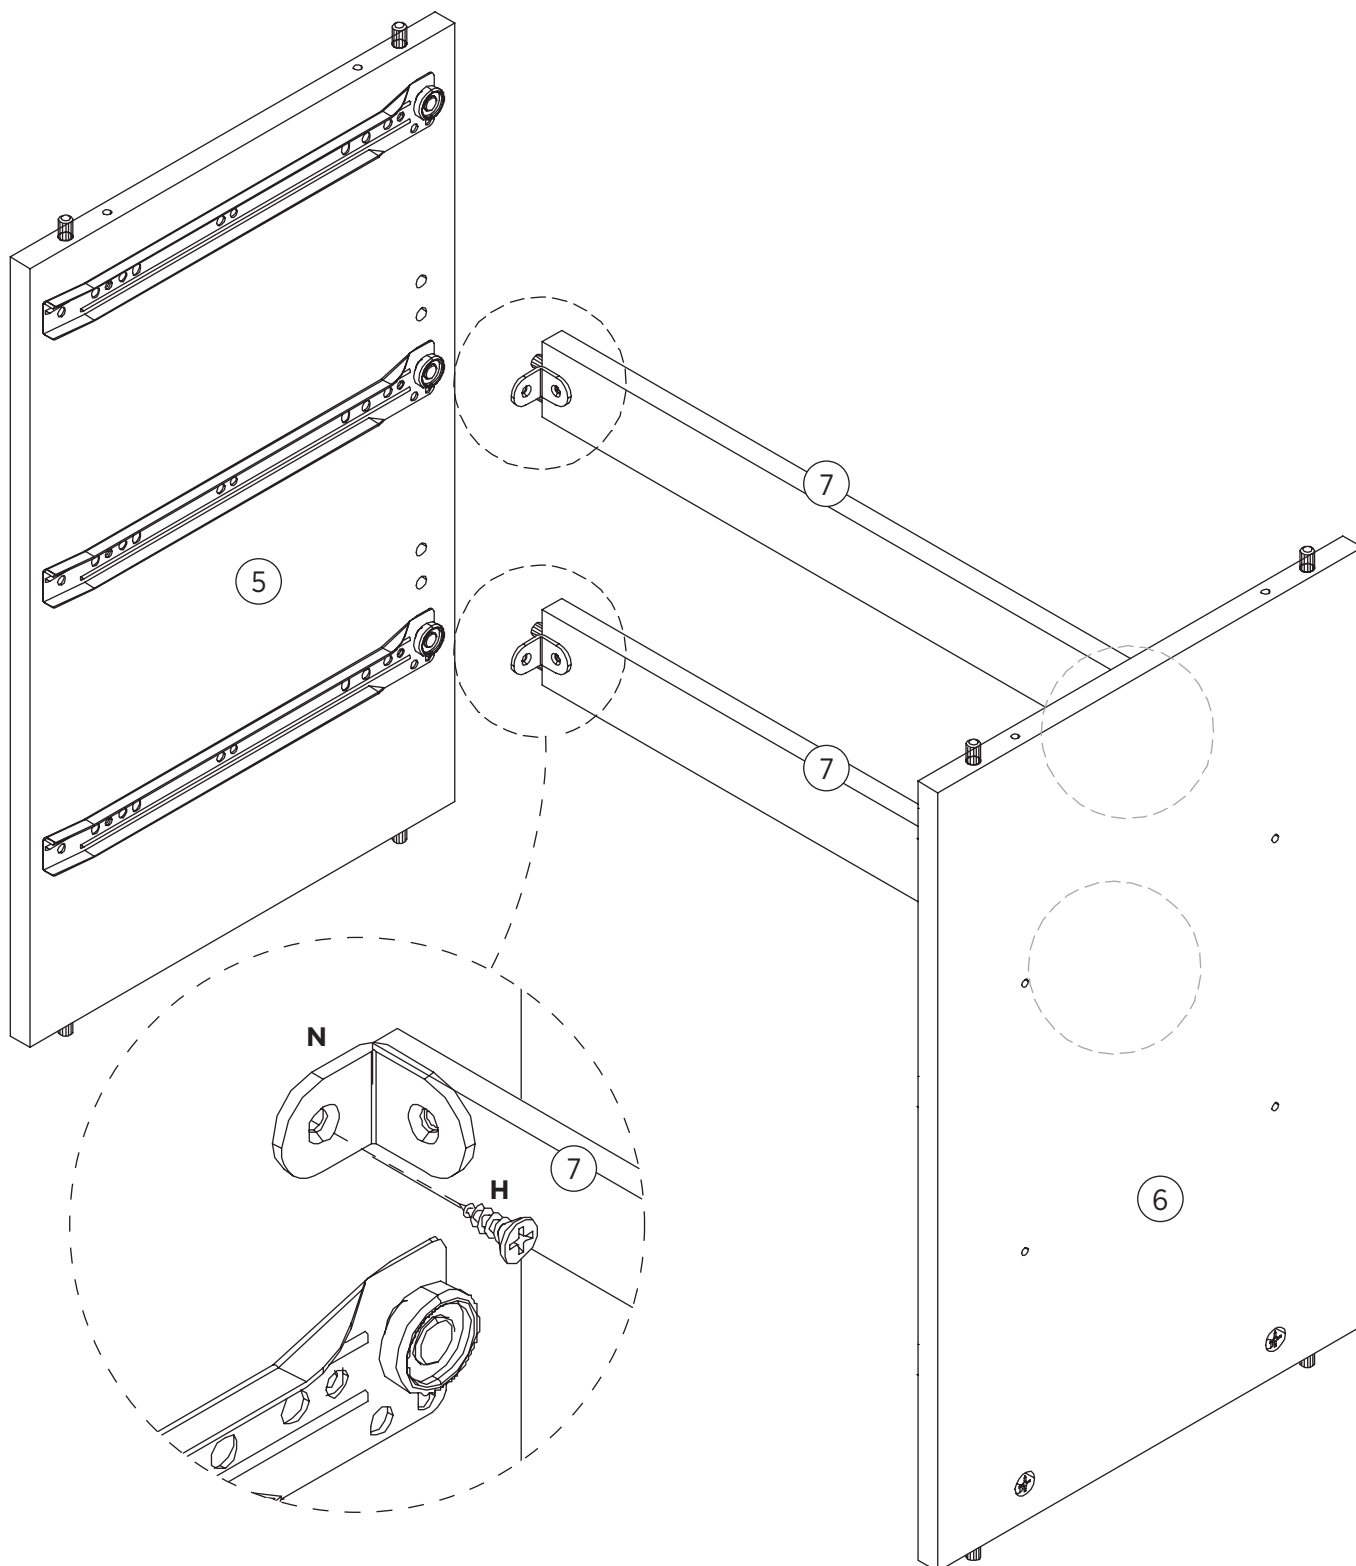



ASSEMBLY INSTRUCTIONS

STEP 8

Attach parts 3, 4, 5 and 6 to part 1.

Turn cam lock clockwise to tighten.

  Attach covers (C) to parts 3, 4, 5 and 6, as shown.

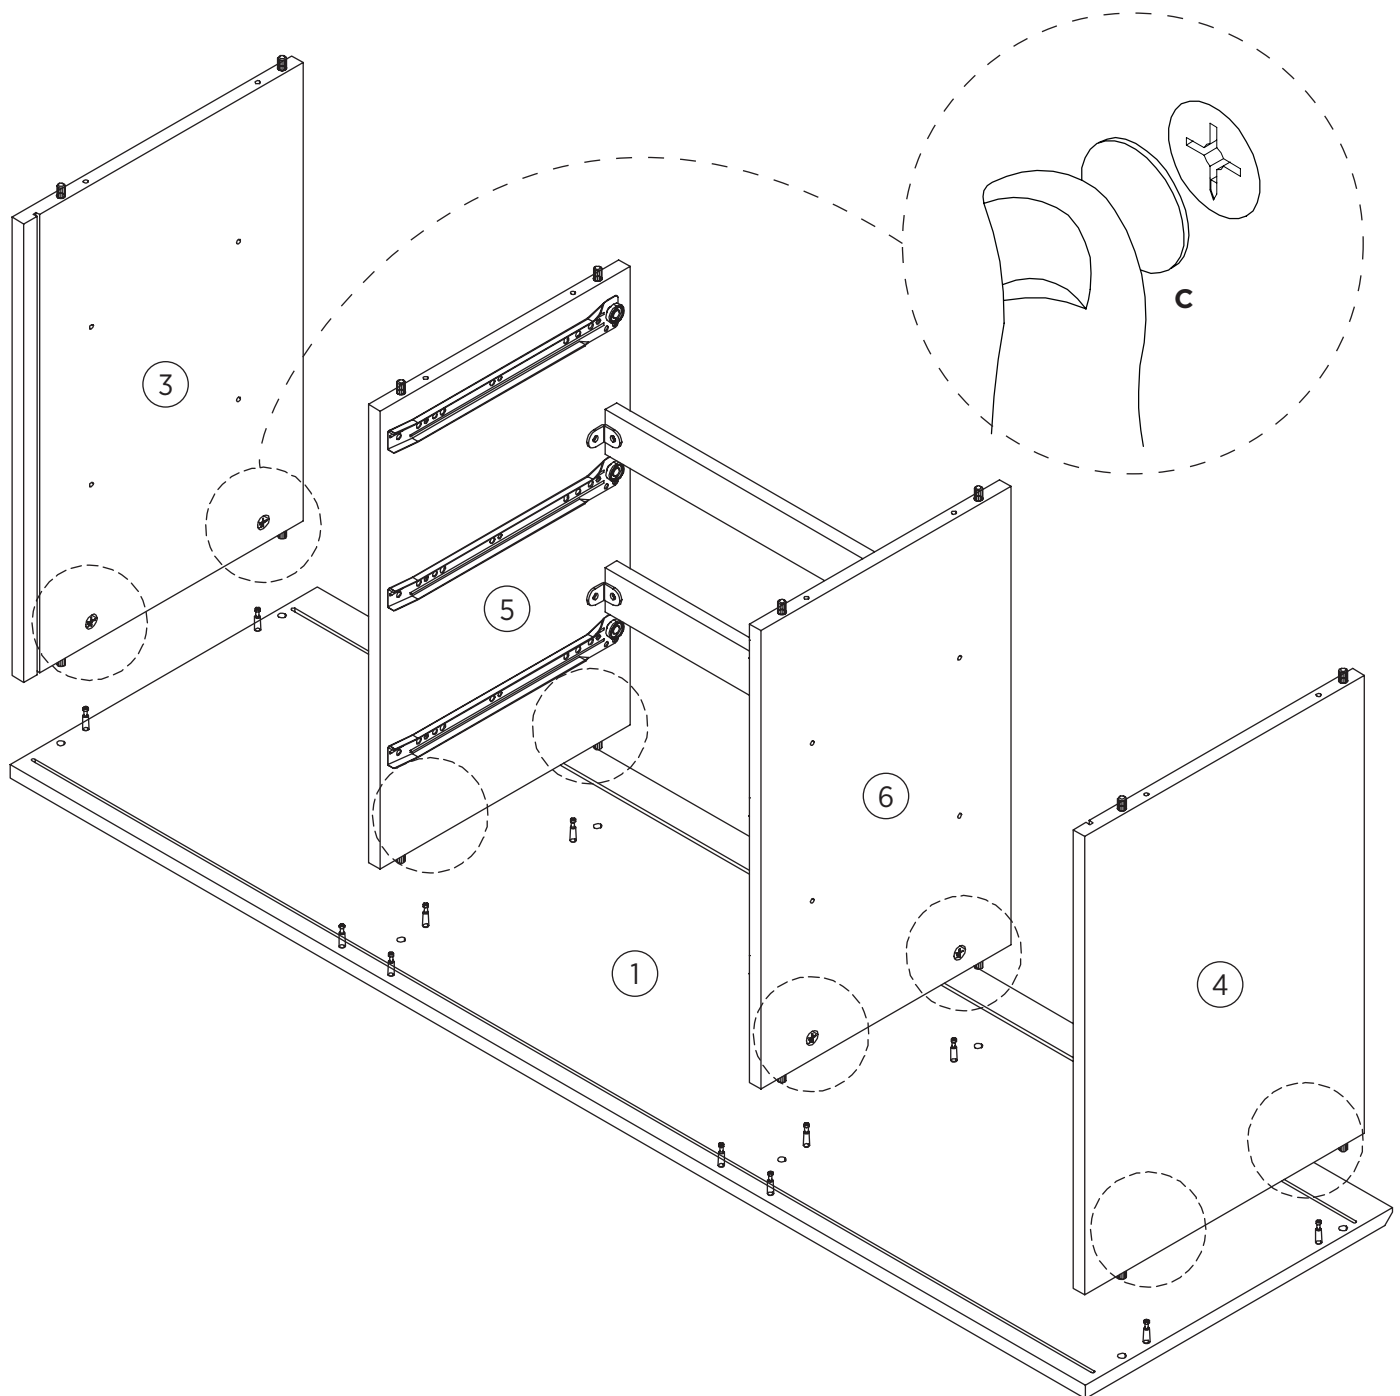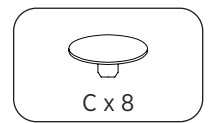



ASSEMBLY INSTRUCTIONS

STEP 9

Attach parts 9 to part 1.

Turn cam lock clockwise to tighten.

  
Attach covers (C) to parts 9, as shown.

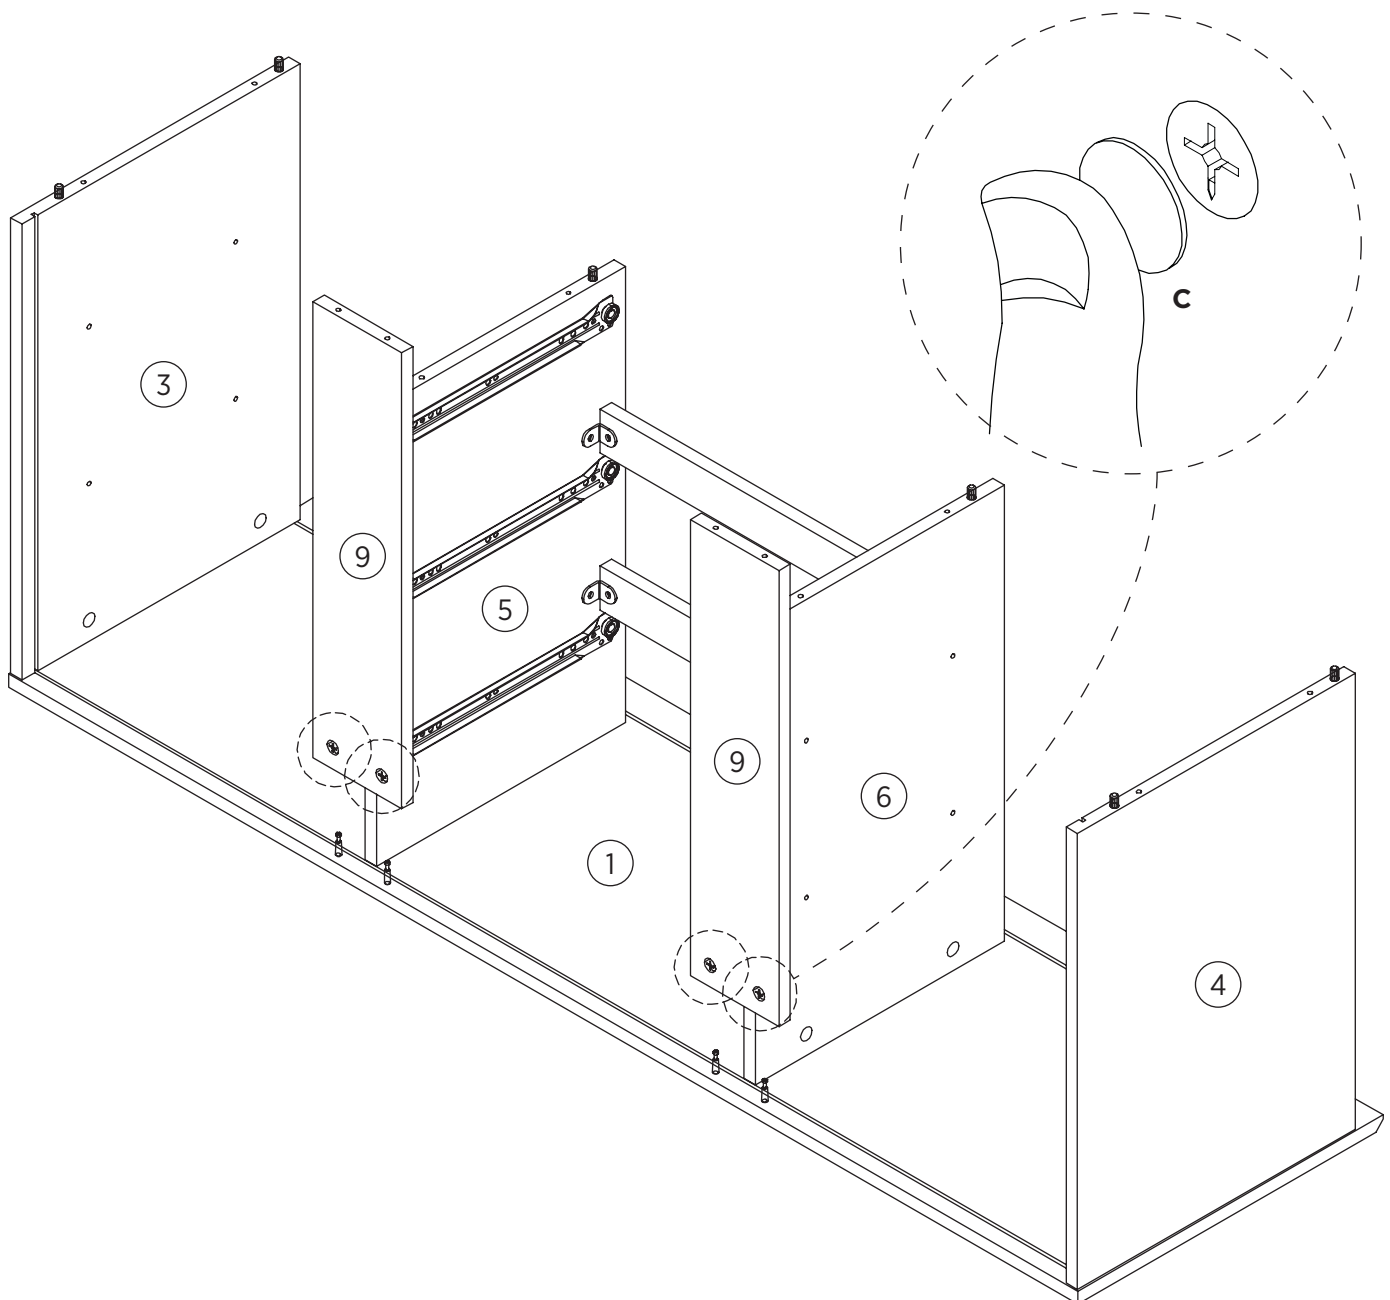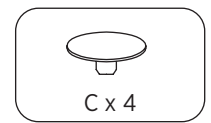

ASSEMBLY INSTRUCTIONS

STEP 10

 Insert part 10 into grooves between parts 3, 4 and 1, as shown.

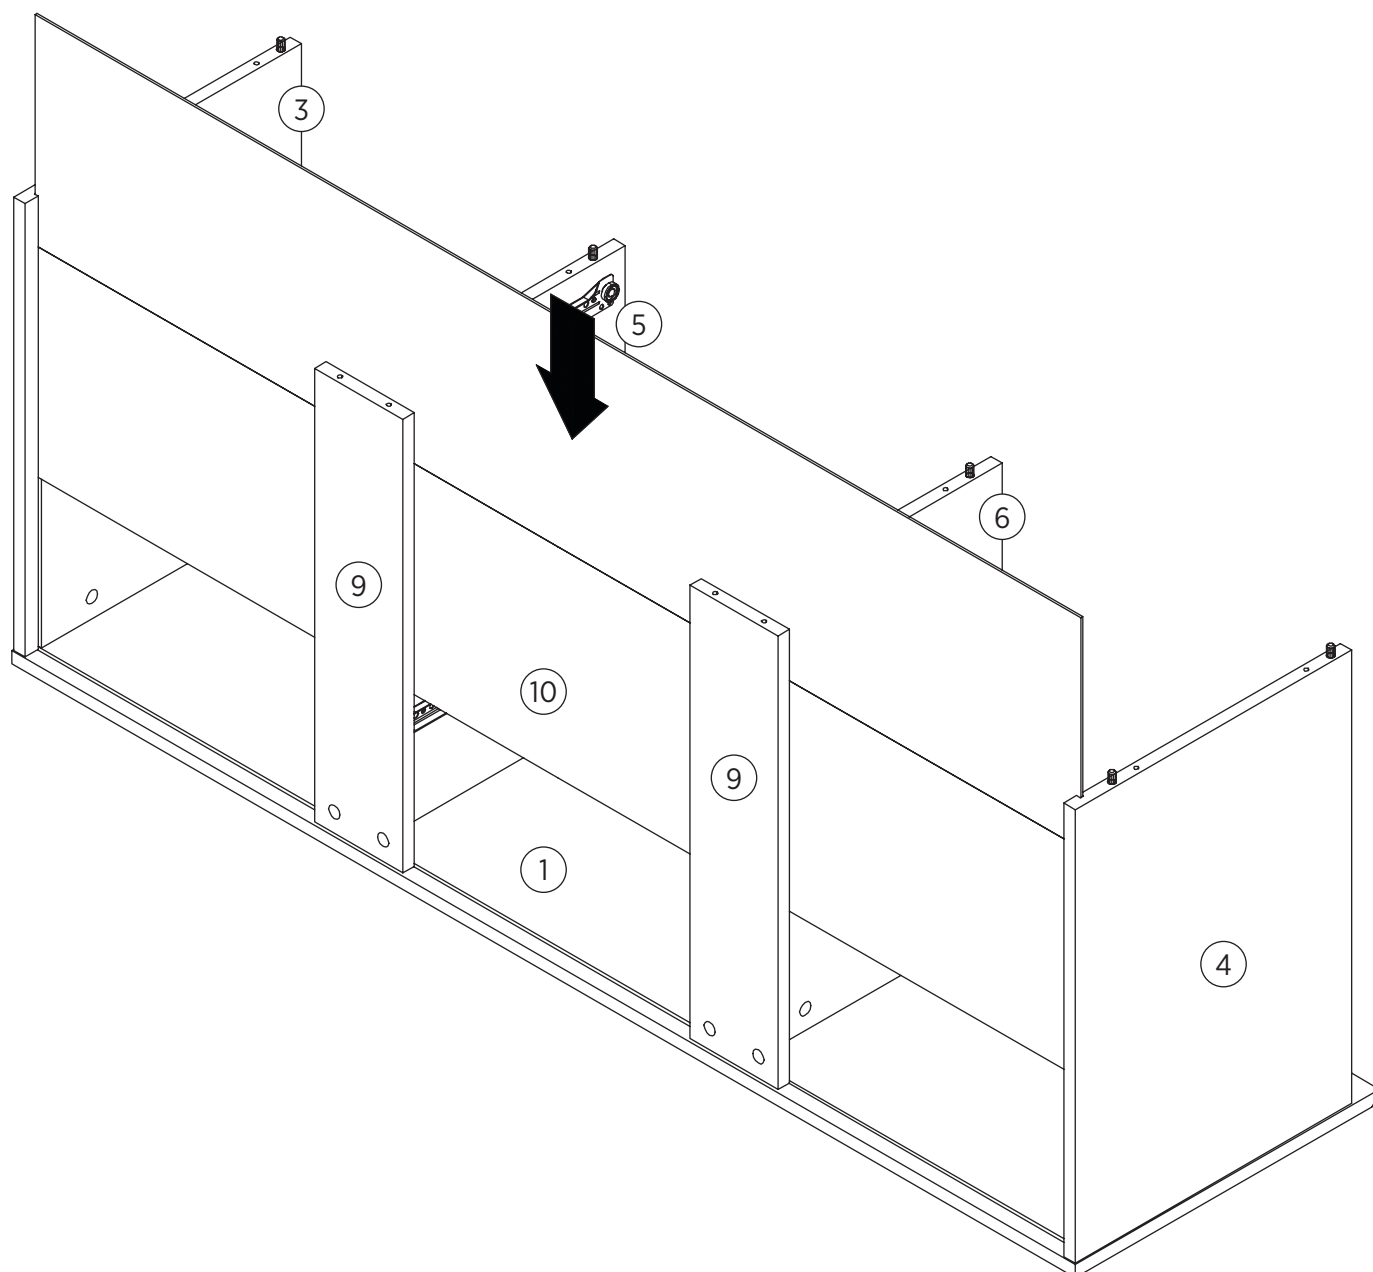

ASSEMBLY INSTRUCTIONS

STEP 11

 
Fix part 2 to parts 3, 4, 5, 6 and 9 using screws (E) and allen key (F), as shown.



E x 12






F x 1

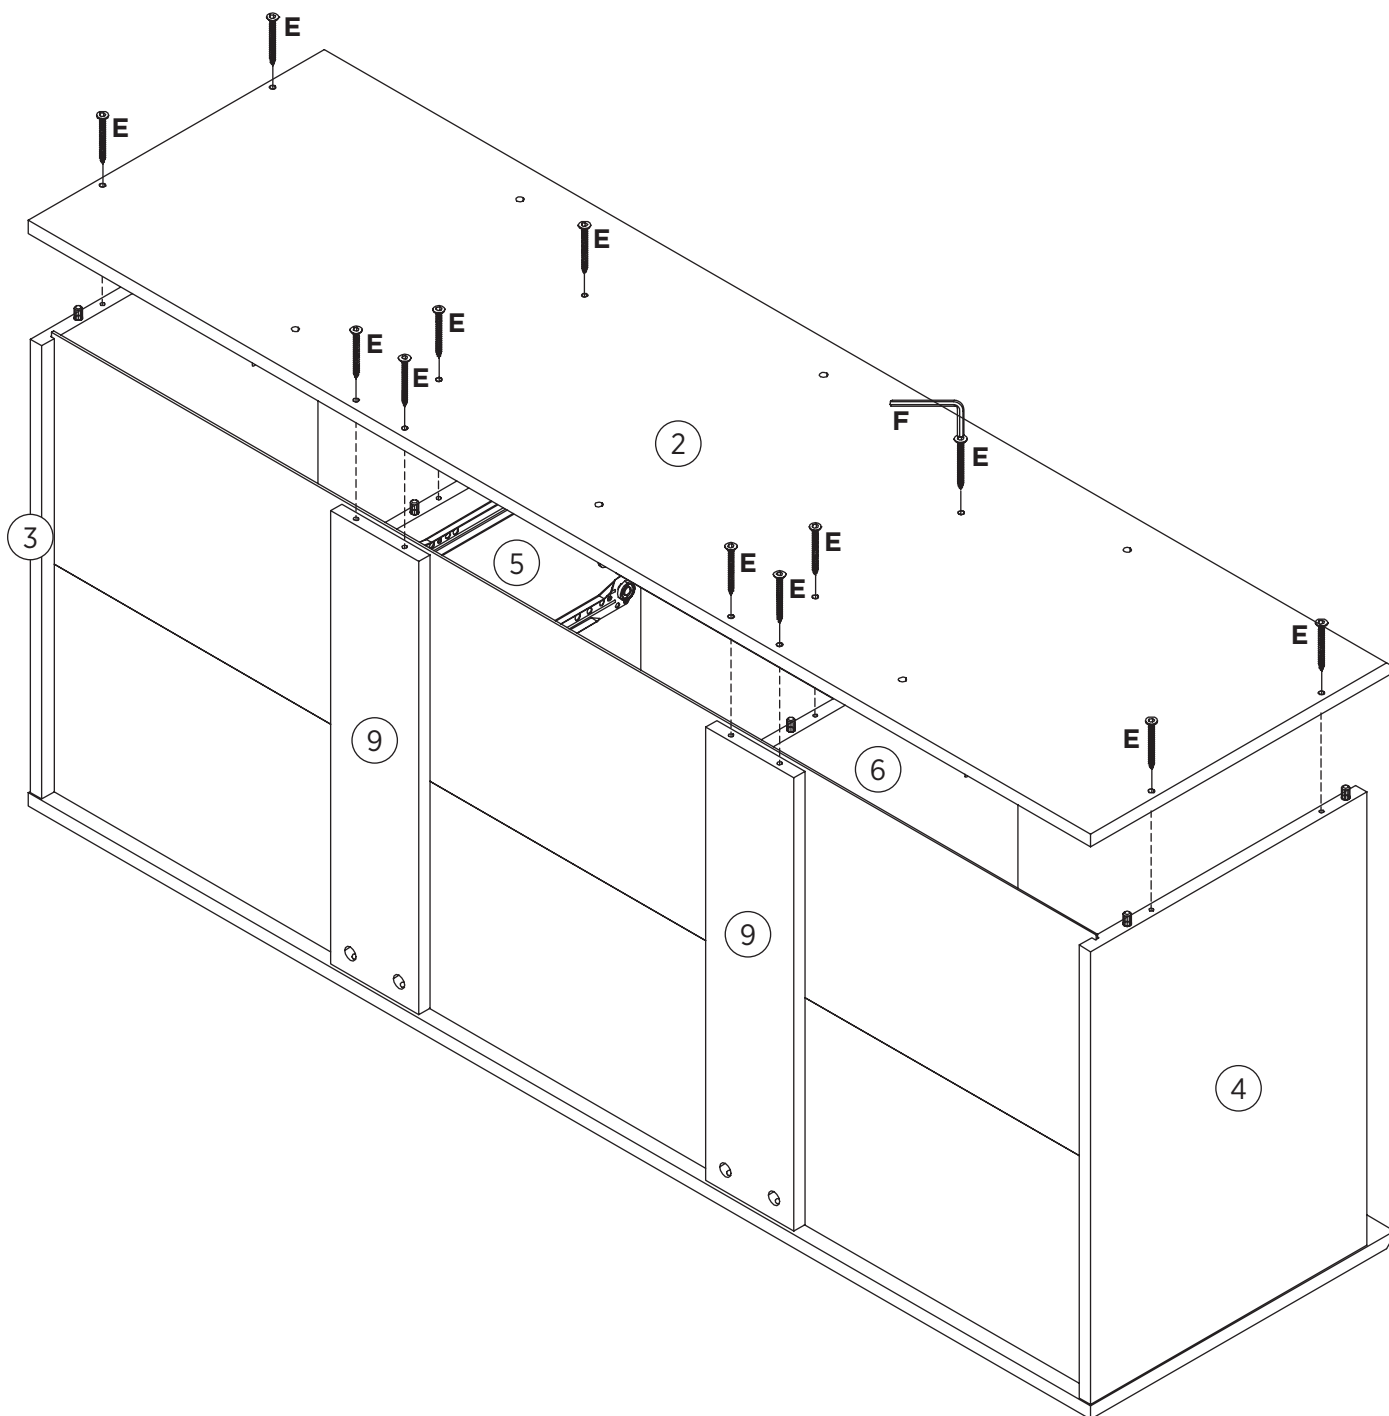

ASSEMBLY INSTRUCTIONS

STEP 12

   Secure part 10 by fixing wedges (O) using screws (P), as shown.

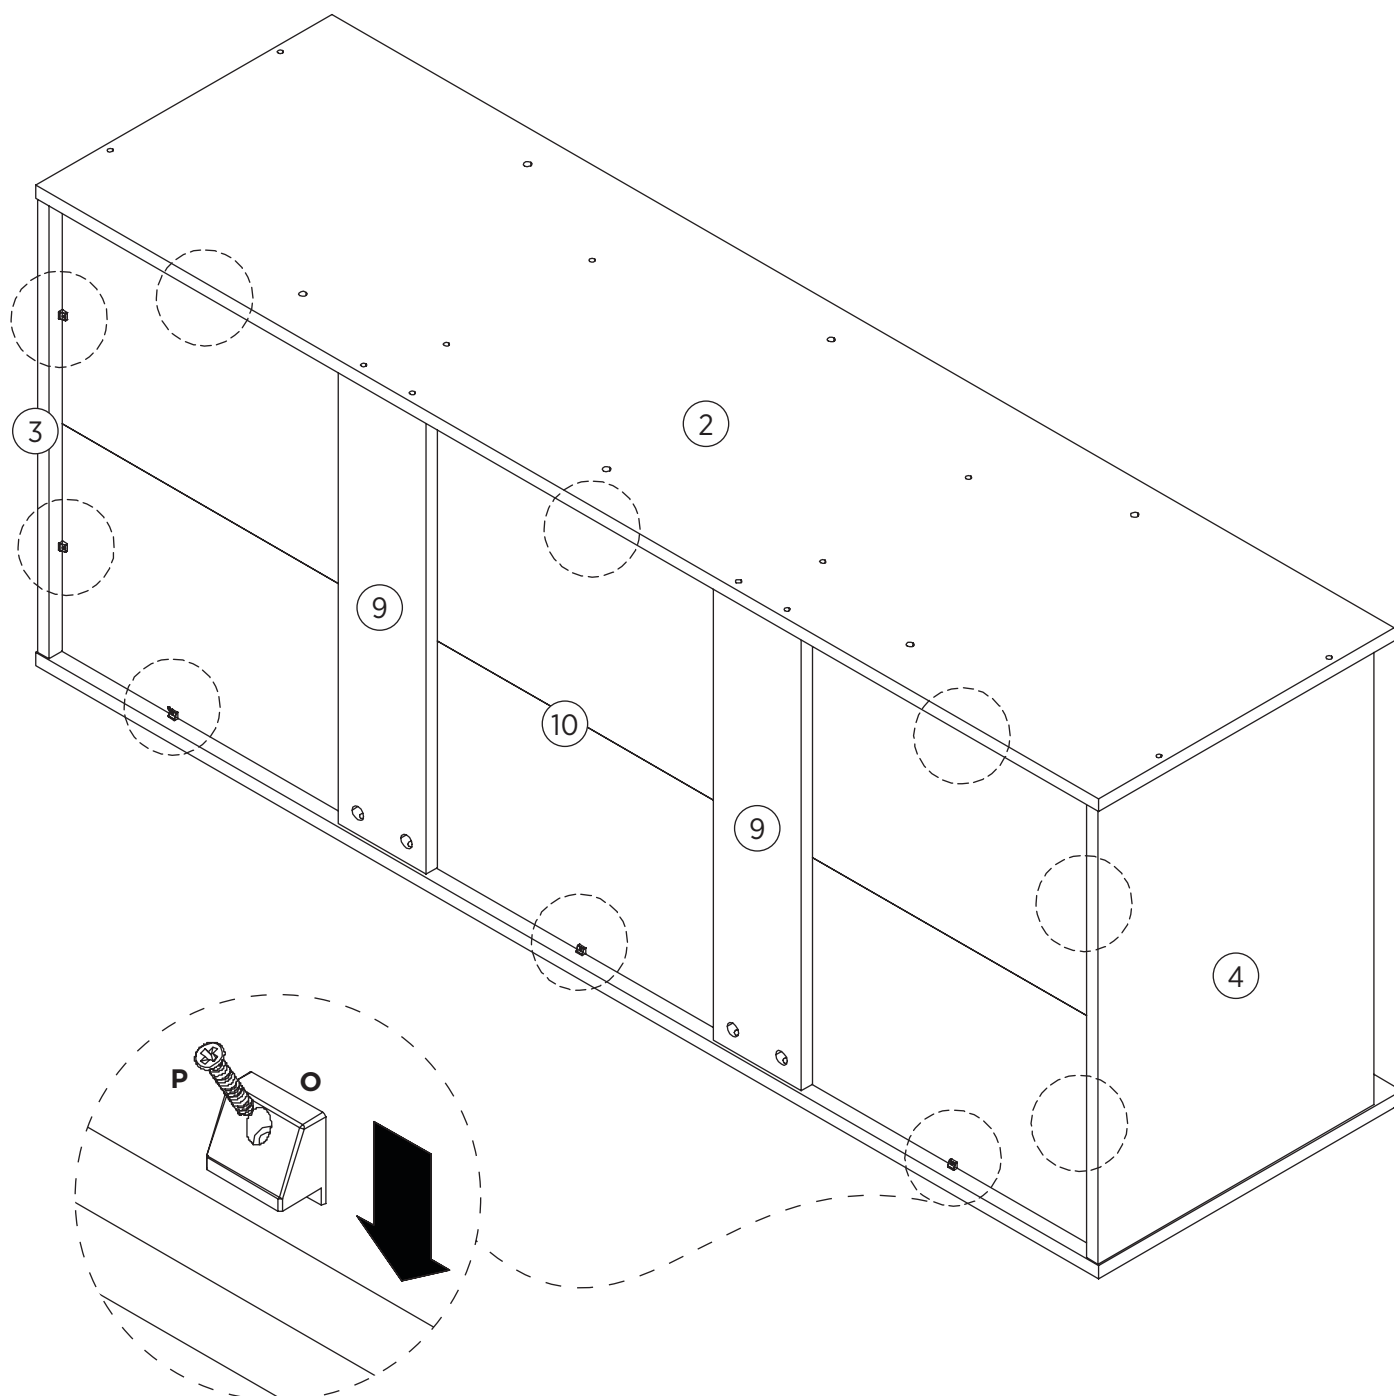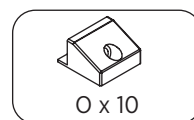



ASSEMBLY INSTRUCTIONS

STEP 13

Attach parts 17 to parts 18 and 19.

Tuen cam lock clockwise to tighten.

  Attach covers (C) to parts 17, as shown.

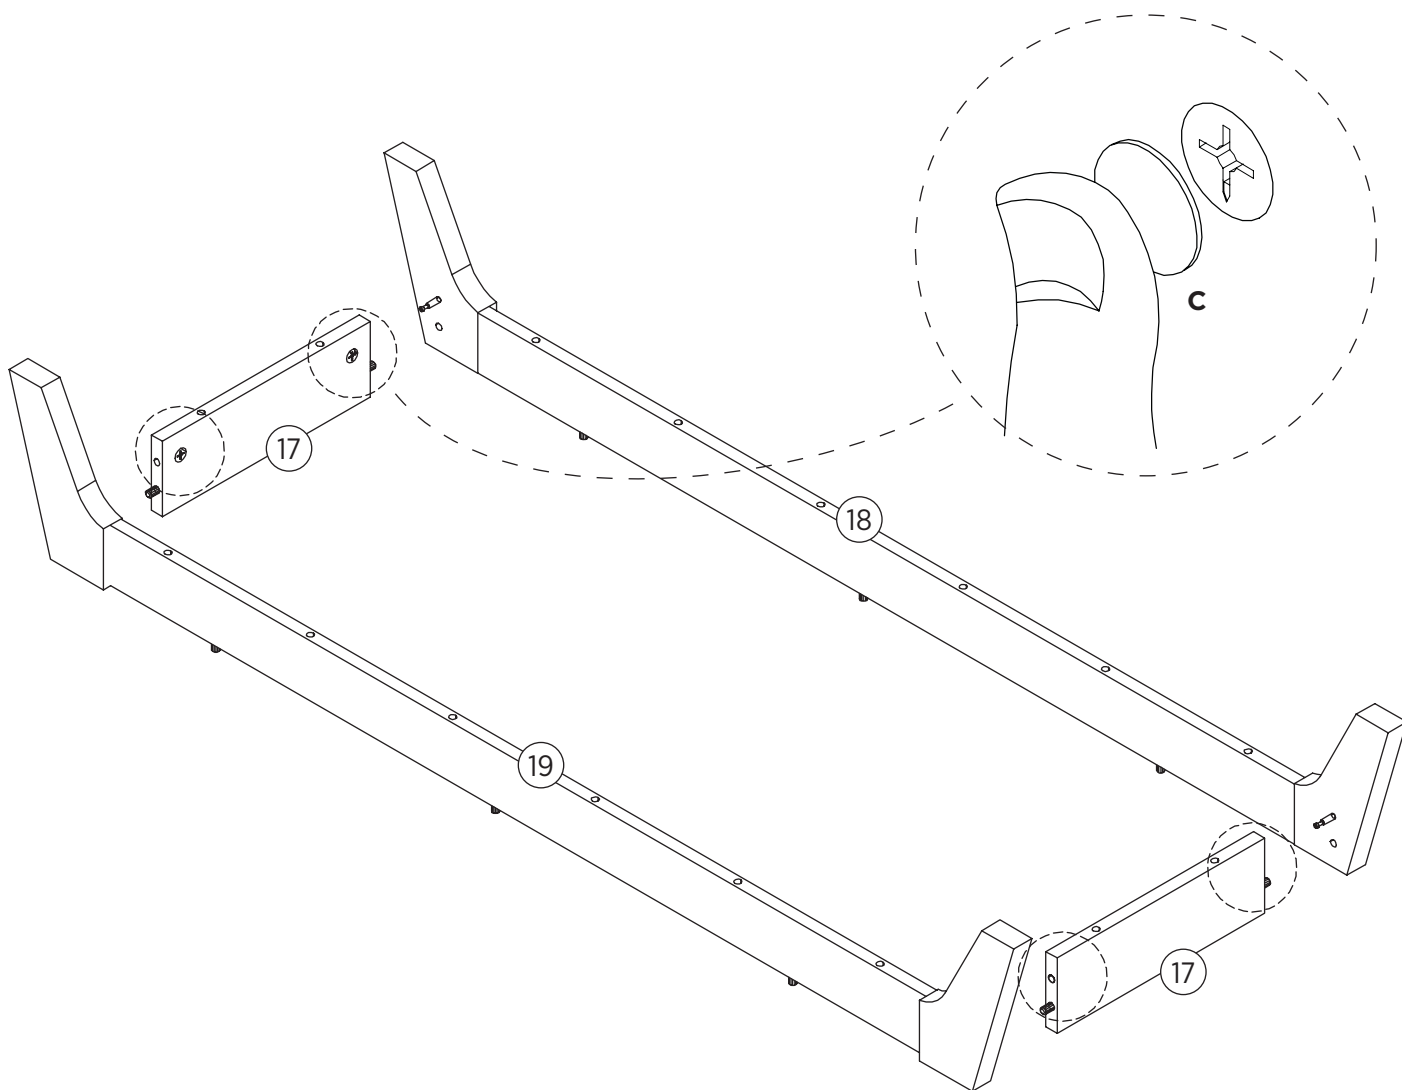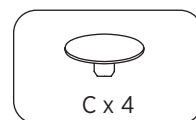


ASSEMBLY INSTRUCTIONS

STEP 14

Fix parts 17, 18 and 19 to part 2 using screws (K), as shown.




 
K x 16

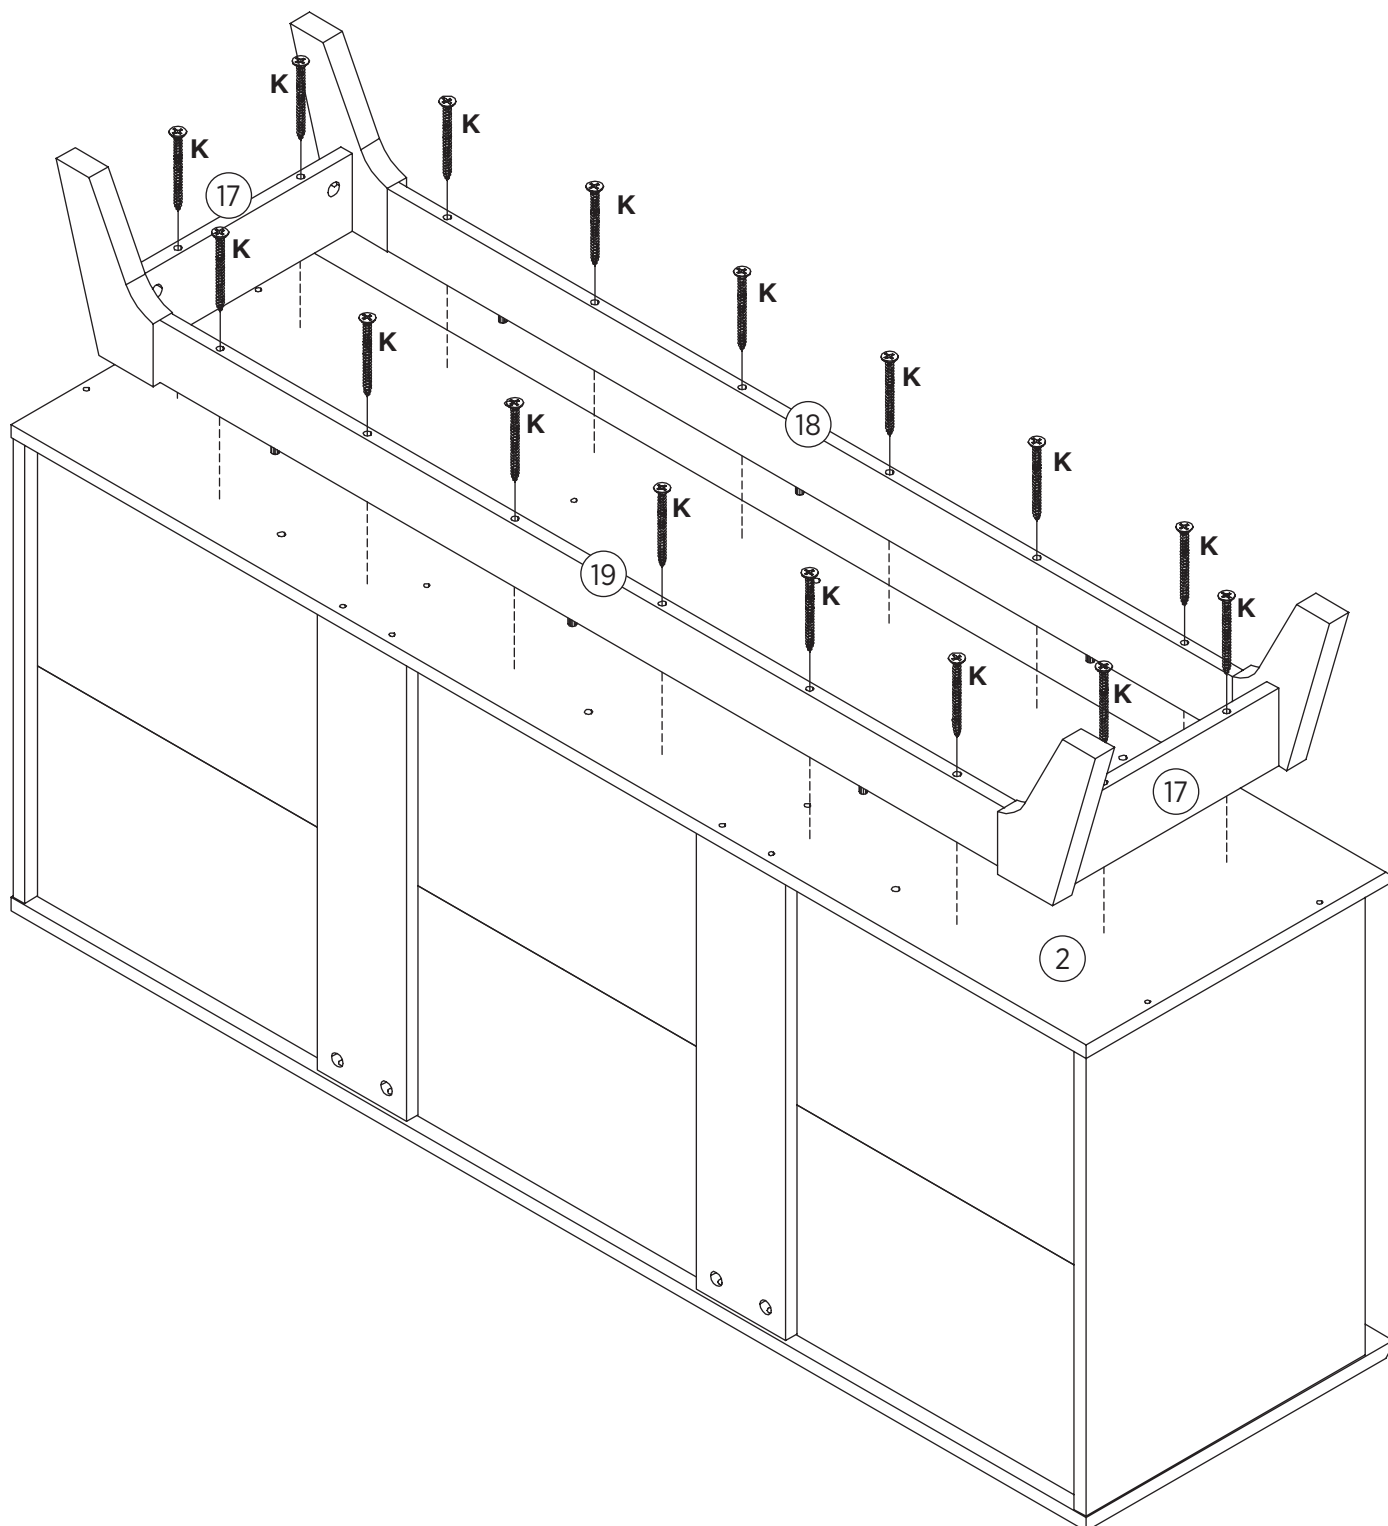

ASSEMBLY INSTRUCTIONS

STEP 15

 
 
Fix part 20 to part 19 using screws (I), as shown.

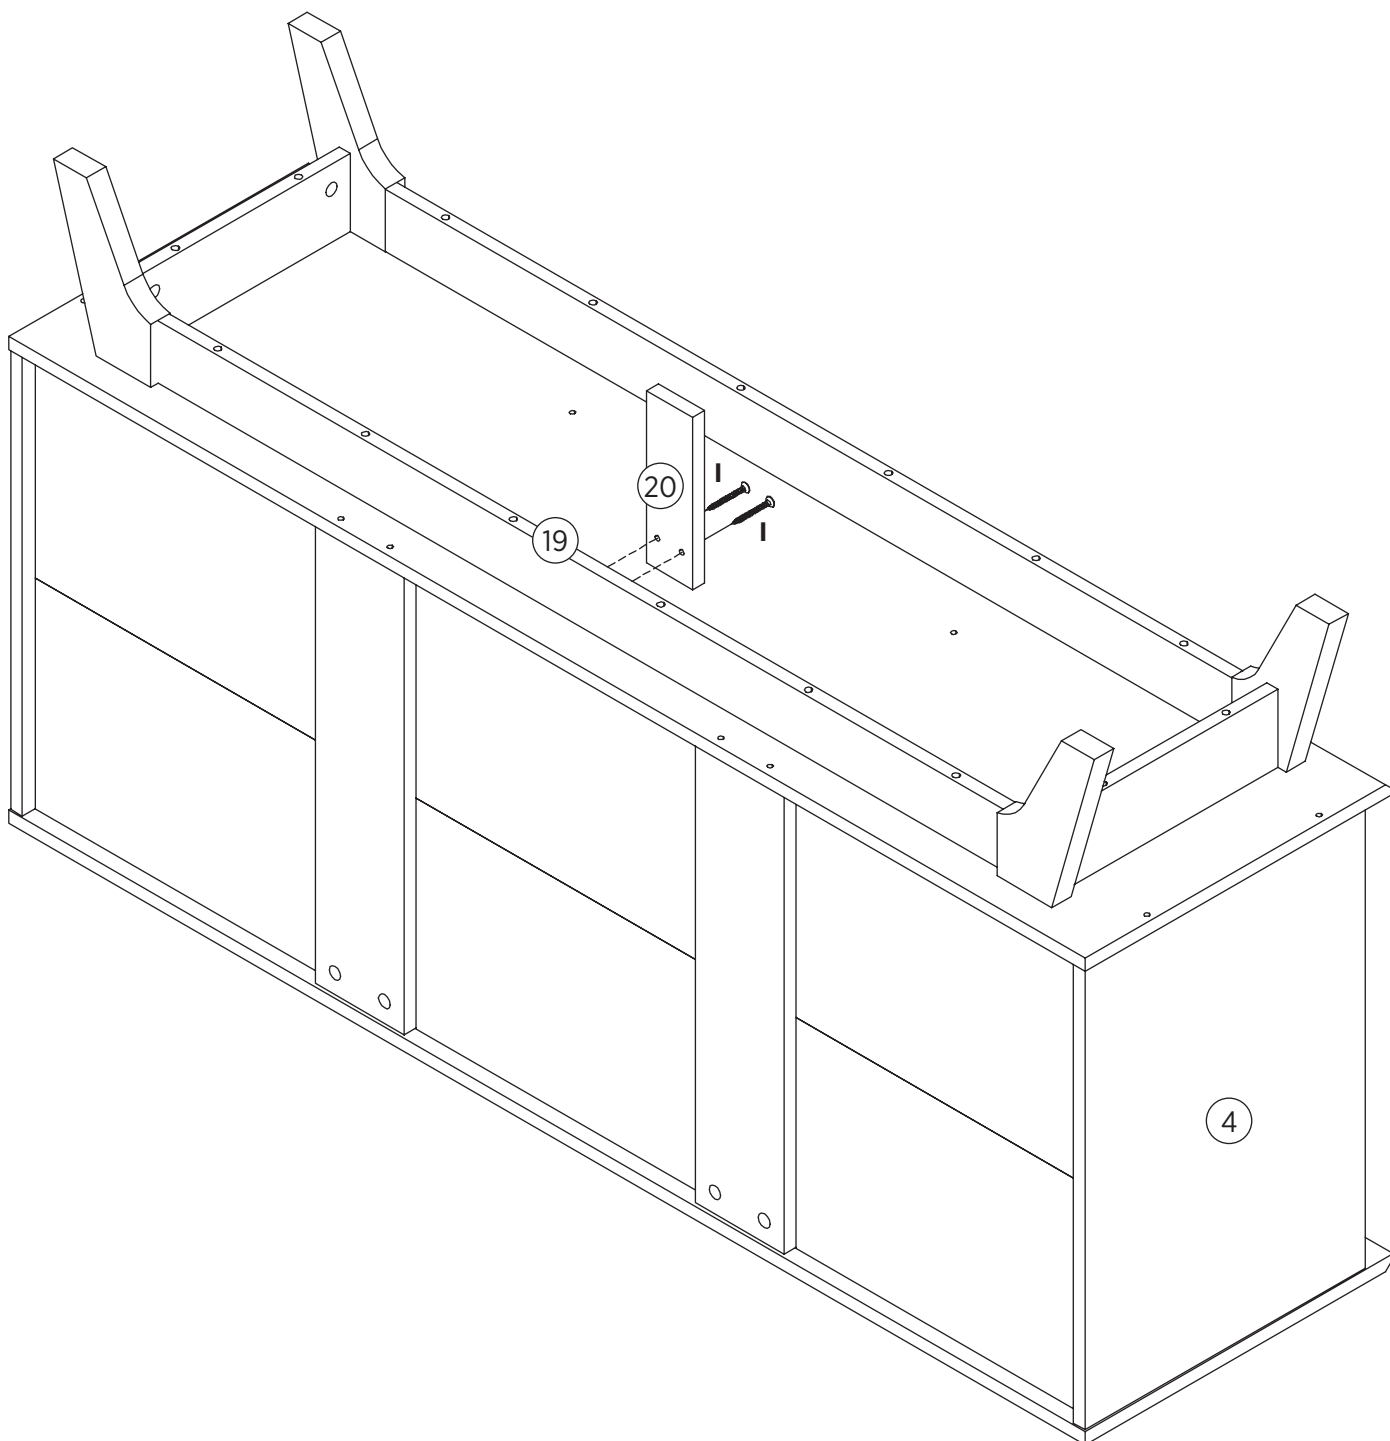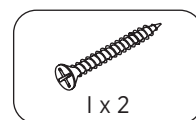

ASSEMBLY INSTRUCTIONS

STEP 16

  Fix legs (L) to parts 18, 19 and 20, as shown.

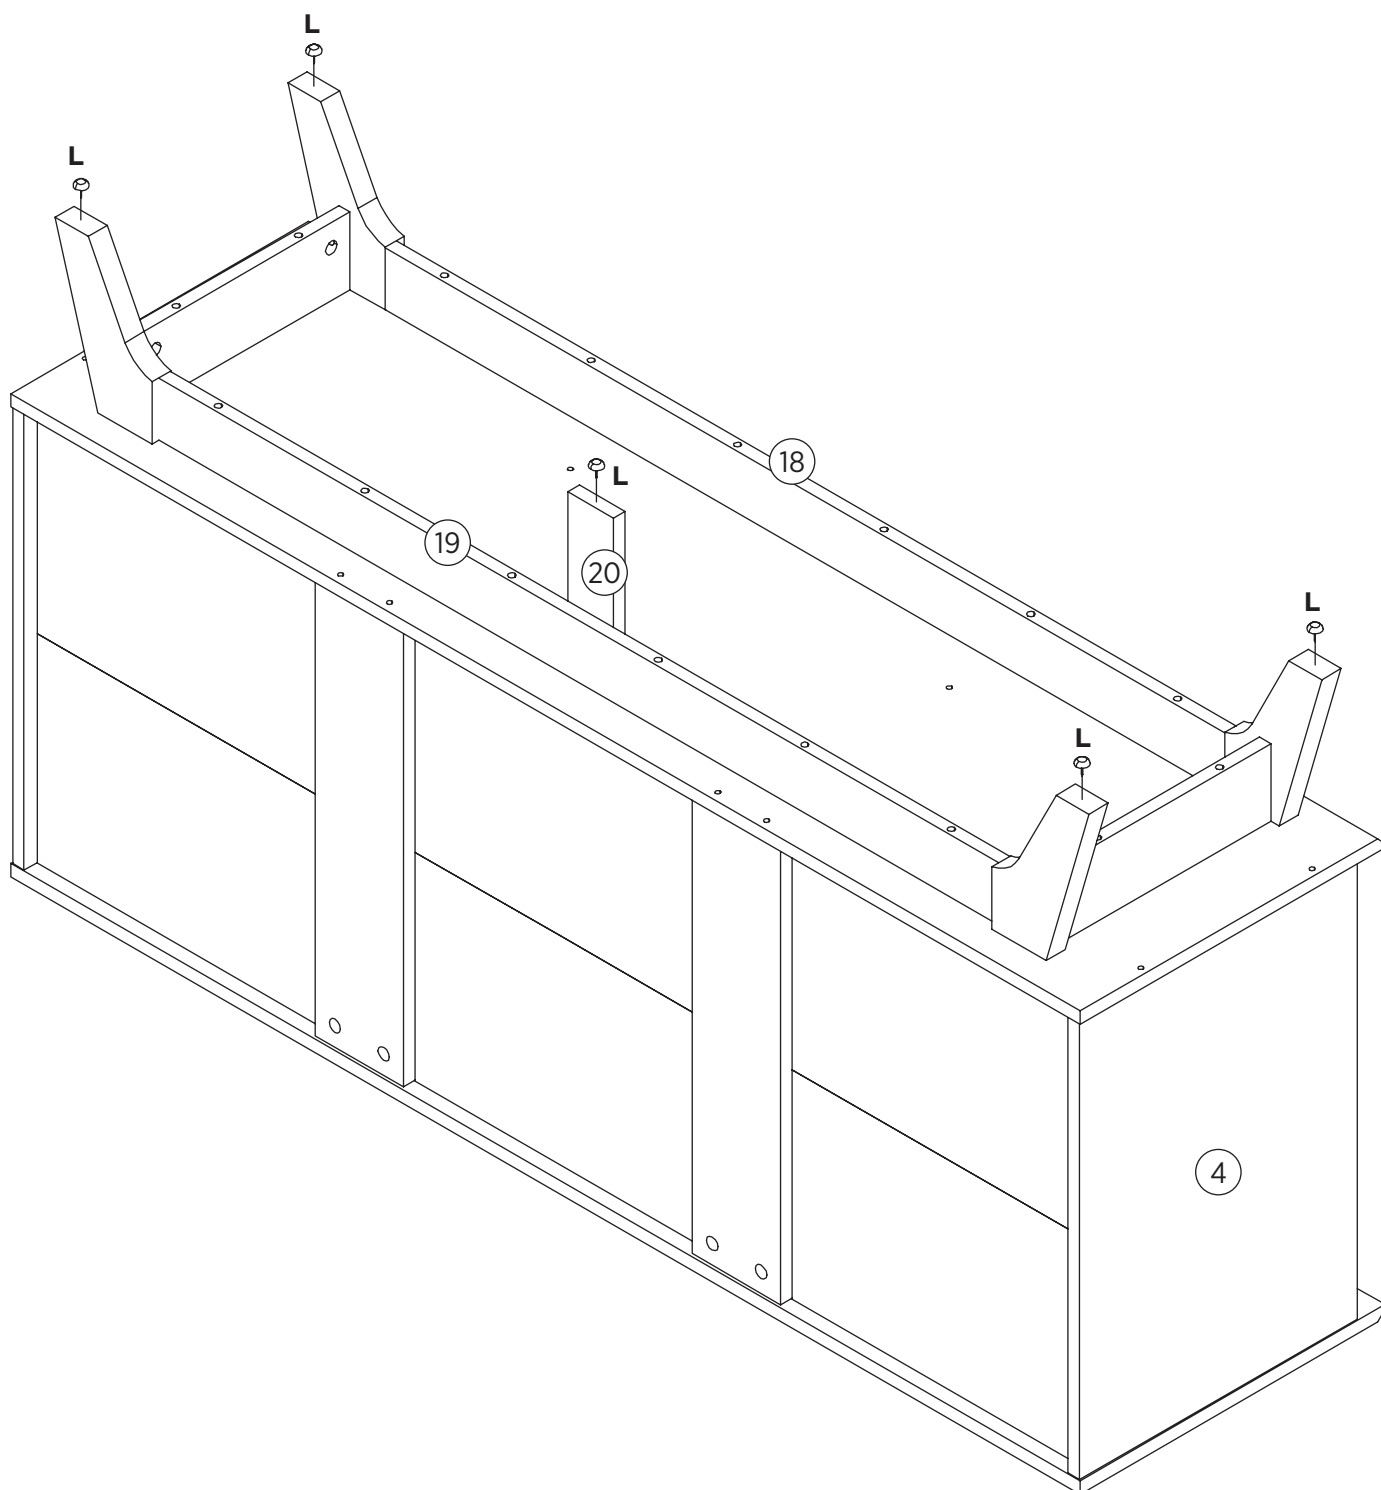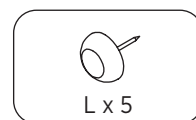


ASSEMBLY INSTRUCTIONS

STEP 17

Insert shelf pins (M) to parts 3, 4, 5 and 6, as shown.



 
M x 16

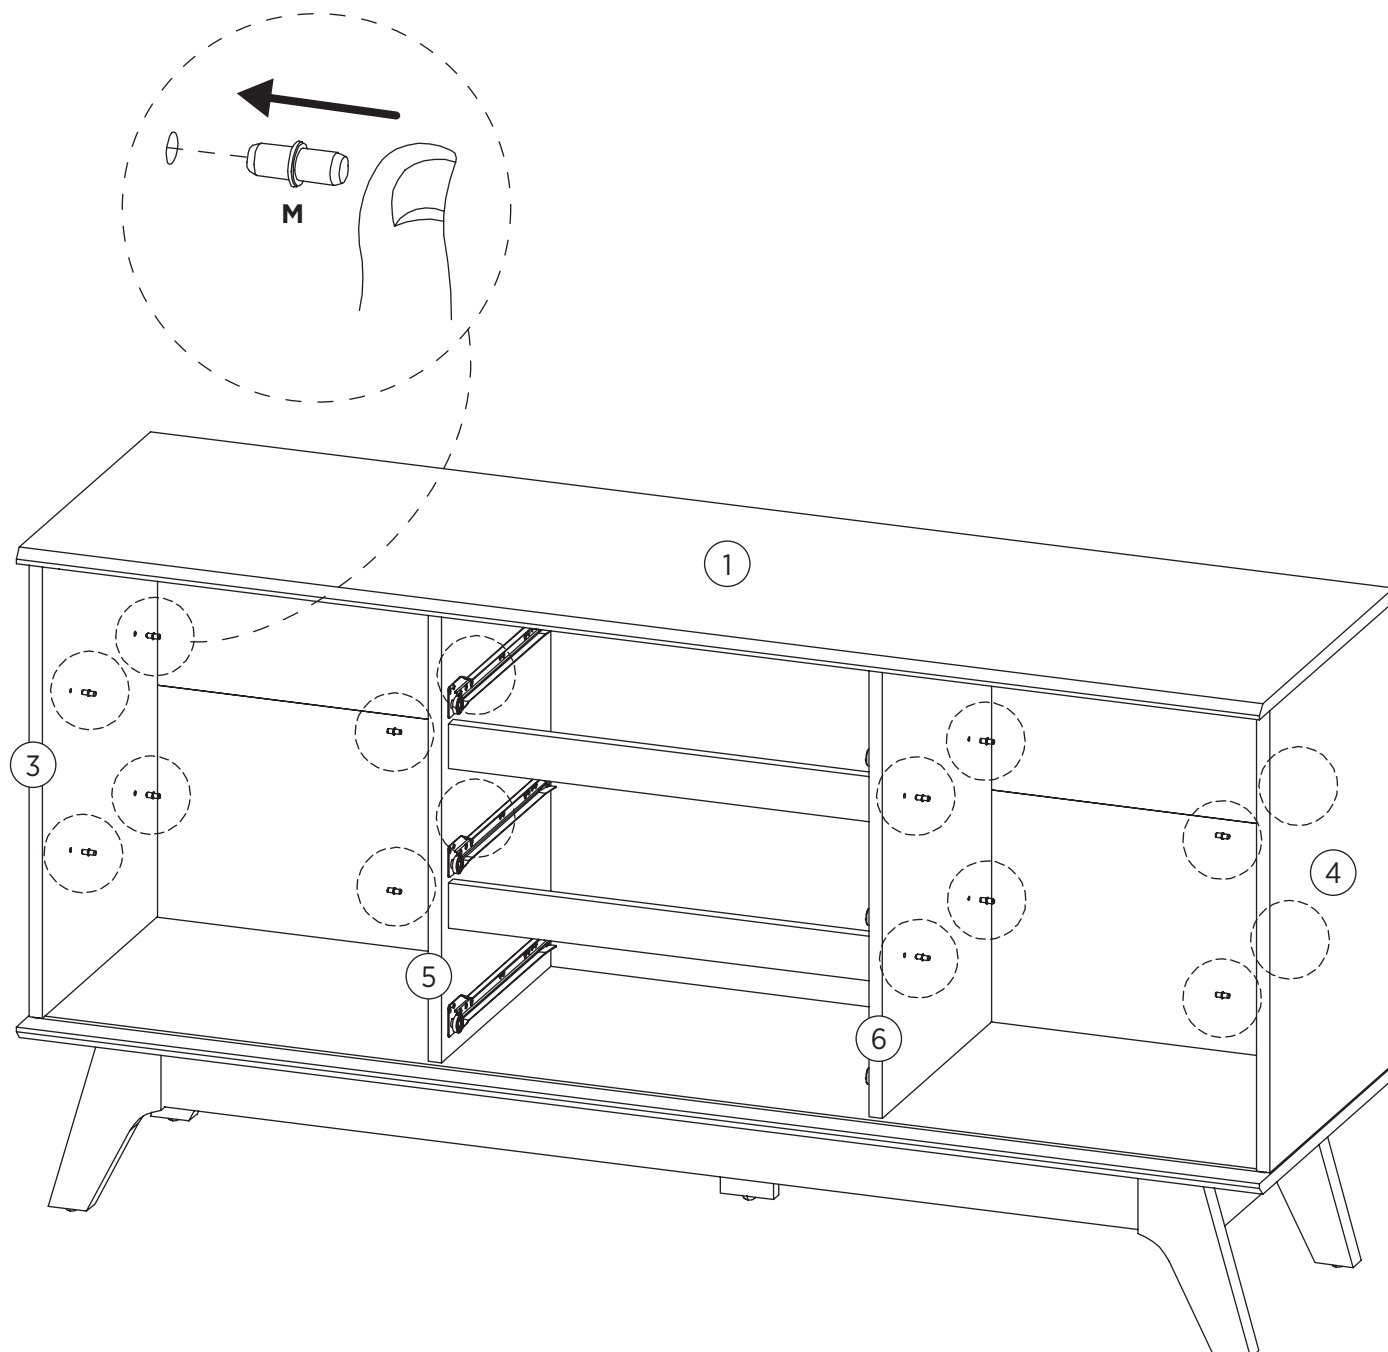

ASSEMBLY INSTRUCTIONS

STEP 18


 
Insert shelves 8 to assembled buffet, as shown.

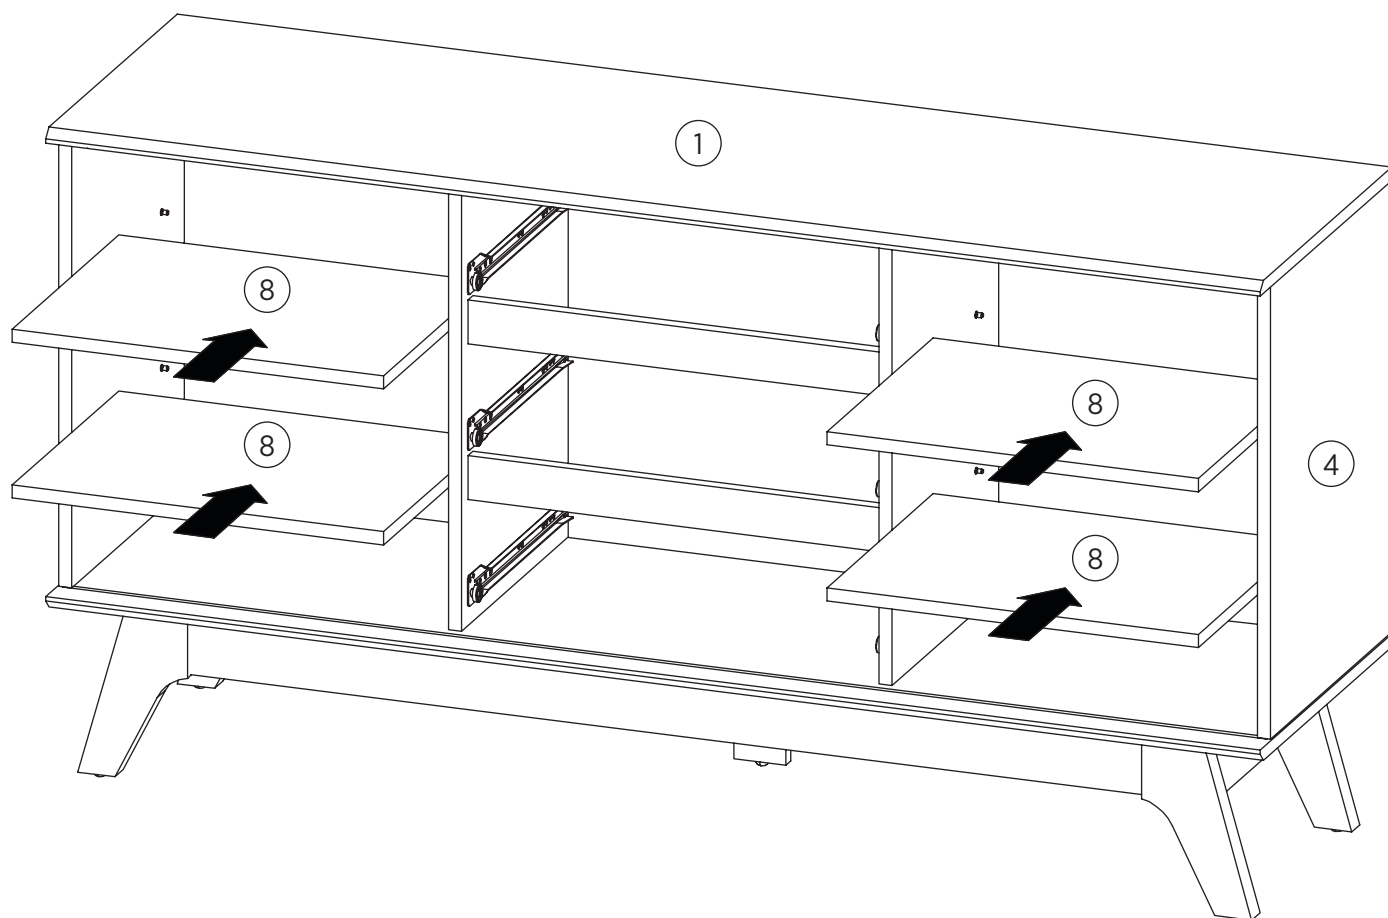

ASSEMBLY INSTRUCTIONS

STEP 19

  Fix parts 13 and 14 to part 12 using screws (J), as shown.

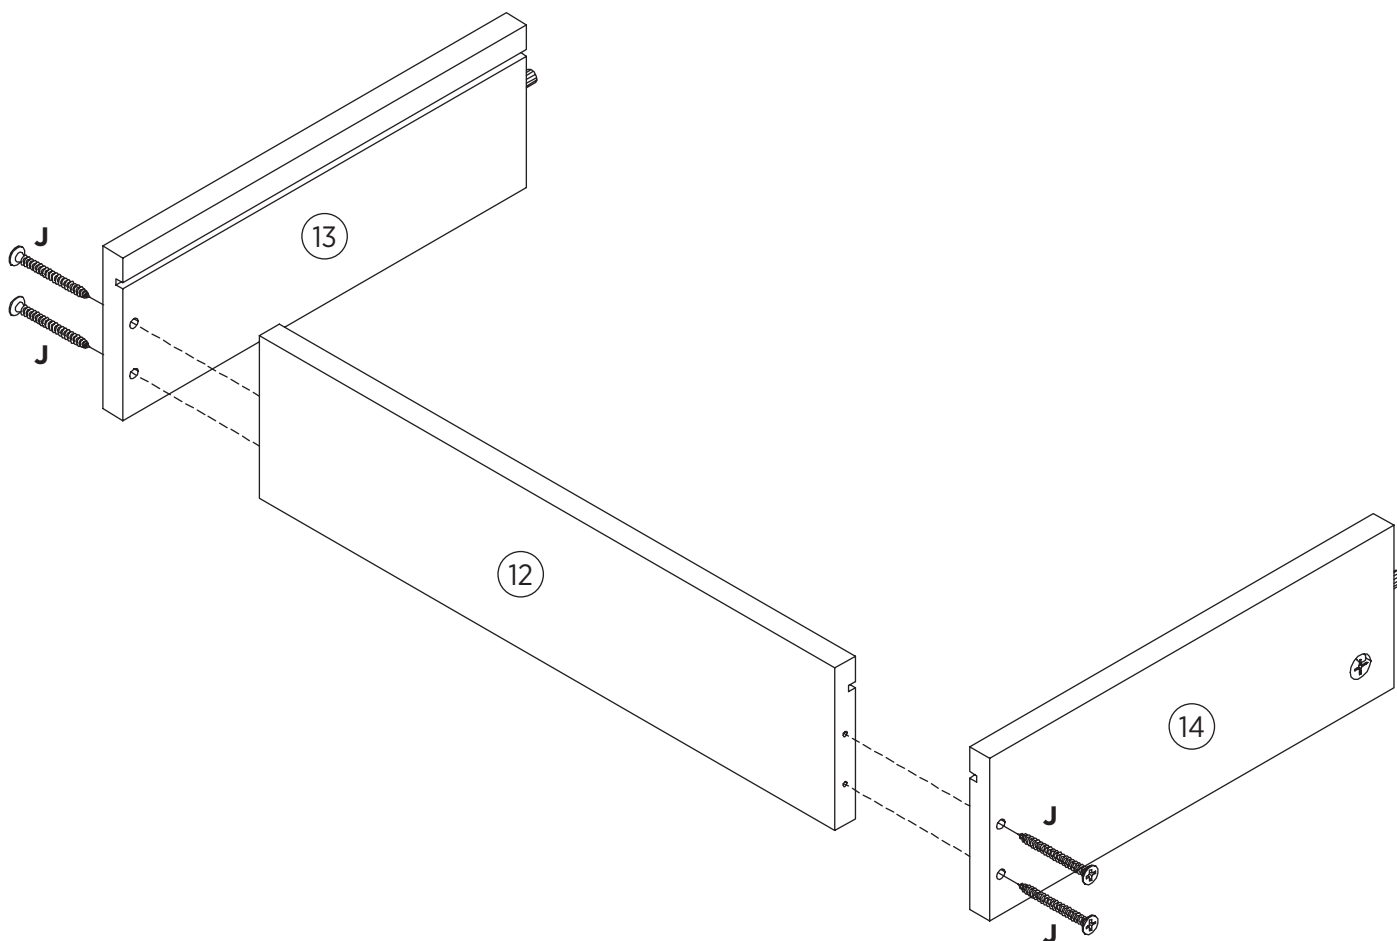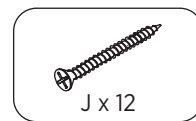


x3

ASSEMBLY INSTRUCTIONS

STEP 20

 Insert part 15 into grooves between parts 12, 13 and 14, as shown.

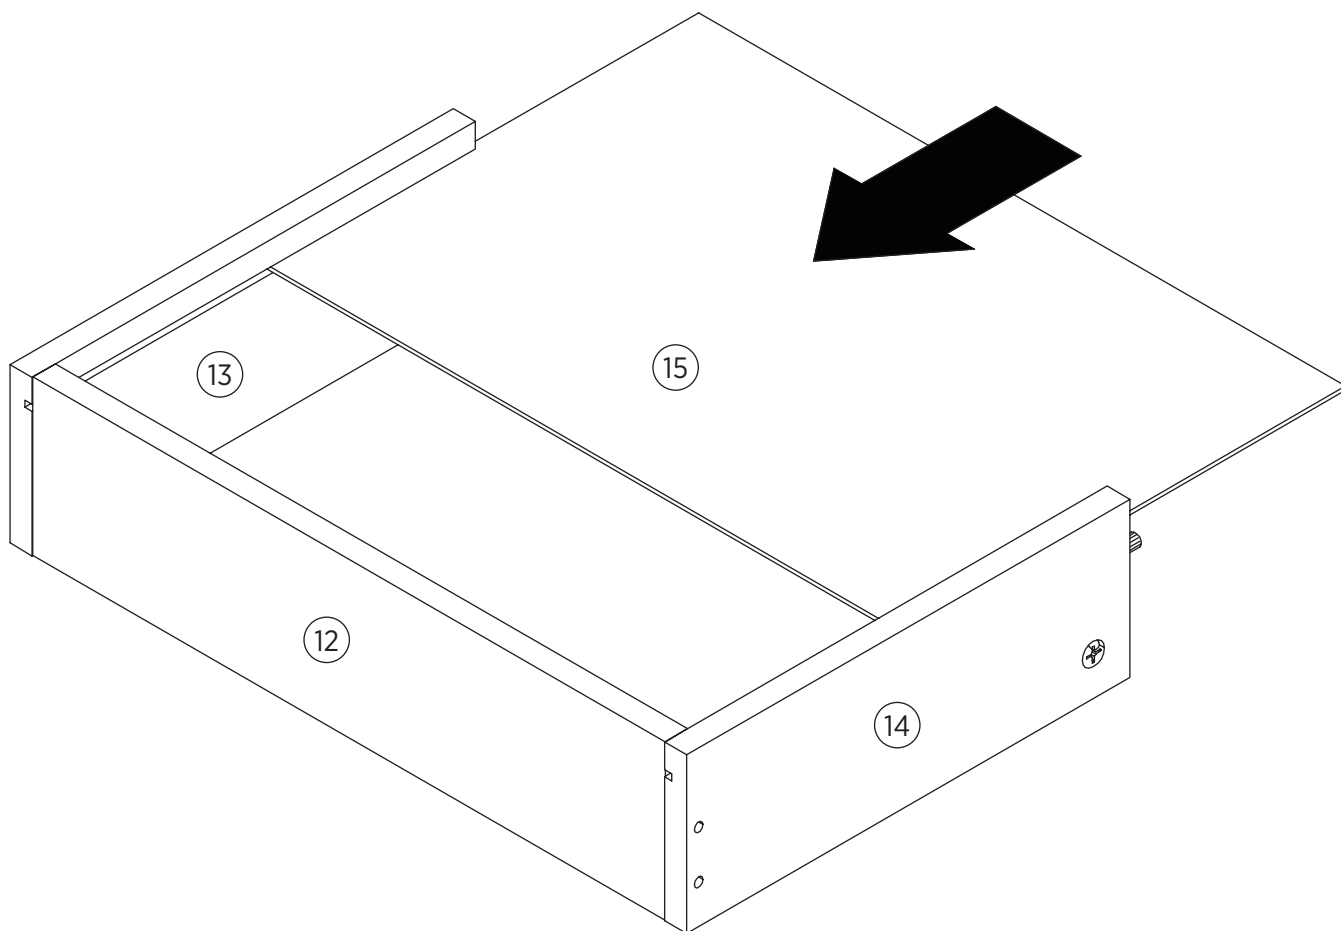

x3

 
 
ASSEMBLY INSTRUCTIONS

STEP 21

Attach part 11 to parts 13 and 14.

Turn cam locks clockwise to tighten.

Attach covers (C) to parts 13 and 14, as shown.

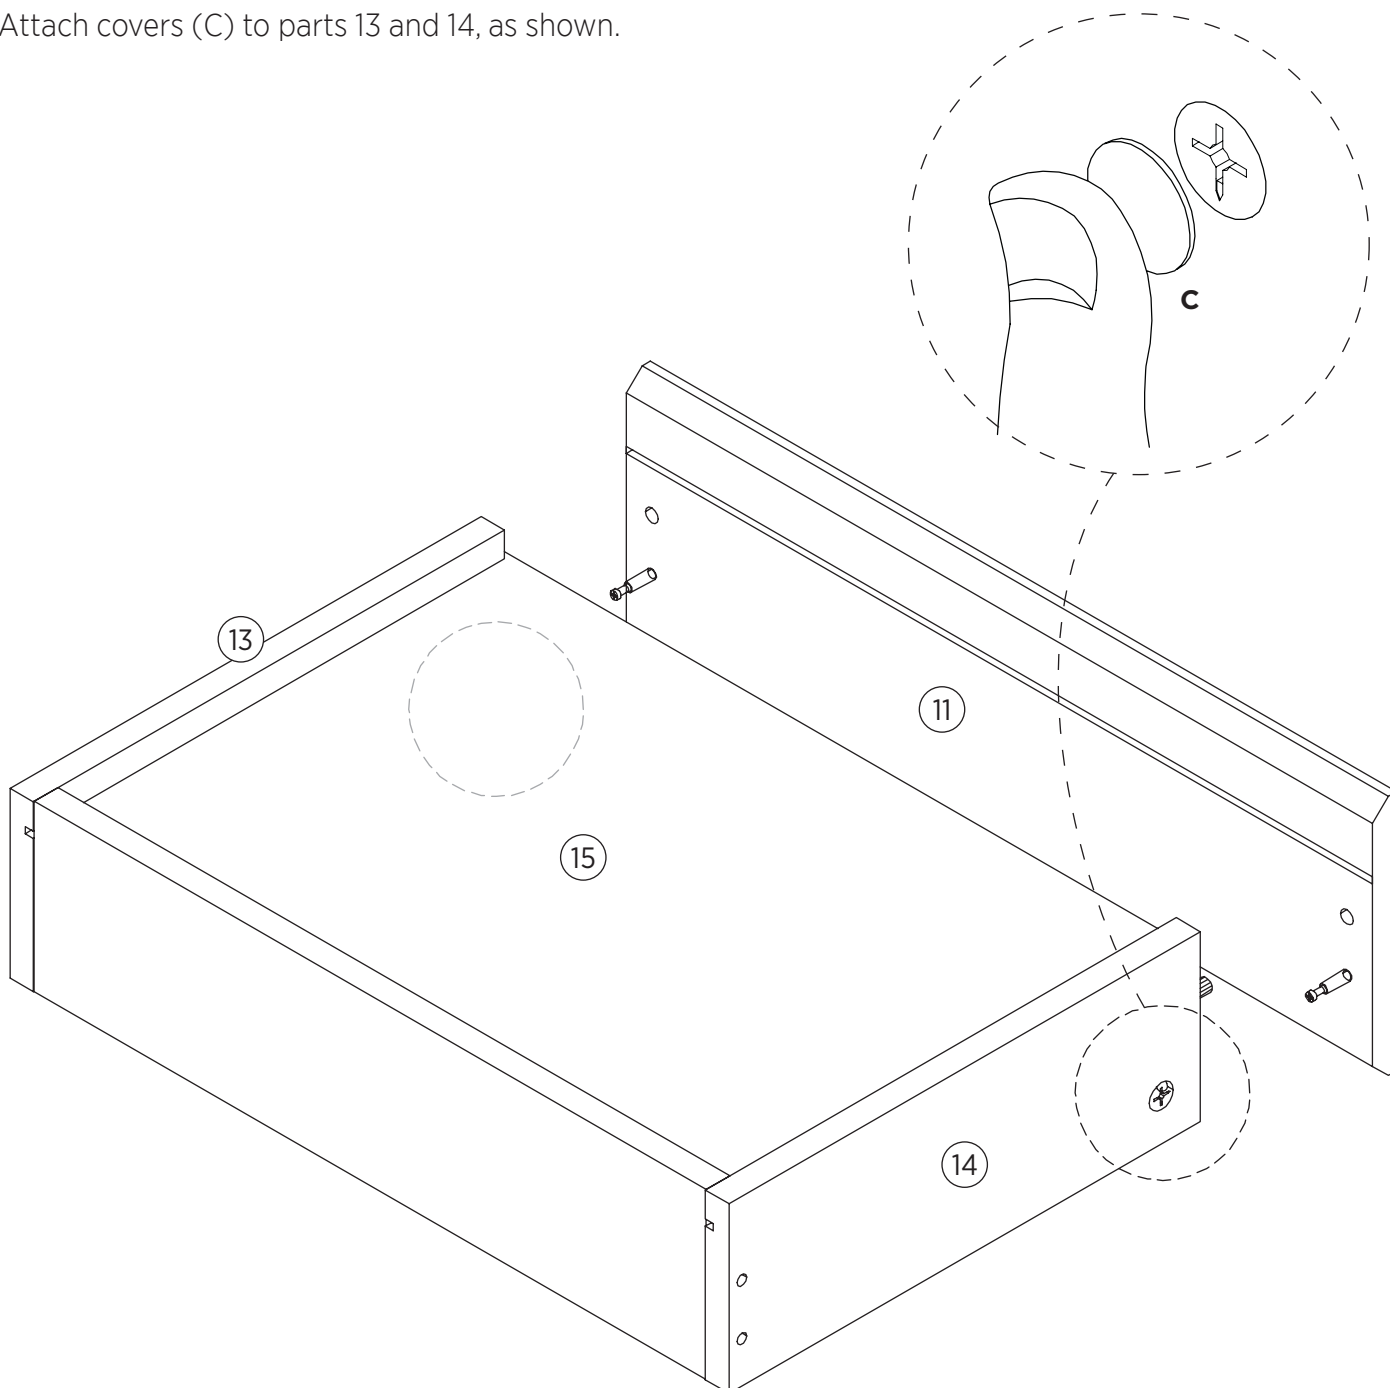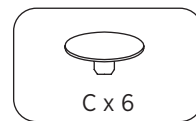

x3

ASSEMBLY INSTRUCTIONS

STEP 22

 
Fix inner drawer runners (R) to parts 13 and 14 using screws (H), as shown.



H x 18



R x 6

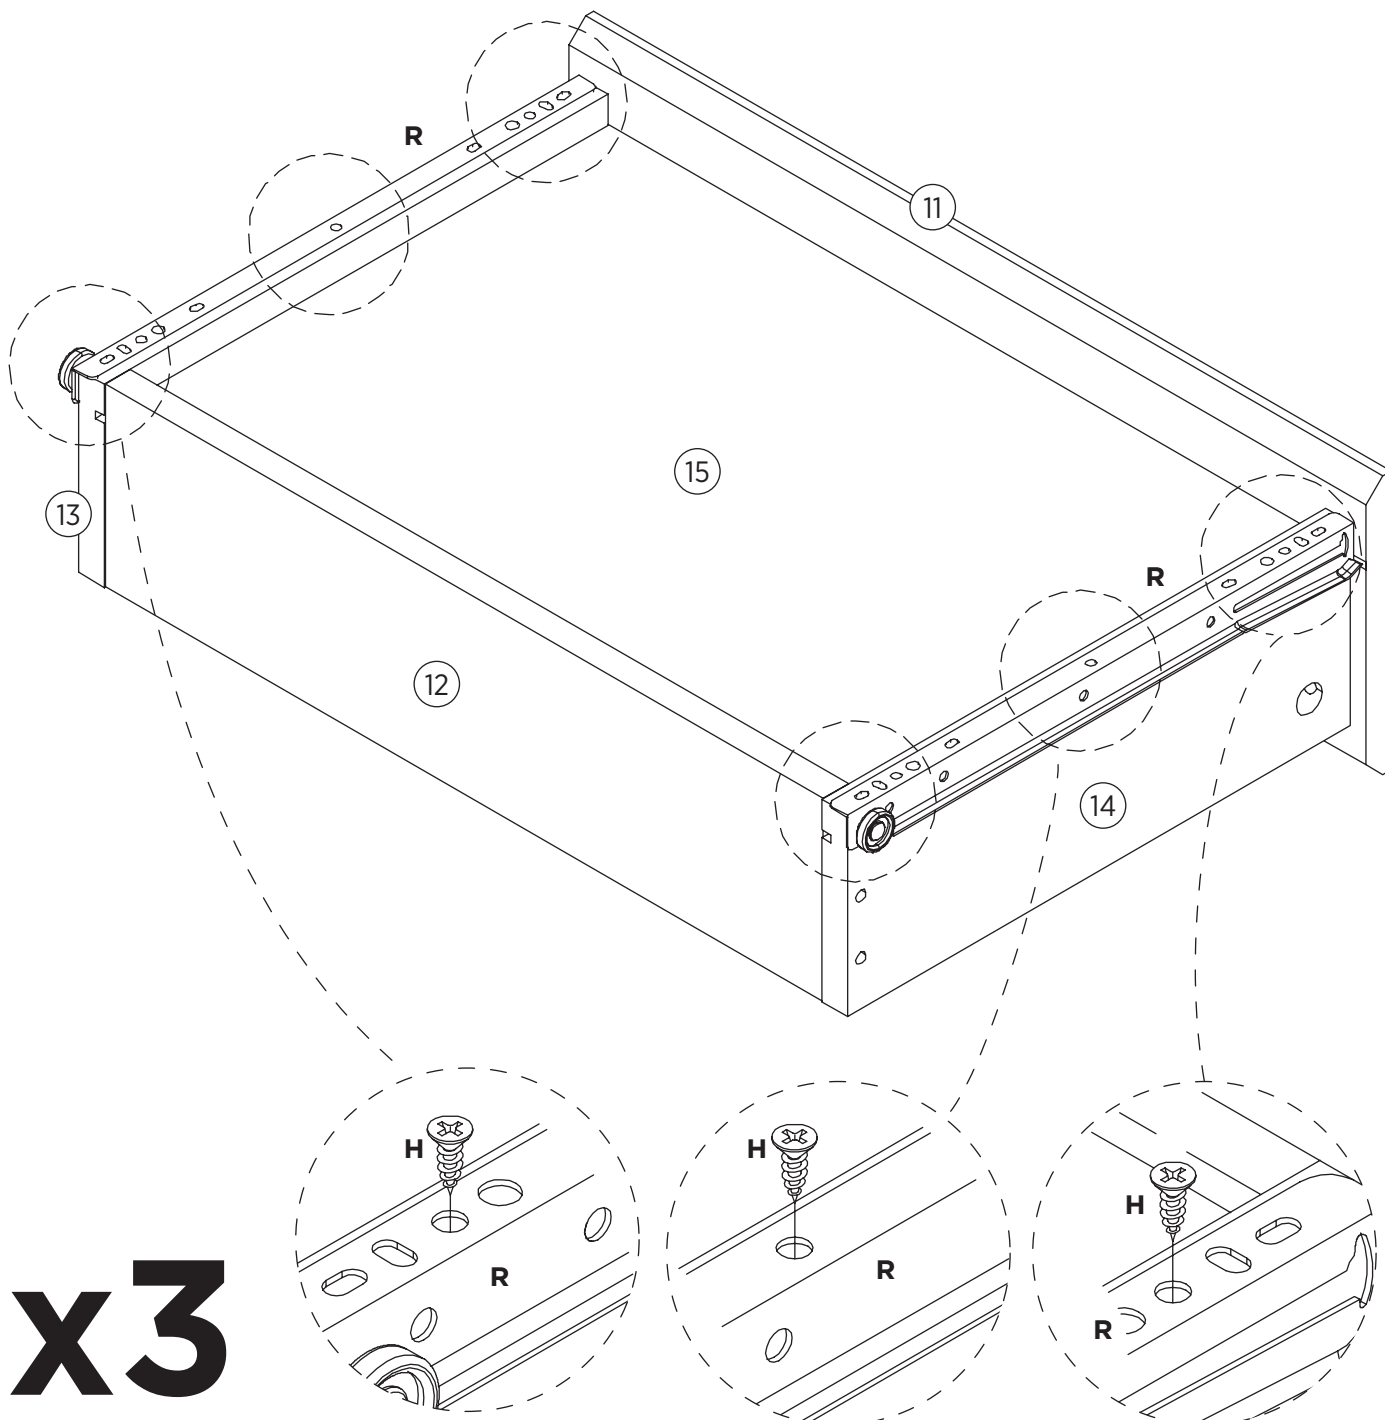


x3

ASSEMBLY INSTRUCTIONS

STEP 23

 Insert drawers 11 to assembled buffet, as shown.

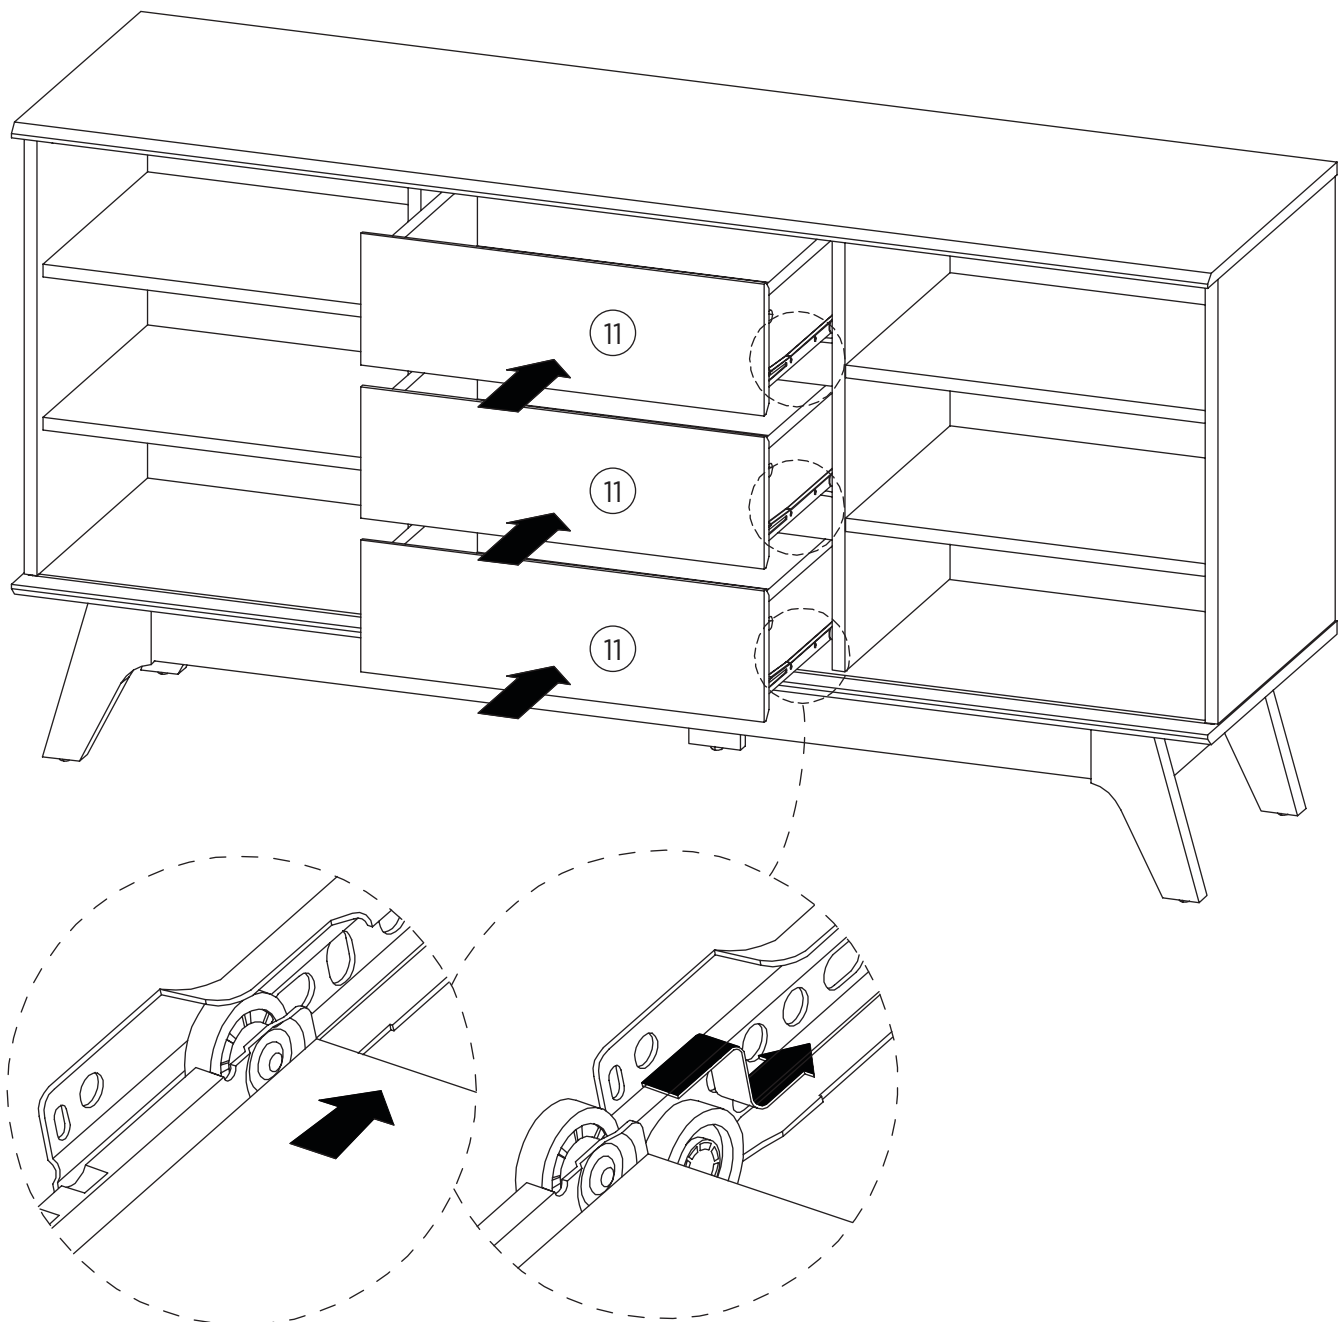

ASSEMBLY INSTRUCTIONS

STEP 24

Fix rollers (S) and (T) to parts 16 using screws (G), as shown.



 
G x 16



S x 4




T x 4

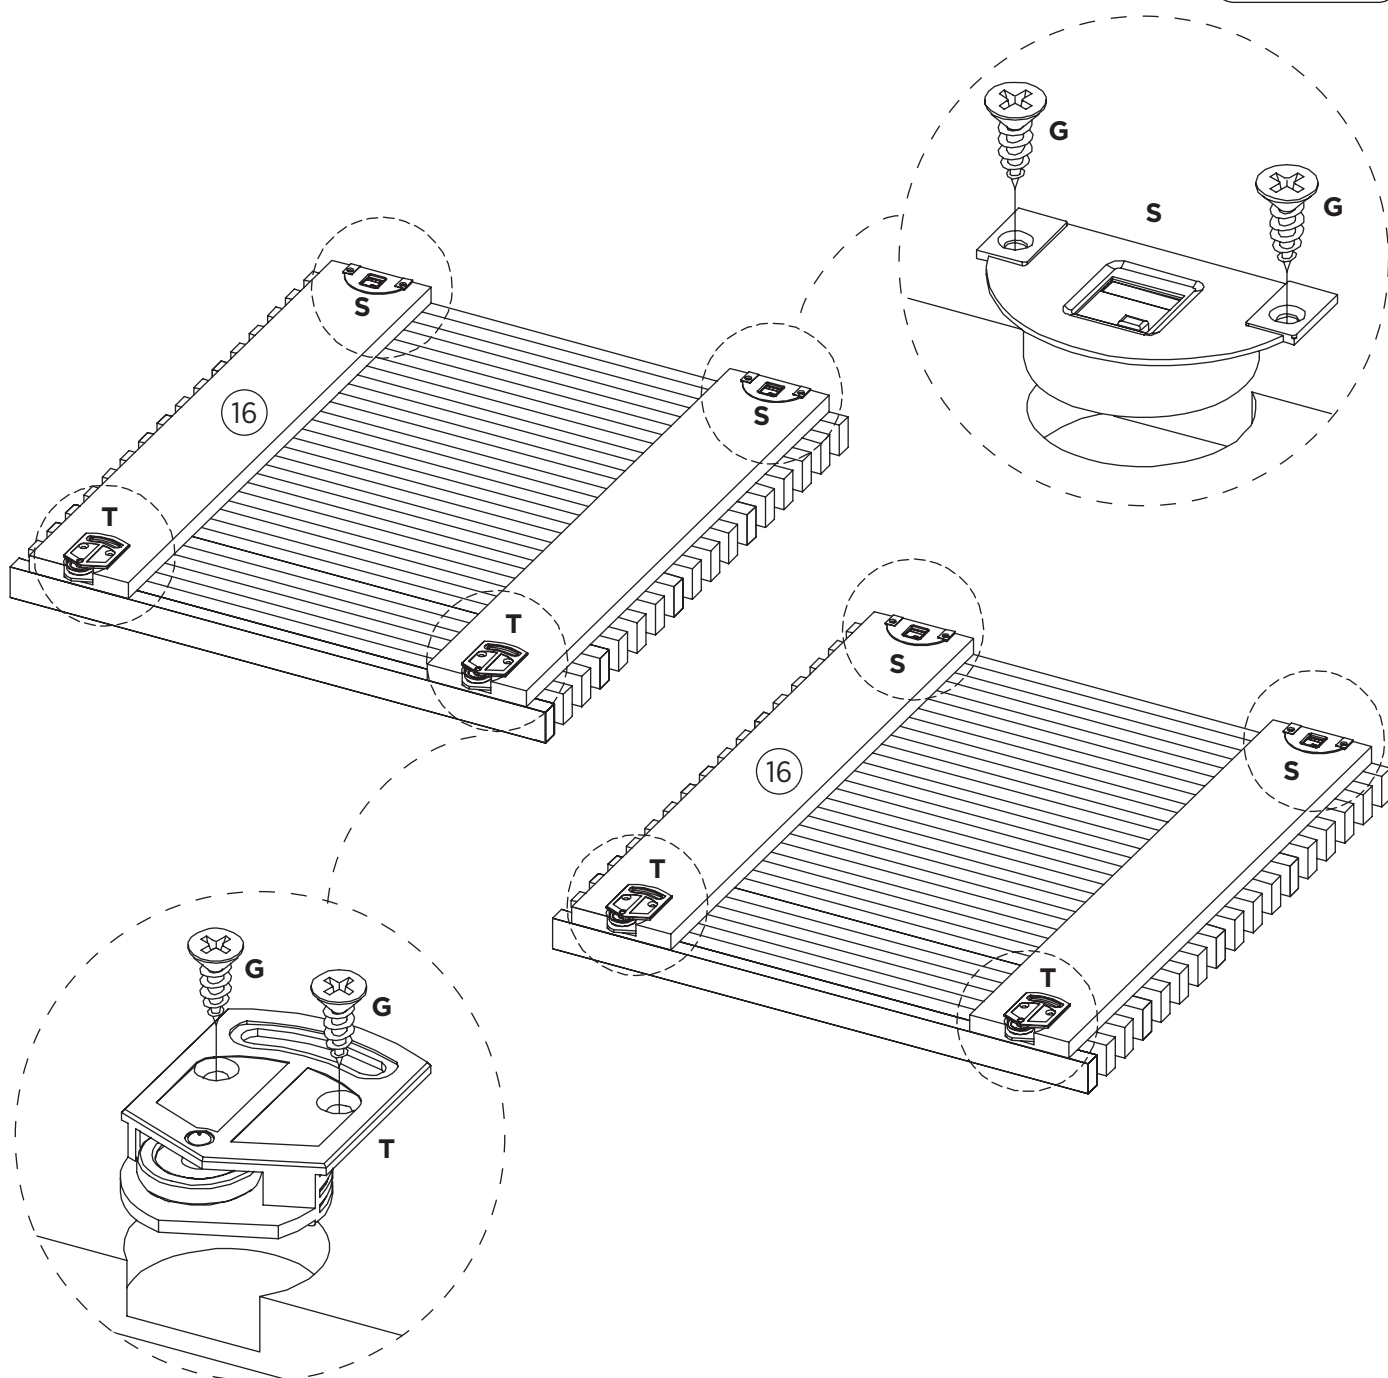

ASSEMBLY INSTRUCTIONS

STEP 25



 
Insert parts 16 to assembled buffet, as shown.

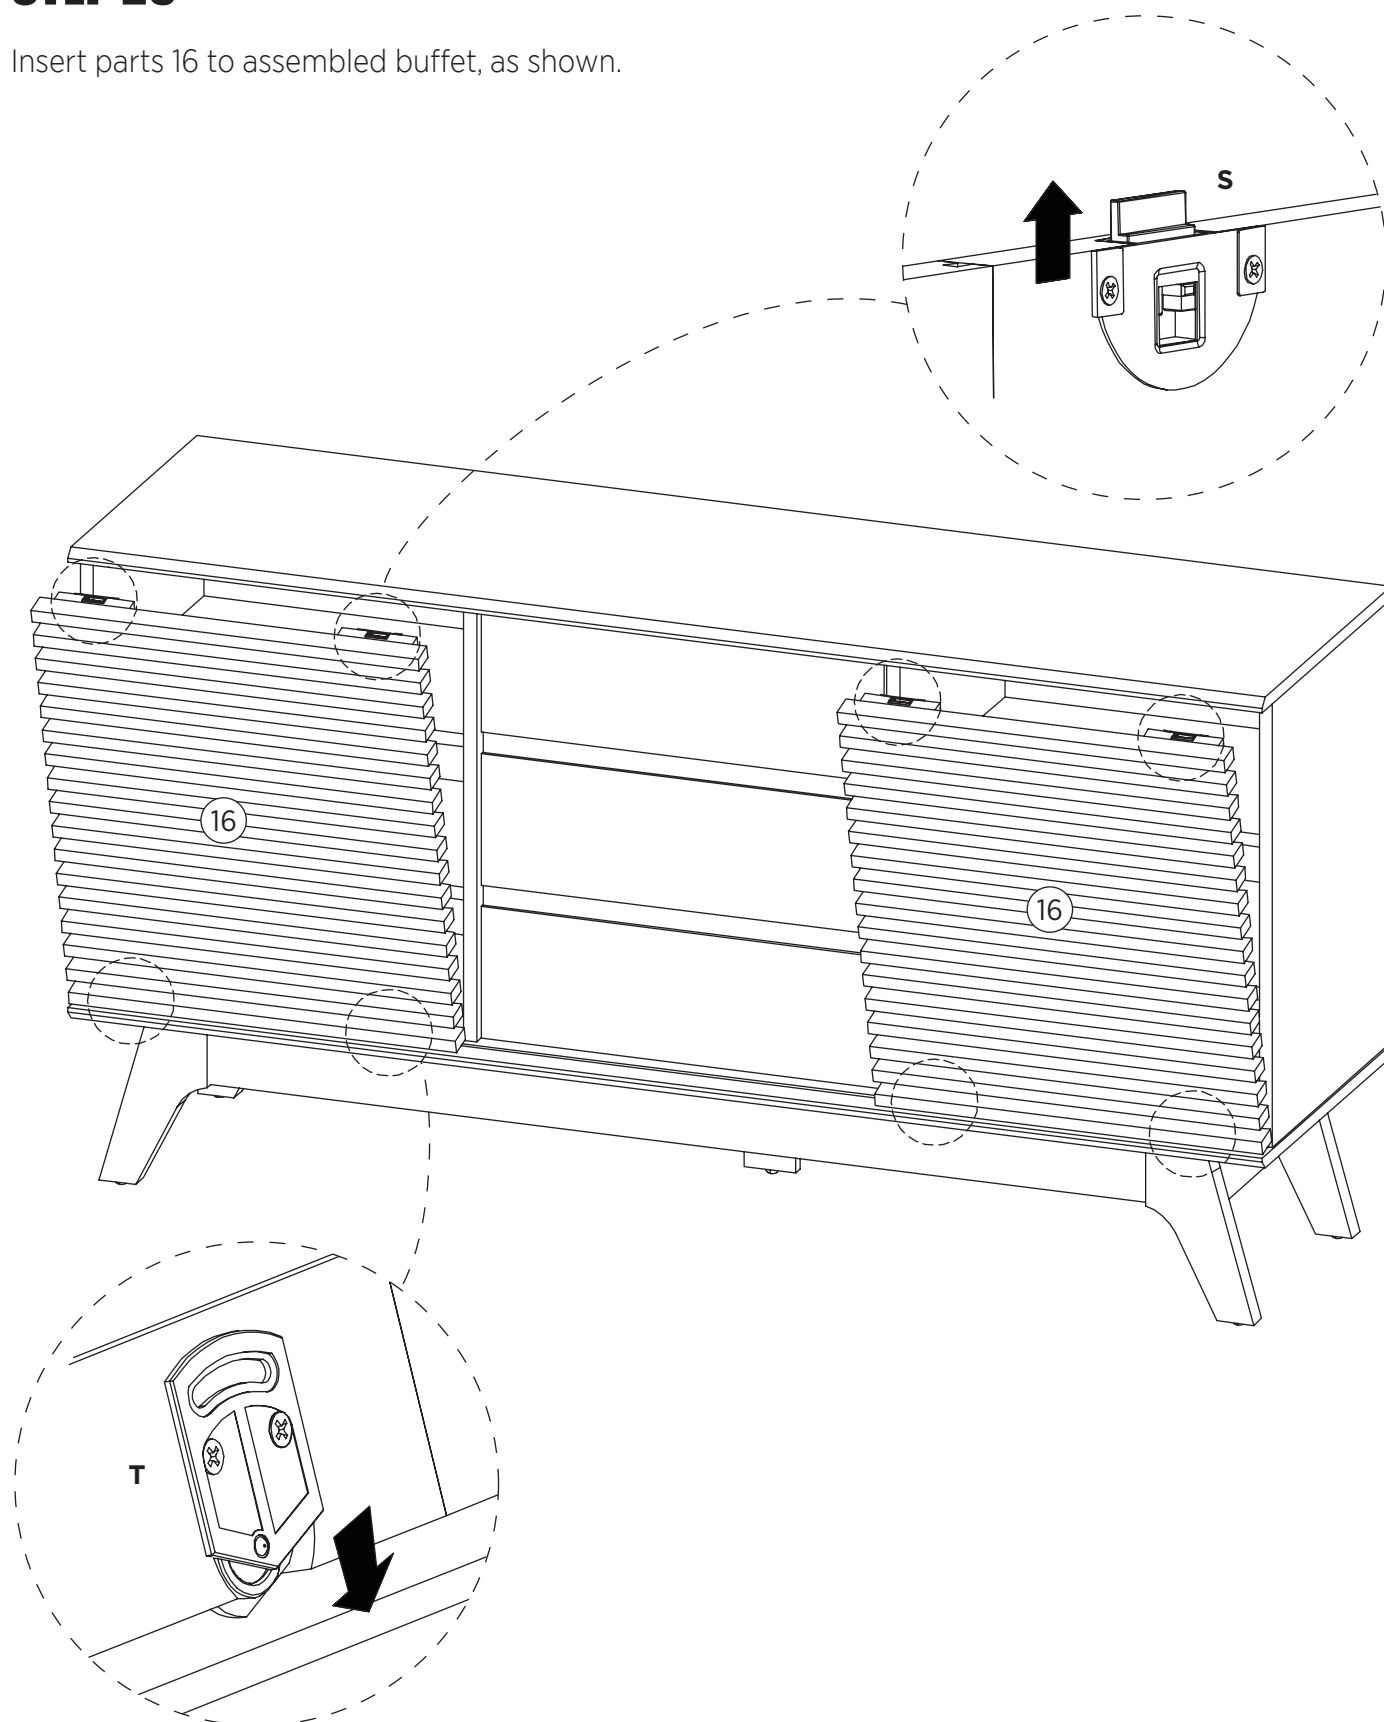

ASSEMBLY INSTRUCTIONS

STEP 26

   Fix wall brackets (U) to part 1 using screws (V), as shown.

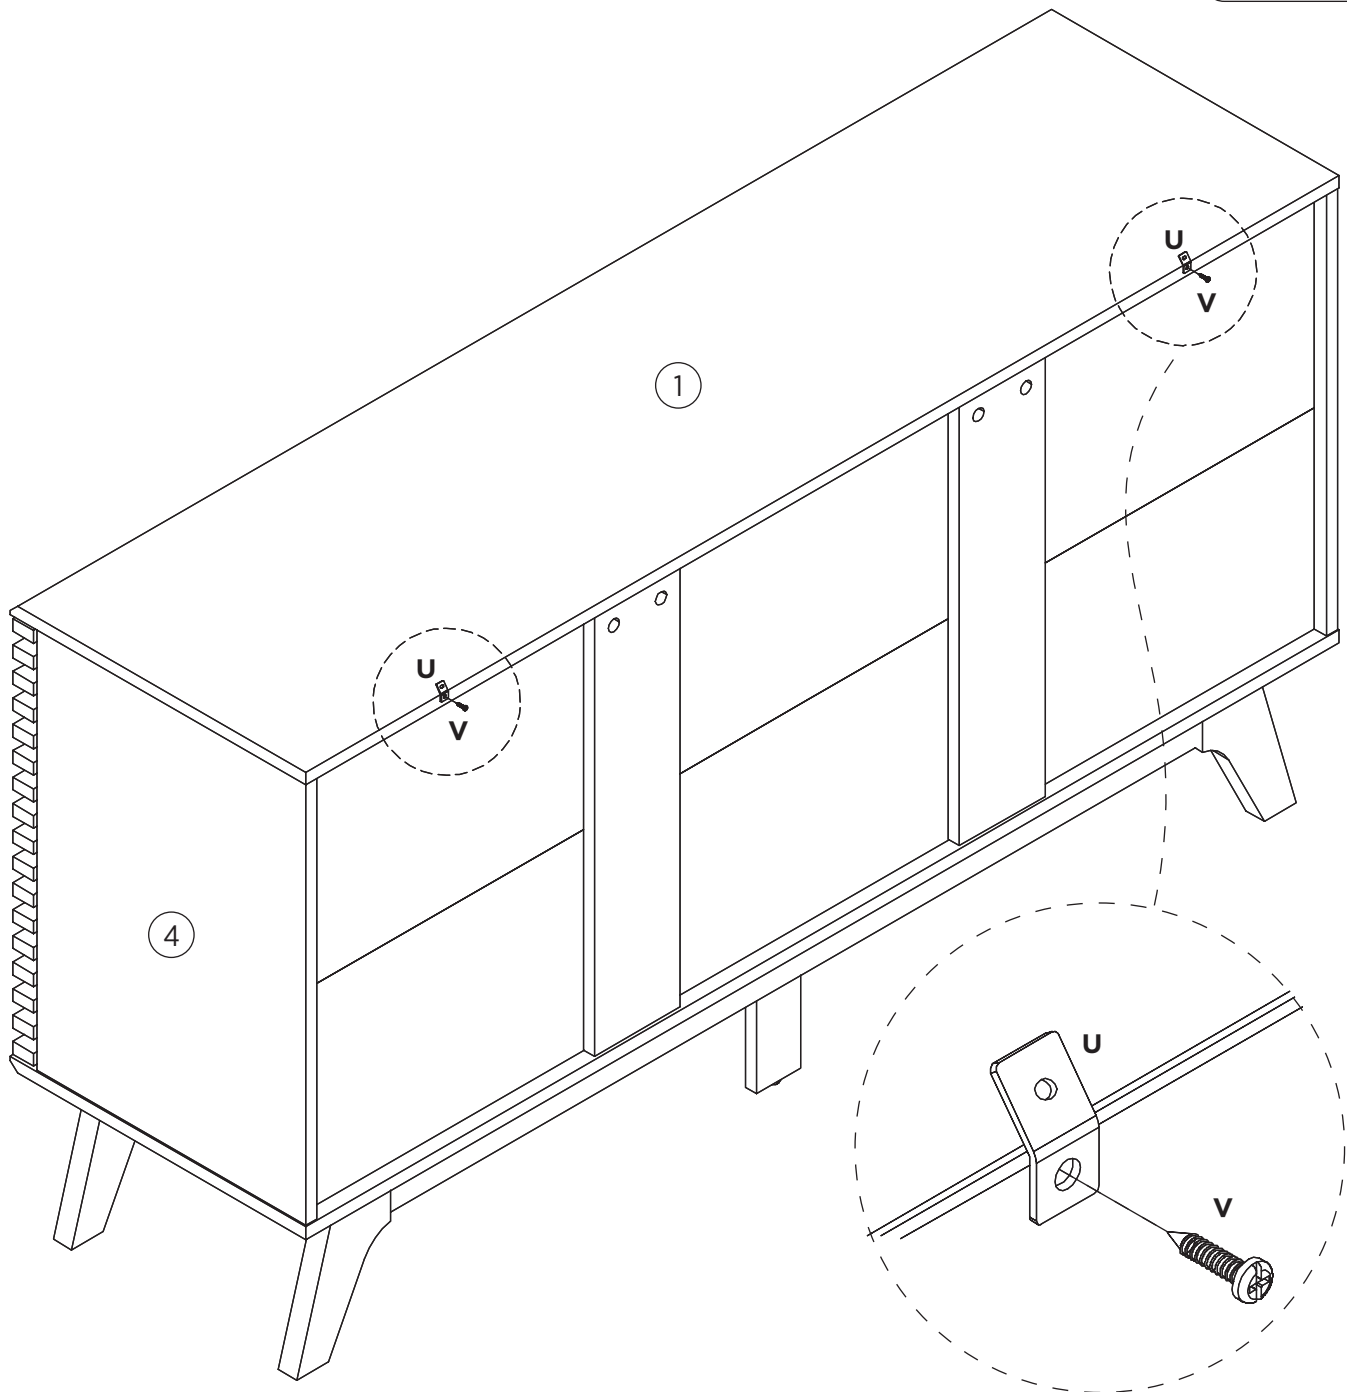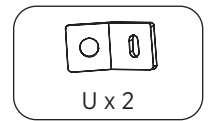

ASSEMBLY INSTRUCTIONS

 
 
STEP 27

For extra stability, you must fix your buffet to the wall using the additional hardware (U) and (W), as shown.

Fix wall brackets (U) to wall using screws (W), as shown.

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.



Please consider the wall mounting & fixing guide when securing your buffet.

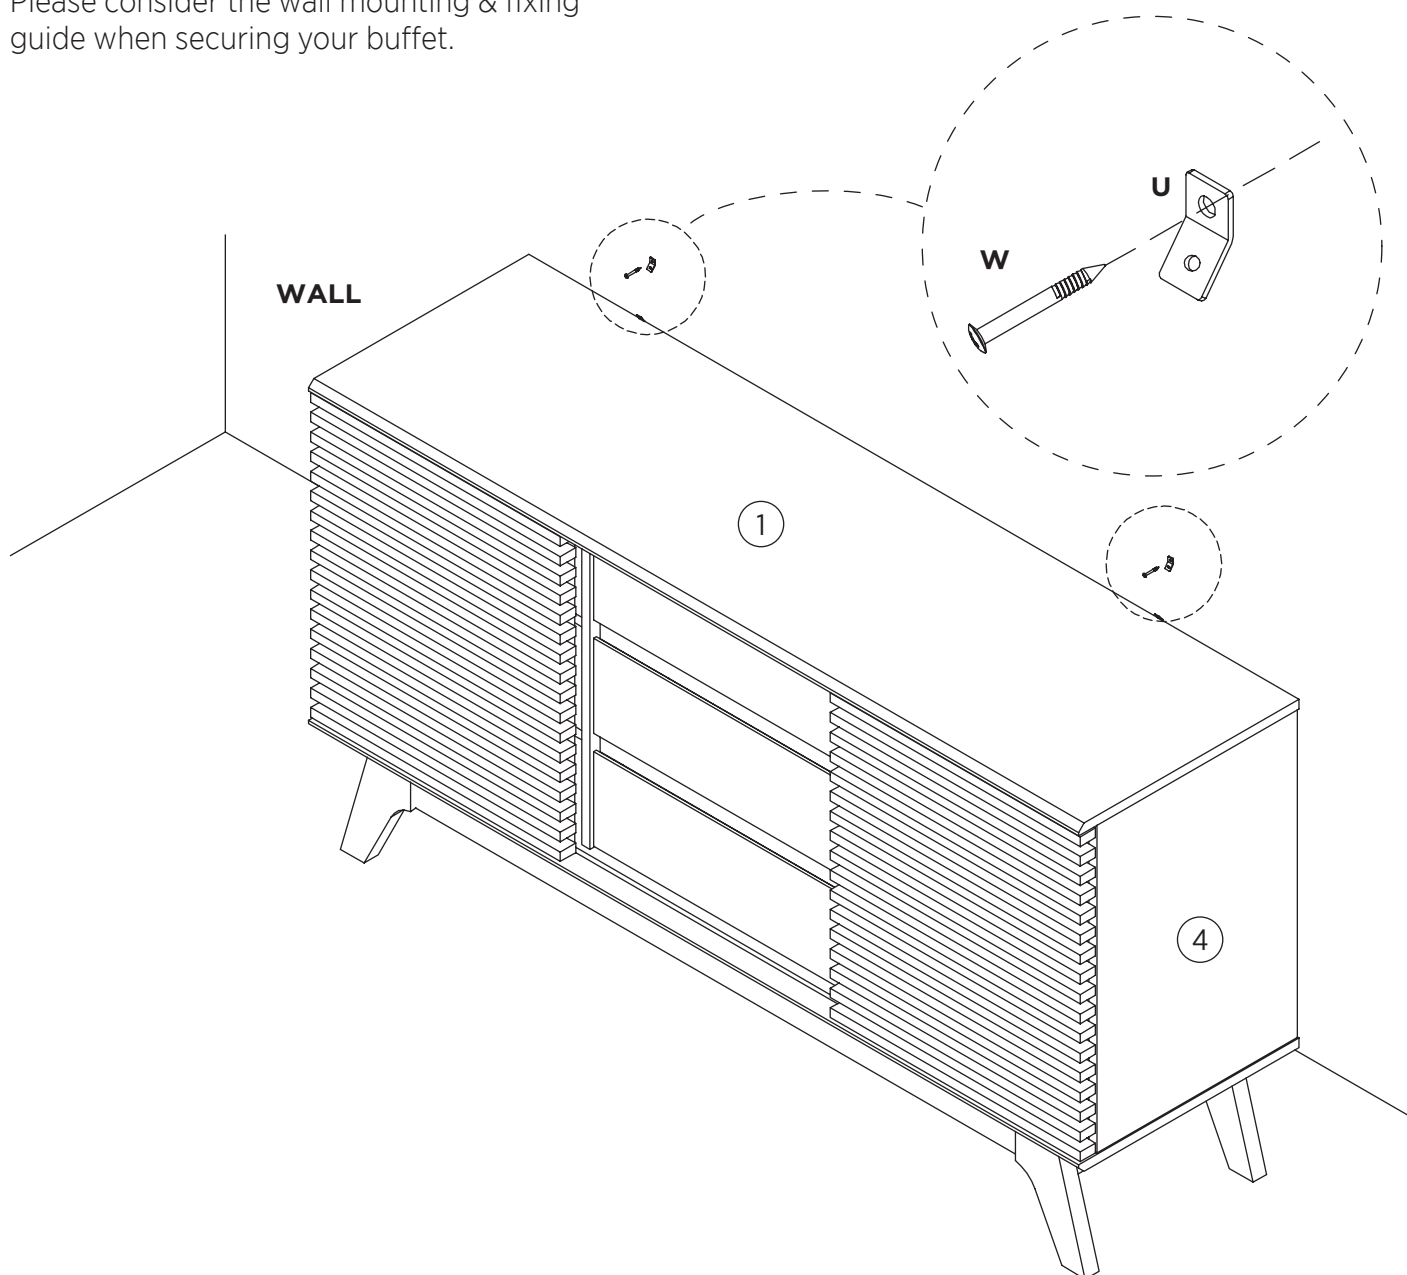

ASSEMBLY INSTRUCTIONS

STEP 28

  Cable ties (X) are fixed through the wall brackets (U), and tighten to the other end, as shown.

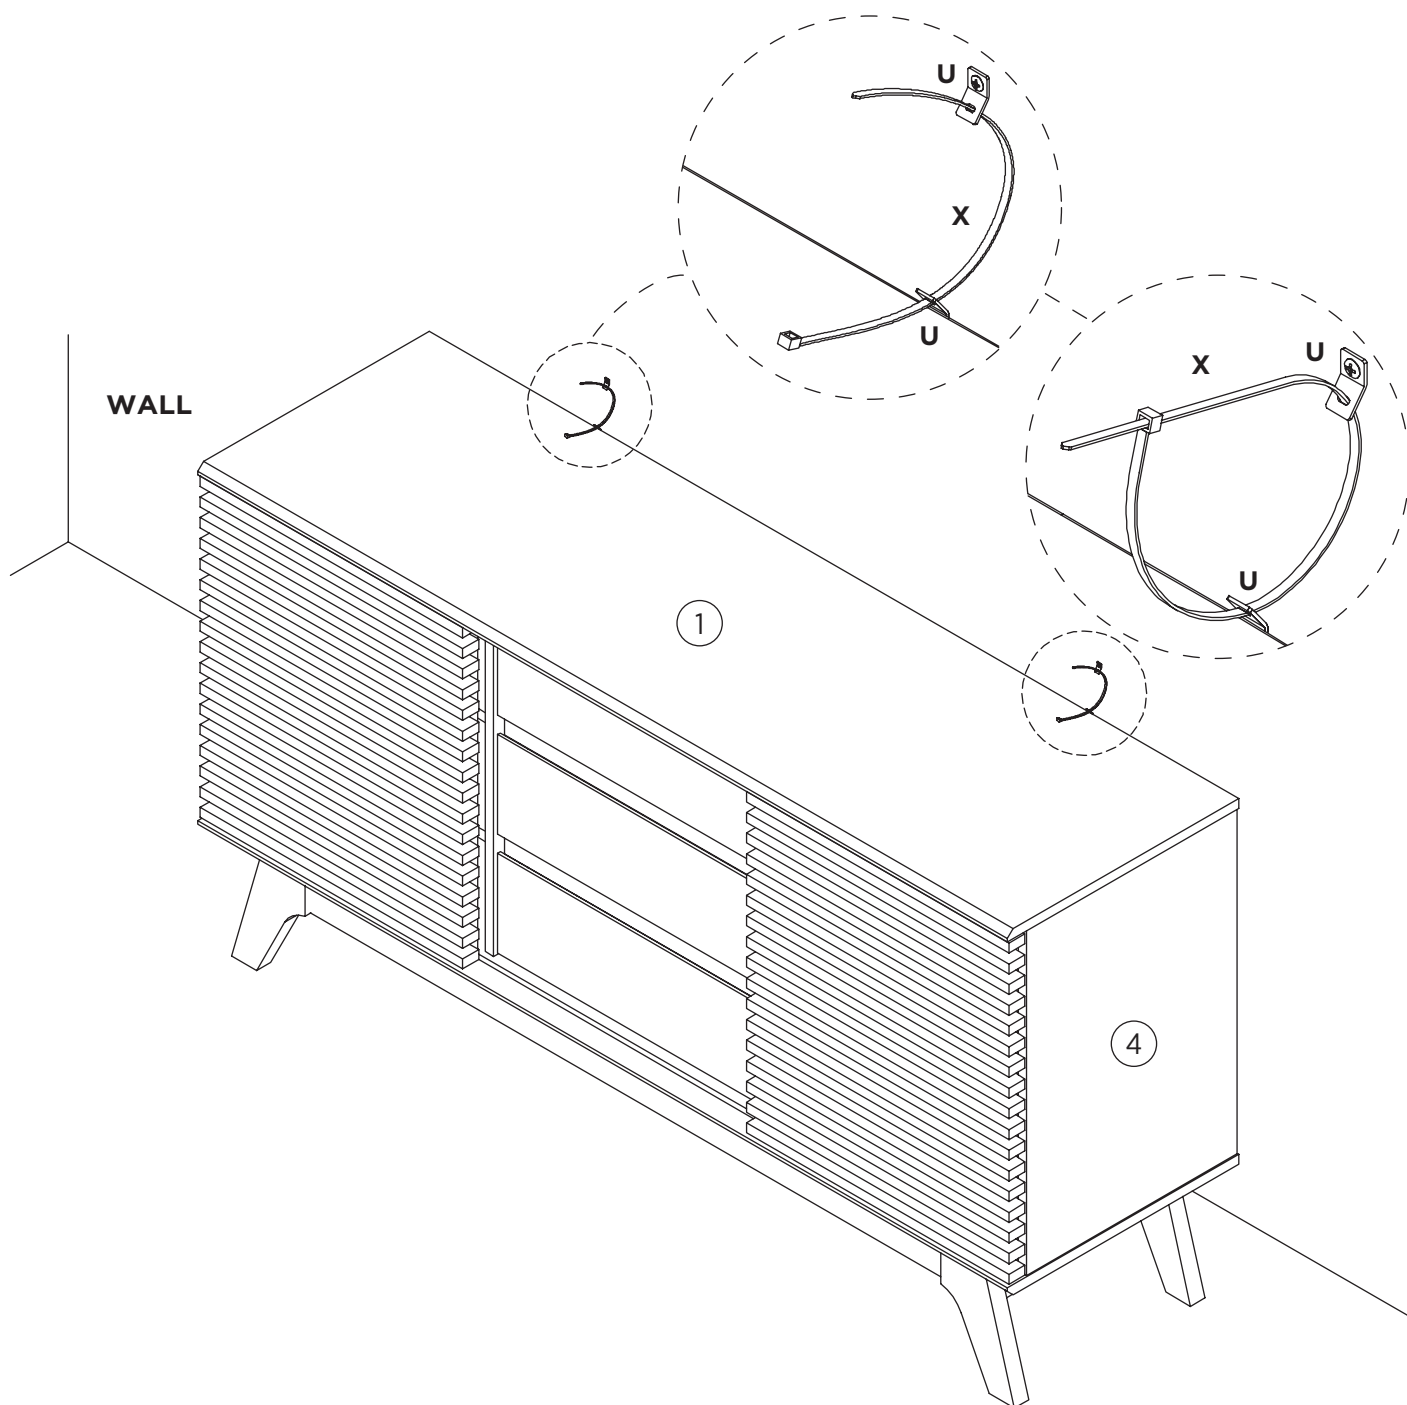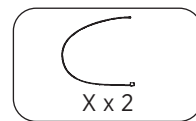


ASSEMBLY INSTRUCTIONS

STEP 29

Please note: the maximum recommended weight is 5kg for shelf, 20kg top, and 5kg inside drawers.

 Your buffet is ready for use..

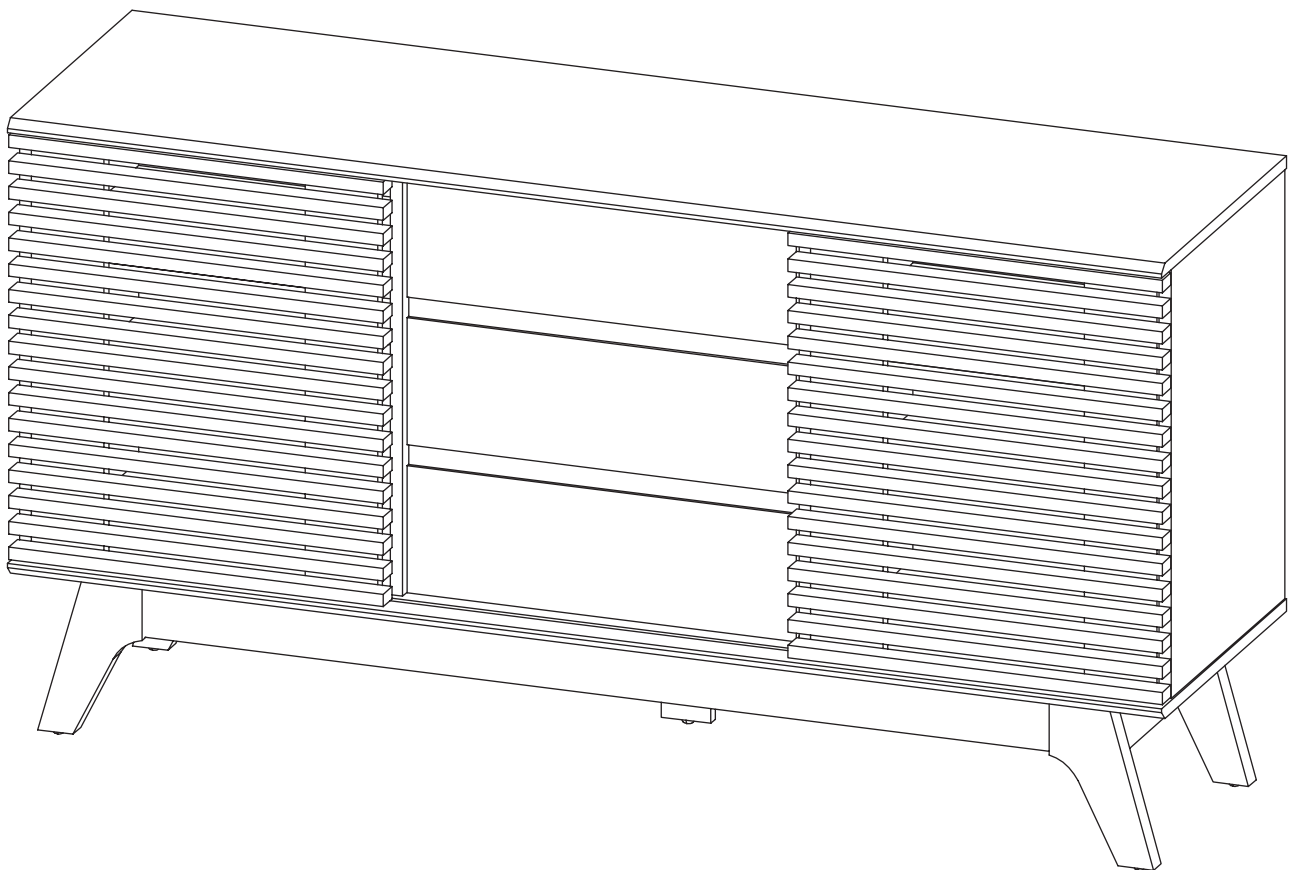

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

**Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.**

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

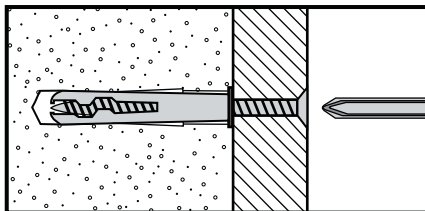


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

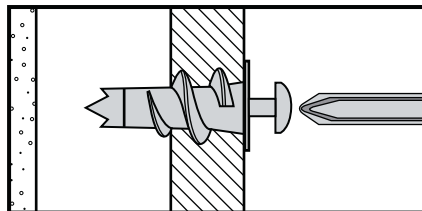


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

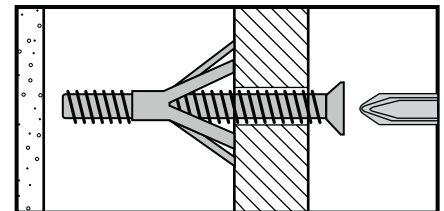


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

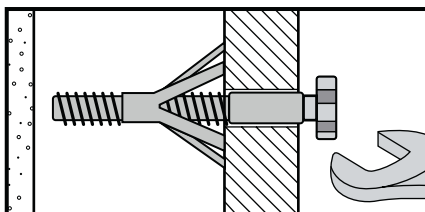


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

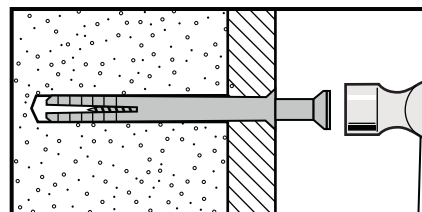

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

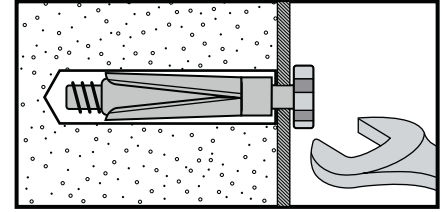

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.