 


TV UNIT

2 DOORS 2 DRAWERS

ASSEMBLY INSTRUCTIONS

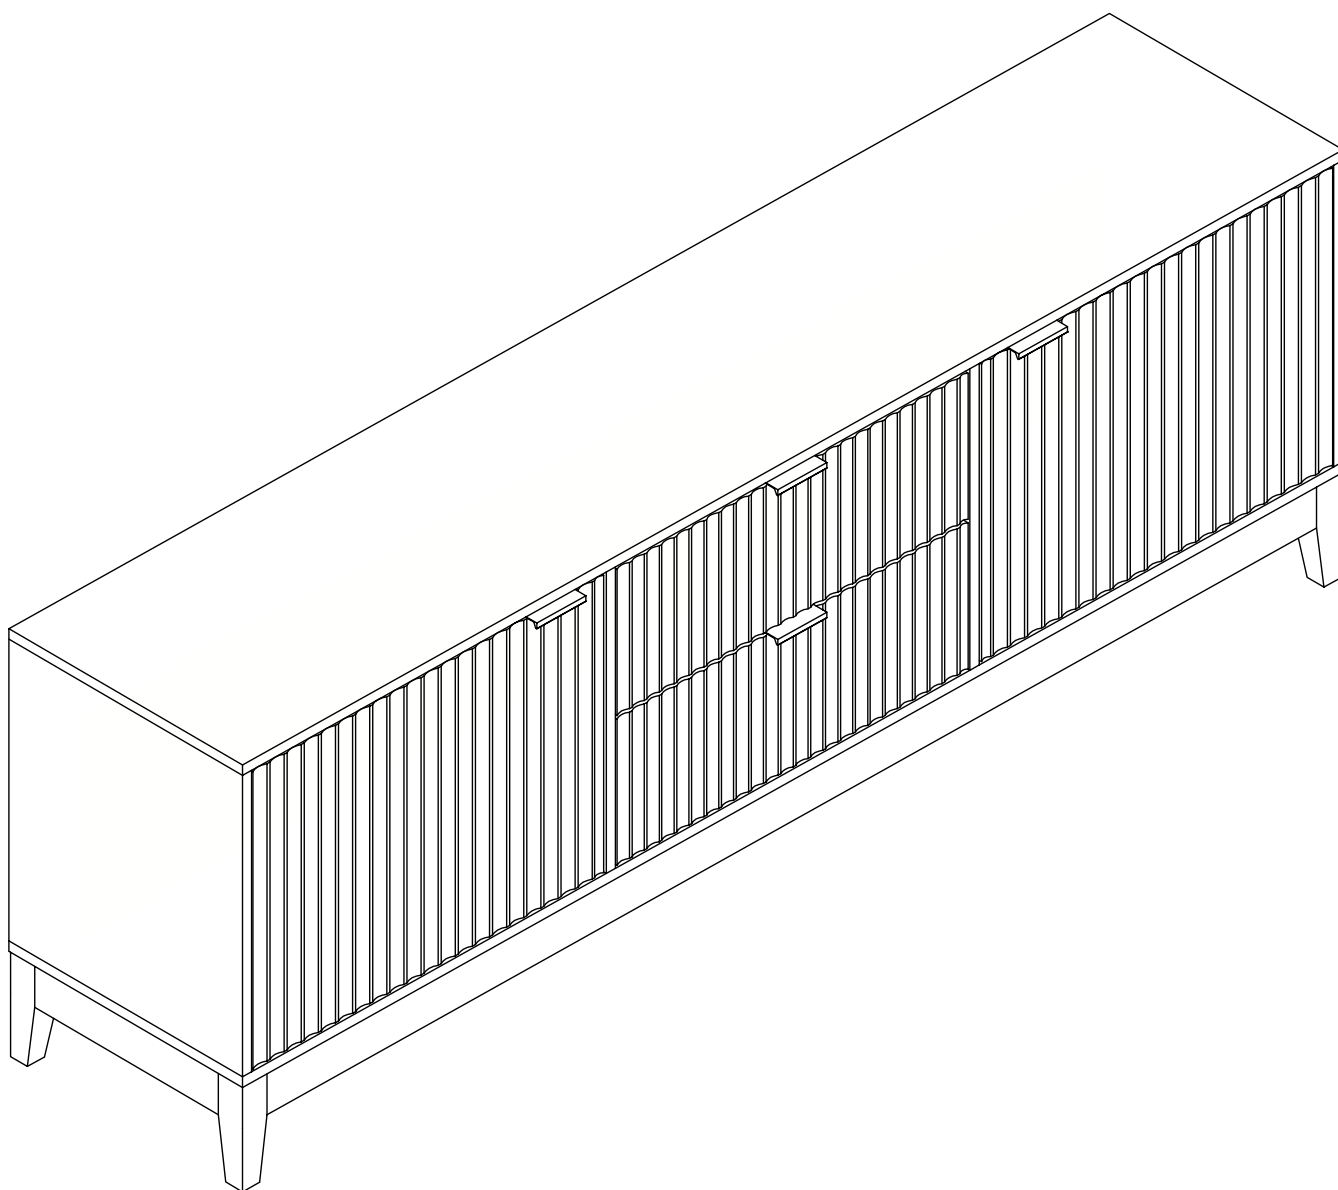

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

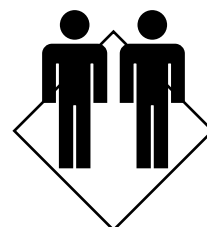

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

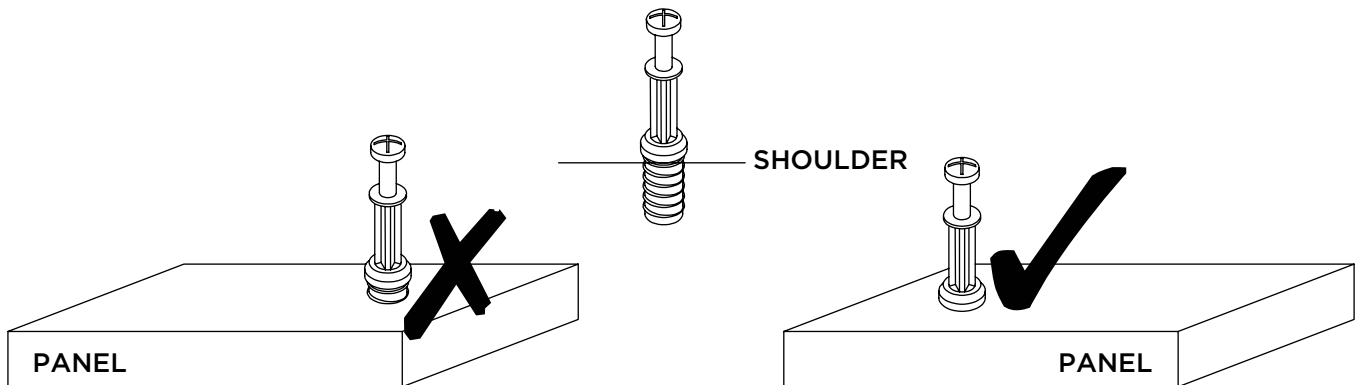


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

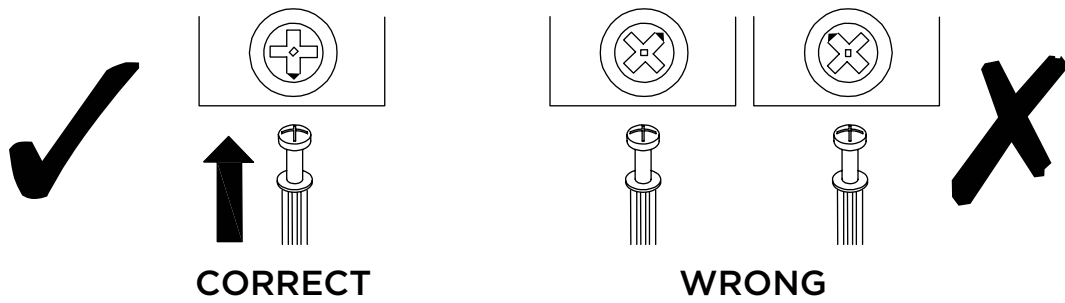

 
Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

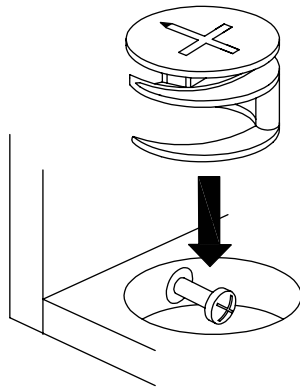

Turn cam lock clockwise to tighten.

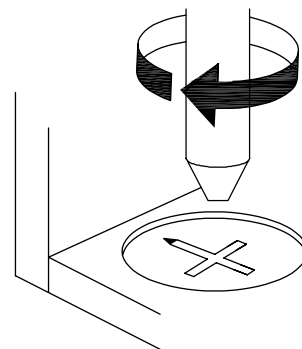 


HARDWARE LIST

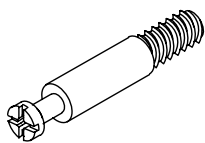 

36 x A
Quickfit Screw



 36 x B
Cam Lock

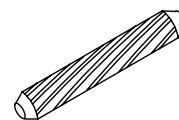


24 x C
Wooden Dowel




52 x D
Screw



 
16 x E
Screw




16 x F
Screw

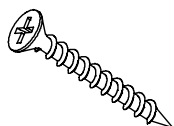 


24 x G
Screw

 

12 x H
Wedge

 

4 x I
Handle

 

8 x J
Bolts

 


8 x K
Washer




8 x L
Washer


HARDWARE LIST

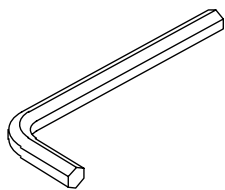


1 x M
Allen Key

 

8 x N
Shelf Support

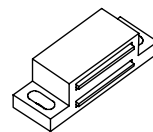 

2 x O
Door Stopper

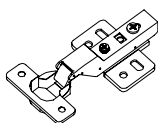 


4 x P
Hinges




2 x Q
Adjustable Feet



 
4 x R
Rubber Pad

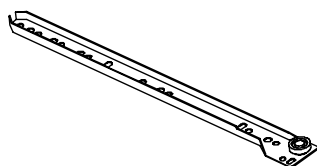


2 x S
Outer Drawer Runner

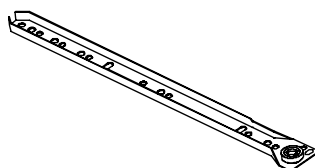 


2 x T
Outer Drawer Runner

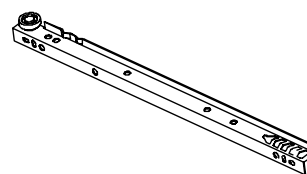 


2 x U
Inner Drawer Runner

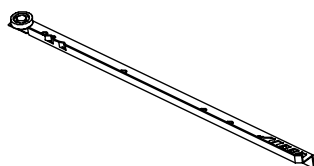 


2 x V
Inner Drawer Runner

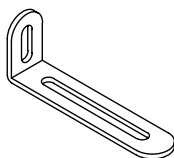 

2 x W
Wall Bracket

 


2 x X
Wall Plug

 


4 x Y
Screw

 
PARTS LIST

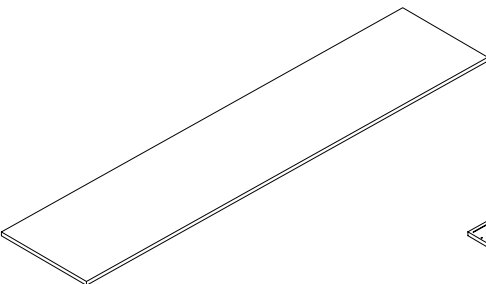


1
1 PC

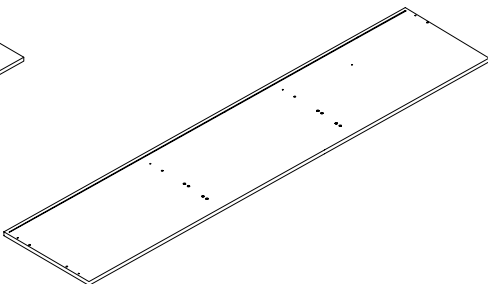 


2
1 PC

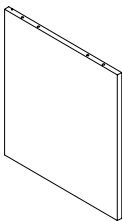 


3
1 PC

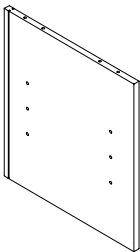 


4
1 PC

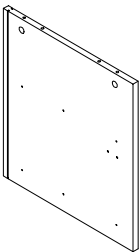 


5
1 PC

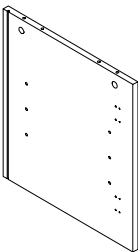 


6
1 PC

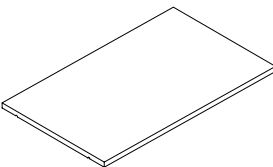 


7
2 PCS

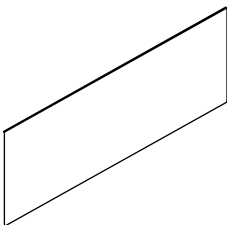 


8
4 PCS

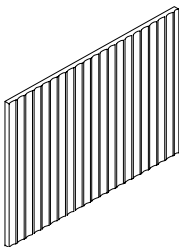 


9
1 PC

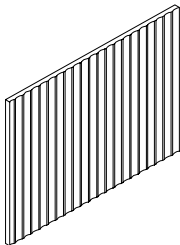 

10
1 PC

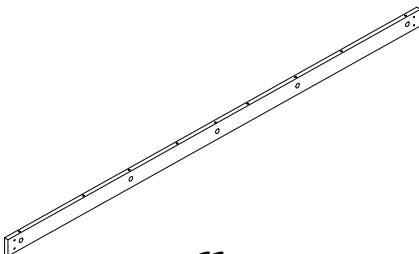 


11
2 PCS

 

12
2 PCS

 
PARTS LIST




13
4 PCS



 
14
2 PCS




15
4 PCS

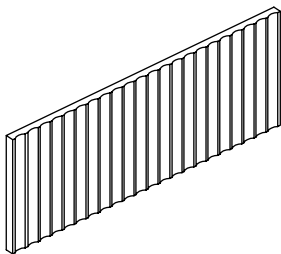 


16
2 PCS

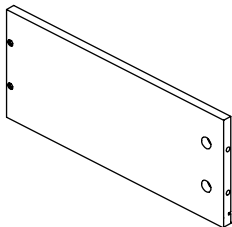 


17
2 PCS

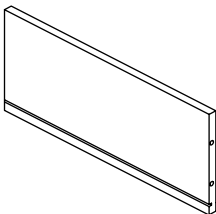 


18
2 PCS

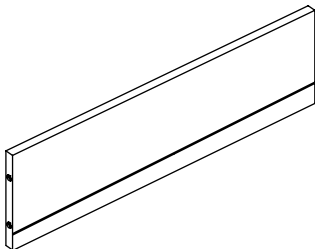 


19
2 PCS

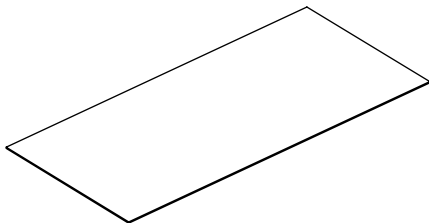 


20
2 PCS

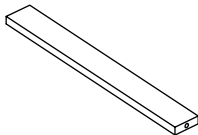 


21
2 PCS

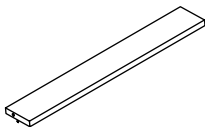 

22
1 PC

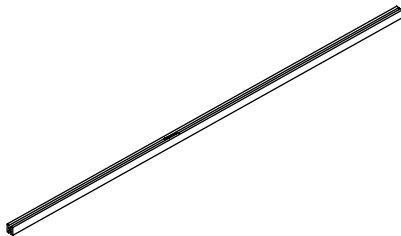 

23
3 PCS

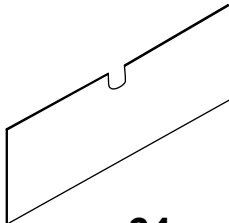 

24
2 PCS

 
ASSEMBLY INSTRUCTIONS

STEP 1

Insert quickfit screw (A) to parts 1,

Fix door stoppers (O) to part 1 using screws (E).

Fix wall brackets (W) to part 1 using screws (Y), as shown.



A x 8



E x 4



 
O x 2



W x 2





Y x 2

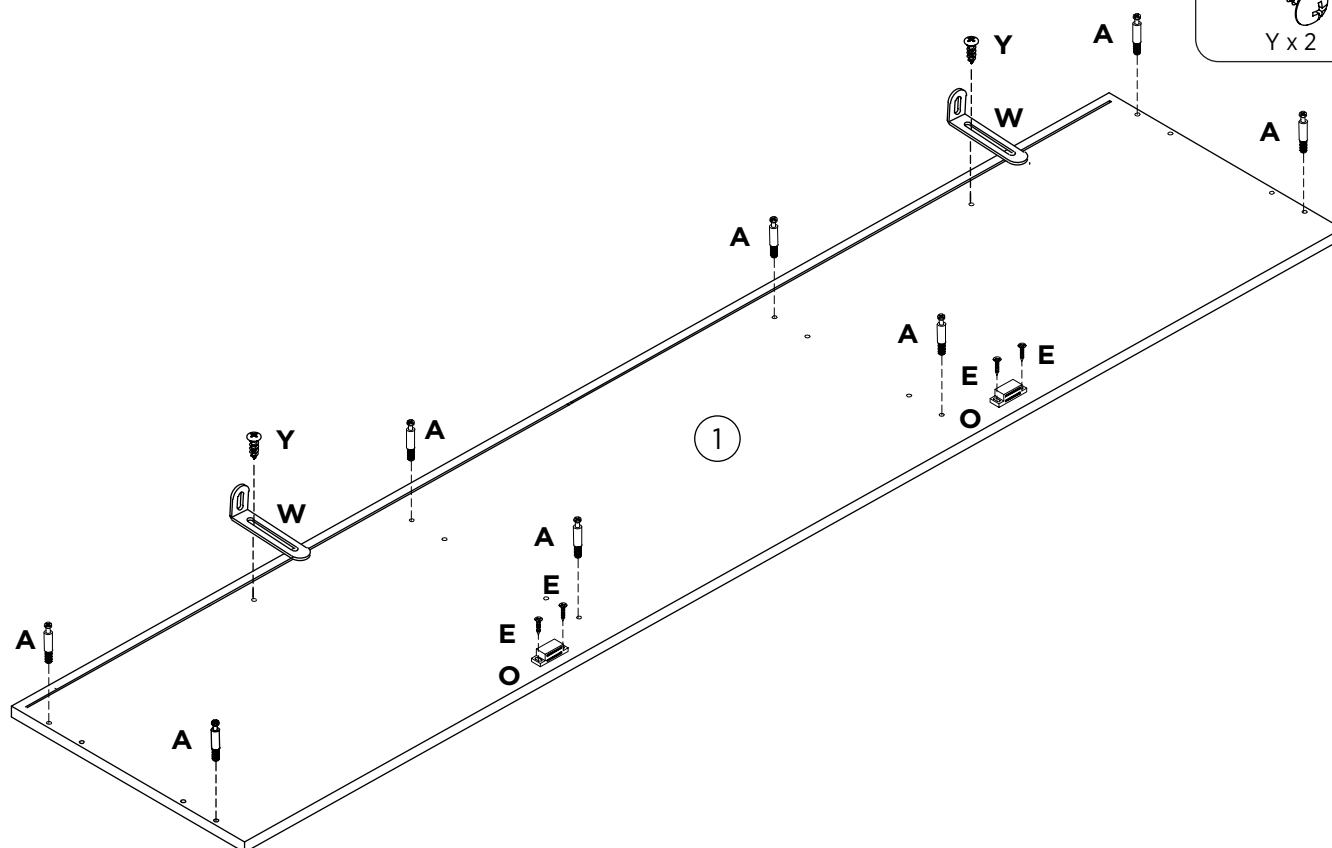

ASSEMBLY INSTRUCTIONS

STEP 2


 
 
Insert quickfit screw (A) to part 2, as shown.

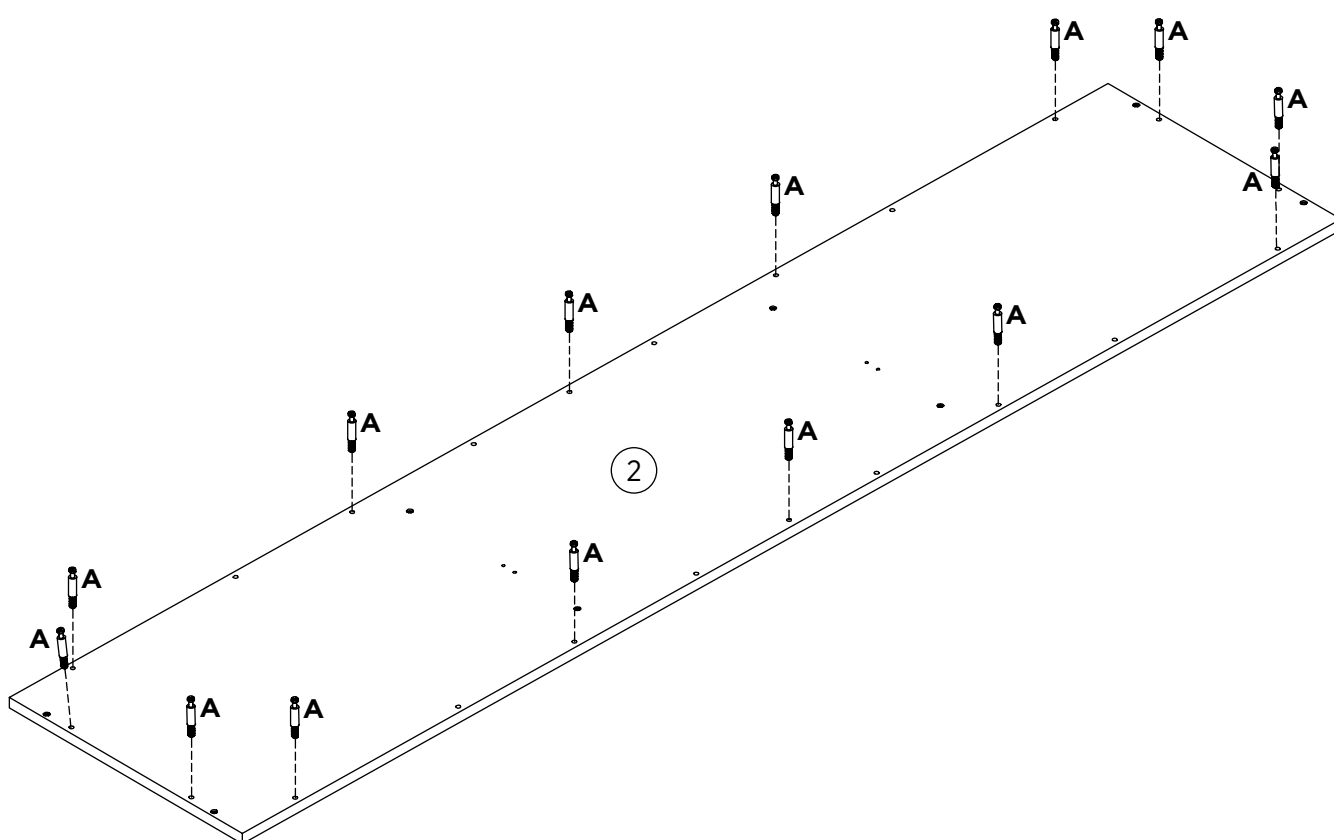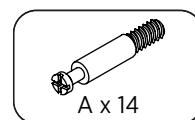

ASSEMBLY INSTRUCTIONS

STEP 3

   Insert quickfit screw (A) to part 4 and 5, as shown.

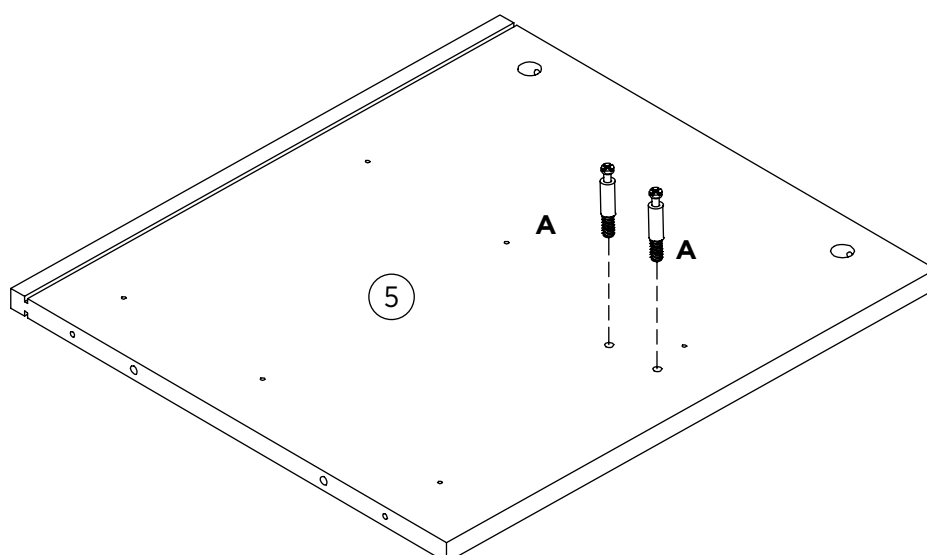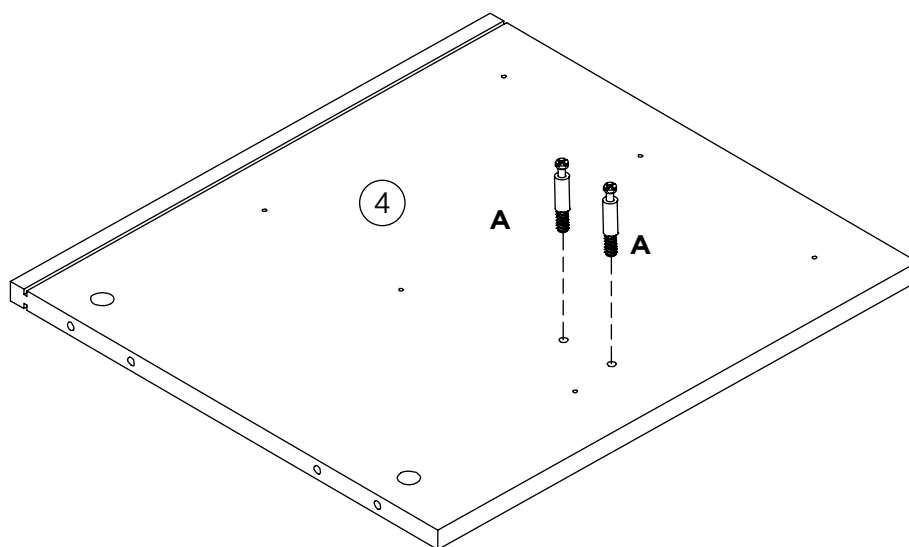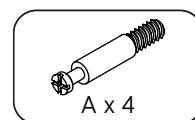


ASSEMBLY INSTRUCTIONS

STEP 4

Fix outer drawer runners (T) to part 4 using screws (D), as shown.



 T x 2

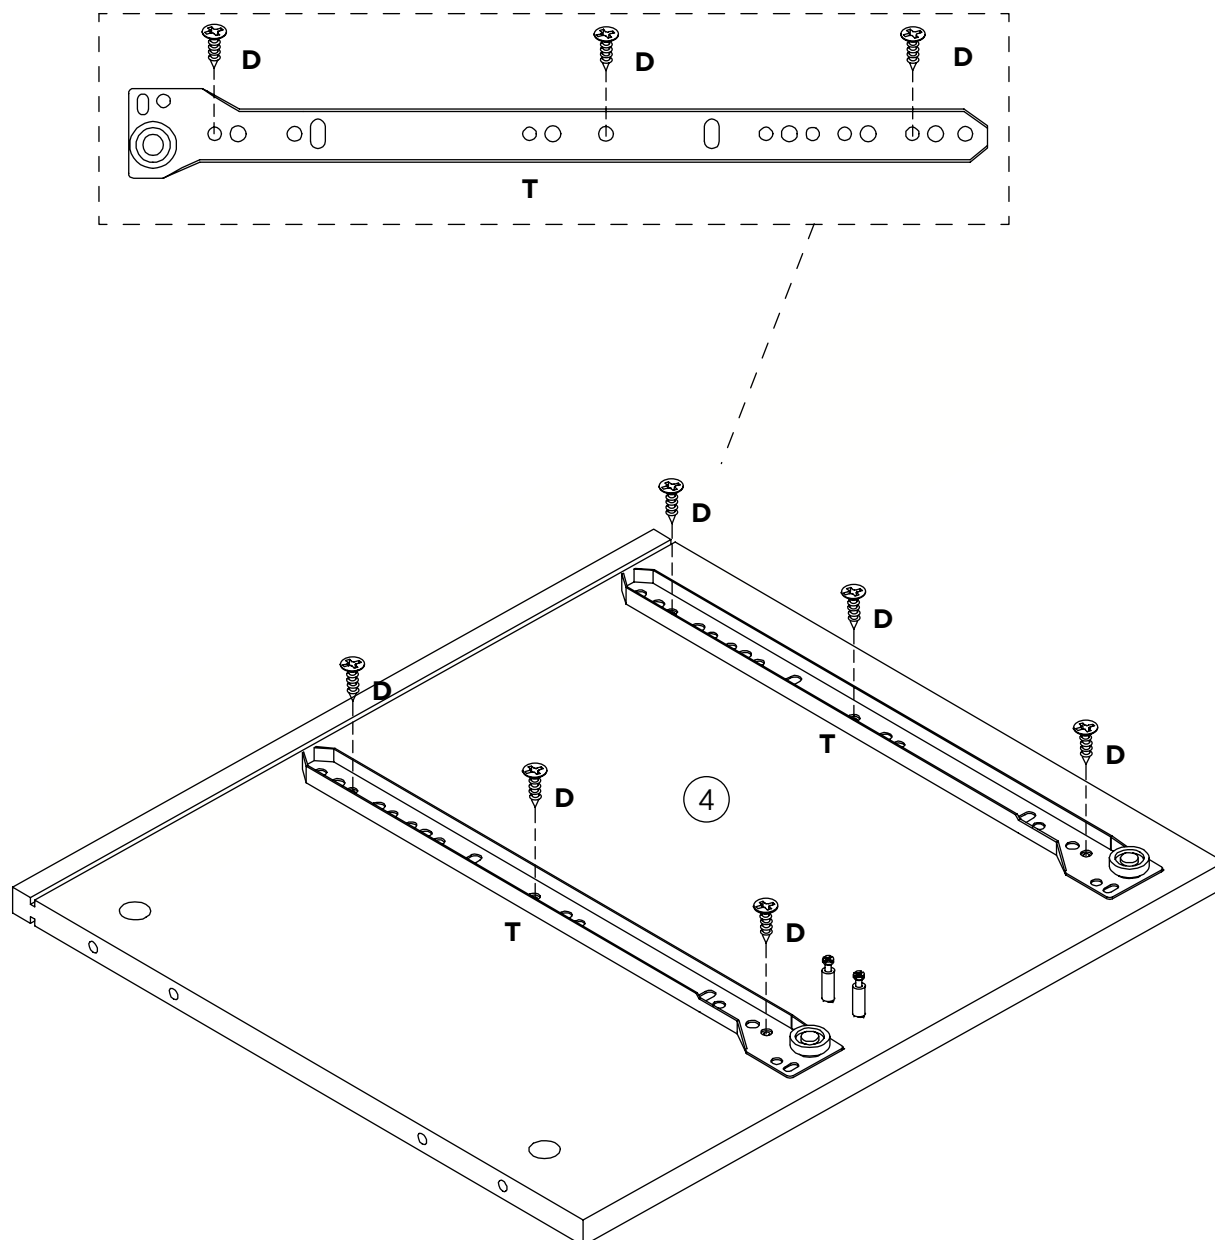

ASSEMBLY INSTRUCTIONS

STEP 5

 
Fix outer drawer runners (T) to part 5 using screws (D), as shown.



D x 6



S x 2

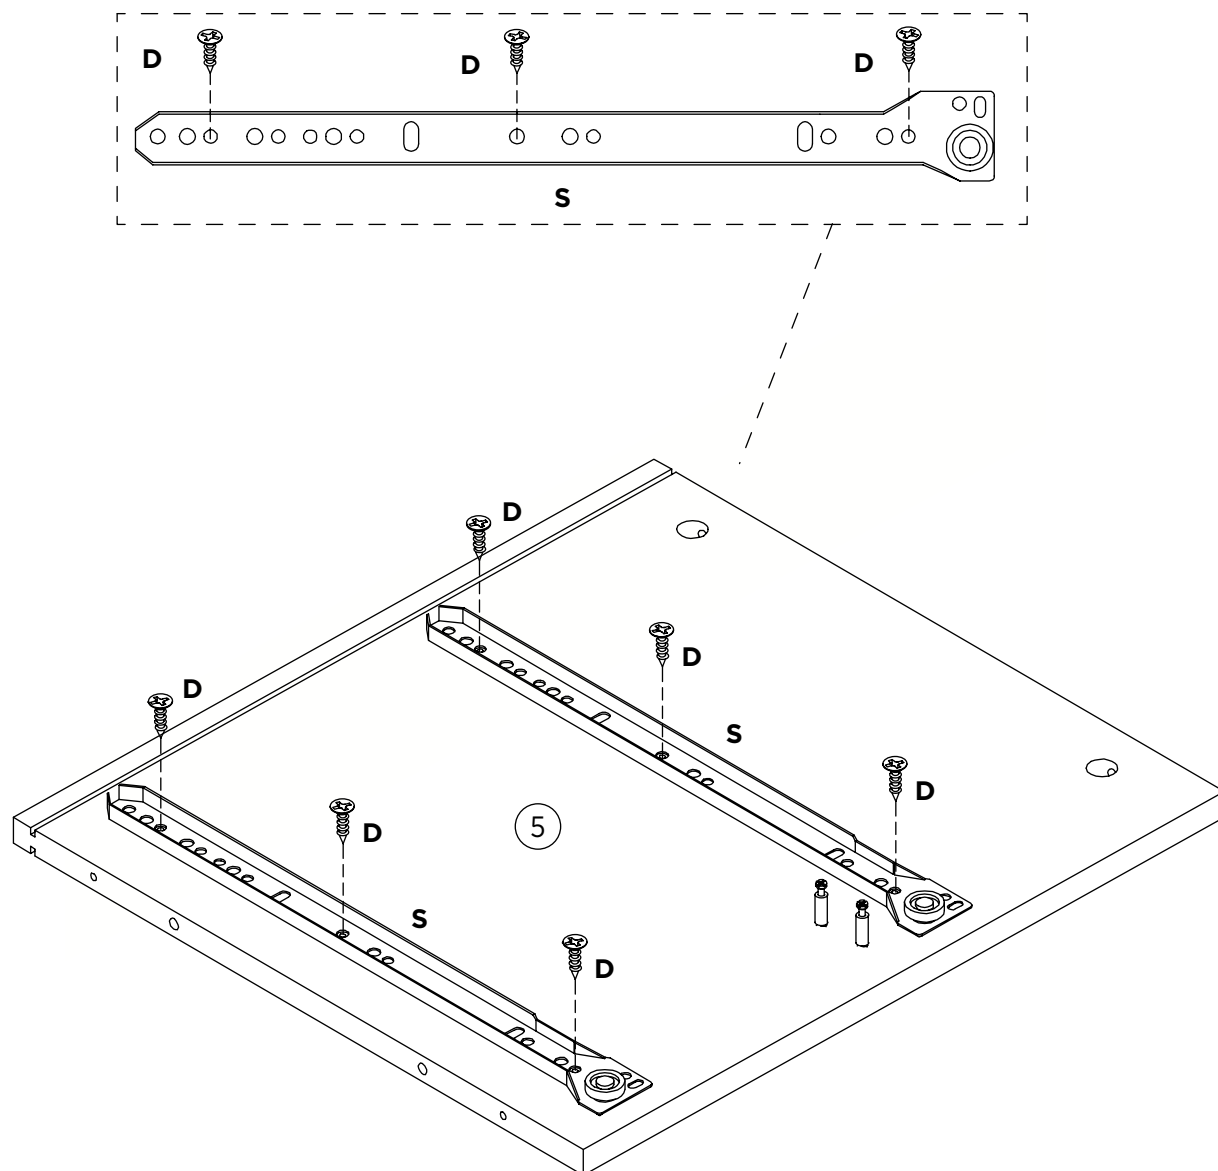



ASSEMBLY INSTRUCTIONS

STEP 6

Insert cam locks (B) to part 22.

Attached part 22 to parts 4 and 5, as shown.

  Turn cam locks clockwise to tighten.

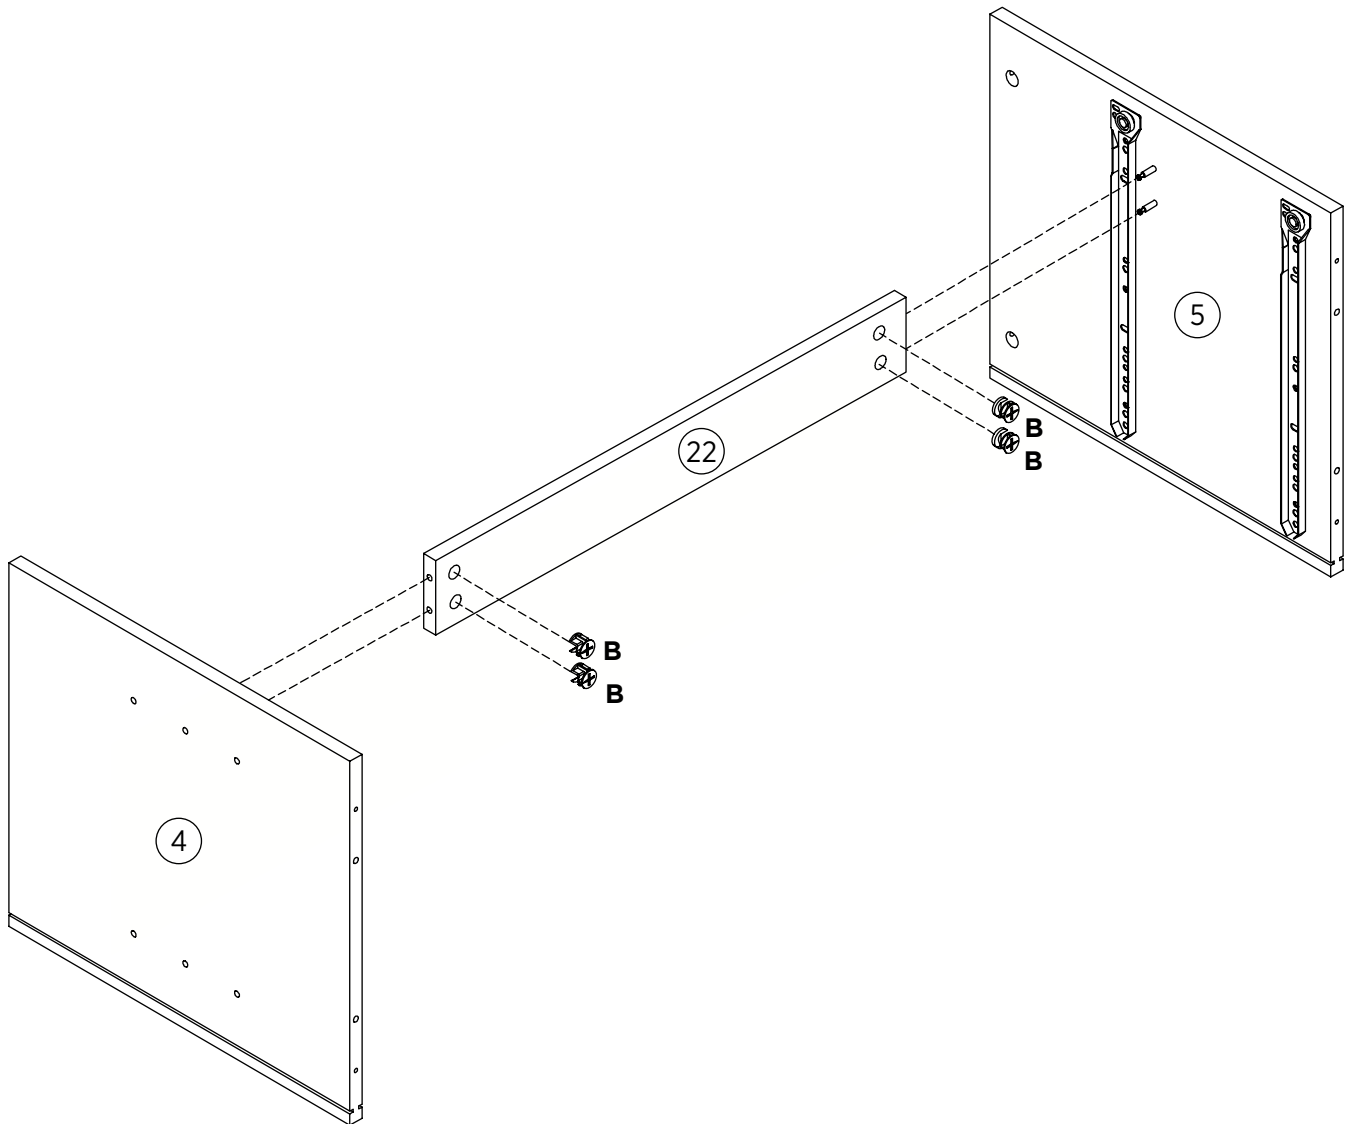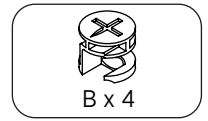



ASSEMBLY INSTRUCTIONS

STEP 7

Insert wooden dowel (C) to parts 3, 4, 5 and 6.

Attach part 1 to parts 3, 4, 5 and 6, as shown.

  
Turn cam locks clockwise to tighten.

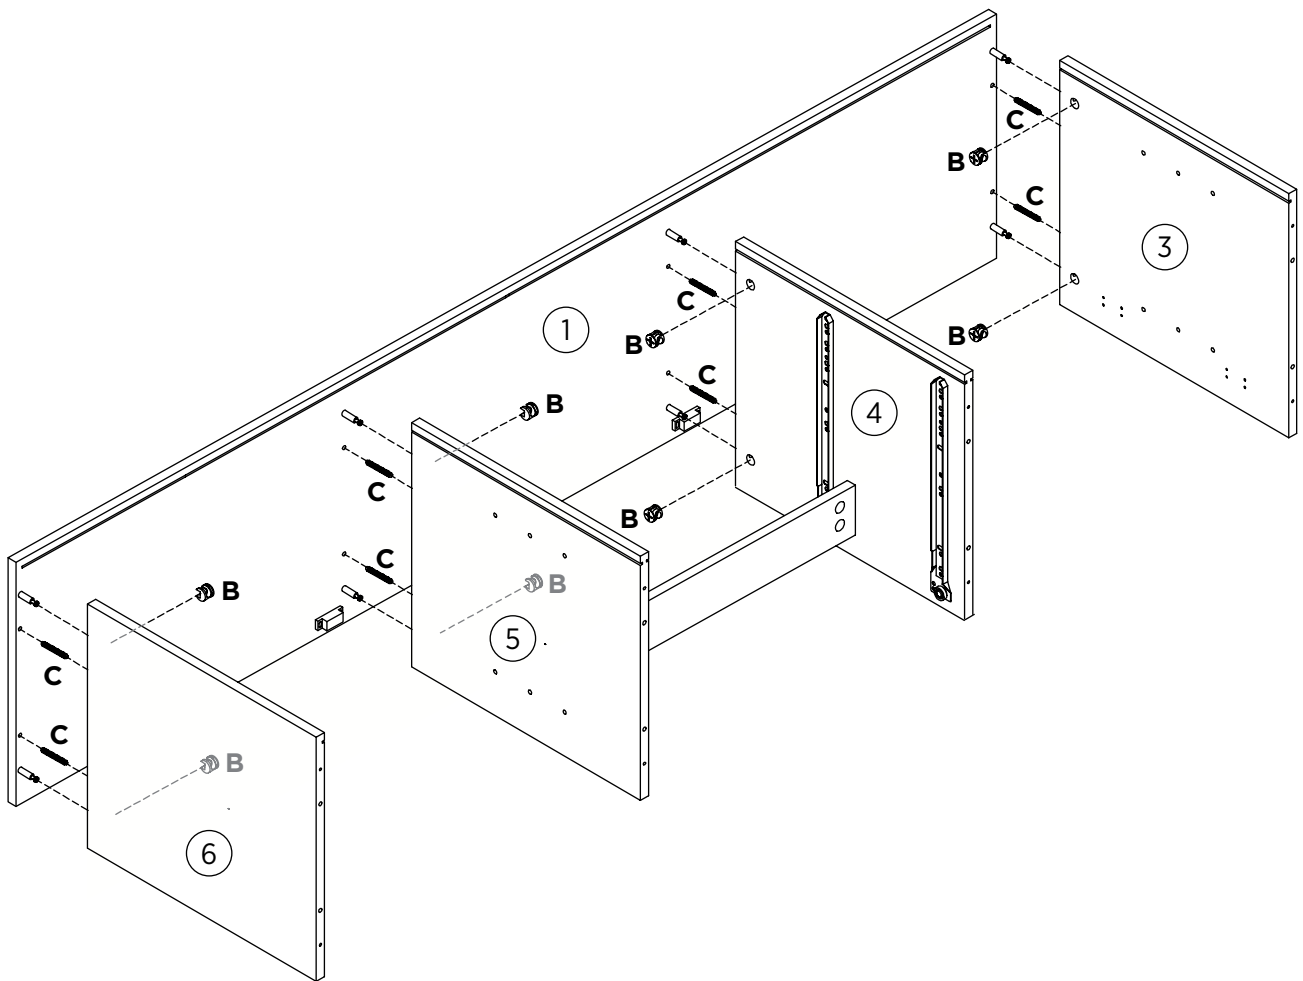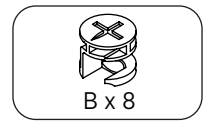

ASSEMBLY INSTRUCTIONS

STEP 8


 
Insert parts 8, 23 and 24 into the grooves of parts 1, 3, 4 5 and 6, as shown.

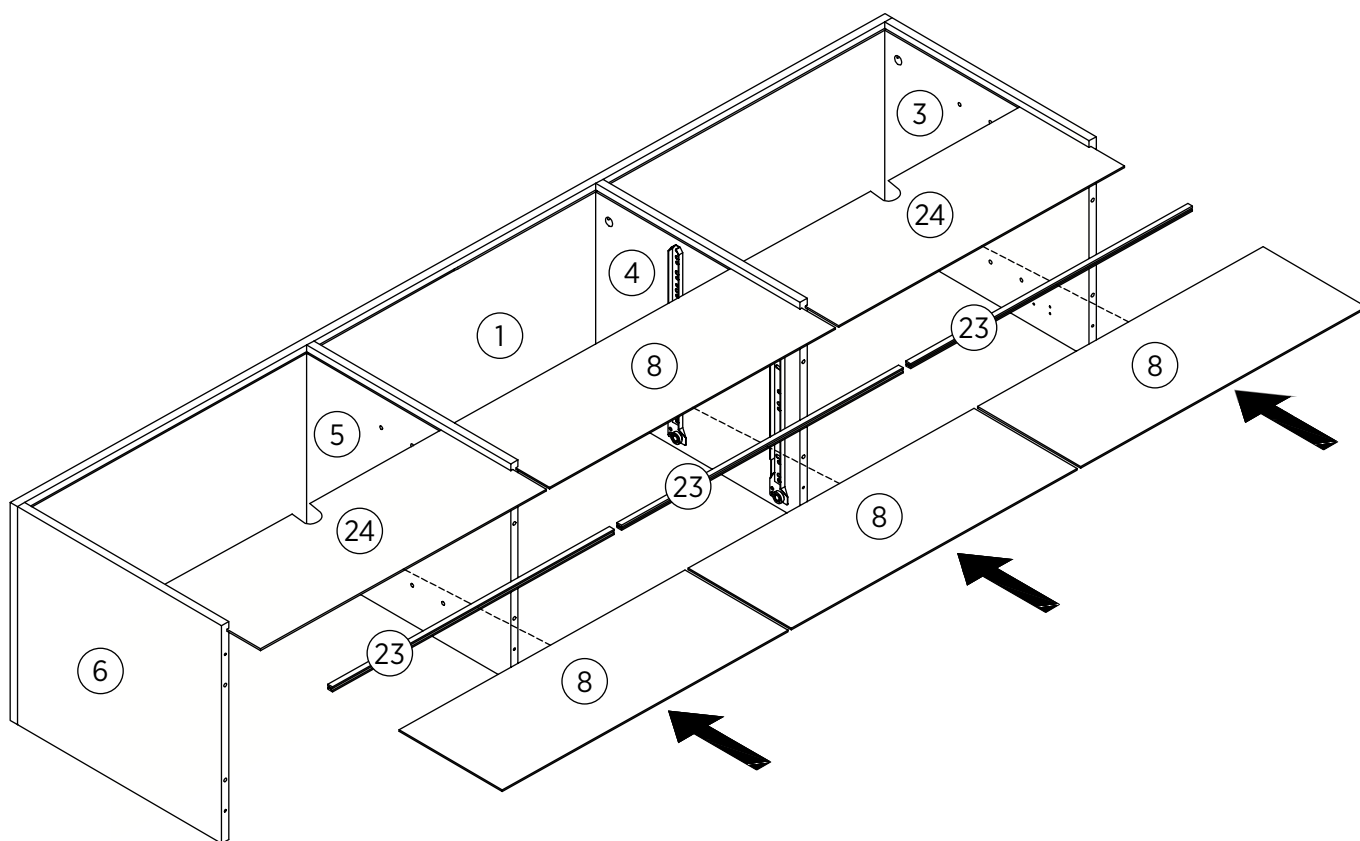

ASSEMBLY INSTRUCTIONS

STEP 9

  Screw adjustable feet (Q) to part 14, as shown.

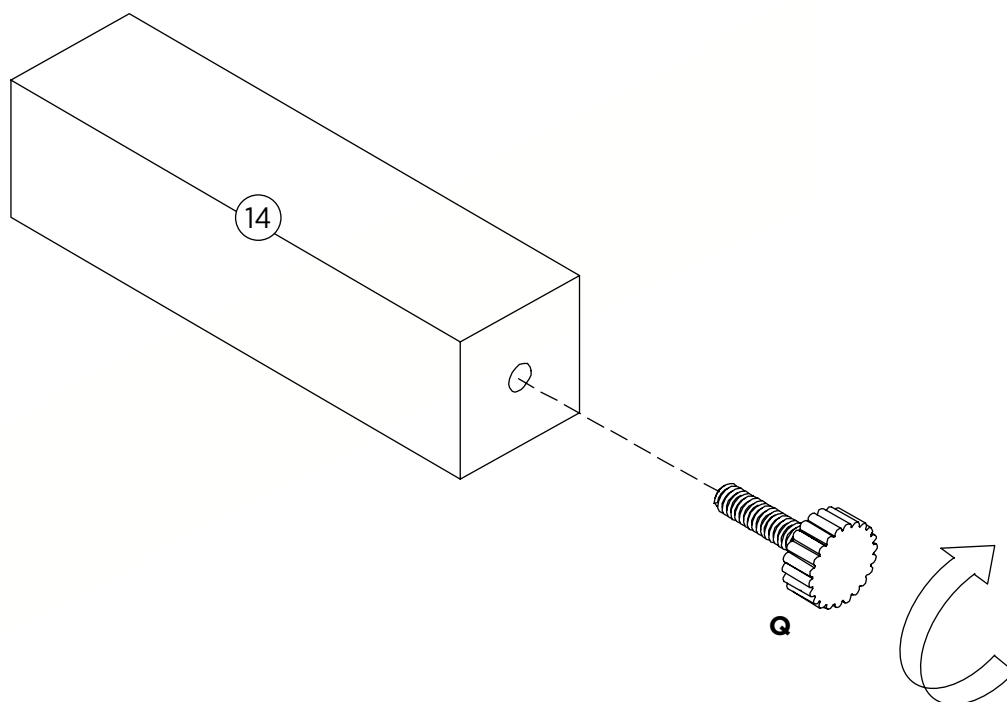
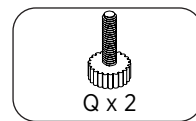


x2

ASSEMBLY INSTRUCTIONS

STEP 10

  Fix parts 14 to part 2 using screws (G), as shown.

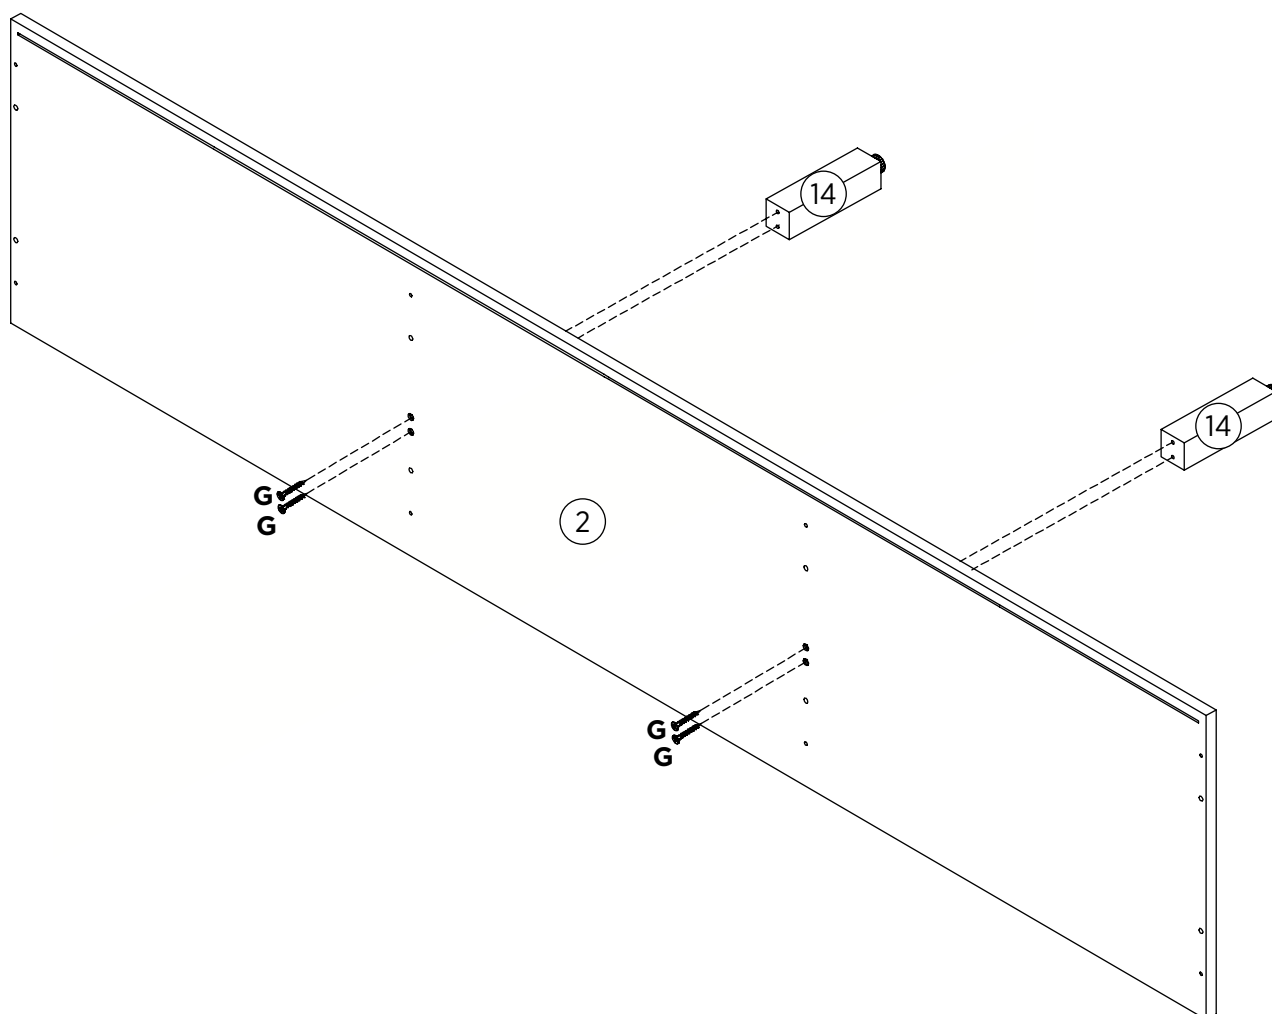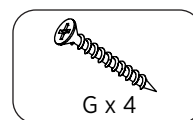


ASSEMBLY INSTRUCTIONS

STEP 11

Insert wooden dowel (C) to parts 3, 4, 5 and 6.


 
Fix part 2 to parts 3, 4, 5 and 6 using screws (G), as shown.

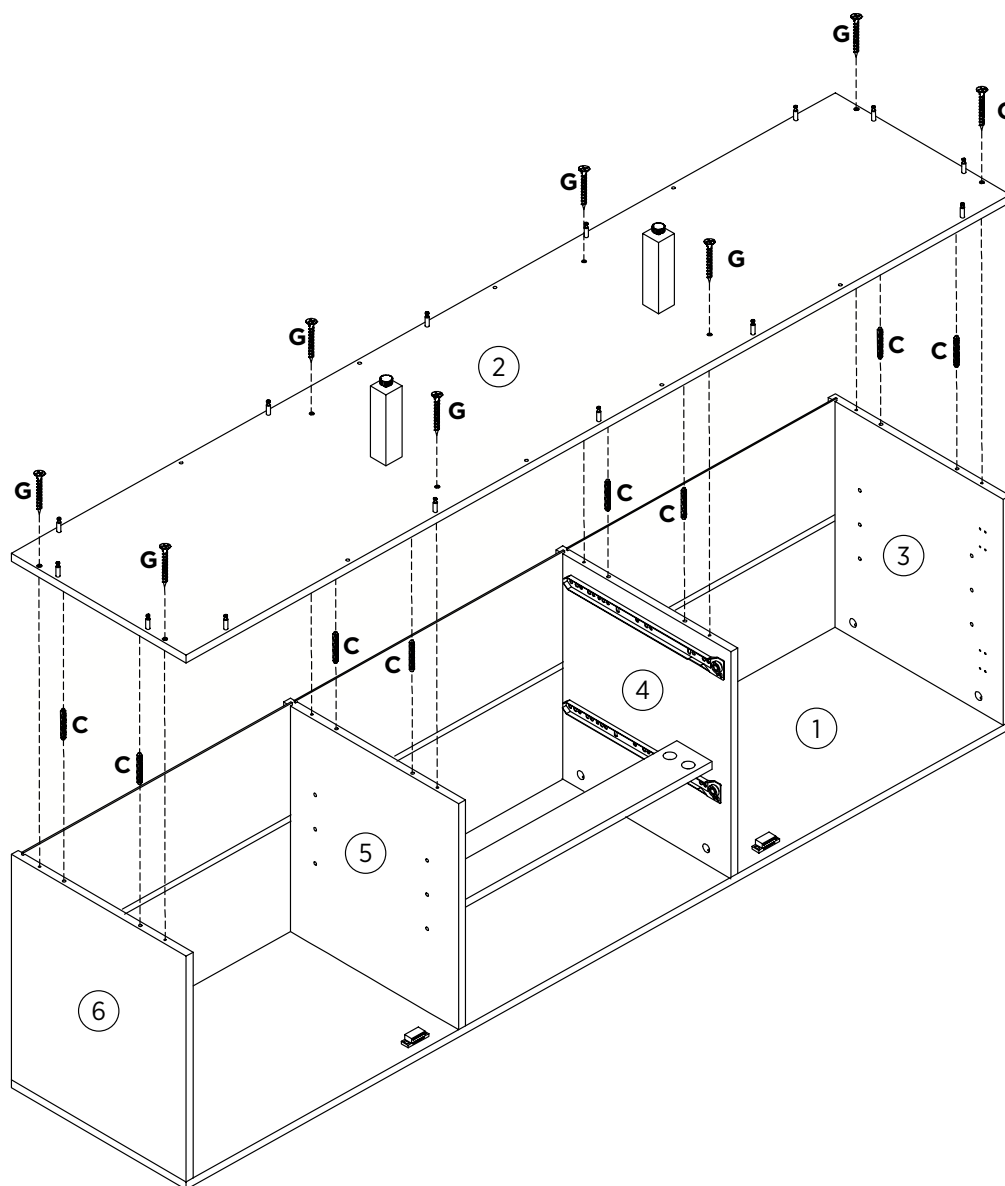

ASSEMBLY INSTRUCTIONS

STEP 12

 
 
Fix parts 15 to parts 11 and 12 using screws (F), as shown.

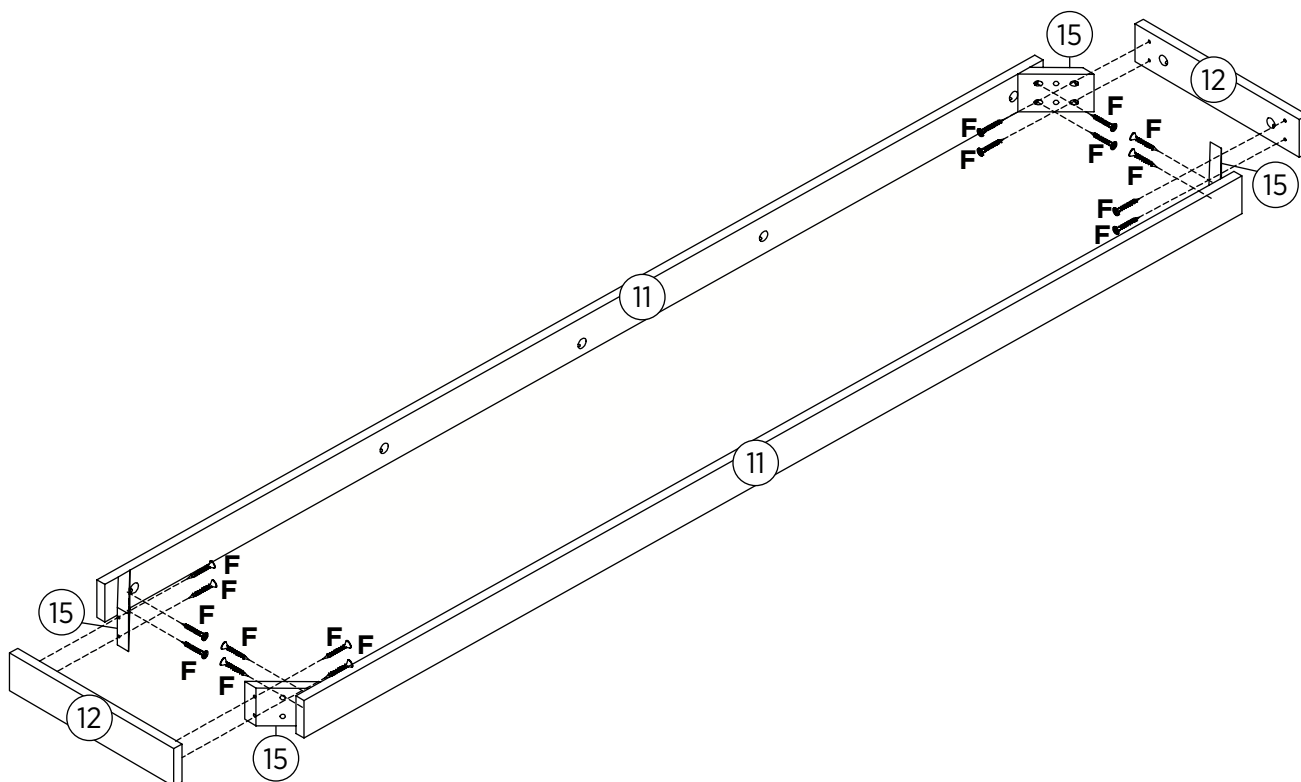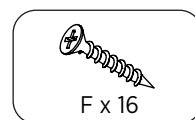

ASSEMBLY INSTRUCTIONS

STEP 13

  Insert wooden dowels (C) to part 2, as shown.

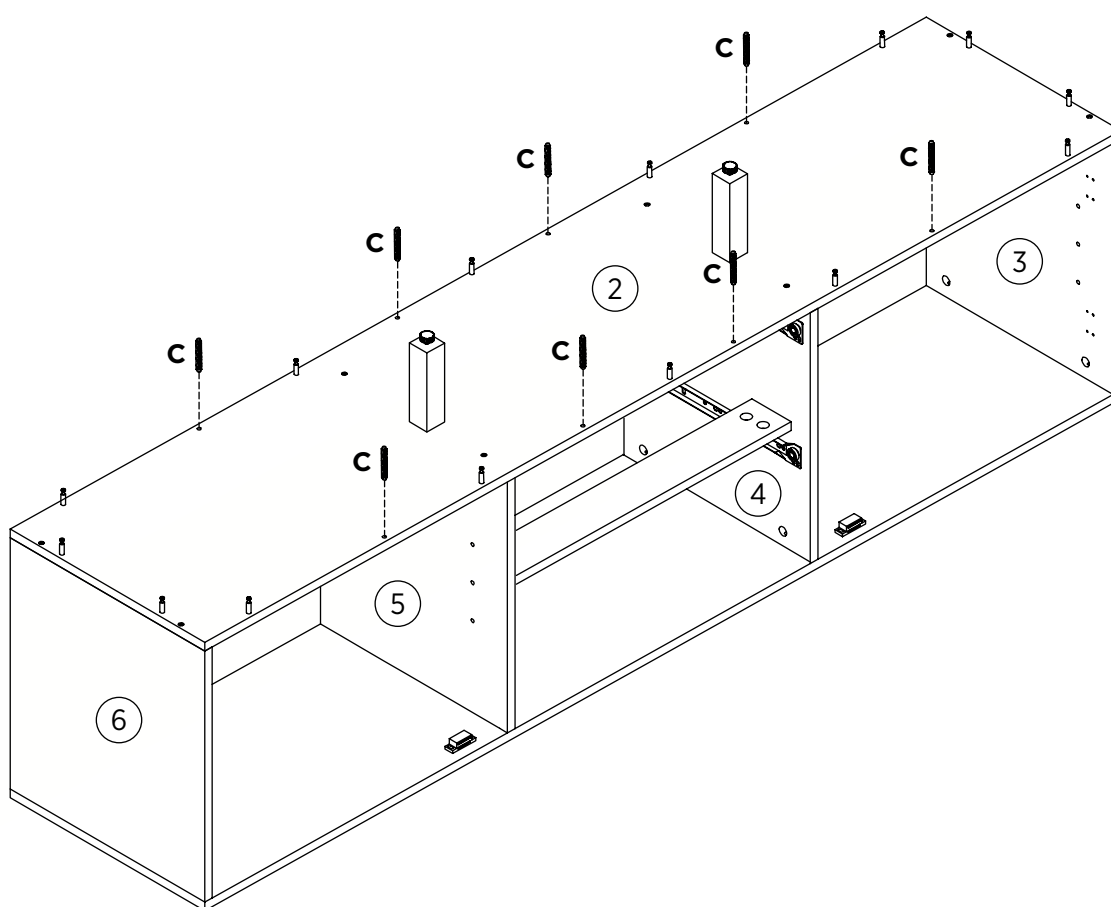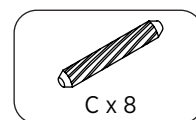



ASSEMBLY INSTRUCTIONS

STEP 14

Insert cam locks (B) to parts 11 and 12.

Attach the assembled unit to part 2, as shown.

  Turn cam locks clockwise to tighten.

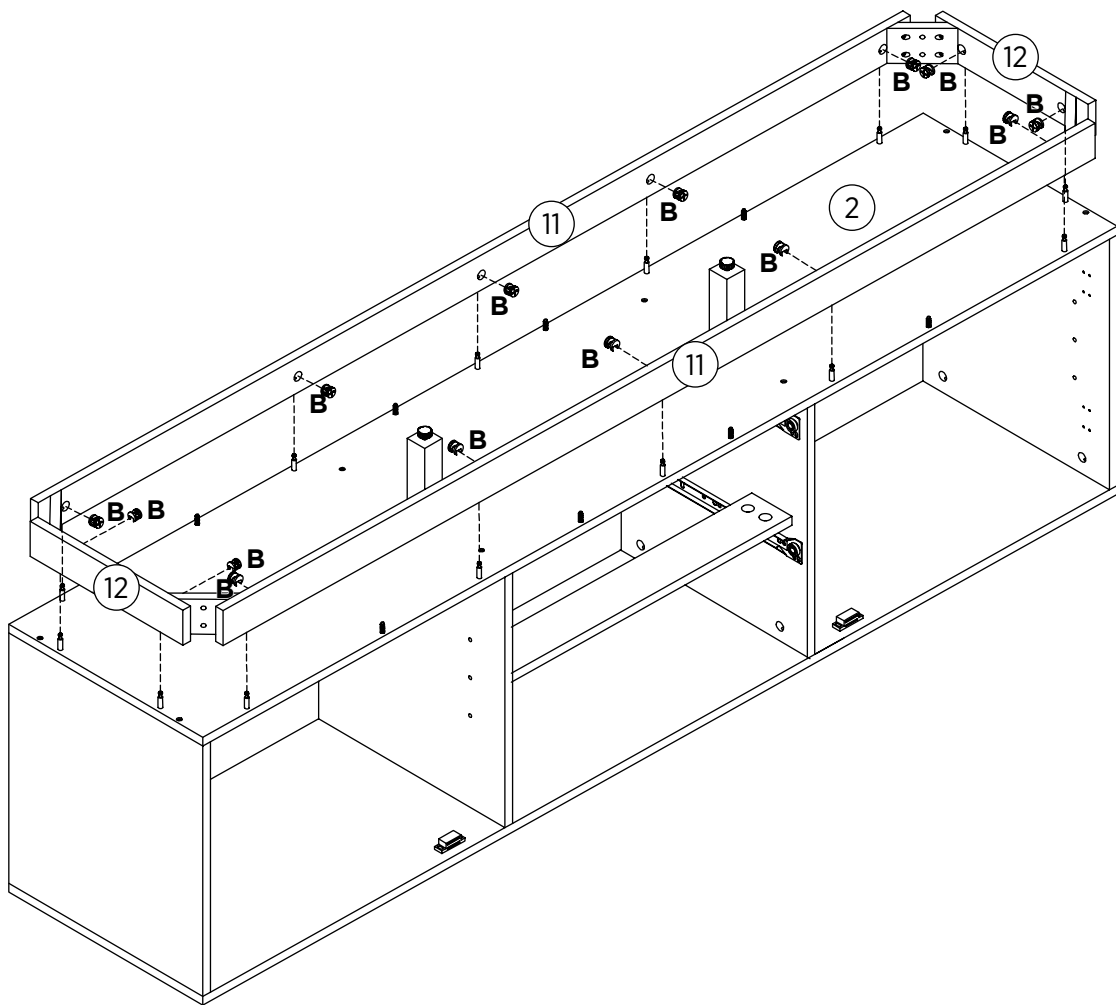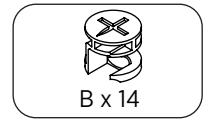


ASSEMBLY INSTRUCTIONS

STEP 15

Attach rubber pads (R) to parts 13.

 Fix parts 13 to parts 15 using washers (L), washers (K) and bolts (J), as shown.

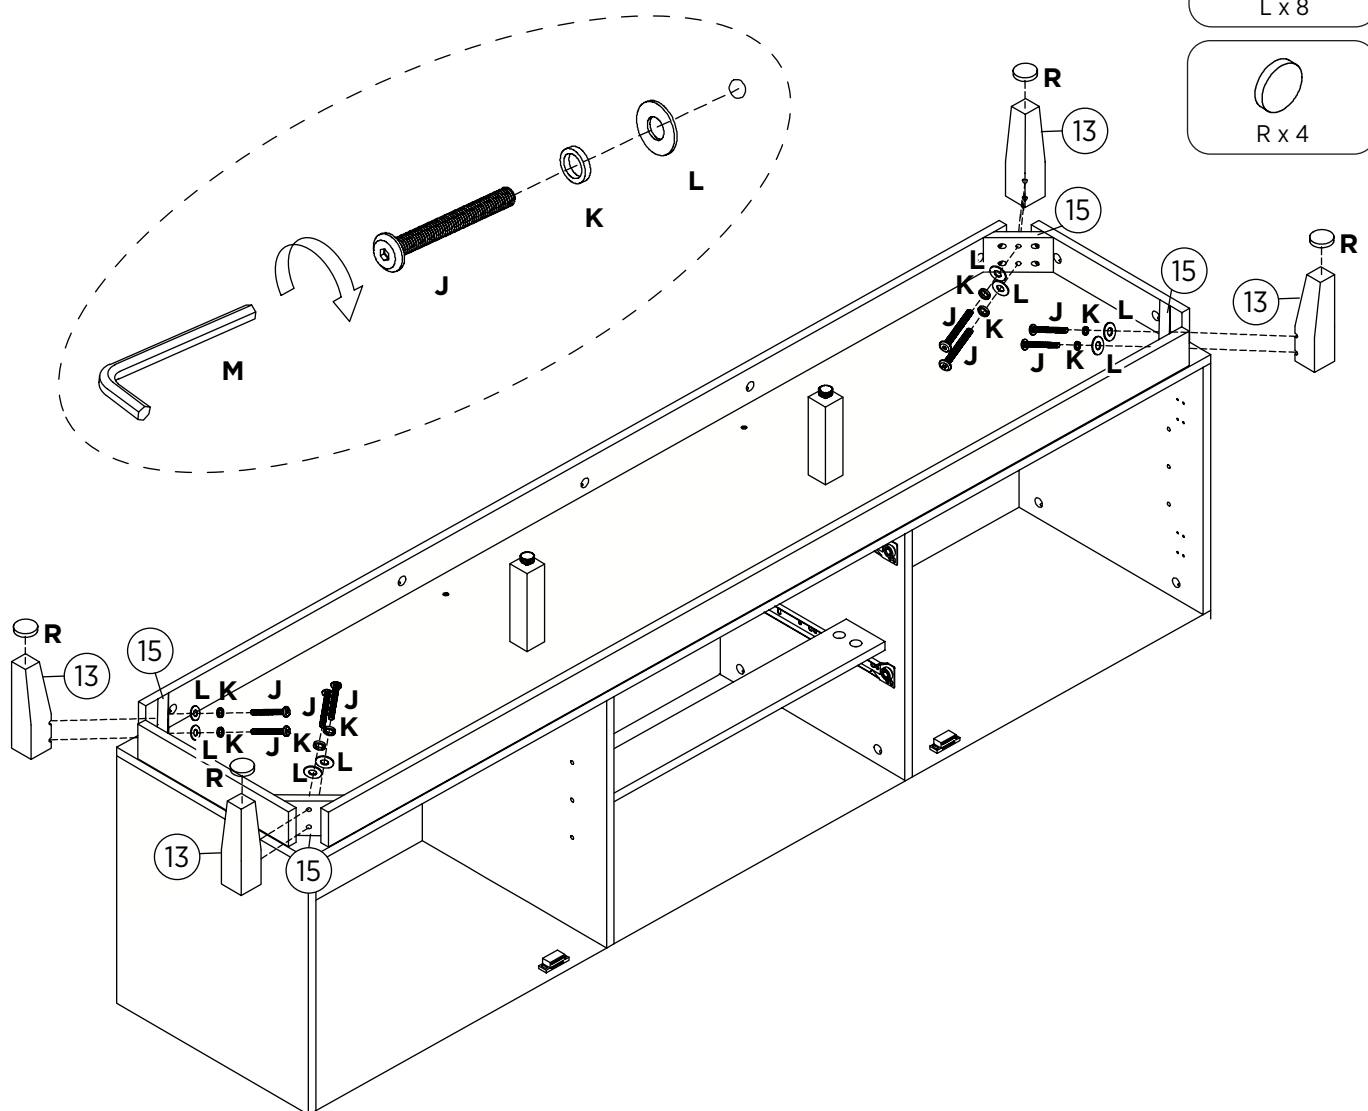

ASSEMBLY INSTRUCTIONS

 
STEP 16

Fix handle (I) to part 9 and 10 using screws (D).


Fix hinges (P) to parts 9 and 10 using screws (D), as shown.




D x 12



I x 2

 

P x 4


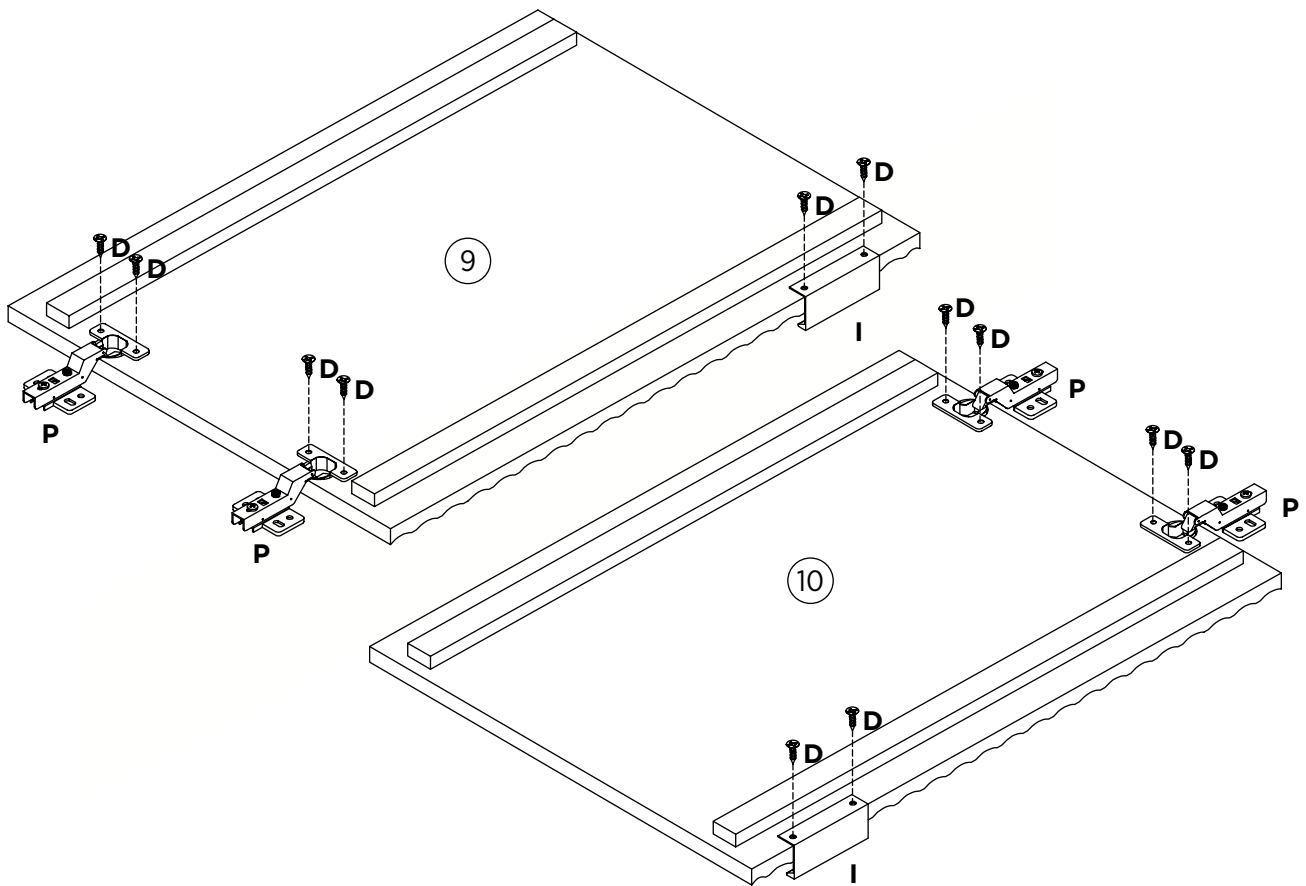 


ASSEMBLY INSTRUCTIONS

STEP 17

Insert shelf support (N) to parts 3, 4, 5 and 6.

  
Put parts 7 on shelf support (N), as shown.

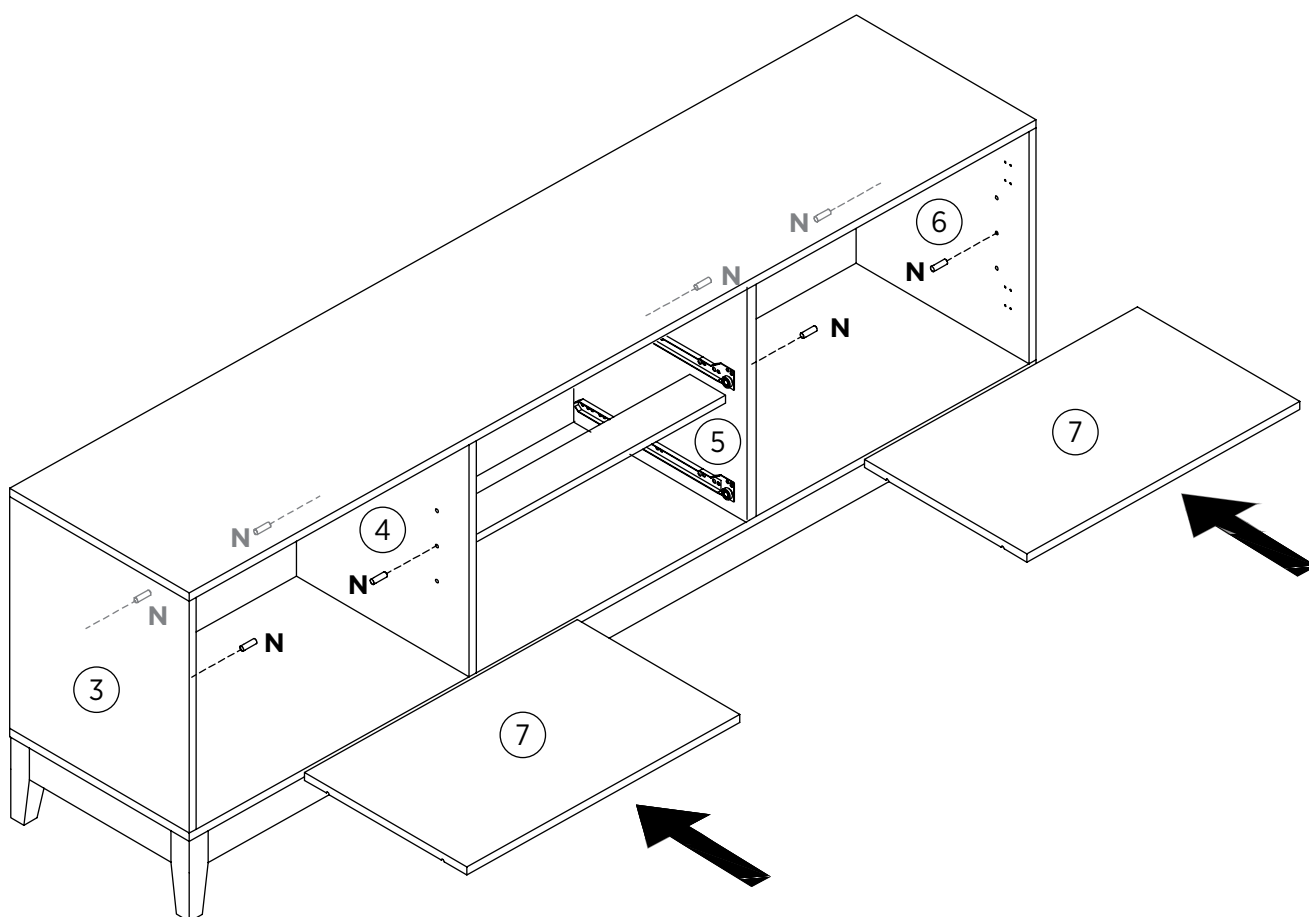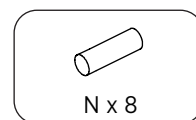

ASSEMBLY INSTRUCTIONS


STEP 18

 Fix part 9 to part 3 using screws (D) and hinges (P), as shown.

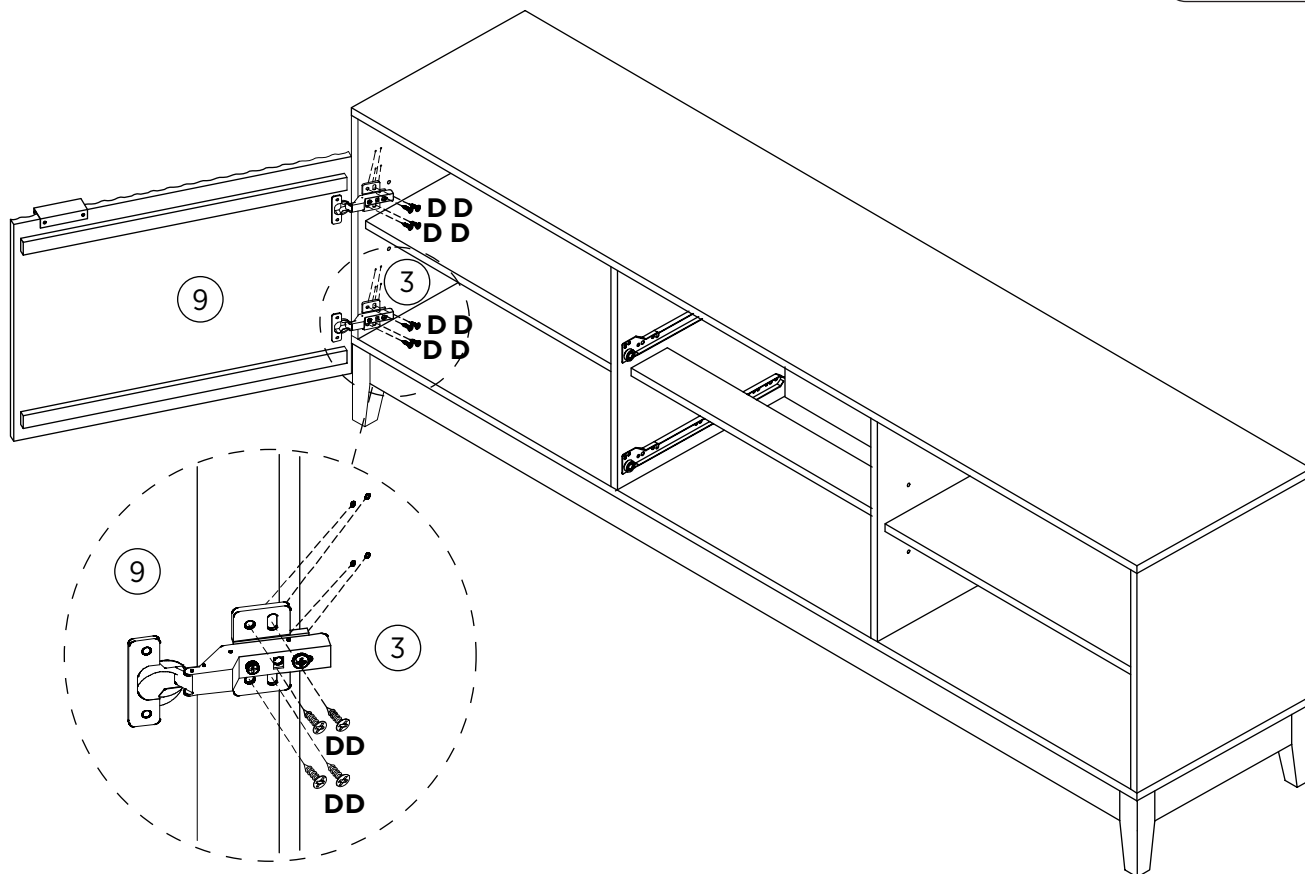


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

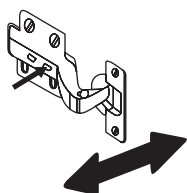

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

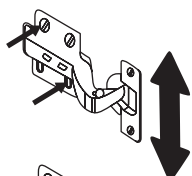

 To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

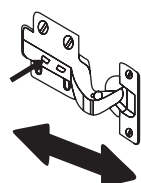


To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS


STEP 19

 Fix part 10 to part 6 using screws (D) and hinges (P), as shown.

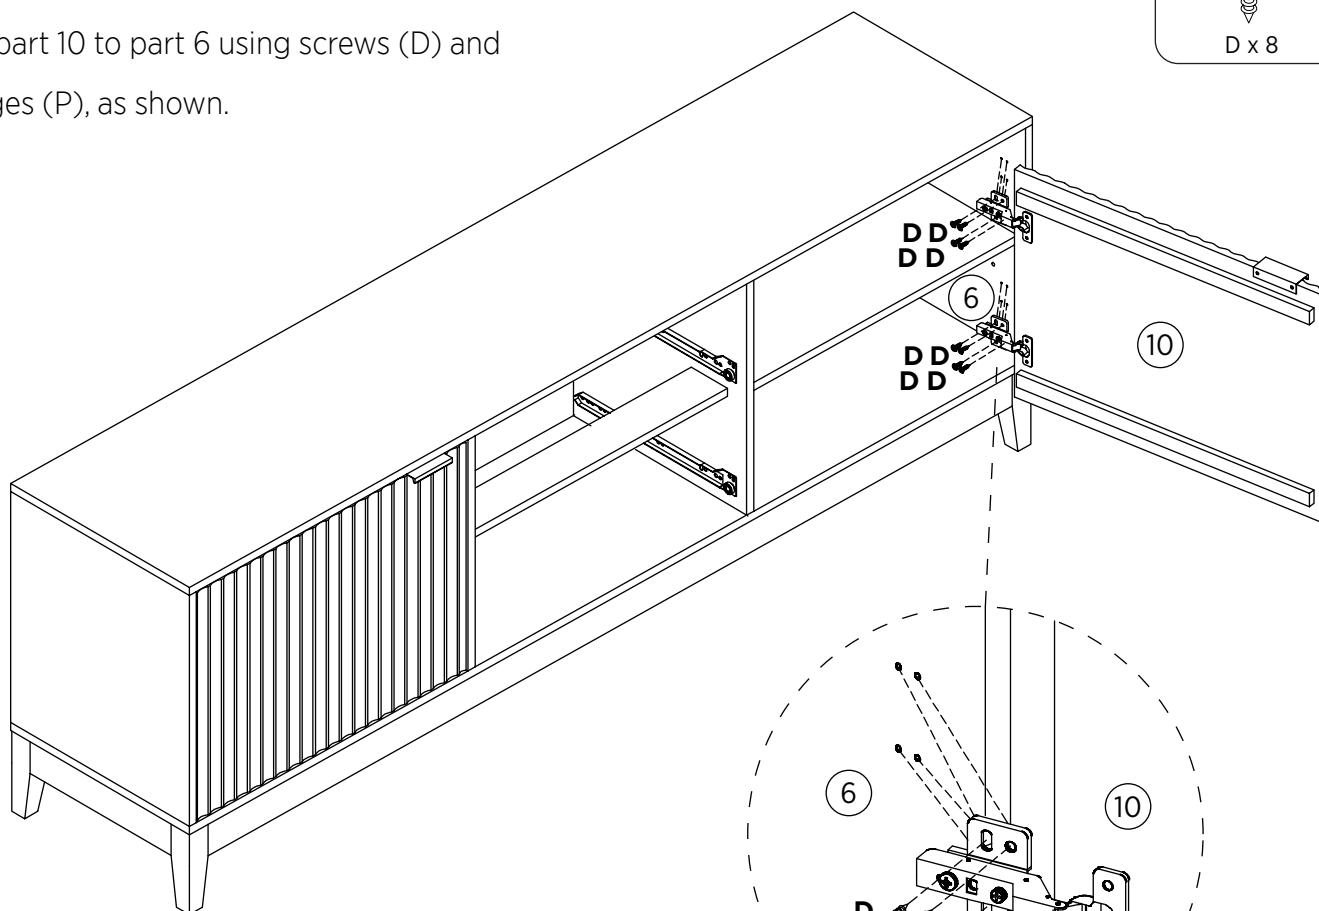


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

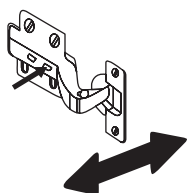

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

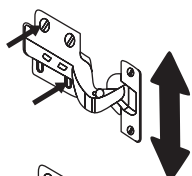

 To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

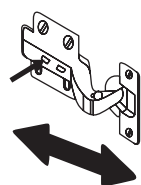


To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS

STEP 20

 Fix inner drawer runners (U and V) to parts 17 and 18 using screws (D), as shown.

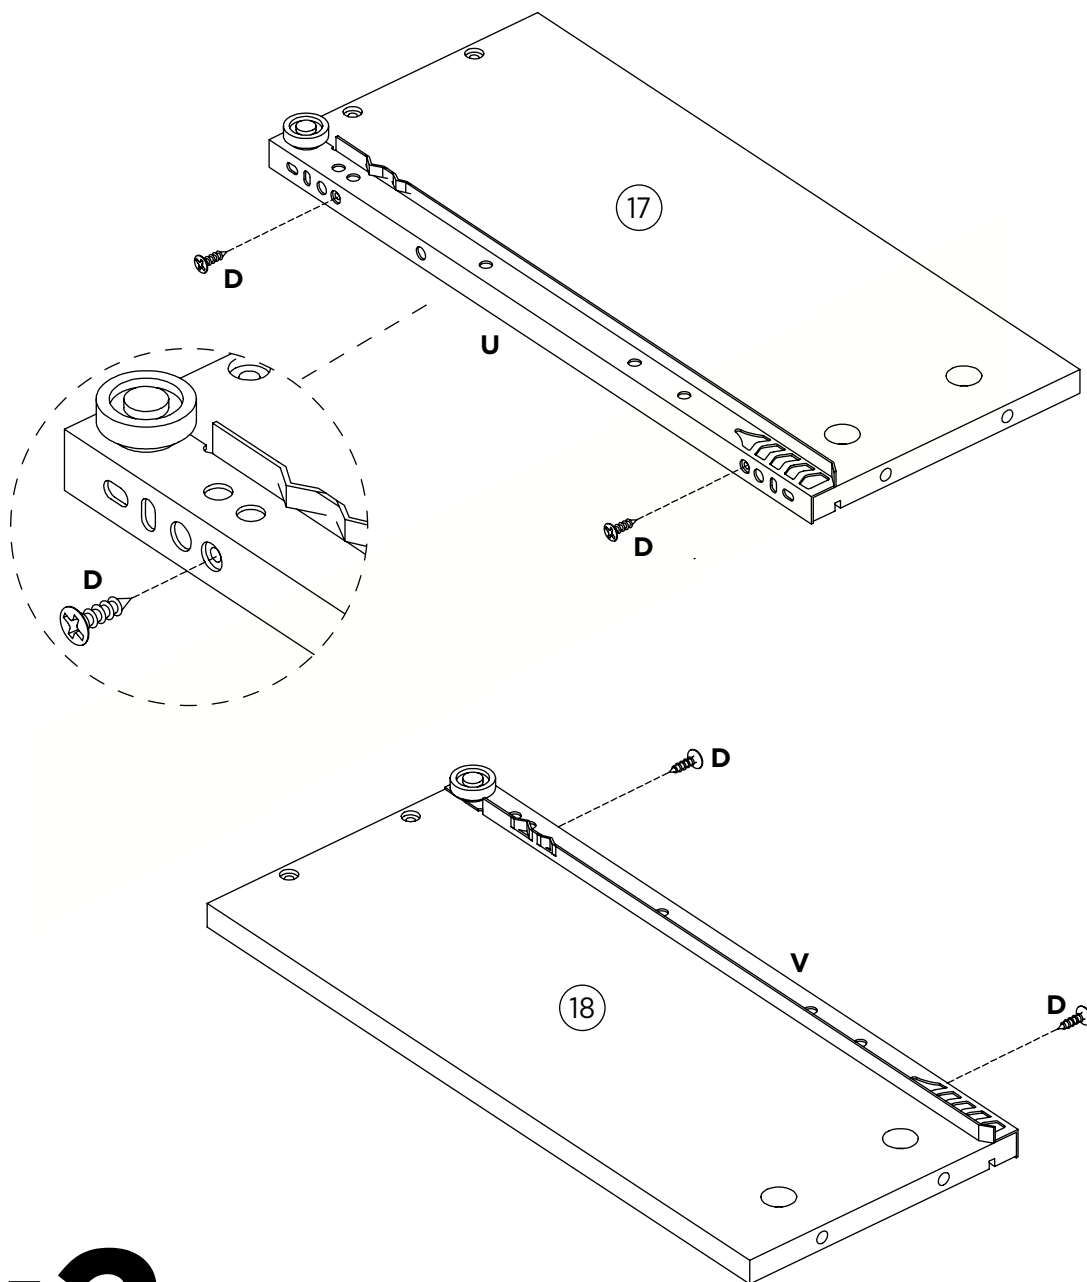





x2

ASSEMBLY INSTRUCTIONS

STEP 21

Insert quickfit screws (A) to part 16.

    Fix the handle (I) to part 16 using screws (D), as shown.

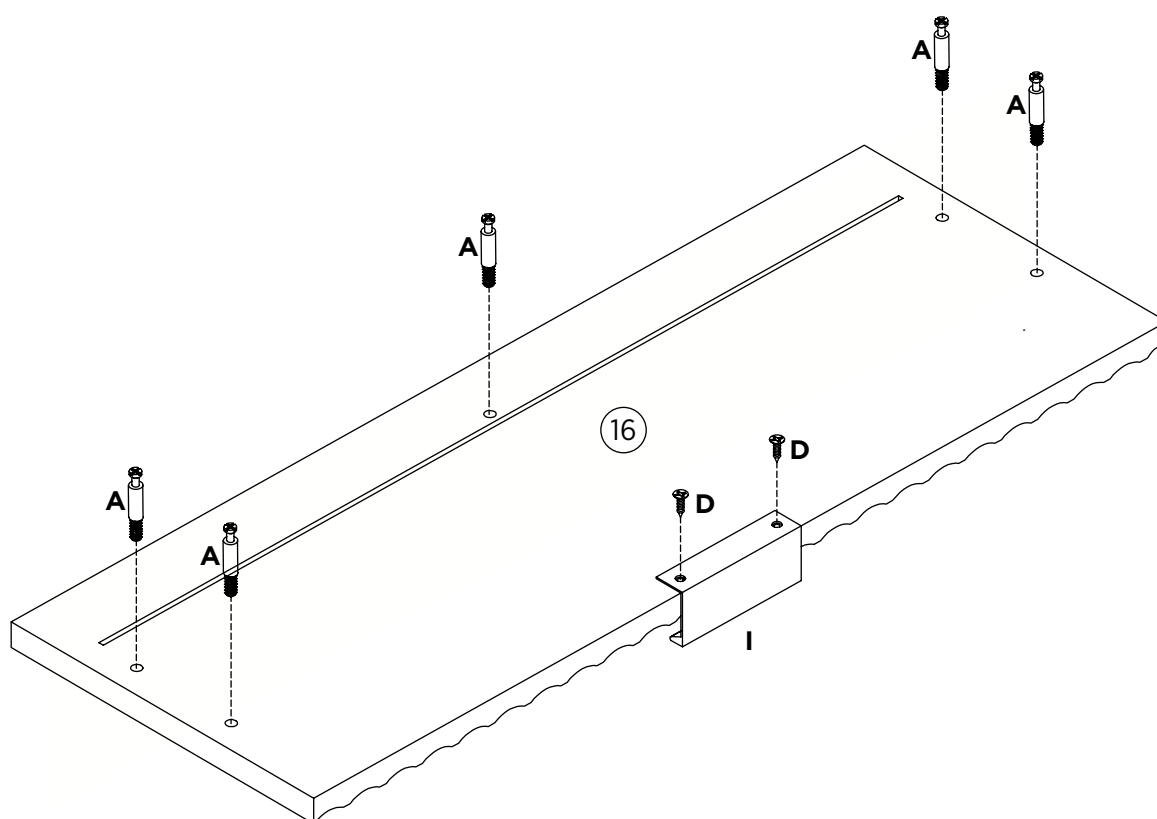



x2

ASSEMBLY INSTRUCTIONS

STEP 22

  Fix part 19 to parts 17, 18 and 21 using screws (G), as shown.

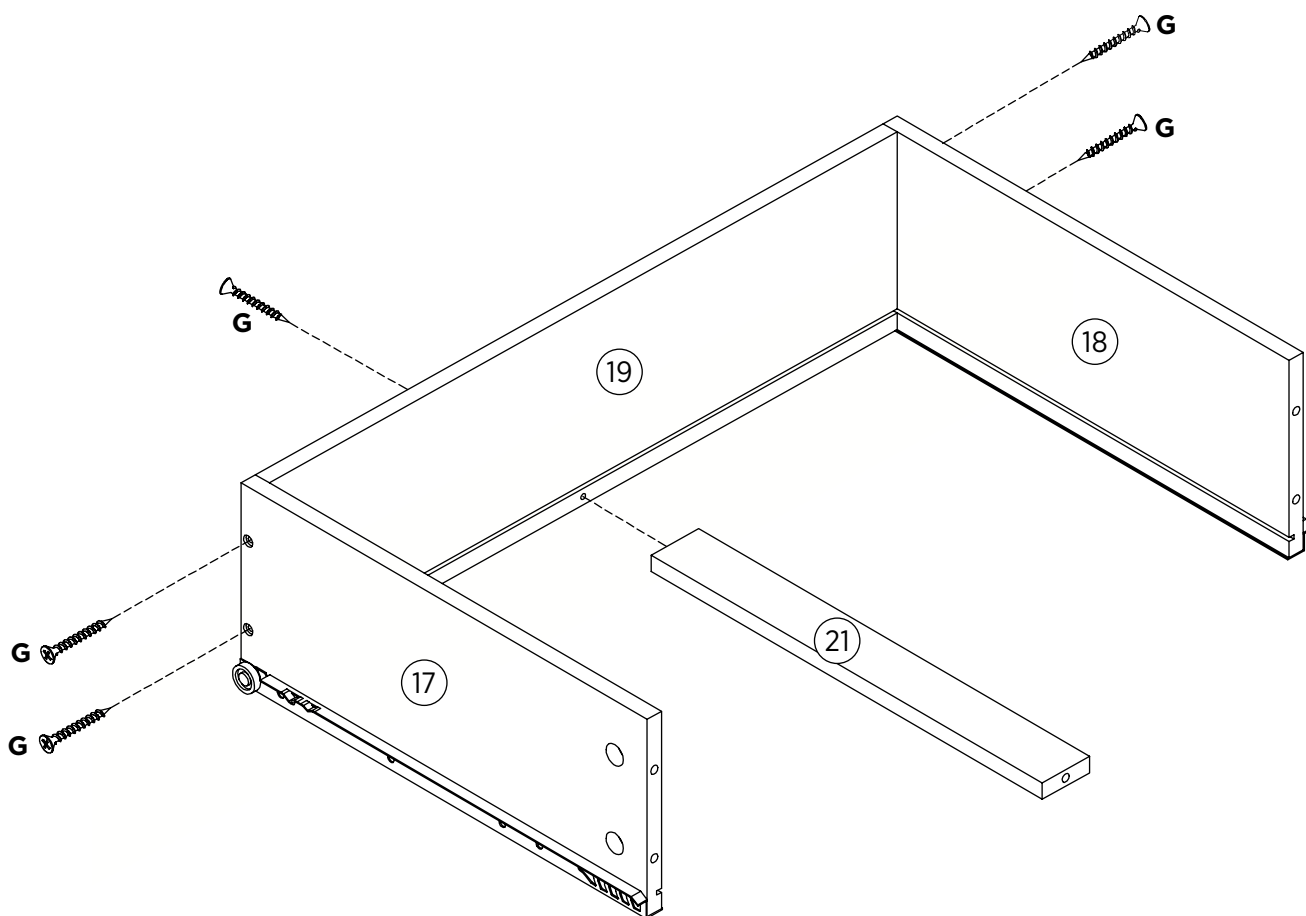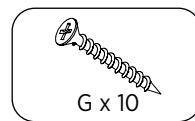


x2

ASSEMBLY INSTRUCTIONS

STEP 23

 Insert part 20 into grooves between parts 17, 18 and 19, as shown.

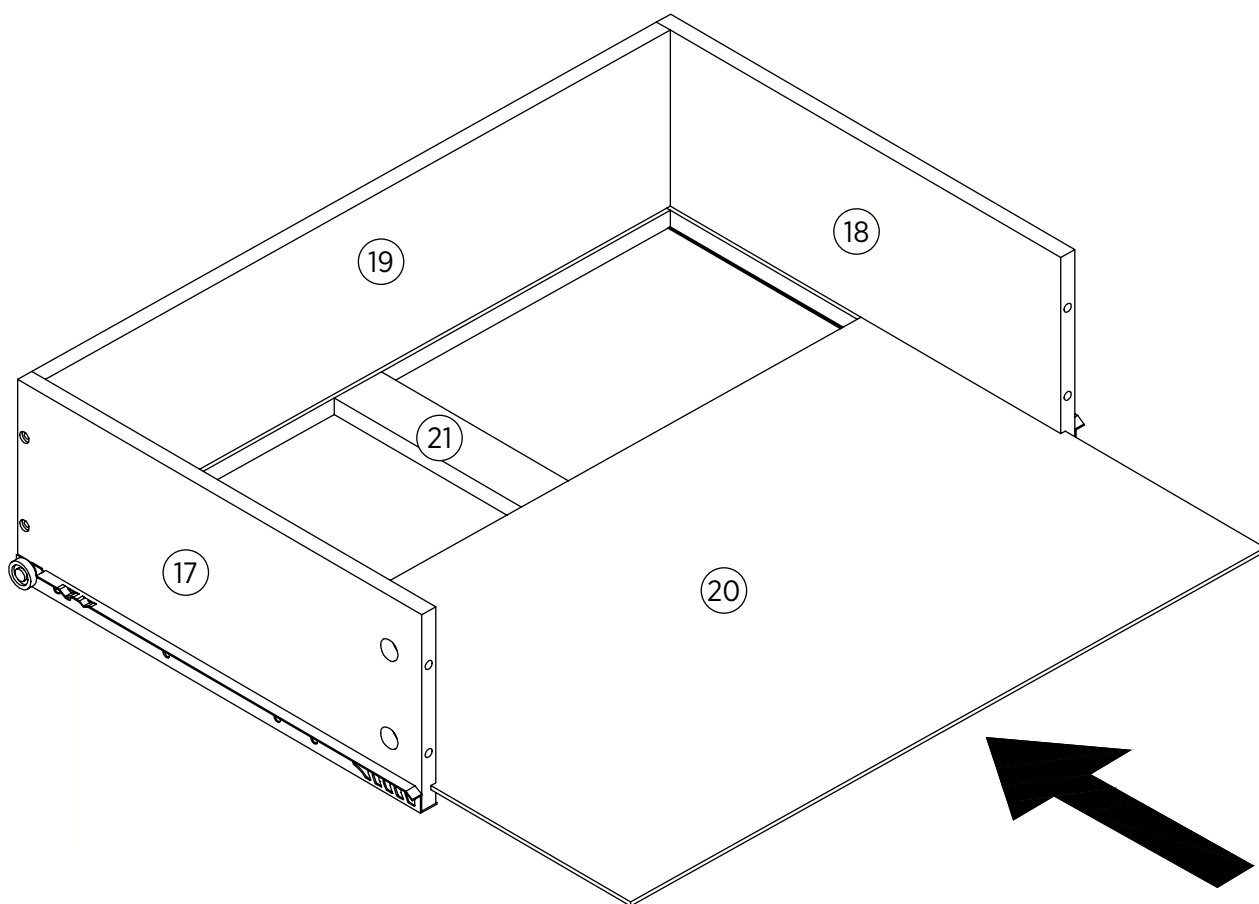

x2

 
 
ASSEMBLY INSTRUCTIONS

STEP 24

Insert cam locks (B) to parts 17, 18 and 21.

Fix part 16 to parts 17, 18 and 21, as shown.

Turn cam locks clockwise to tighten.

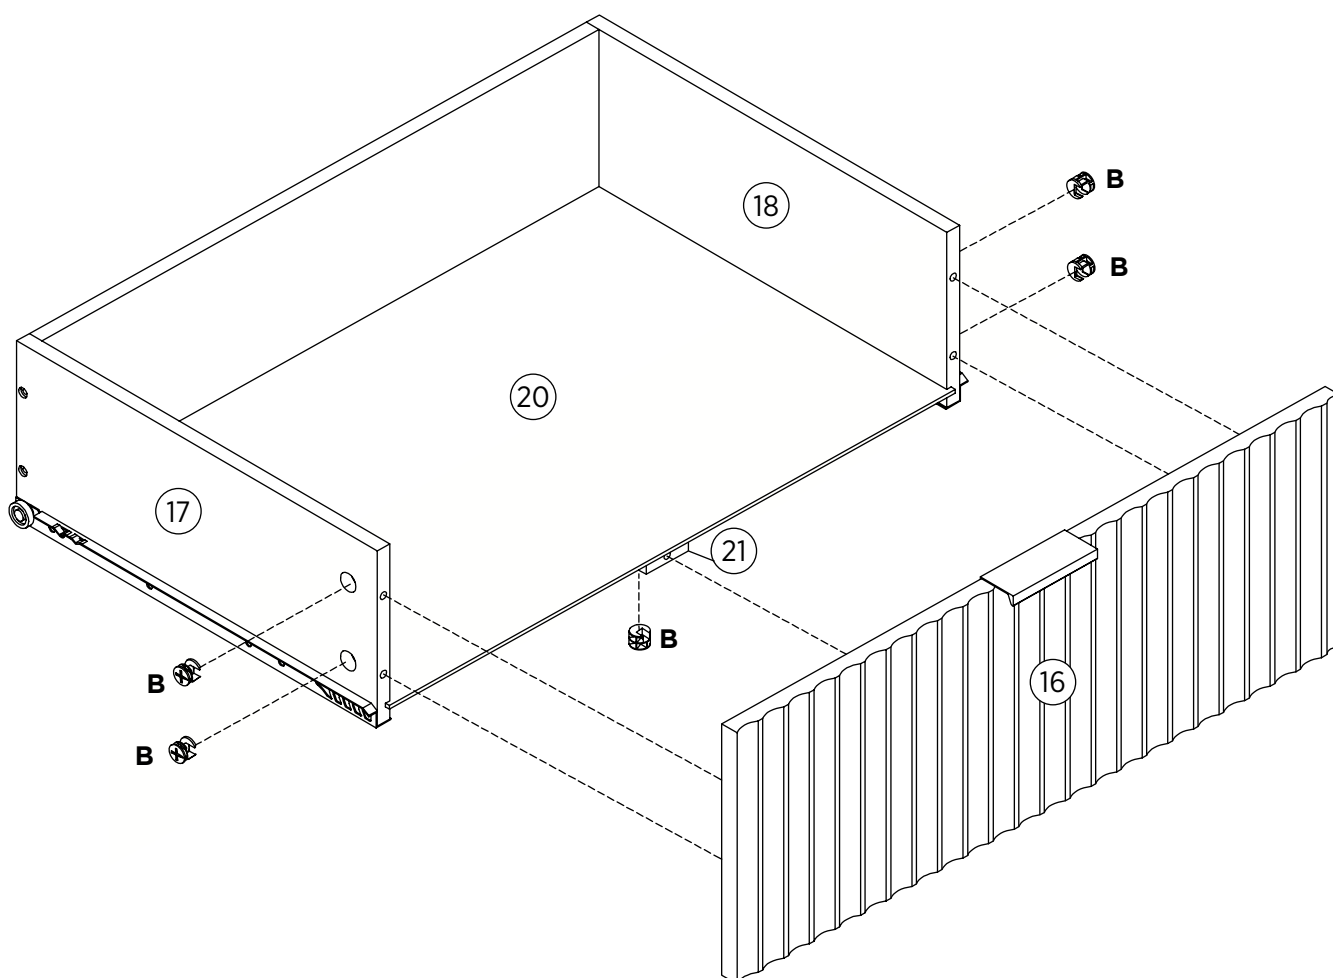


x2

ASSEMBLY INSTRUCTIONS

STEP 25

 Insert drawers into assembled unit, as shown.

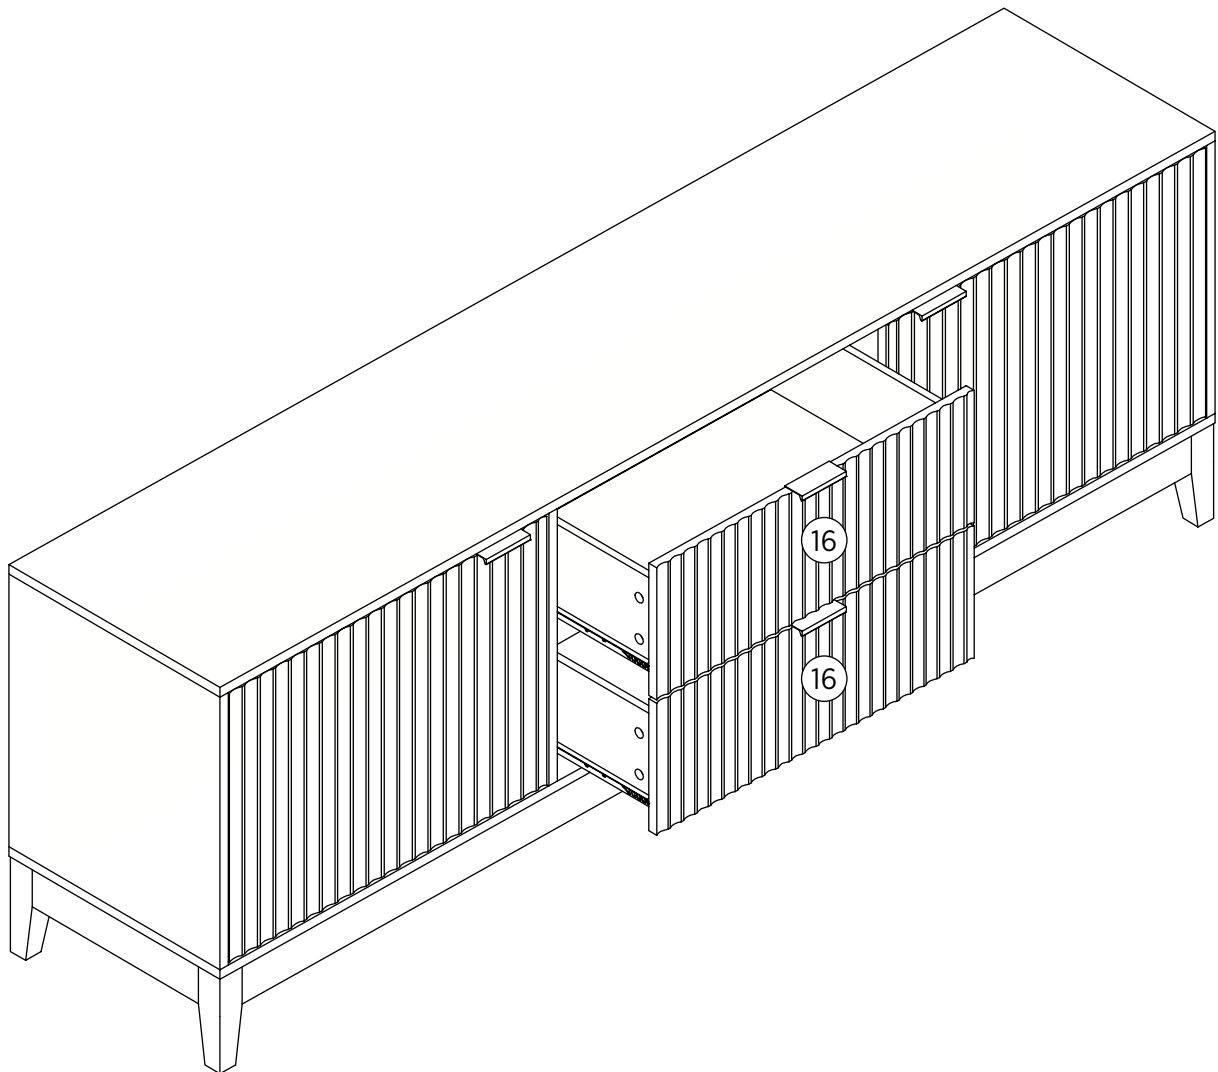

ASSEMBLY INSTRUCTIONS

STEP 26

 
To secure part 8 and 24, fix wedges (H) using screws (E), as shown.



E x 12



H x 12

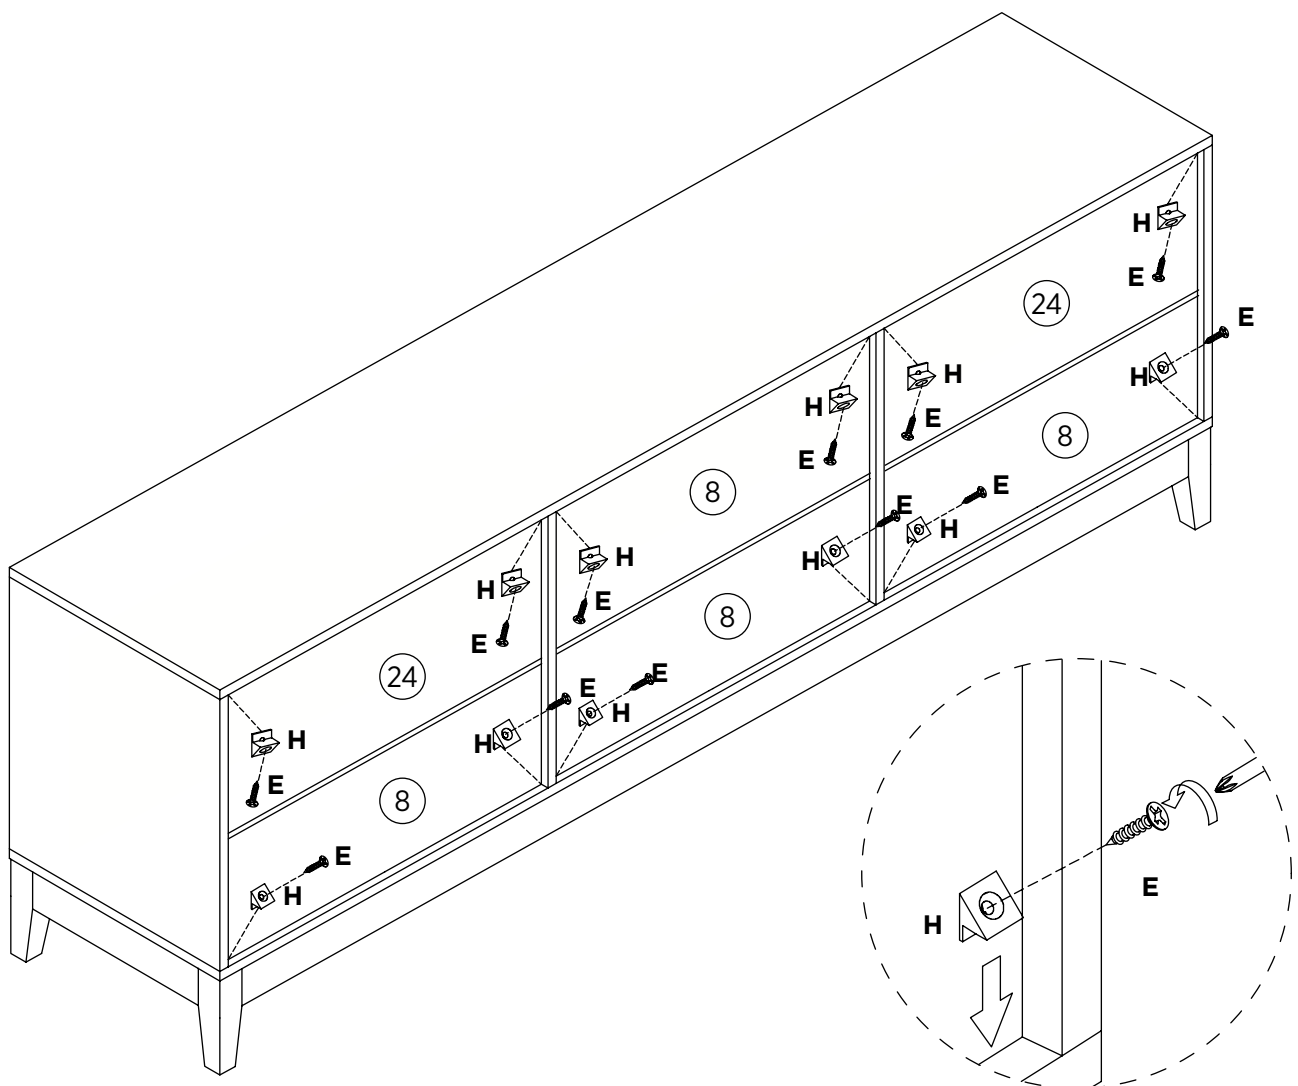

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 27

For extra stability, you must fix your TV unit to the wall using the additional hardware (X) and (G), as shown.

Screw (G) is fixed through the wall bracket (W) and into the wall plug (X).


Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your TV unit.

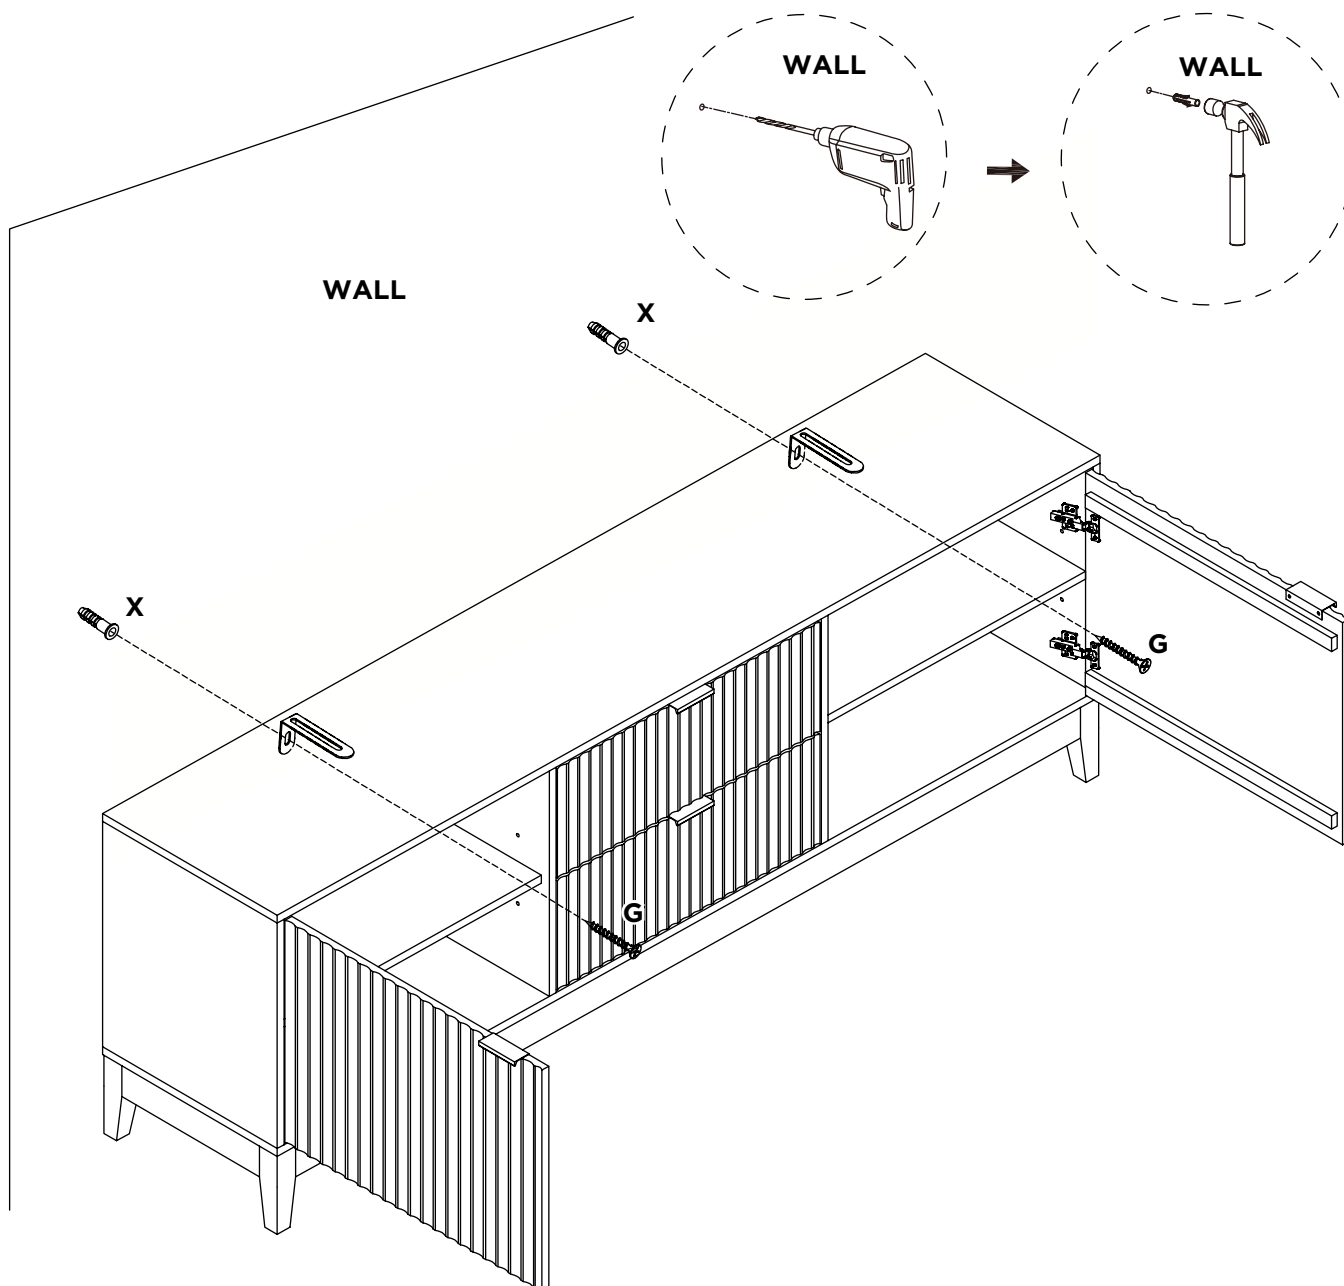

ASSEMBLY INSTRUCTIONS

 STEP 28

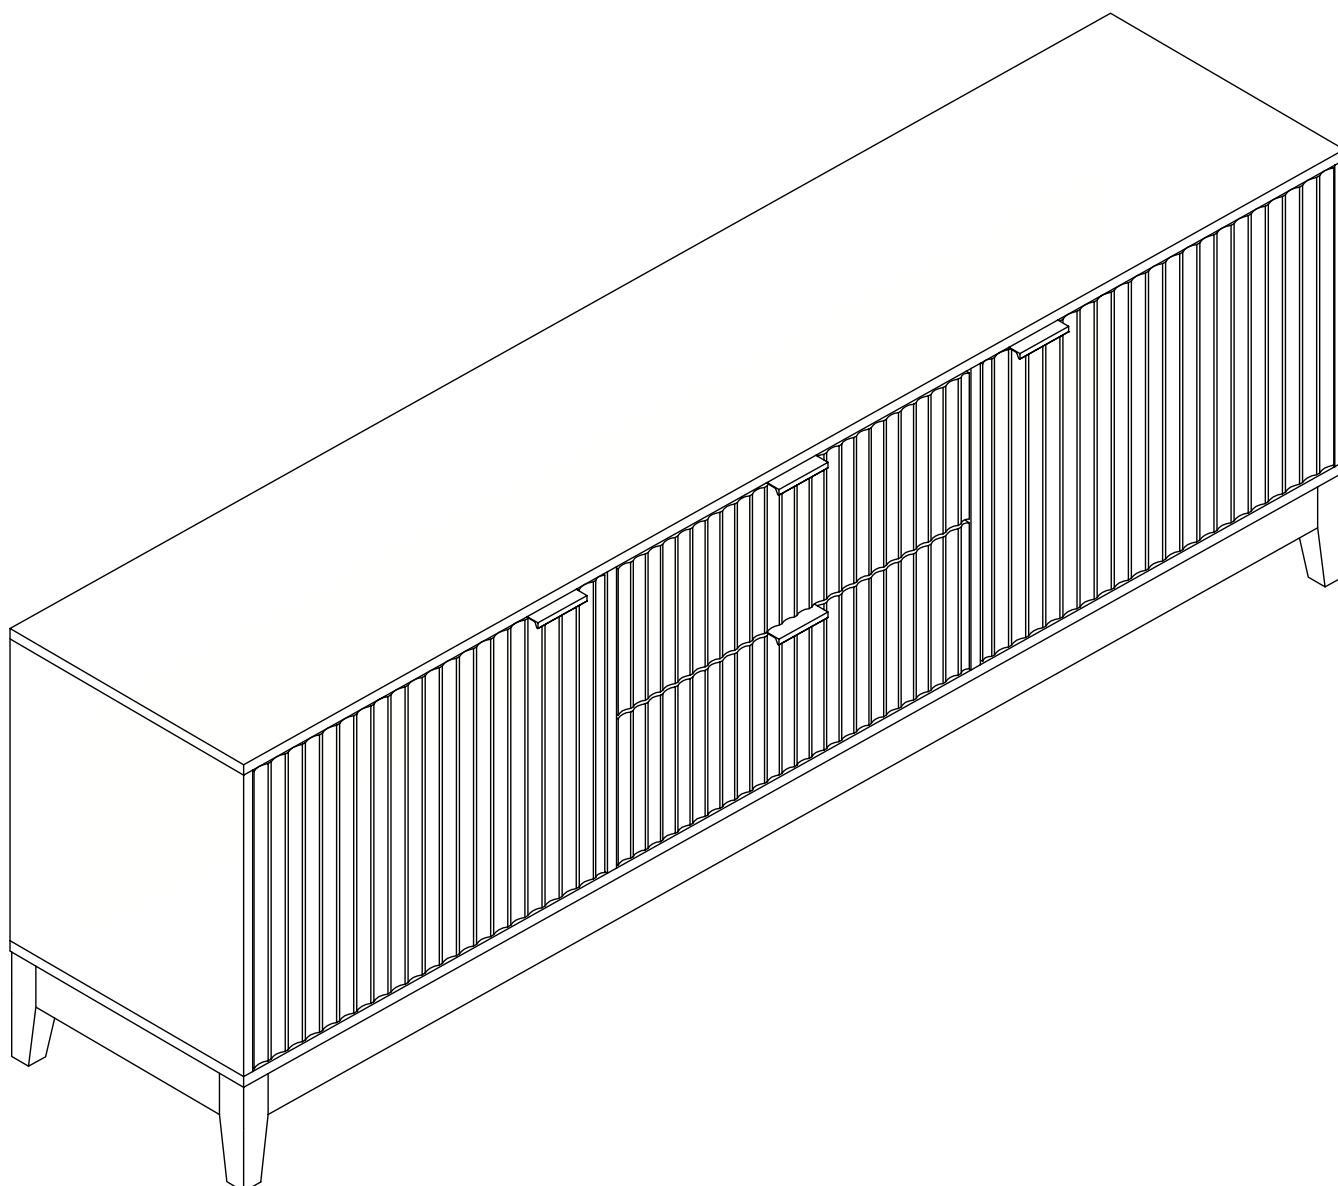

Maximum recommended weight is 5kg for each drawer, 5kg for shelves and 20 kg for top.

Your TV unit 2 doors 2 drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

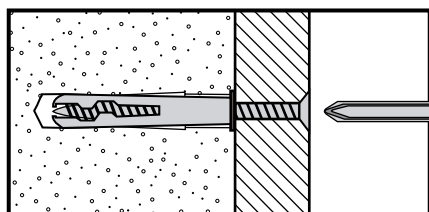


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

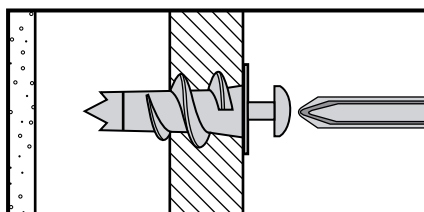


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

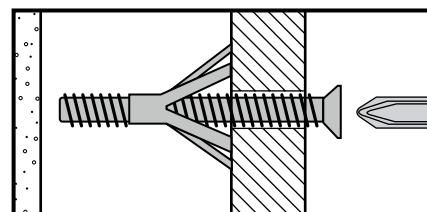


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

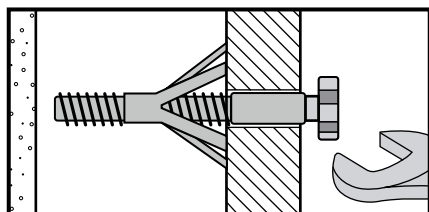


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

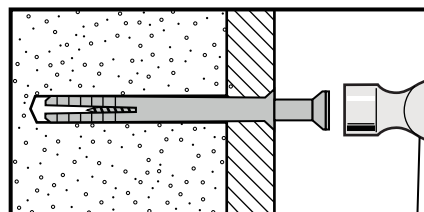

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

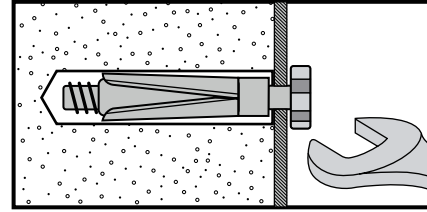

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.