


WARDROBE 2 DRAWER

ASSEMBLY INSTRUCTIONS

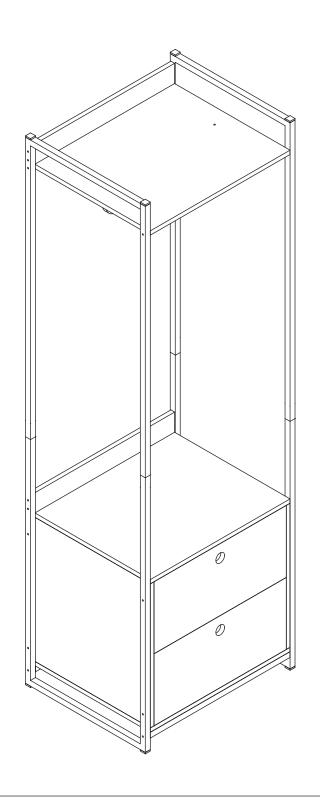

TIPS BEFORE YOU START


- 1. Please check that all parts are present before you start the assembly of your furniture.
- 2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- 3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
- 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
- 7. Always place the product on a flat, steady and stable surface.
- 8. Do not stand on the product. Do not use the product as a stepladder.
- 9. This product is intended for indoor, household use only as it is a non-industrial product.
- 10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

 
CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver, flat head screwdriver
- ☑ 2m x 2m assembly space required
- ☑ 1.5 hour assembly time approx.

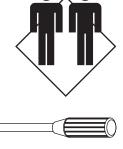




USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

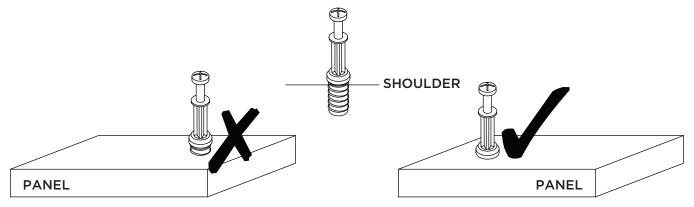


CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

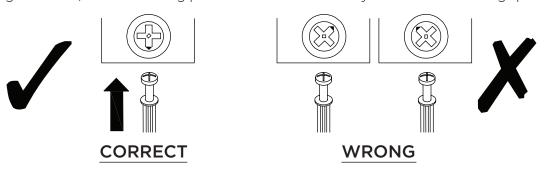

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

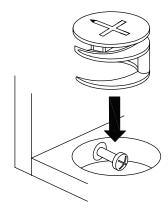

Turn cam lock clockwise to tighten.

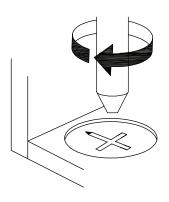

HARDWARE LIST



12 x A Quickfit Screw



12 x B Cam Lock



30 x C Screw



12 x D Screw



 
16 x E Screw



1 x F Allen Key



2 x G Outer Drawer Runner



2 x H Outer Drawer Runner



2 x I Inner Drawer Runner



2 x J Inner Drawer Runner



16 x K Nail



4 x L Bolt






6 x N Bolt




2 x O Wall Plug

PARTS LIST

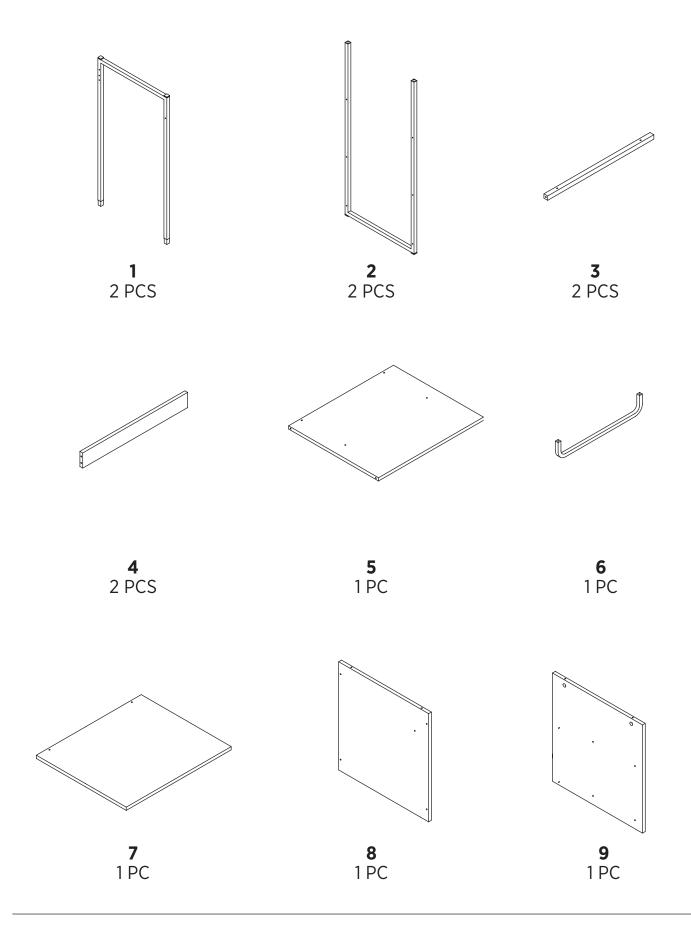


PARTS LIST

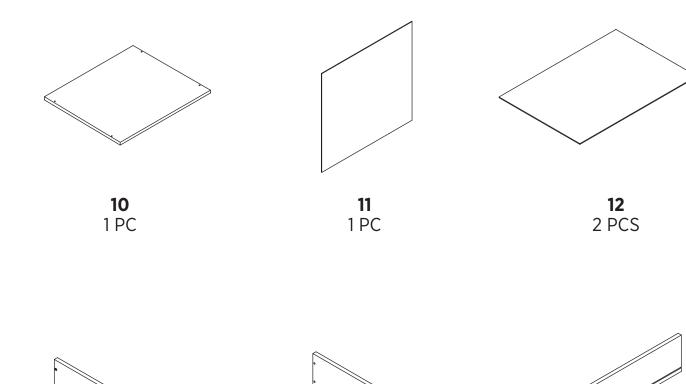

14

2 PCS

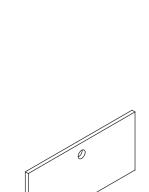

13

2 PCS

16 2 PCS

15

2 PCS

STEP 1


Fix outer drawer runners (G) to part 8 using screws (E).


Fix outer drawer runners (H) to part 9 using screws (E), as shown.








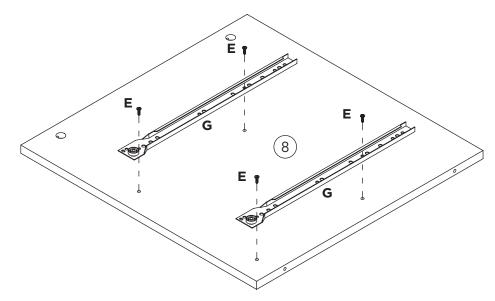


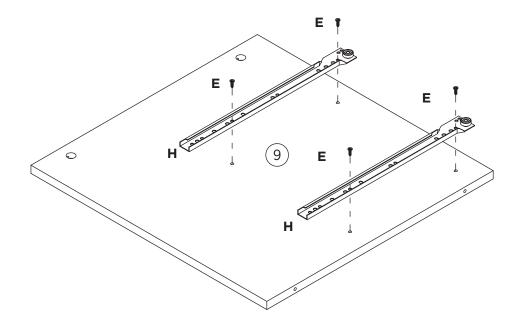

STEP 2

 Fix part 10 to parts 8 and 9 using screws (C), as shown.




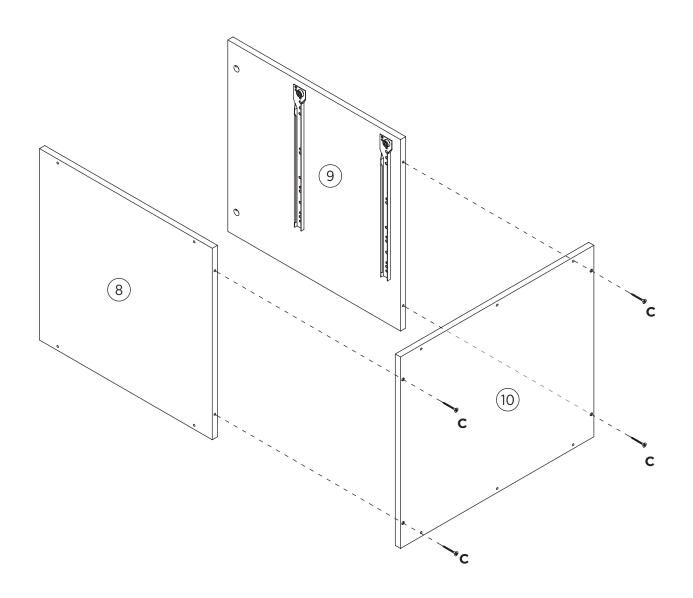

STEP 3

Insert quickfit screws (A) to part 7, as shown.




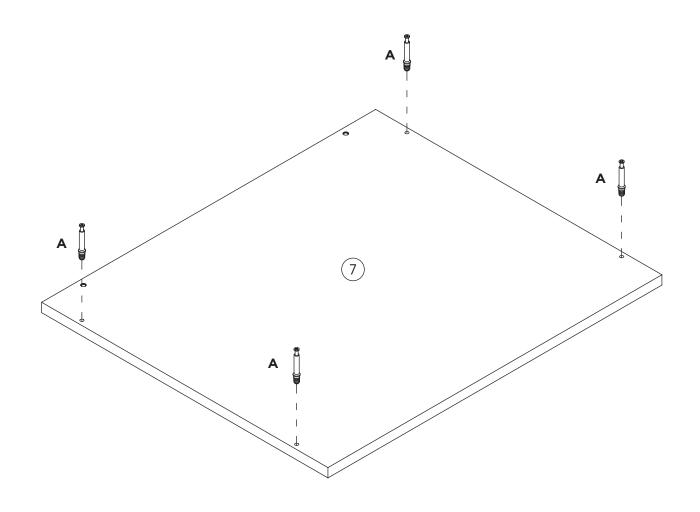

STEP 4

Fix part 4 to part 7 using screws (C), as shown.



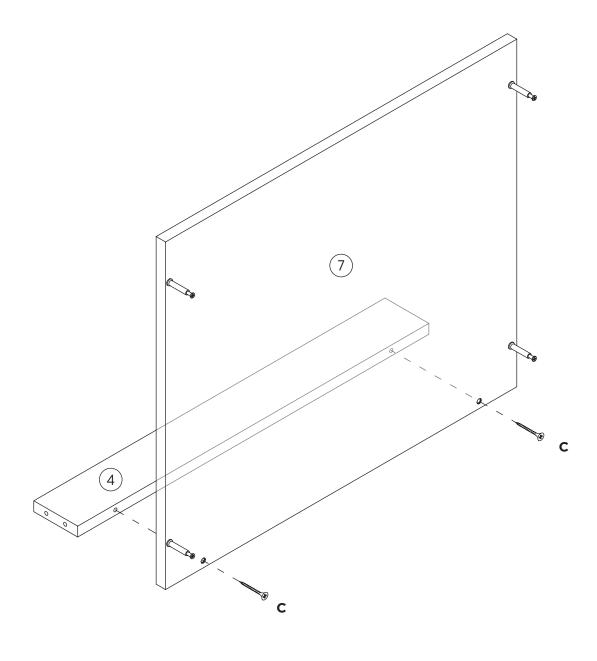


STEP 5

Insert cam locks (B) to parts 8 and 9.

Fix part 7 to parts 8 and 9, as shown.

Turn cam locks clockwise to tighten.




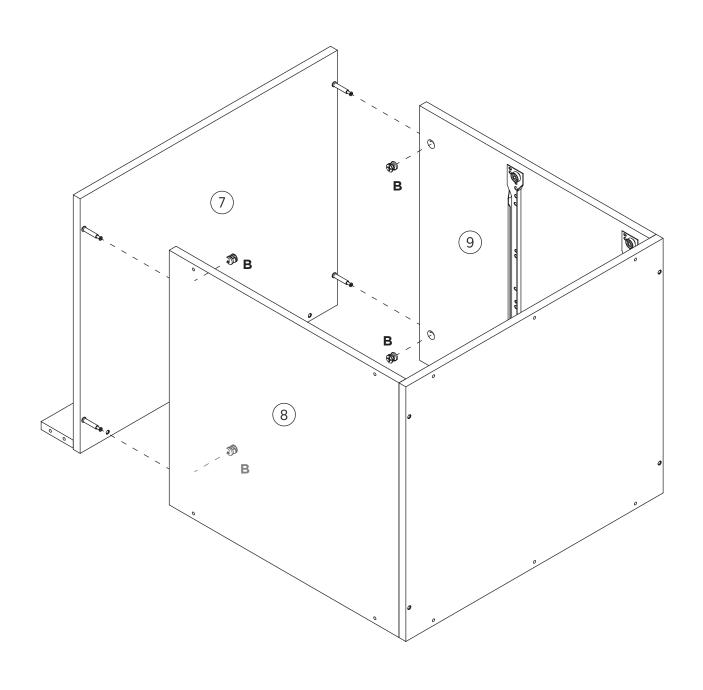


STEP 6

Attach part 11 to assembled unit using nails (K), as shown.



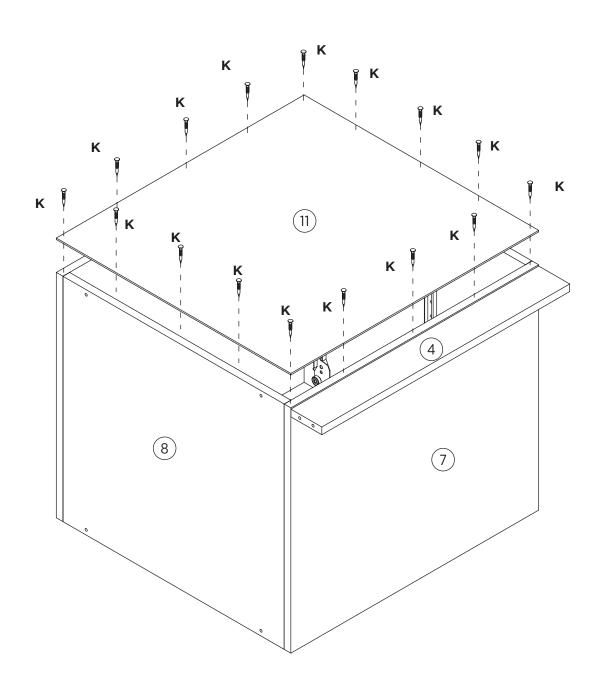


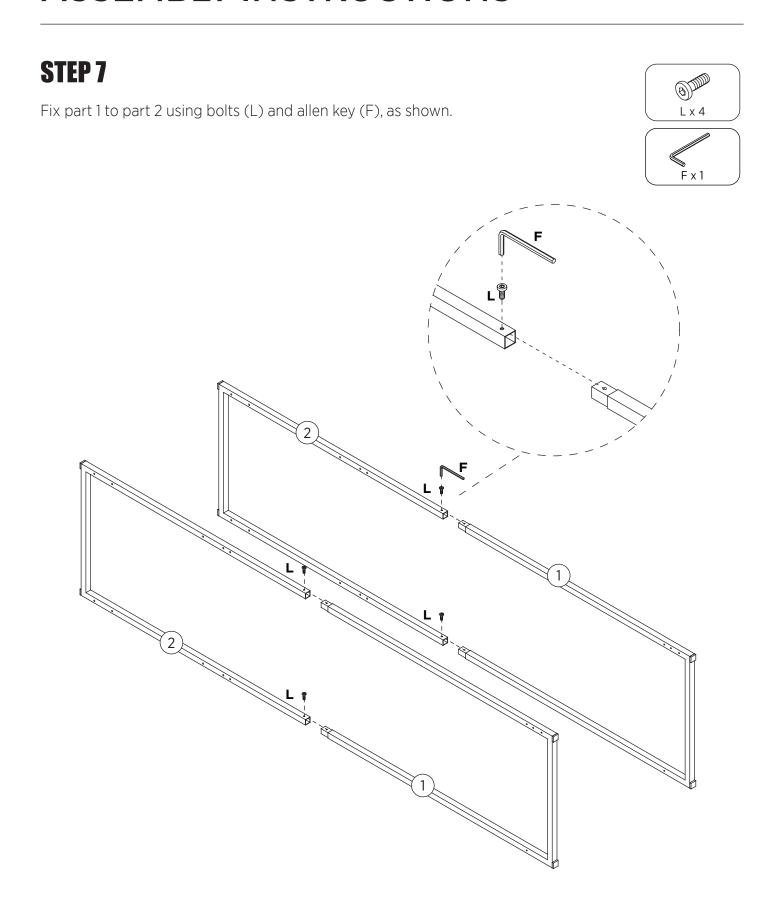


STEP 8

Fix part 5 to part 6 using bolts (N) and allen key (F).

 Screw (C) is fixed through wall bracket (M) and into part 4, as shown.



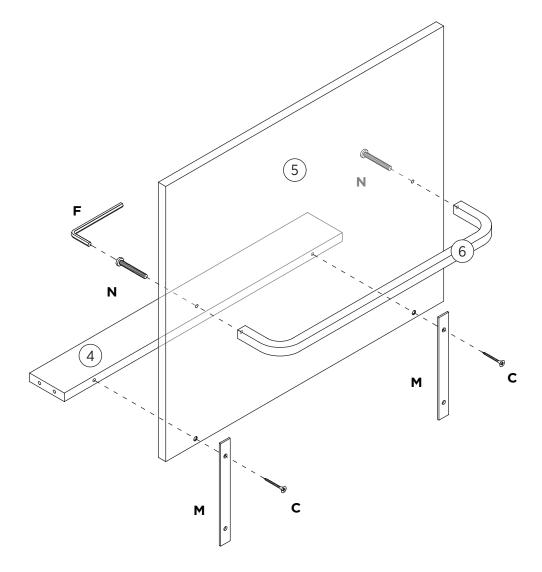

STEP 9


Fix part 1 to parts 4 and 5 using screws (C).

Fix part 2 to parts 3 using bolts (N) and allen key (F), as shown.








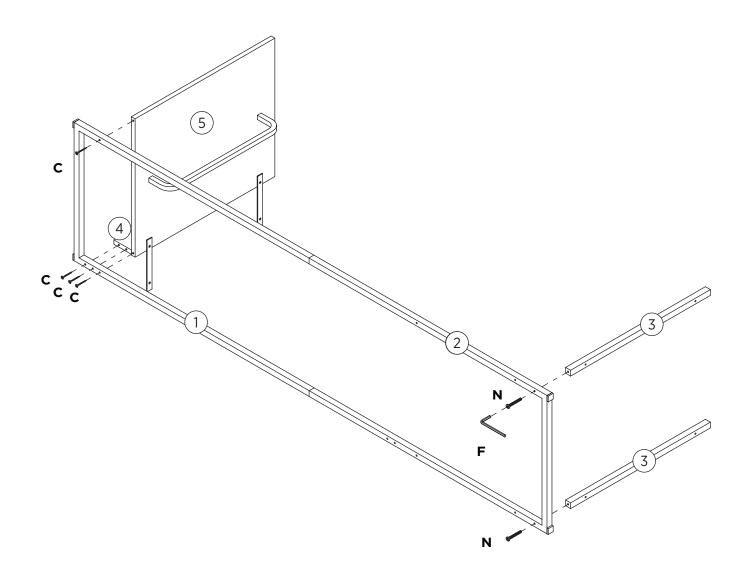

STEP 10


Fix parts 3 to part 10 using screws (D), as shown.




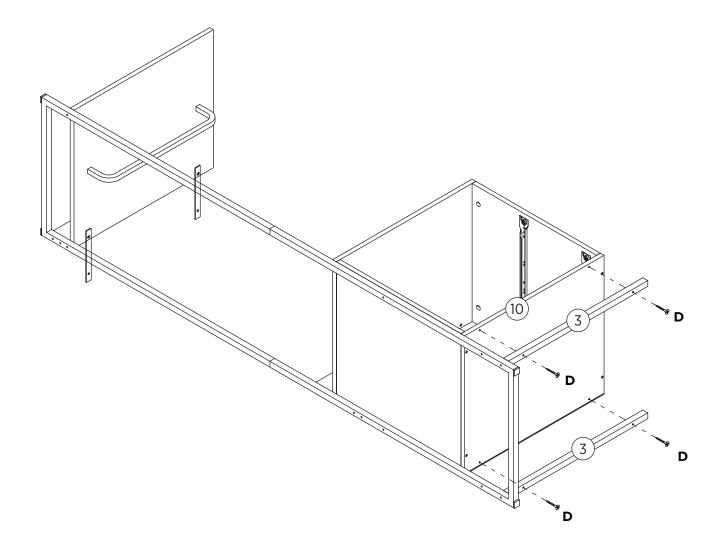

STEP 11

 Fix part 2 to parts 4 and 8 using screws (C) and screws (D), as shown.



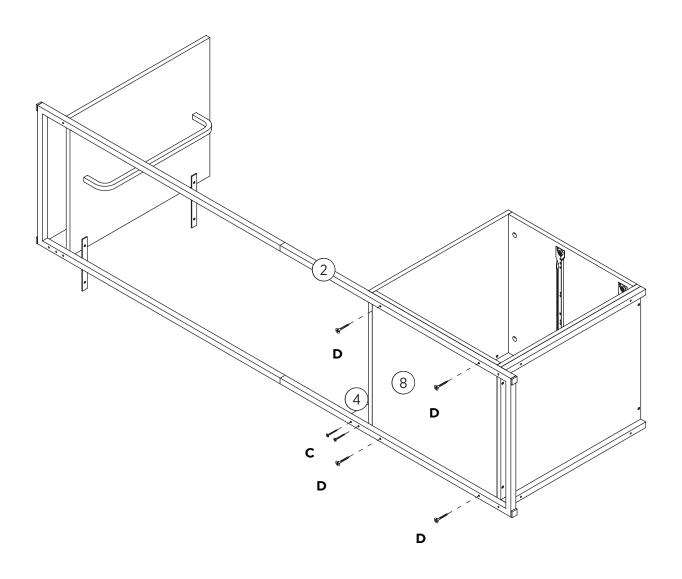

STEP 12


Fix part 1 to parts 4 and 5 using screws (C).

Fix part 2 to parts 3 and 9 using screws (C), screws (D) and bolts (N), as shown.









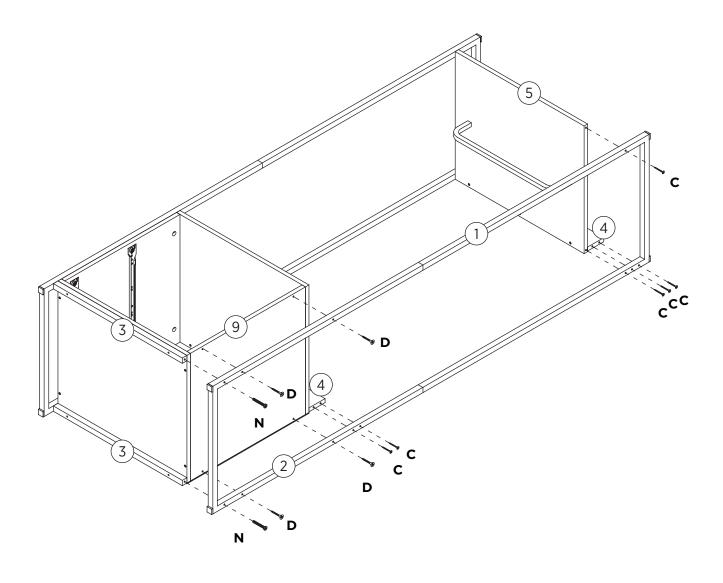

STEP 13

 Fix part 15 to parts 13 and 14 using screws (C), as shown.




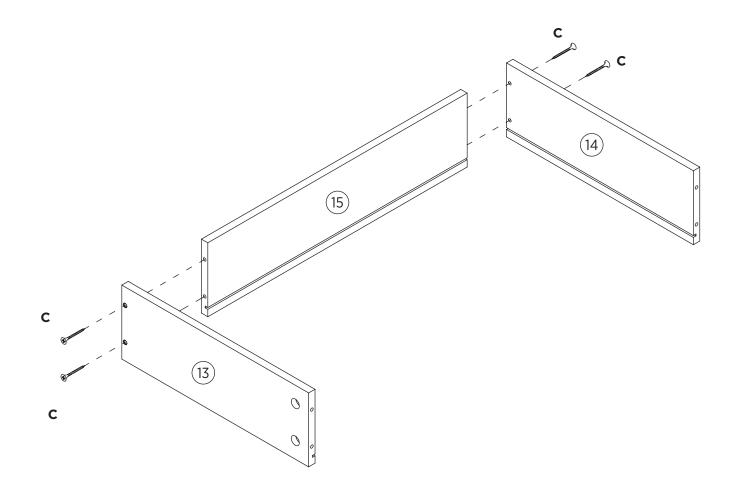



STEP 14

Insert parts 12 into the grooves of parts 13, 14 and 15, as shown.

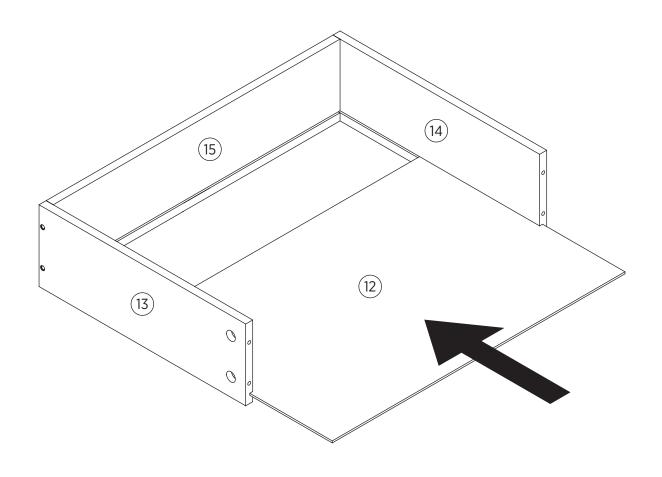


x2

STEP 15

Insert quickfit screws (A) to part 16, as shown.



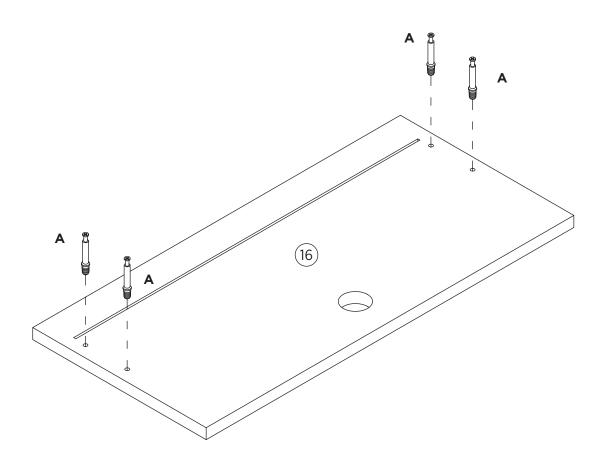

x2


STEP 16

Insert cam locks (B) to parts 13 and 14.

Fix part 16 to parts 13 and 14, as shown.

Turn cam locks clockwise to tighten.



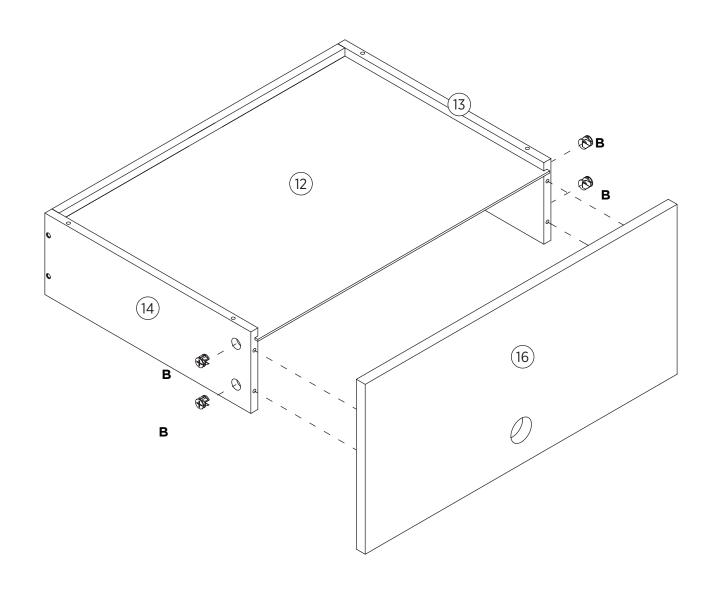



STEP 17


Fix inner drawer runners (I) to part 13 using screws (E).

Fix inner drawer runners (J) to part 14 using screws (E), as shown.








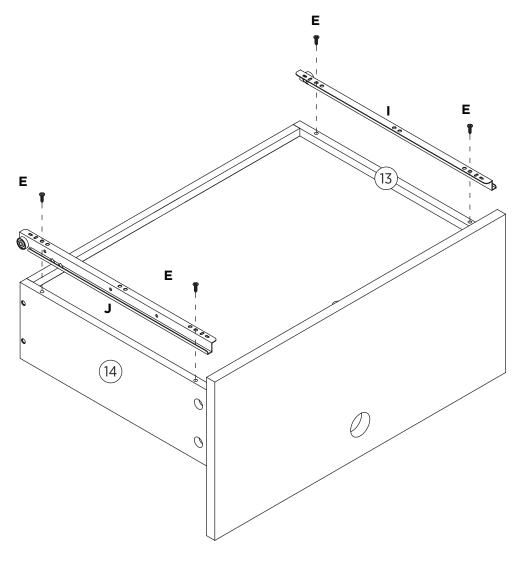

x2

STEP 18

Insert drawers into assembled unit, as shown.

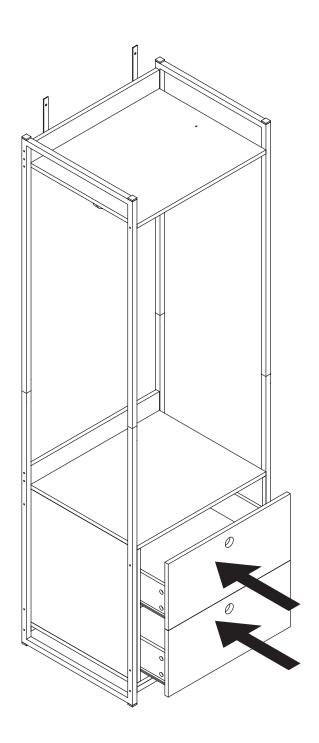


STEP 19


For extra stability, you must fix your wardrobe to the wall using the additional hardware O, M and C, as shown.

Firstly, screw wall plug O into required position in your wall.


Screw C is then fixed through the wall bracket M and into the wall plug O in your wall.

 Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

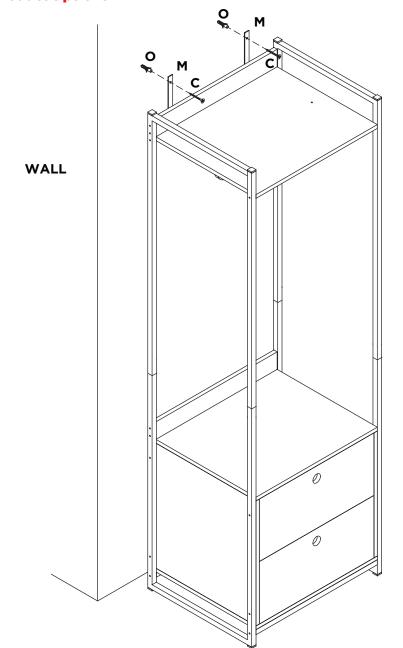



STEP 20

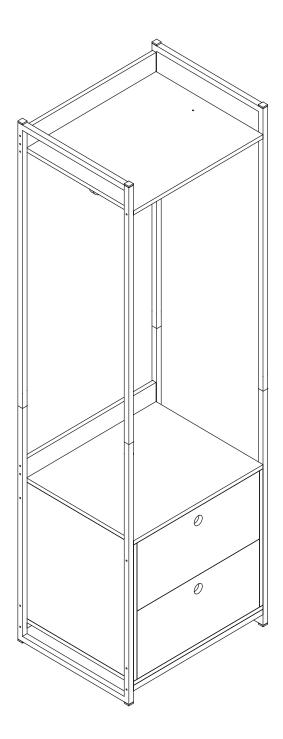

Maximum recommended weight is 5kg per drawer | Hanging Rack 10kg.

Your wardbrobe is ready for use.

 
WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:






Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

 Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.




1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.




2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.




3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors




4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

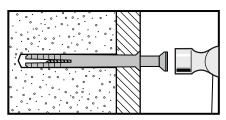

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.



6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.