


TV UNIT 180W 2 TIER

ASSEMBLY INSTRUCTIONS

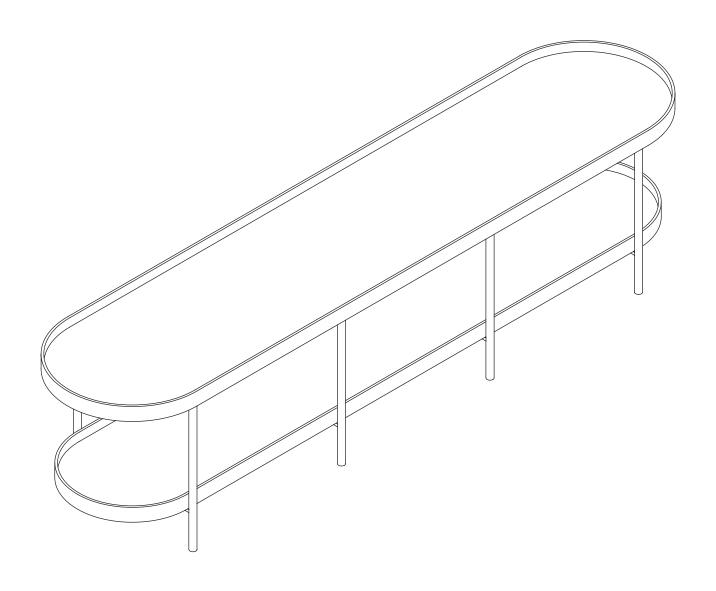

TIPS BEFORE YOU START

- 1. Please check that all parts are present before you start the assembly of your furniture.
- 2. For ease and speed of assembly, we recommend that before you commen ce each step of the assembly, that you identify all the parts required for that step.
- 3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
- 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
- 7. Always place the product on a flat, steady and stable surface.
- 8. Do not stand on the product. Do not use the product as a stepladder.
- 9. This product is intended for indoor, household use only as it is a non-industrial product.
- 10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ☑ 1m x 1.5m assembly space required
- ☑ 0.5 hour assembly time approx.



HARDWARE LIST



32 x A Bolt

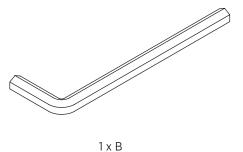



Allen Key




8 x C Foot

 PARTS LIST

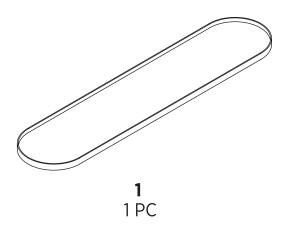

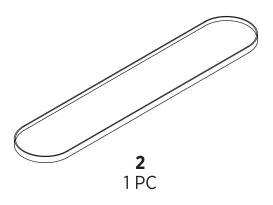




ASSEMBLY INSTRUCTIONS

STEP 1

Fix part 2 to parts 3 using bolts (A) and allen key (B), as shown.





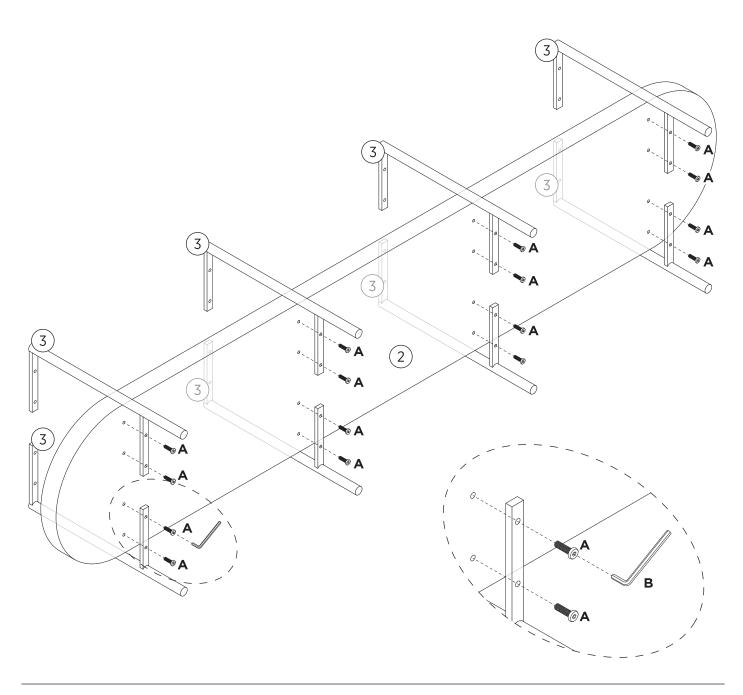


ASSEMBLY INSTRUCTIONS

STEP 2 Fix part 1 to parts 3 using bolts (A) and allen key (B). Screw foot (C) to parts 3, as shown. B x 1 C x 8 В ₽ C (3 Ģ C Ģ C _⇔ C 1 ₽ C 3 3 φC 2 ⊖ C ⊖ C В

ASSEMBLY INSTRUCTIONS

STEP 3

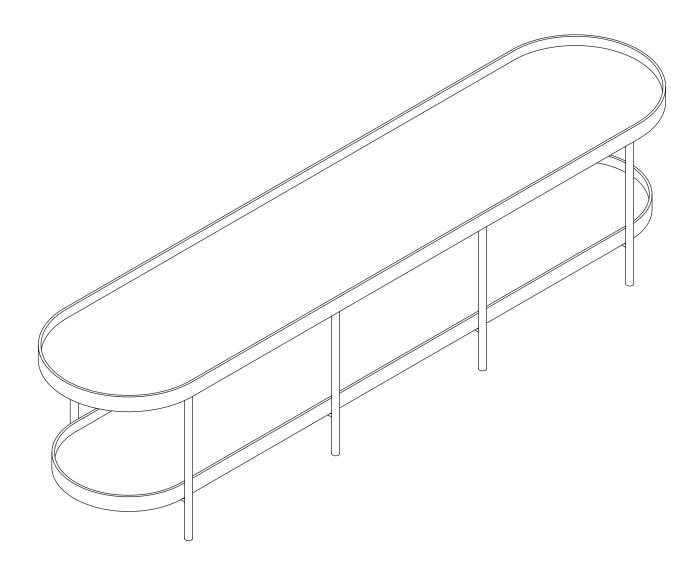

The maximum recommended weight is 15kg per shelf.

Your TV Unit is ready for use.