 


CHEST OF 10 DRAWERS

ASSEMBLY INSTRUCTIONS

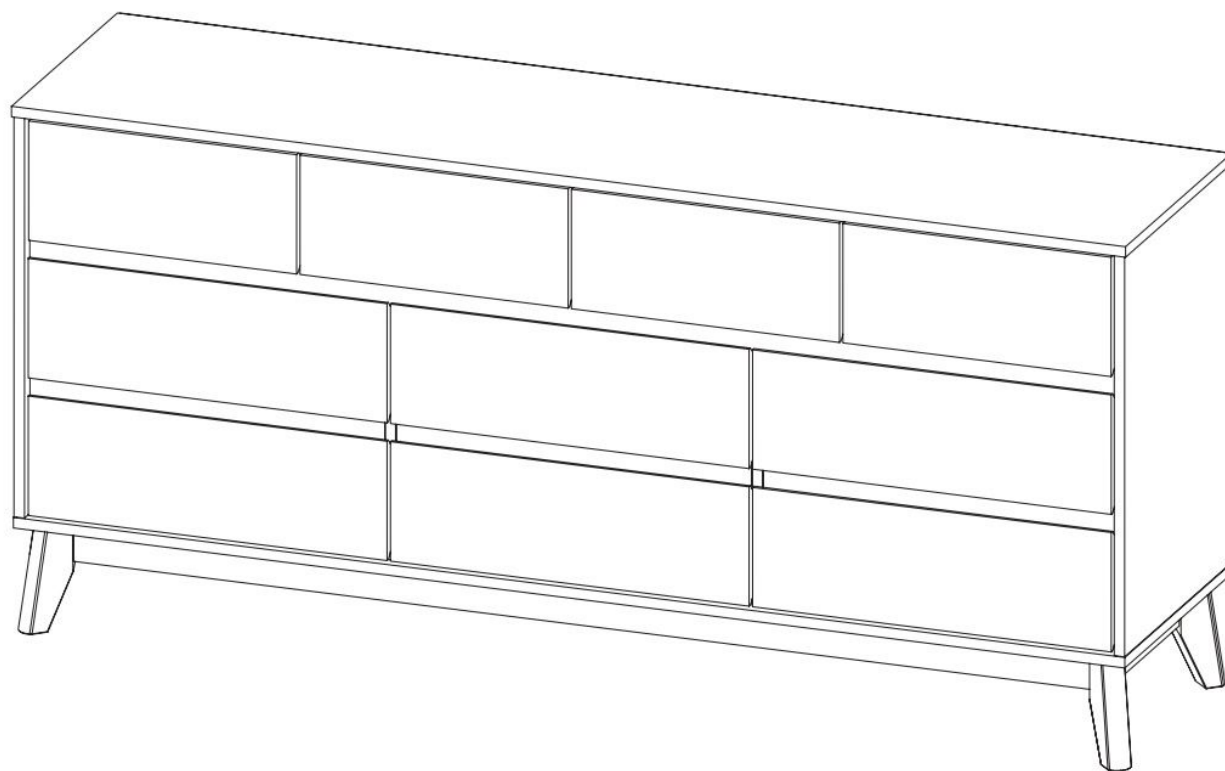

TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

 
CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.



ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 1 x adult required
- ✓ 1m x 1m assembly space required
- ✓ 1 hour assembly time approx.



USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

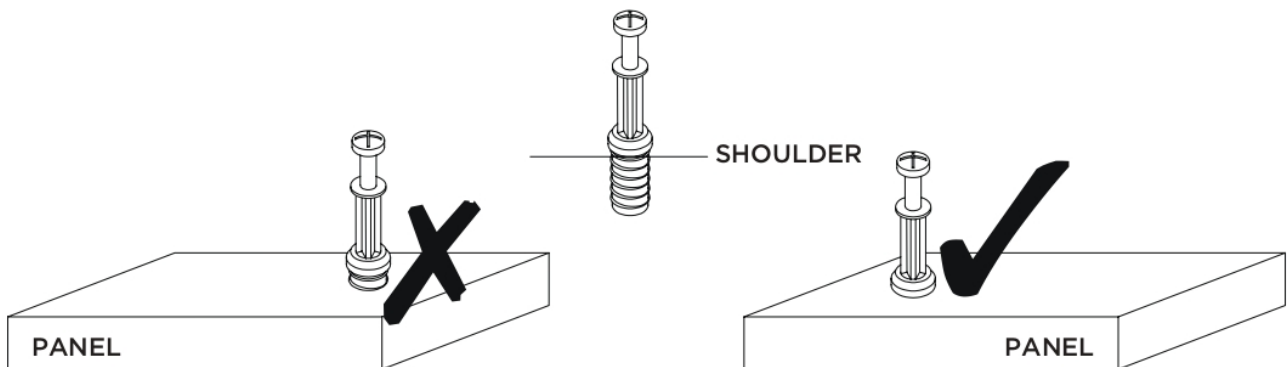



CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

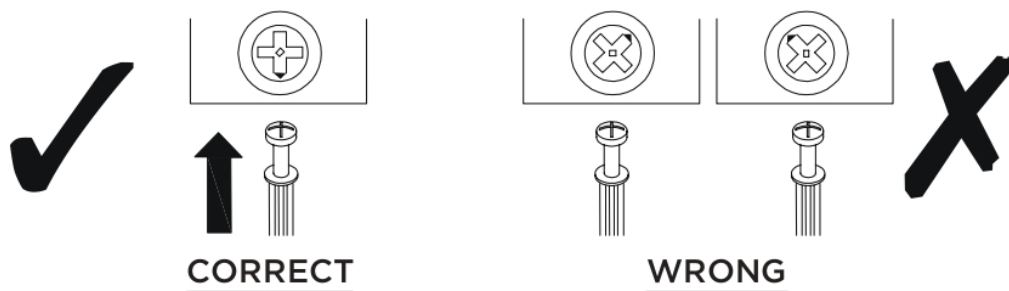

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

  
Turn cam lock clockwise to tighten.

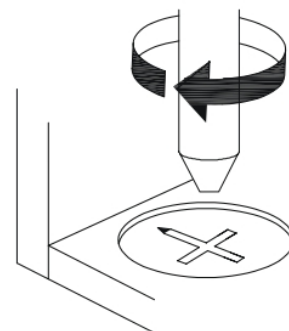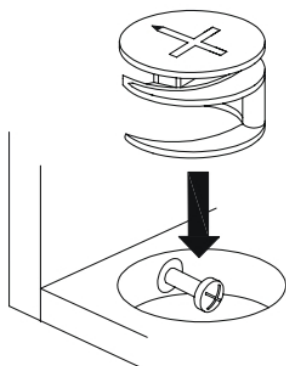

HARDWARE LIST



 
18 x A
Cam Lock



18 x B
Quickfit Screw



 18 x C
Cam Lock Cover



48 x D
Wooden Dowel



14 x E
Cap Wood Screw



1 x F
Allen Key



18 x G
Screw



120 x H
Screw



80 x I
Screw



118 x J
Nail



9 x K
L Bracket



8 x L
Bolt



 
8 x M
Spring Washer



8 x N
Flat Washer



20 x O
Outer Drawer Runner

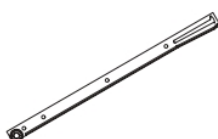

20 x P
Inner Drawer Runner



4 x Q
Wall Support



 
2 x R
Screw



2 x S
Screw




2 x T
Cable Tie



U x 2
Wall Plug
(Not Provided)

 PARTS LIST

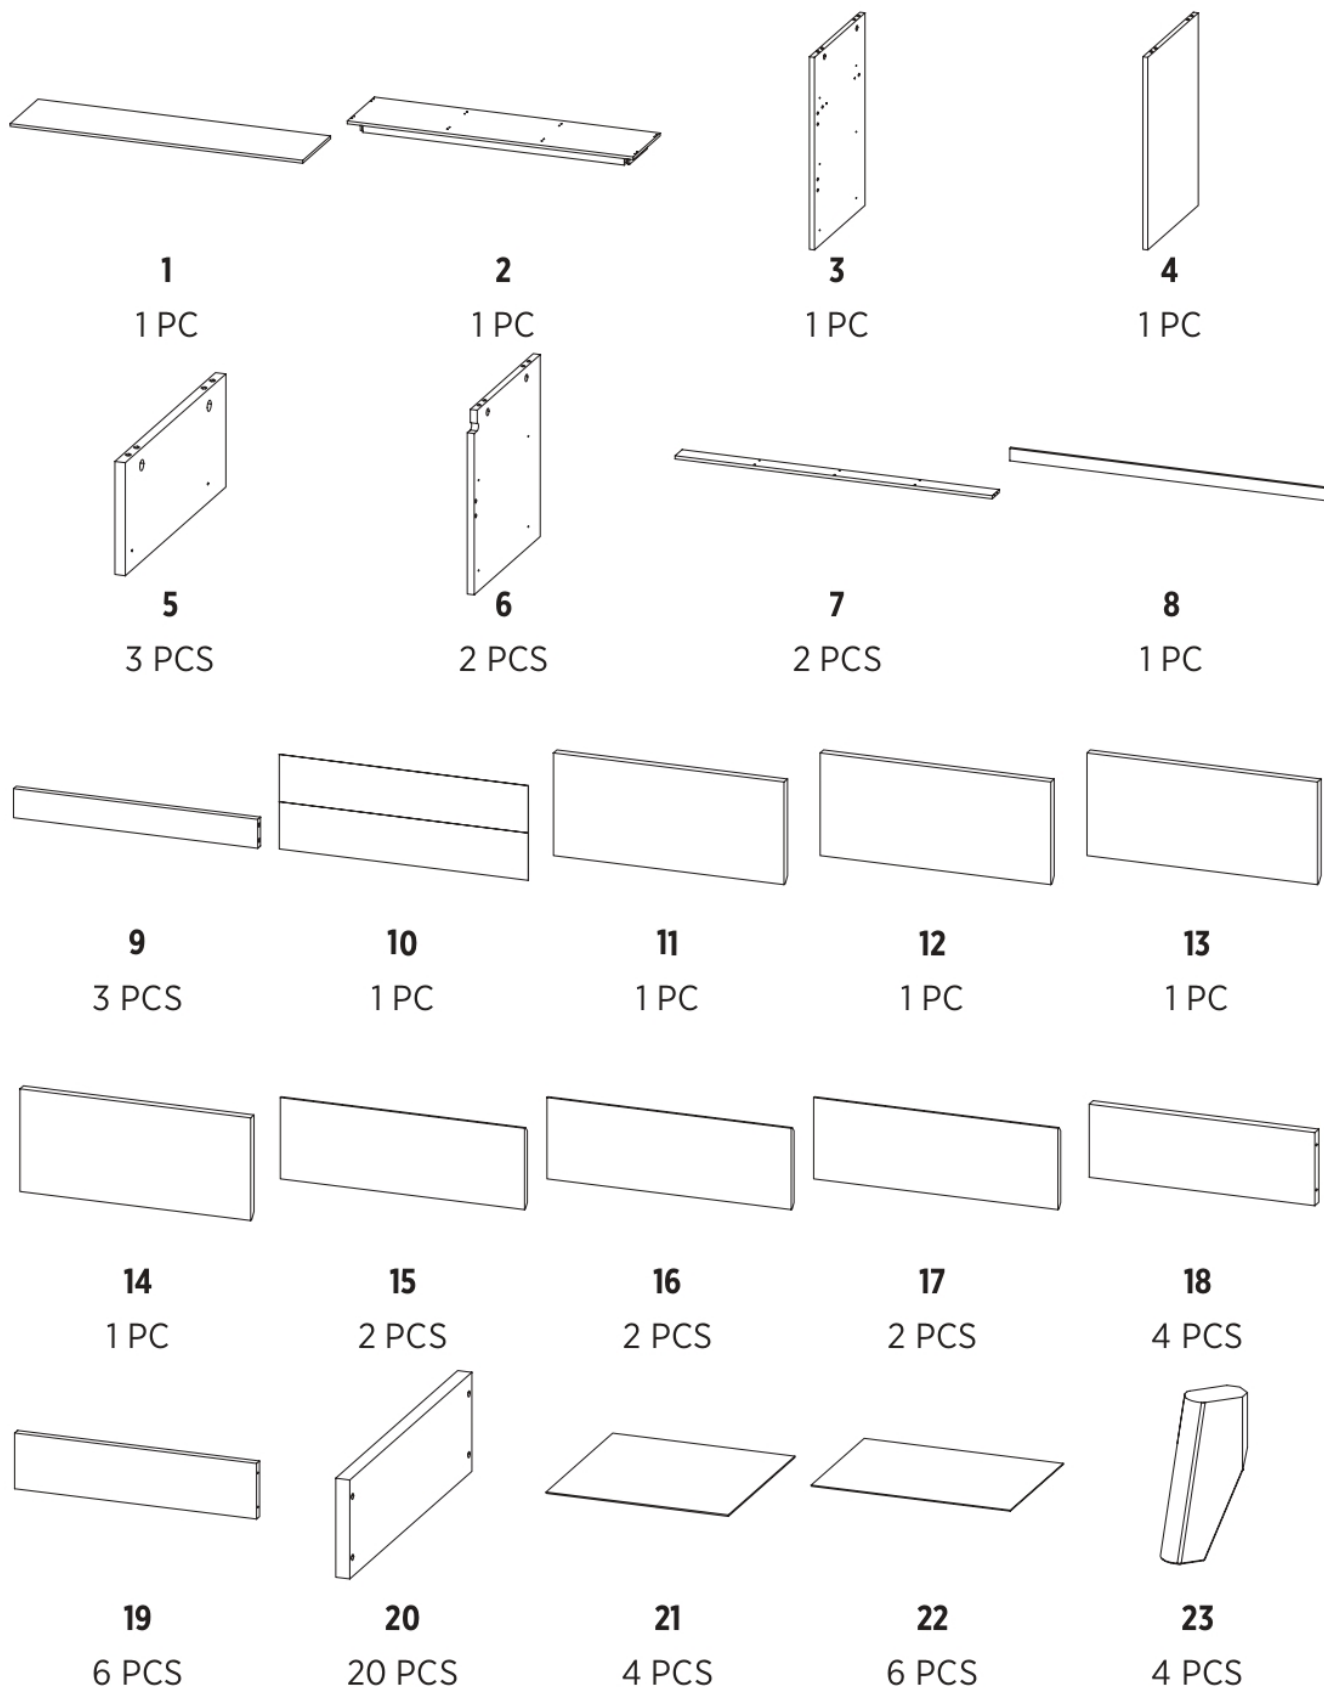

ASSEMBLY INSTRUCTIONS

 
STEP 1

Insert cam locks (A) and wooden dowels (D) into parts 3, 4, 5 6 and 7.


Insert quickfit screws (B) into part 1, 3, 4 and 7, as shown.




A x 18



B x 18

 

D x 32

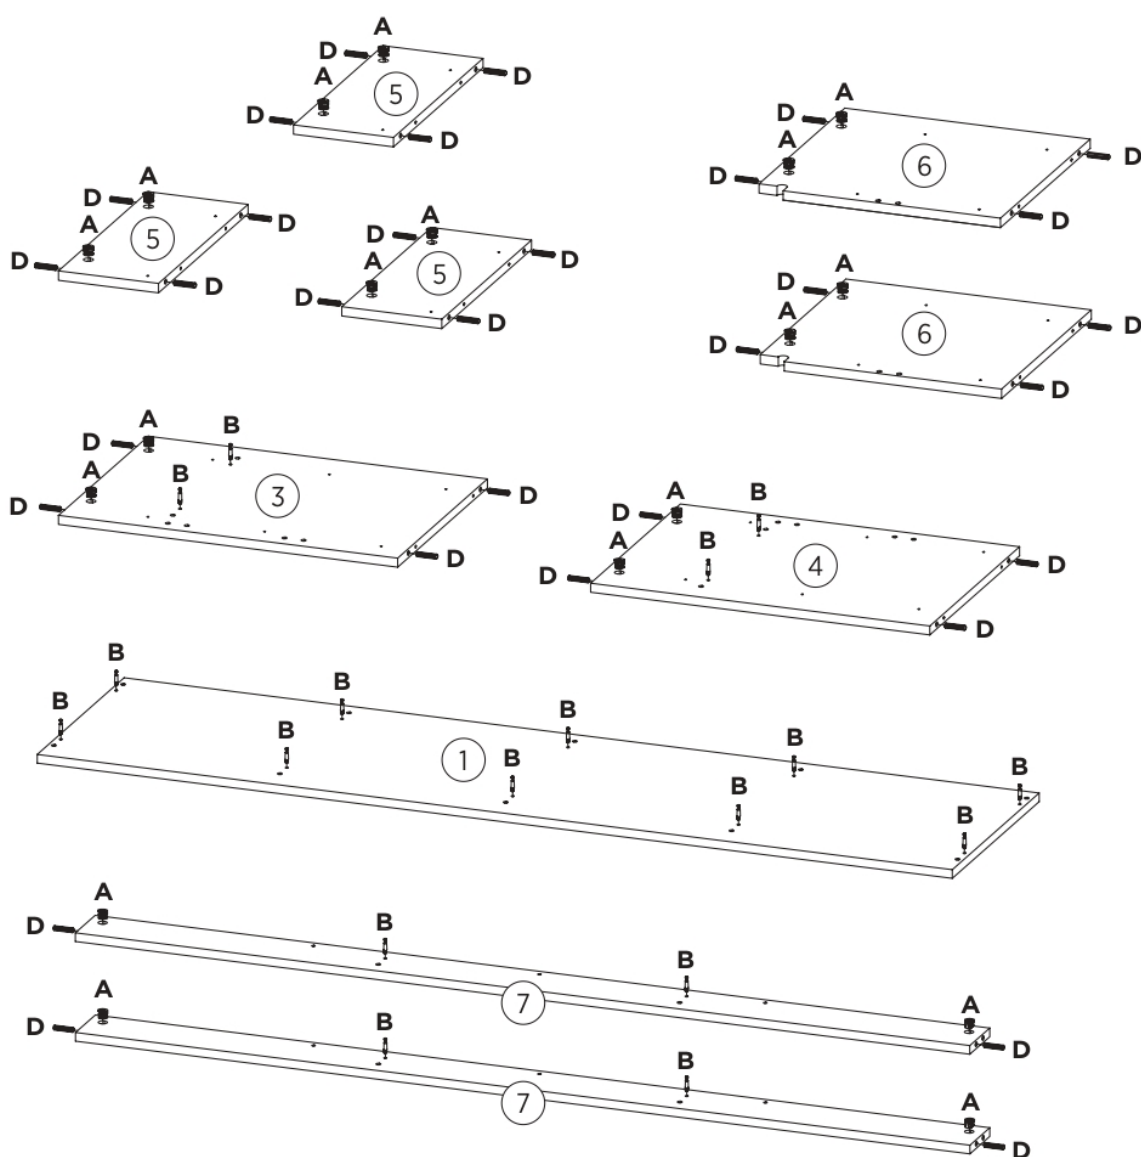 

ASSEMBLY INSTRUCTIONS

STEP 2

Fix L bracket (K) to parts 8 and 9 using screws (G).

Insert wooden dowels (D) into parts 8 and 9.



 
D x 16



G x 9



K x 9

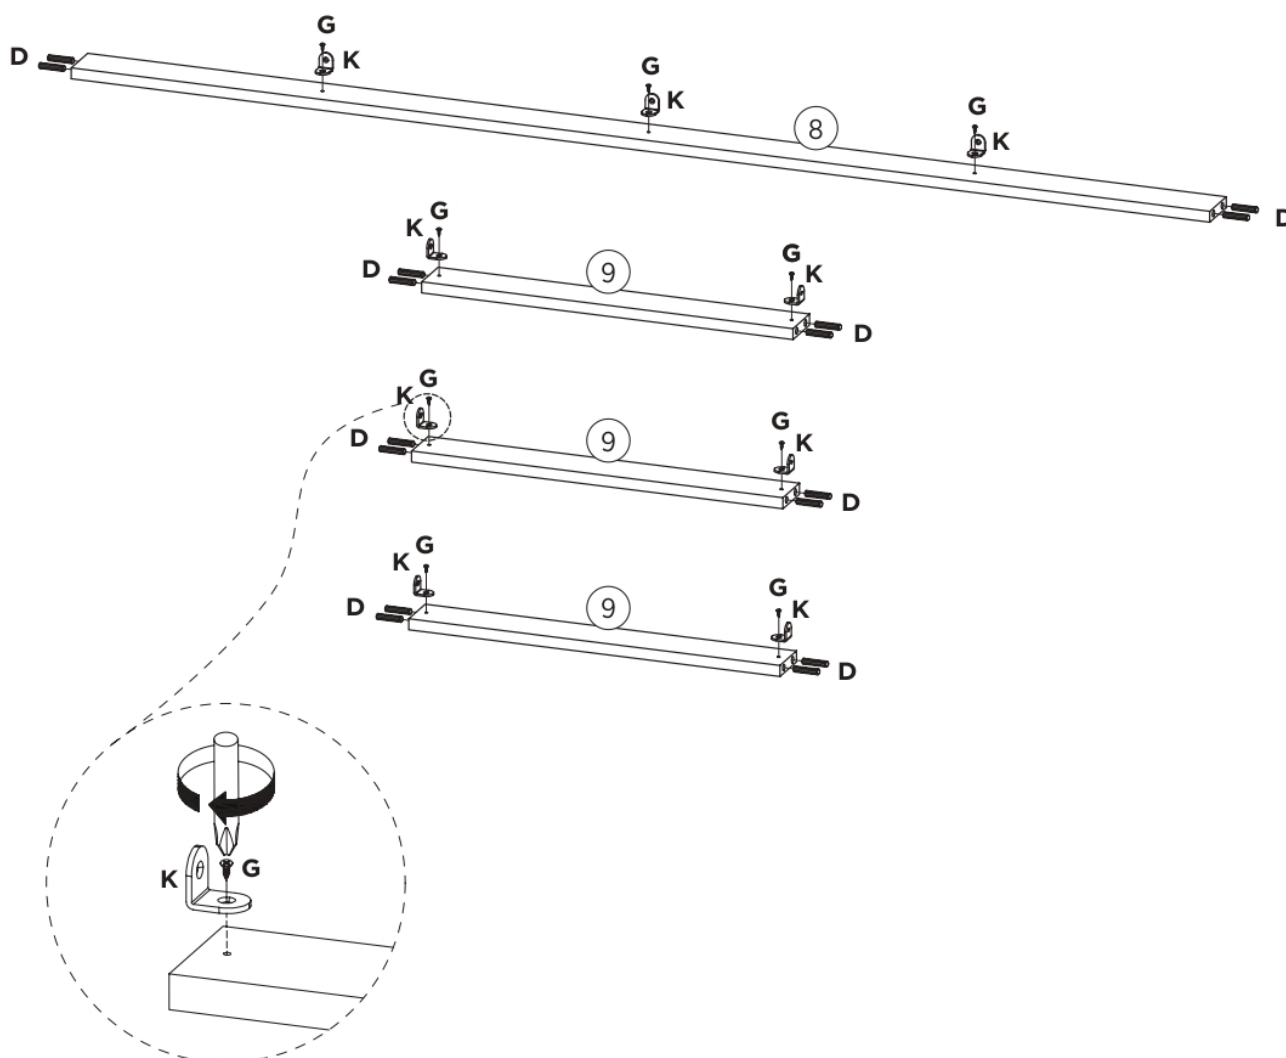


ASSEMBLY INSTRUCTIONS

STEP 3

Fix outer drawer runners (O) to both sides of parts 5 and 6 using screws (H), as shown.



 x3

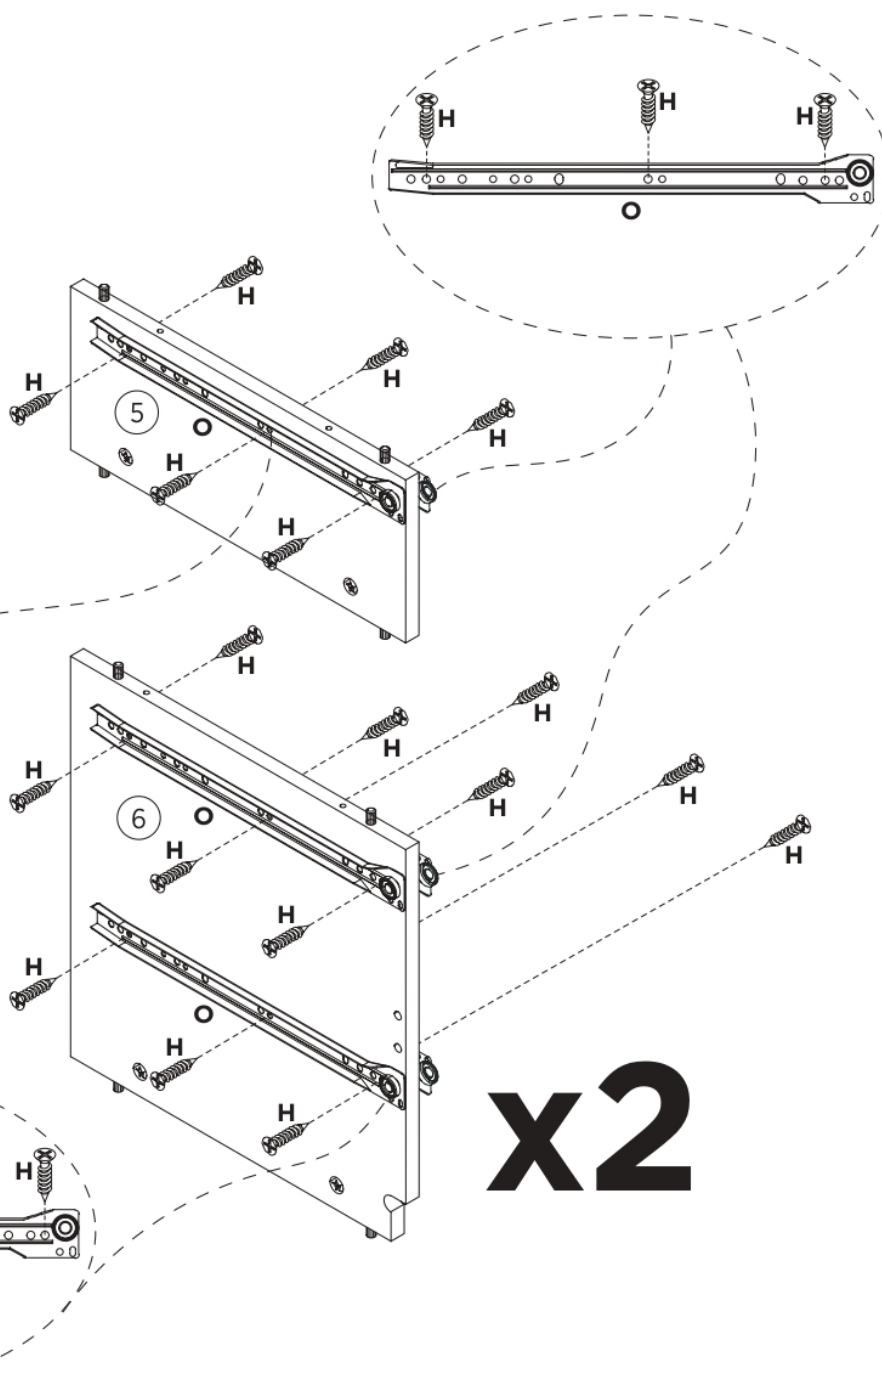

ASSEMBLY INSTRUCTIONS

STEP 4

 
Fix outer drawer runners (O) to parts 3 and 4 using screws (H), as shown.



H x 18



O x 6

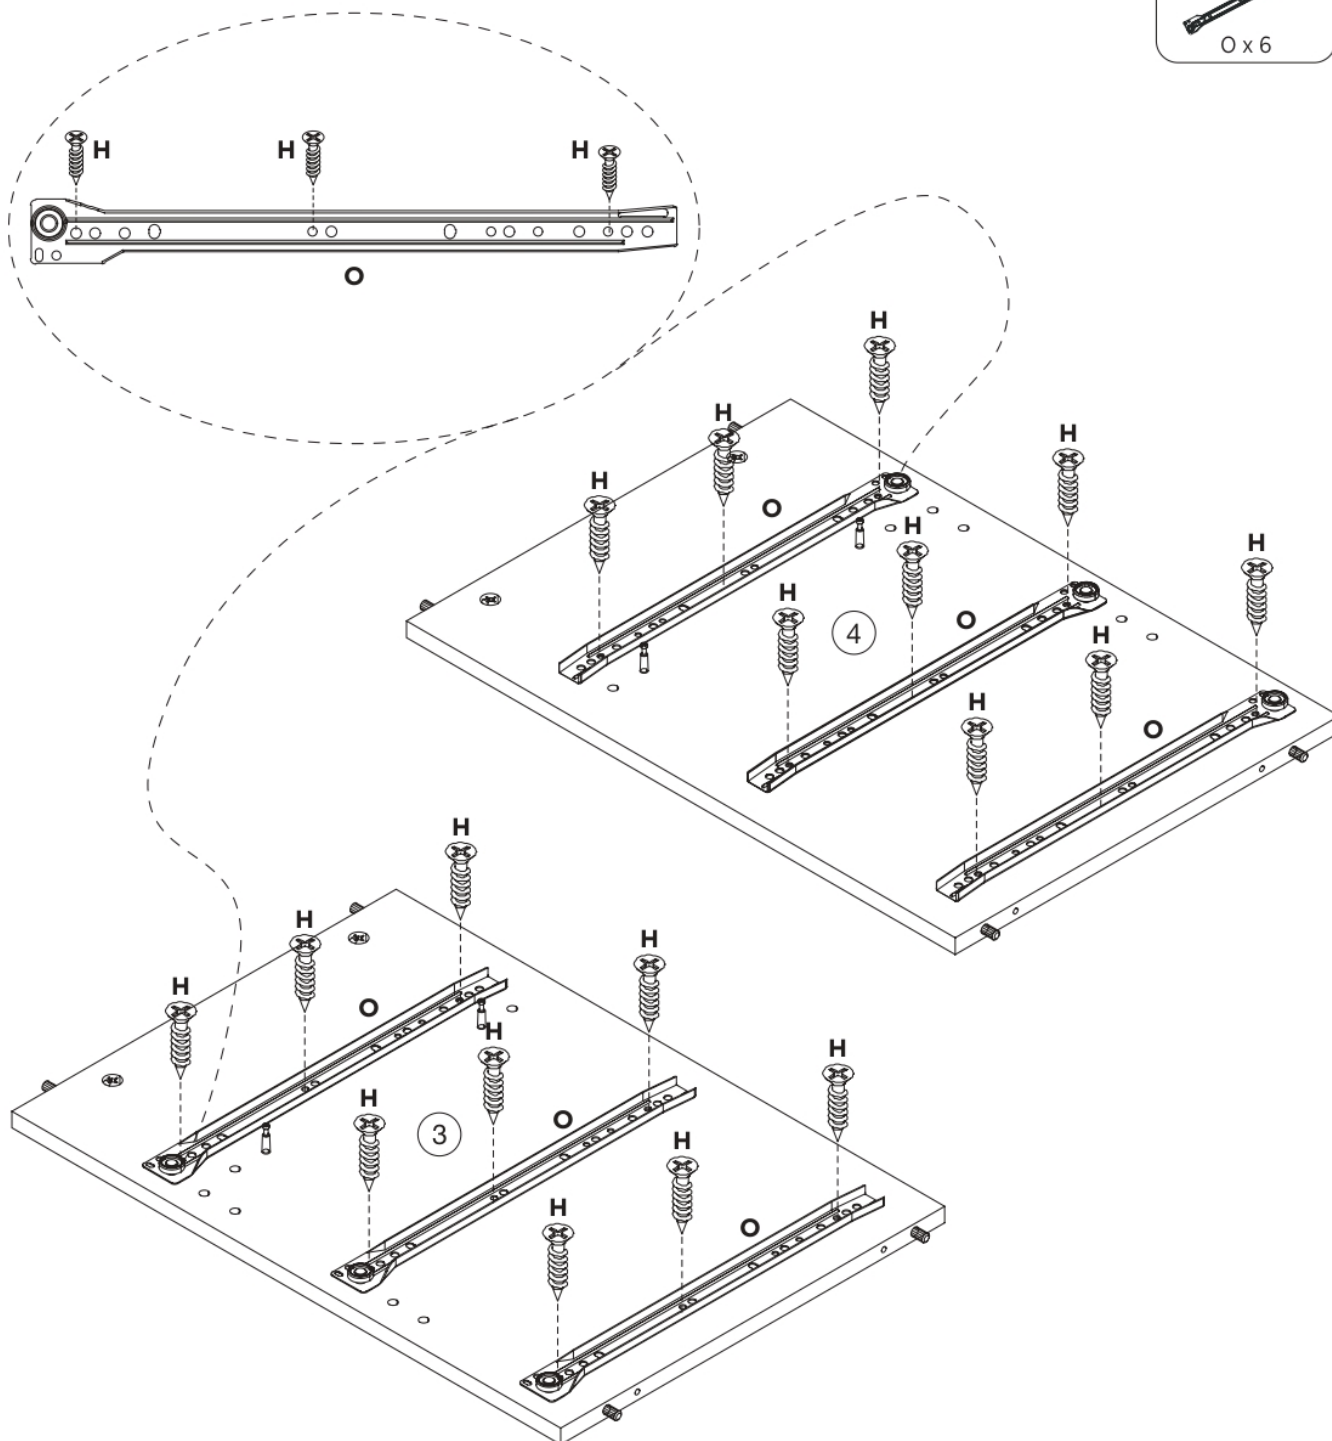


ASSEMBLY INSTRUCTIONS

STEP 5

Connect part 9, to parts 6 using screws (G).



 G x 2


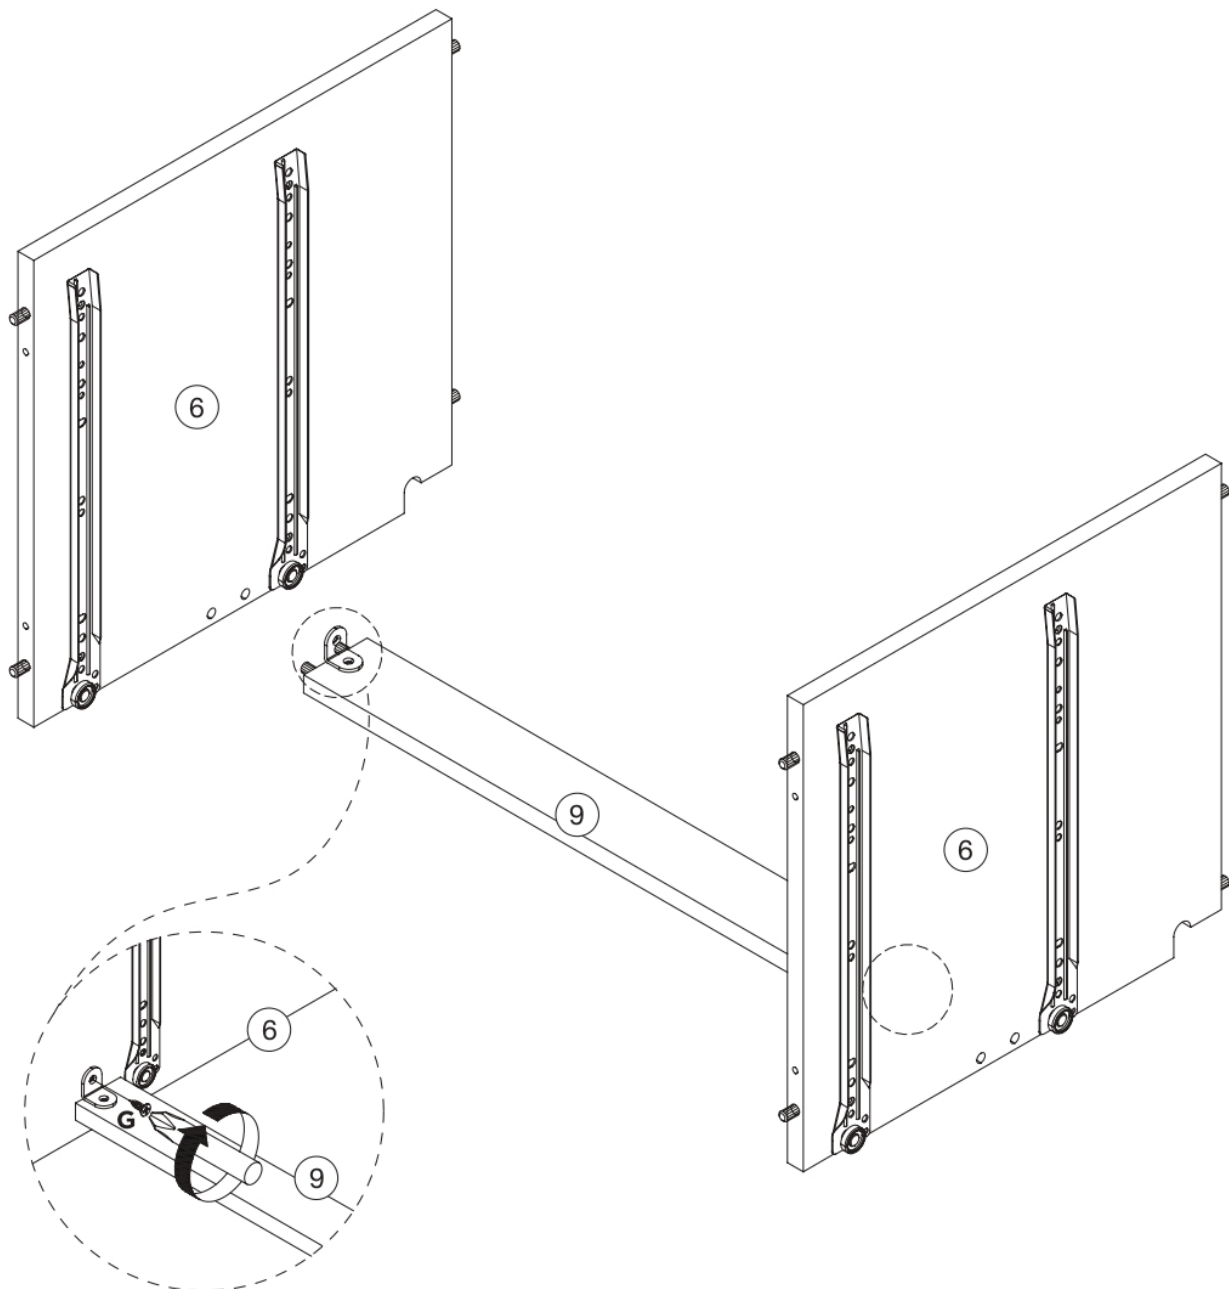


ASSEMBLY INSTRUCTIONS

STEP 6

Connect parts 7 to parts 6. Turn cam locks clockwise to tighten.


 
 
Insert covers (C) into cam locks of parts 6.

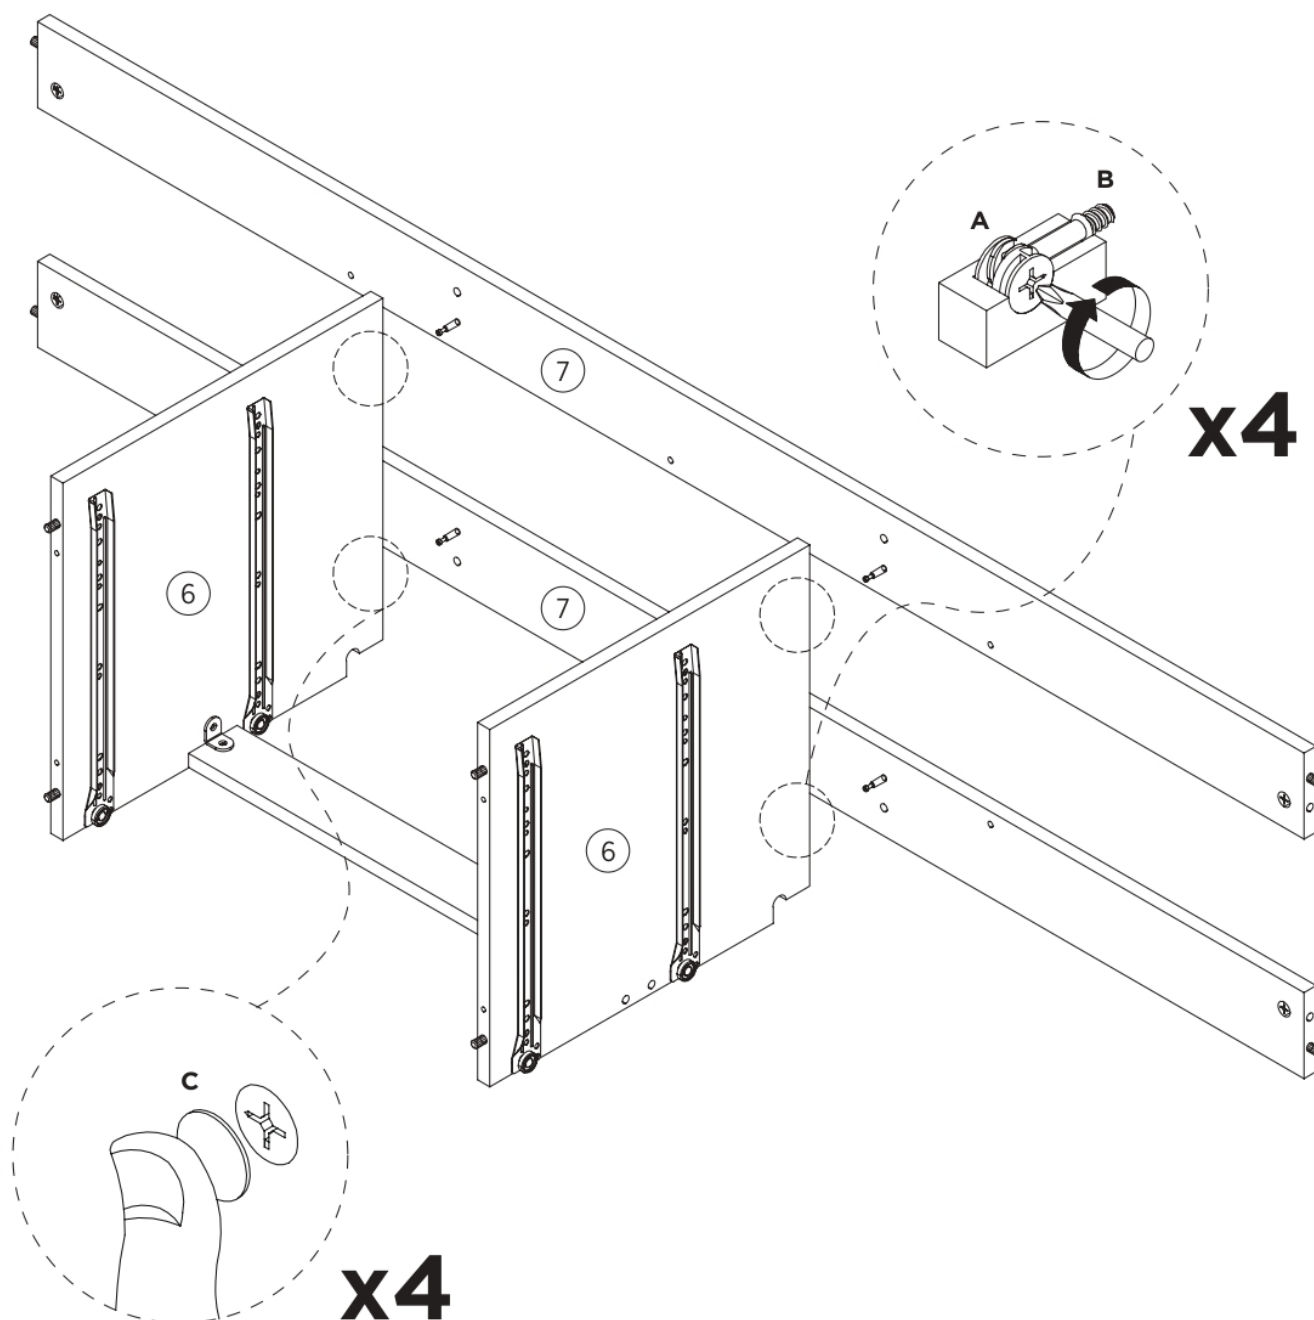

ASSEMBLY INSTRUCTIONS

STEP 7

   Connect parts 5 to parts 7 using screws (E) and allen key (F).

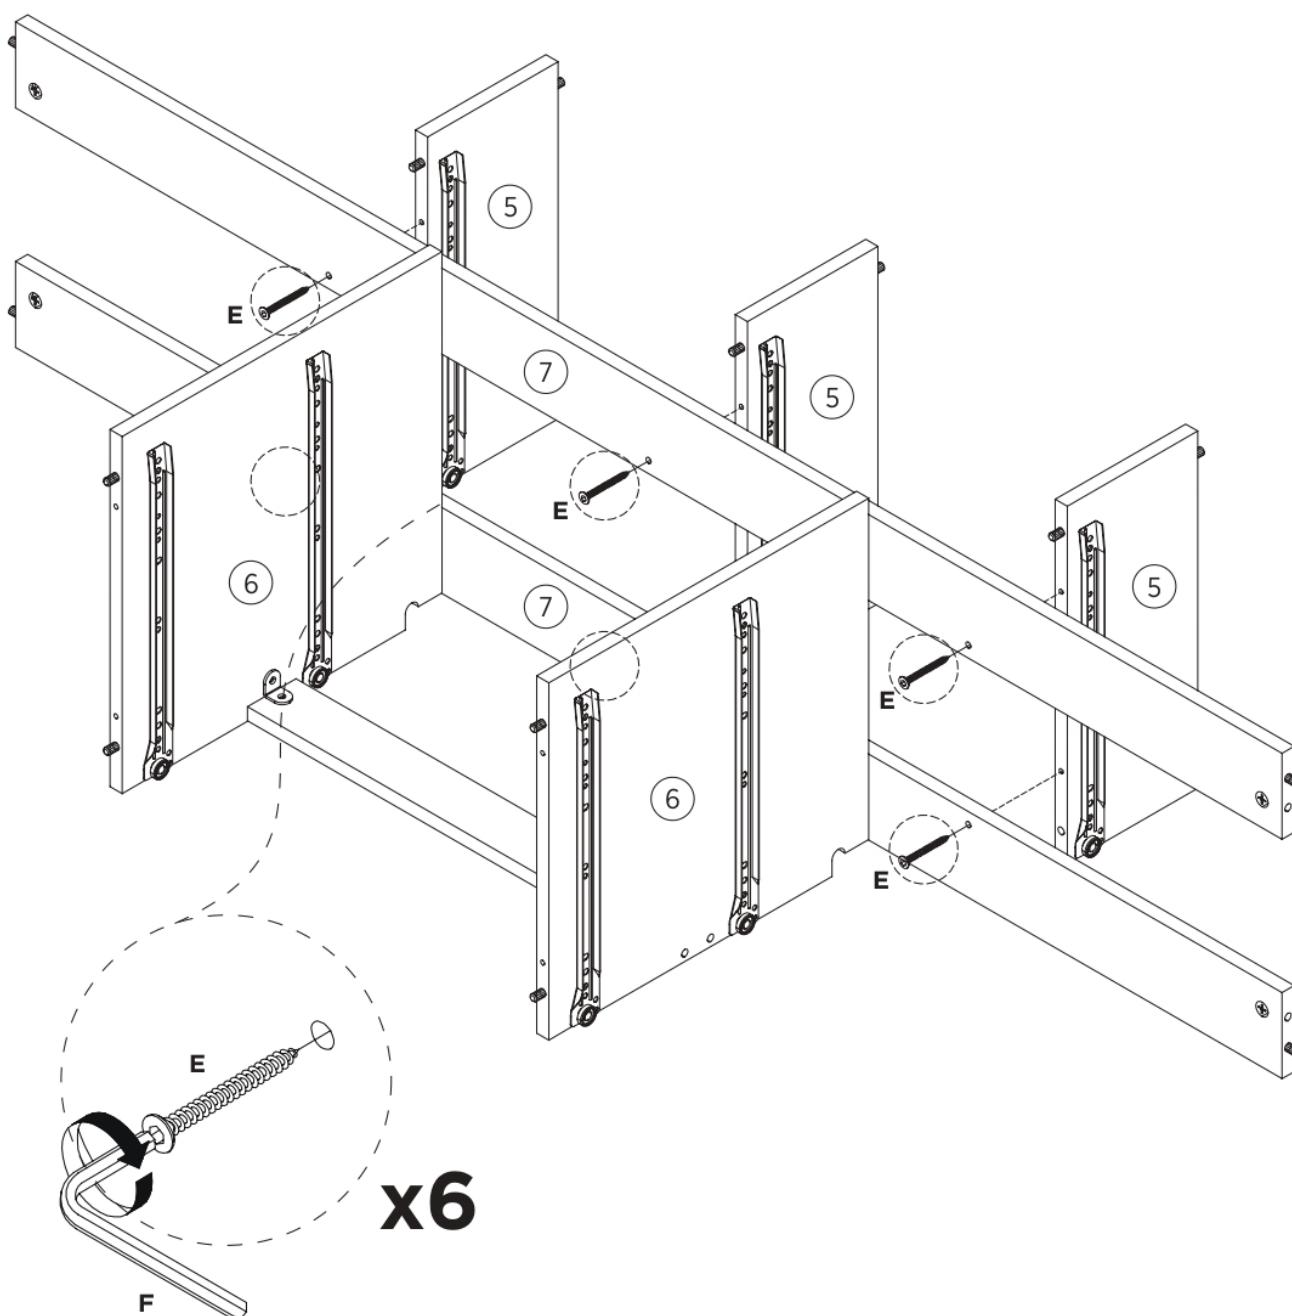

ASSEMBLY INSTRUCTIONS

STEP 8

Connect parts 3 and 4 to parts 9 using screws (G), as shown.

 
Connect parts 7 and 8 to parts 3 and 4. Turn cam locks clockwise to tighten. Insert covers (C) into cam locks of part 7.



G x 7



C x 4


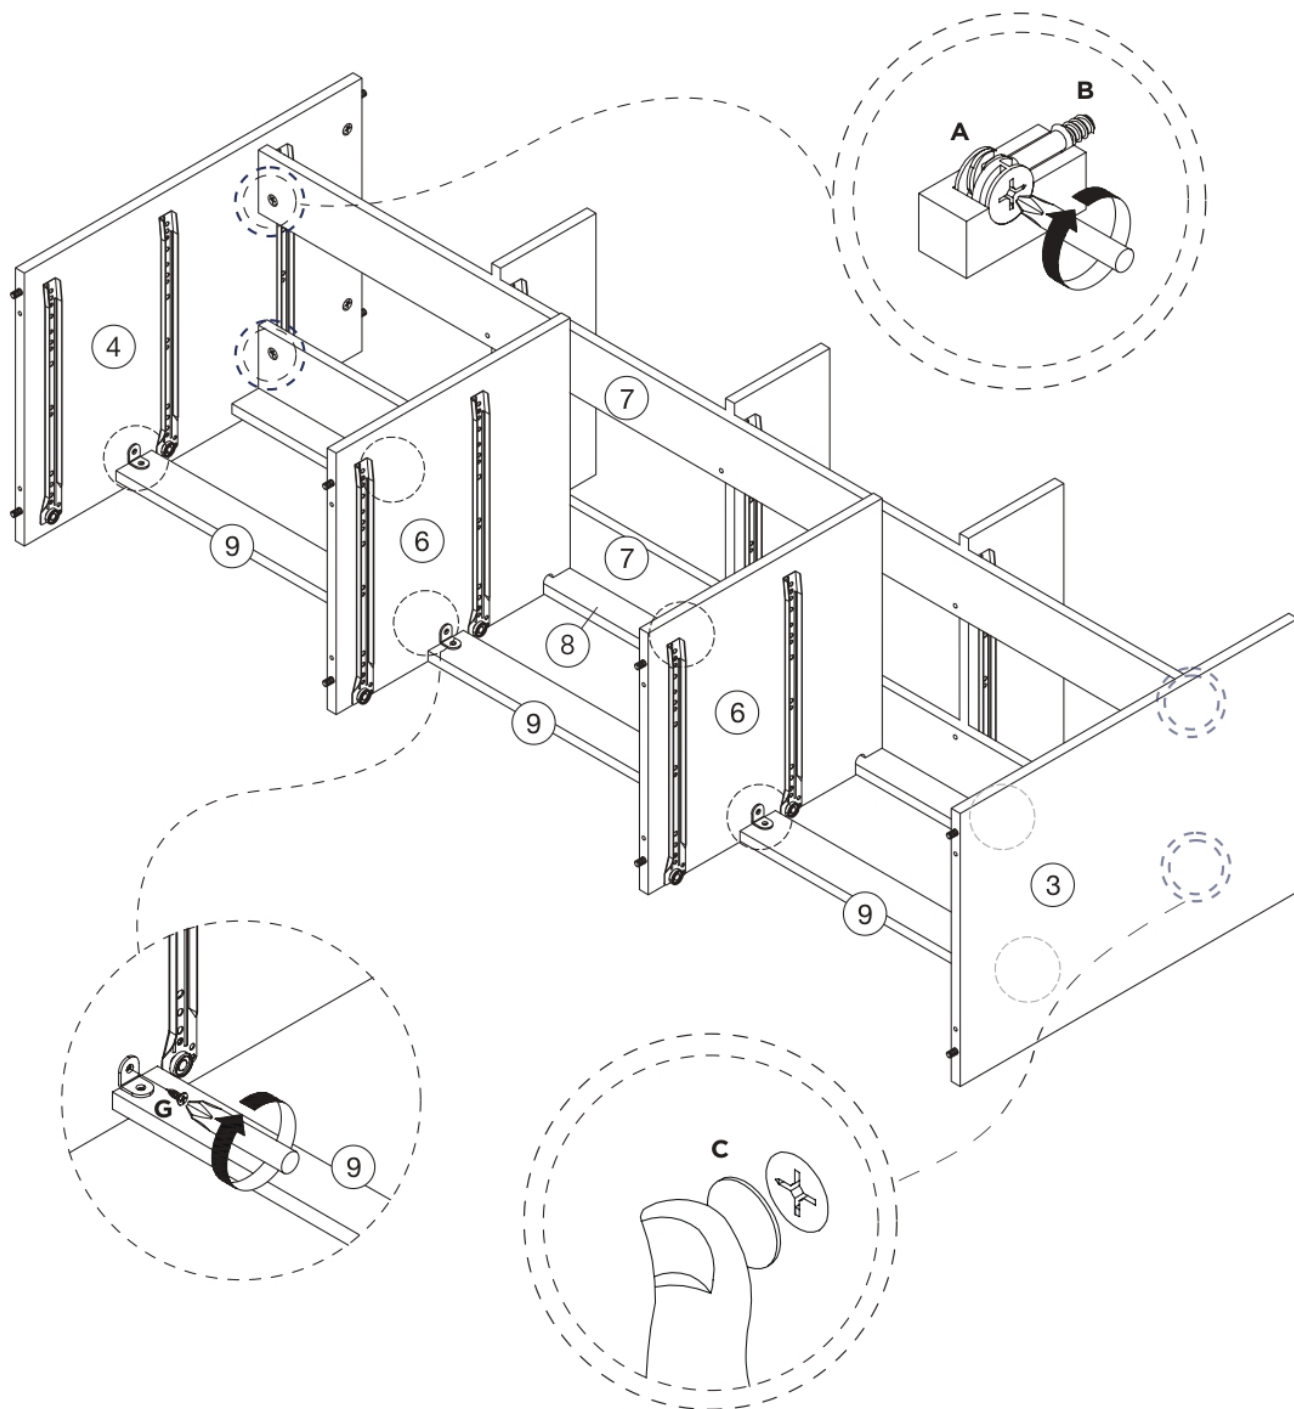


ASSEMBLY INSTRUCTIONS

STEP 9

Connect part 1 to parts 3, 4 and 5, as shown. Turn cam locks clockwise to tighten.


 
 
Insert covers (C) into cam locks of parts 3, 4 and 5.

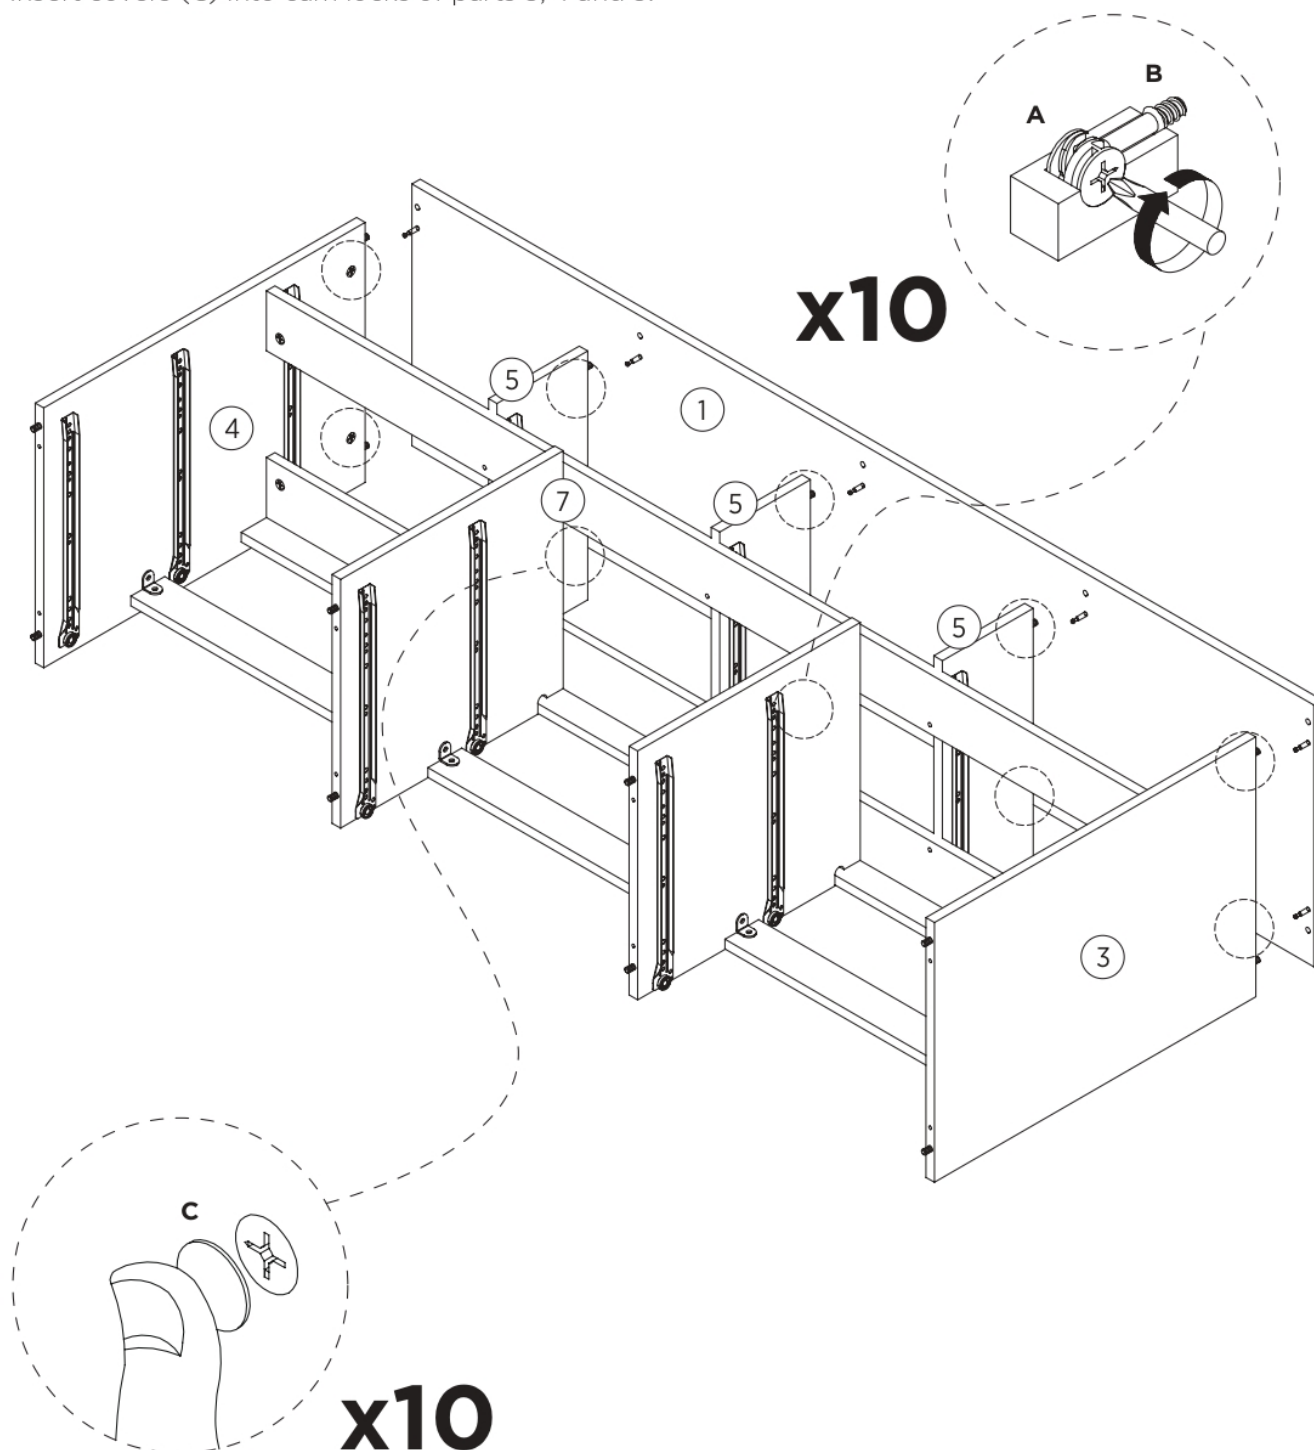

ASSEMBLY INSTRUCTIONS

STEP 10

   
Fix part 2 to parts 3, 4 and 6 using screws (E) and allen key (F), as shown.

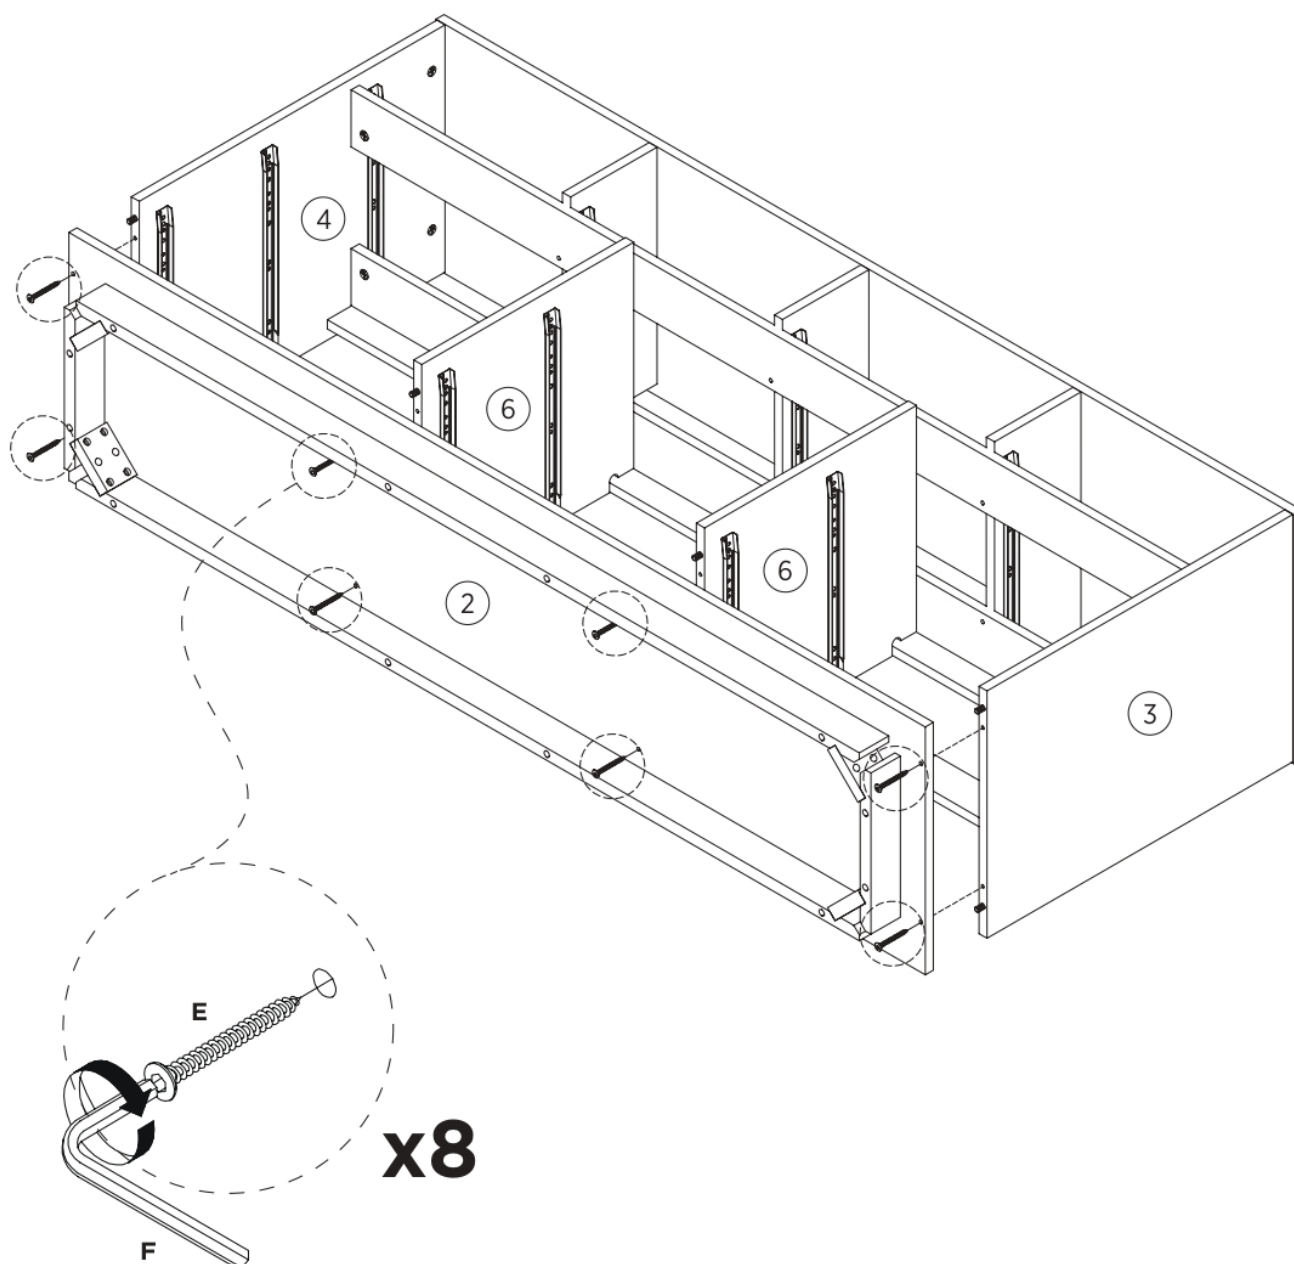

ASSEMBLY INSTRUCTIONS

STEP 11

 Fix parts 10 to the assembled unit using nails (J), as shown.

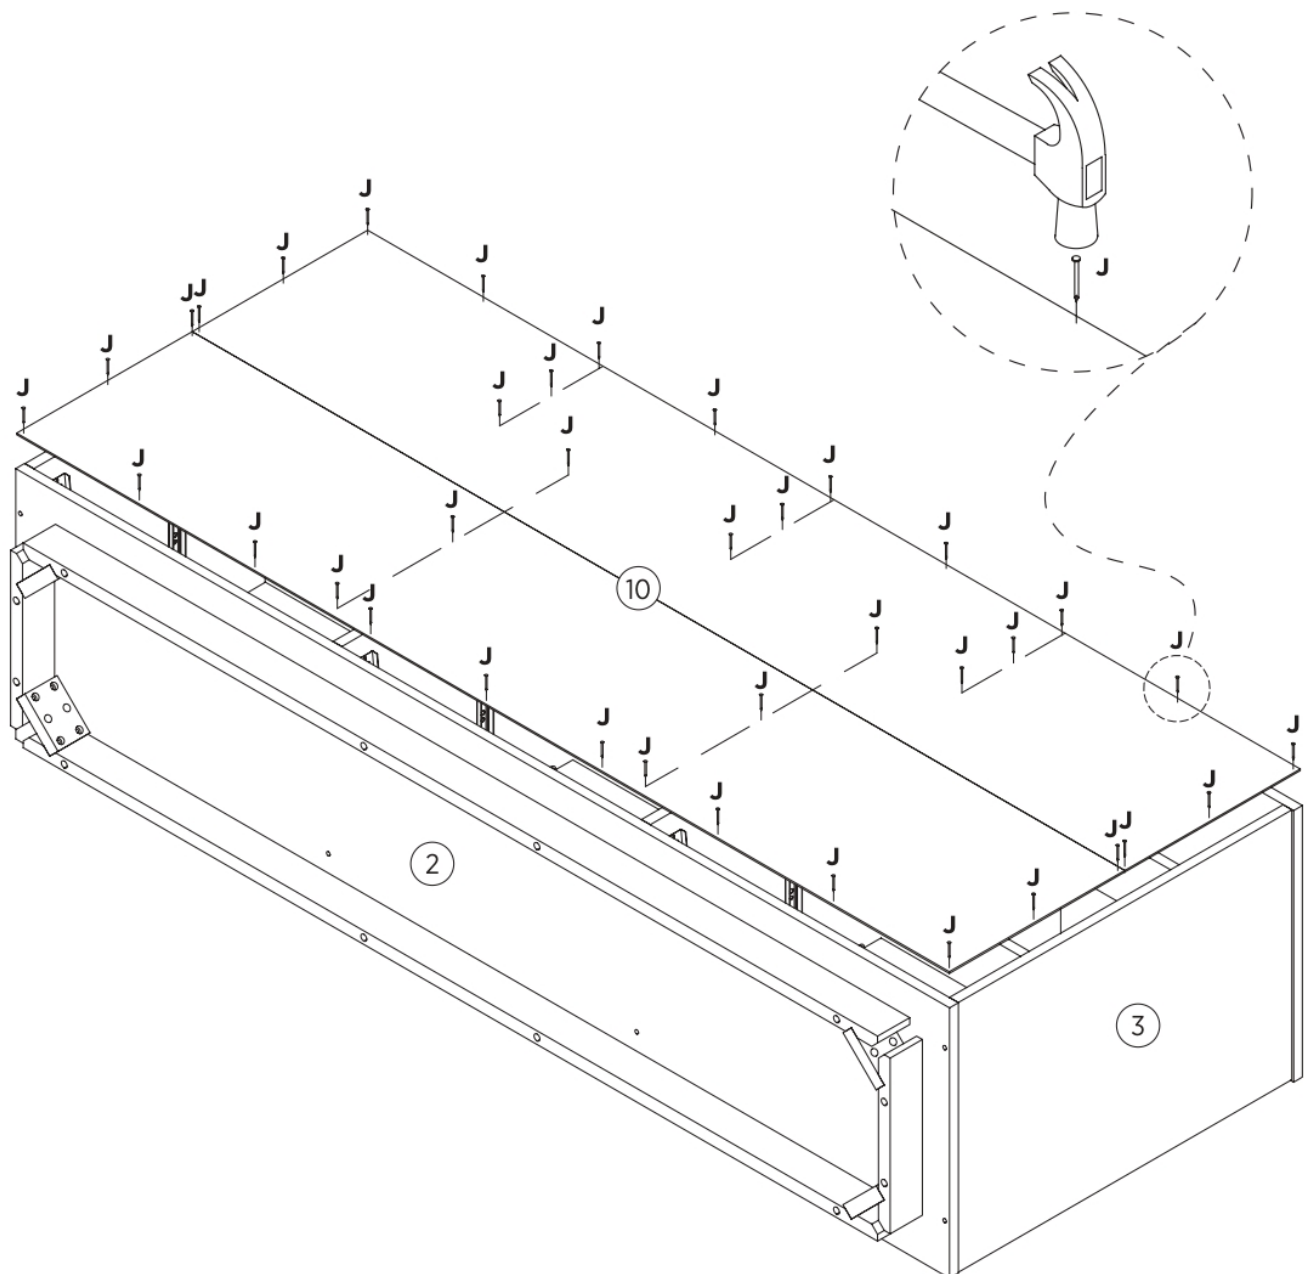

ASSEMBLY INSTRUCTIONS

STEP 12

Fix legs 23 to parts 2 using screw (L) spring washer (M), flat washer (N) and allen key (F).



F x 1



 
L x 8



M x 8



N x 8

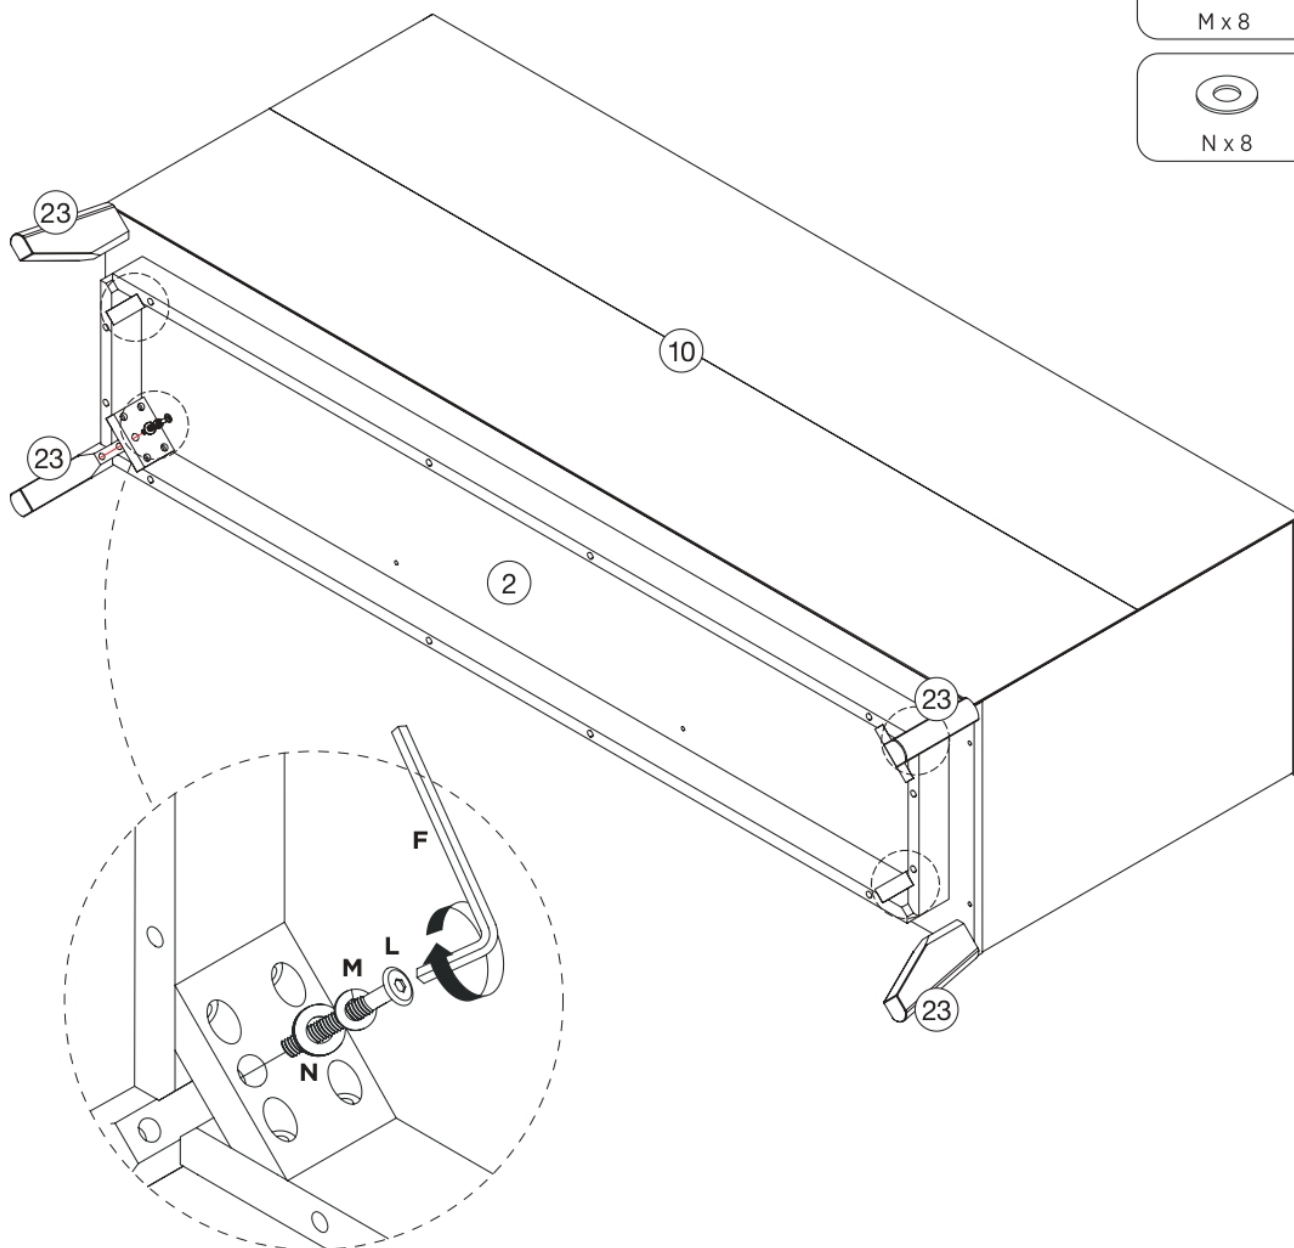


ASSEMBLY INSTRUCTIONS

STEP 13

Fix parts 18 and 20 to parts 11/12/13/14 using screws (I), as shown.

 Repeat this step 4 times.


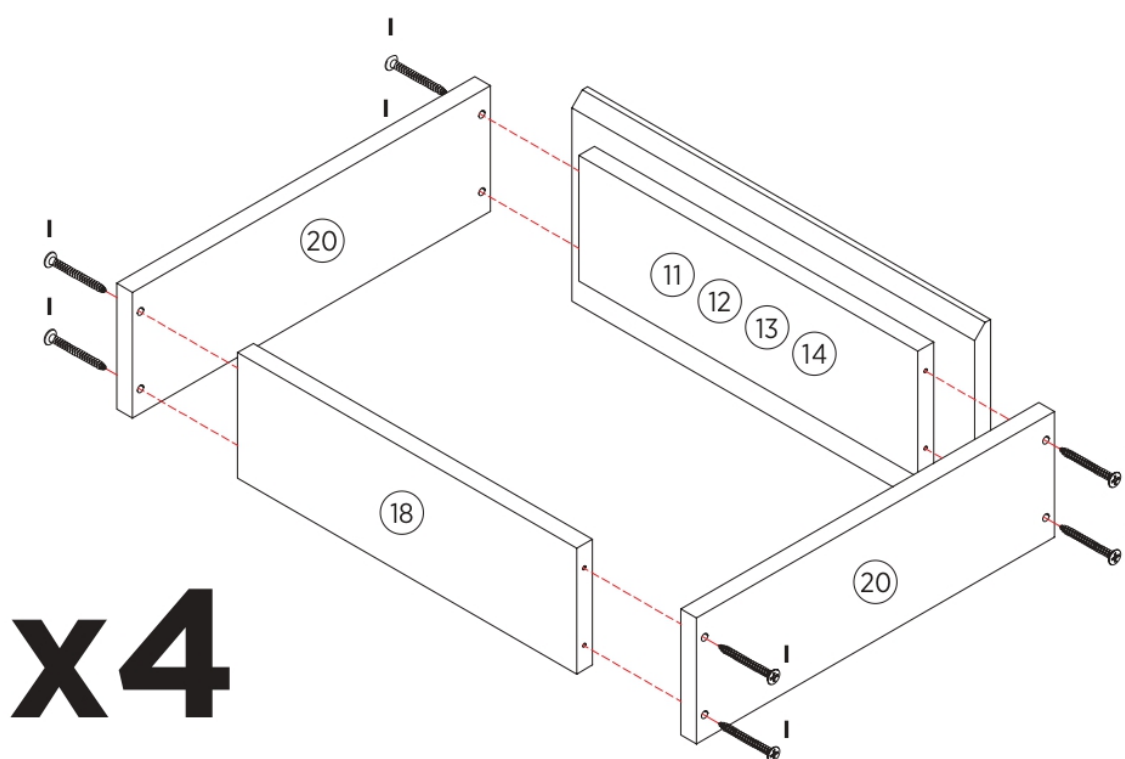


ASSEMBLY INSTRUCTIONS

STEP 14

Fix parts 19 and 20 to parts 15/16/17 using screws (I), as shown.

  Repeat this step 6 times.

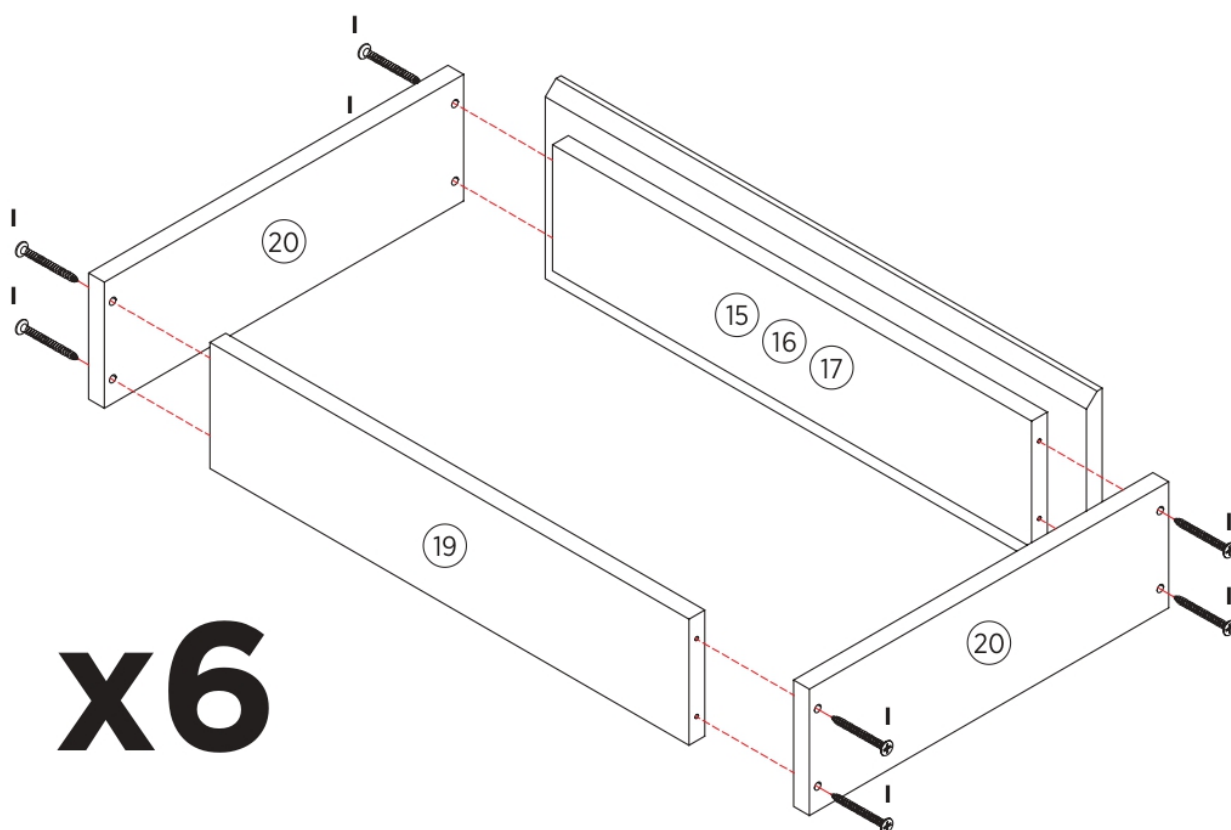



ASSEMBLY INSTRUCTIONS

STEP 15

Fix part 21 onto assembled unit using nails (J), as shown.

  Repeat this step 4 times.

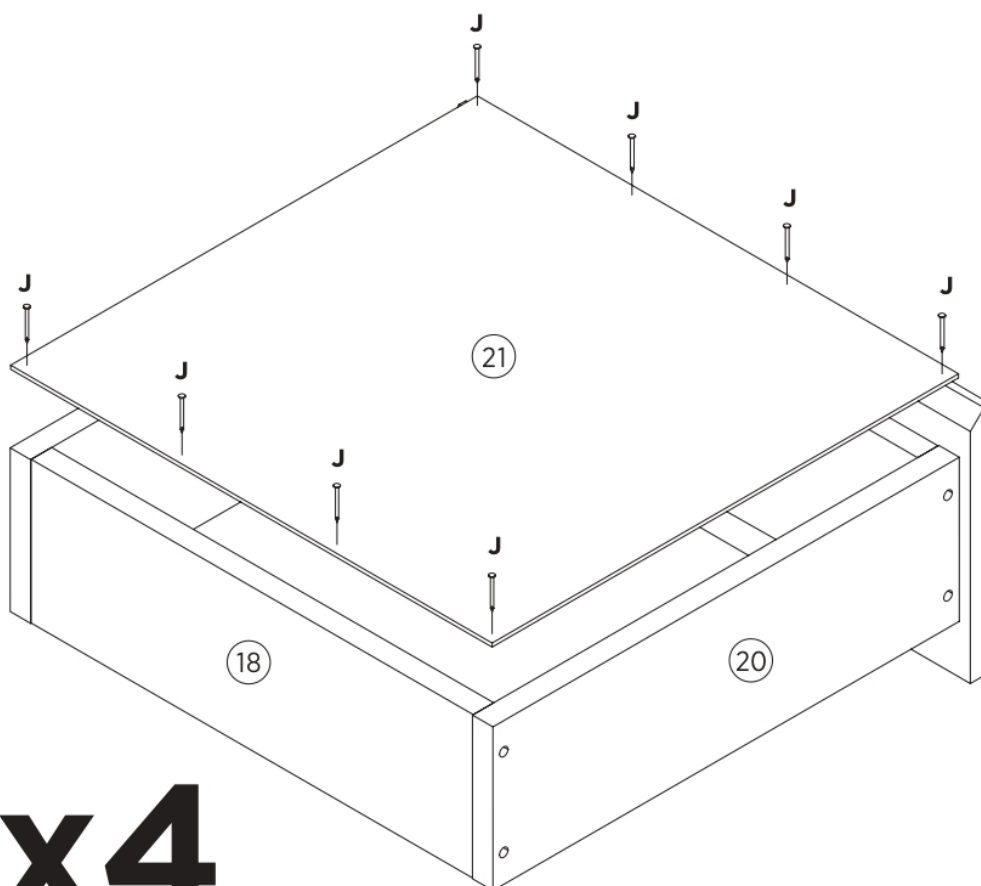



x4

ASSEMBLY INSTRUCTIONS

STEP 16

Fix part 22 onto assembled unit using nails (J), as shown.

  Repeat this step 6 times.

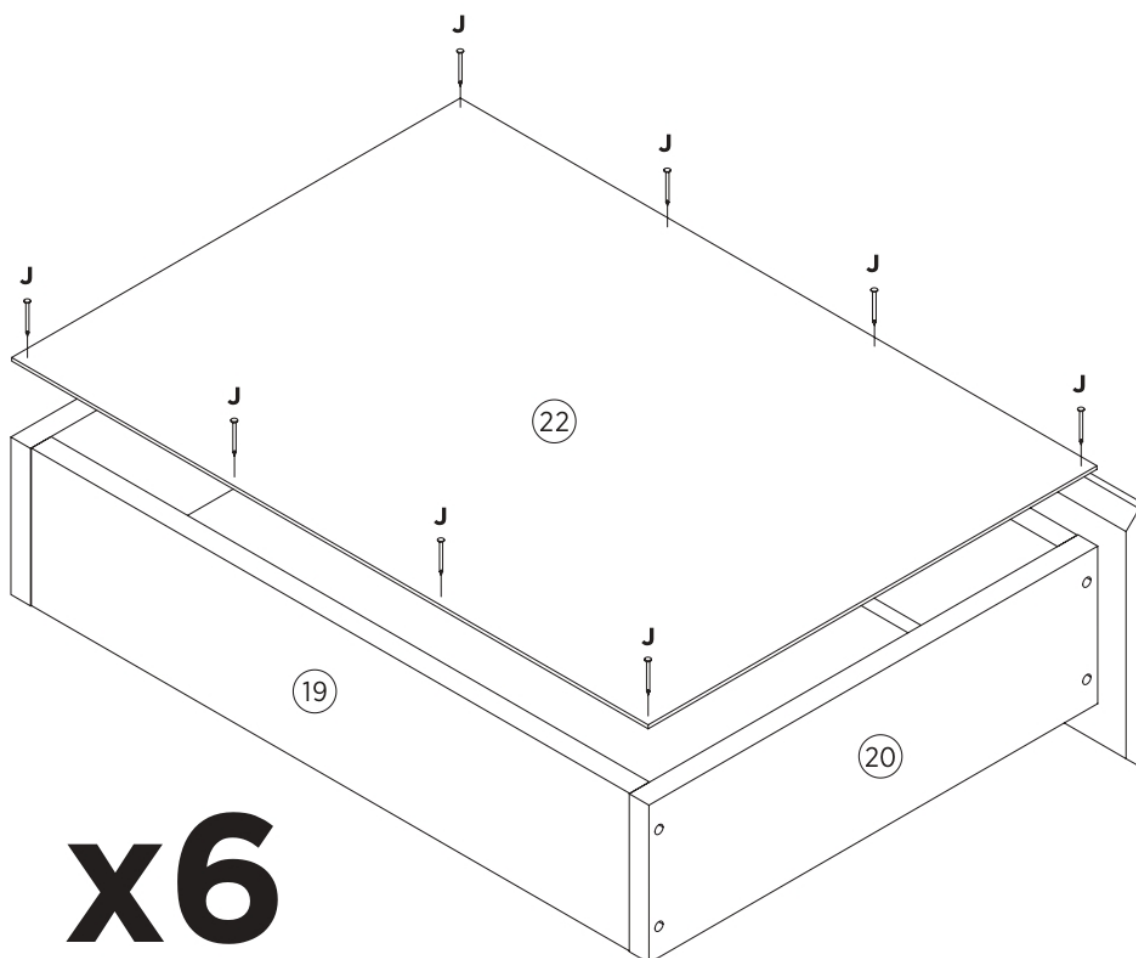

ASSEMBLY INSTRUCTIONS

STEP 17

Fix inner drawer runners (P) onto assembled drawers using screws (H), as shown.

 
Repeat this step 4 times.



H x 24



P x 8

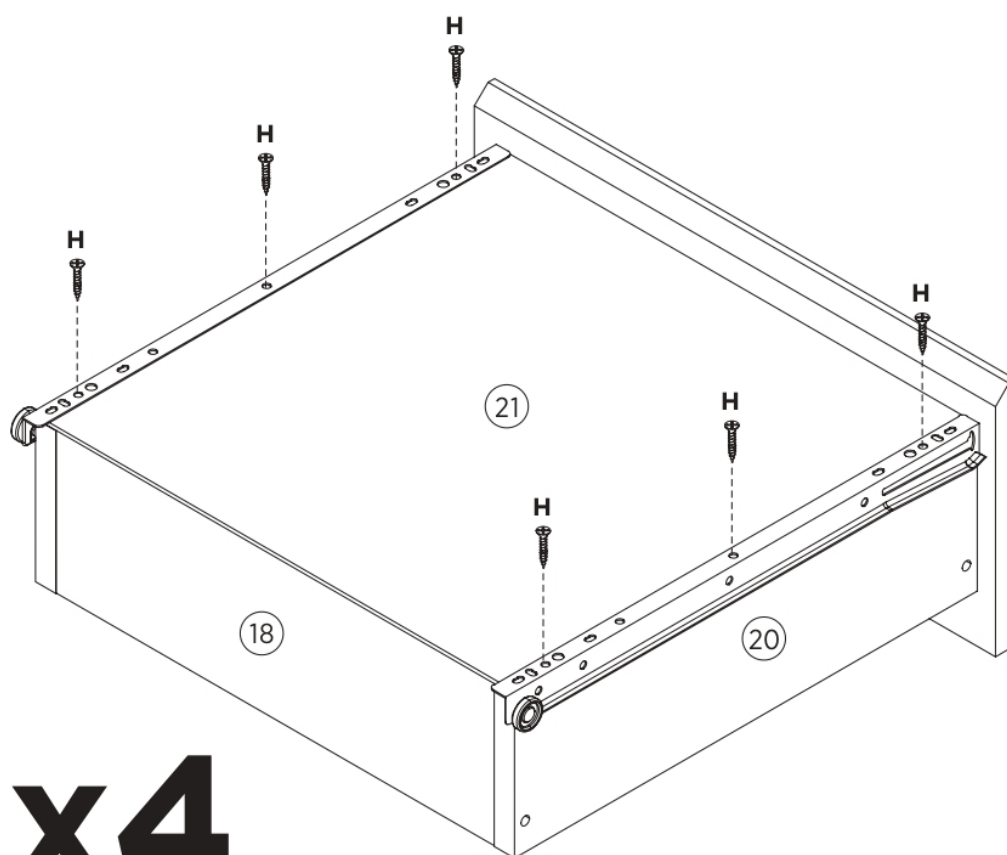

x4

ASSEMBLY INSTRUCTIONS

STEP 18

Fix inner drawer runners (P) onto assembled drawers using screws (H), as shown.

 
Repeat this step 6 times.



H x 36




P x 12

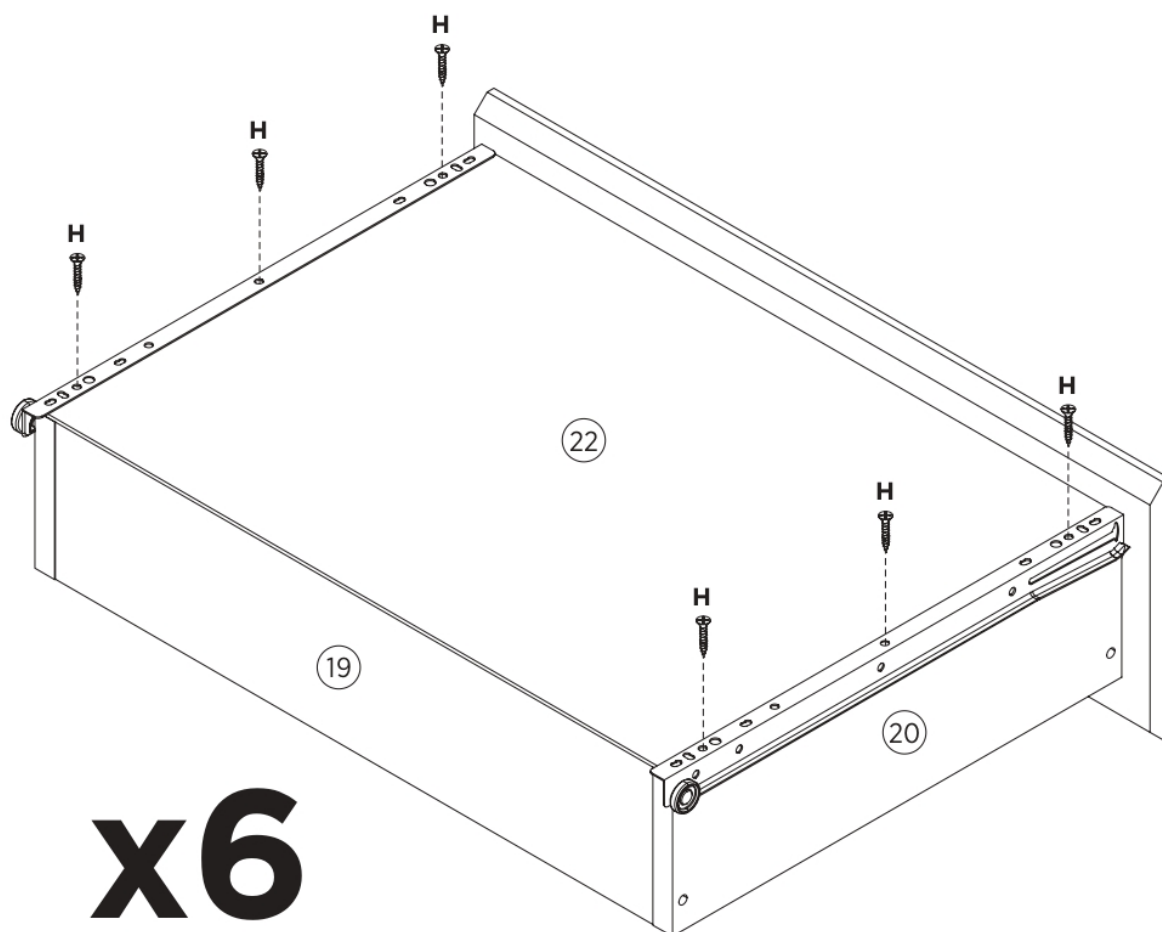

ASSEMBLY INSTRUCTIONS

STEP 19

 
Insert drawers into assembled unit, as shown.

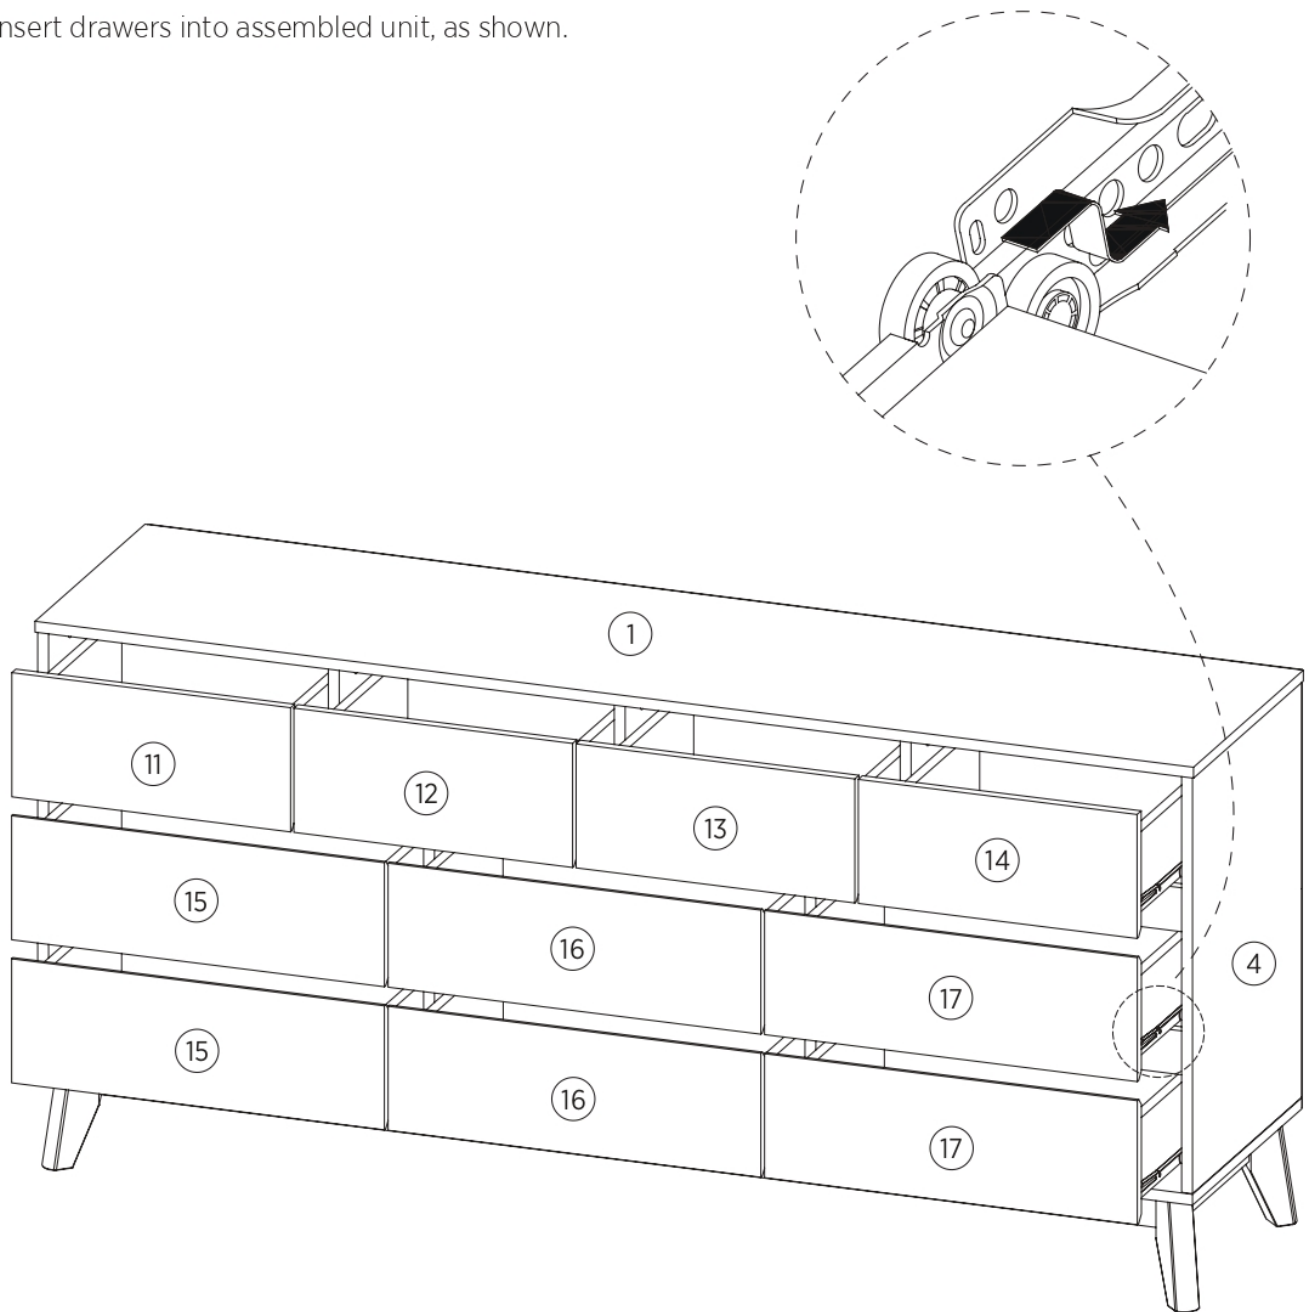

ASSEMBLY INSTRUCTIONS

STEP 20

 
Fix wall support (Q) to parts 10 using screws (R), as shown.



Q x 2



 R x 2

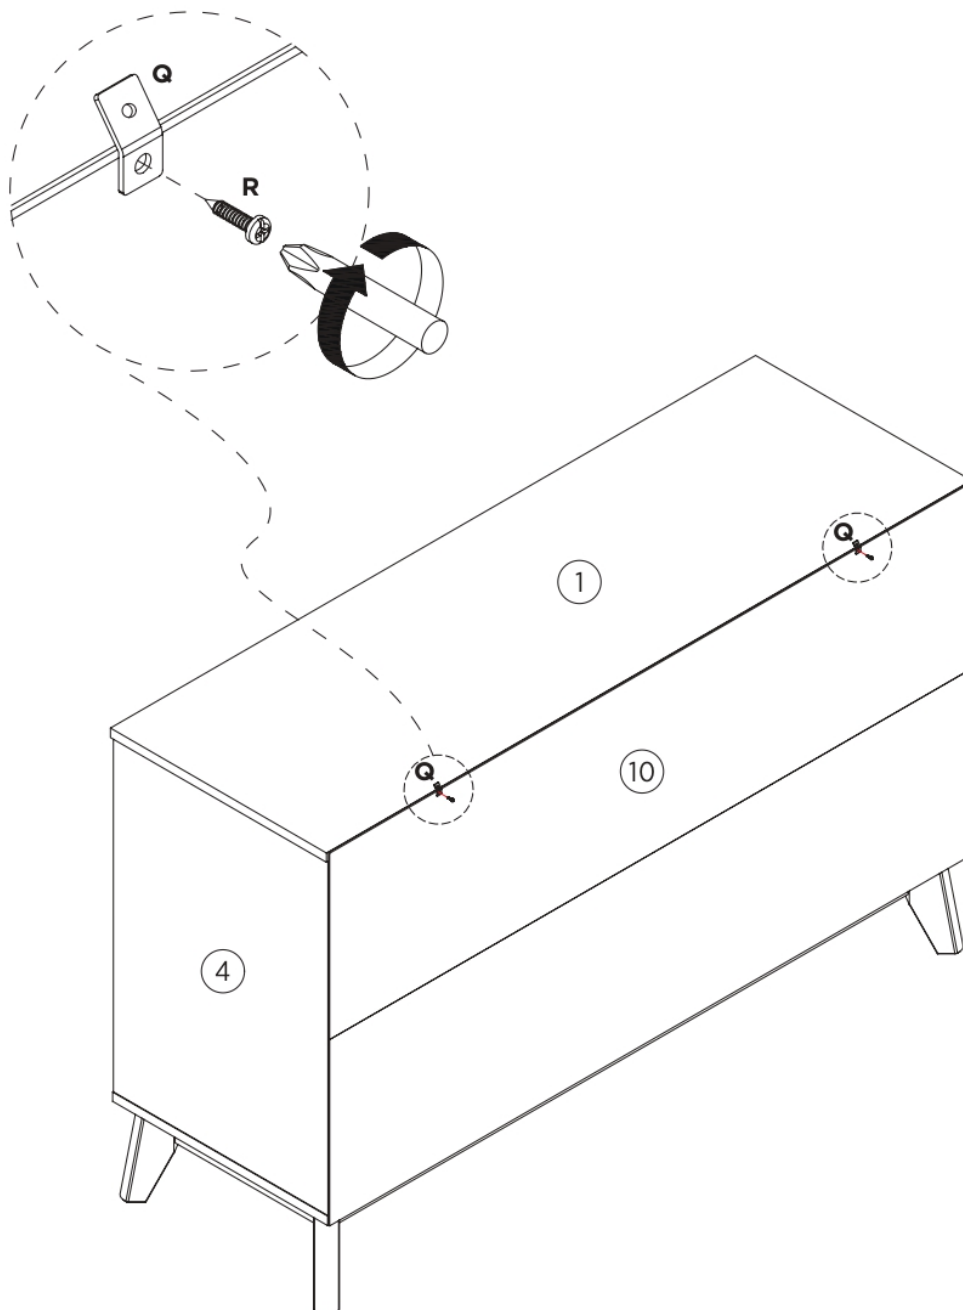




ASSEMBLY INSTRUCTIONS

STEP 21

For extra stability, you must fix your cabinet to the wall using the additional hardware (Q), (S) and (U) as shown.

Should you choose not to affix the product to the wall, serious injury.

  
 
Please consider the wall mounting & fixing guide when securing your chest.

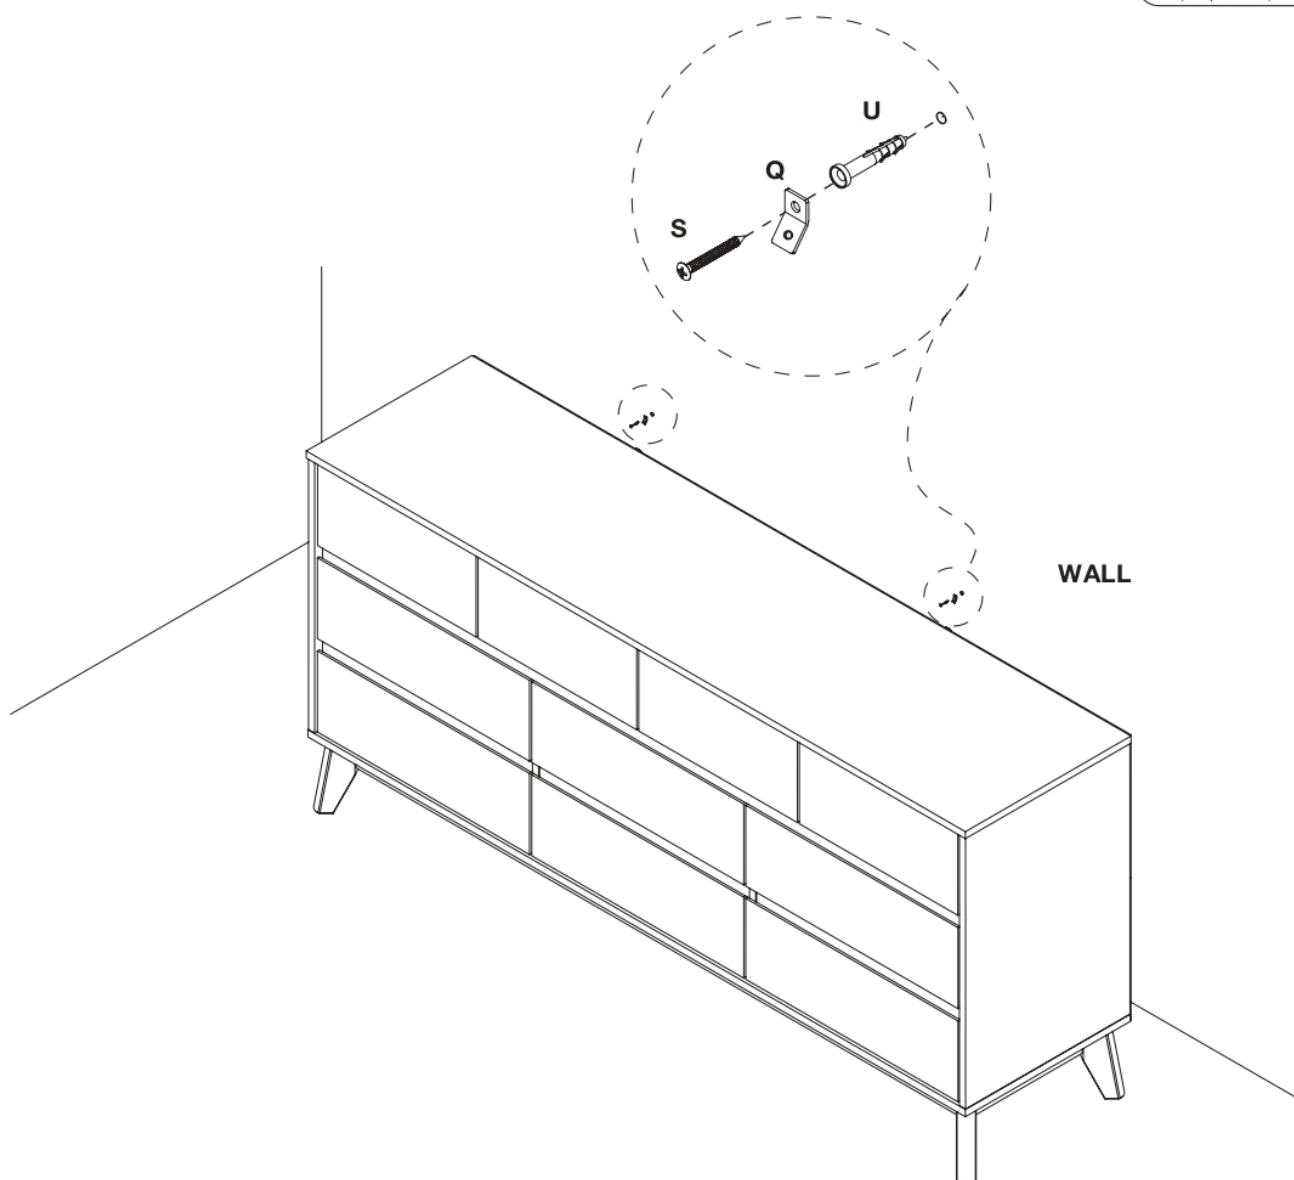

ASSEMBLY INSTRUCTIONS


STEP 22

  Tighten cable ties (T) to the wall supports as shown.

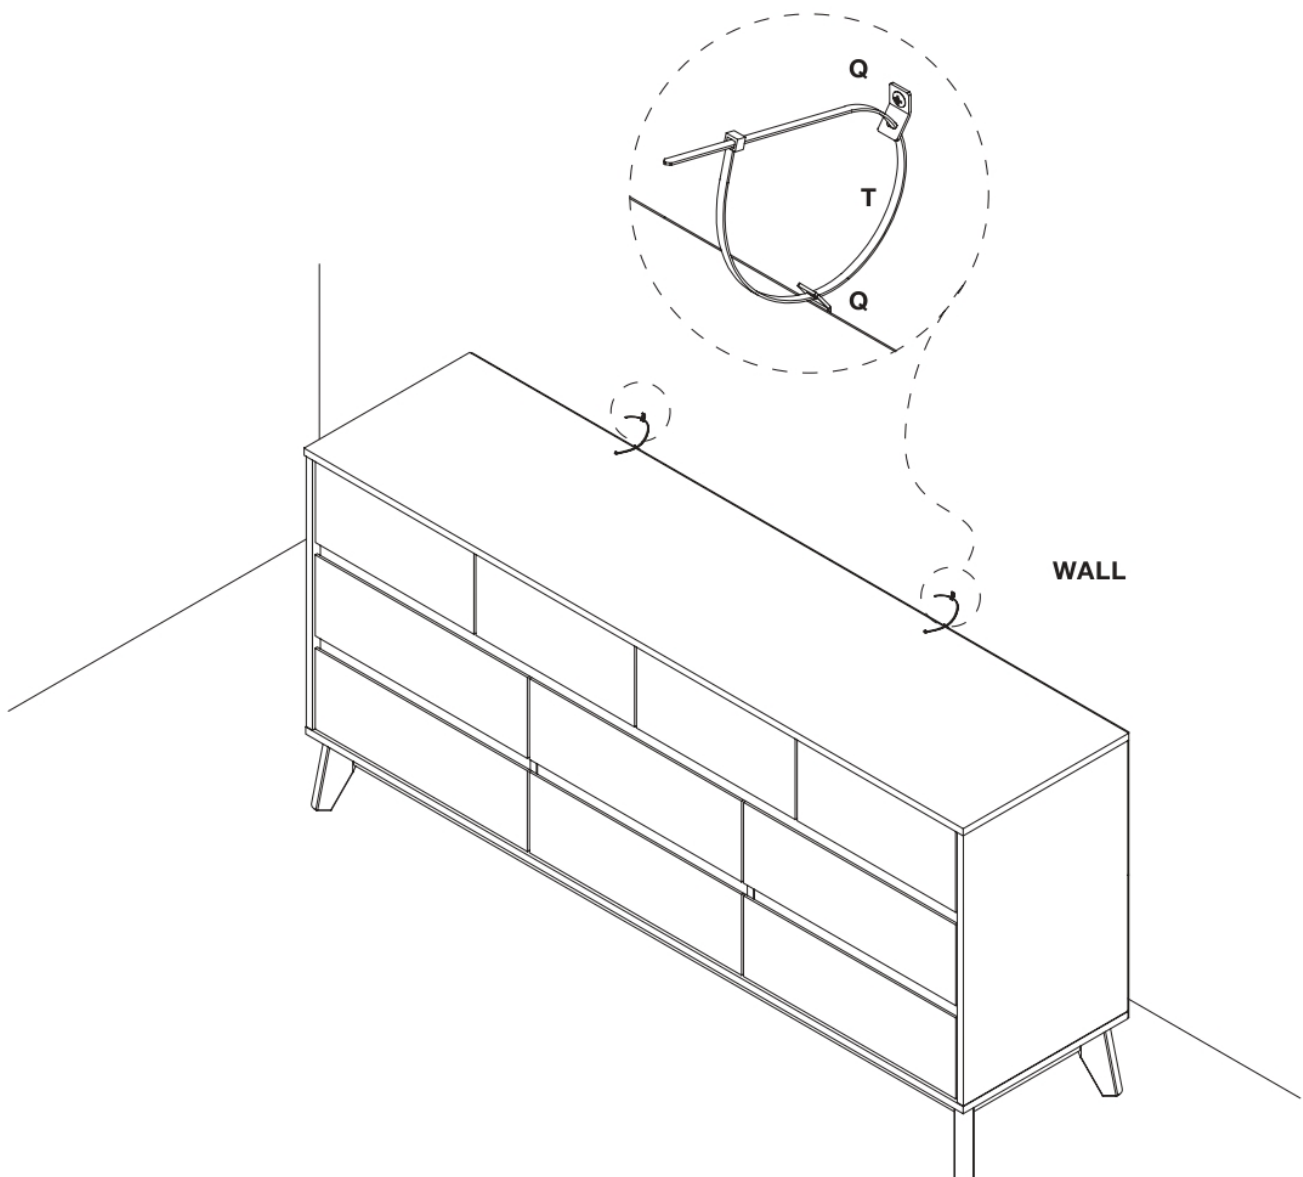

ASSEMBLY INSTRUCTIONS

 STEP 23

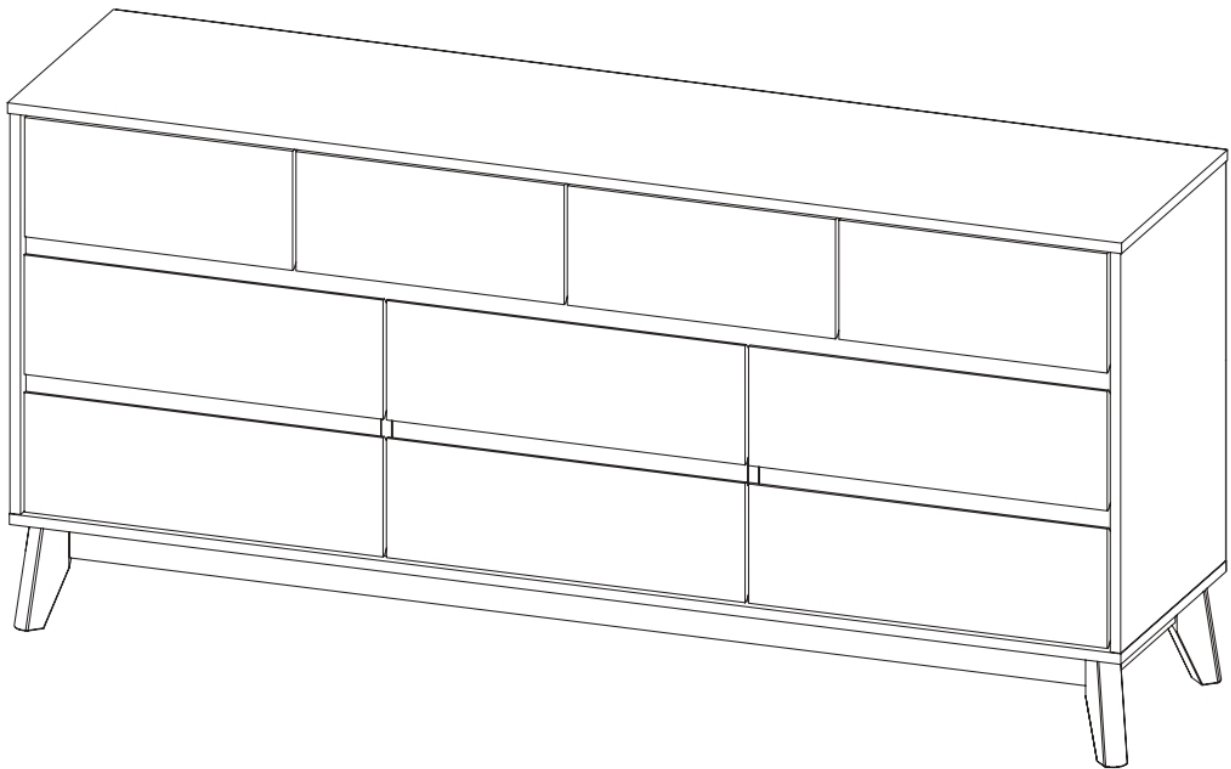

Please note: the maximum recommended weight is 10kg for top and 5kg for drawer.

Your chest of drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

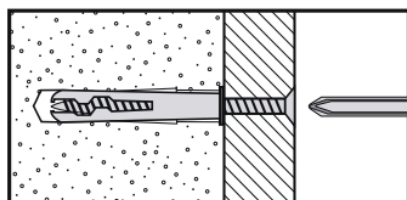


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

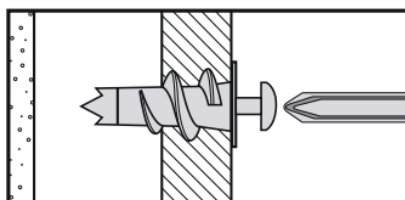


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

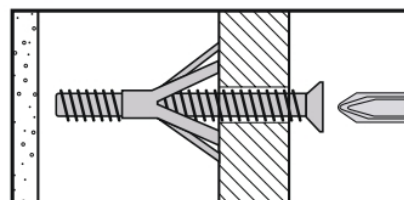


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

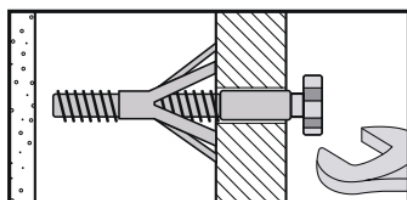


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

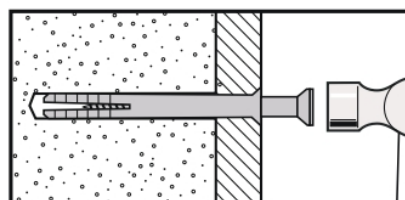

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

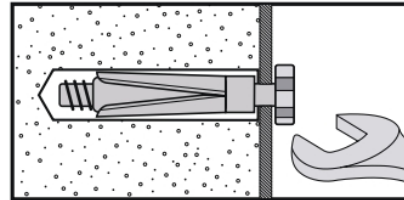

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.