 


Desk

2.0hrs

APPROXIMATE ASSEMBLY TIME

 
2 PERSON ASSEMBLY

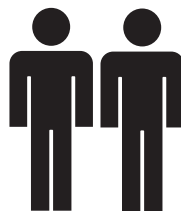


FLOOR AREA
2M x 2M




REQUIRED ASSEMBLY SPACE




PHILLIPS SCREWDRIVER

 

FLAT HEAD SCREWDRIVER

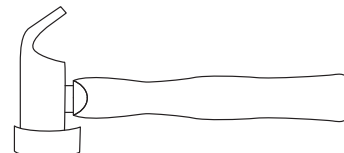 

HAMMER

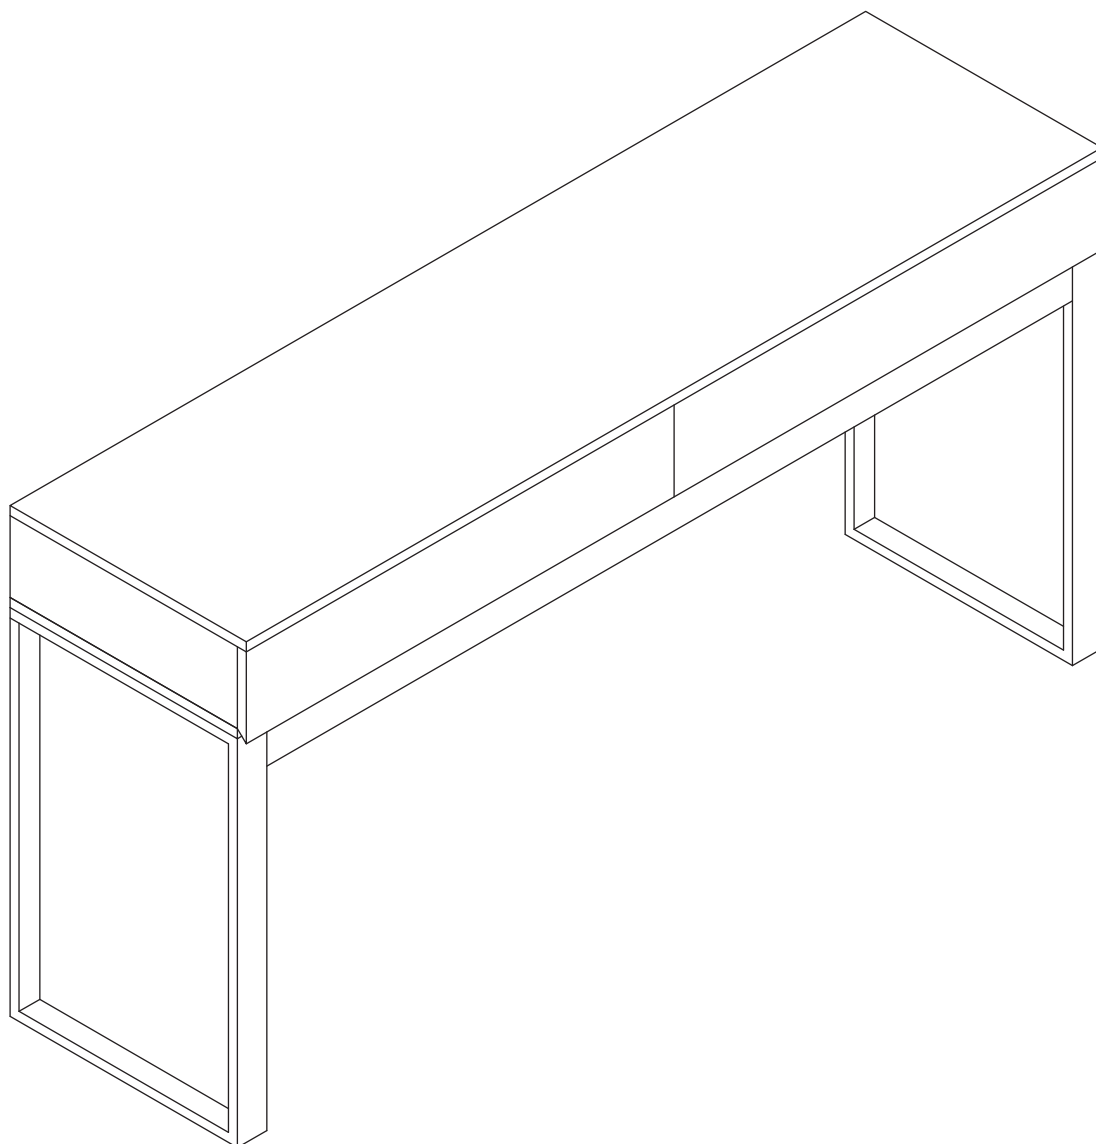 

Desk

Tips before you start:

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

Care and Maintenance of your Furniture

- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☒ Please do not drag and pull your furniture.


Desk

QUICKFIT

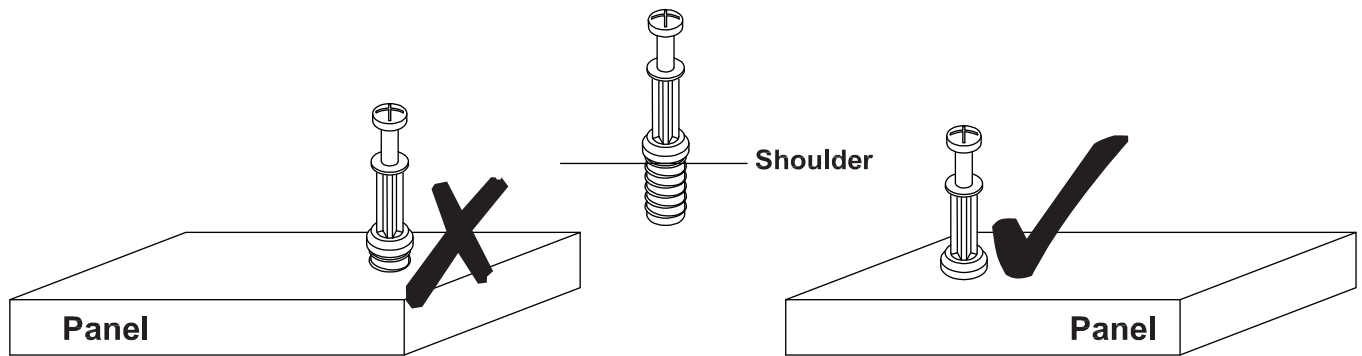

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

 
CAM LOCK

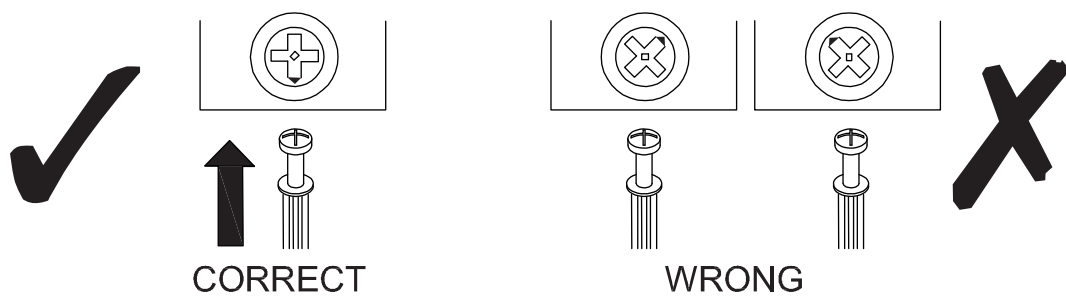

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

 
Cam lock should be inserted before quickfit.

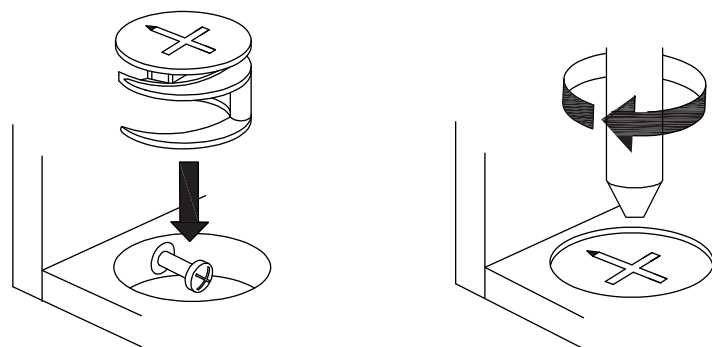


Turn cam lock clockwise to tighten.

Desk

 HARDWARE LIST




6 x A
Screw

 


16 x B
Quickfit
Screw



 
16 x C
Cam Lock




24 x D
Screw

 


2 x E
Outside Drawer
Runner

 


2 x E1
Inside Drawer
Runner

 


2 x E2
Inside Drawer
Runner

 


2 x E3
Outside Drawer
Runner

 

8 x F
Bolt

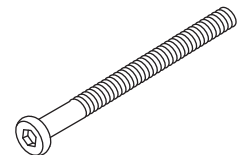 


8 x G
Bolt

 


20 x H
Nail



 
11 x I
Screw




4 x J
Pad

 


1 x K
Screw

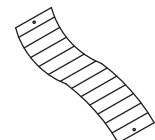 

1 x L
Wall Strap

 


1 x M
Wall Plug

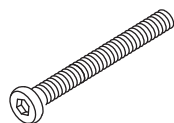 

4 x N
Bolt



 12 x O
Wooden
Dowel






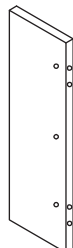
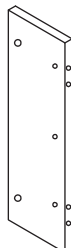
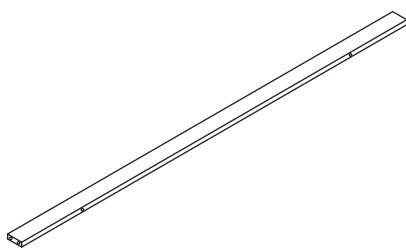
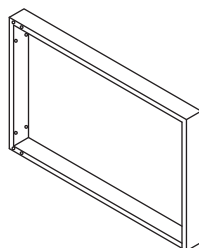
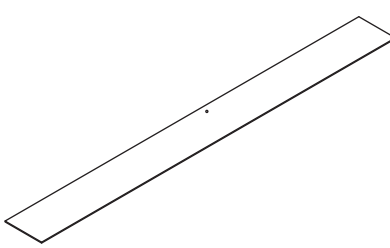
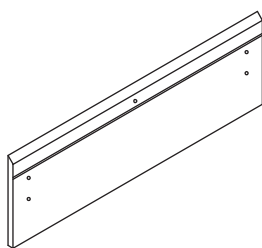
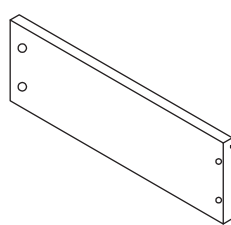
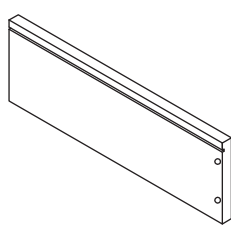
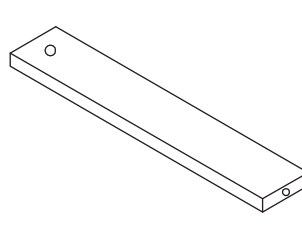
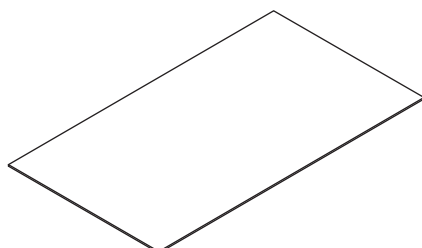
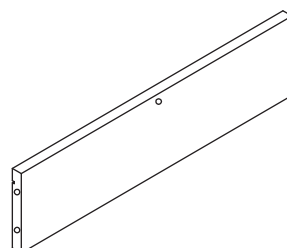
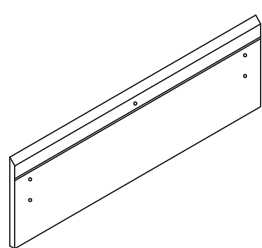
1 x P
Allen Key



2 x Q
Washer

Desk


PARTS LIST

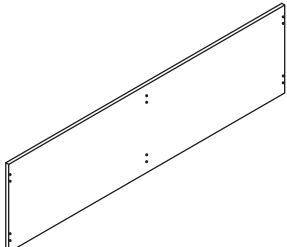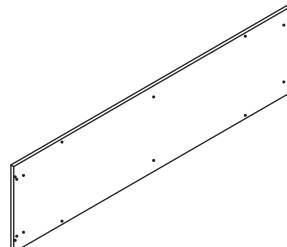					
1	1 PC	2	1 PC	3	1 PC
					
4	1 PC	5	1 PC	6	2 PCS
					
7	2 PCS	8	1 PC	9	1 PC
					
10	2 PCS	11	2 PCS	12	2 PCS
					
13	2 PCS	14	2 PCS	15	1 PC

Desk


STEP 1

 Insert quickfit screws (B) into part 1, as shown.

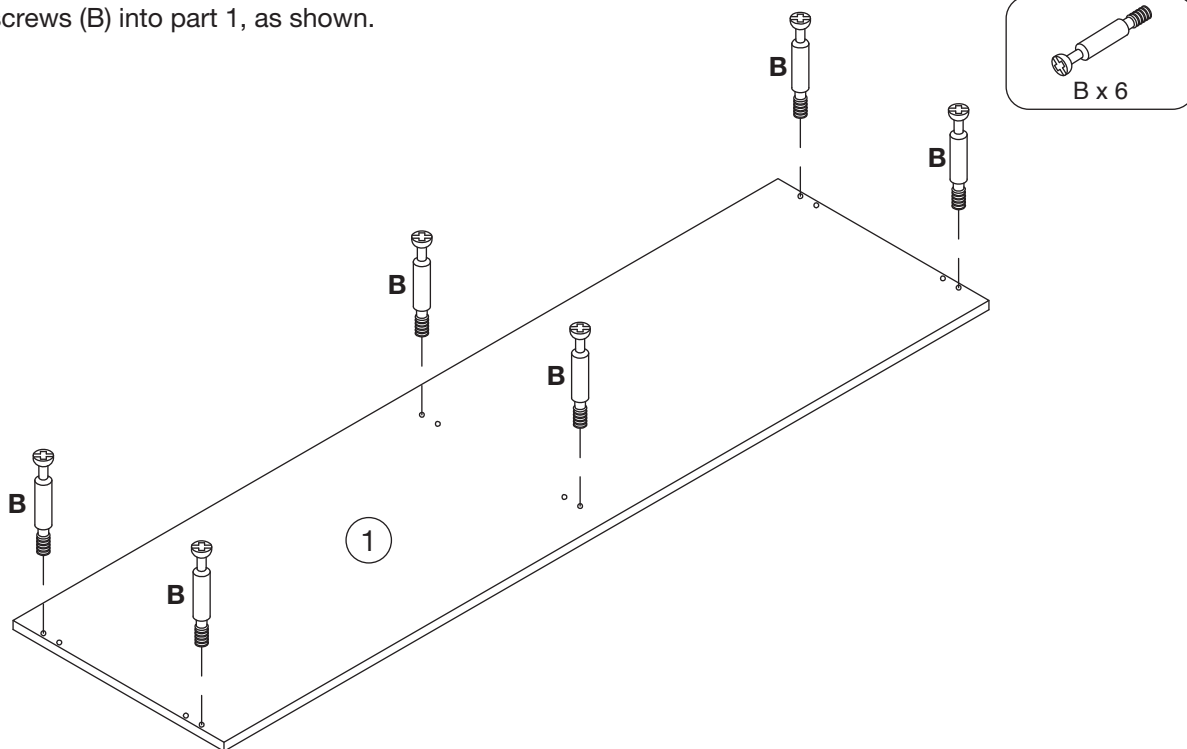

STEP 2

 
Fix outside drawer runner (E) to part 3 using screws (D), as shown.

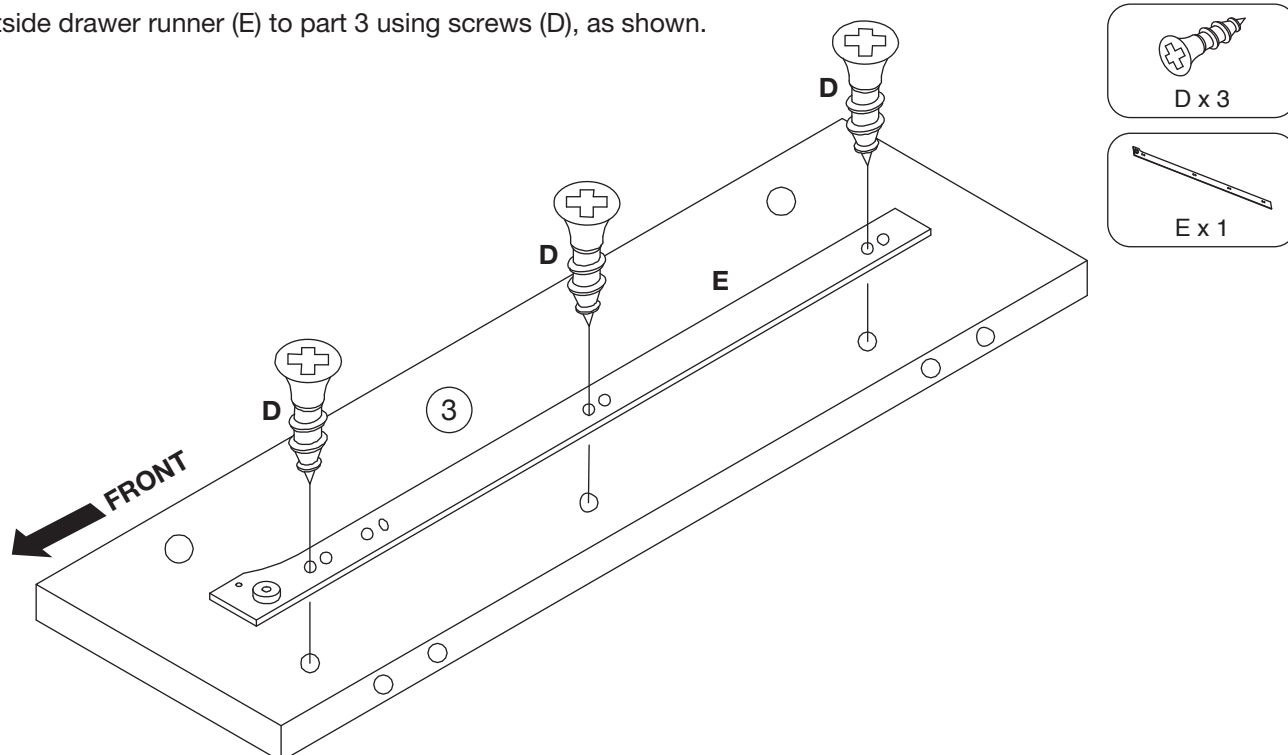


Desk

STEP 3

 Fix outside drawer runners (E) and (E3) to part 4 using screws (D), as shown.

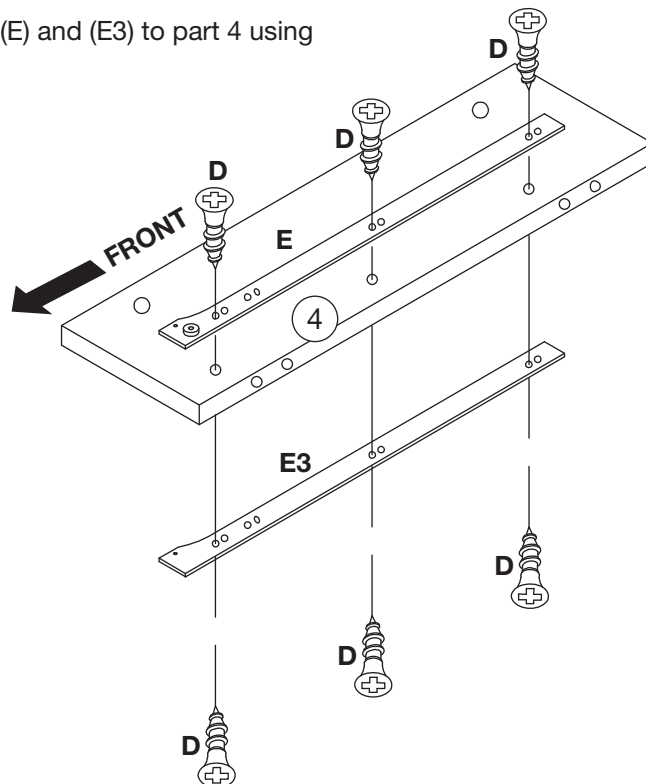

D x 6

 


E x 1



E3 x 1

STEP 4

 Fix outside drawer runners (E3) to part 5 using screws (D), as shown.

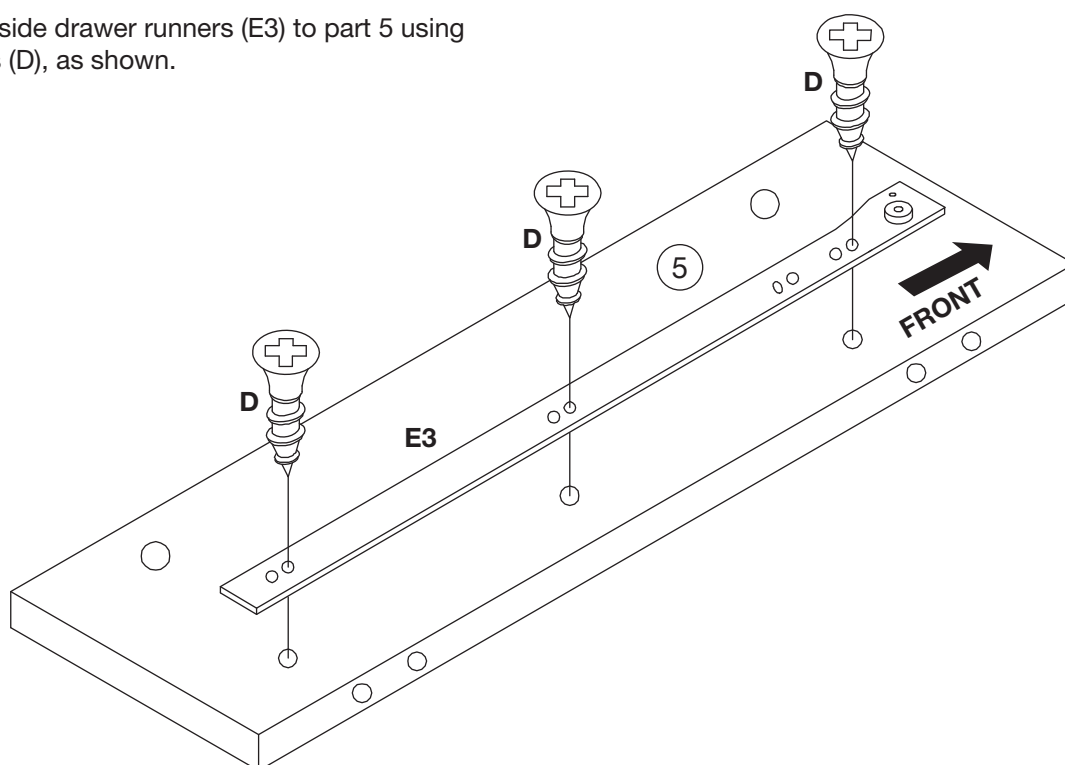

D x 3



E3 x 1

Desk

 
STEP 5

Insert cam locks (C) and wooden dowels (O) into parts 3, 4 and 5, as shown.

Fix part 2 to parts 3, 4 and 5 using screws (A).

Fix part 1 to parts 3, 4 and 5.

Turn cam locks clockwise to tighten.




A x 6



C x 6





 
O x 12

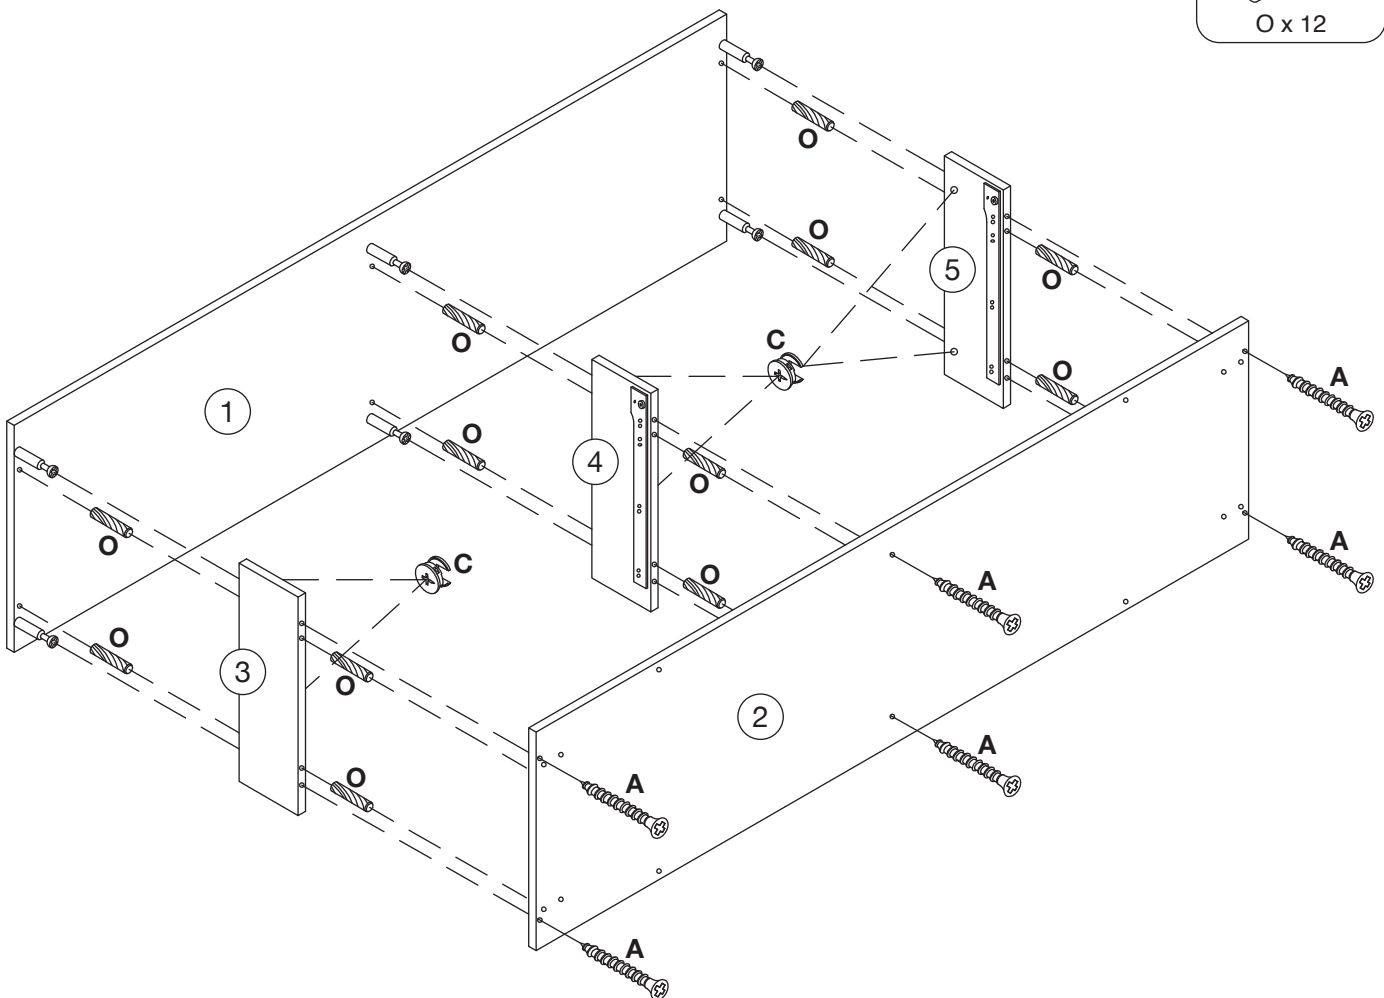

Desk

STEP 6

   Fix parts 7 to parts 6 using bolts (G) and allen key (P), as shown.

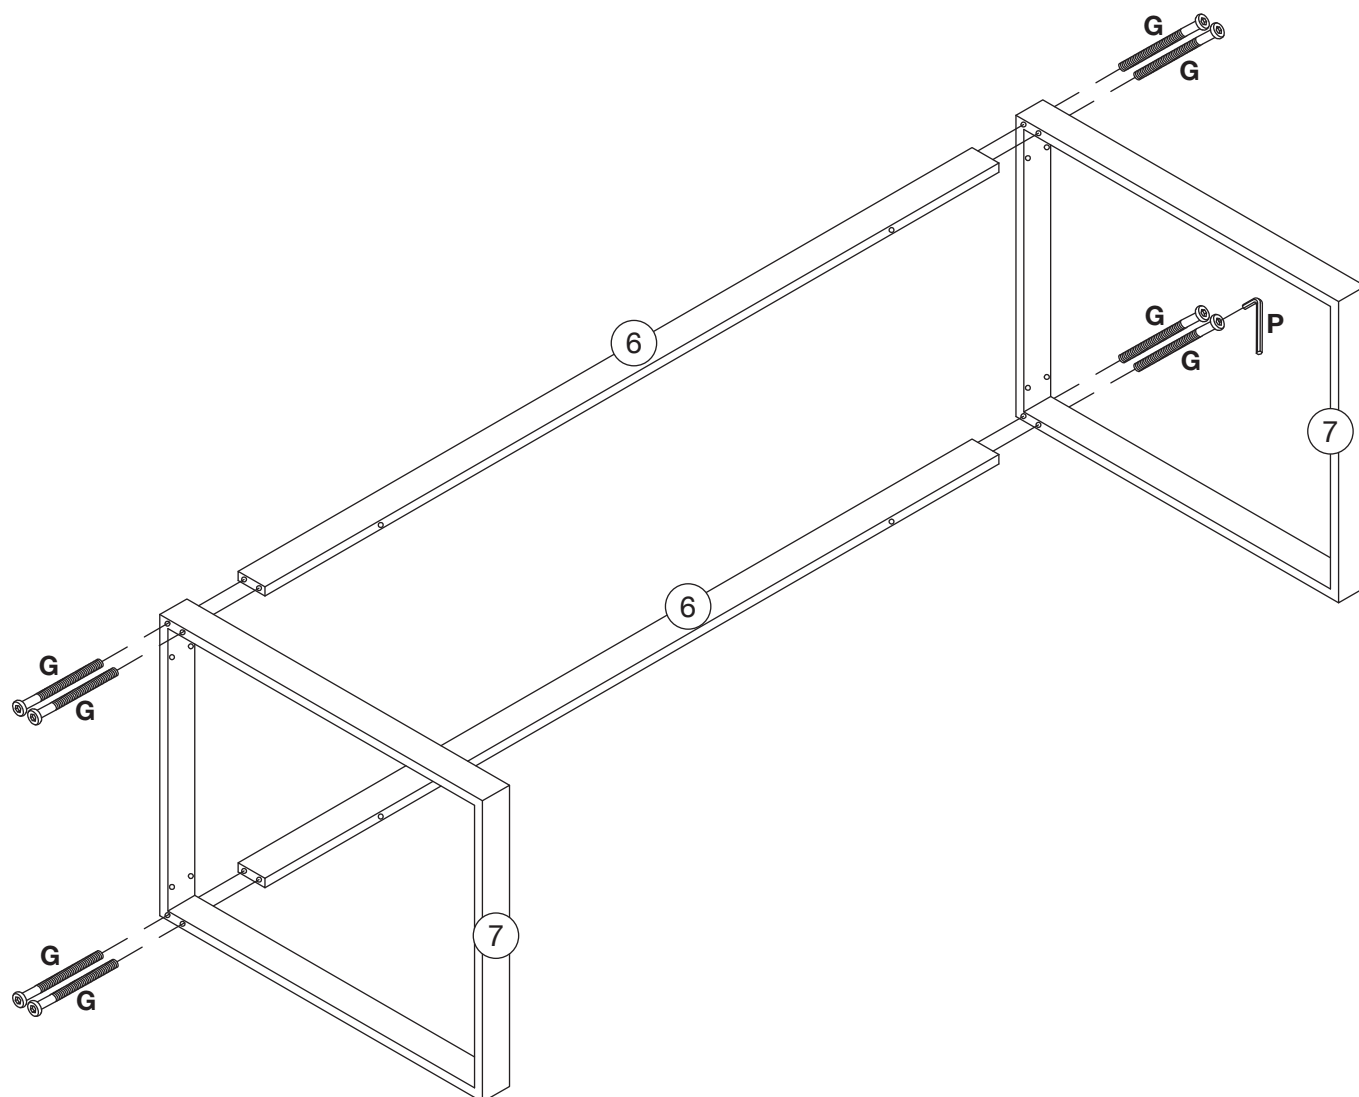

Desk

STEP 7

 
 
Fix back panel 8 to rear of unit using nails (H), as shown.

Fix wall strap (L) to assembled unit using screw (K) and washer (Q).

Fix parts 6 to part 2 using bolts (N) and allen key (P).

Fix parts 7 to part 2 using bolts (F) and allen key (P).

Stick pads (J) onto parts 7.

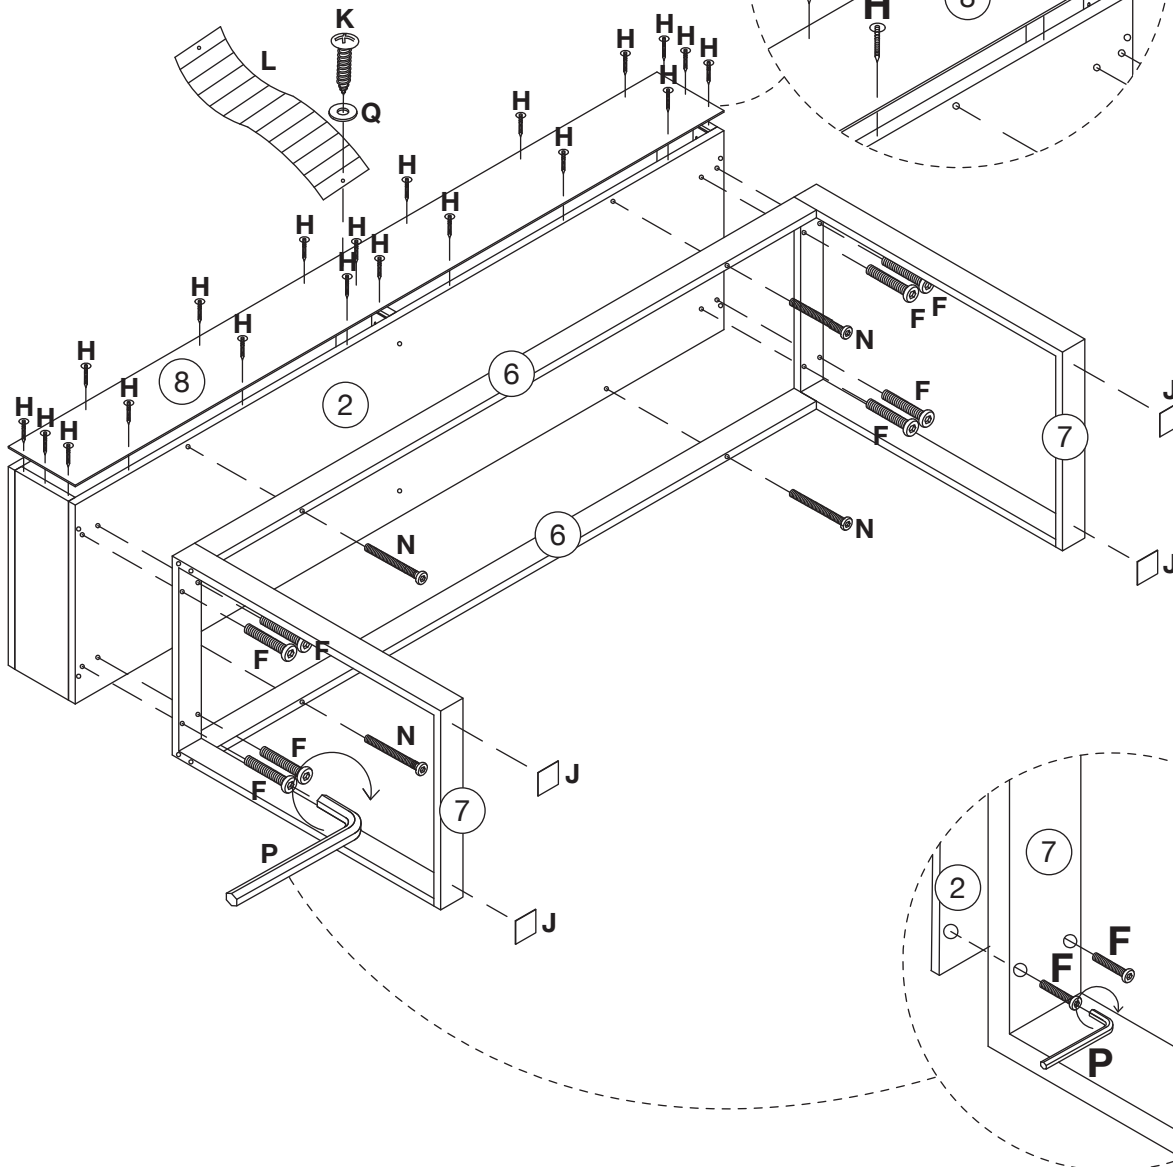

Desk

STEP 8

 
Insert quickfit screws (B) into part 9 and 15, as shown.

Insert cam locks (C) into parts 10, 11 and 12.

Fix parts 10, 11 and 12 to parts 9 and 15.

Turn cam locks clockwise to tighten.


x2

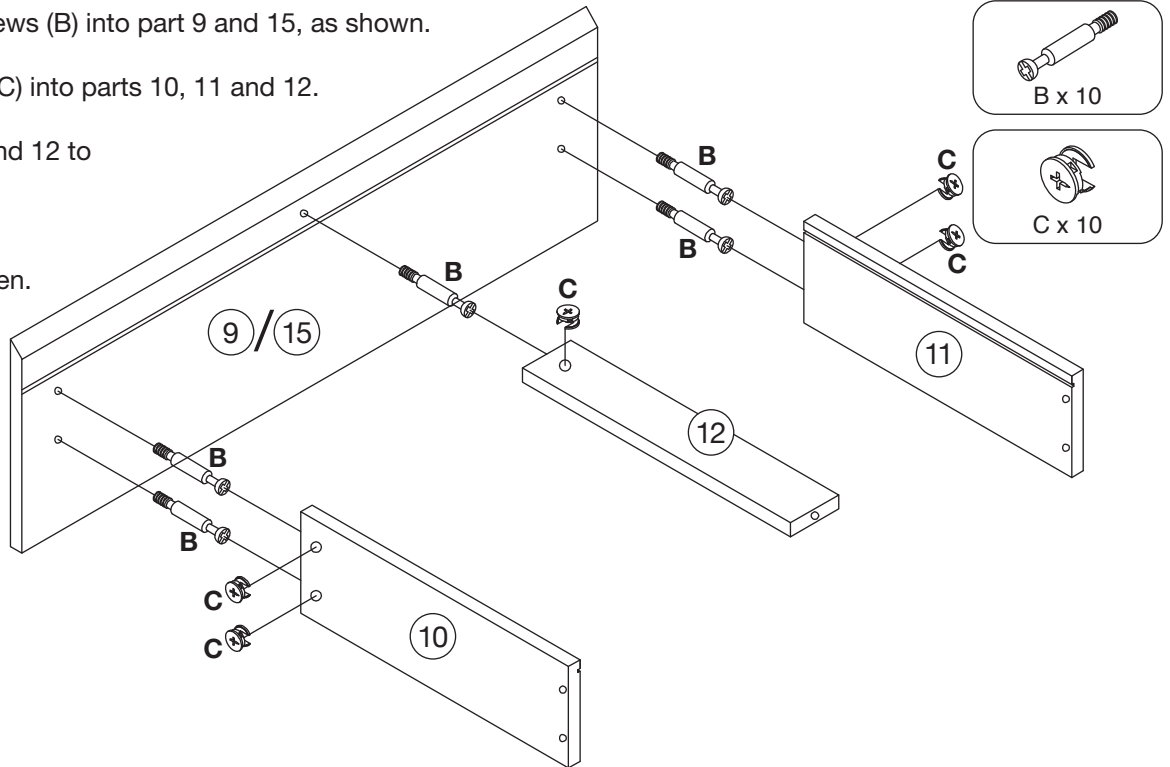

STEP 9

Slide part 13 into grooves of parts 9, 10, 11 and 15, as shown.

 x2

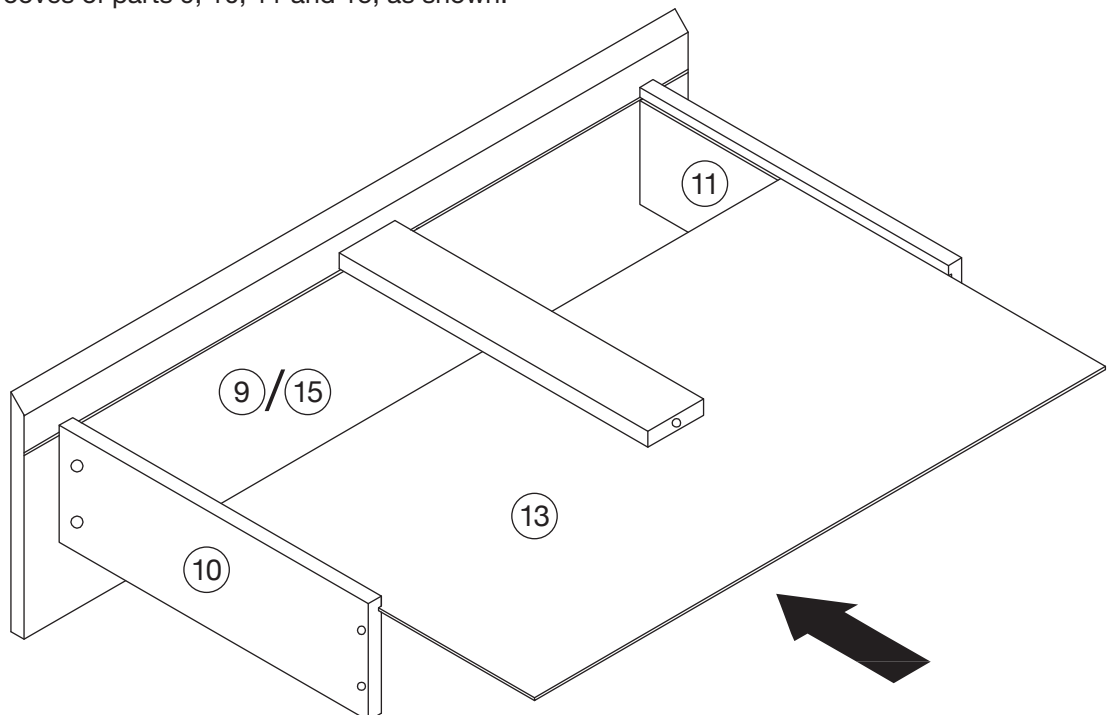


Desk

STEP 10

Fix parts 10 and 11 to part 14 using screws (I), as shown.

Fix part 14 to part 12 using screw (I).

 
x2

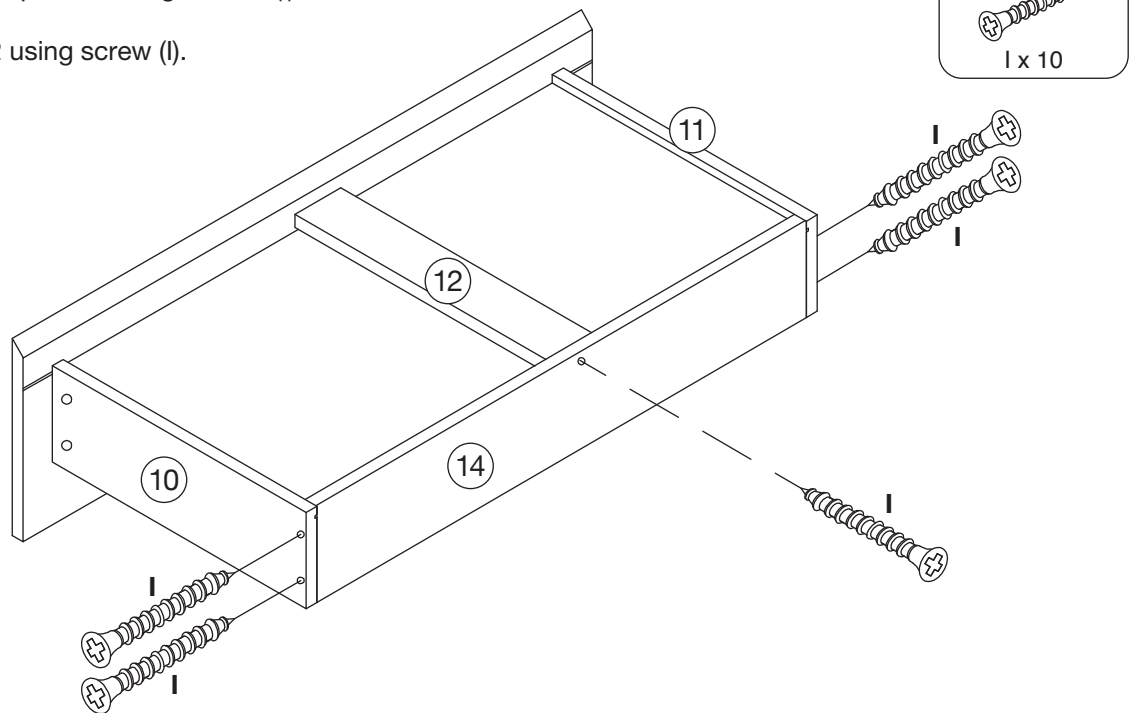

STEP 11

Fix inside drawer runners (E1) and (E2) to parts 10 and 11 using screws (D), as shown.

 x2

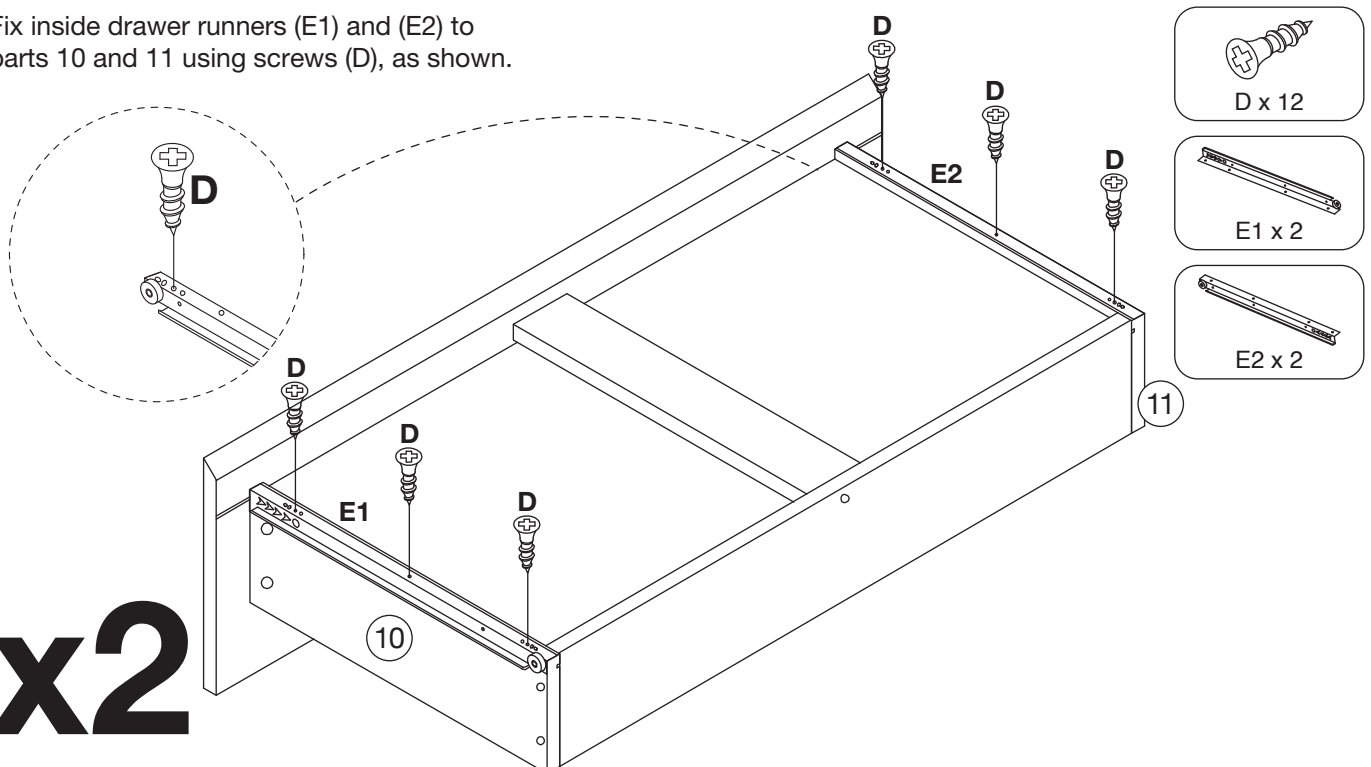

Desk

 
STEP 12

For extra stability, you must fix your desk to the wall using the additional hardware (I and M), as shown.

Screw (I) is fixed through washer (Q), wall strap and into the wall plug (M).

Insert drawers 9 and 15 into assembled unit.

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.




I x 1



Q x 1



 M x 1

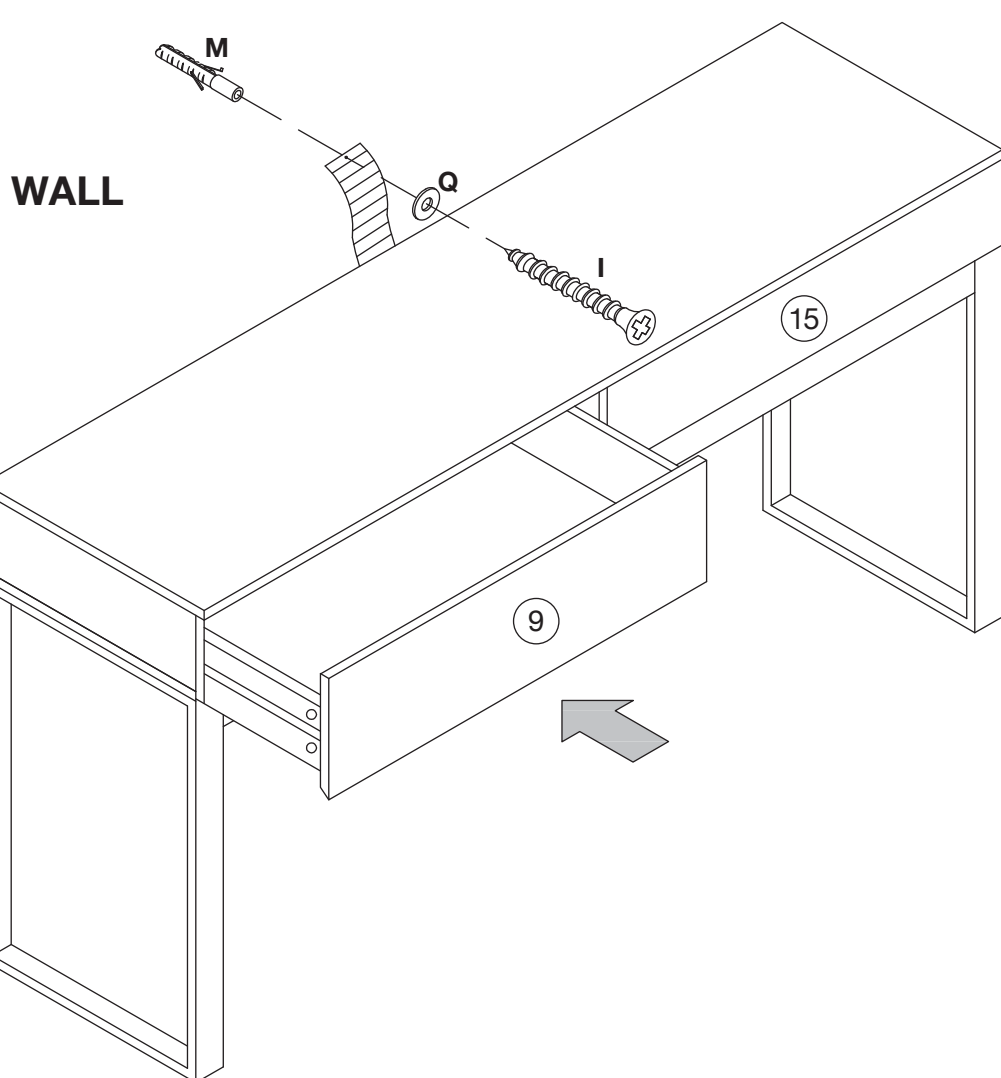

Your Desk is ready for use.

Maximum recommended weight for each drawer is 5kg and 50kg table top.

Desk

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

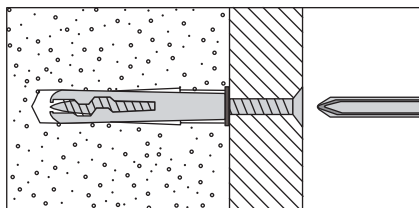


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

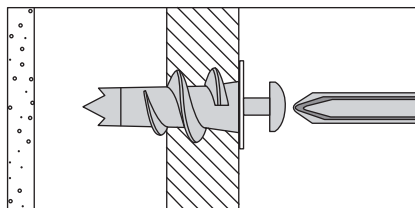


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

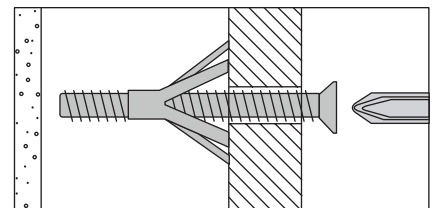


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

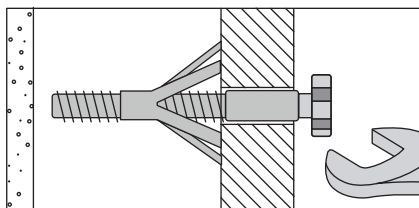


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

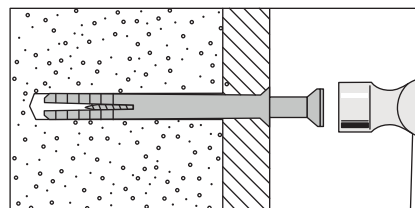

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

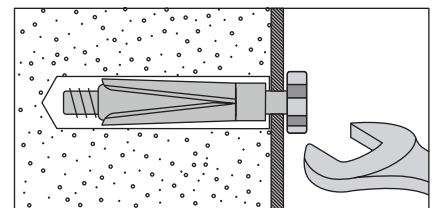

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.