 


FILING CABINET 3 DRAWER

ASSEMBLY INSTRUCTIONS

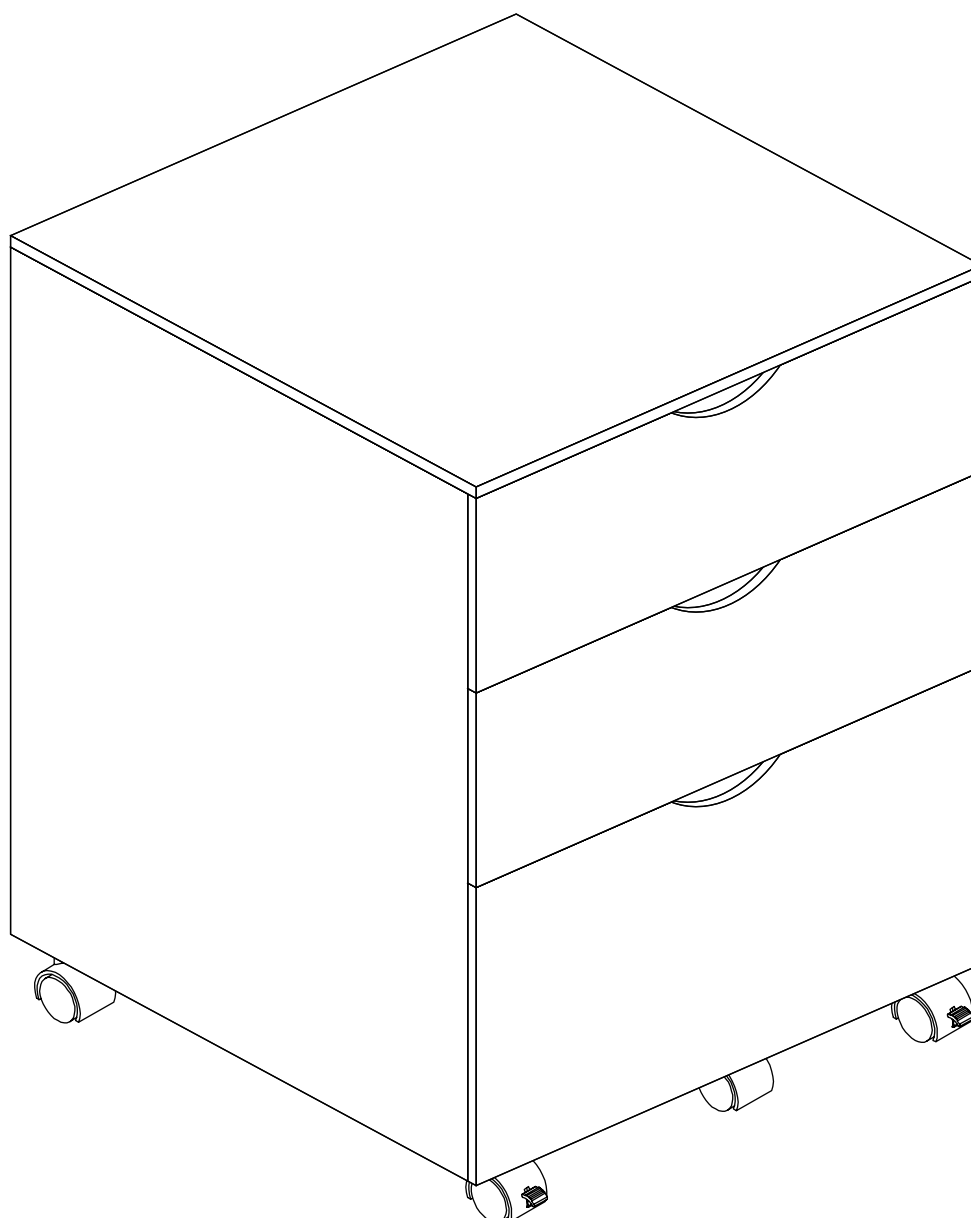

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protective surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver, hammer
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1 hour assembly time approx.

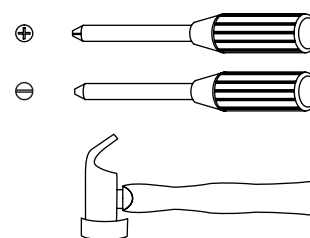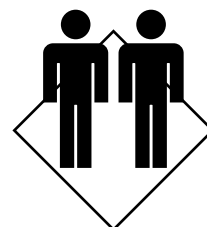

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

 
For more information, visit <https://www.productsafety.gov.au>



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

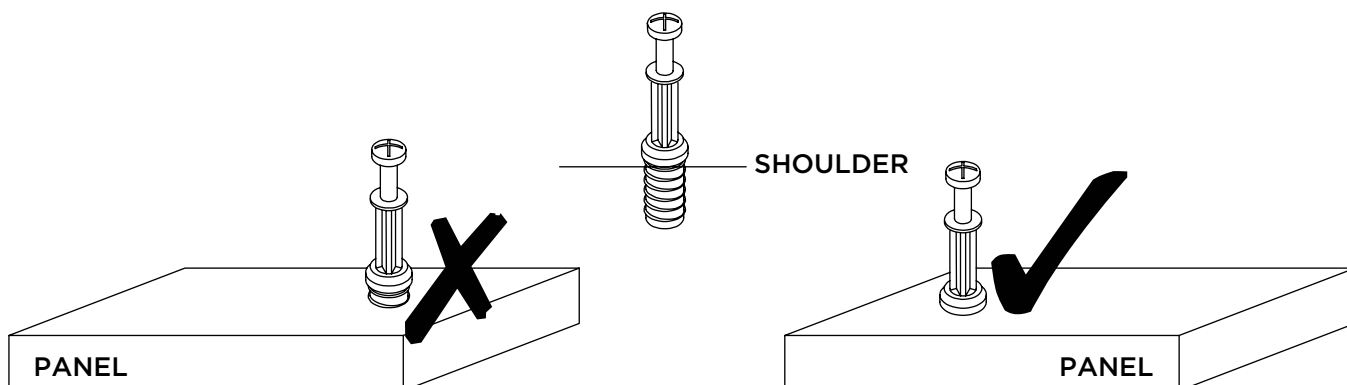


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

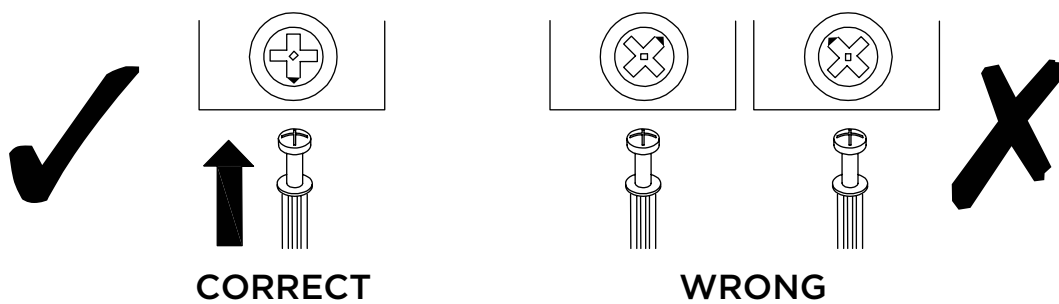

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

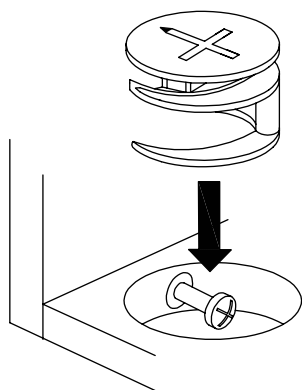


Turn cam lock clockwise to tighten.

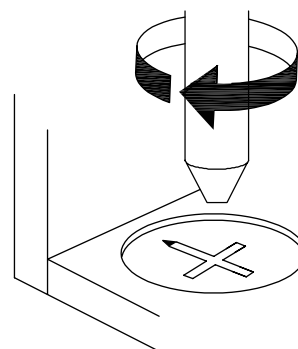 


DRAWER SLIDE GUIDE

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

 Inner Drawer Runner Left (J)




Inner Drawer Runner Right (K)

 


The Drawer Slide components shown above are attached to the **drawers**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

 Outer Drawer Runner Left (L)

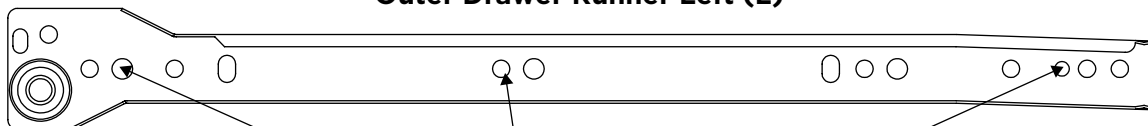

Use these holes


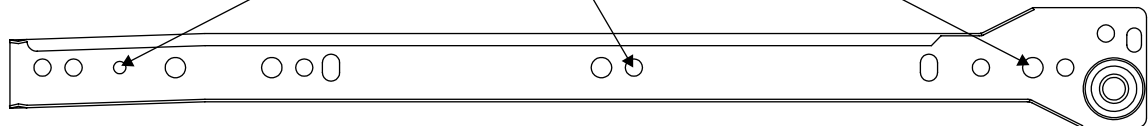 


Outer Drawer Runner Right (M)

The Drawer Slide components shown above are attached to the **cabinet**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for step 4 and 11.

PRE-FIX DRAWER RUNNER INSTRUCTIONS

  
NOTE: Pull inner and outer drawer runners apart before fixing them to panels.

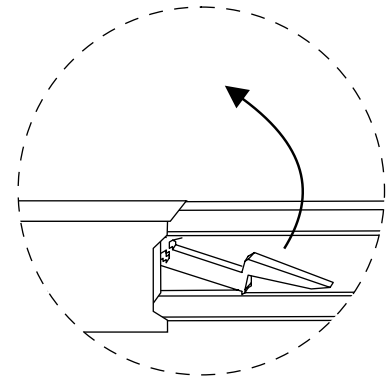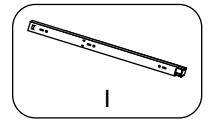



Slide drawer runners apart until the drawer lock can be seen, as shown.

I1 (outer runner)

 I2 (inner runner)

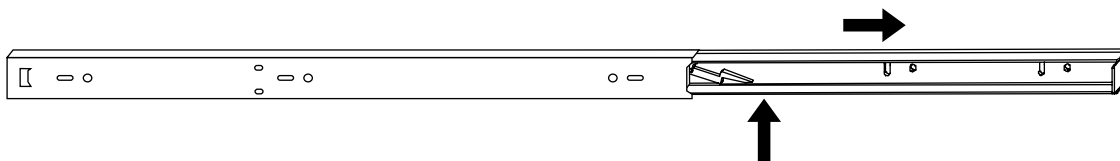


  Press and hold the drawer runner lock upwards and then continue to slide drawer runners apart, as shown.

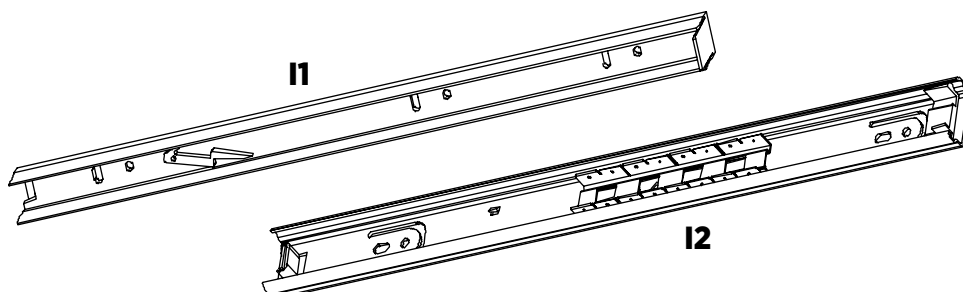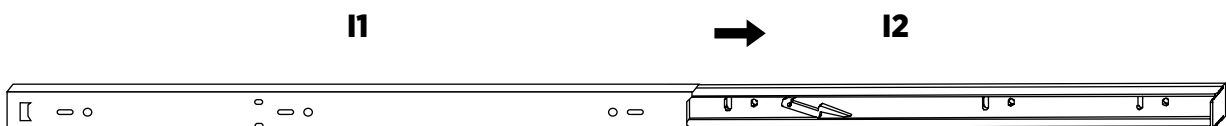

Your inner and outer drawer runners are ready to be fixed to panels.

 
HARDWARE LIST




16 x A
Quickfit Screw



 16 x B
Cam Lock



12 x C
Wooden Dowel

 


19 x D
Screw




36 x E
Screw



 
21 x F
Screw




2 x G
Castor Wheel
with Lock

 


3 x H
Castor Wheel

 


2 x I
Drawer Runner

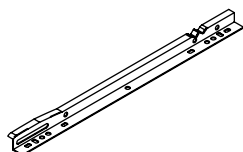 


2 x J
Left Inner
Drawer Runner

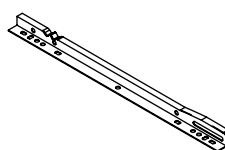 

2 x K
Right Inner
Drawer Runner

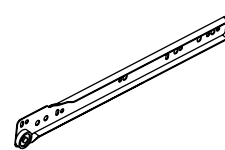 

2 x L
Left Outer
Drawer Runner

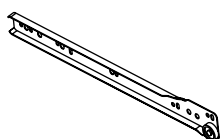 

2 x M
Right Outer
Drawer Runner



 
24 x N
Nail



2 x O
Washer



1 x P
Wall Strap




1 x Q
Wall Plug




1 x R
Hole Patch

 
PARTS LIST

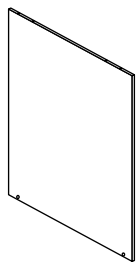


1
1 PC

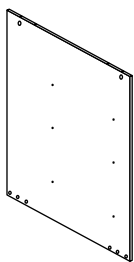 


2
1 PC

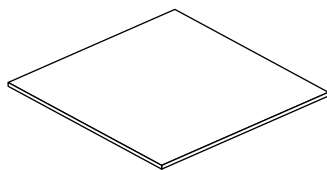 


3
1 PC

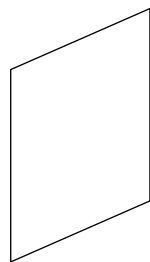 


4
2 PCS

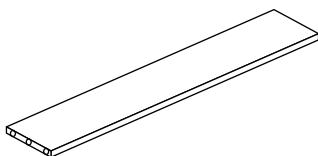 


5
1 PC

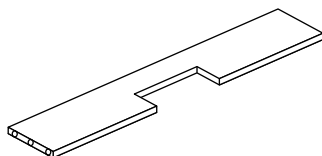 


6
1 PC

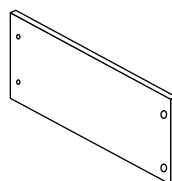 


7
2 PCS

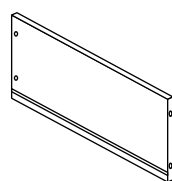 


8
2 PCS

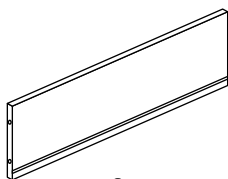 


9
2 PCS

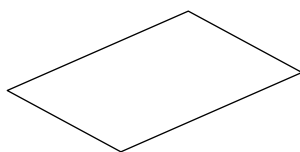 


10
2 PCS

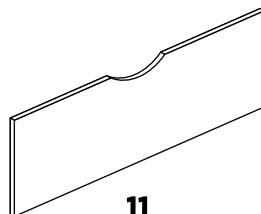 


11
2 PCS

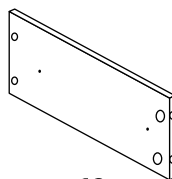 


12
1 PC

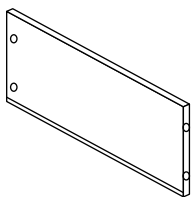 


13
1 PC

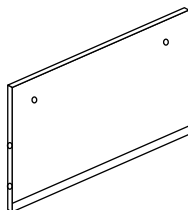 


14
1 PC

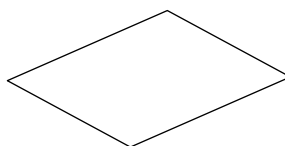 


15
1 PC

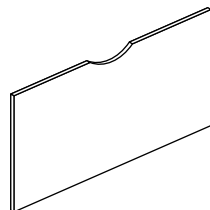 


16
1 PC

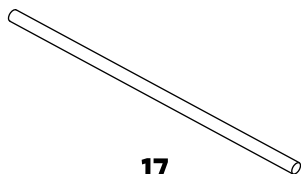 

17
2 PCS

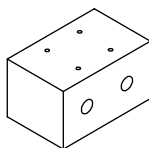 

18
1 PC


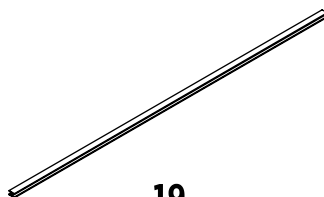 


19
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

  Fix parts 7 and 8 to part 9 using screws (D), as shown.

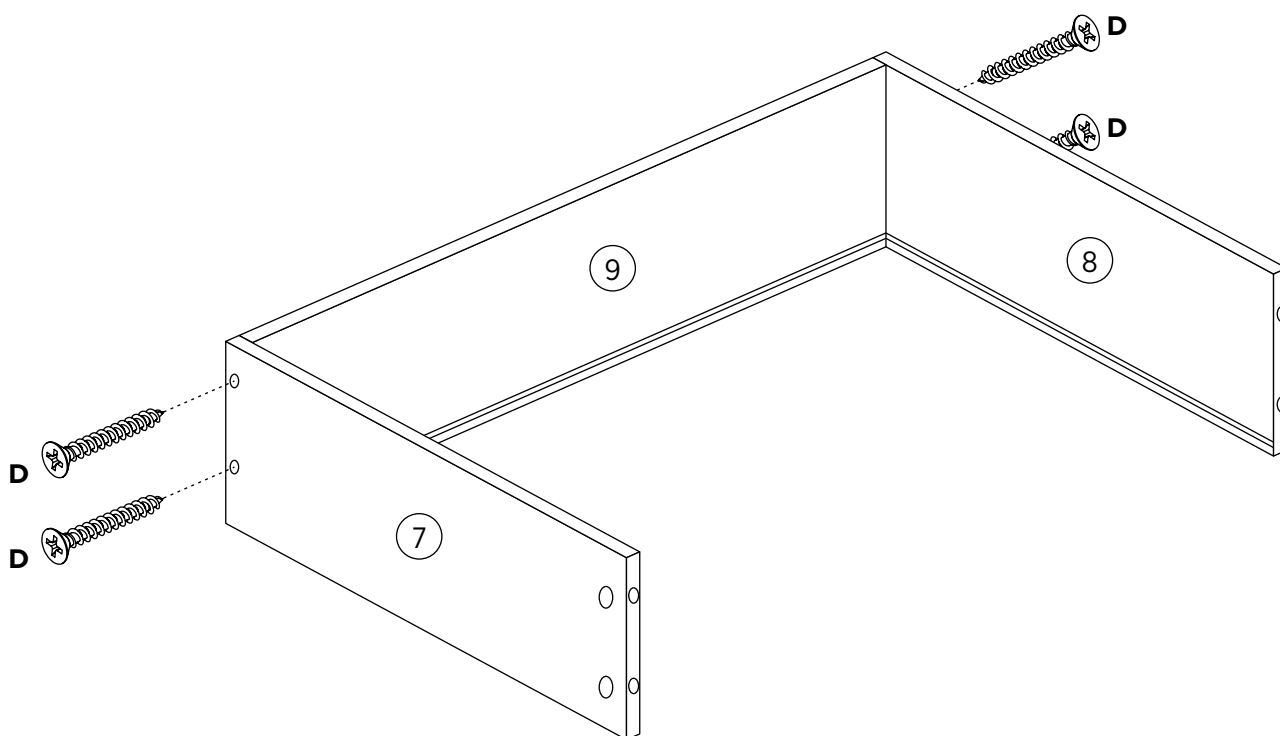


x2

ASSEMBLY INSTRUCTIONS

STEP 2

 Insert part 10 into grooves of parts 7, 8 and 9, as shown.

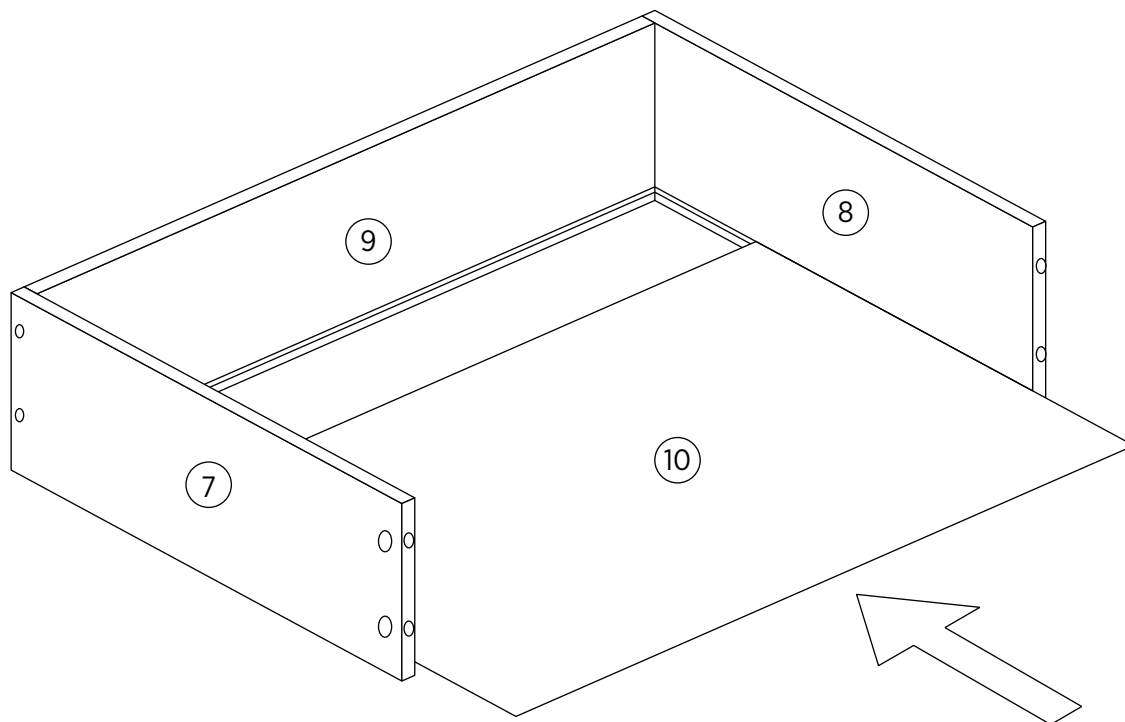



x2

ASSEMBLY INSTRUCTIONS

STEP 3

Insert quickfit screws (A) and cam locks (B) to parts 7 and 8 and attach part 11, as shown.

  Turn cam lock clockwise to tighten.

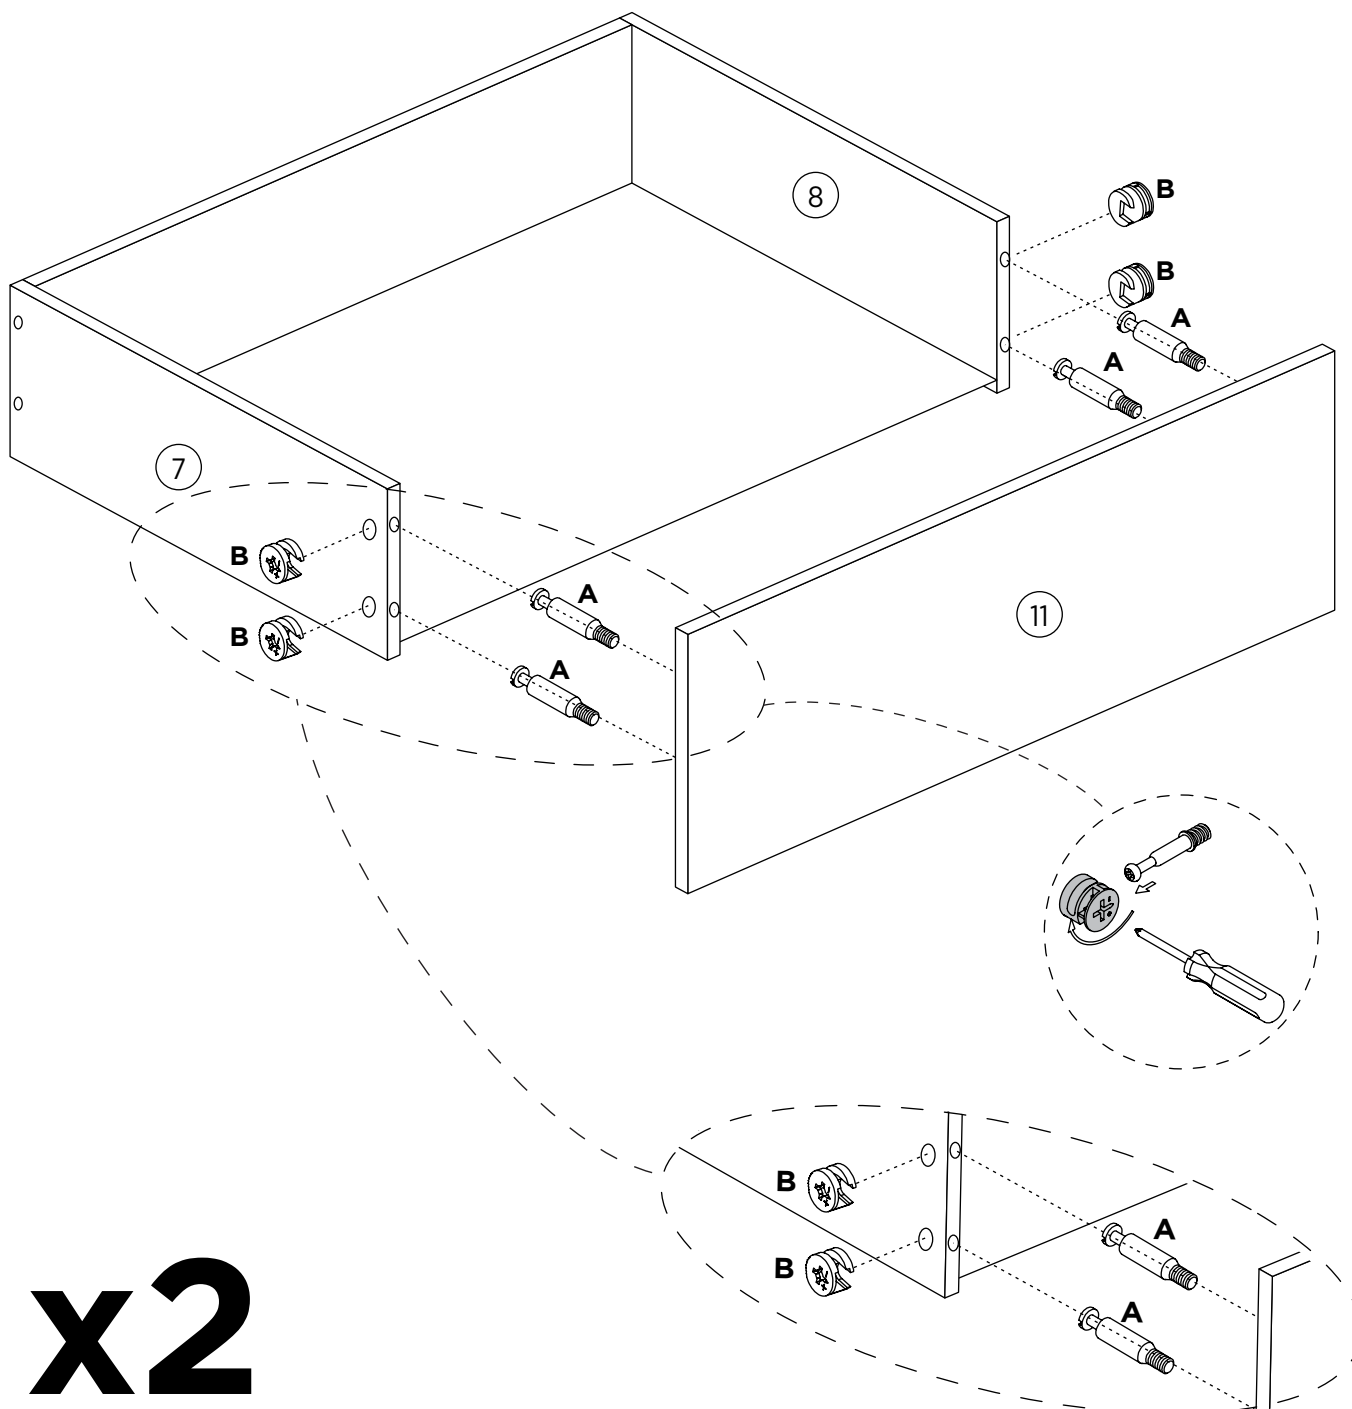

ASSEMBLY INSTRUCTIONS

STEP 4

Fix left and right inner drawer runners (J) and (K) to parts 7 and 8 using screws (E), as shown.

WARNING

 
The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.




E x 12



J x 2



K x 2



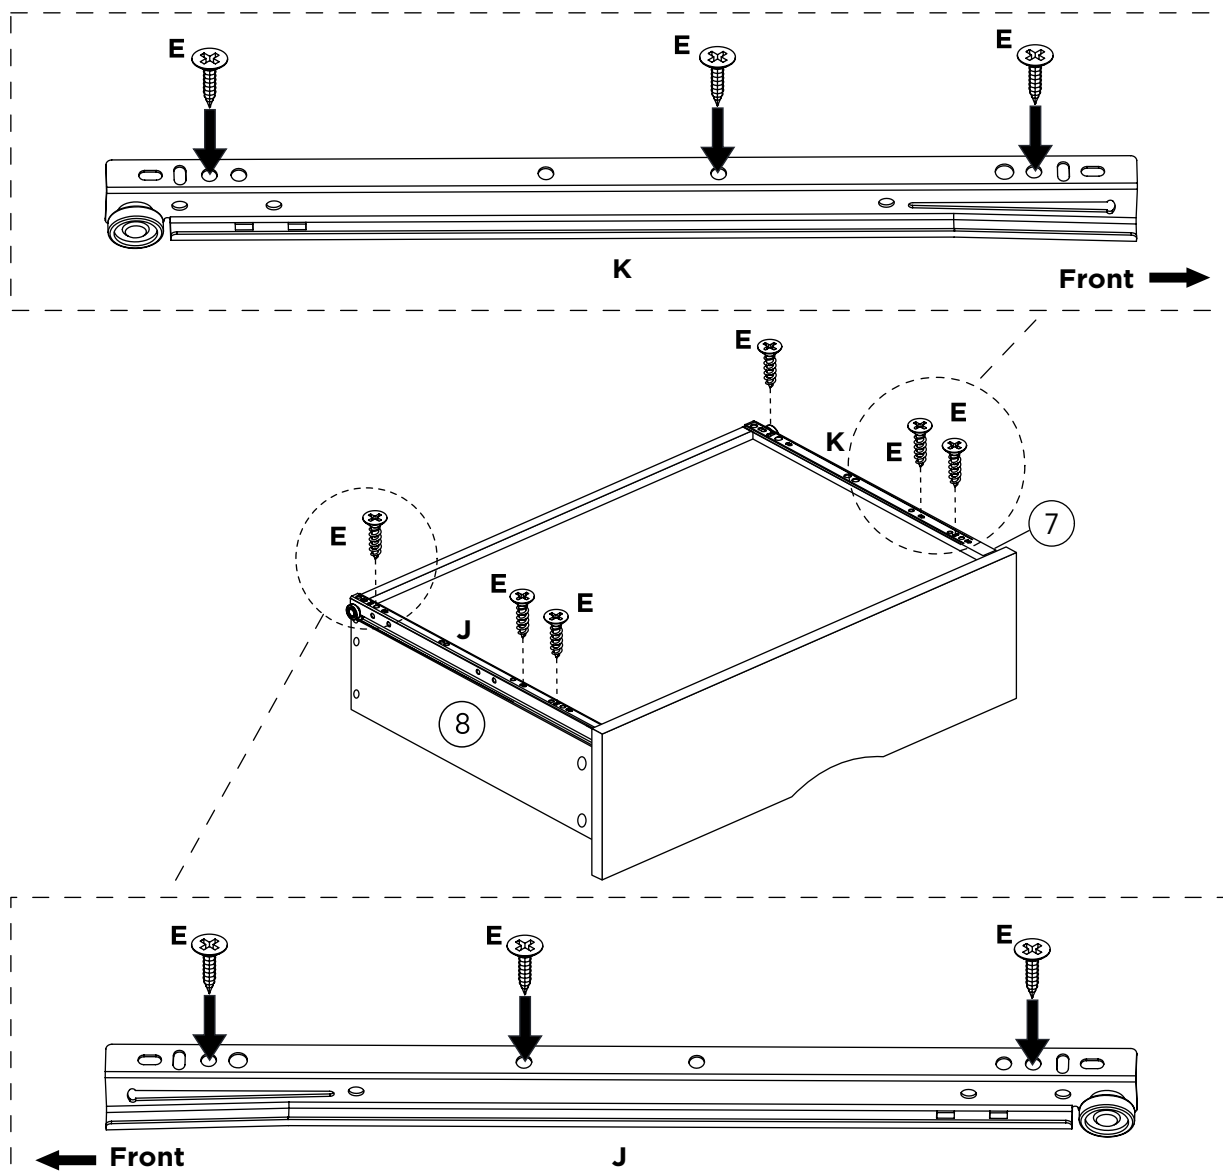 


x2

ASSEMBLY INSTRUCTIONS

STEP 5

  
 
Fix drawer runners (I1) to parts 12 and 13 using screws (E), as shown.

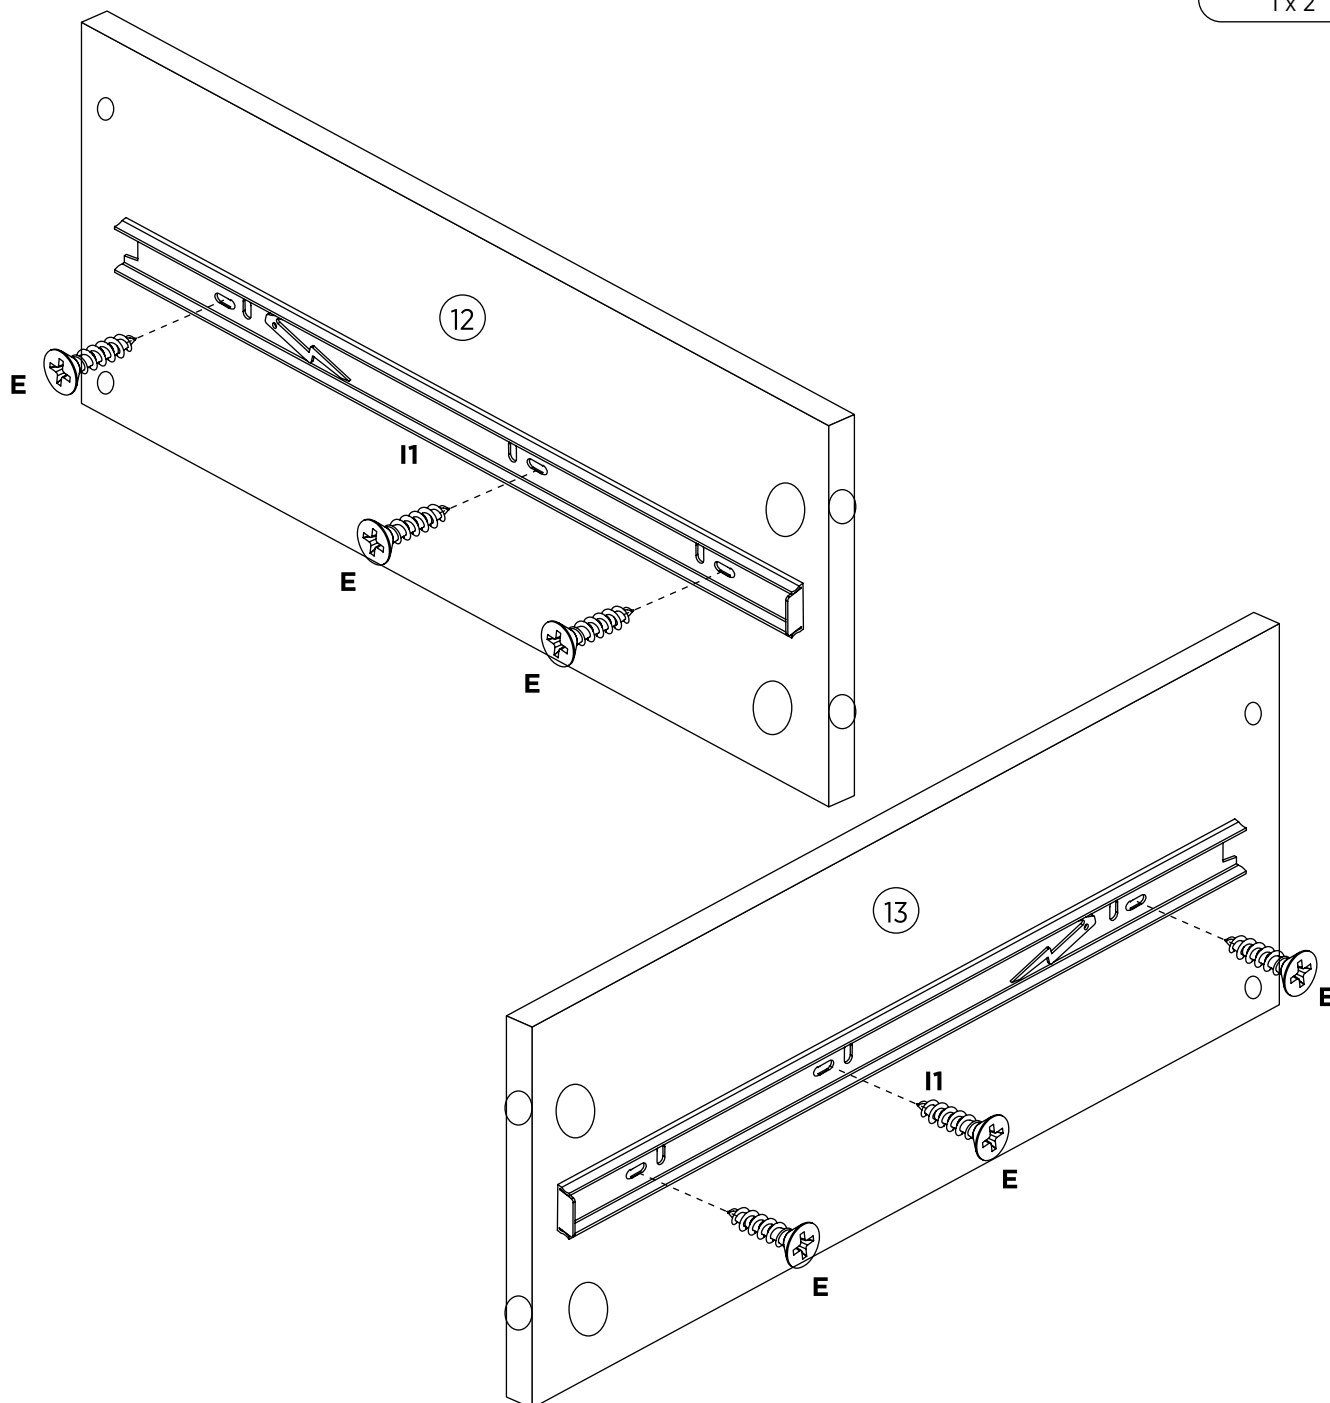

ASSEMBLY INSTRUCTIONS

STEP 6

 
 
Fix part 18 to part 16 using screws (D), as shown.

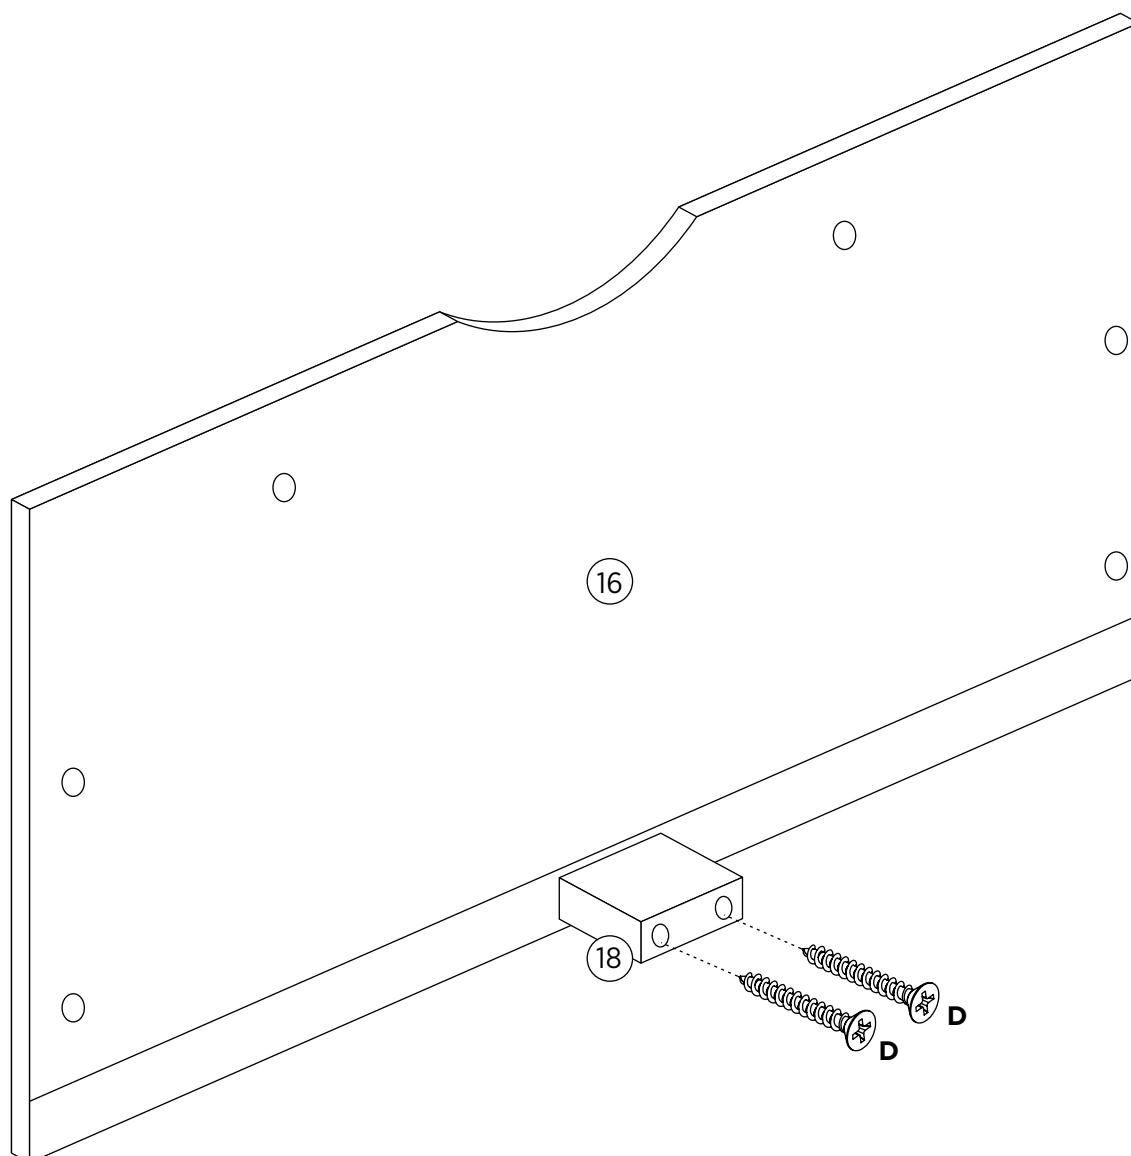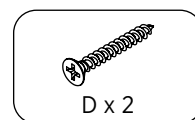

ASSEMBLY INSTRUCTIONS

STEP 7

  Fix parts 12 and 13 to part 14 using screws (D), as shown.

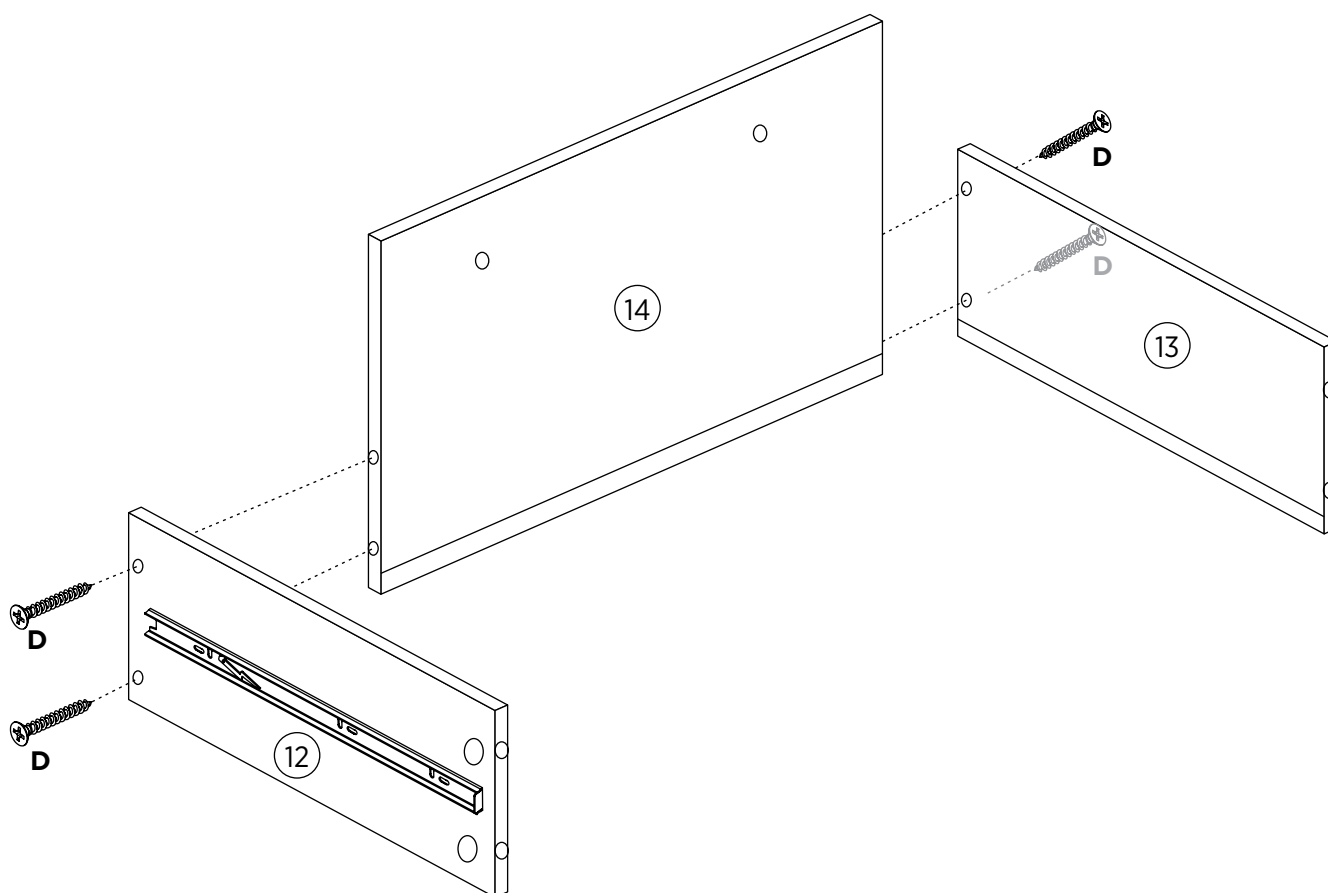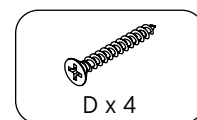


ASSEMBLY INSTRUCTIONS

STEP 8

Insert part 15 into grooves of parts 12, 13 and 14.

 Insert rods 17 into part 14, as shown.

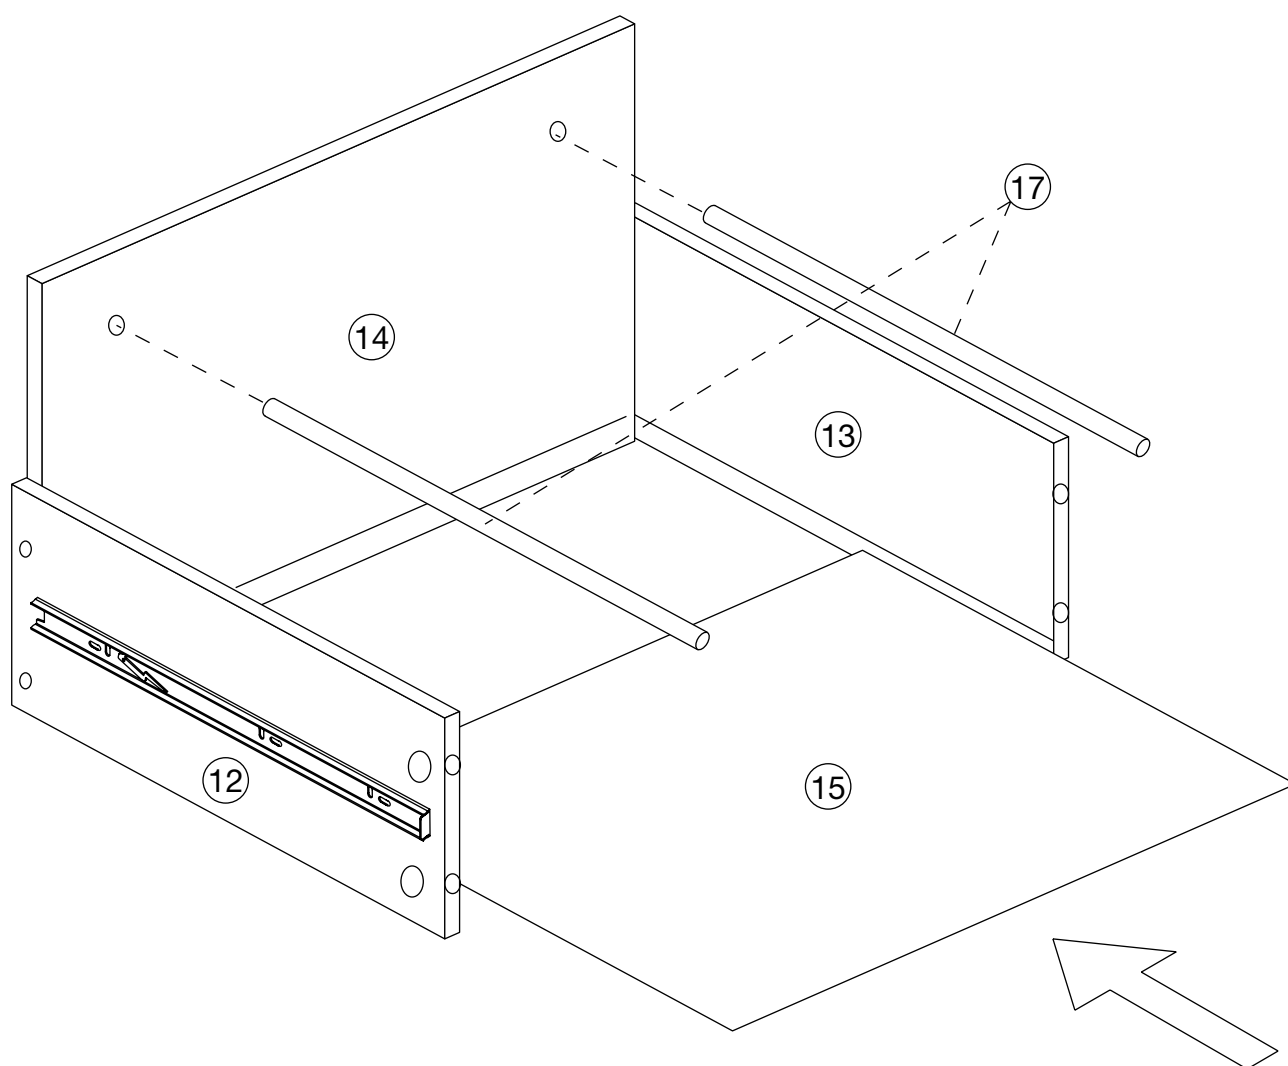


ASSEMBLY INSTRUCTIONS

STEP 9

Insert quickfit screws (A) and cam locks (B) parts 12 and 13 and attach part 16, as shown.

 
Turn cam lock clockwise to tighten.



A x 4



 B x 4

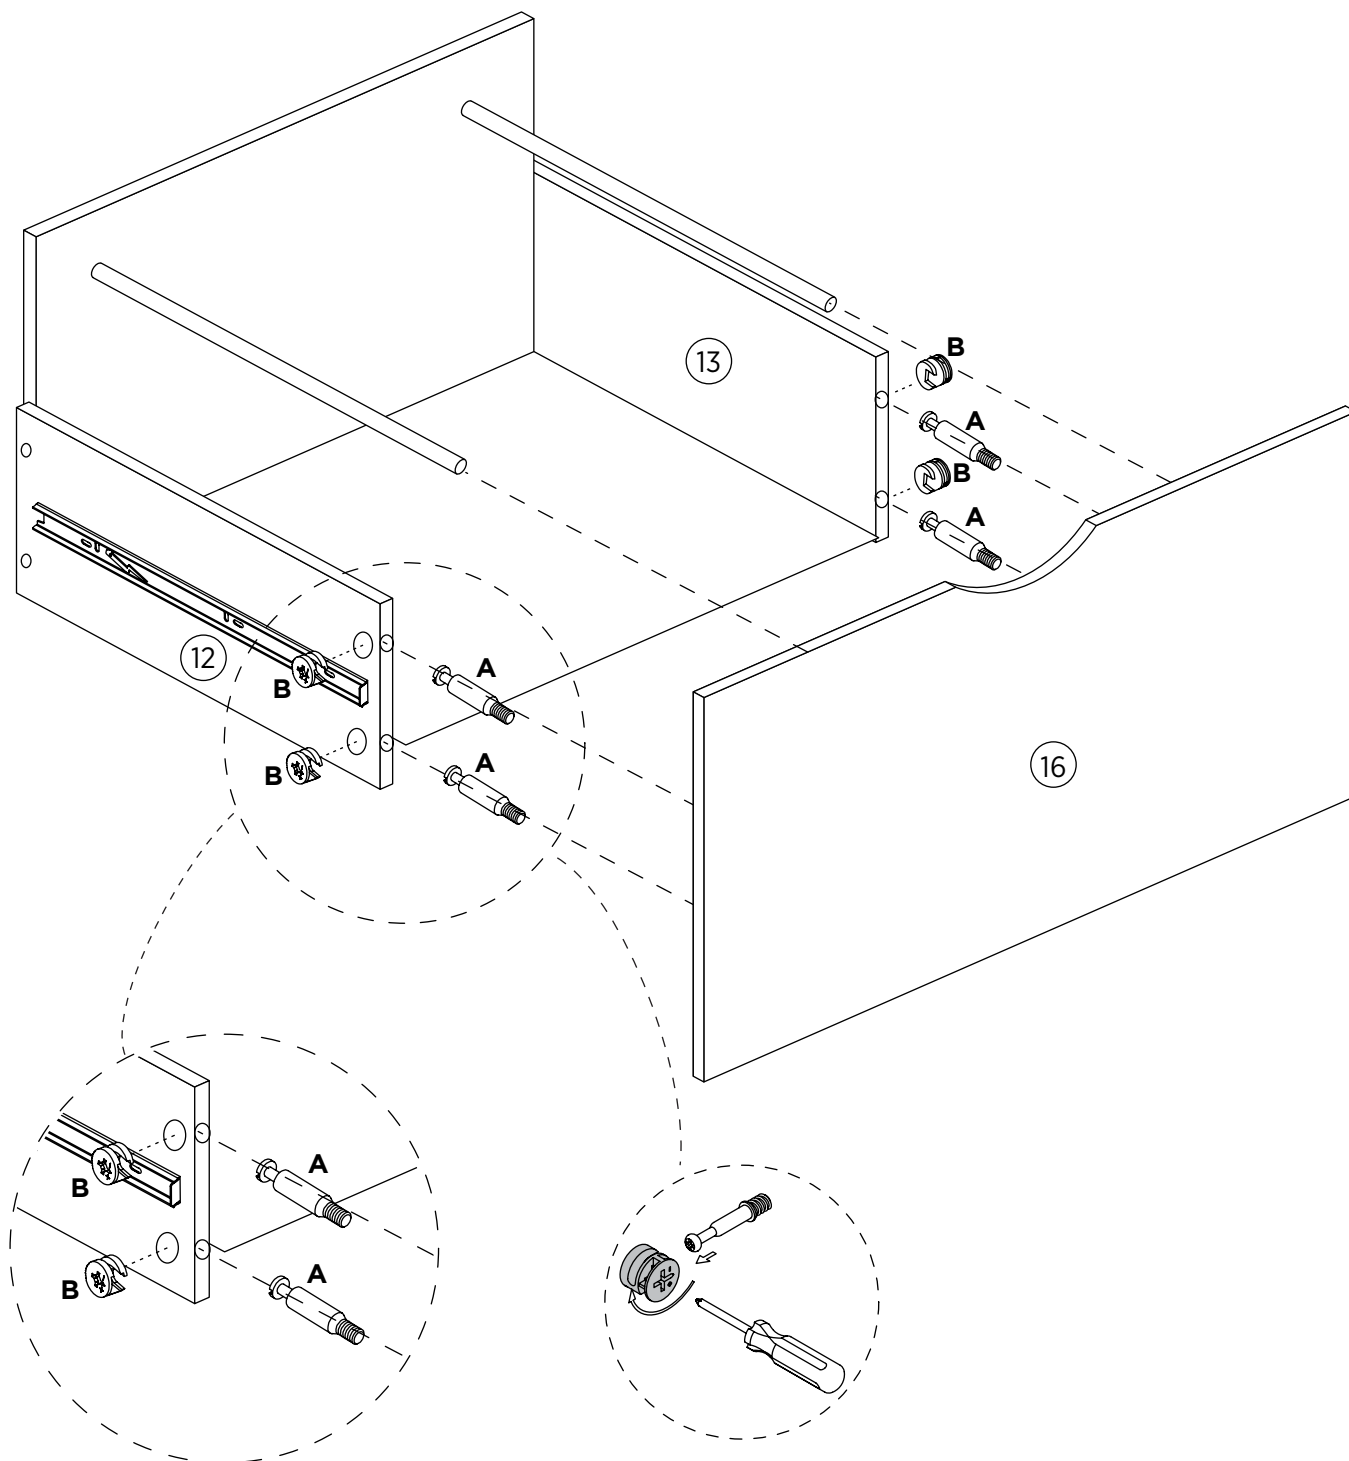

ASSEMBLY INSTRUCTIONS

STEP 10

 
Fix castor wheel (H) to part 18 using screw (F), as shown.



F x 4



H x 1

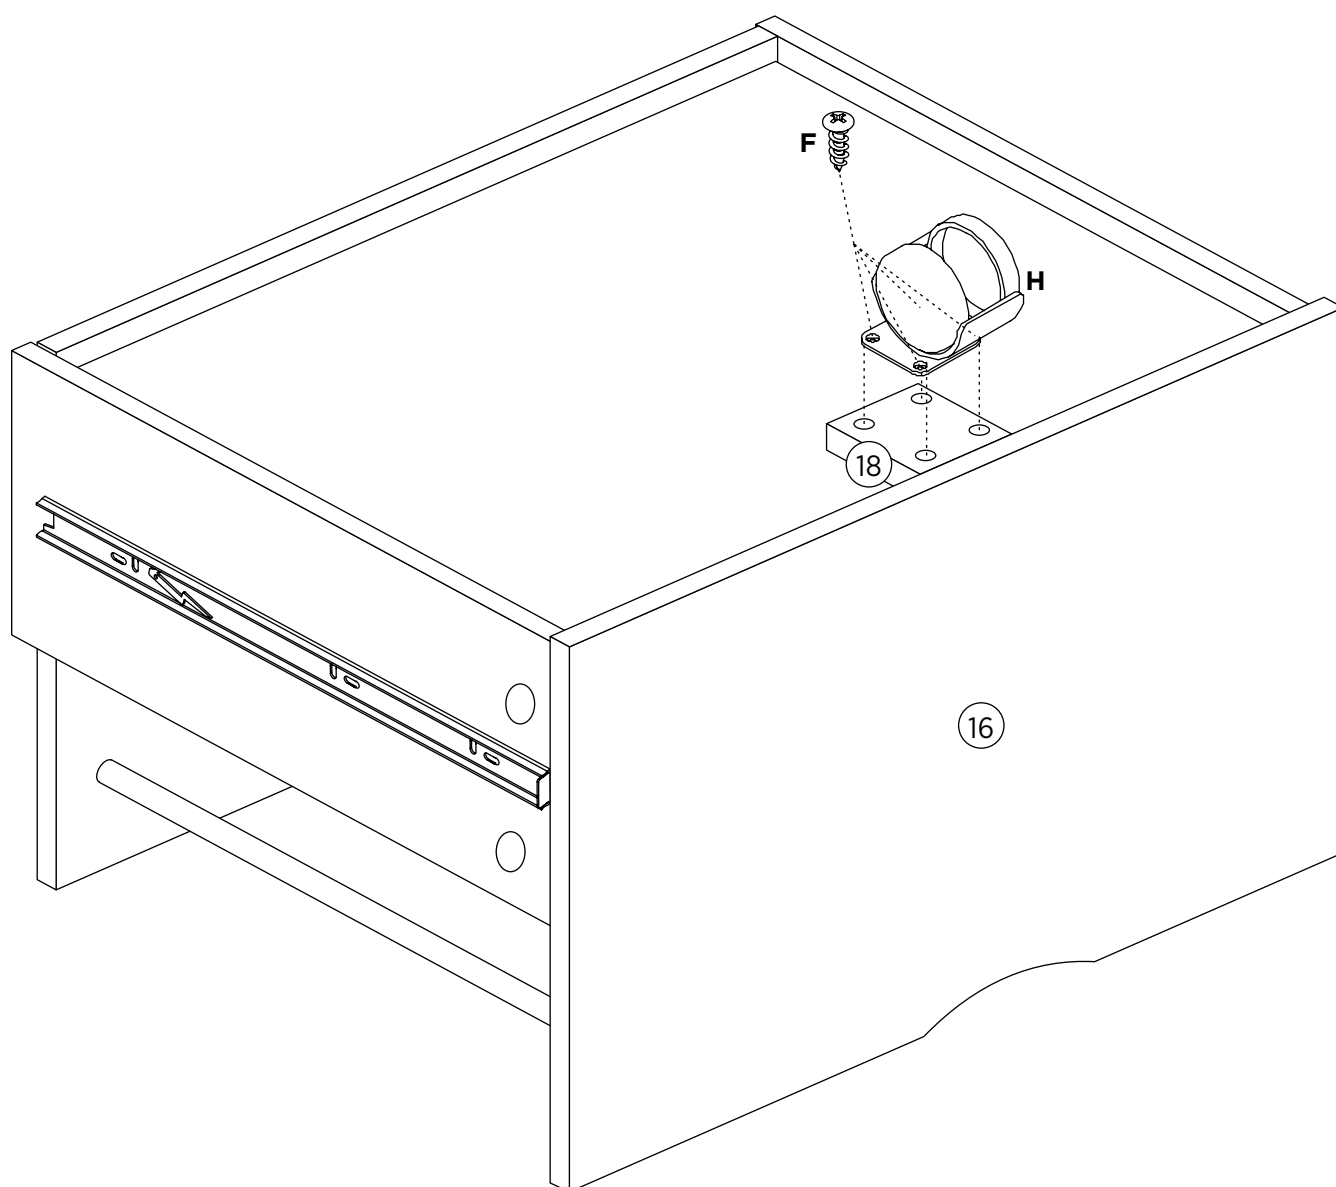

ASSEMBLY INSTRUCTIONS

STEP 11

Fix left and right outer drawer runners (L) and (M) to parts 1 and 2 using screws (E).

 
Fix drawer runners (I2) to parts 1 and 2 using screws (E), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



E x 18




I2 x 2



L x 2






 
M x 2

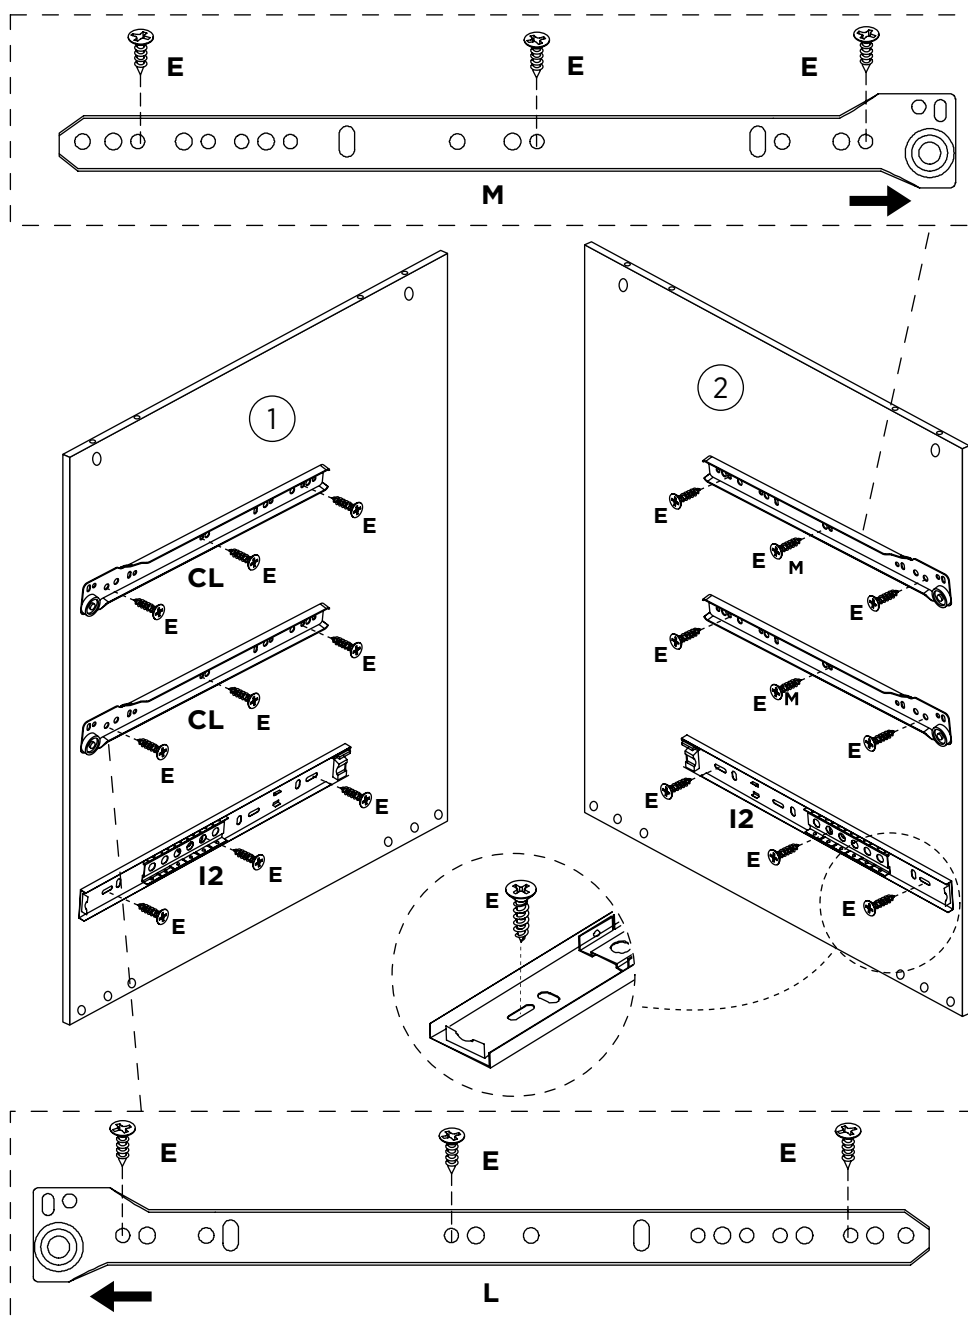

ASSEMBLY INSTRUCTIONS

STEP 12

 
 
 
 
Insert wooden dowels (C) to parts 5 and 6 and attach part 1 using screws (D), as shown.

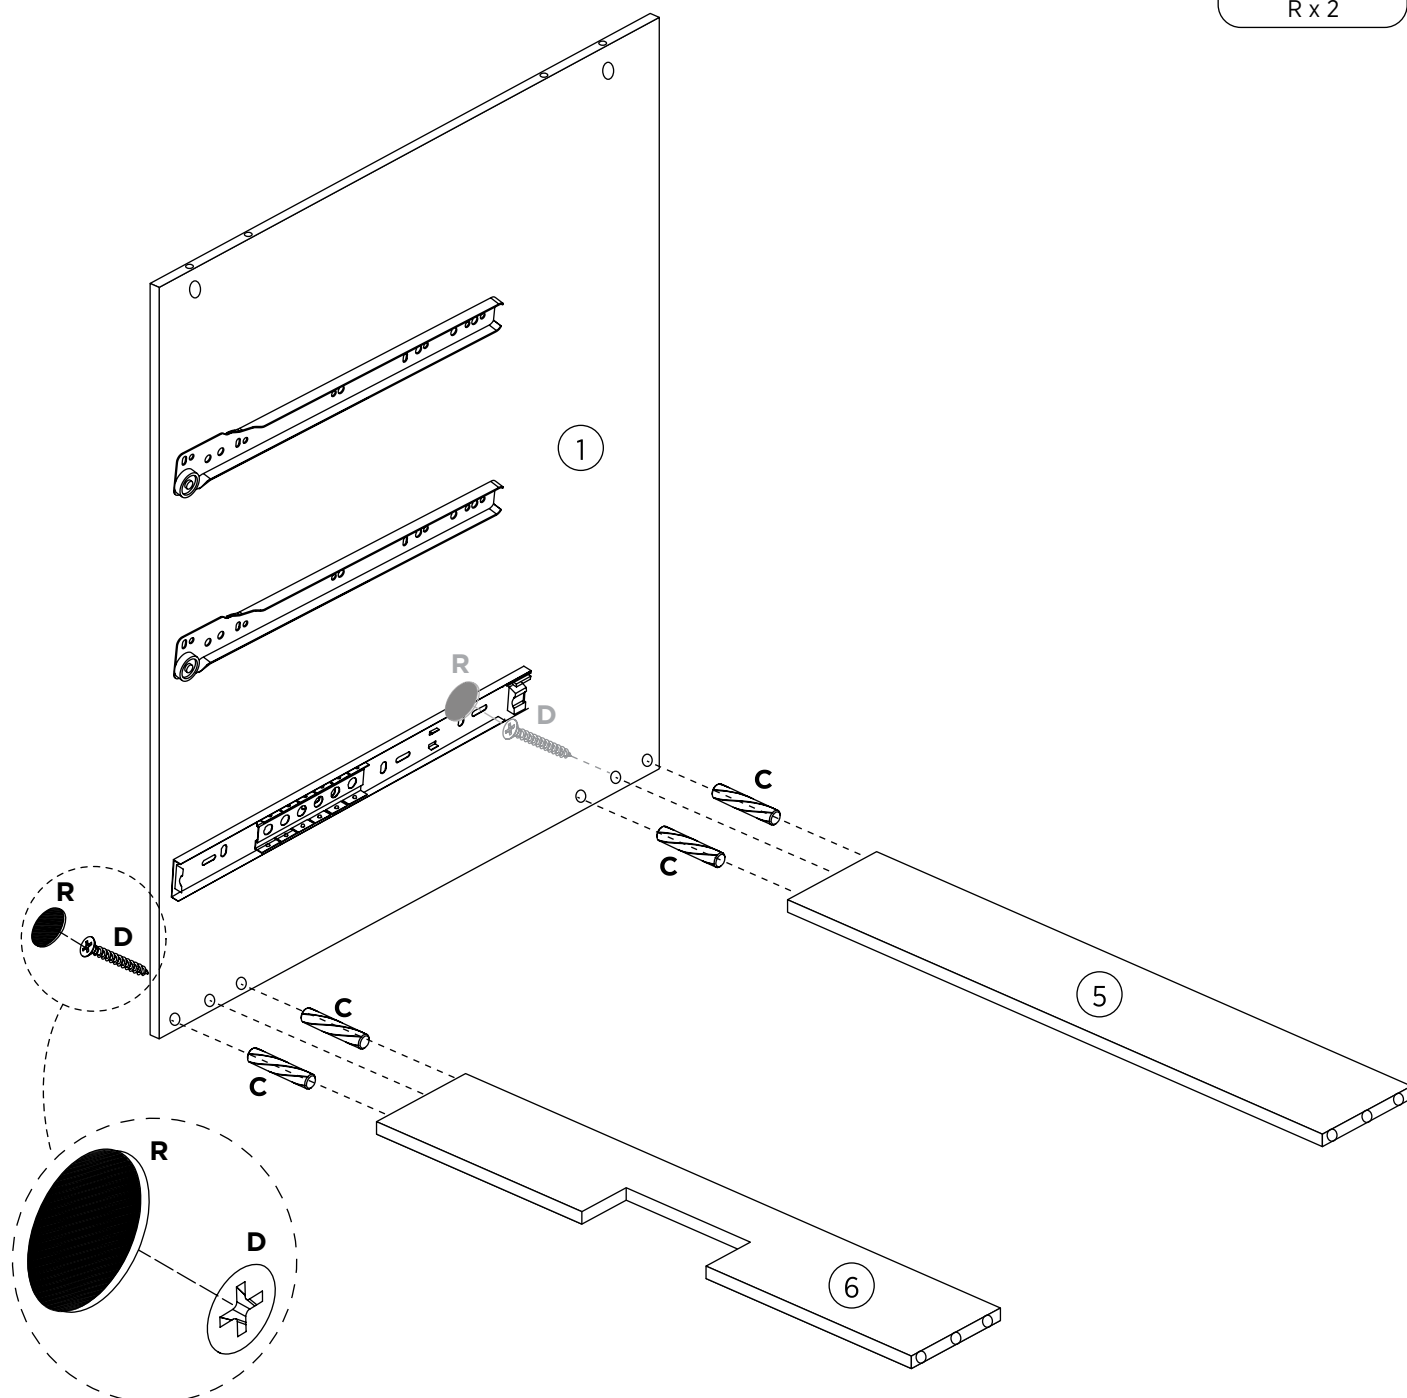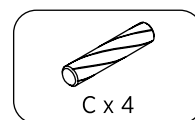

ASSEMBLY INSTRUCTIONS

STEP 13

    Insert wooden dowels (C) to parts 5 and 6 and attach part 2 using screws (D), as shown.

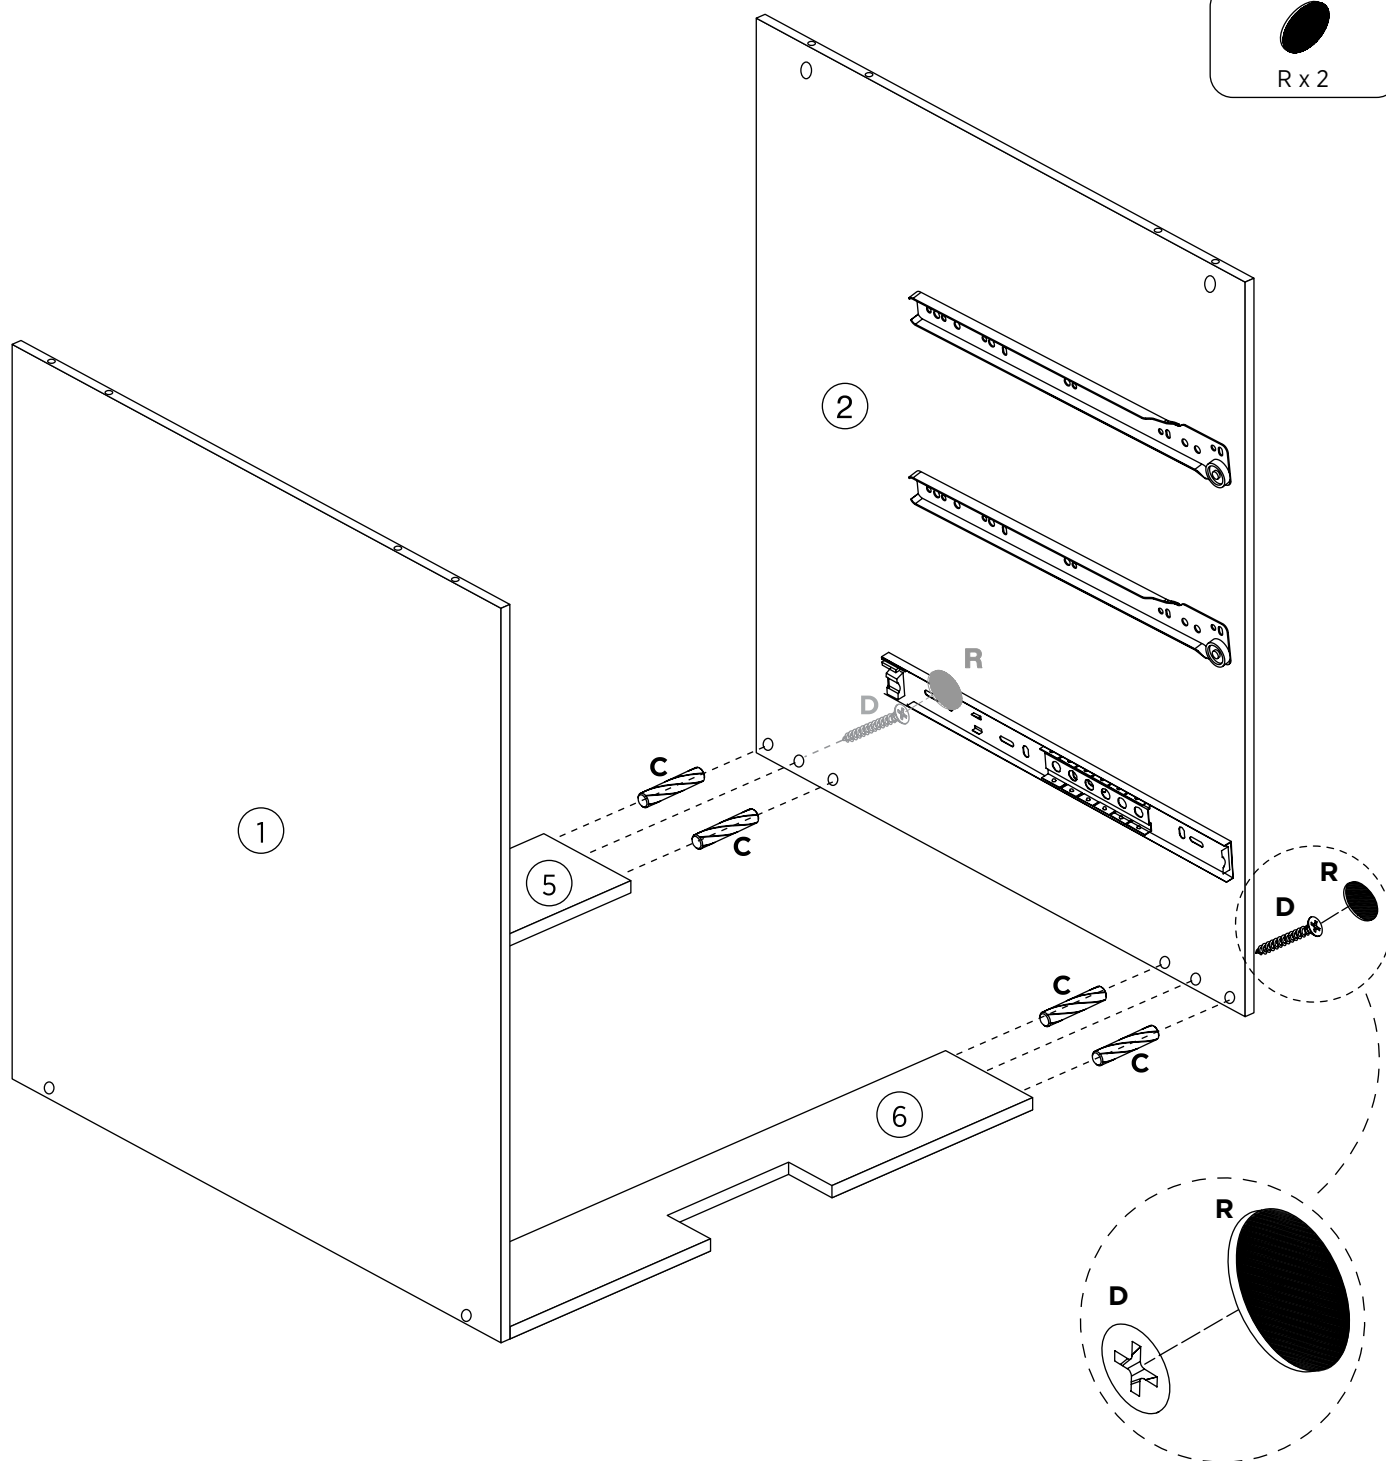

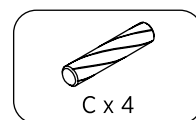


ASSEMBLY INSTRUCTIONS

STEP 14

Insert quickfit screws (A), cam locks (B) and wooden dowels (C) parts 1 and 2 and attach part 3, as shown.

   Turn cam lock clockwise to tighten.

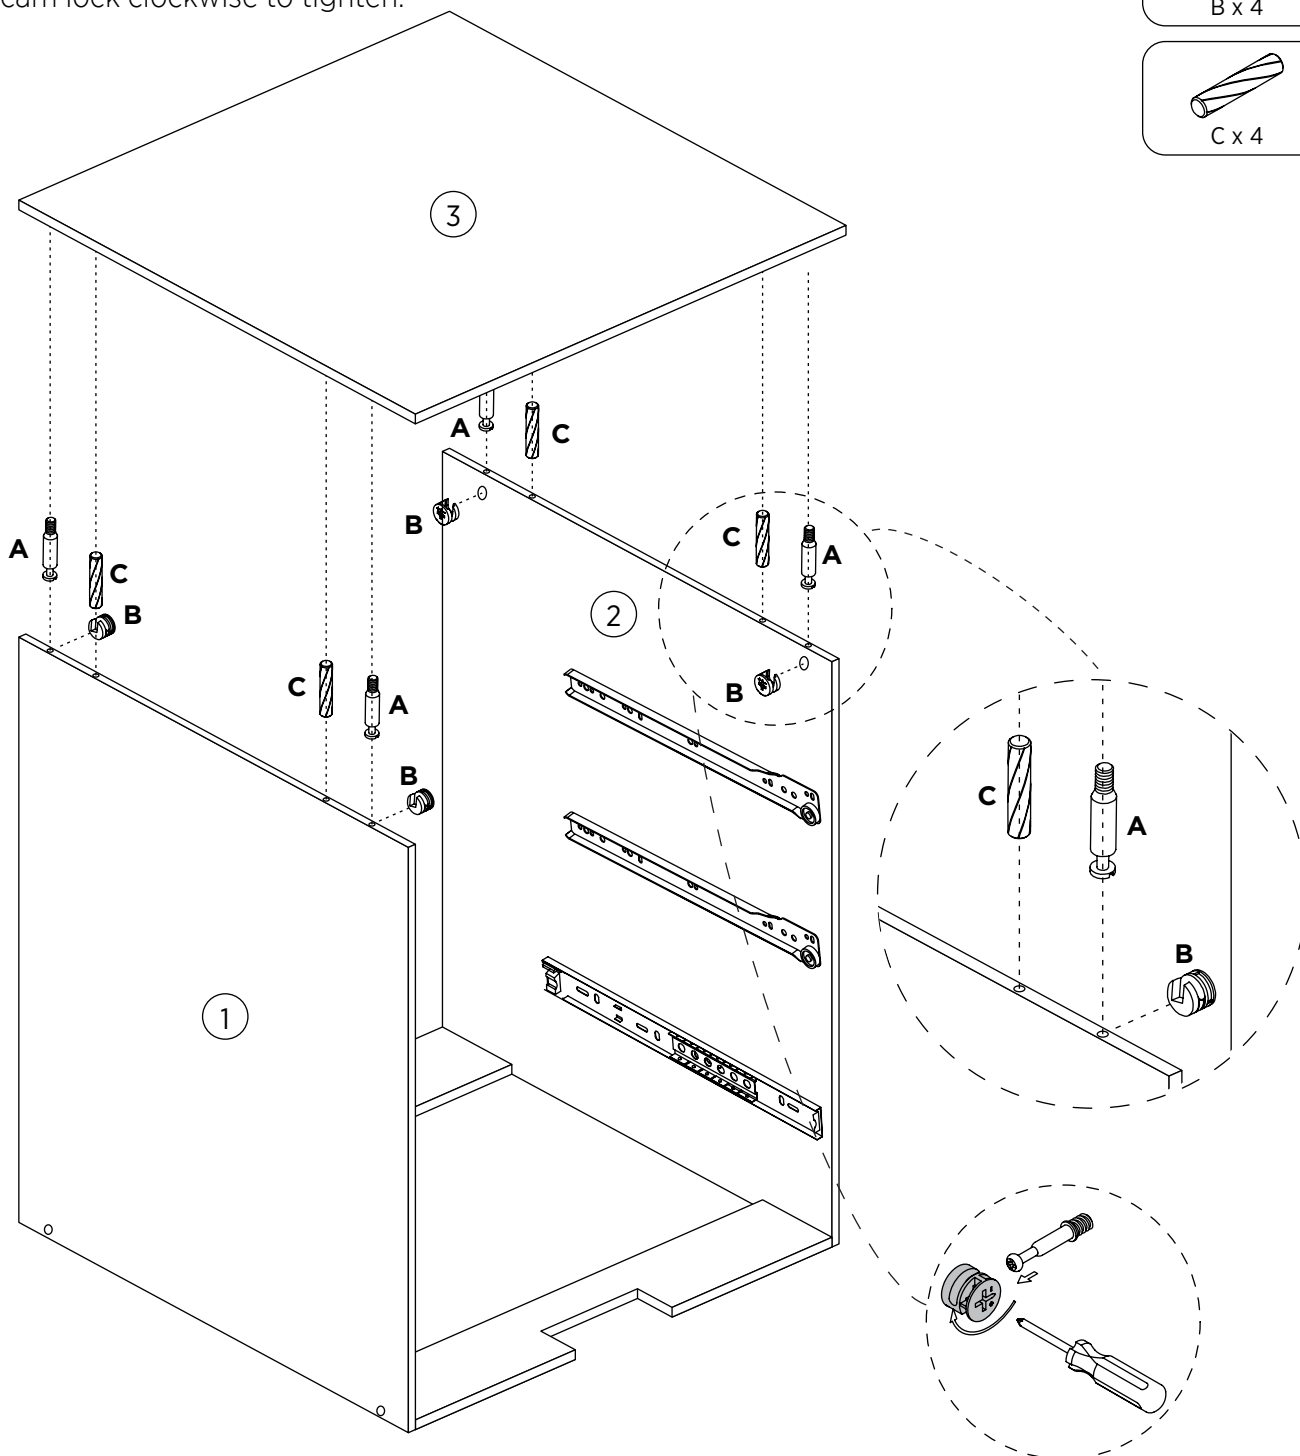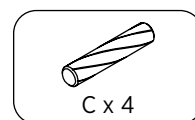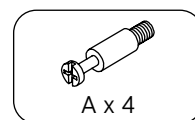



ASSEMBLY INSTRUCTIONS

STEP 15

Insert two parts 4 into grooves of part 19 and place them outward in the same colour as the cabinet.

Fix part 4 to assembled unit using nails (N).

  Fix wall strap (P) to part 4 using screw (F) and washer (O), as shown.

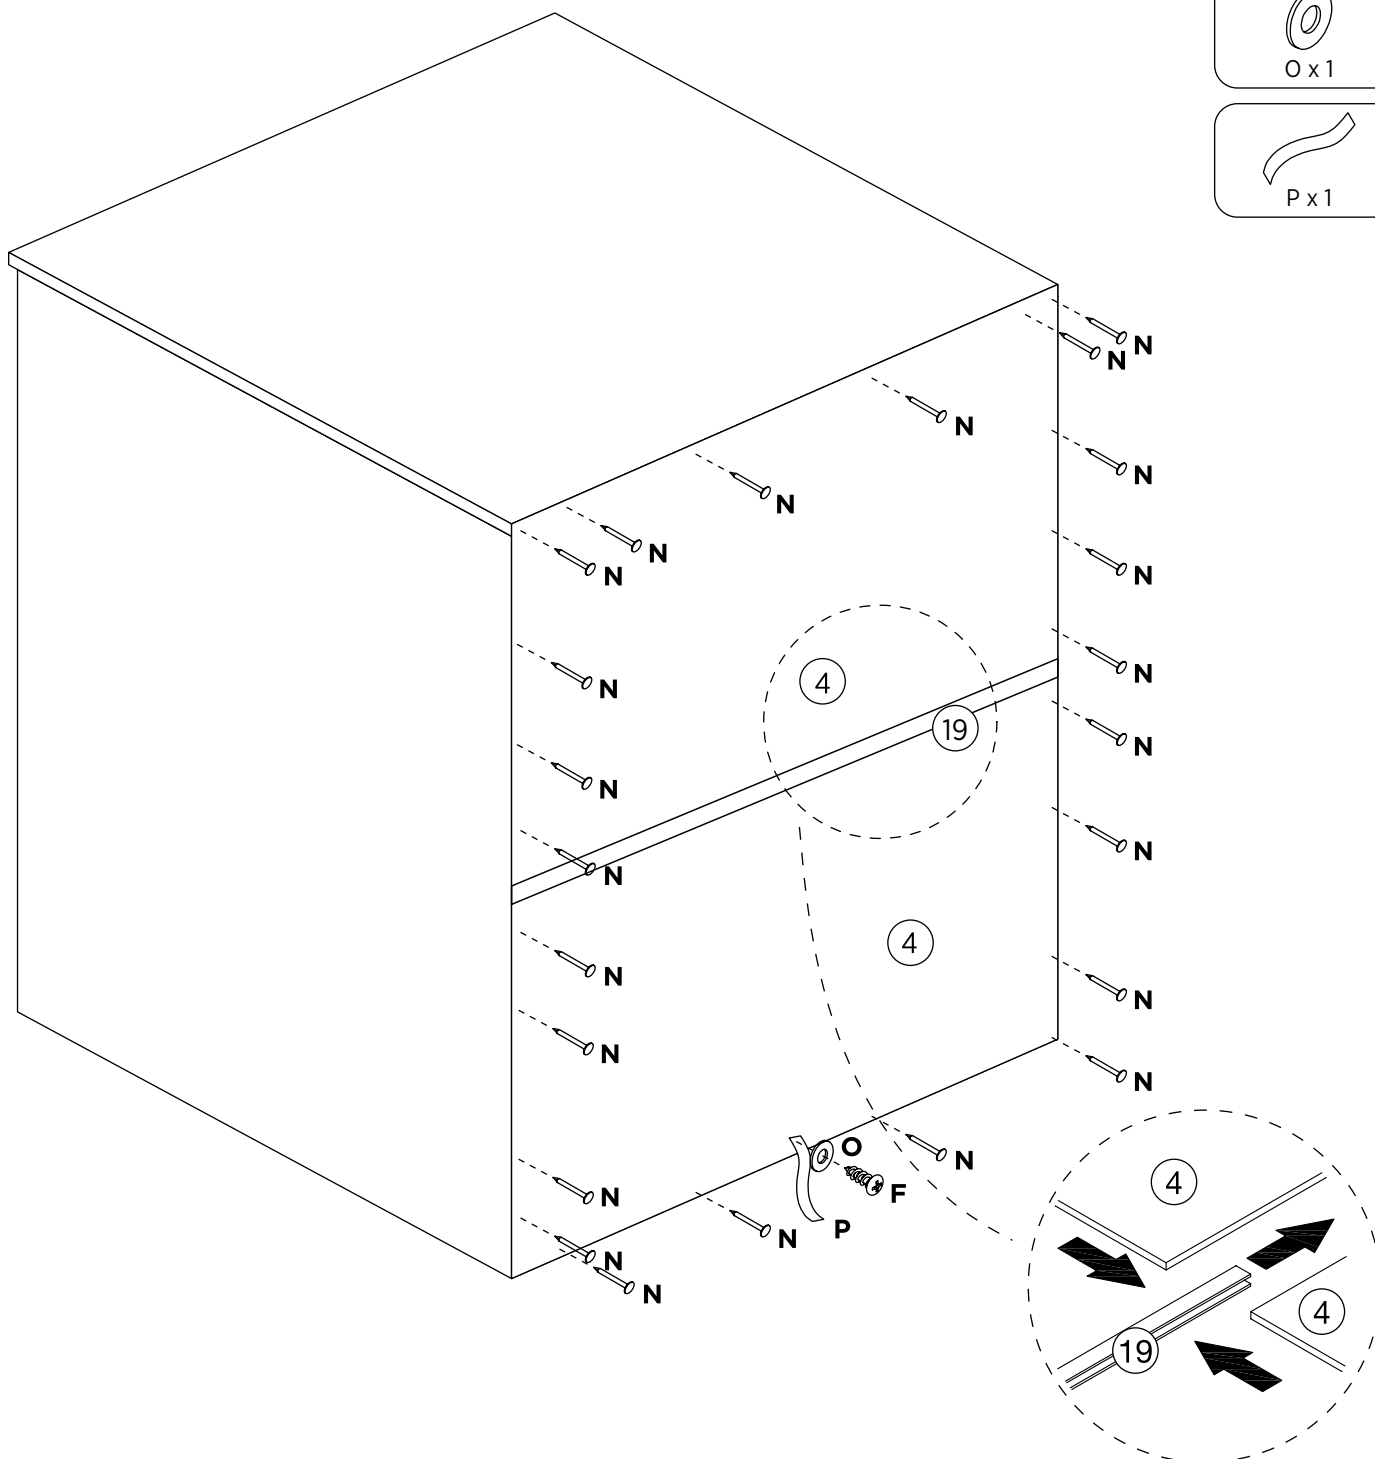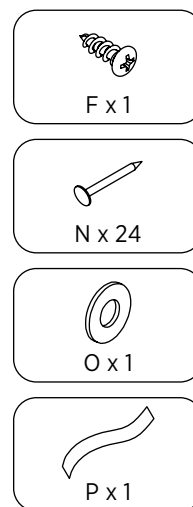

ASSEMBLY INSTRUCTIONS

STEP 16

Fix castor wheels (G) and (H) to parts 5 and 6 using screws (F), as shown.



 
F x 16



G x 2




H x 2

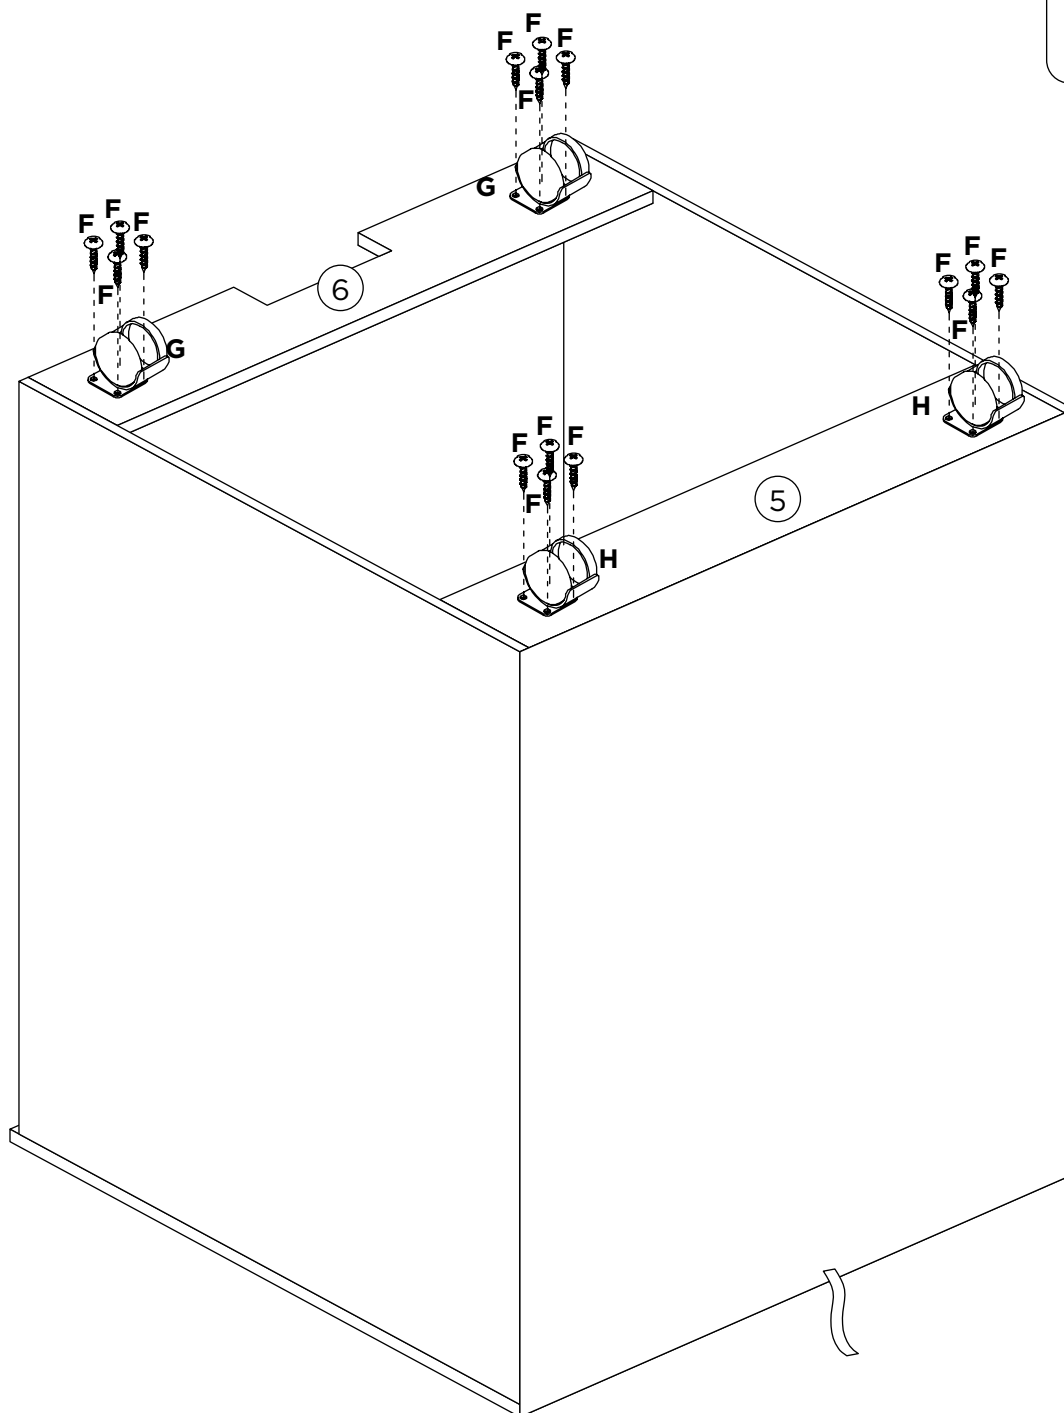

ASSEMBLY INSTRUCTIONS

STEP 17

 Insert drawers into assembled unit, as shown.

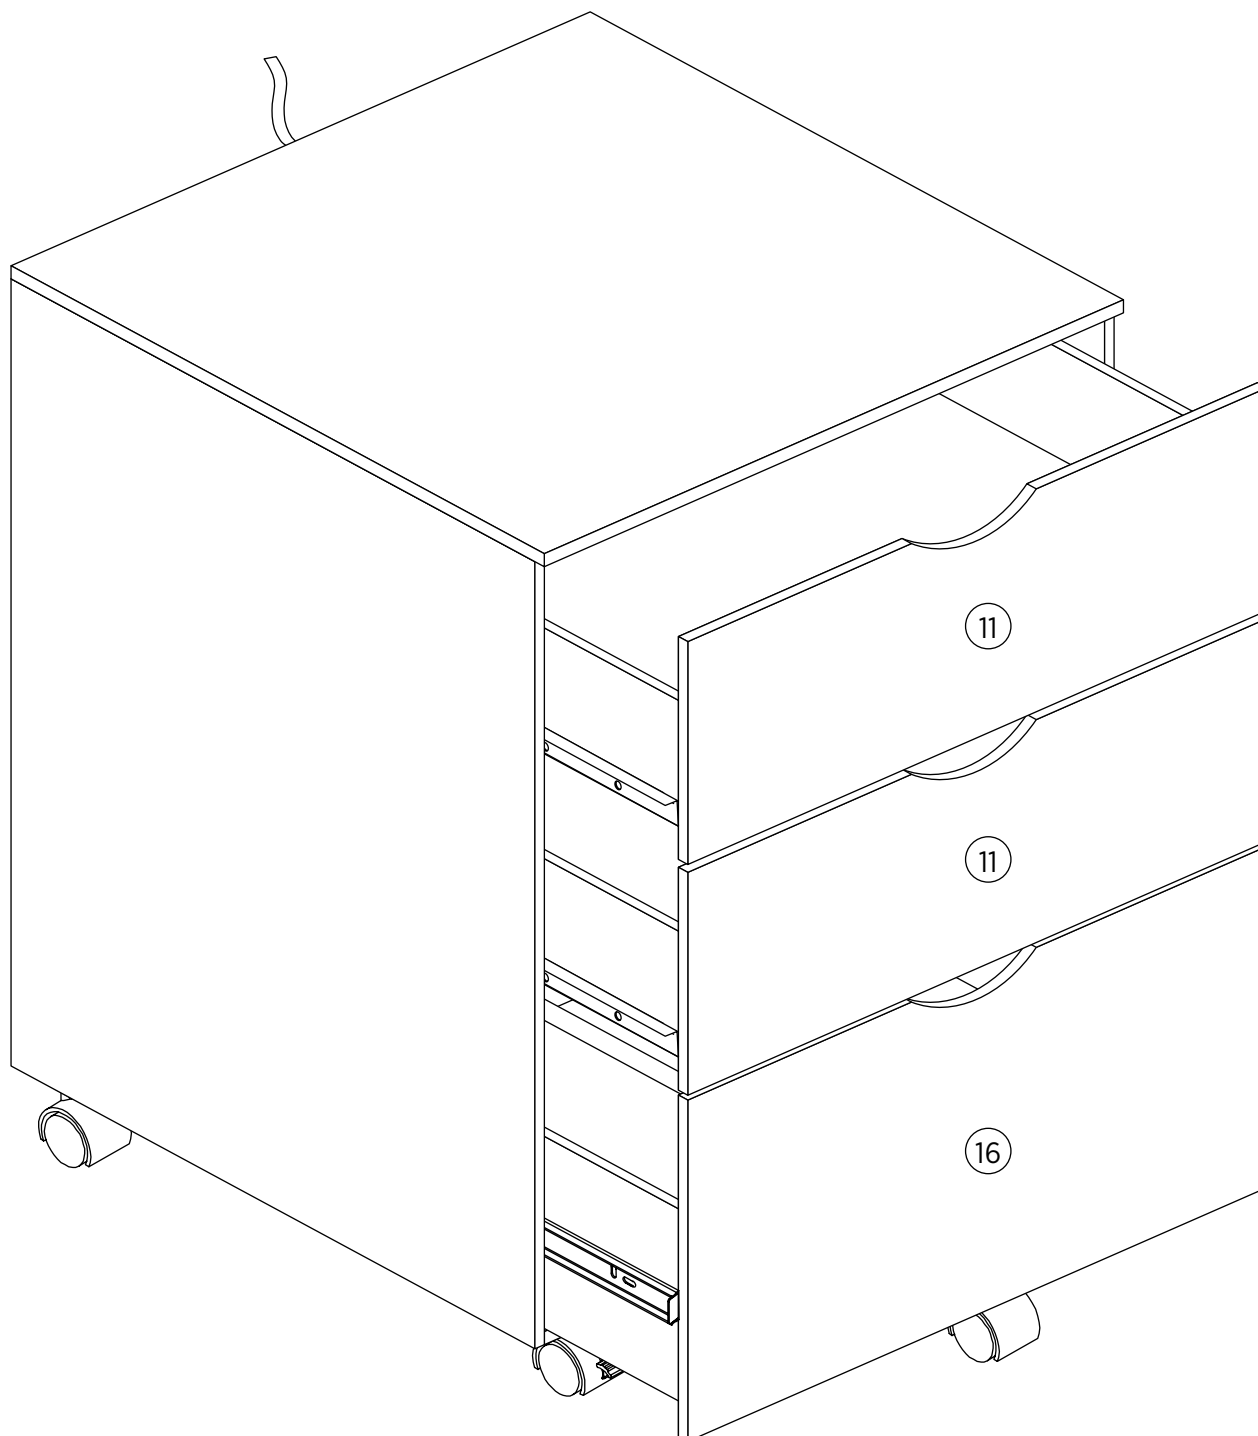





ASSEMBLY INSTRUCTIONS

STEP 18

For extra stability, you must fix your filing cabinet to the wall using the additional hardwares (D, O and Q), as shown.

Screw (D) is fixed through washer (O) and into the wall plug (Q).

    Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

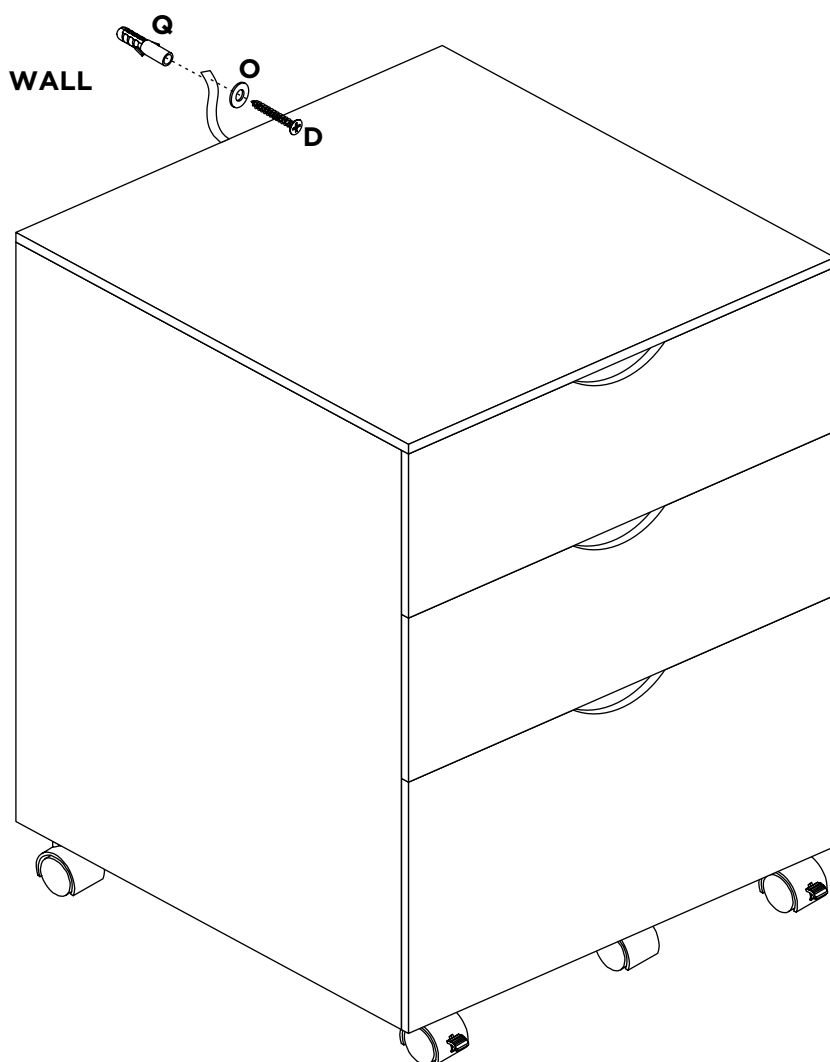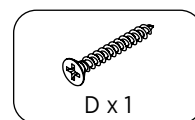

⚠ WARNING



 
Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

ASSEMBLY INSTRUCTIONS

STEP 19

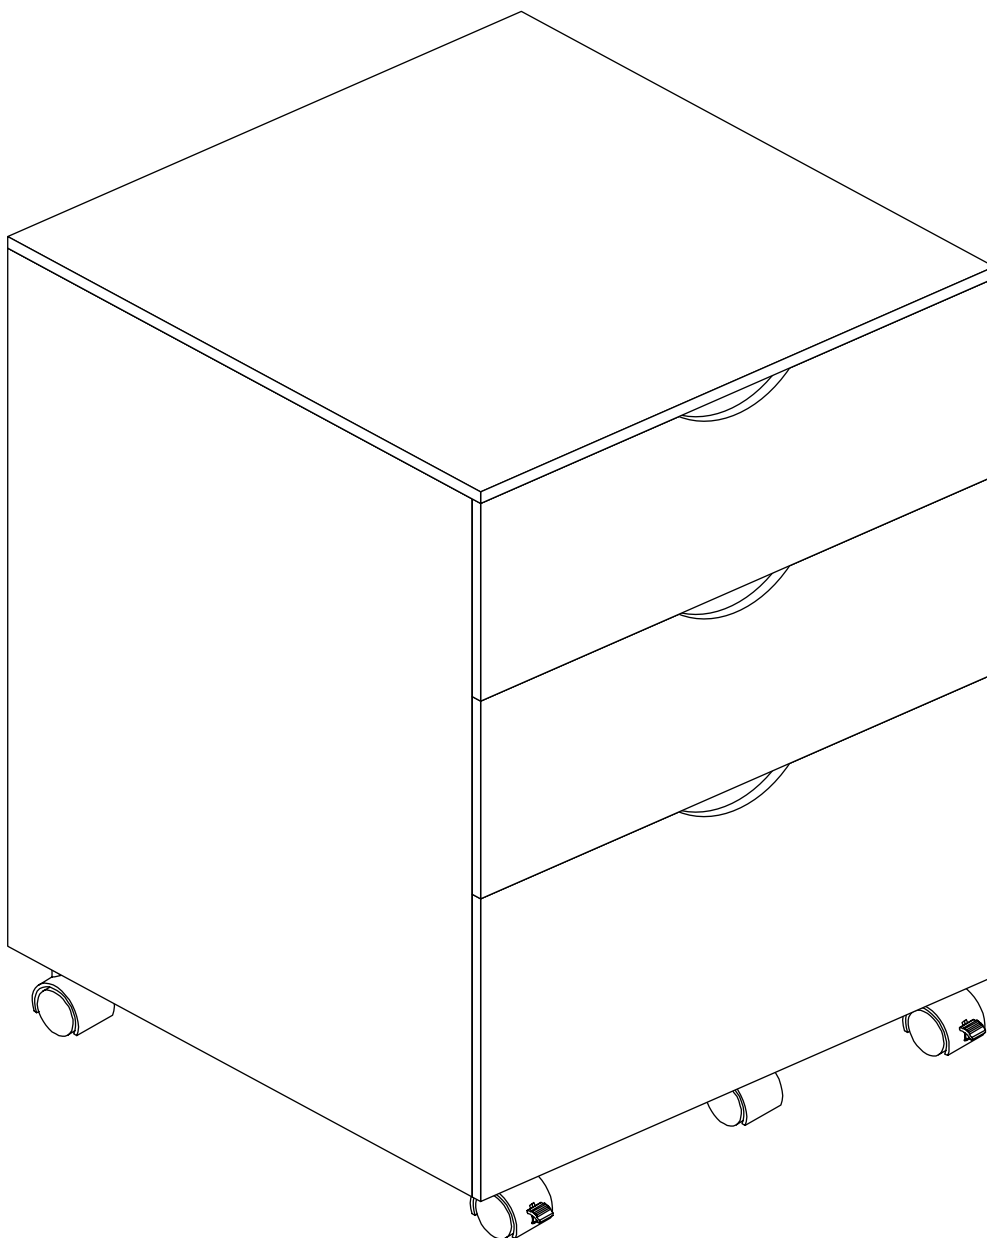

Maximum recommended weight is 5kg for each drawer and 10kg on top.

Your Filing Cabinet 3 Drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

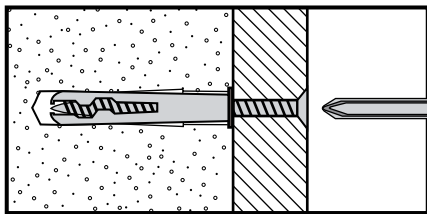


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

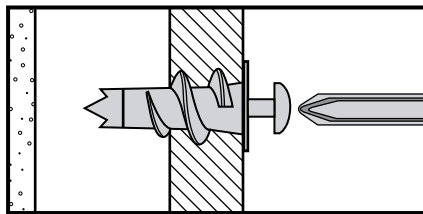


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

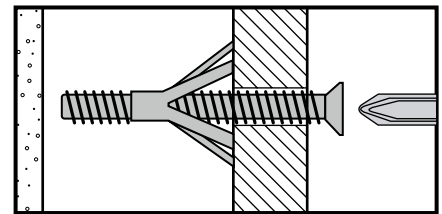


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

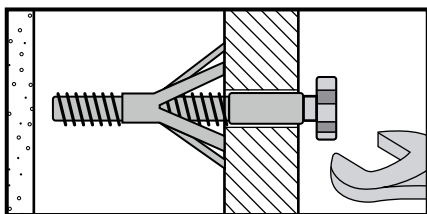


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

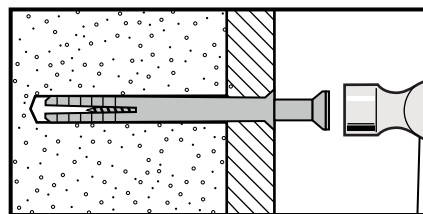

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

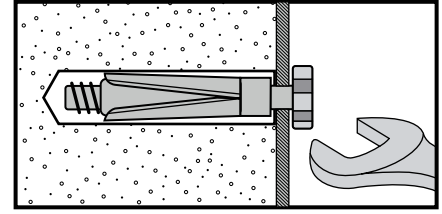

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.