 


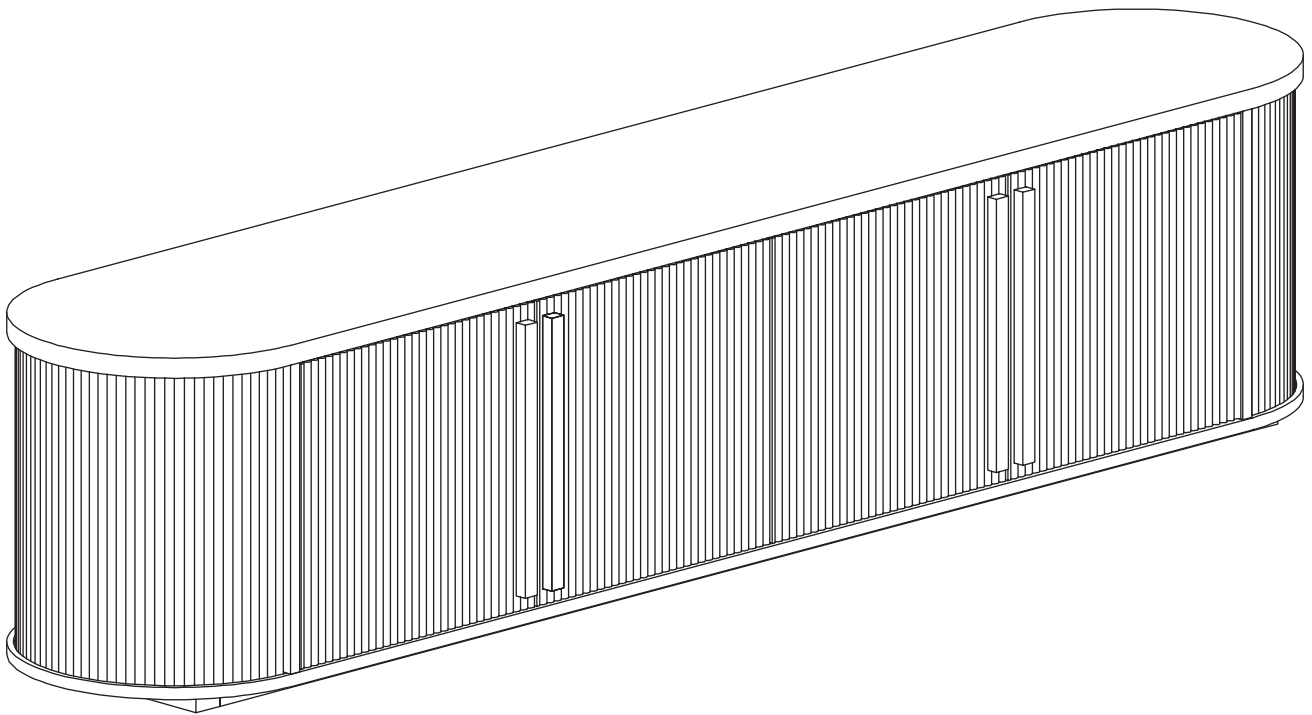

TV UNIT 4 DOORS

ASSEMBLY INSTRUCTIONS



TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver and hammer
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

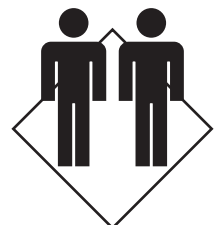

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **ALWAYS** secure your television to this furniture with an anchor device or mount the television on a wall

For more information, visit <https://www.productsafety.gov.au>

 **WARNING**

	
--	---

 
Children have died from furniture tipover.

- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **ALWAYS** secure your television with an anchor device or mount the television on a wall.

USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

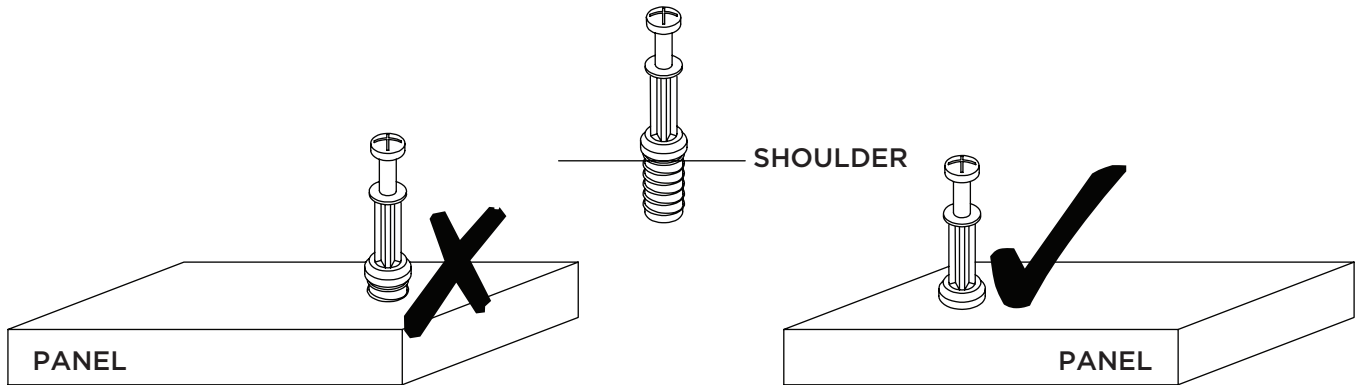



CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

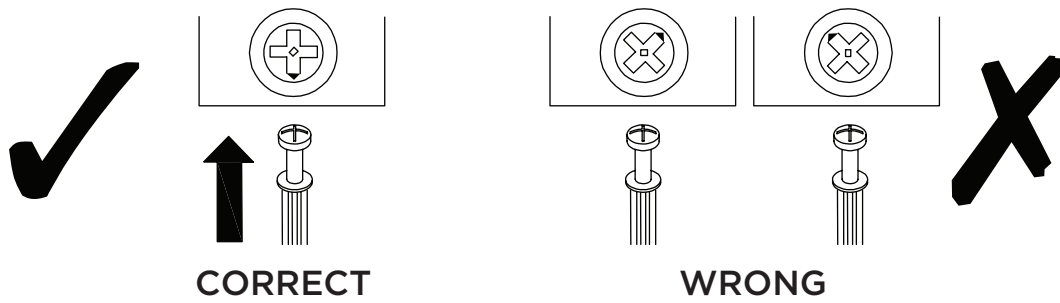

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

  Turn cam lock clockwise to tighten.

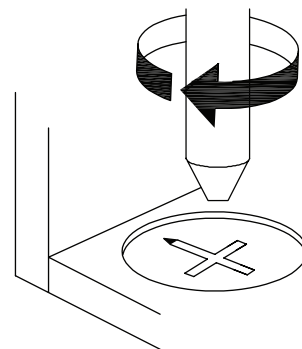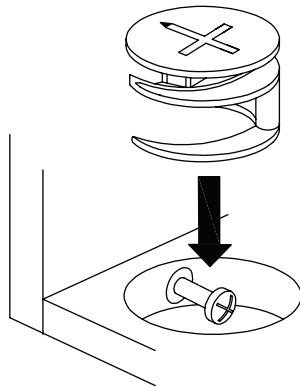


HARDWARE LIST




26 x A
Quickfit Screw



 
26 x B
Cam Lock




32 x C
Wooden Dowel

 


2 x D
Wooden Dowel

 


10 x E
Screw

 

34 x F
Screw

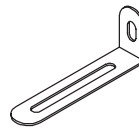 


2 x G
Wall Bracket

 


6 x H
Bolt



 
2 x I
Wall Plug




12 x J
Screw

 


4 x K
Hinge

 


4 x L
Hinge

 

24 x M
Screw

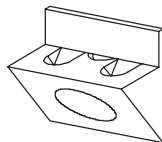 


8 x N
Wedge

 

1 x O
Allen Key





















 12 x P
Screw



4 x Q
Handle

                  PARTS LIST

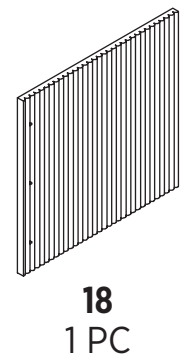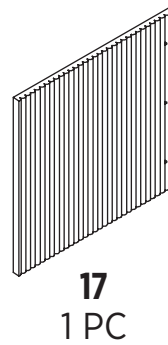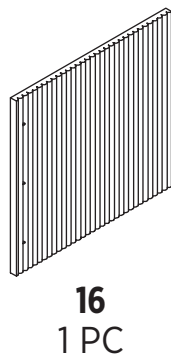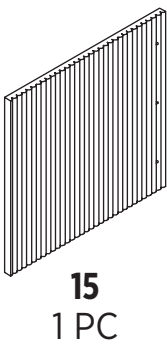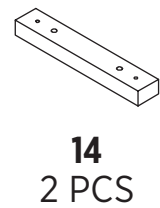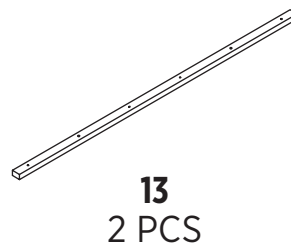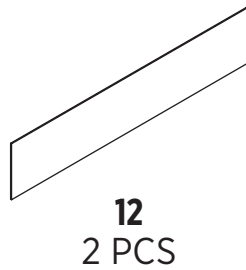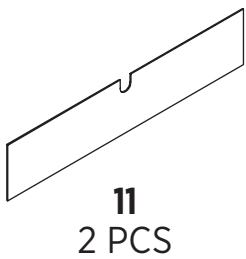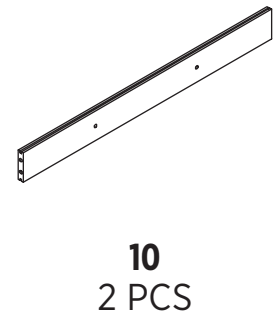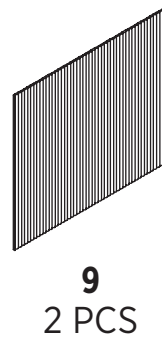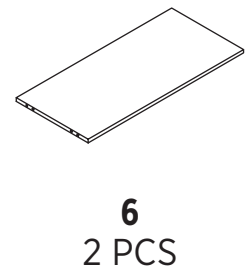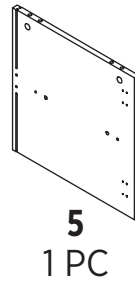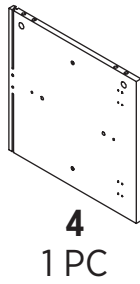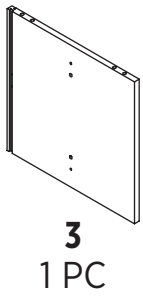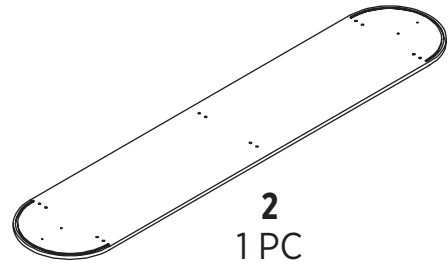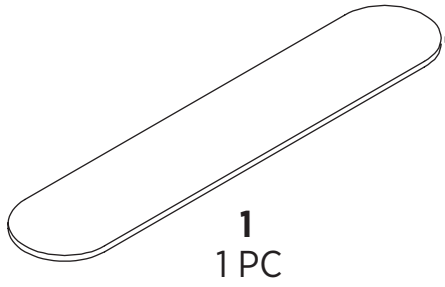




ASSEMBLY INSTRUCTIONS

STEP 1

Insert wooden dowels (C) to parts 7 and 8.

Fix parts 7 to part 3 using screws (E).

   Fix part 8 to part 4 using screws (E), as shown.

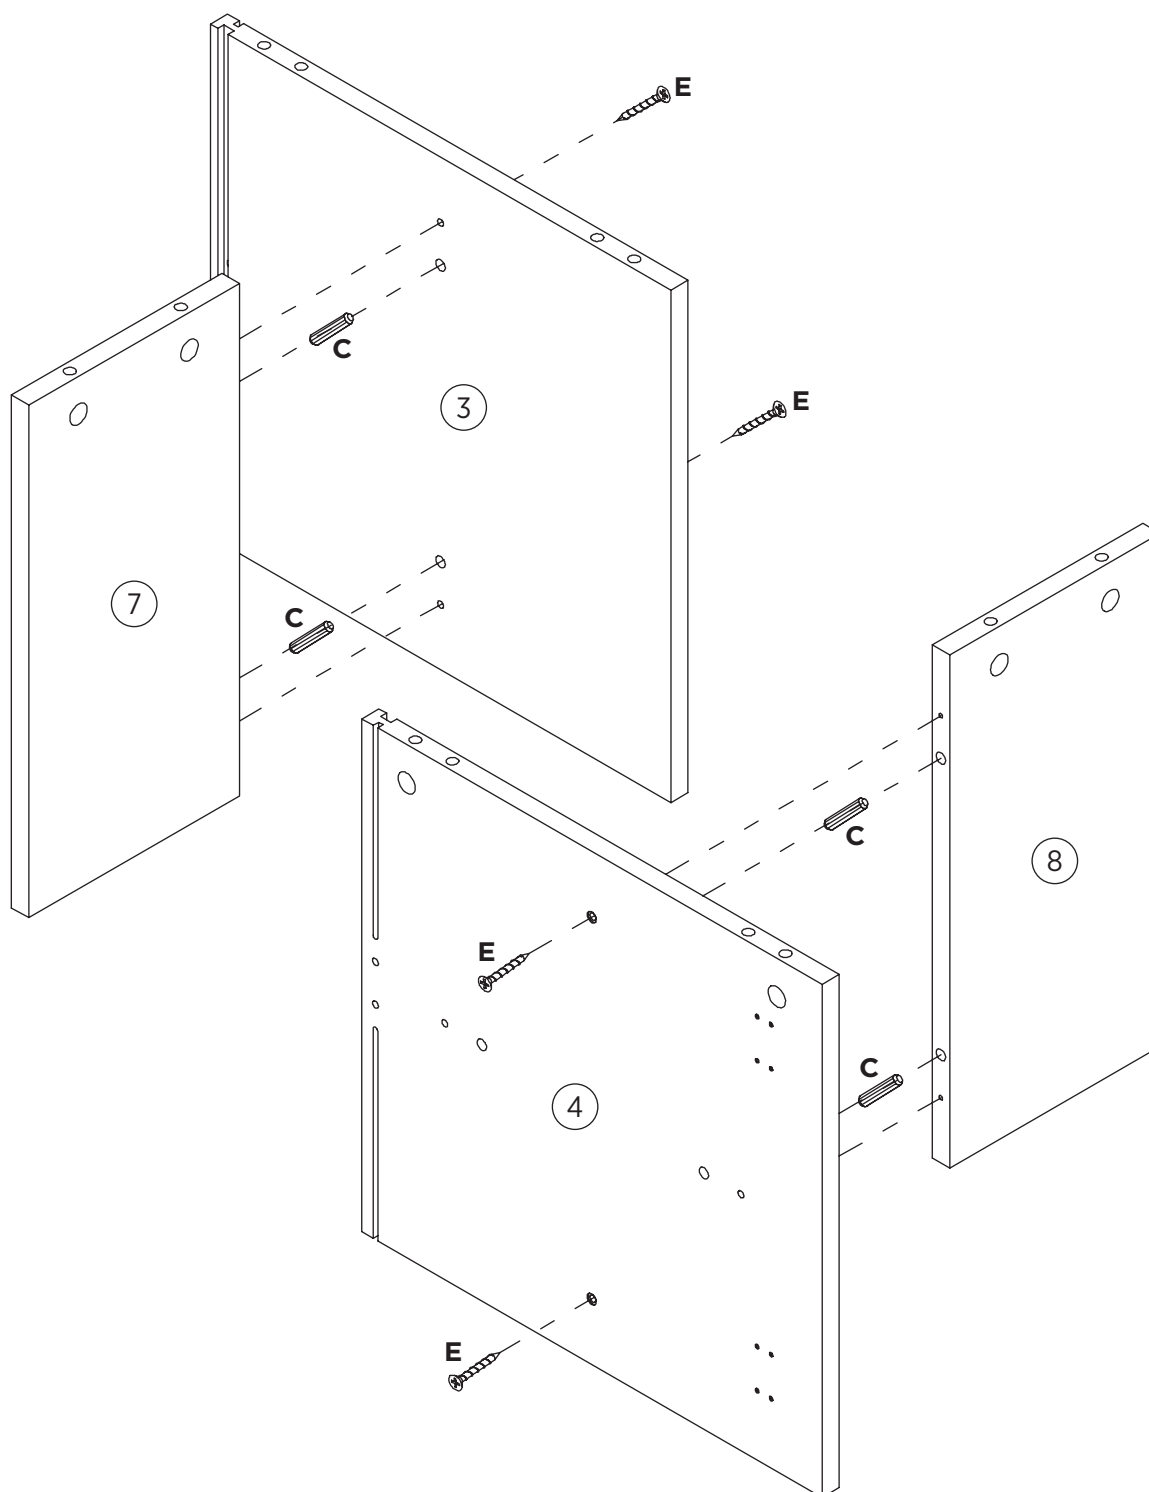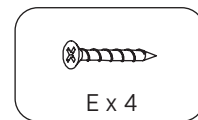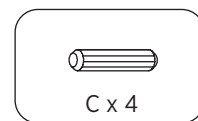


ASSEMBLY INSTRUCTIONS

STEP 2

Insert quickfit screws (A) to parts 3, 4 and 5, as shown.



 A x 16


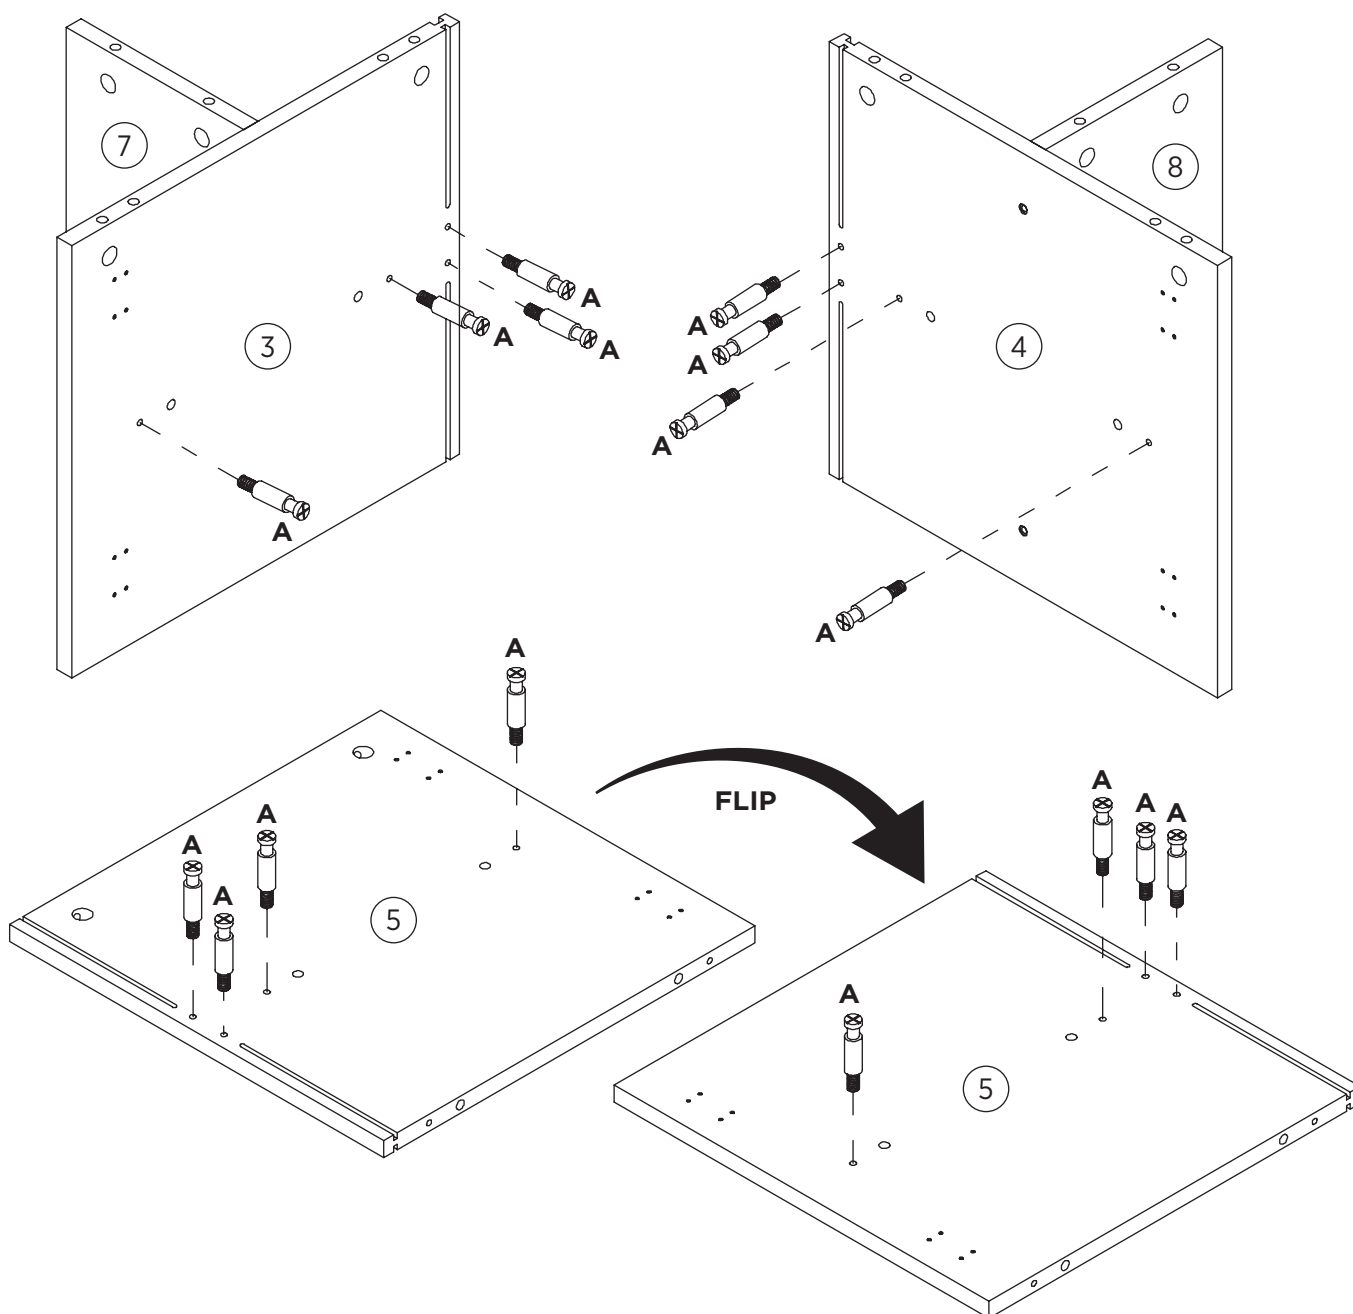


ASSEMBLY INSTRUCTIONS

STEP 3

Insert wooden dowels (C) to parts 10.

  Attach parts 10 to part 6, as shown.

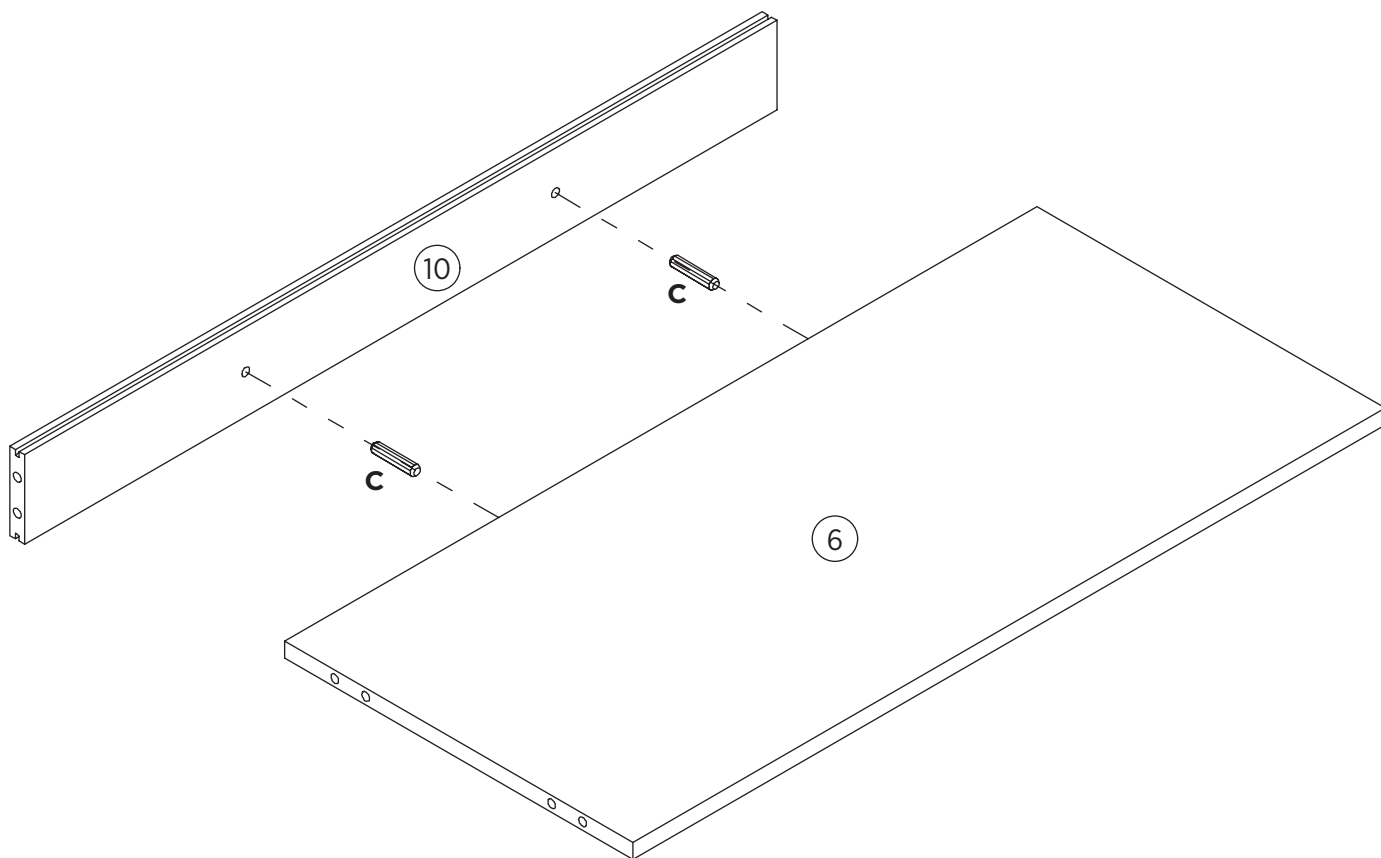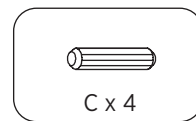

x2

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 4

Insert cam locks (B) to parts 6 and 10.

Insert wooden dowels (C) to parts 3 and 5.

Attach parts 3 and 5 to parts 6 and 10, as shown.

Turn cam locks clockwise to tighten.

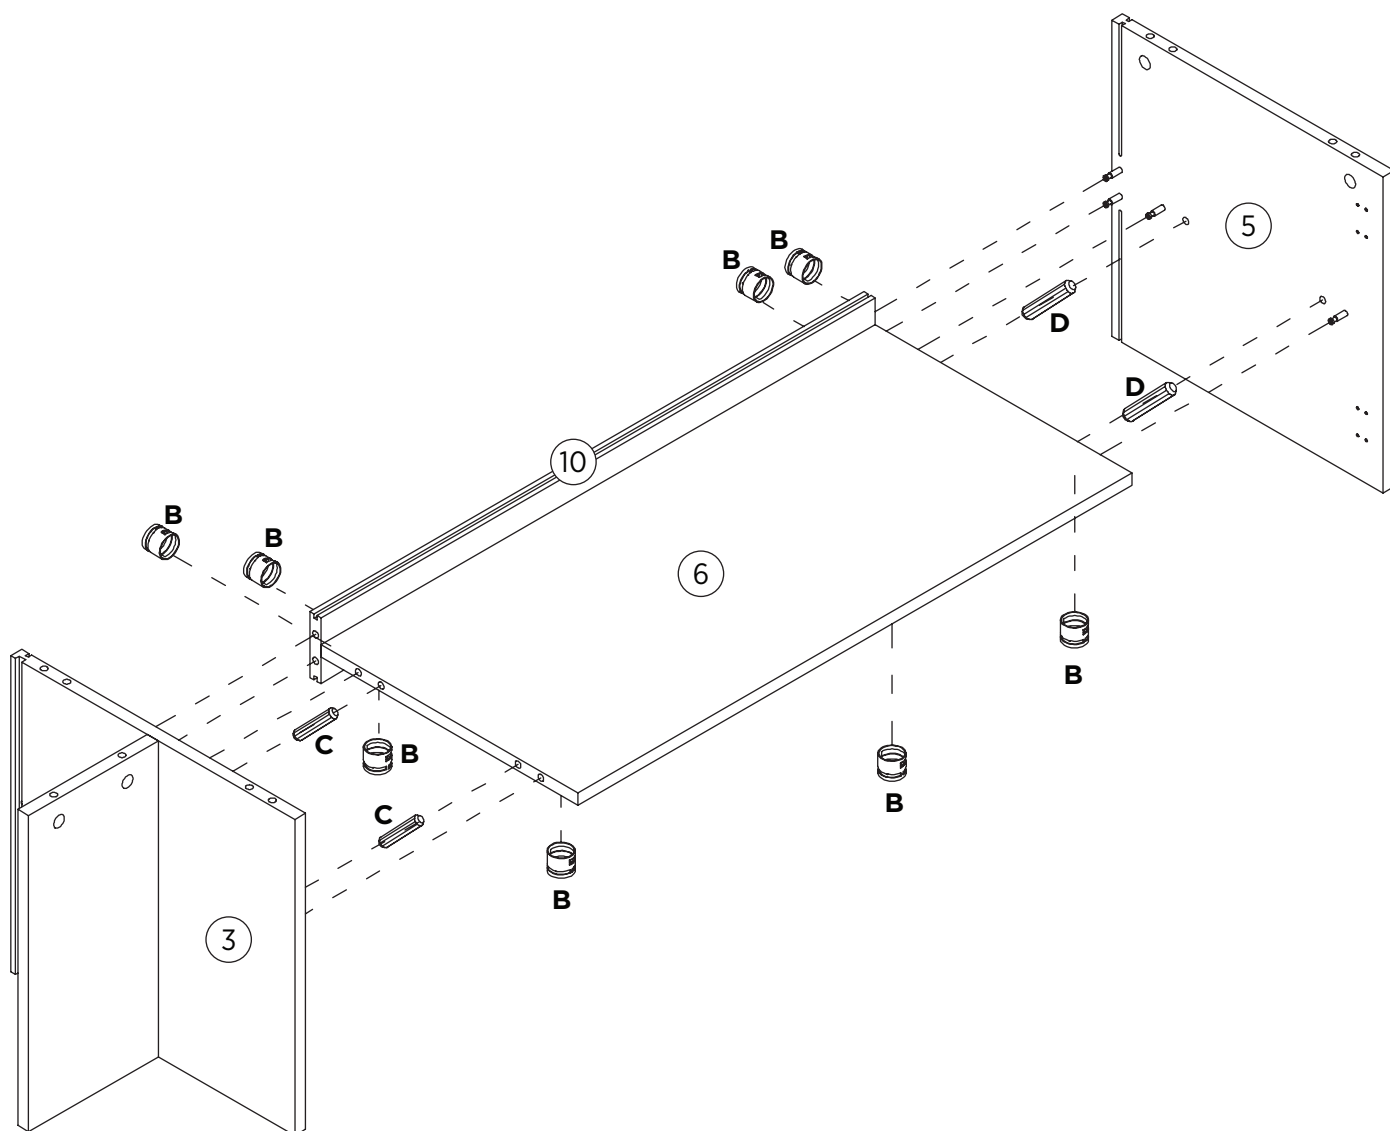

ASSEMBLY INSTRUCTIONS

 
 
STEP 5

Insert cam locks (B) to parts 6 and 10.

Insert wooden dowels (C) to parts 4 and 5.

Attach parts 4 and 5 to parts 6 and 10, as shown.


Turn cam locks clockwise to tighten.

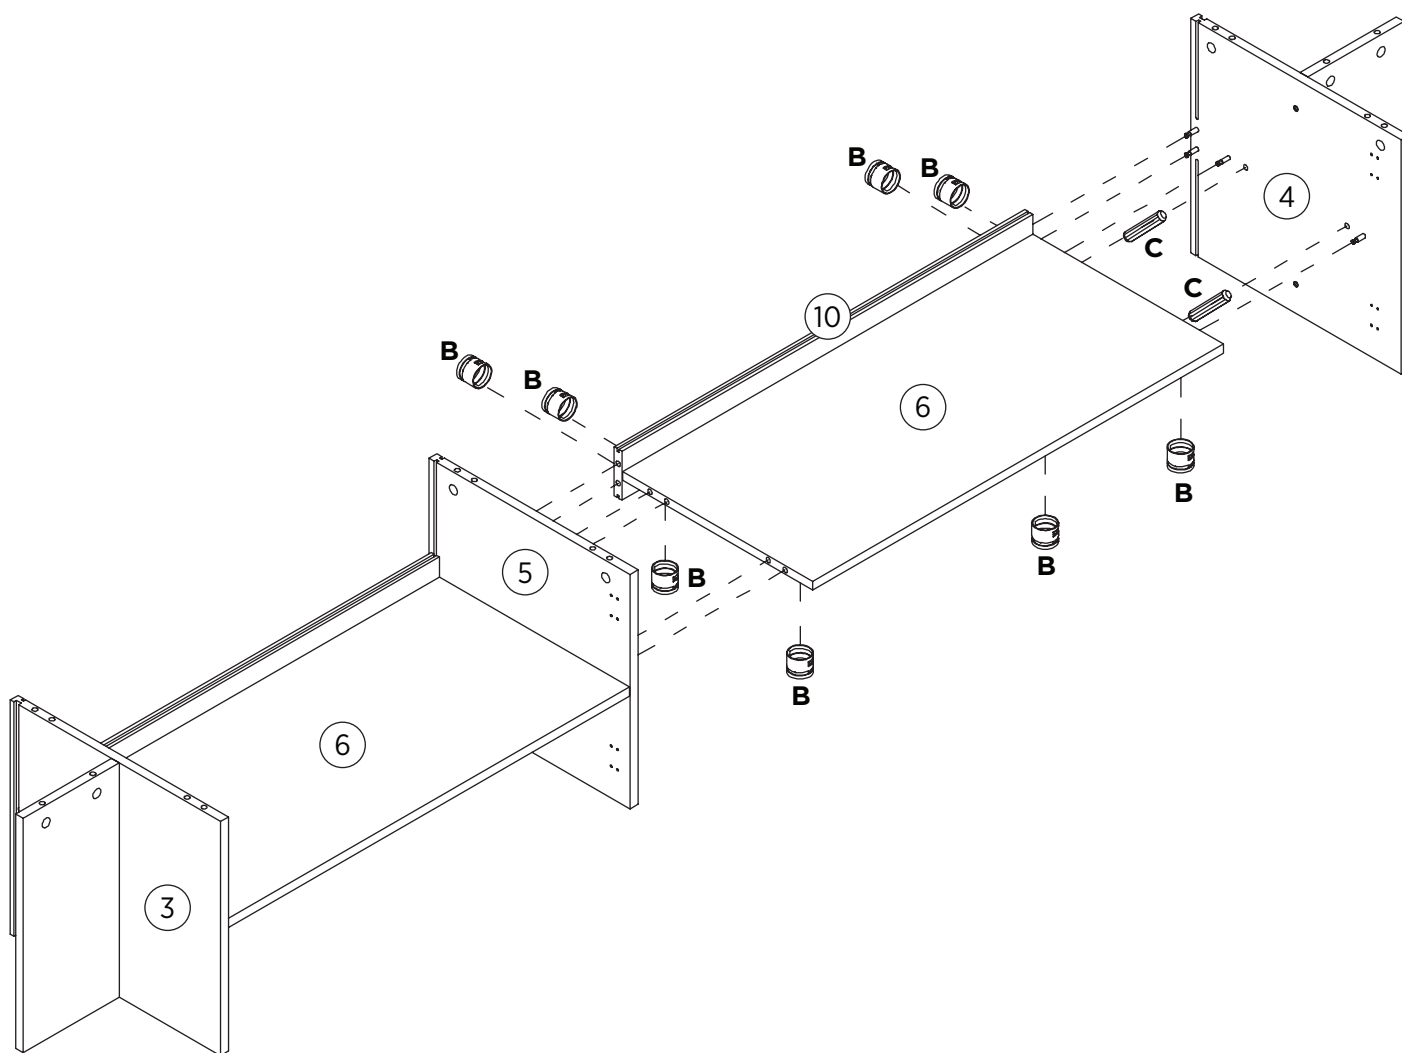

ASSEMBLY INSTRUCTIONS

STEP 6

 Insert parts 11 into grooves between parts 4, 5 and 10, as shown.



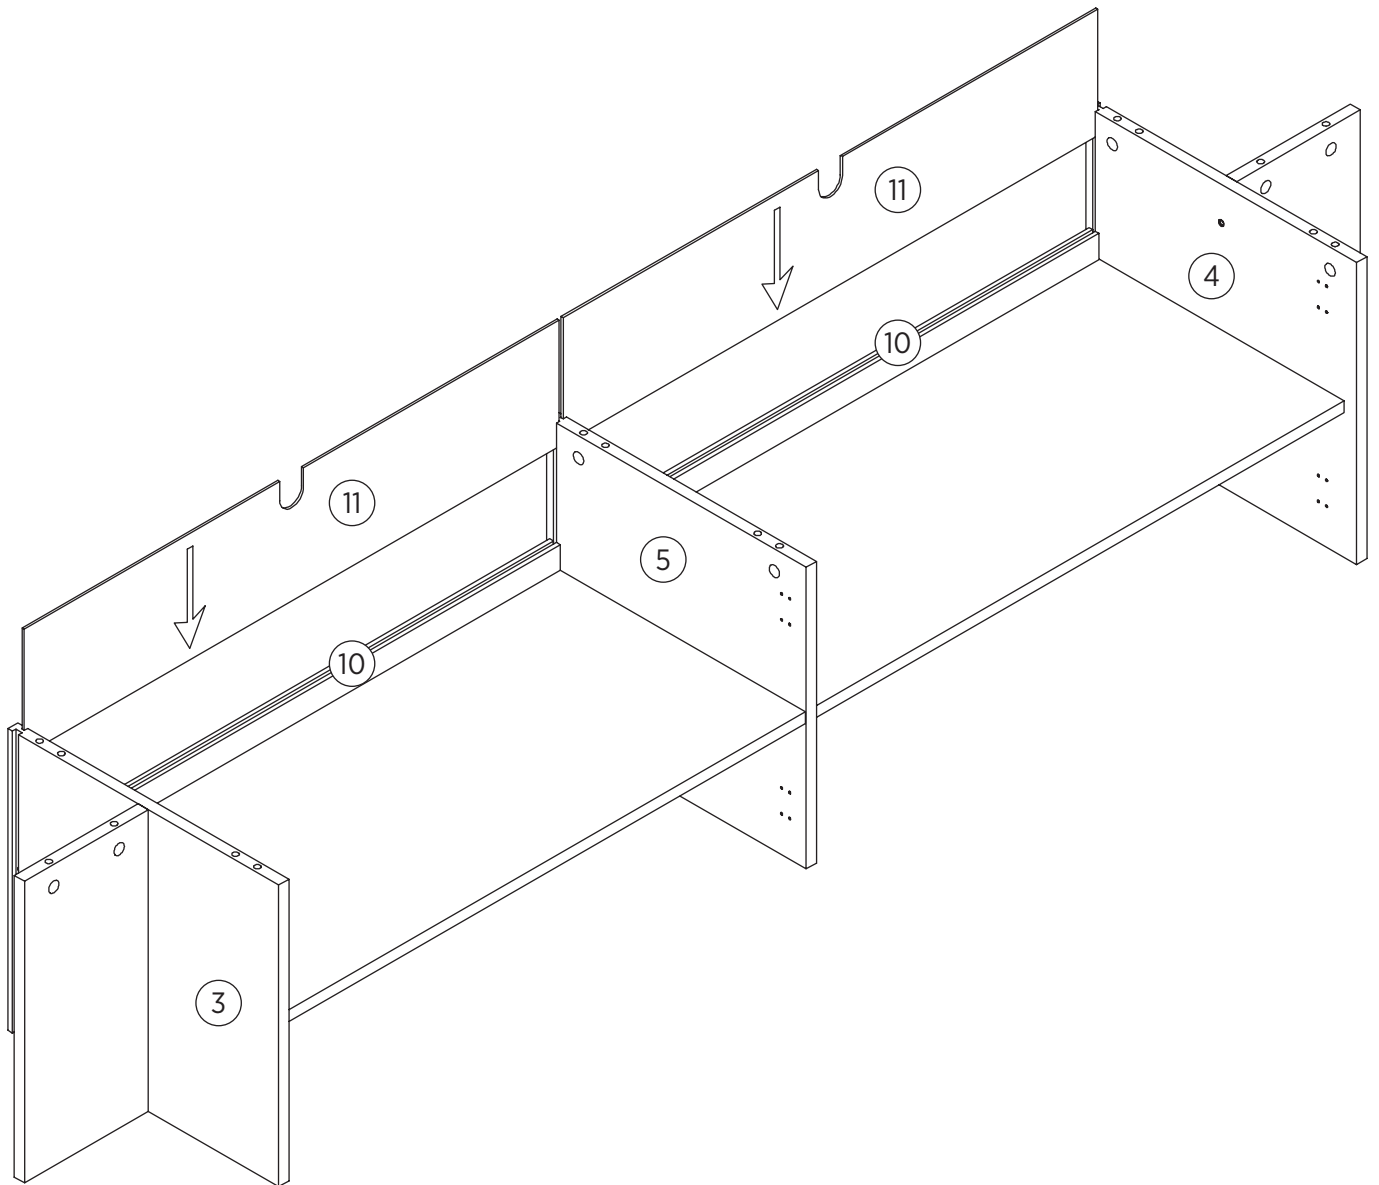


ASSEMBLY INSTRUCTIONS

STEP 7

Insert quickfit screws (A) to part 1.

   Fix wall brackets (G) to part 1 using screws (F), as shown.

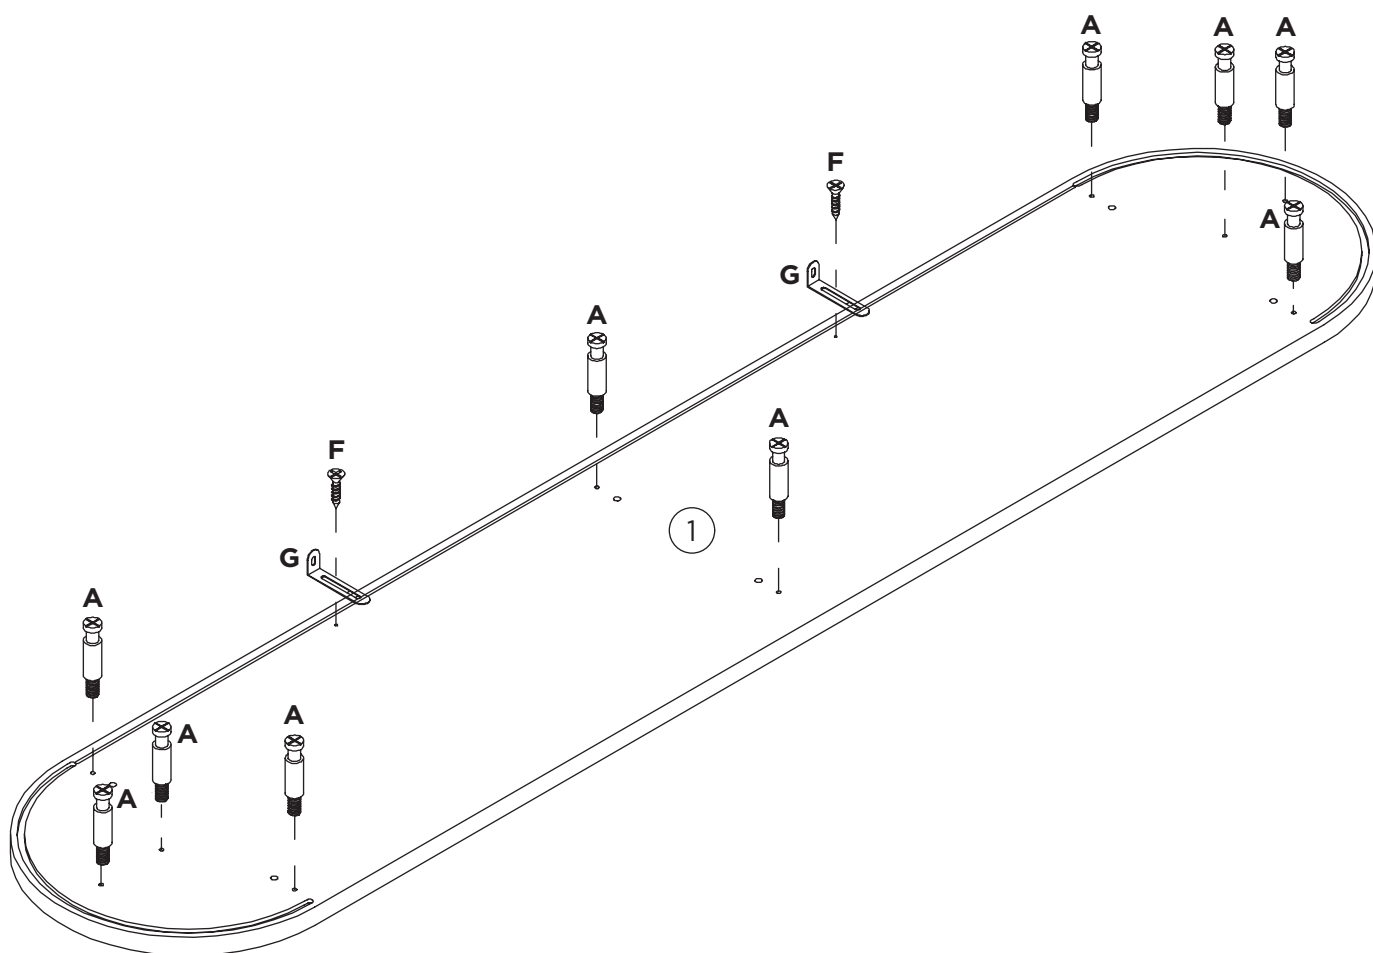



ASSEMBLY INSTRUCTIONS

STEP 8

Insert cam locks (B) and wooden dowels (C) to parts 3, 4, 5, 7 and 8.

Attach part 1 to assembled unit, as shown.

  Turn cam locks clockwise to tighten.

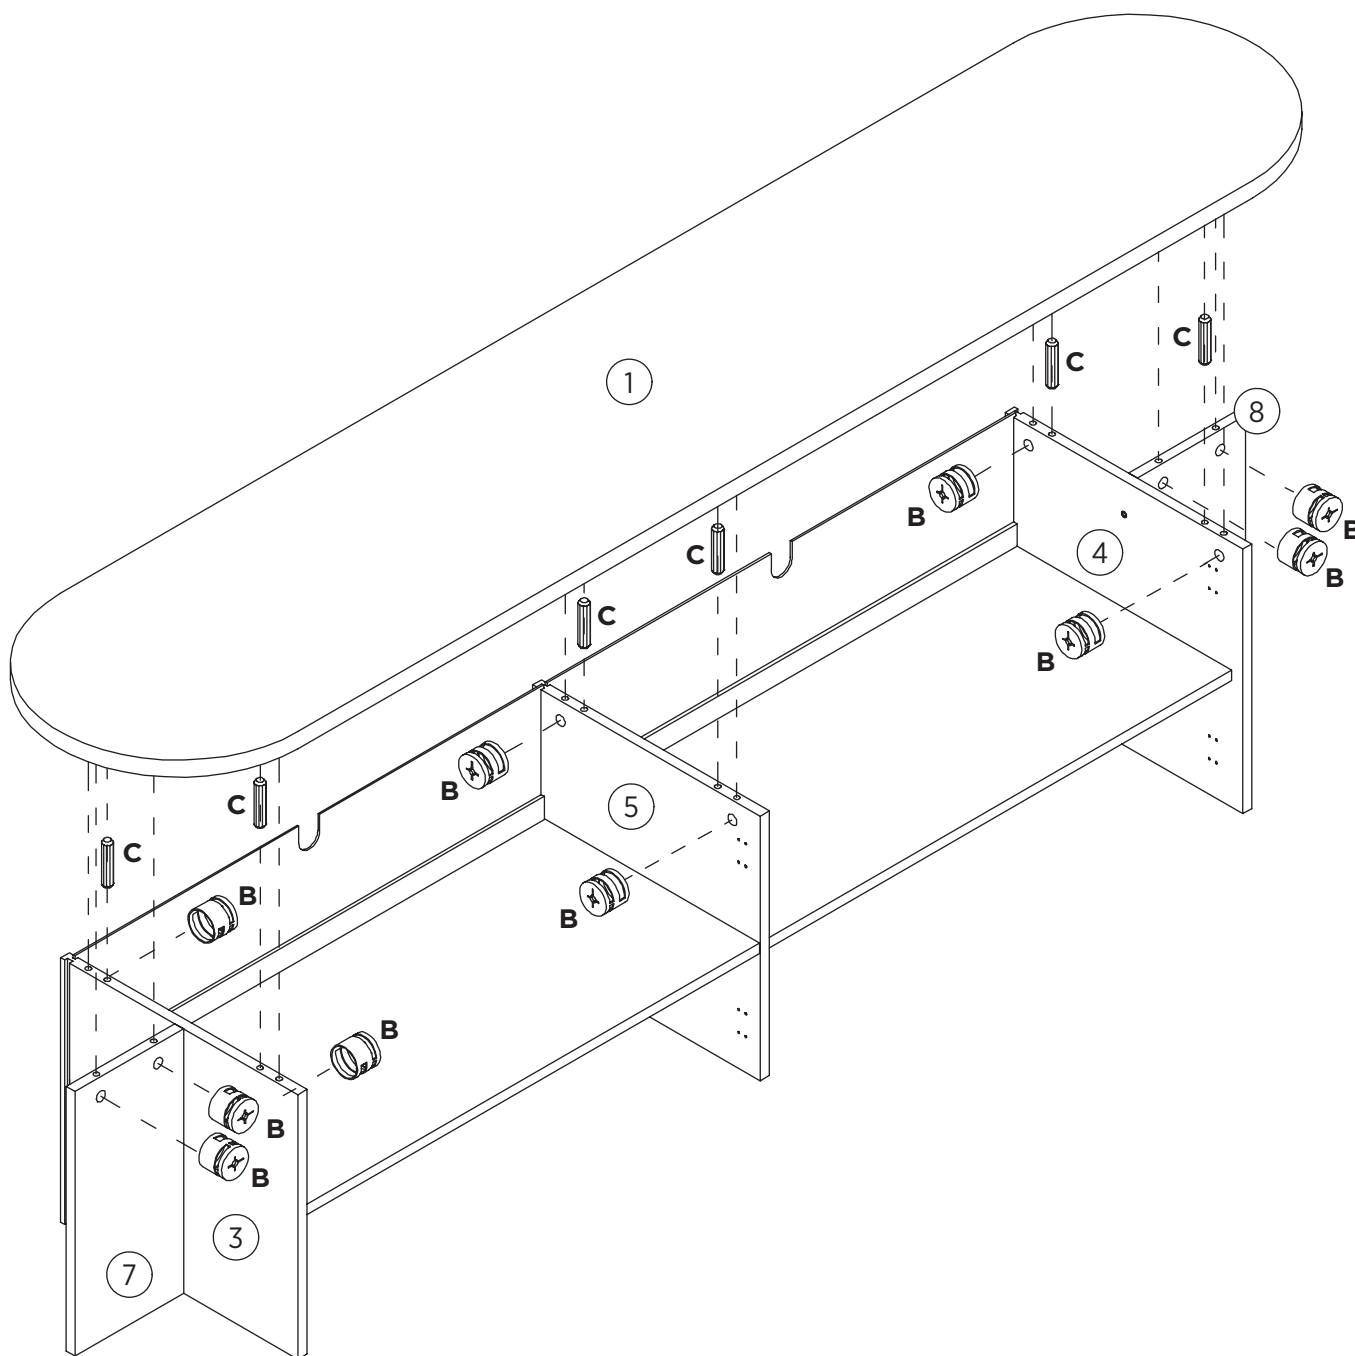


ASSEMBLY INSTRUCTIONS

STEP 9

Insert parts 12 into grooves between parts 3, 4 and 5.


 
Insert parts 9 into grooves of part 1, as shown.

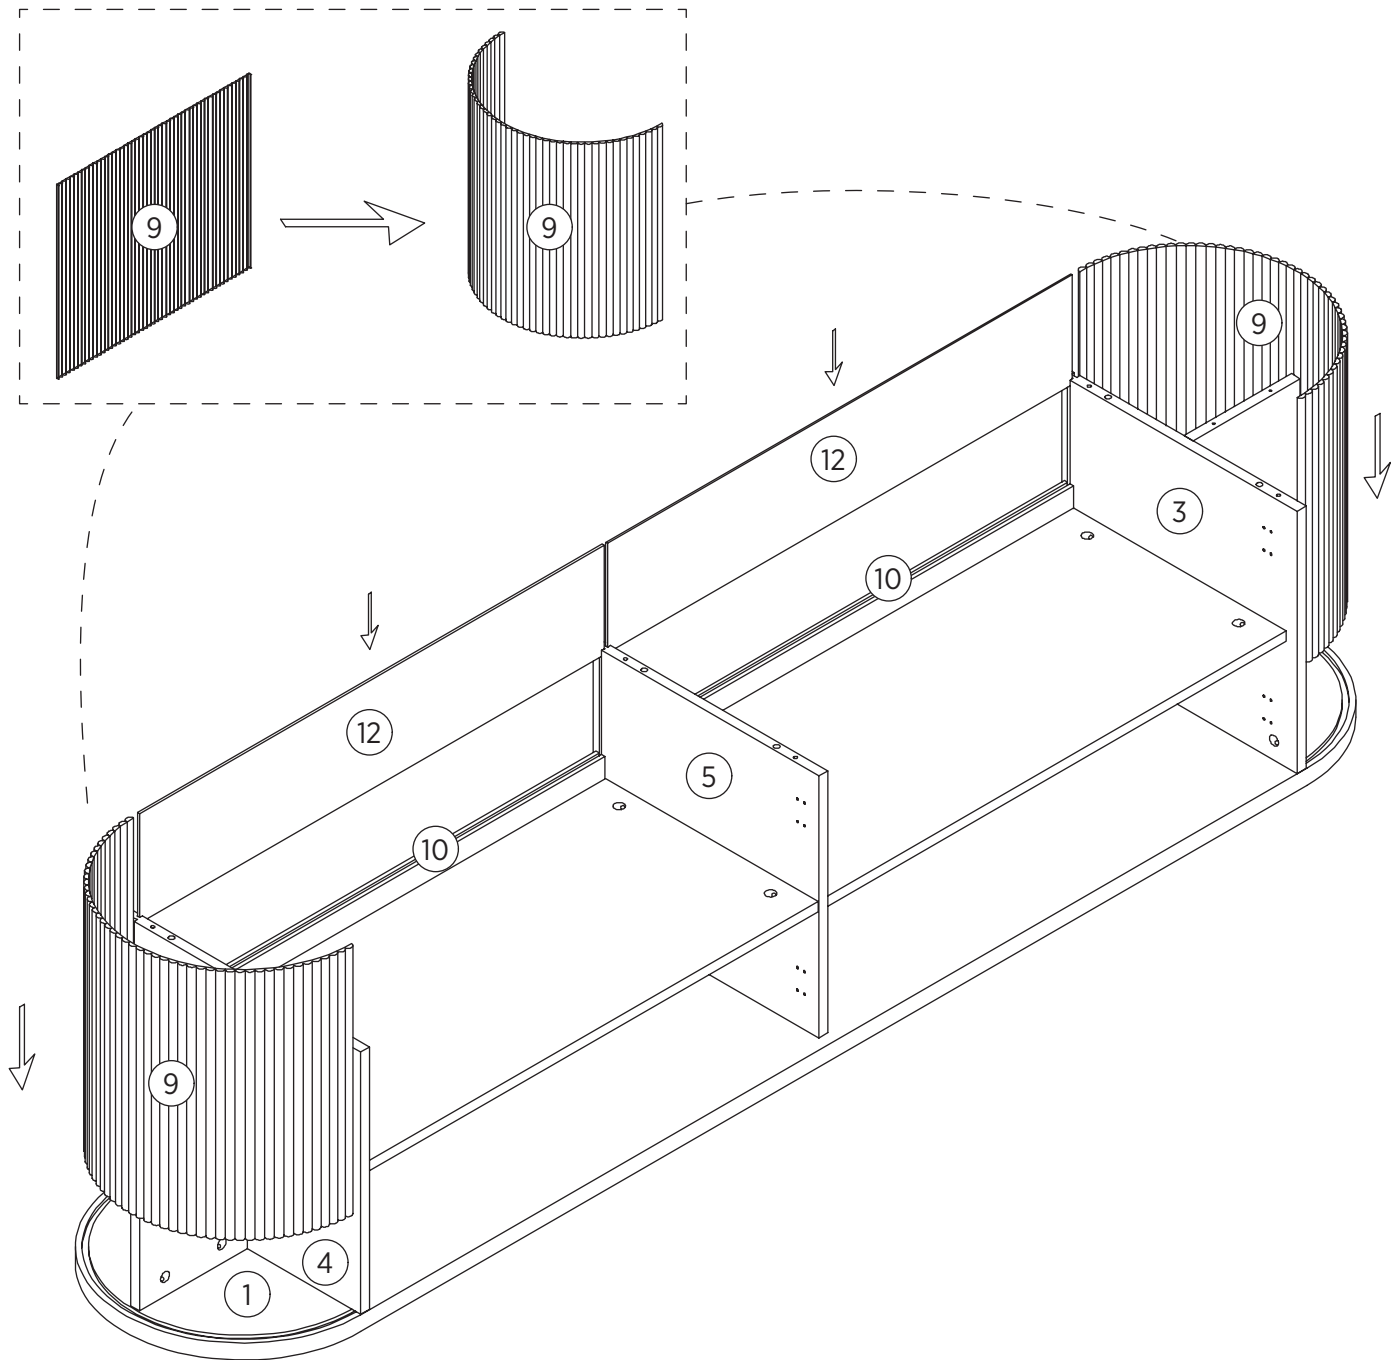

ASSEMBLY INSTRUCTIONS

STEP 10

  Insert parts 10 into groove of part 7, as shown.


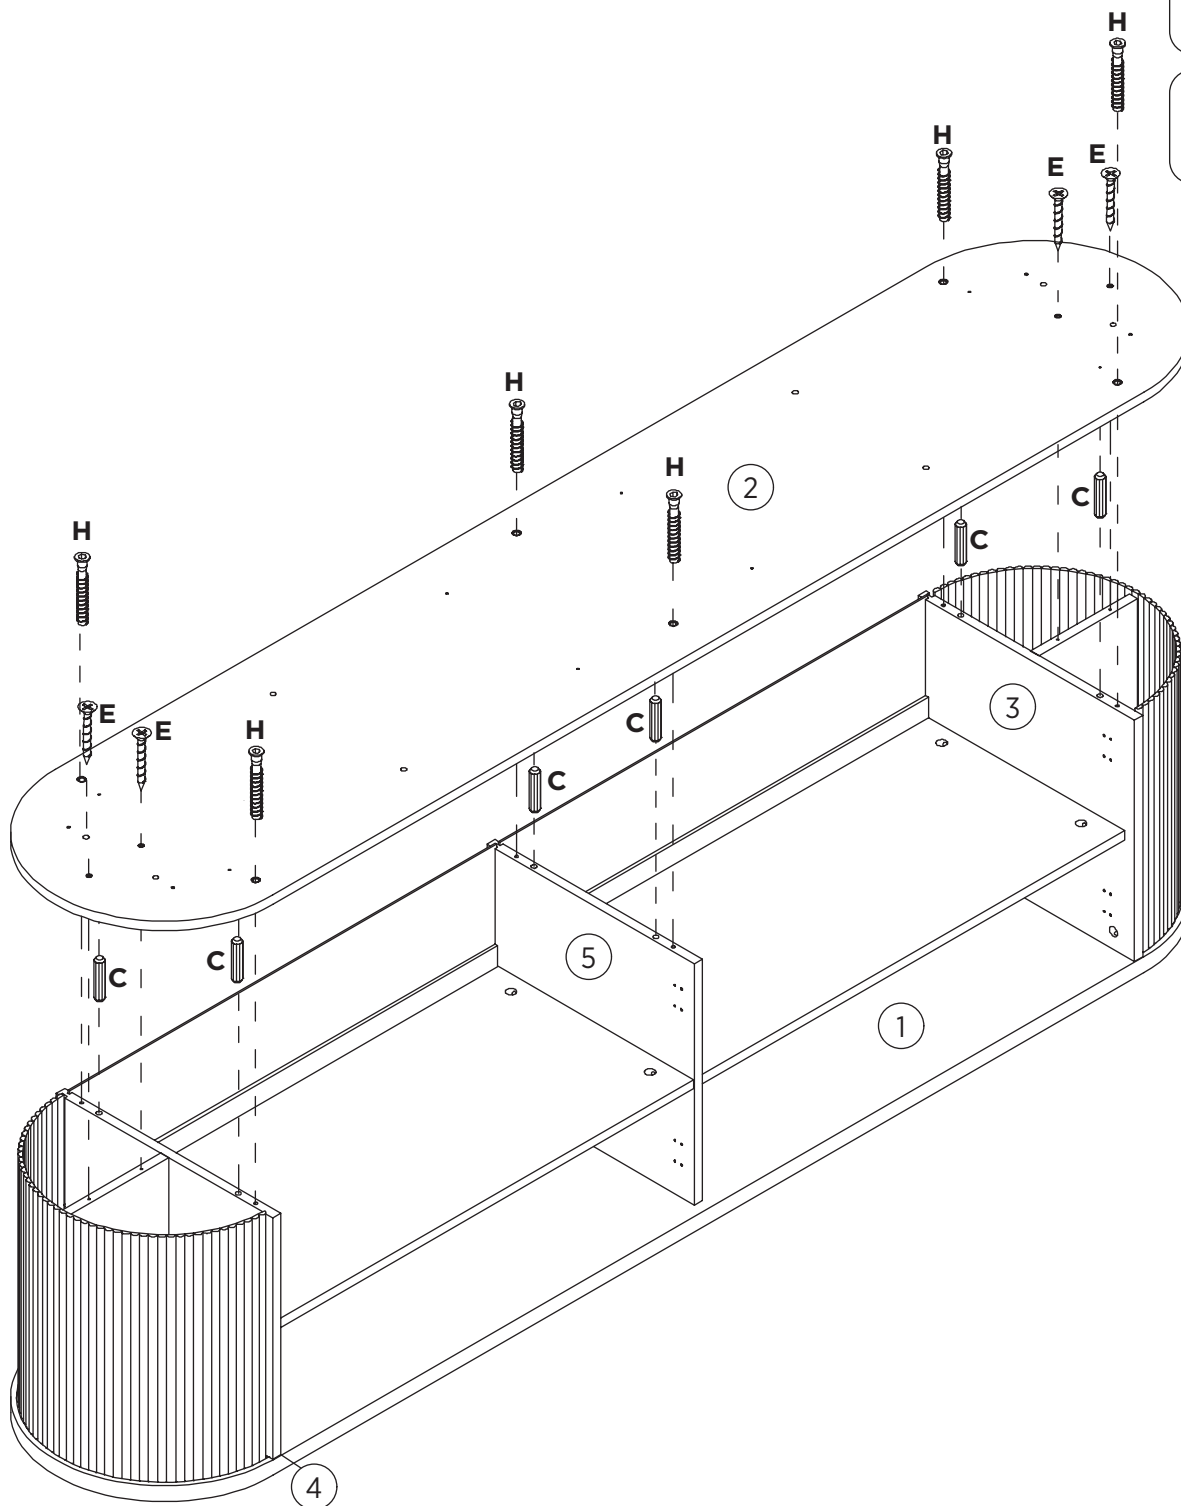
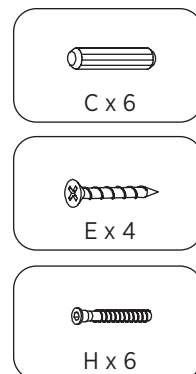


ASSEMBLY INSTRUCTIONS

STEP 11

Insert wooden dowels (C) to parts 13 and 14.

   Fix part 2 to part 13, and 14 using screws (P), as shown.

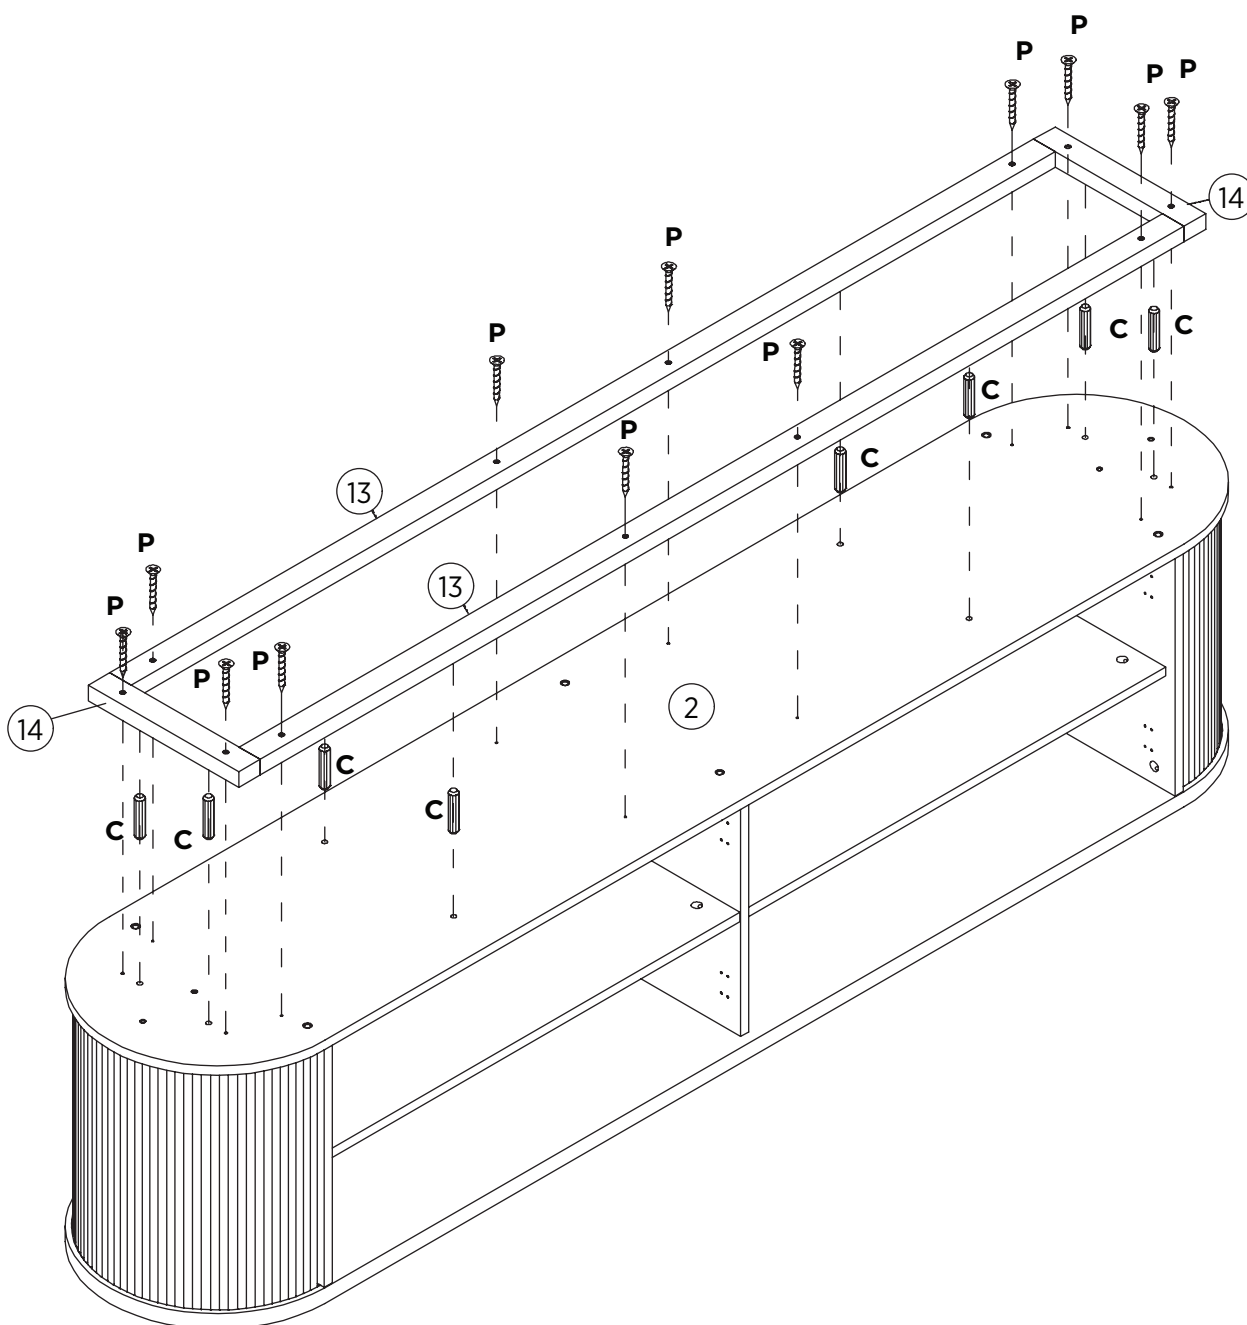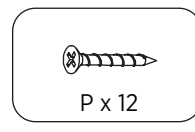

ASSEMBLY INSTRUCTIONS

STEP 12

Fix hinges (K) to parts 15 and 18 using screws (F).

Fix hinges (L) to parts 16 and 17 using screws (F)

Fix handle (Q) to parts 15, 16, 17 and 18 using screws (J), as shown



F x 16



J x 12



 
K x 4



L x 4



Q x 4


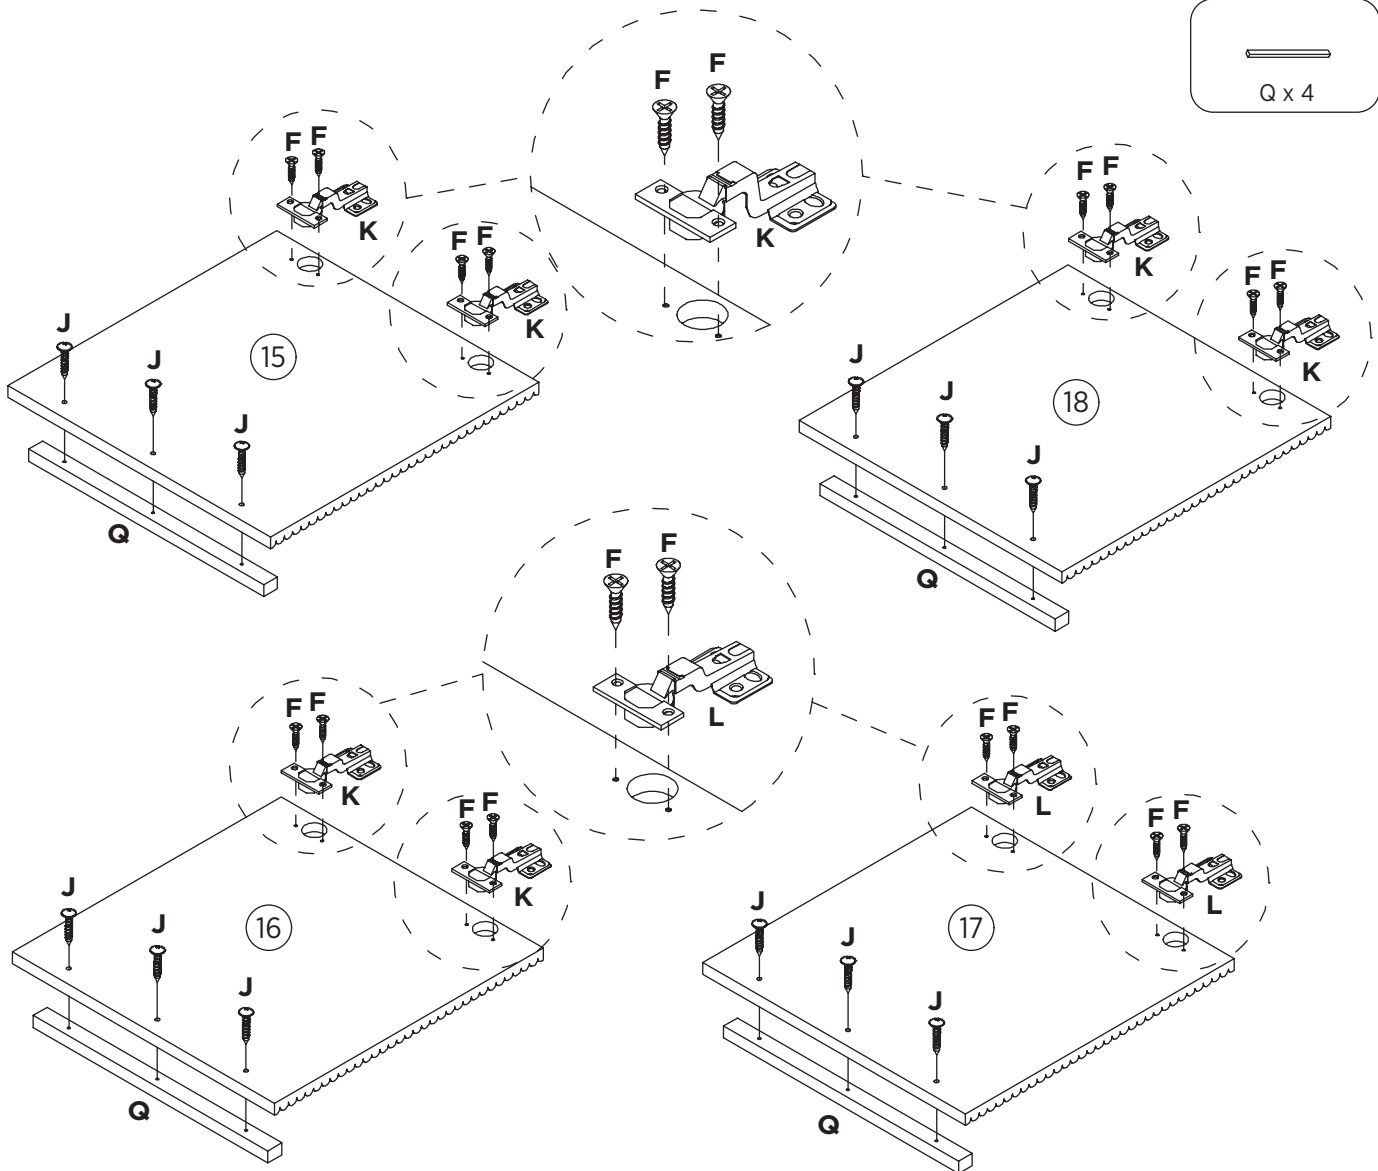


ASSEMBLY INSTRUCTIONS

STEP 13


Fix part 16 to part 5 using hinges (L) and screws (M).

  Fix part 18 to part 3 using hinges (K) and screws (F), as shown.

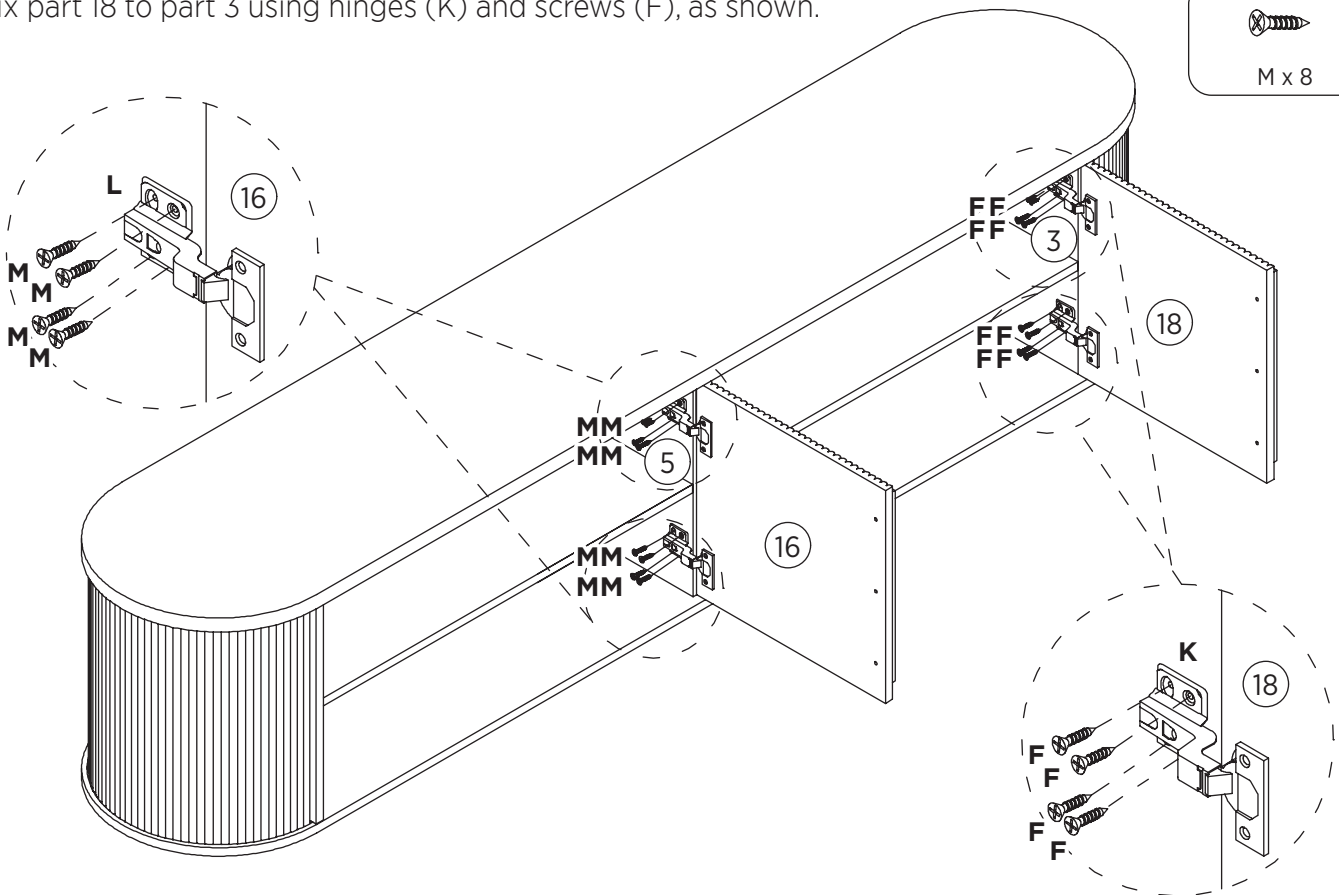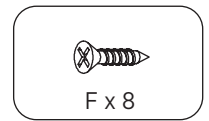


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

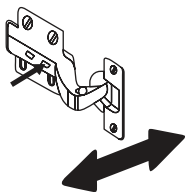

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

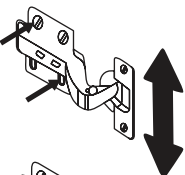

 To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

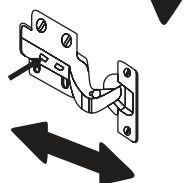



To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS

STEP 14


Fix part 17 to part 5 using hinges (L) and screws (M).

  Fix part 15 to part 4 using hinges (K) and screws (F), as shown.

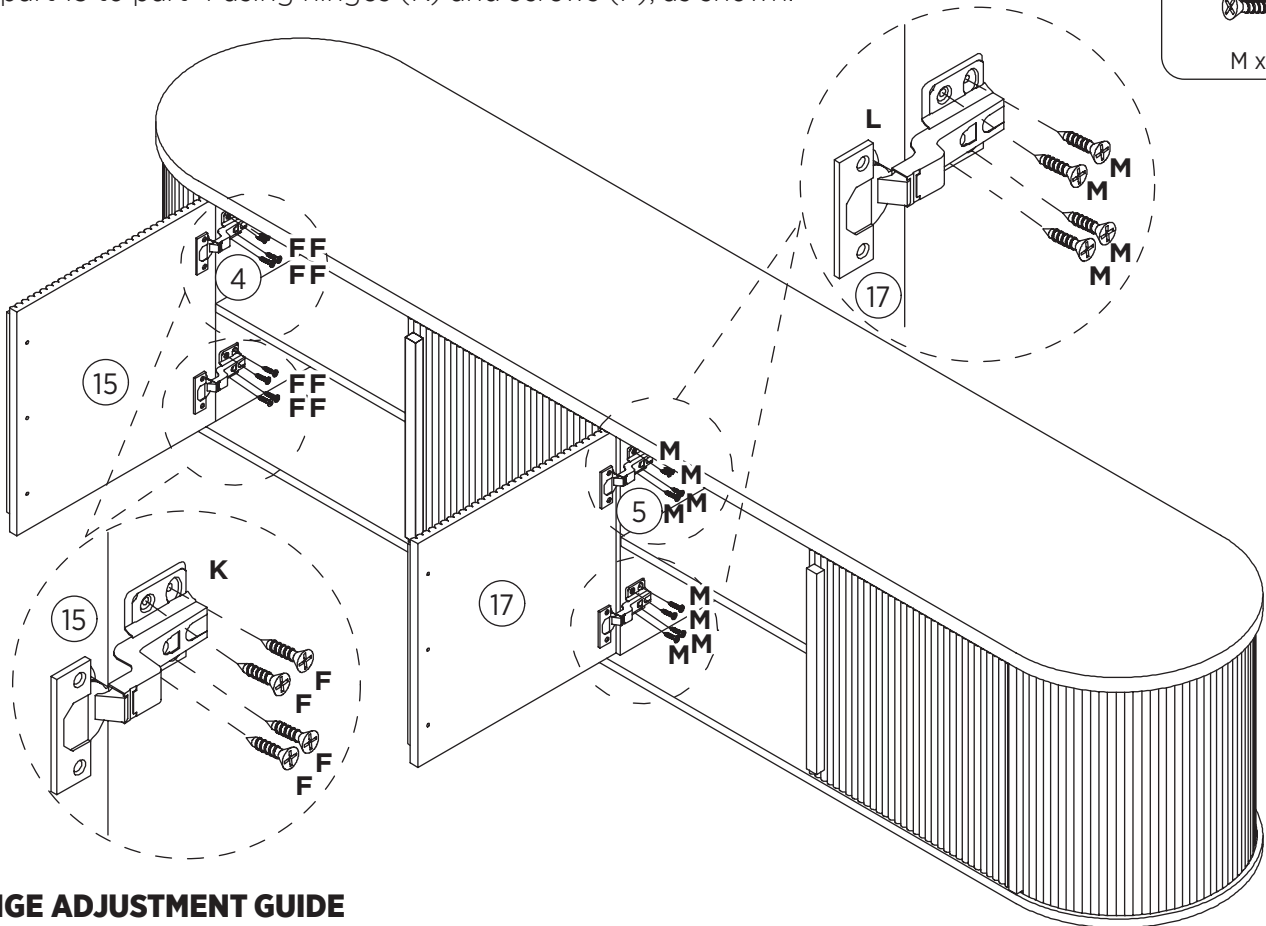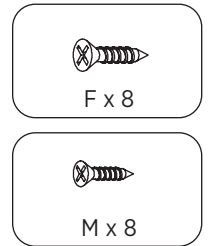


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

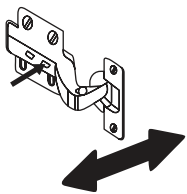

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

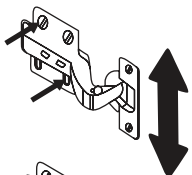

 To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

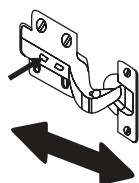

To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS

STEP 15

 
To secure parts 11 and 12, fix wedges (N) using screws (M), as shown.



M x 8



N x 8

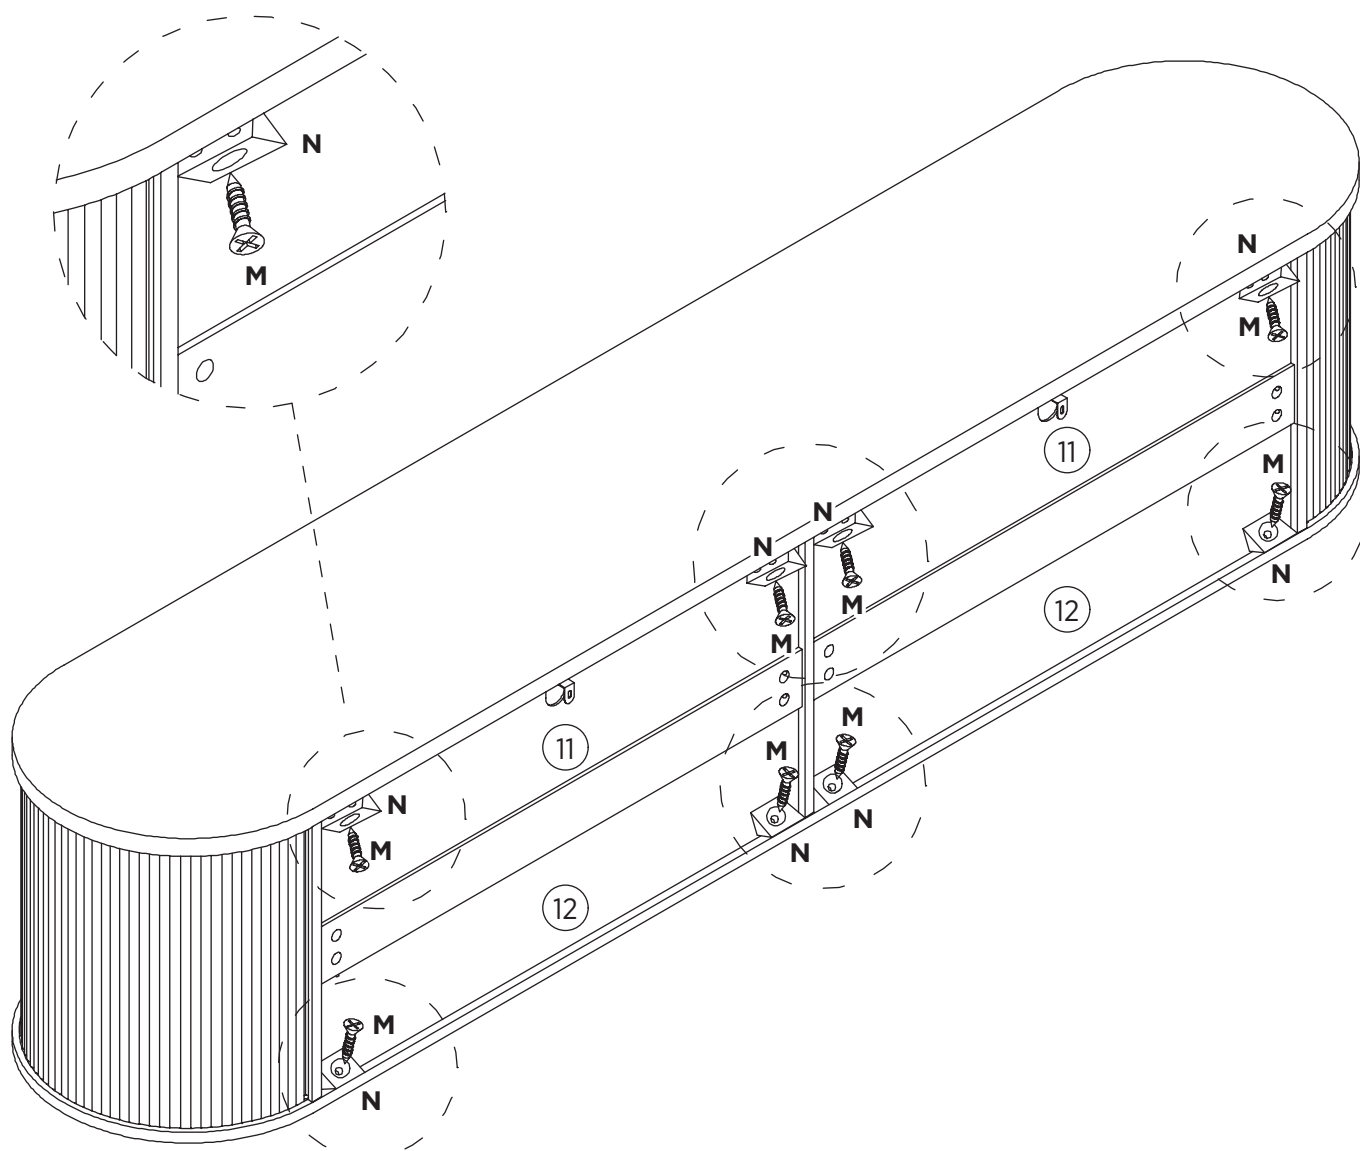

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 16

For extra stability, you must fix your TV unit to the wall using the additional hardware (E) and (I), as shown.

Screw (E) is fixed through the bracket (G) and into the wall plug (I).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your buffet.

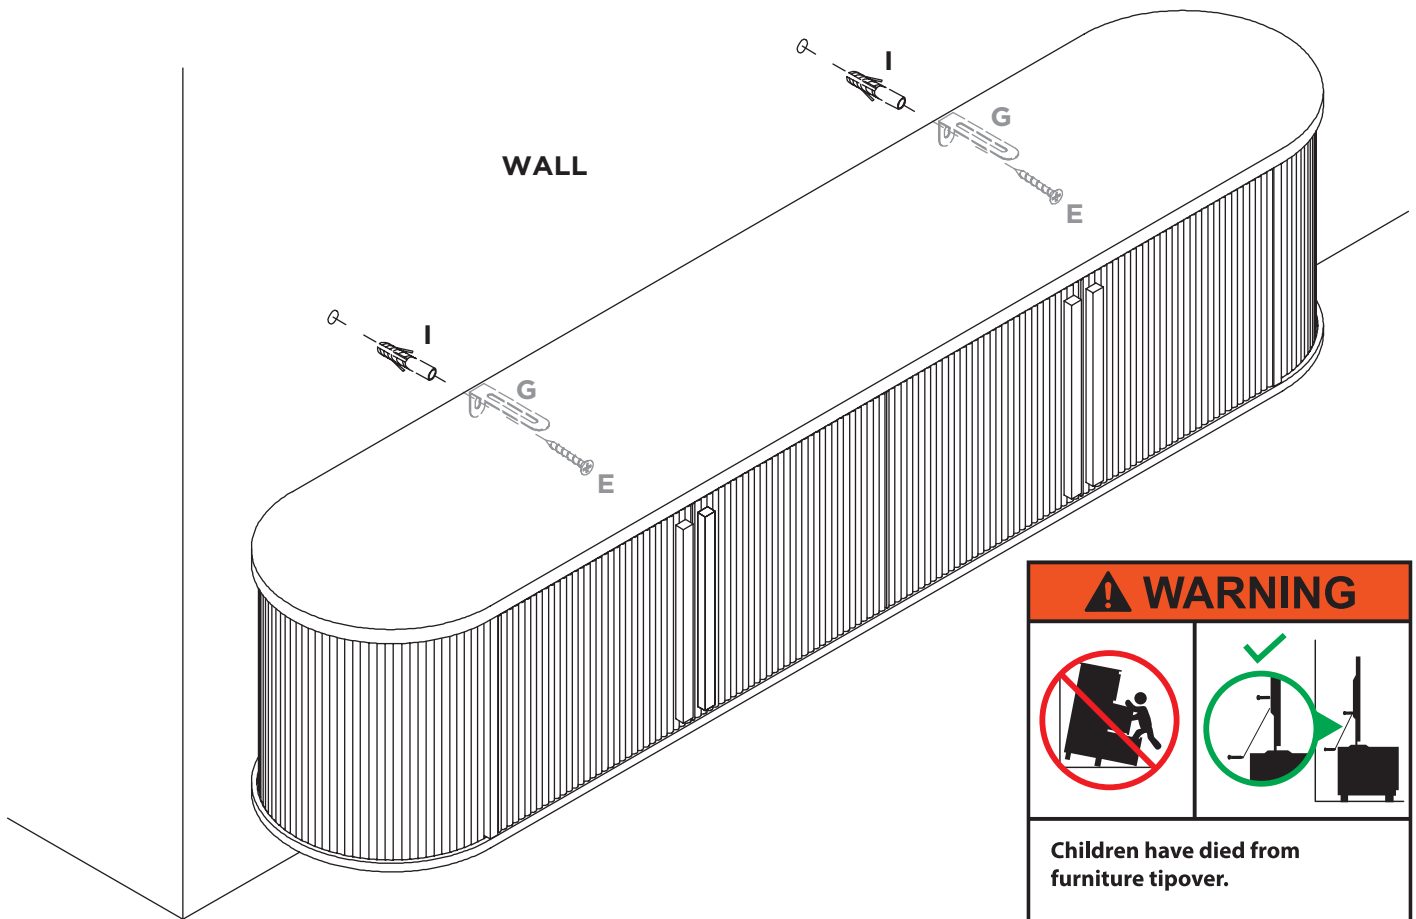

⚠ WARNING


--	--

Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

ASSEMBLY INSTRUCTIONS

 STEP 17

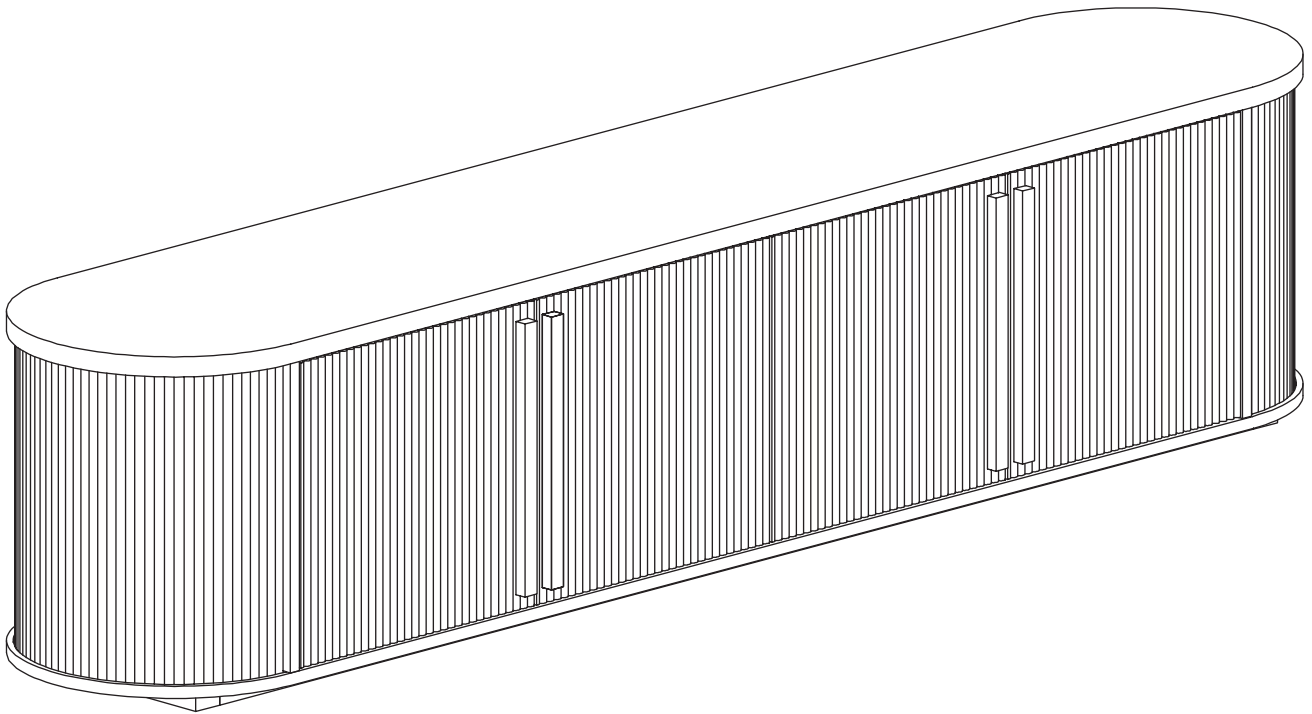

Maximum recommended weight for the top is 40kgs, for the shelves is 5kgs.

Your TV unit is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

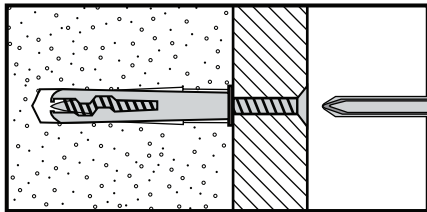


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

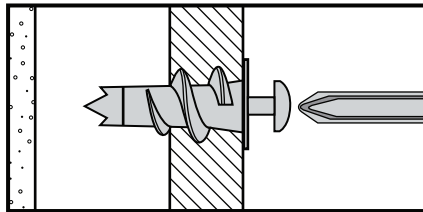


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

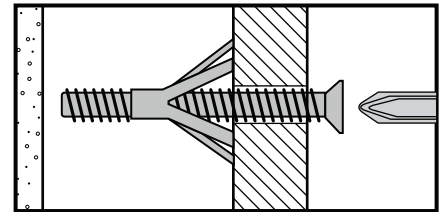


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

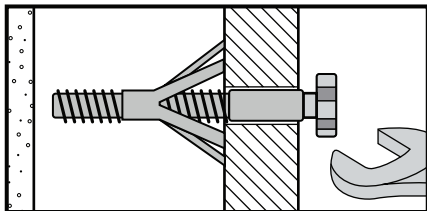


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

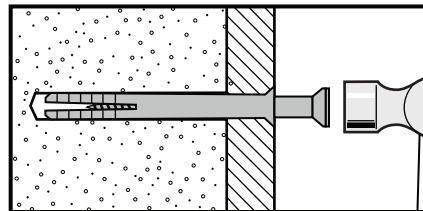

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

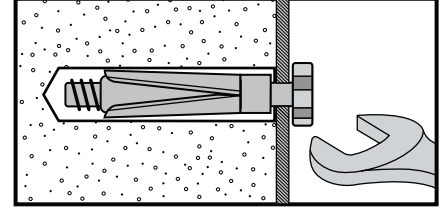

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.