
WARDROBE 2 DOORS 3 DRAWERS

ASSEMBLY INSTRUCTIONS

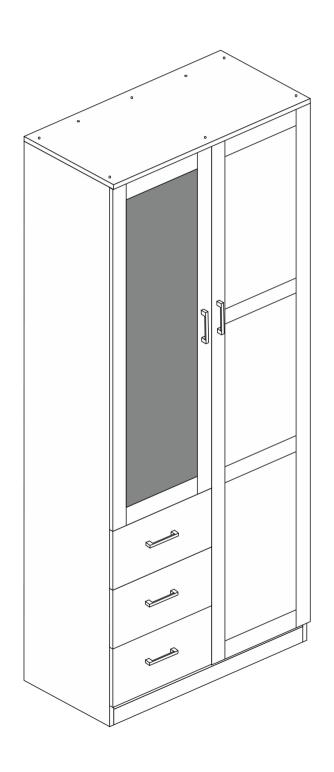

TIPS BEFORE YOU START


- 1. Please check that all parts are present before you start the assembly of your furniture.
- 2. For ease and speed of assembly, we recommend that before you commen ce each step of the assembly, that you identify all the parts required for that step.
- 3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
- 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
- 7. Always place the product on a flat, steady and stable surface.
- 8. Do not stand on the product. Do not use the product as a stepladder.
- 9. This product is intended for indoor, household use only as it is a non-industrial product.
- 10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

 
CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver, flat head screwdriver and hammer.
- ☑ 2m x 2m assembly space required
- **☑** 1.5 hour assembly time approx.

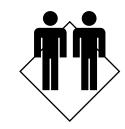




USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

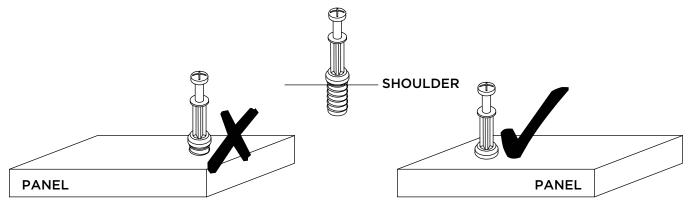


CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

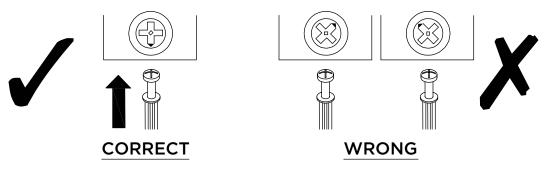


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

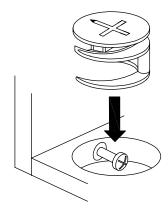

Turn cam lock clockwise to tighten.

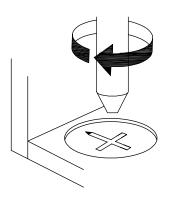

HARDWARE LIST

 

41 x A **Quickfit Screw**



 
41 x B Cam Lock



20 x C Wooden Dowel



8 x D Shelf Pin




5 x E Handle



34 x F Screw



 36 x G Screw



5 x H Hinge



34 x I Nail



10 x J Screw



2 x K Wall Plug



2 x L Screw



2 x M Wall Bracket



11 x N Screw



 
15 x O Screw




2 x P **Rod Support**




10 x Q Screw



Inner Drawer Runner

 

Inner Drawer Runner

 


3 x T **Outer Drawer Runner**







PARTS LIST

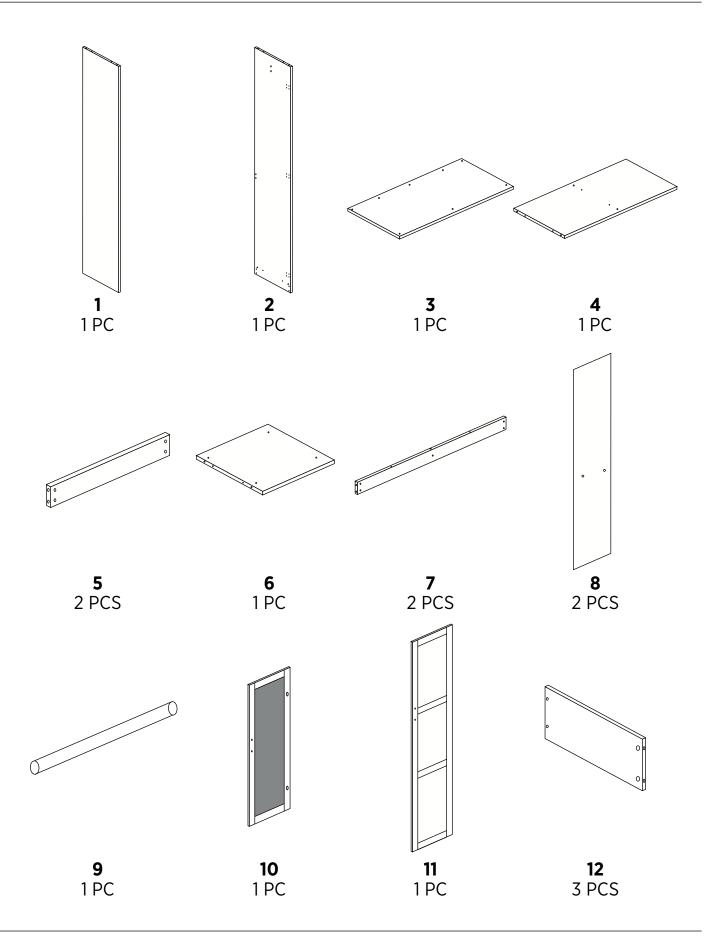

PARTS LIST

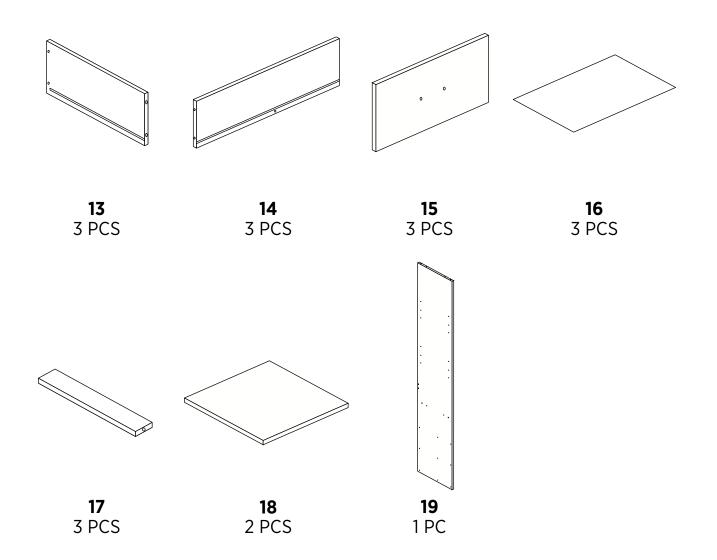

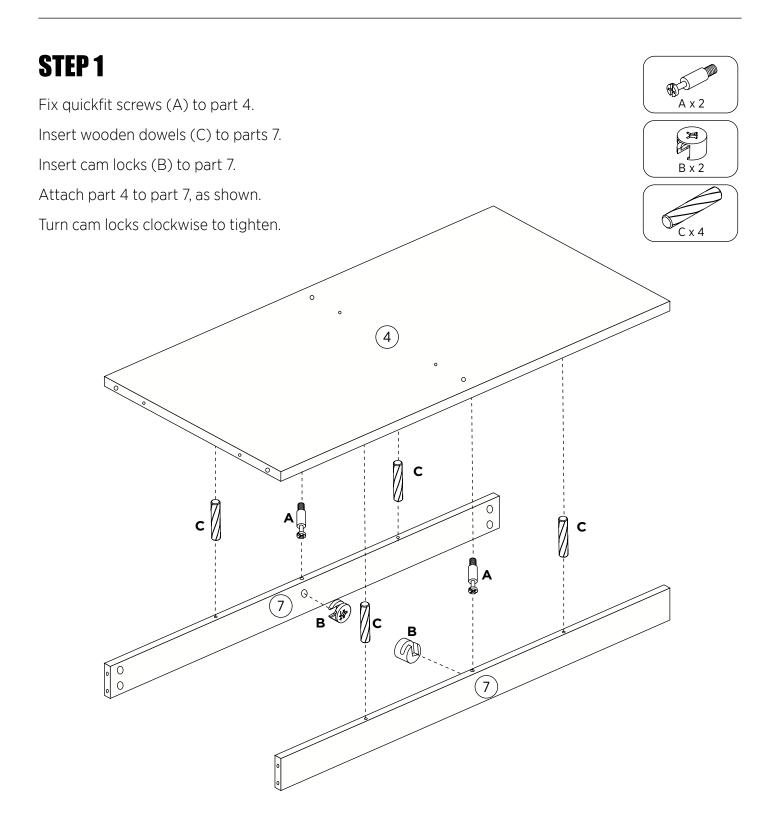


STEP 2


Fix quickfit screws (A) to part 2.

 Fix rod support (P) to parts 19 and 2 using screws (F), as shown.







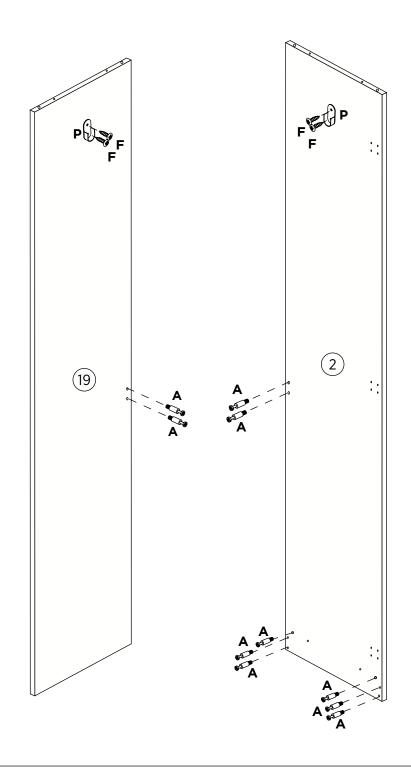


STEP 3 Fix outer drawer runners (T) using screws (G) to part 1. Fix quickfit screws A on part 1, as shown. **Managar** G x 9 T x 3 1 G

STEP 4

Fix outer drawer runners (U) using screws (G) to part 19, as shown.





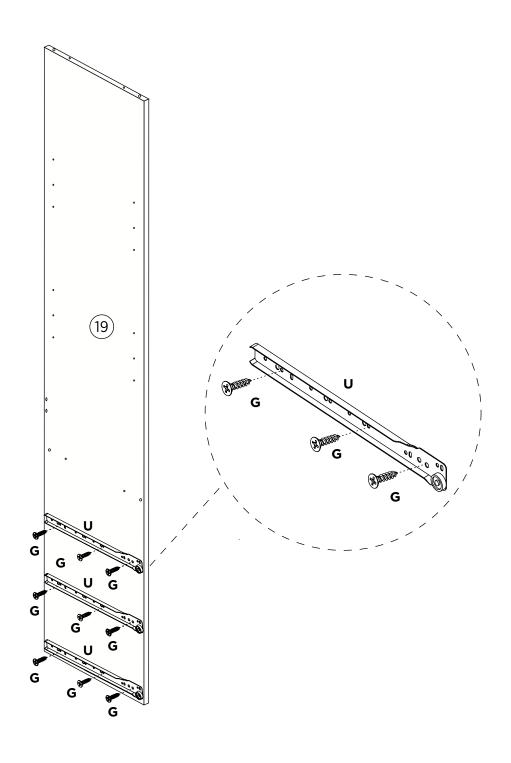

STEP 5

Insert quickfit screws (A) to part 19.

Insert wooden dowels (C) to part 19.

Insert cam locks (B) to parts 5 and 6.


Attach parts 5 and 6 to part 19, as shown.

Turn cam locks clockwise to tighten.








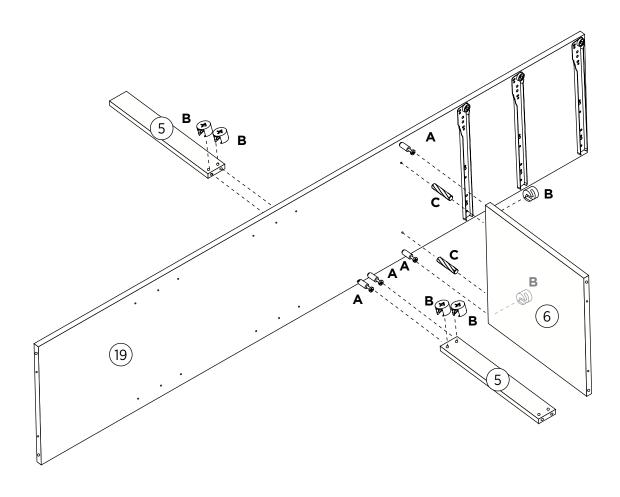


STEP 6

Insert wooden dowels (C) to part 4.

 Fix parts 4 to part 19 using screws (Q), as shown.





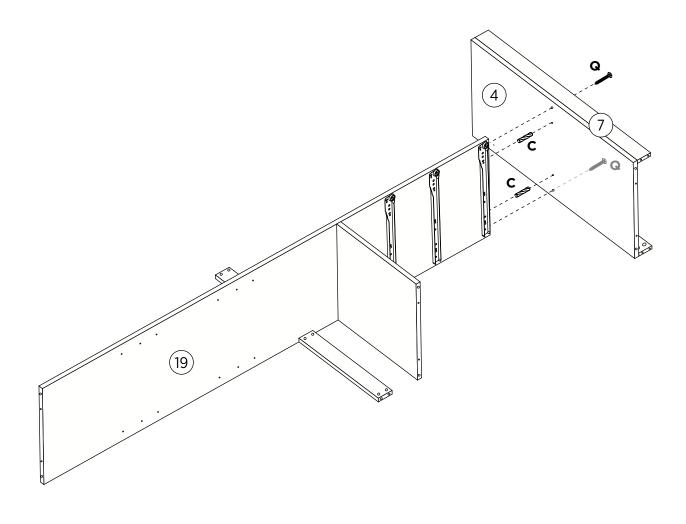


STEP 7

Insert wooden dowels (C) to parts 1 and 2.


Insert cam locks (B) to parts 4, 5, 6, and 7.

Attach parts 1 and 2 to parts 4, 5,6 and 7, as shown.

 Turn cam locks clockwise to tighten.





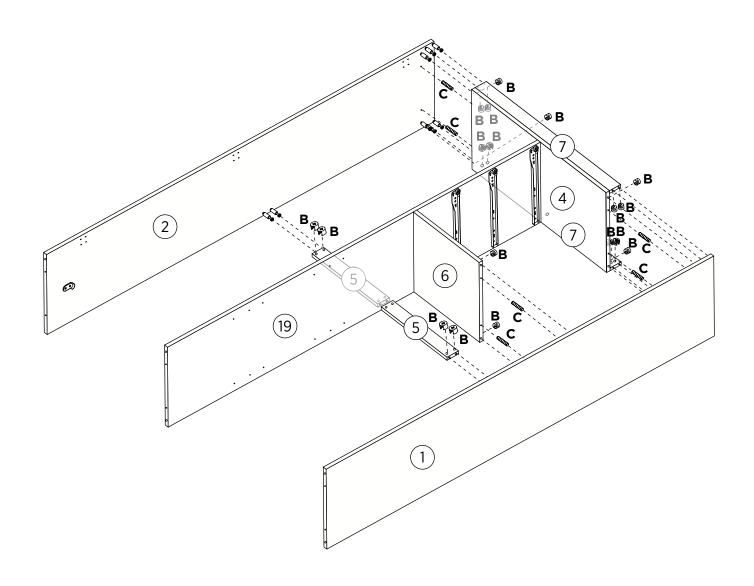


STEP 8

Insert wooden dowels (C) to part 3.

Fix part 3 to parts 1, 2 and 19 using screws (Q), as shown.





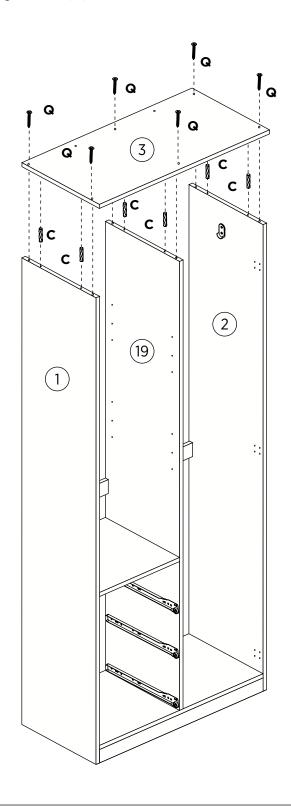


STEP 9

Attach parts 8 to assembled unit using nails (I) and screws (N), as shown.






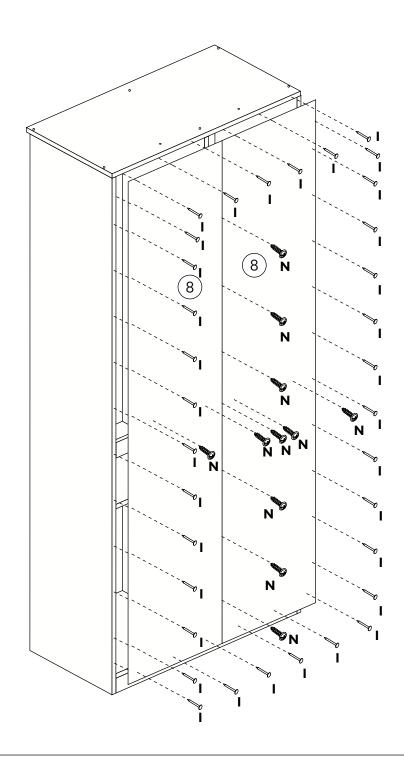

STEP 10

Fix handle (E) to part 10 using screws (J).

 
Fix hinges (H) to part 10 using screws (F), as shown.









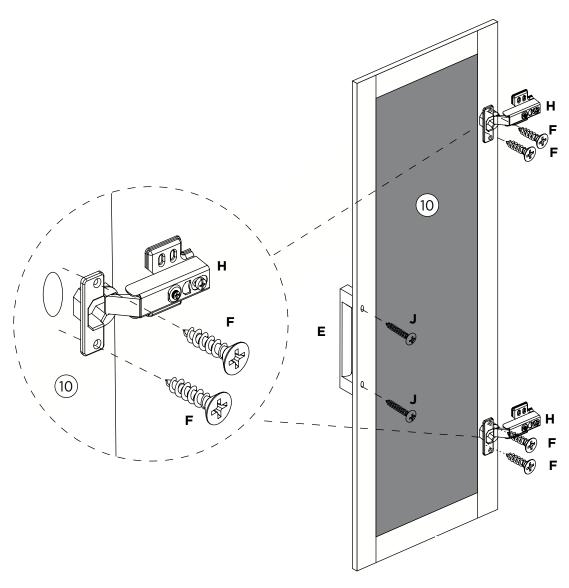


STEP 11 **€** x 1 Fix handle (E) to part 11 using screws (J). Fix hinges (H) to part 11 using screws (F), as shown. Dogg F x 6 J x 2 Ε (11)

STEP 12

Fix parts 12, 13 and 17 to part 14 using screws (O), as shown.




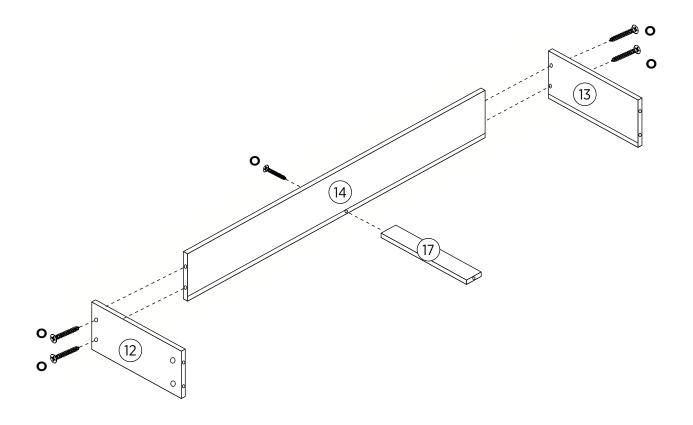



STEP 13

Insert part 16 into grooves of parts 12, 13 and 14, as shown.

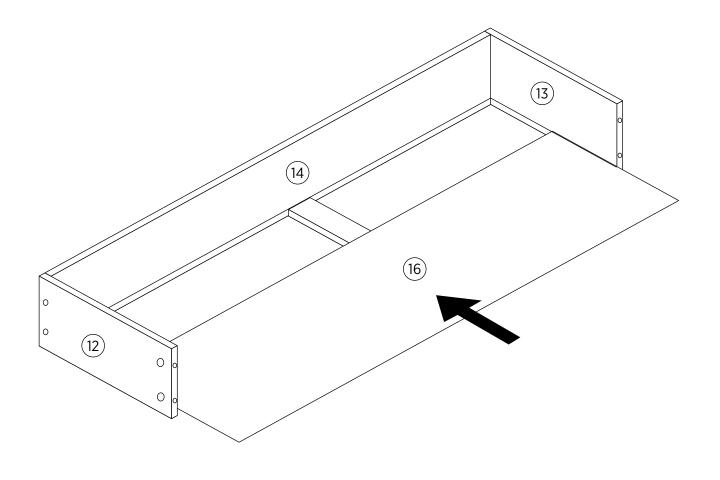

x3

STEP 14


Insert quickfit screws (A) on part 15.

Fix handle (E) to part 15 using screws (J), as shown.







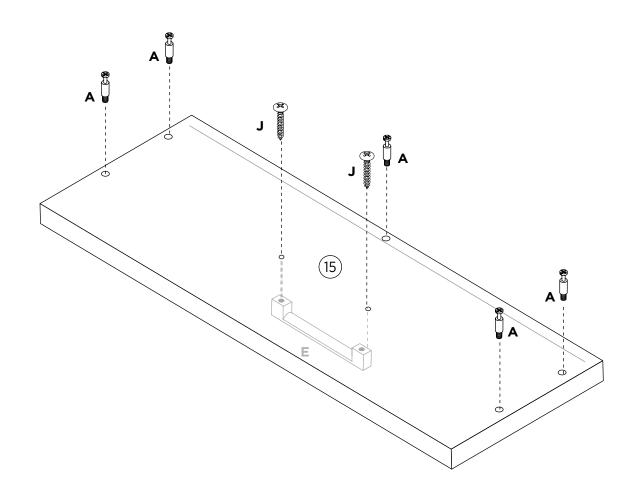




STEP 15

Insert cam locks (B) on parts 12, 13 and 17.


Attach part 15 to parts 12, 13, 16 and 17, as shown.

Turn cam locks clockwise to tighten.



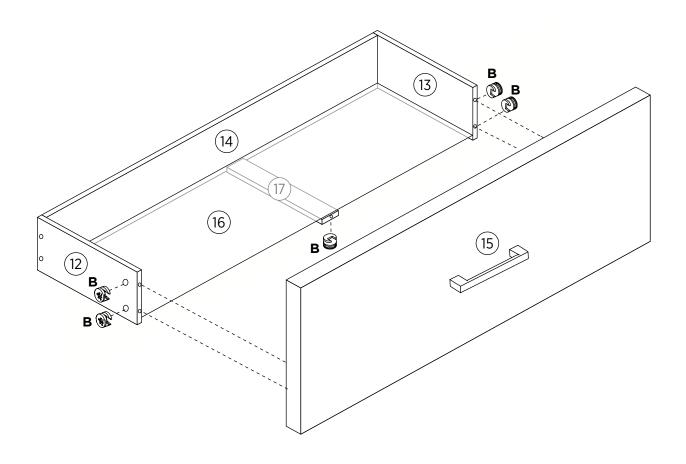




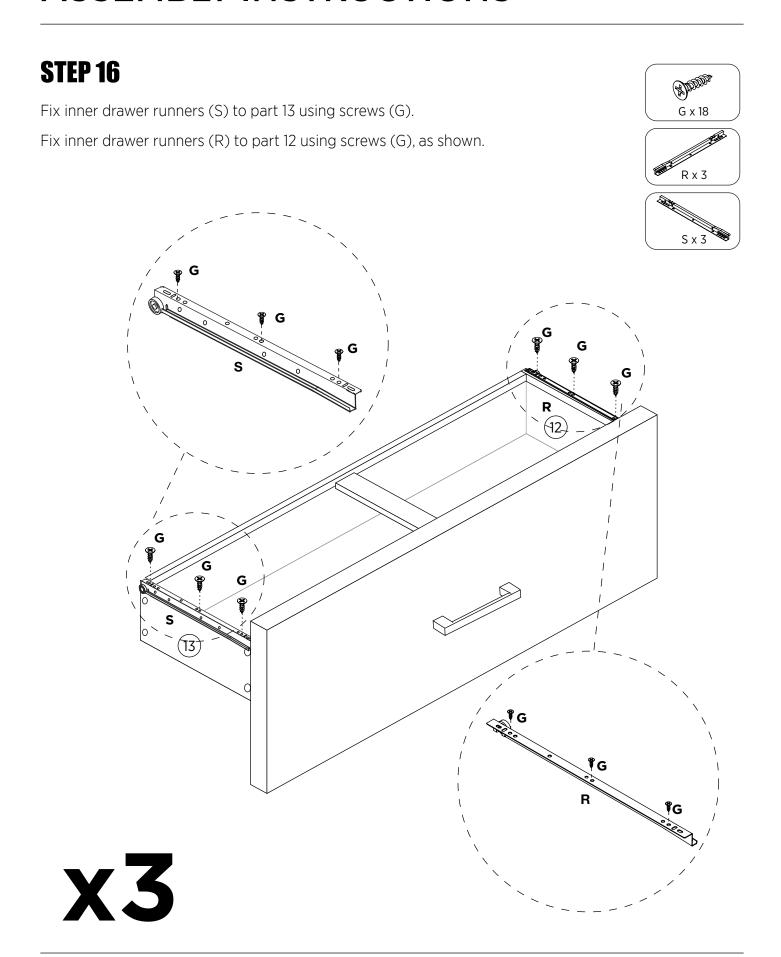


STEP 17

Insert shelf pins (D) to parts 1 and 19.

 Insert drawers to the assembled unit, as shown.




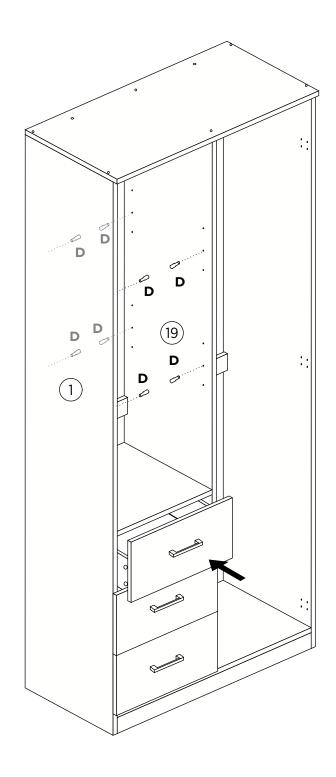



STEP 18

Fix part 9 to rod supports (P) on part 19 and 2.

 
Put parts 18 on shelf pins (D) of parts 1 and 19, as shown.

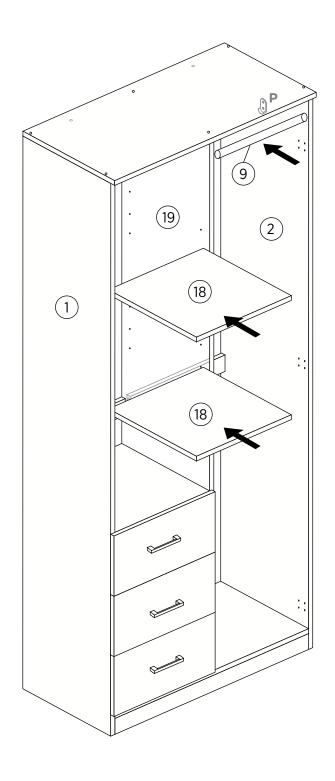

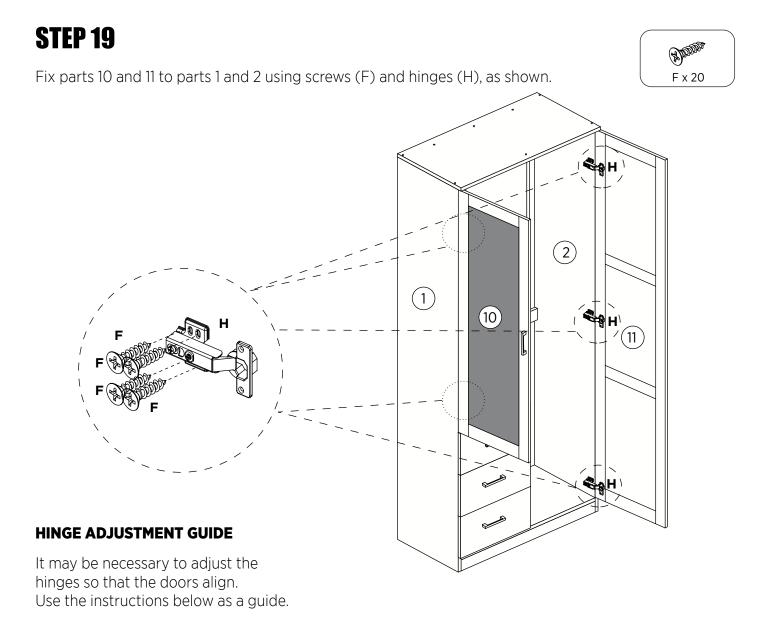



 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.




To adjust the door **vertically** loosen the screw as shown and move up and down as needed.


To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

STEP 20

 Fix wall brackets (M) to part 3 using screws (L) and metal washers (V), as shown.



V x 2

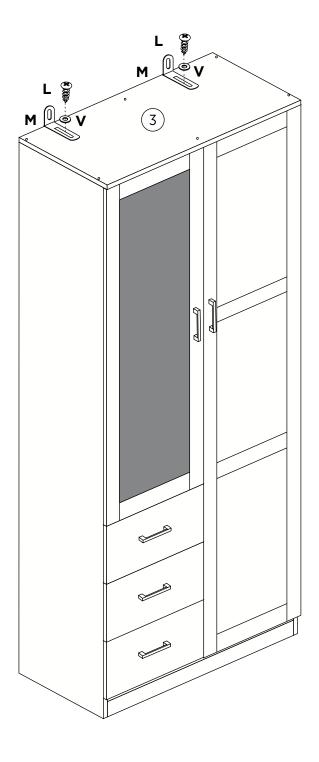


STEP 21

For extra stability, you must fix your wardrobe to the wall using the additional hardwares (K, V and Q), as shown.

Screw (Q) is fixed through the metal washers (V), wall bracket (M) and into the wall plug (K).

 Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.







STEP 22



Maximum recommended weight is 5kg per shelf and 5kg per drawer.

Your Wardbrobe 2 doors 3 drawers is ready for use

 
WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:






Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

 Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.




1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.




2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.




3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.




4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.



5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.



6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.