
CHEST OF 6 DRAWER

ASSEMBLY INSTRUCTIONS

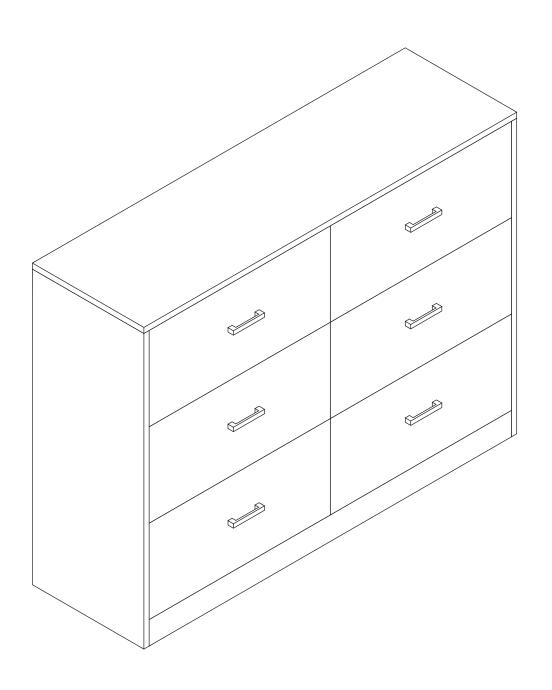

TIPS BEFORE YOU START

- 1. Please check that all parts are present before you start the assembly of your furniture.
- 2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
- 3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
- 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- 5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
- 6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
- 7. Always place the product on a flat, steady and stable surface.
- 8. Do not stand on the product. Do not use the product as a stepladder.
- 9. This product is intended for indoor, household use only as it is a non-industrial product.
- 10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

 
CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver, flat head screwdriver
- ☑ 2m x2m assembly space required
- \square 1.5 hour assembly time approx.




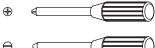

USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

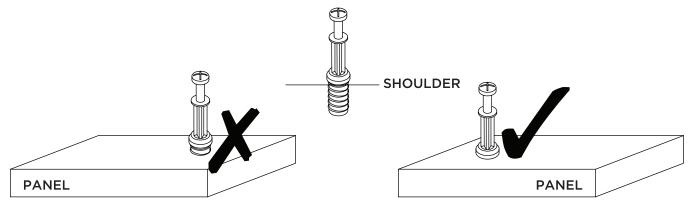


CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

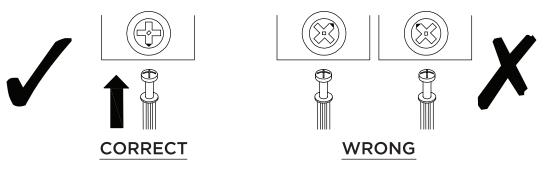

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

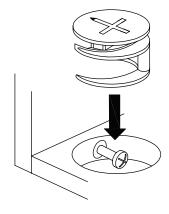

Turn cam lock clockwise to tighten.

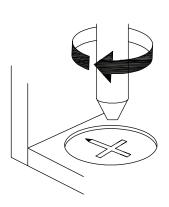

HARDWARE LIST



30 x A Screw



45 x B Cam Lock



45 x C Quickfit Screw



6 x D Drawer Handle



12 x E Screw



63 x F Screw



6 x G Inner Drawer Runner



6 x H Inner Drawer Runner



6 x I Outer Drawer Runner



6 x J Outer Drawer Runner



30 x K Screw



2 x L Wall Strap

HARDWARE LIST



2 x M Wall Plug



2 x N Screw



4 x O Screw



2 x P Screw



9 x Q Screw



26 x R Nail




2 x S Plastic Strip




20 x T Screw Cover

PARTS LIST

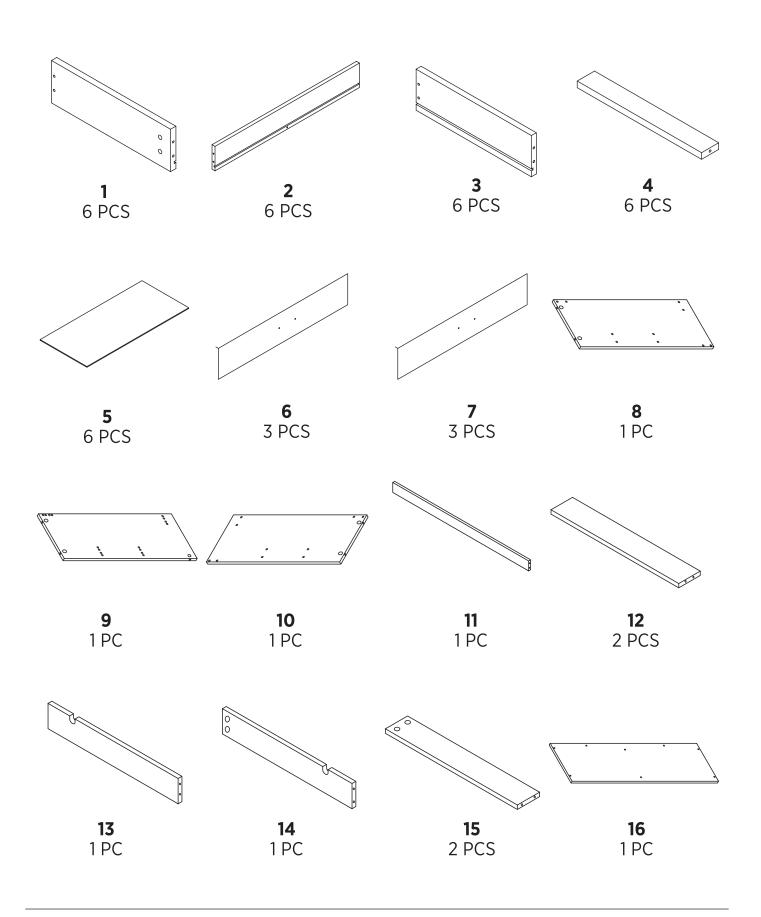

PARTS LIST

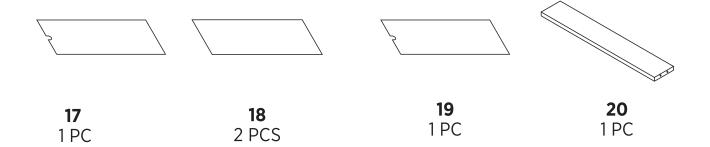




STEP 1

Fix part 2 to parts 1, 3 and 4 using screws (A), as shown.




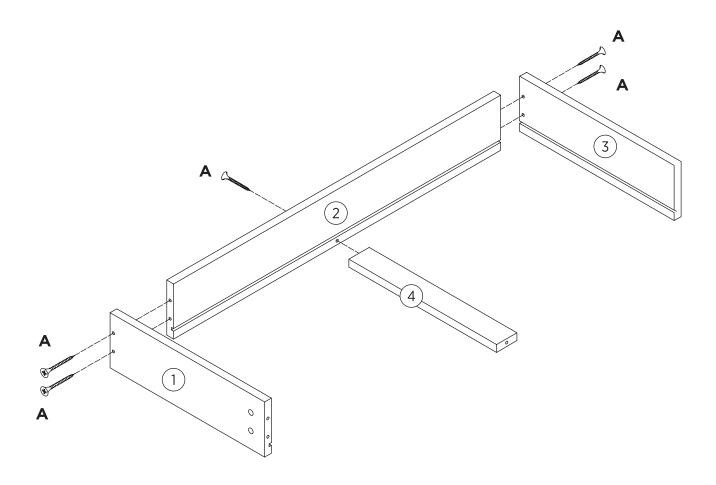



STEP 2

Insert part 5 into grooves between parts 1, 2 and 3, as shown.

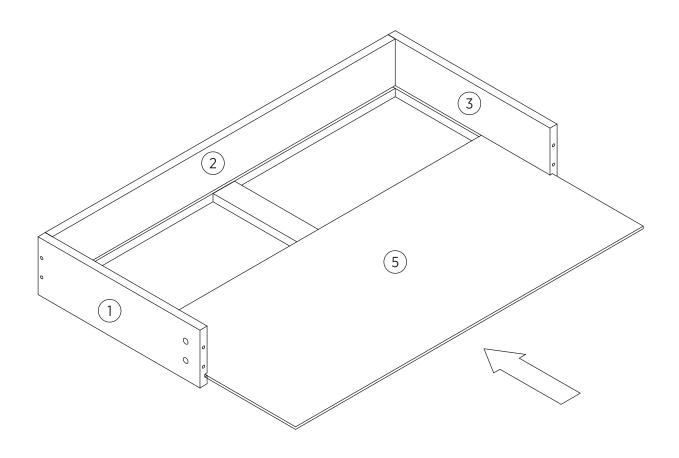

STEP 3

Insert quickfit screws (C) to part 6.


Insert camlocks (B) to parts 1, 3 and 4.

Attach part 6 to parts 1, 3 and 4, as shown.

Turn cam locks clockwise to tighten.





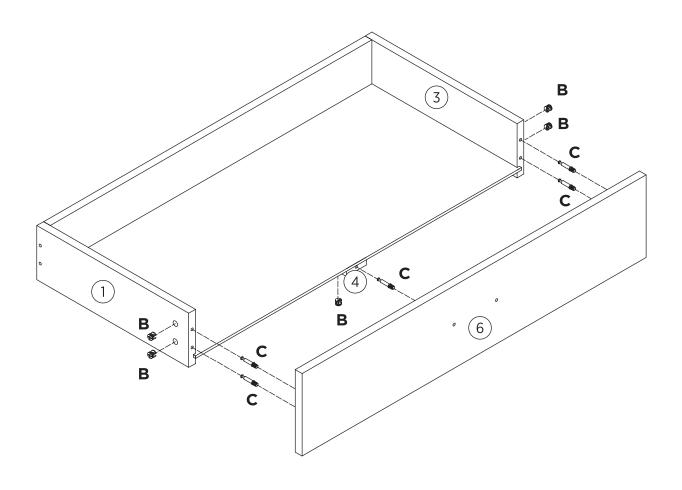



STEP 4

Insert quickfit screws(C) to part 7.


Insert camlocks (B) to parts 1, 3 and 4.

Attach part 7 to parts 1, 3 and 4, as shown.

Turn cam locks clockwise to tighten.






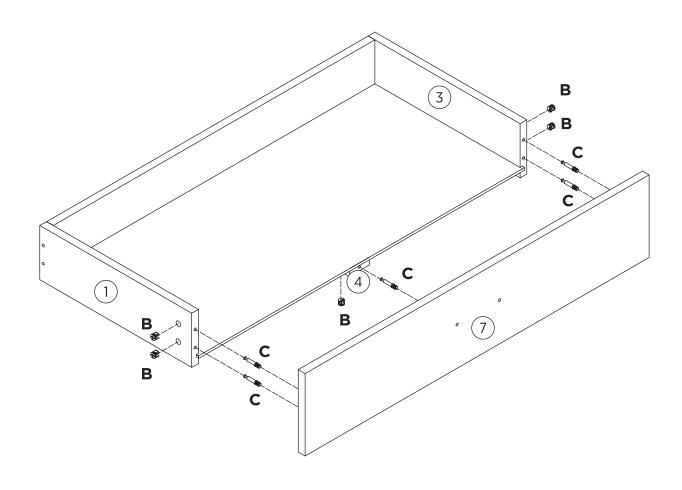




STEP 5

 
Attach handle (D) to parts 6 using screws (E), as shown.

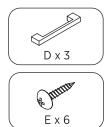

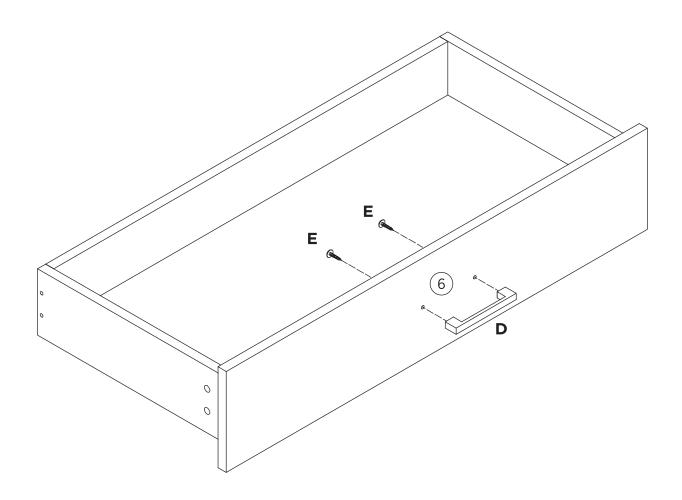


STEP 6

 Attach handle (D) to parts 7 using screws (E), as shown.

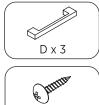



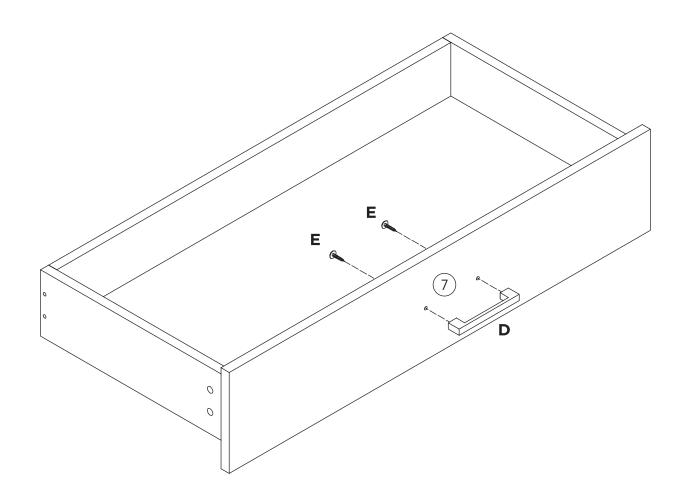

STEP 7

Fix inner drawer runners (G) to part 1 using screws (F).


Fix inner drawer runners (H) to part 3 using screws (F), as shown.



F x 36





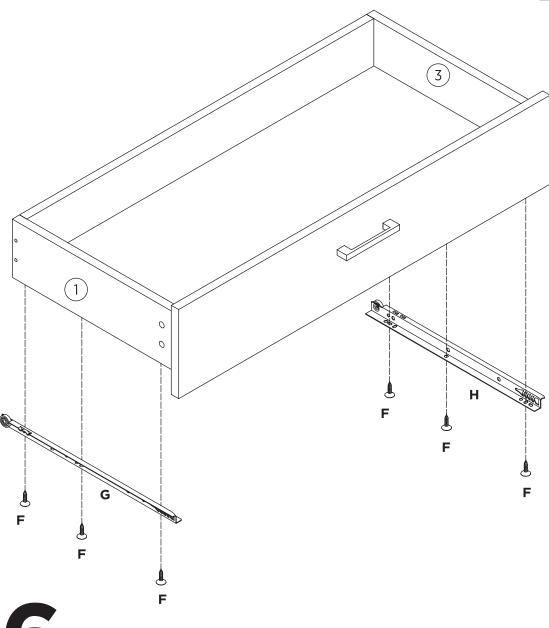


STEP 8

Fix outer drawer runners (J) to part 8 using screws (F), as shown.





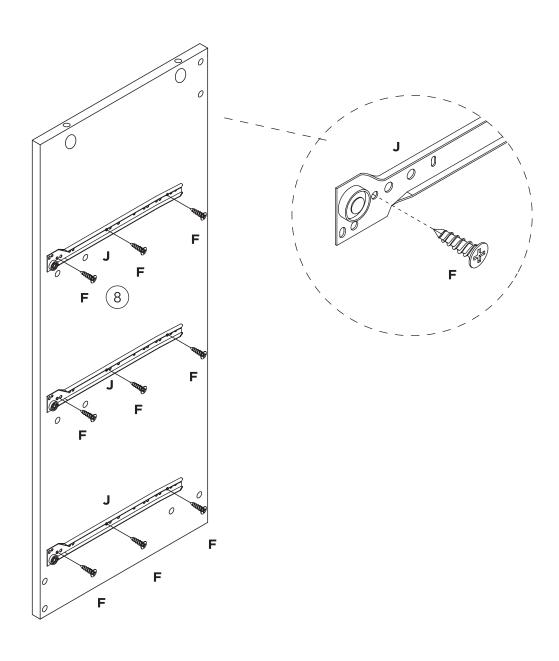


STEP 9

Fix outer drawer runners (I) to part 10 using screws (F), as shown.





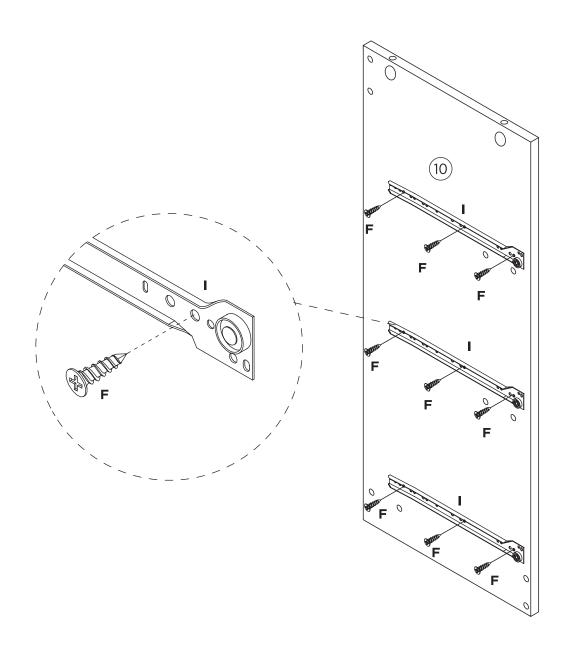

STEP 10


Fix outer drawer runners (I and J) to part 9 using screws (F), screws (Q), as shown.










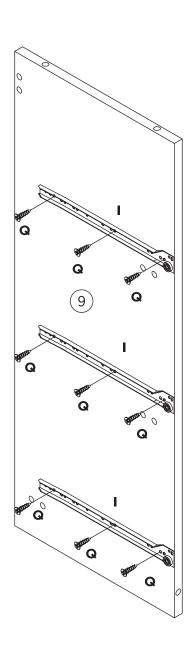

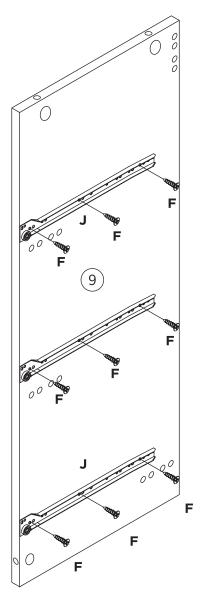

STEP 11

Insert quickfit screws (C) to part 11.

Insert cam locks (B) to part 9.

 
Fix part 9 to parts 11, 12, 13 and 20 using screws (K), as shown.


Fix part 11 to part 9, as shown.

Turn cam locks clockwise to tighten.





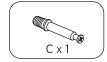


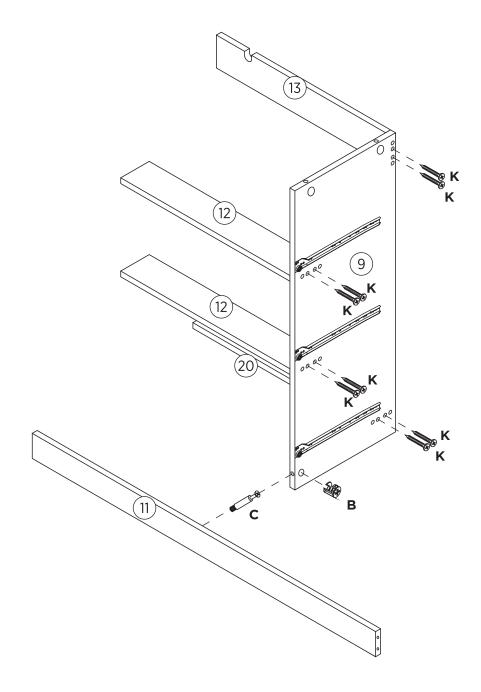

STEP 12

Fix part 8 to parts 11, 12, 13 and 20 using screws (K), as shown.



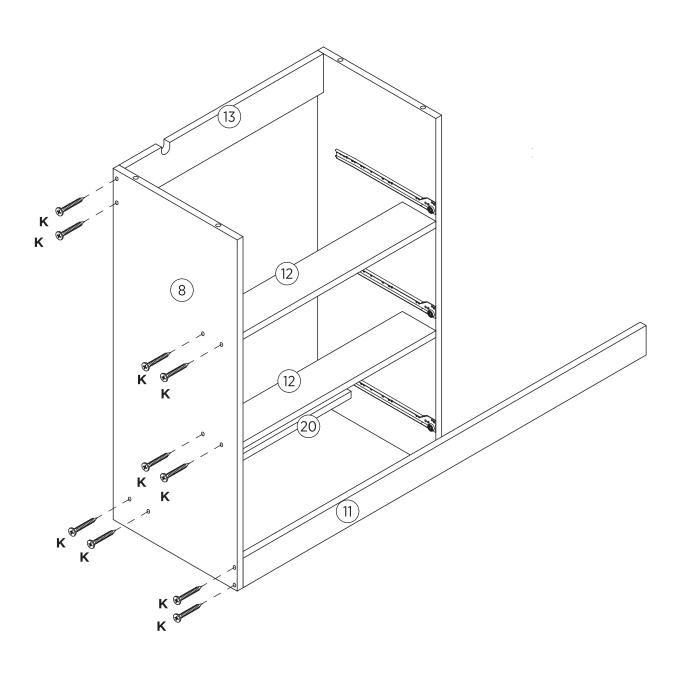

STEP 13

 
Insert quickfit screws (C) to part 9.


Insert cam locks (B) to 14, 15 and 21.

Fix part 9 to parts 14, 15 and 21, as shown.

Turn cam locks clockwise to tighten.




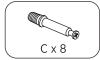


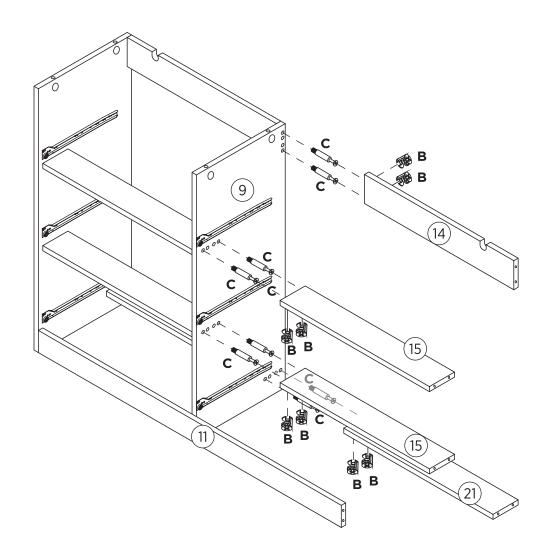

STEP 14

 
Fix part 10 to parts 11, 14, 15 and 21 using screws (K), as shown.

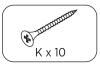


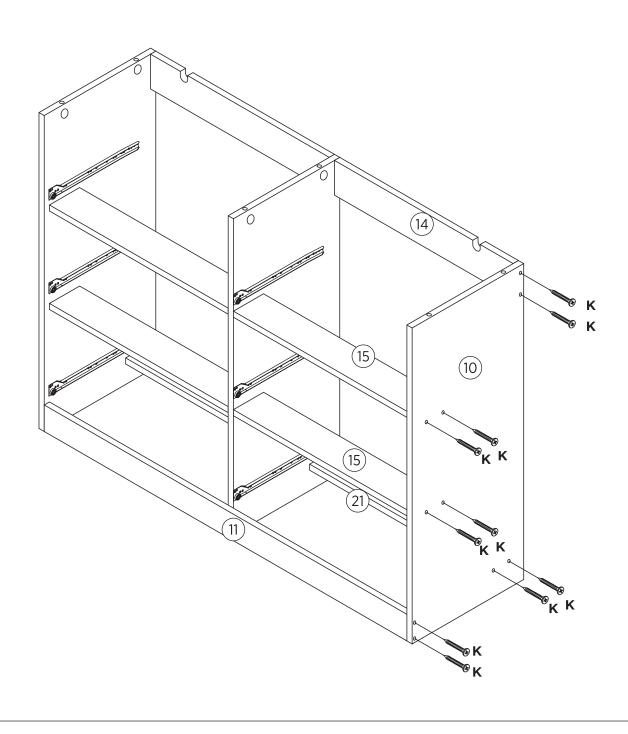

STEP 15

 Fix wall brackets (L) to part 16 using screws (N), as shown.

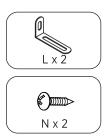

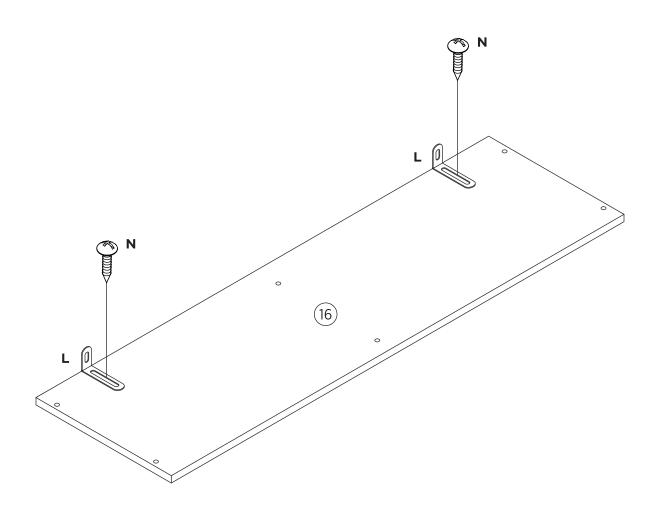

STEP 16

Insert quickfit screws (C) to part 16.


Insert camlocks (B) to parts 8, 9 and 10.

Attach part 16 to parts 8, 9 and 10, as shown.

Turn cam locks clockwise to tighten.





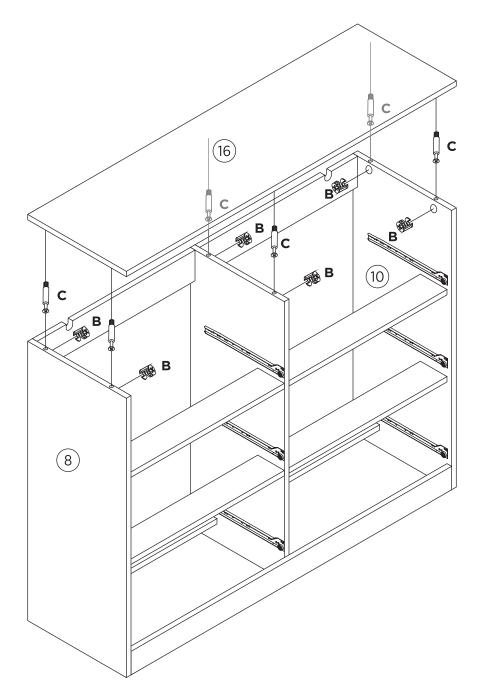



STEP 17

Insert Plastic Strip into grooves between parts 17 and part 18.

Insert Plastic Strip into grooves between parts 18 and part 19.

 Attach parts 17, 18, and 19 to assembled unit using screws (O) and nails (R), as shown.

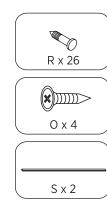

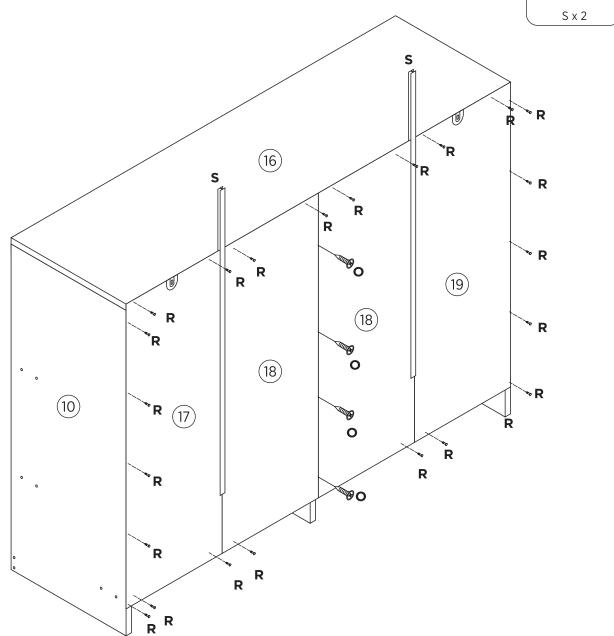


STEP 18

Insert drawer into assembled unit.

Attach screw cover (T) to the holes of assembled unit, as shown.



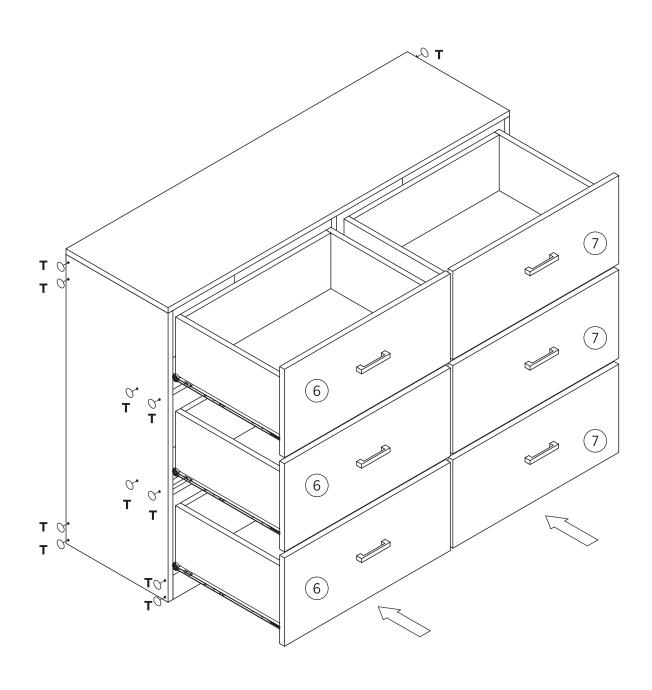


STEP 15


For extra stability, you must fix your chest to the wall using the additional hardware (M) and (P), as shown.


Screw (P) is fixed through the wall bracket (L) and into the wall plug (M).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

 Please consider the wall mounting & fixing guide when securing your chest.

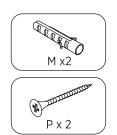

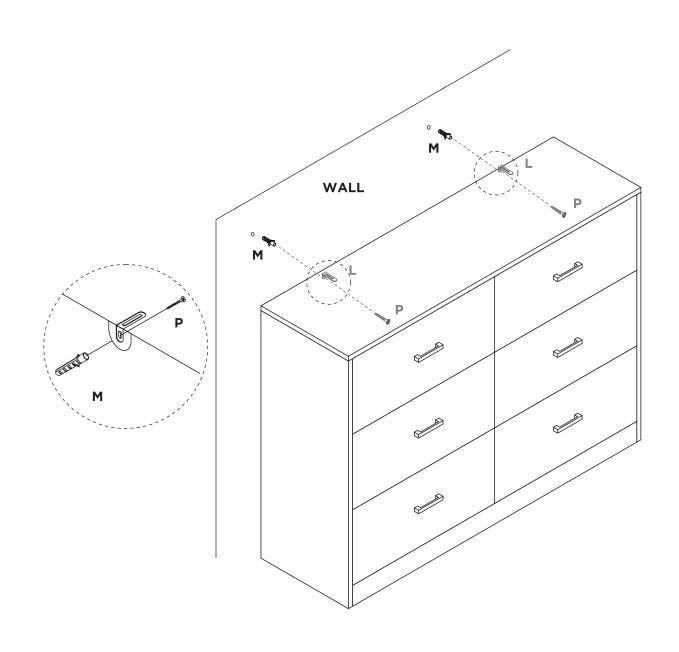

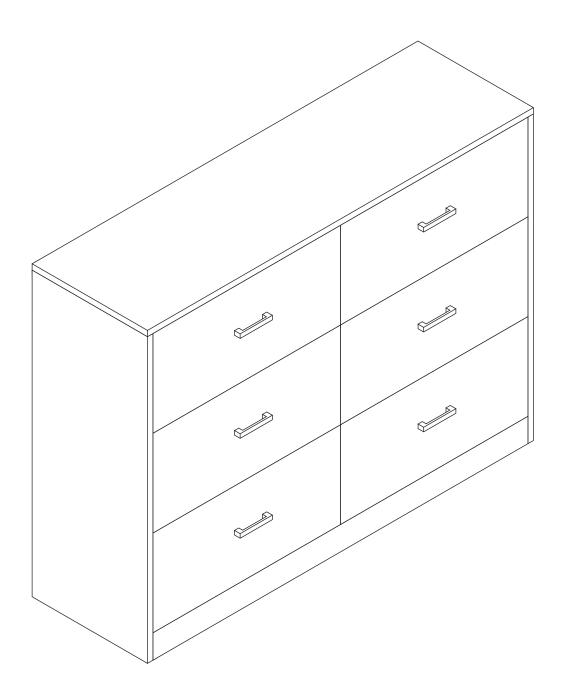

Maximum recommended weight is 20kg on top and 2kg on each drawer.

Your drawer chest is ready for use.

 
WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

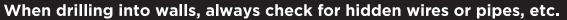




Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

 Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

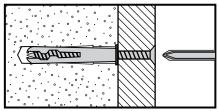


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

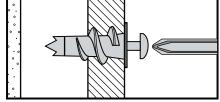


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

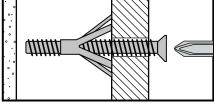


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

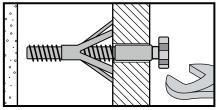


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

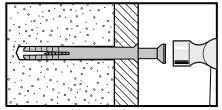

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

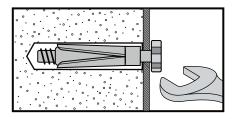

Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.