 


TV UNIT 2 DOORS

ASSEMBLY INSTRUCTIONS

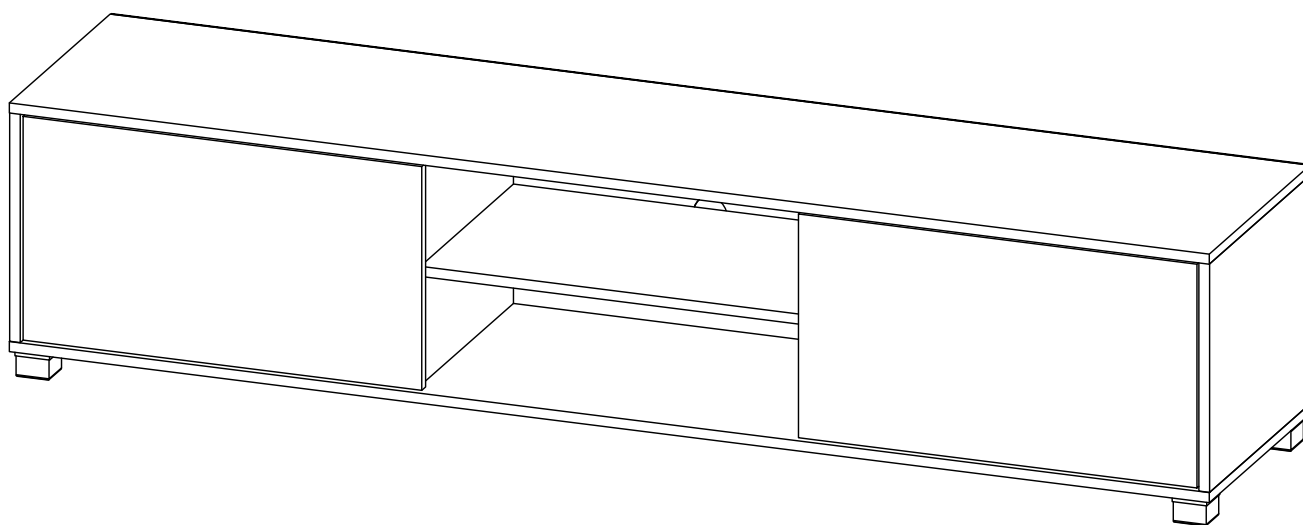

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver, hammer
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1 hour assembly time approx.

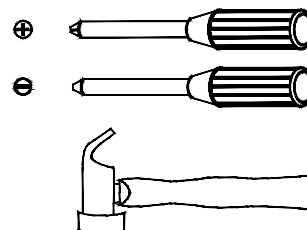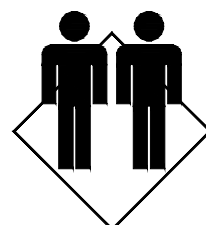

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FORM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on doors or shelves
- **NEVER** open more than one drawer at a time
- **ALWAYS** secure your television to this furniture with an anchor device or mount the television on a wall

 
For more infirmation, visit <https://www.productsafety.gov.au>



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

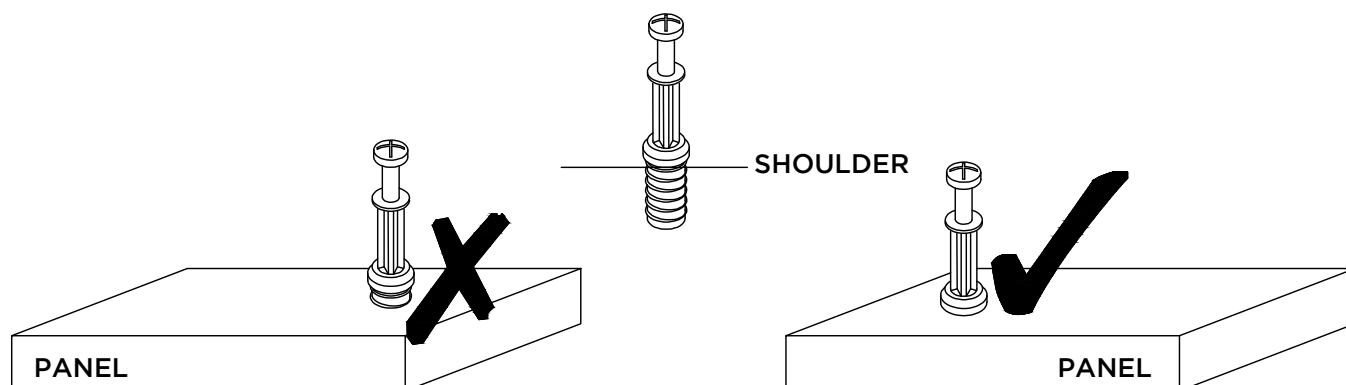


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

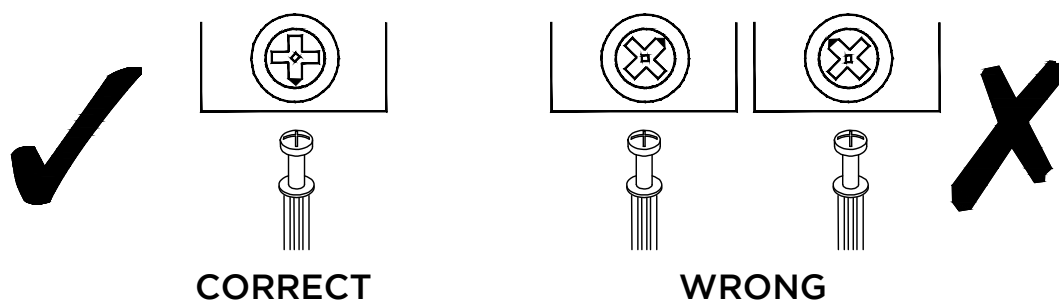

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

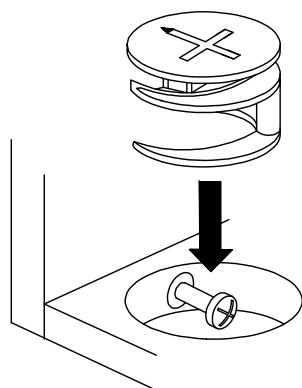


Turn cam lock clockwise to tighten.

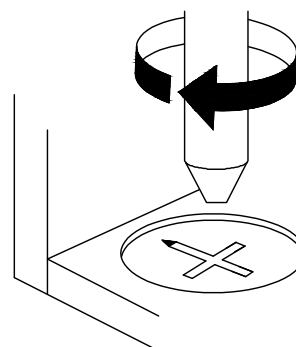 

HARDWARE LIST



 
8 x A
Cam Lock




8 x B
Quickfit
Screw



 8 x C
Cover



16 x D
Wooden
Dowel

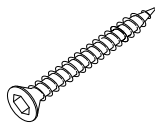 

8 x E
Screw



 
1 x F
Allen Key




40 x G
Screw




4 x H
Screw




4 x I
Metal
Shelf Support

 

28 x J
Nail

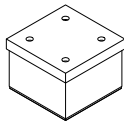 


6 x K
Square Leg

 


4 x L
Hinge

 PARTS LIST

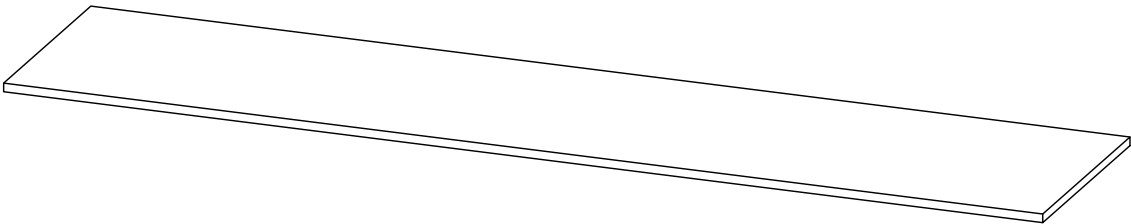

1
1 PC

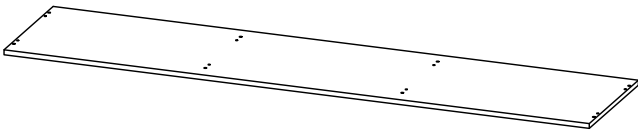 

2
1 PC



 
3
1 PC




4
1 PC




5
1 PC




6
1 PC

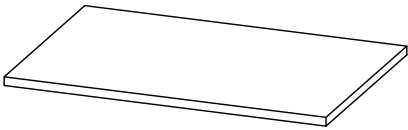 


7
1 PC

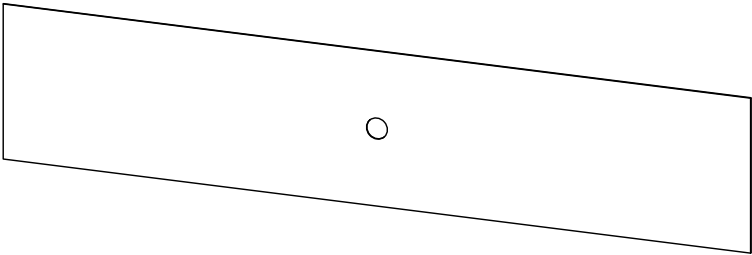 

8
1 PC

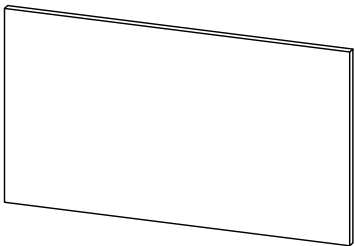 

9
2 PCS

 


10
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

Insert quick fit screws (B) to part 1, as shown.

 
Fix part 10 to part 1 using screws (H), as shown.



B x 8



 H x 4

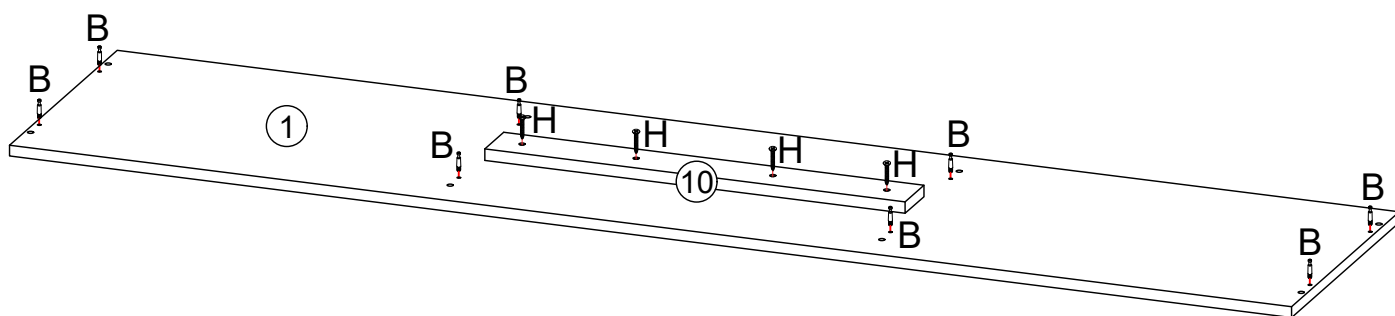

ASSEMBLY INSTRUCTIONS

STEP 2

 
 
Insert cam lock (A) and wooden dowels (D) to part 3 and 4, as shown.



A x 4



D x 8

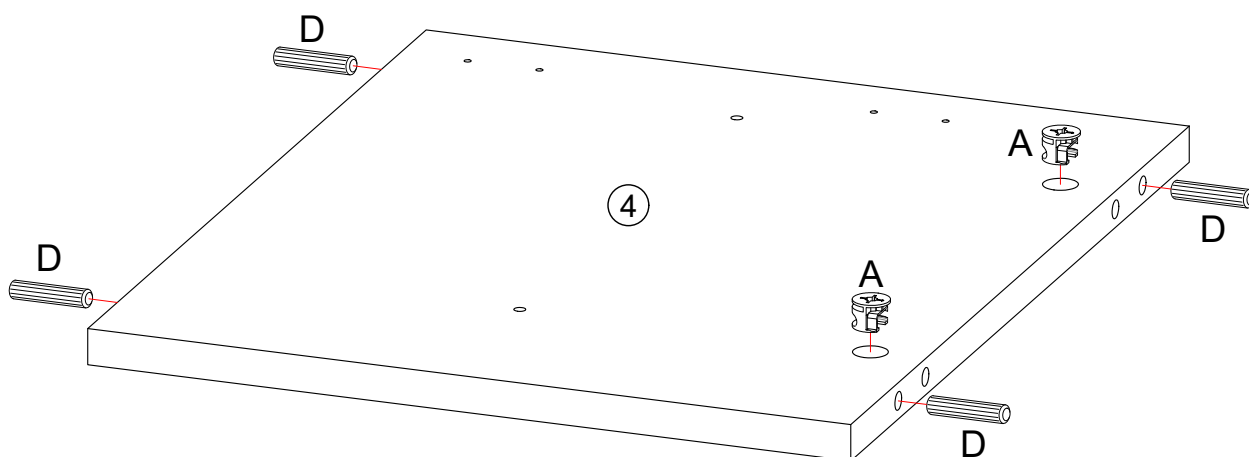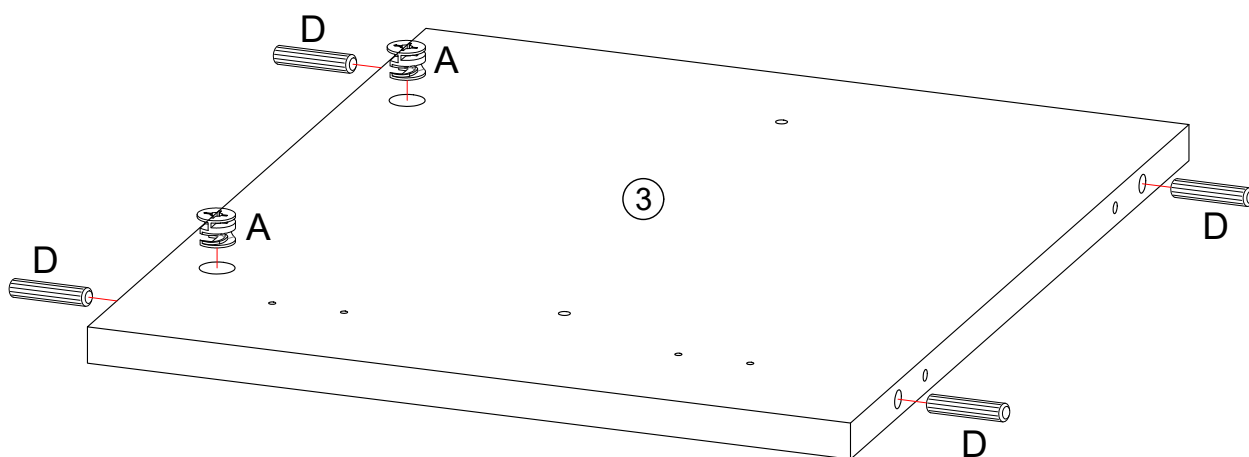

ASSEMBLY INSTRUCTIONS

STEP 3

 
 
Insert cam locks (A) and wooden dowels (D) to part 5 and 6, as shown.



A x 4




D x 8

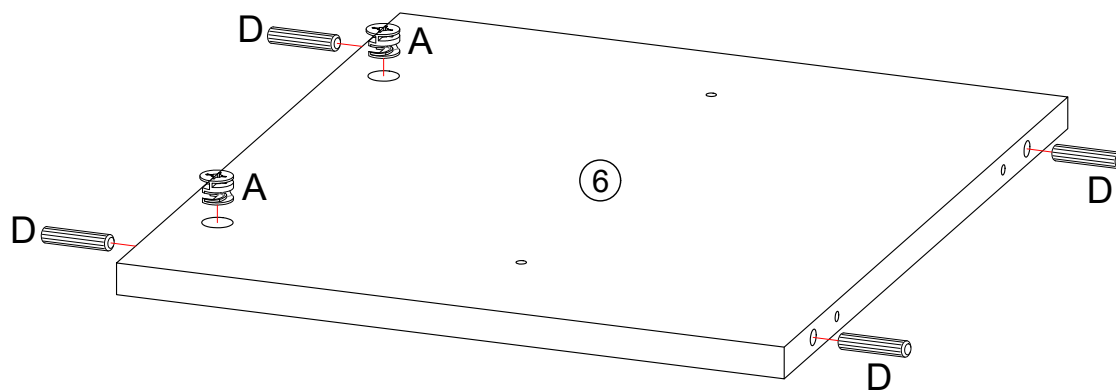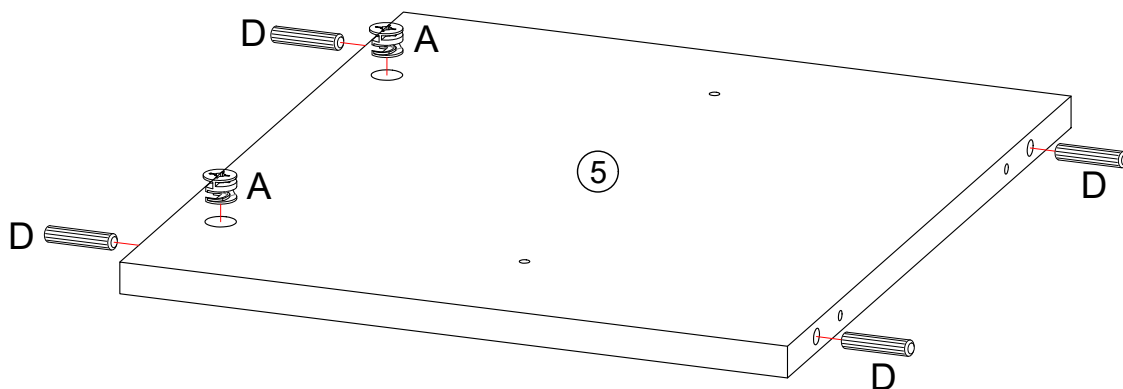

ASSEMBLY INSTRUCTIONS

 
STEP 4

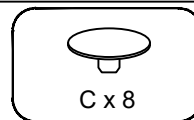

Fix parts 3, 4, 5 and 6 to part 1, as shown.

Turn cam locks clockwise to tighten.

 Place covers (C) over cam locks (A).

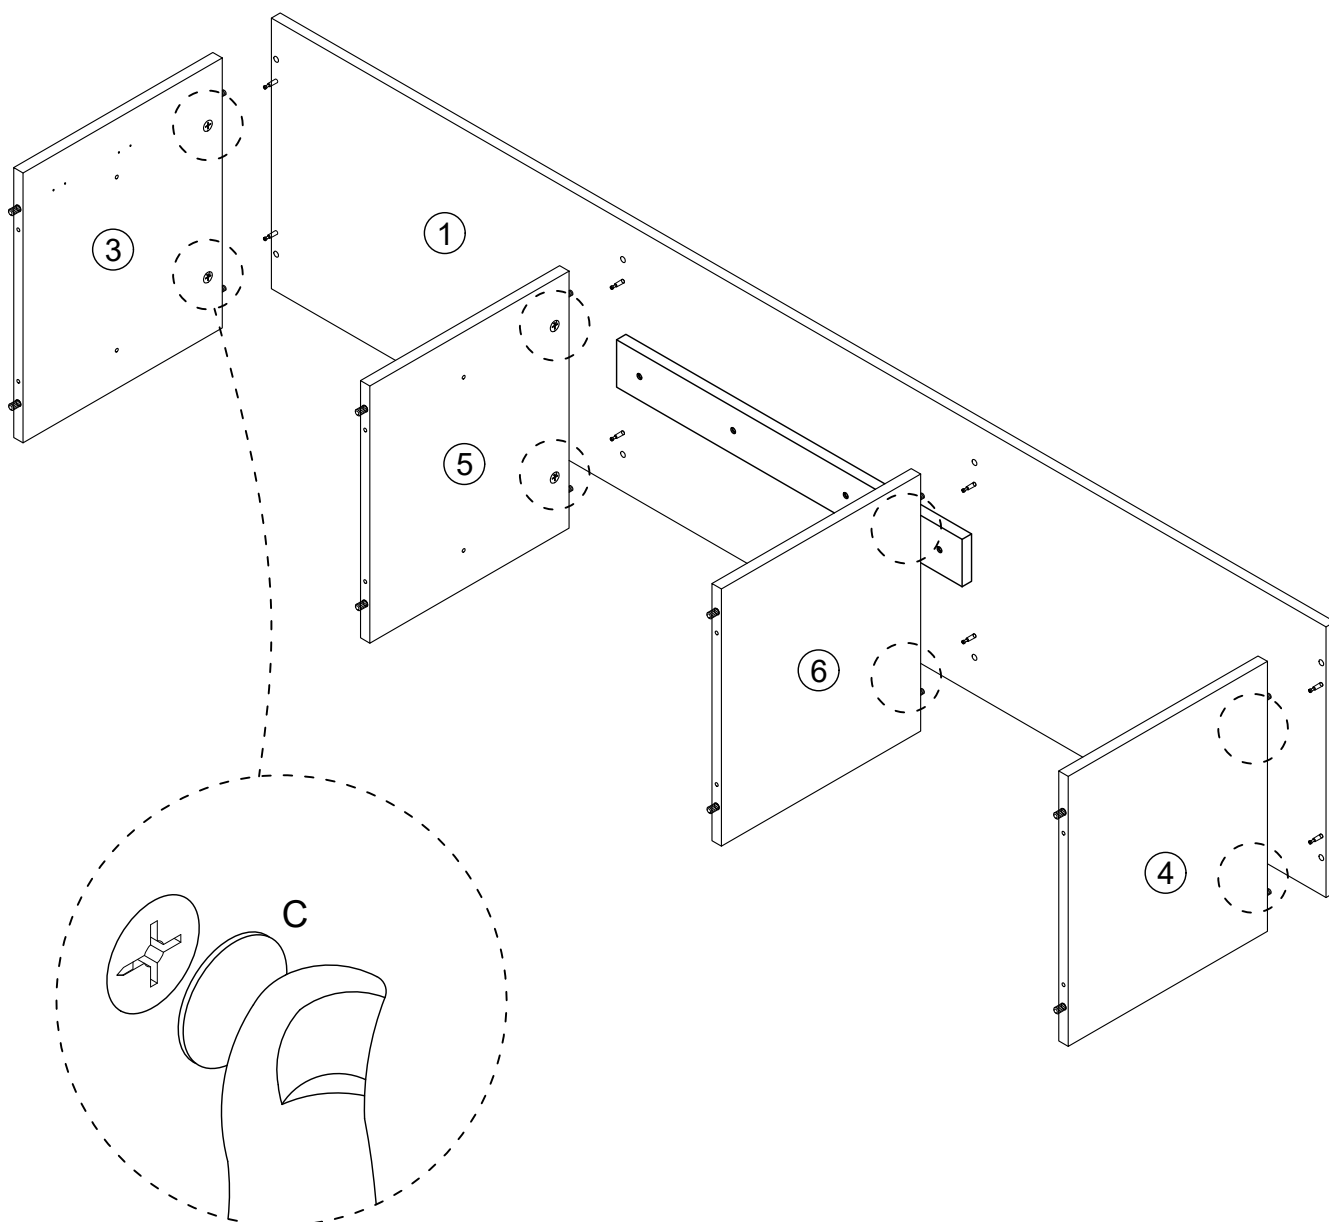

ASSEMBLY INSTRUCTIONS

STEP 5

 
Fix part 2 to parts 3 and 4, 5 and 6 using screws (E) and allen key (F), as shown.



E x 6



F x 1

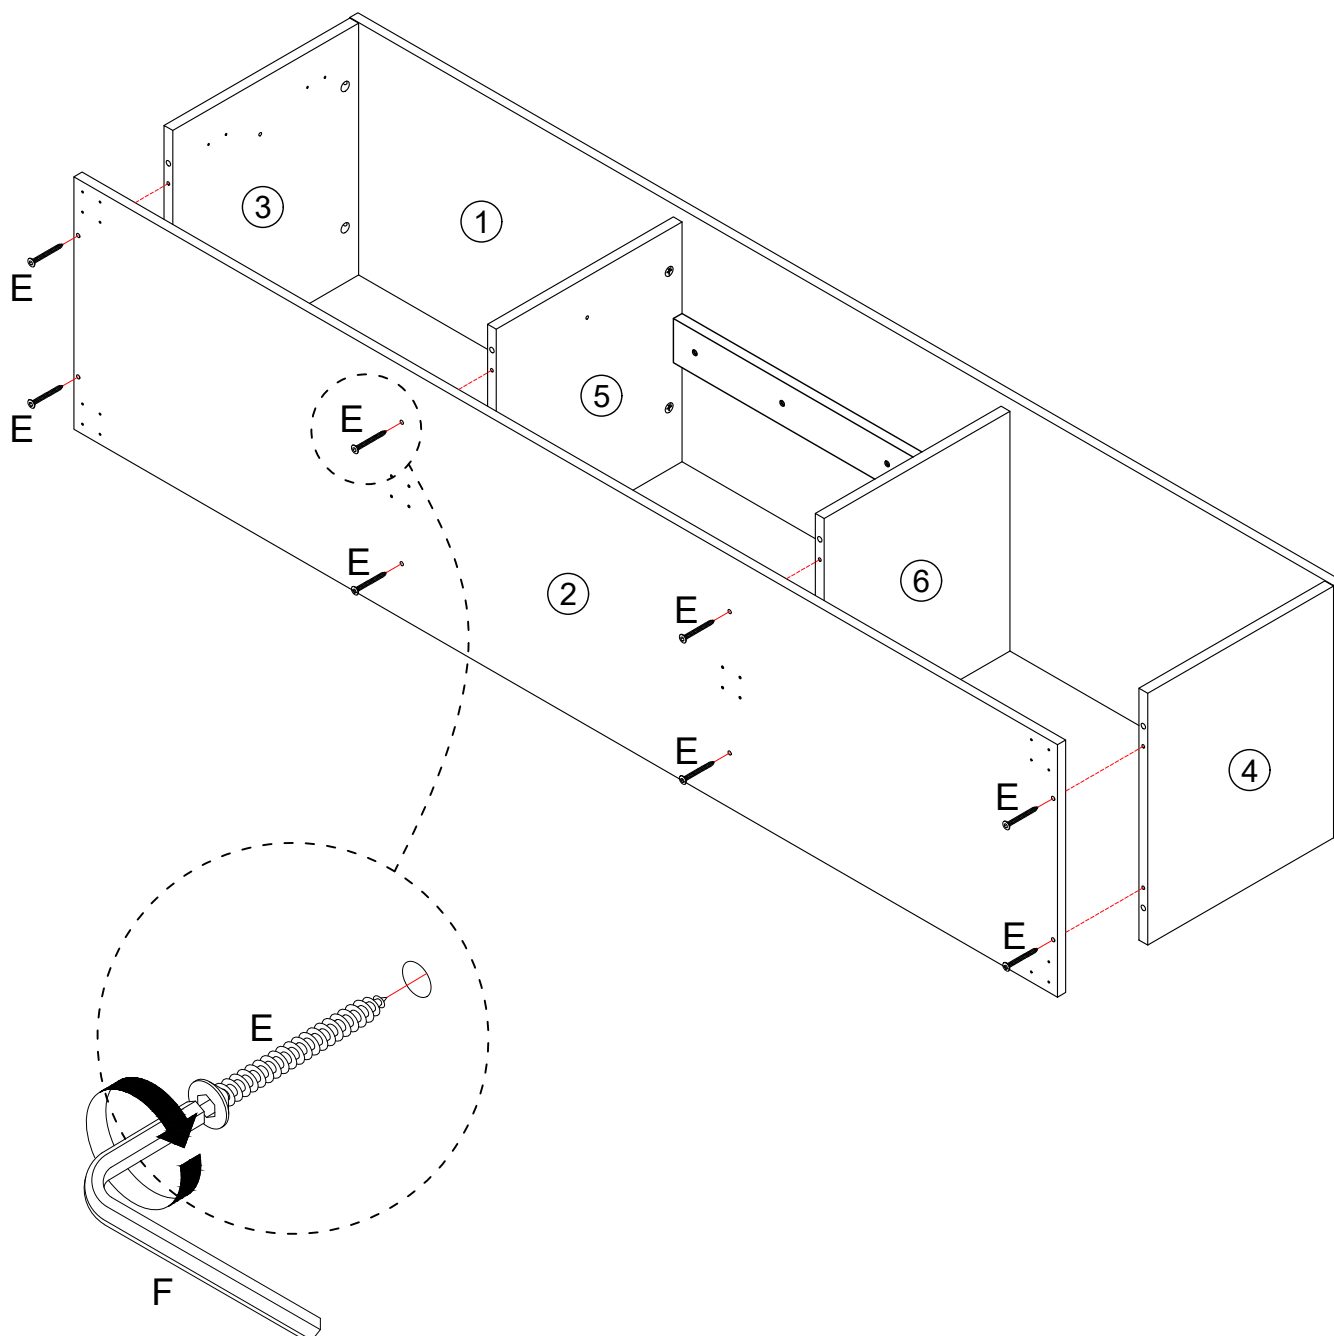

ASSEMBLY INSTRUCTIONS

STEP 6

 
Fix square legs (K) to the bottom of part 2 using screws G, as shown.



G x 24



K x 6

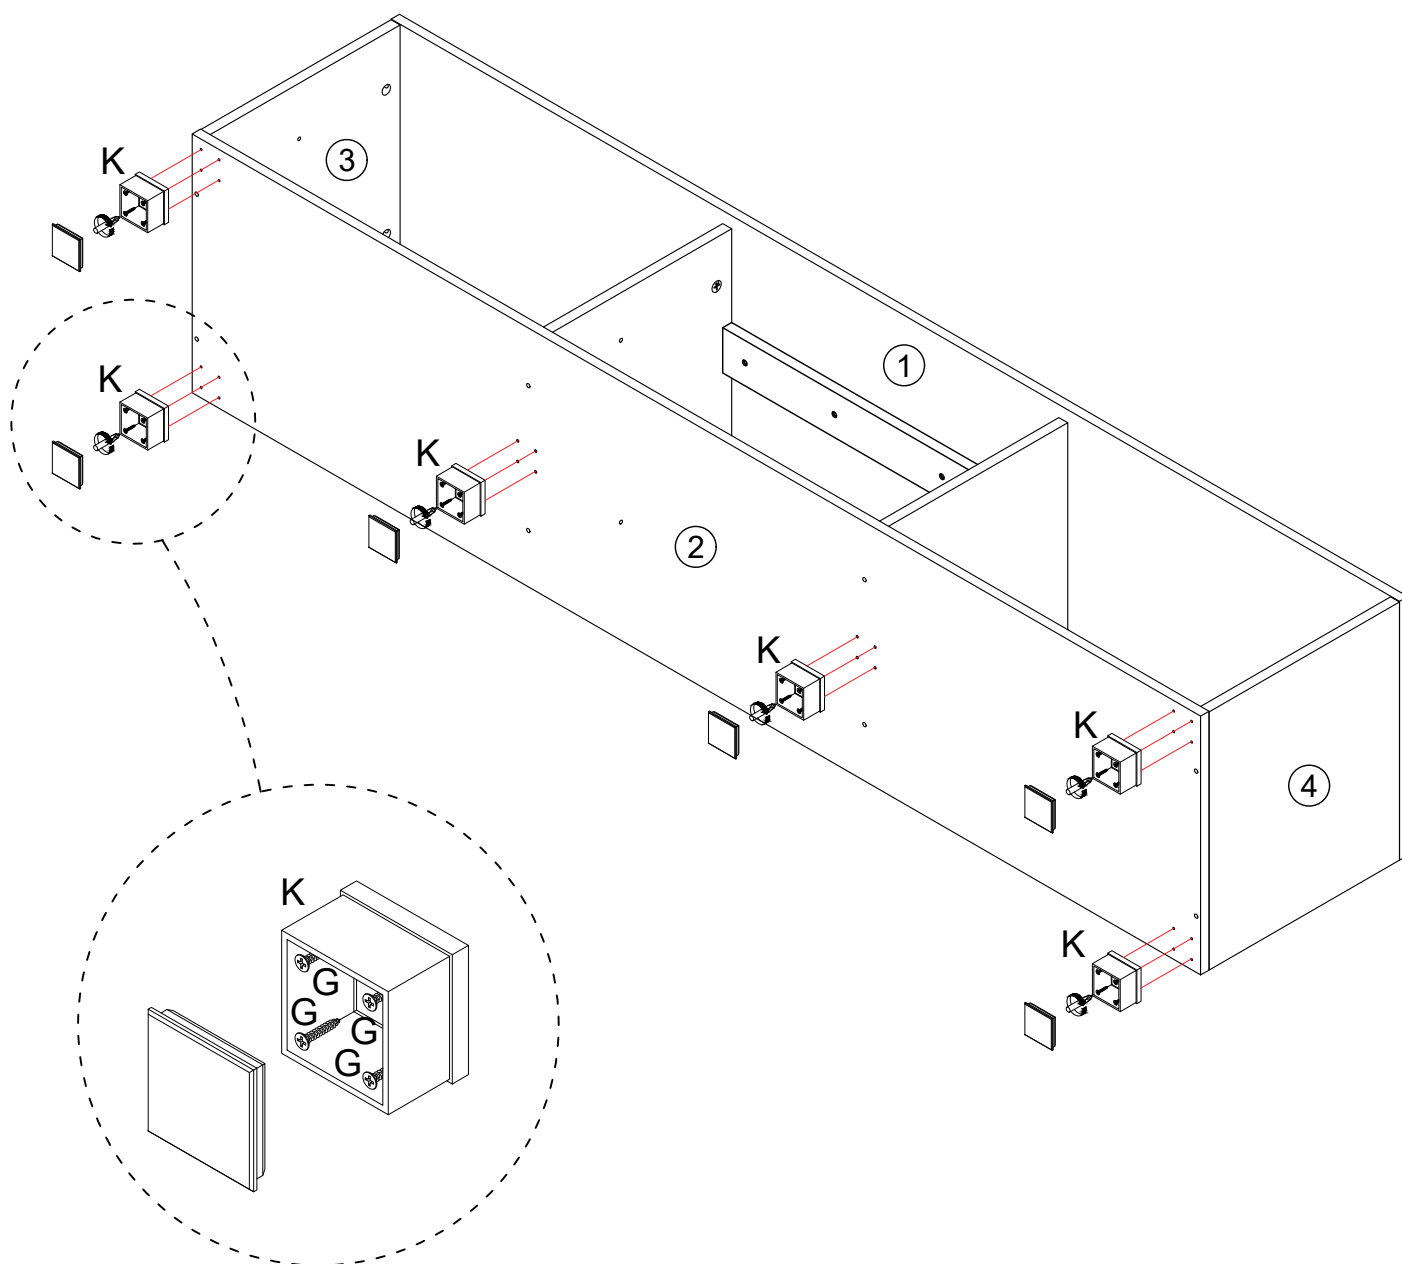


ASSEMBLY INSTRUCTIONS

STEP 7

Secure back panel 8 to the back of the unit using nails (J), as shown.



 
J x 28

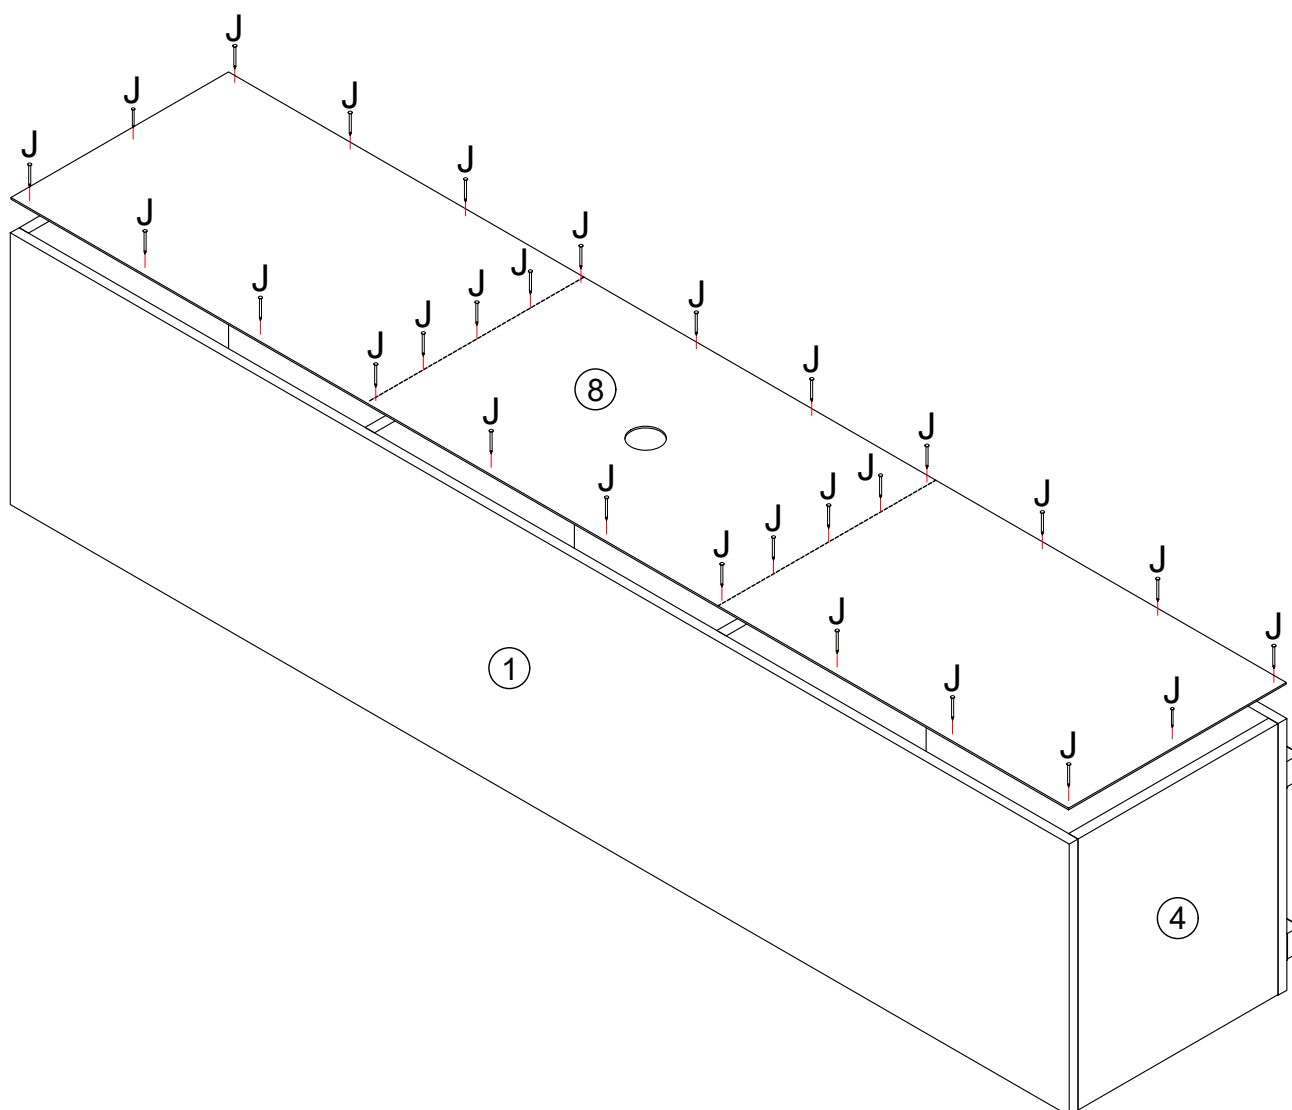


ASSEMBLY INSTRUCTIONS

STEP 8

 Insert shelf support (I) to parts 5 and 6, as shown.




1 x 4

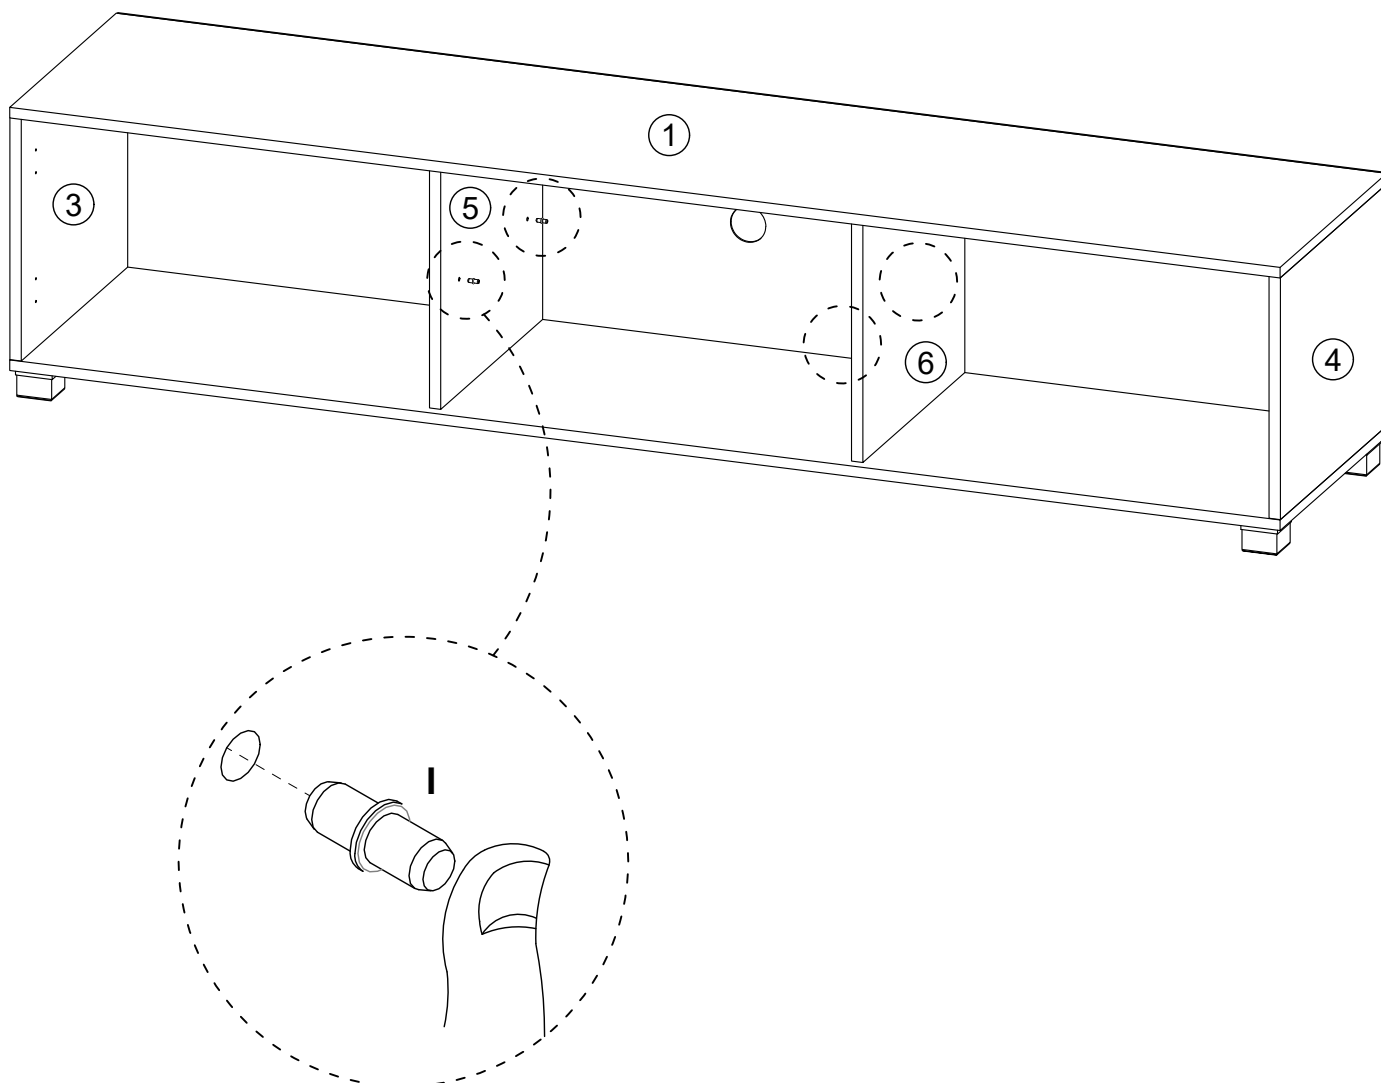 

ASSEMBLY INSTRUCTIONS

STEP 9

 Slide part 7 onto the metal shelf support, as shown.

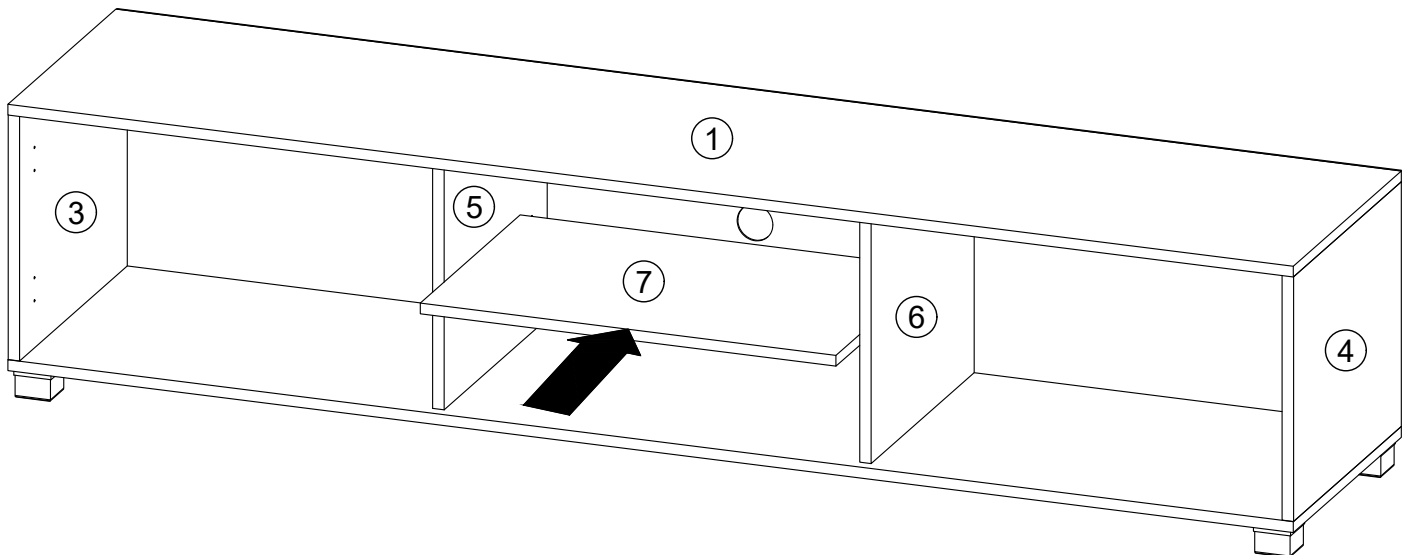

ASSEMBLY INSTRUCTIONS

STEP 10

 
Fix hinges (L) to parts 9 using screws (G).



G x 8



L x 4

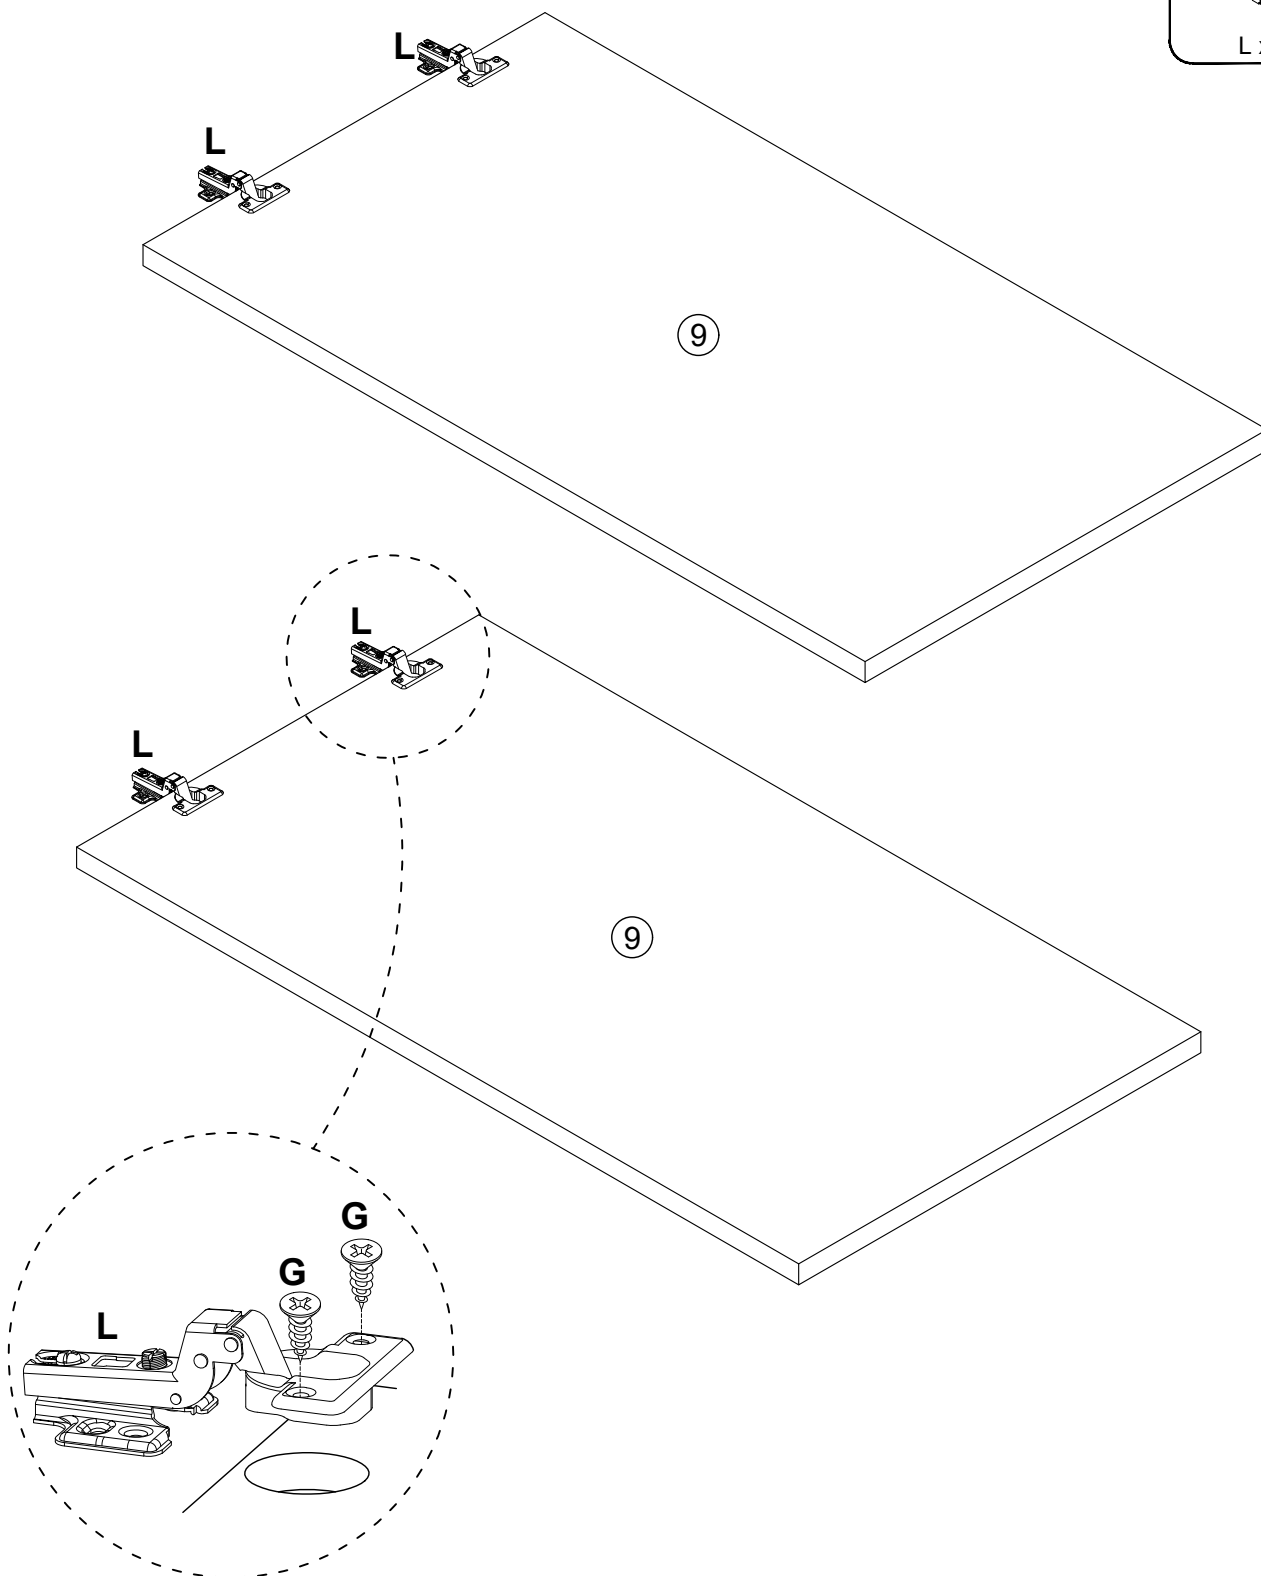


ASSEMBLY INSTRUCTIONS

STEP 11

Fix doors 9 to parts 3 and 4 using hinges (L) and screws (G).




 G x 8

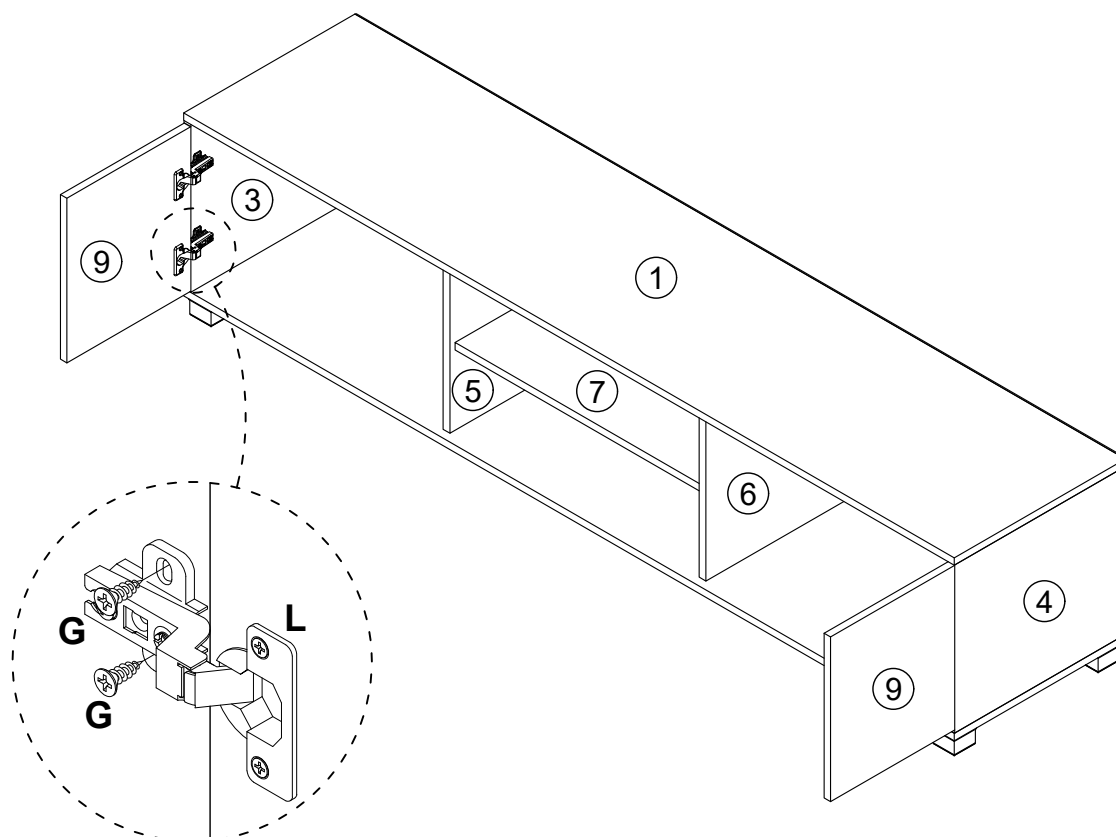


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

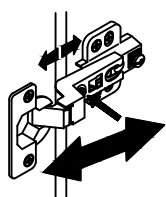

 To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

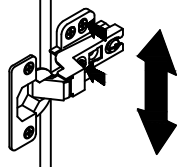

 
To adjust the door vertically loosen the screw as shown and move up and down as needed.

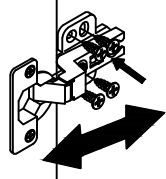

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS

 STEP 12

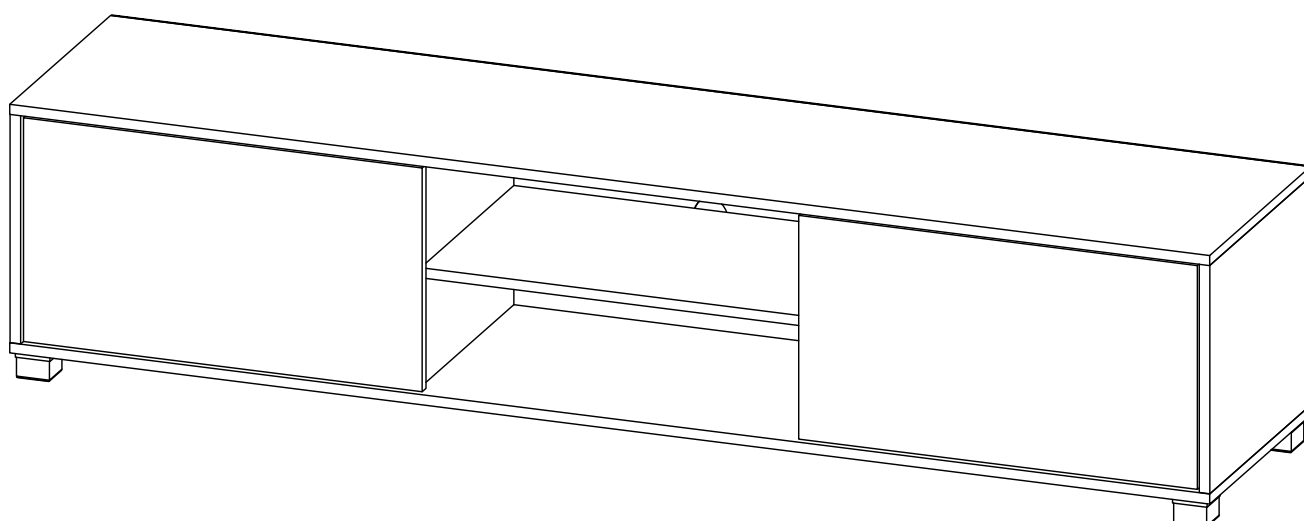

Please note: the maximum recommended weight is 15kg for the top, 10kg per shelf and open shelf.

Your TV Unit is ready for use.

 WARNING	
	
<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• ALWAYS secure your television with an anchor device or mount the television on a wall.	