 


TV UNIT

2 DOORS 1 DRAWER

ASSEMBLY INSTRUCTIONS

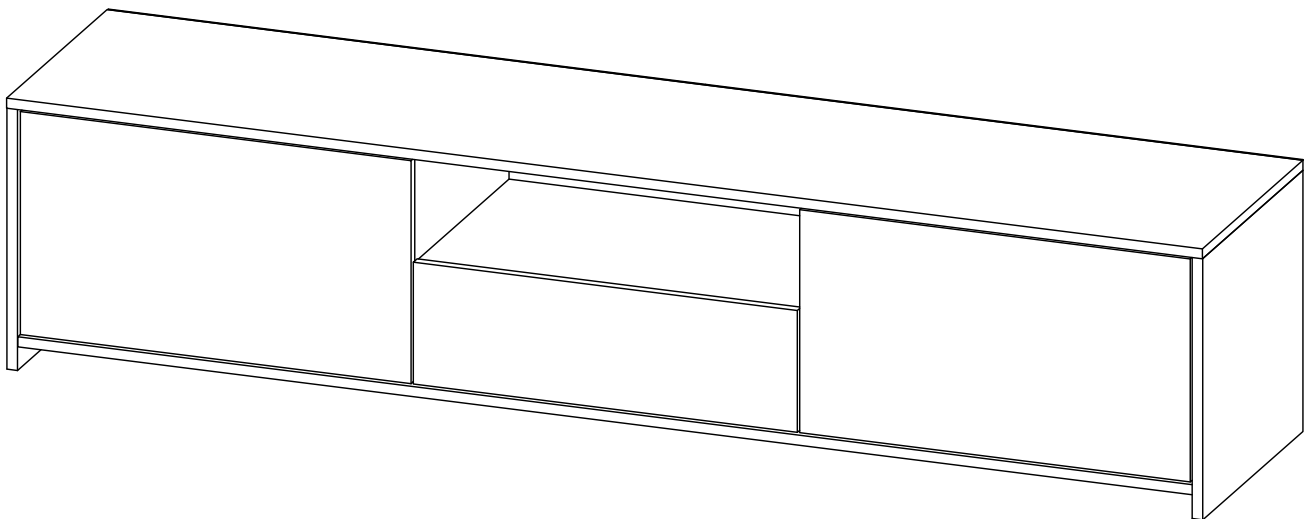

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ☑ To clean glass, please use glass cleaner.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver, flat head screwdriver, hammer
- ☑ 2 x adults required
- ☑ 2m x 2m assembly space required
- ☑ 1 hour assembly time approx.

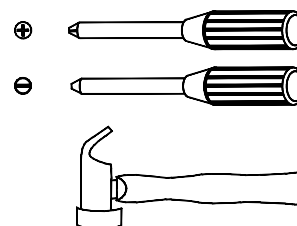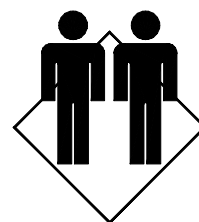

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FORM FURNITURE TIPOVER.

ALWAYS secure this furniture with an anchor device

NEVER allow children to stand, climb or hang on doors or shelves


NEVER open more than one drawer at a time

NEVER put a TV on this furniture

Place heavy items down low

For more information, visit <https://www.productsafety.gov.au>

 **WARNING**

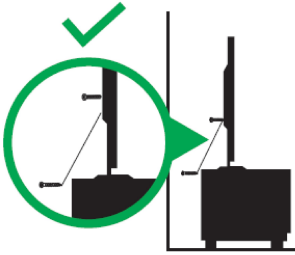 


Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

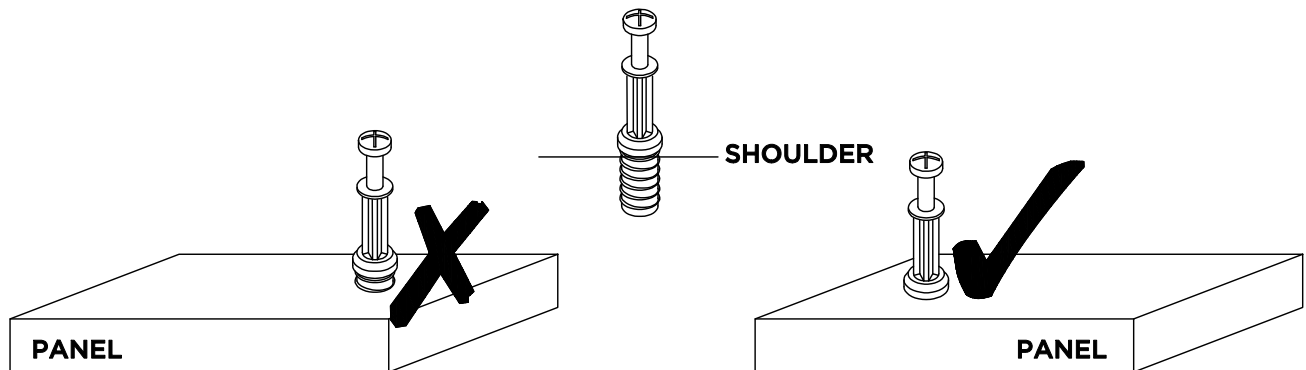


CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

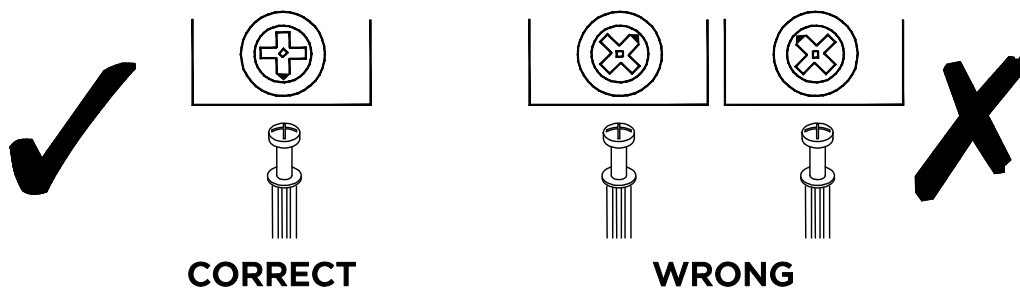


Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

 Turn cam lock clockwise to tighten.

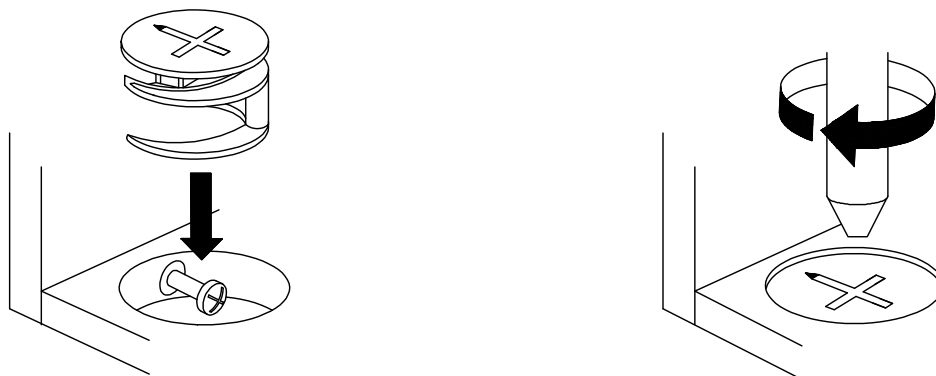


DRAWER SLIDE GUIDE

 Your pack will contain one sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 1 components. Undo the tape on one set at a time and separate the parts.

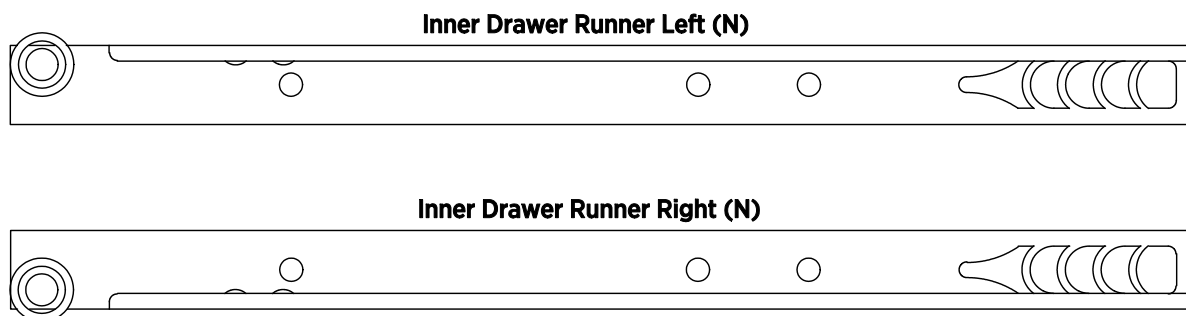

 The Drawer Slide components shown above are attached to the **drawer**. They have the letters **NL** or **NR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

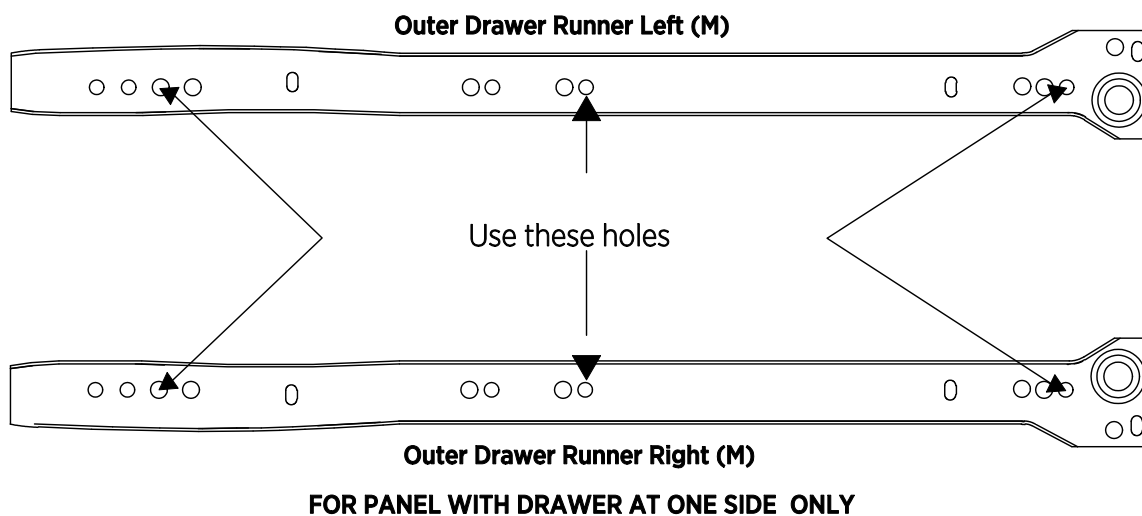


The Drawer Slide components shown above are attached to the **TV Unit**. They have the letters **ML** or **MR** stamped on them to indicate left hand or right hand components. You will need these for step 3 and 13.

HARDWARE LIST



 
16 x A
Cam Lock

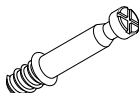


16 x B
Quickfit Screw



 
16 x C
Cam Lock Cover




20 x D
Wooden Dowel

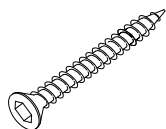 


4 x E
Screw

 


1 x F
Allen Key

 


44 x G
Screw

 

4 x H
Screw

 

8 x I
Screw

 


38 x J
Nail




4 x K
Nail



 
4 x L
Nail

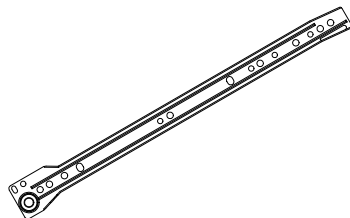

2 x M
Outer Drawer Runner

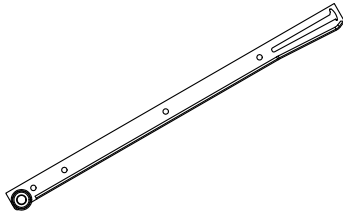 


2 x N
Inner Drawer Runner

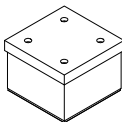 


2 x O
Square Leg

 
PARTS LIST

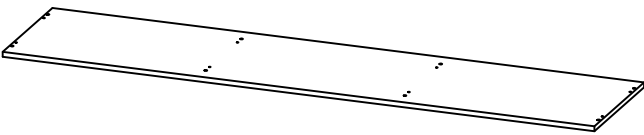


1
1PC

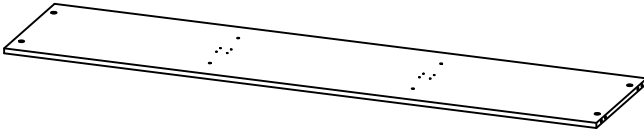 


2
1PC

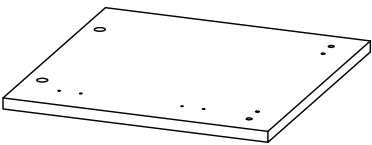 


3
1PC

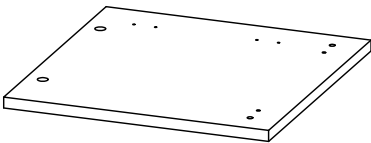 


4
1PC

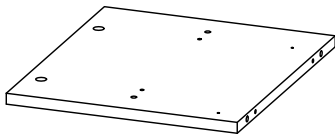 


5
1PC

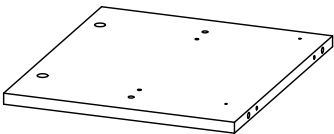 


6
1PC

 


7
1PC

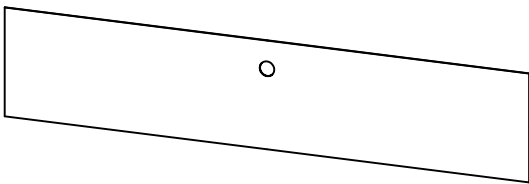 


8
1PC

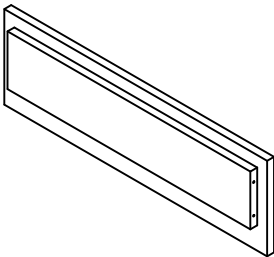 


9
1PC

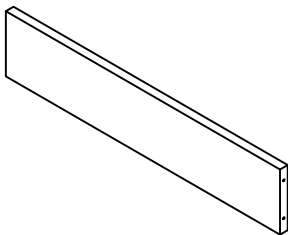 


10
1PC

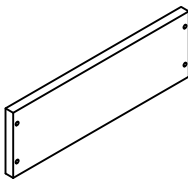 


11
2 PCS

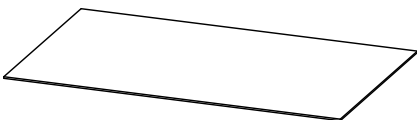 

12
1PC

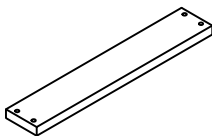 

13
1PC

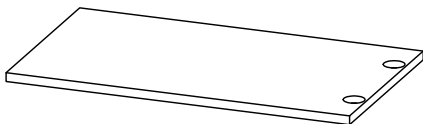 

14
2 PCS

ASSEMBLY INSTRUCTIONS

STEP 1

 
Insert cam locks (A) to parts 2 and 7, as shown.

Insert quick fit screws (B) to part 1, as shown.


Insert wooden dowels (D) to parts 2 and 7, as shown.






A x 8

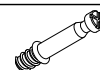

B x 8

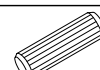 

D x 8

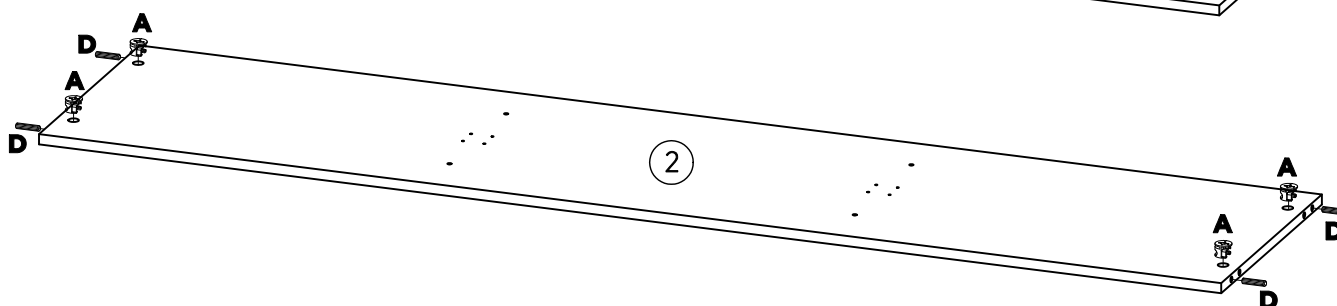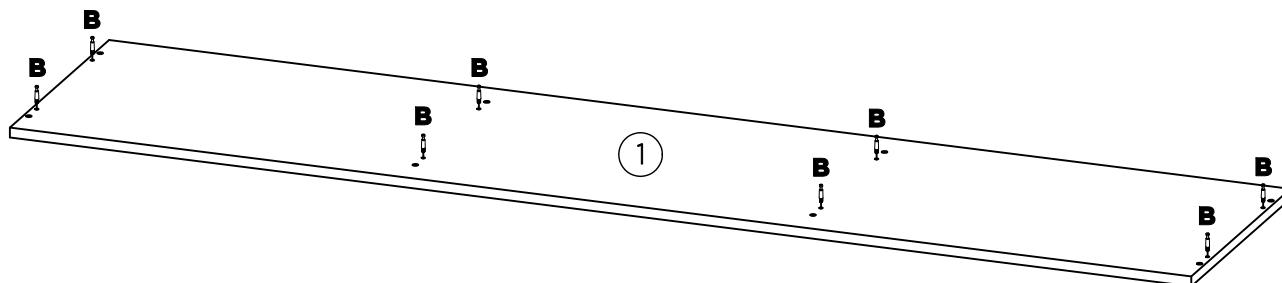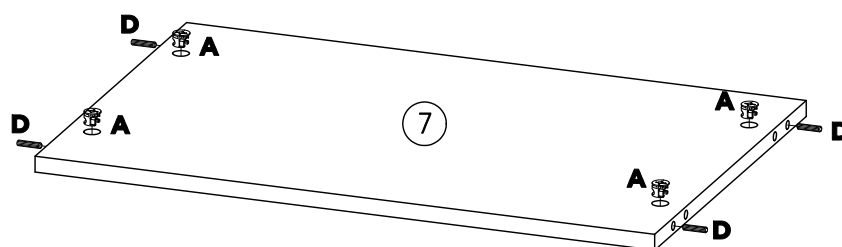   

ASSEMBLY INSTRUCTIONS

STEP 2

 
Insert cam locks (A) to parts 3, 4, 5 and 6, as shown.

Insert quick fit screws (B) to part 3, 4, 5 and 6 as shown.


Insert wooden dowels (D) to parts 3, 4, 5 and 6, as shown.







A x 8

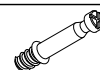

B x 8

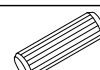 

D x 12

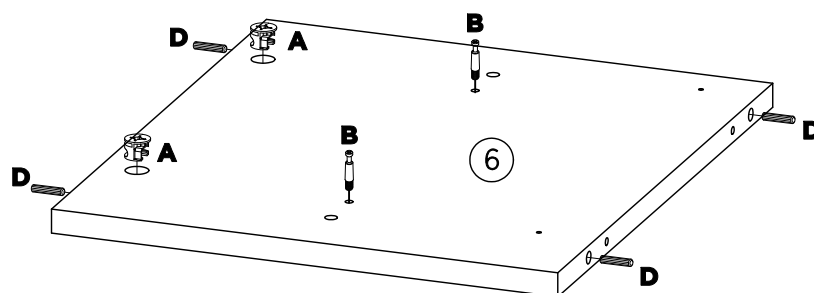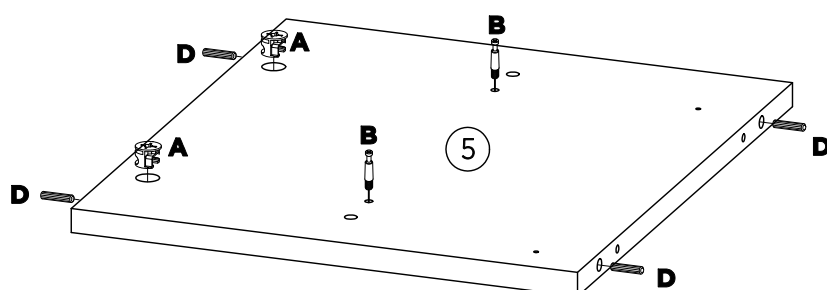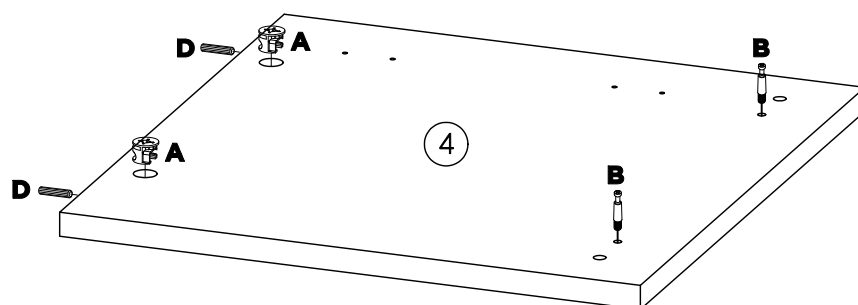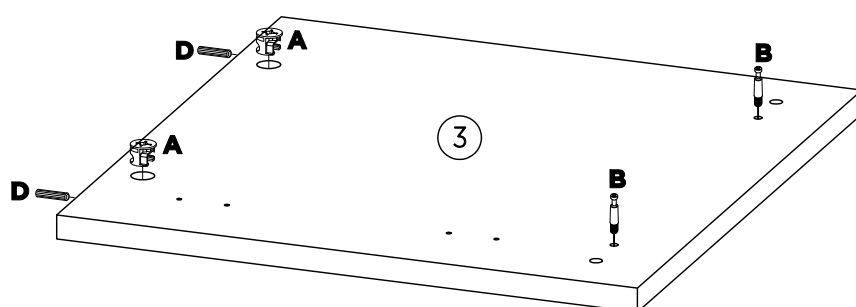    

ASSEMBLY INSTRUCTIONS

STEP 3

Fix outer drawer runners (M) to parts 5 and 6 using screws (G), as shown.

WARNING

 
The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



G x 6



M x 2

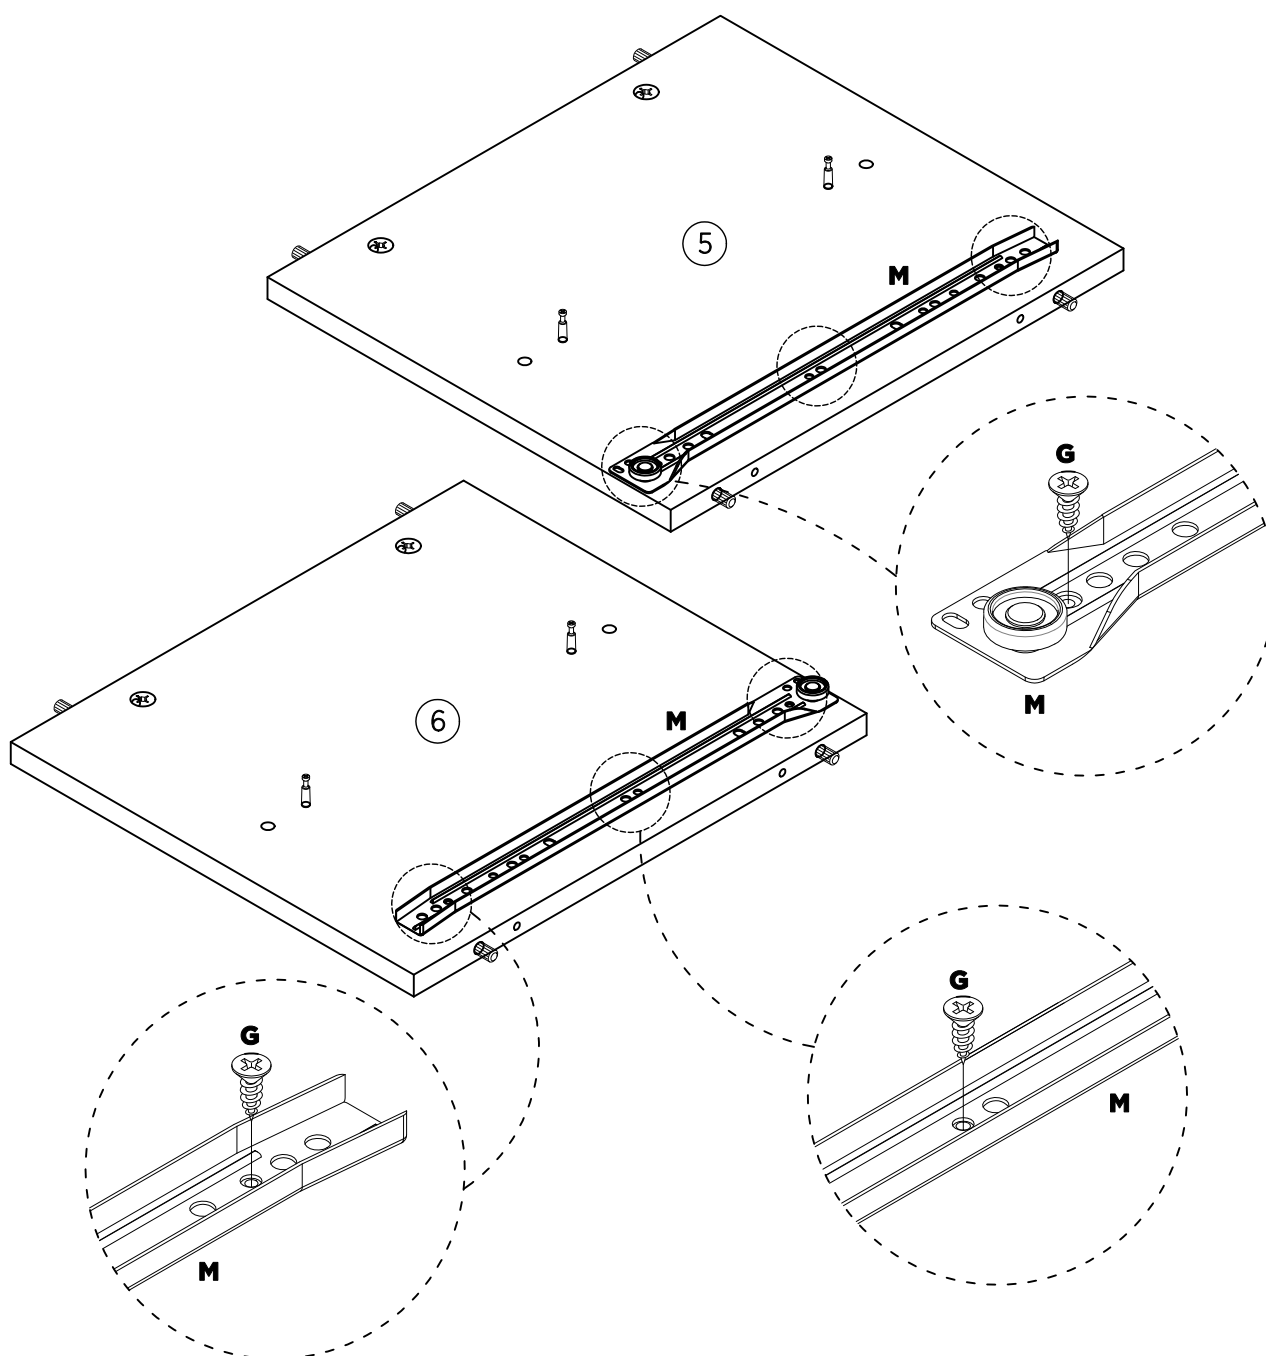



ASSEMBLY INSTRUCTIONS

STEP 4

Fix part 7 to part 5 and 6, as shown.

Turn cam locks clockwise to tighten.


 
 
Place covers (C) over cam locks (A).

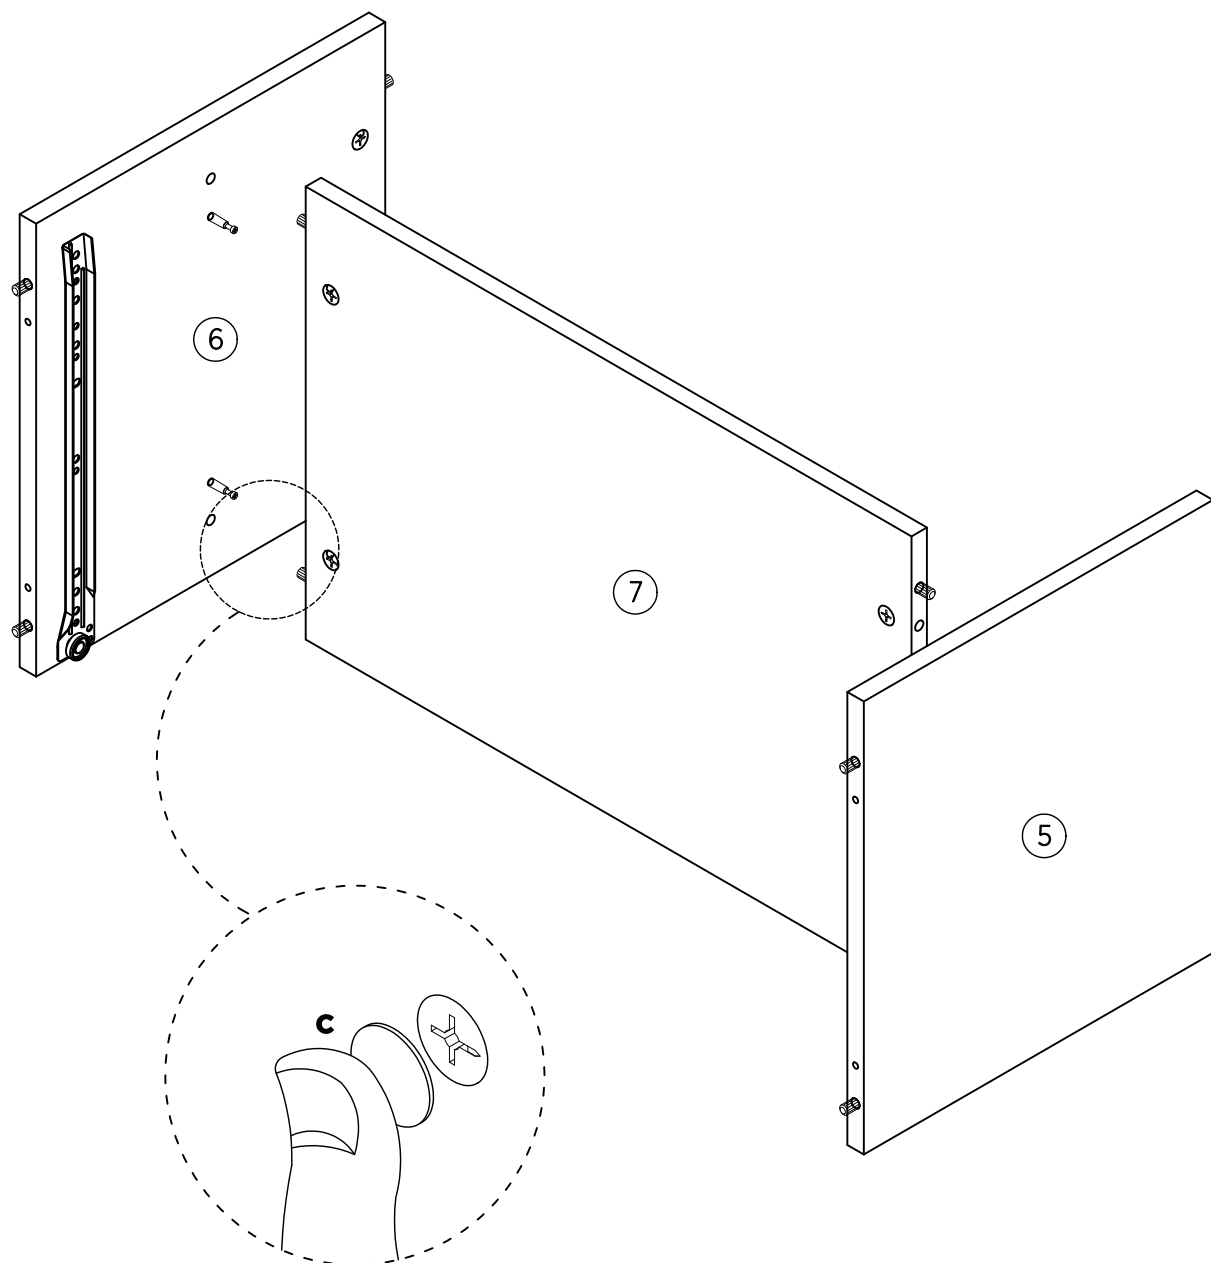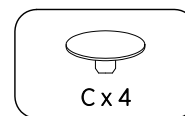

ASSEMBLY INSTRUCTIONS

STEP 5

   Fix part 2 to parts 5 and 6 using screws (E) and allen key (F), as shown.

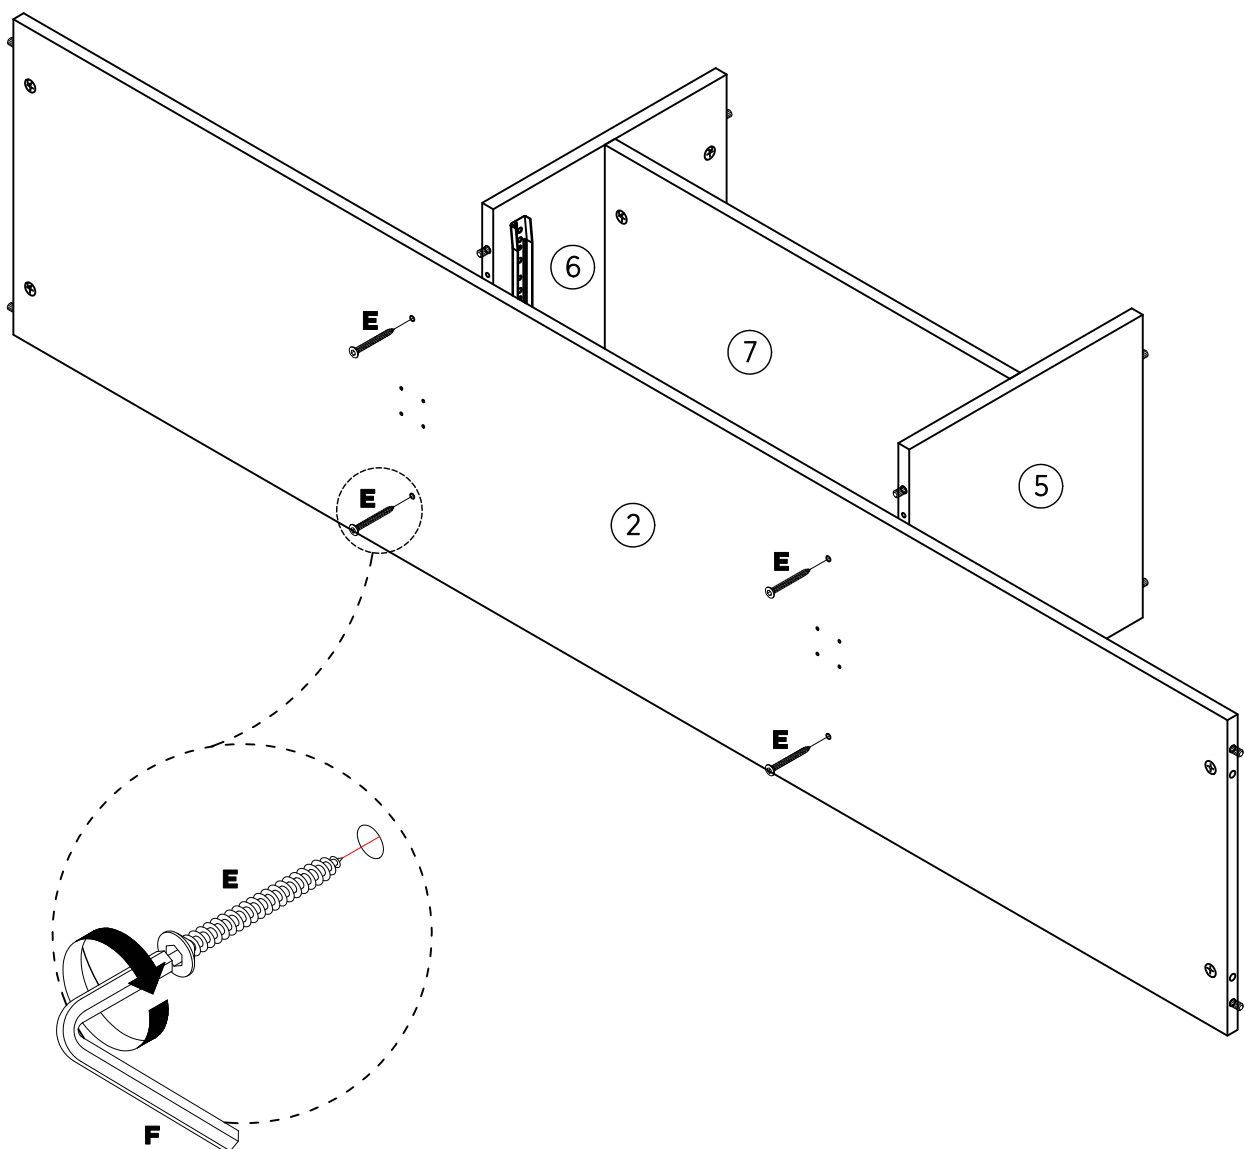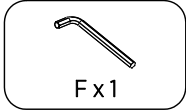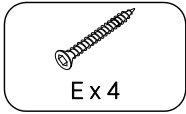



ASSEMBLY INSTRUCTIONS

STEP 6

Fix part 3 and 4 to part 2, as shown.

Turn cam locks clockwise to tighten.

  Place covers (C) over cam locks (A).

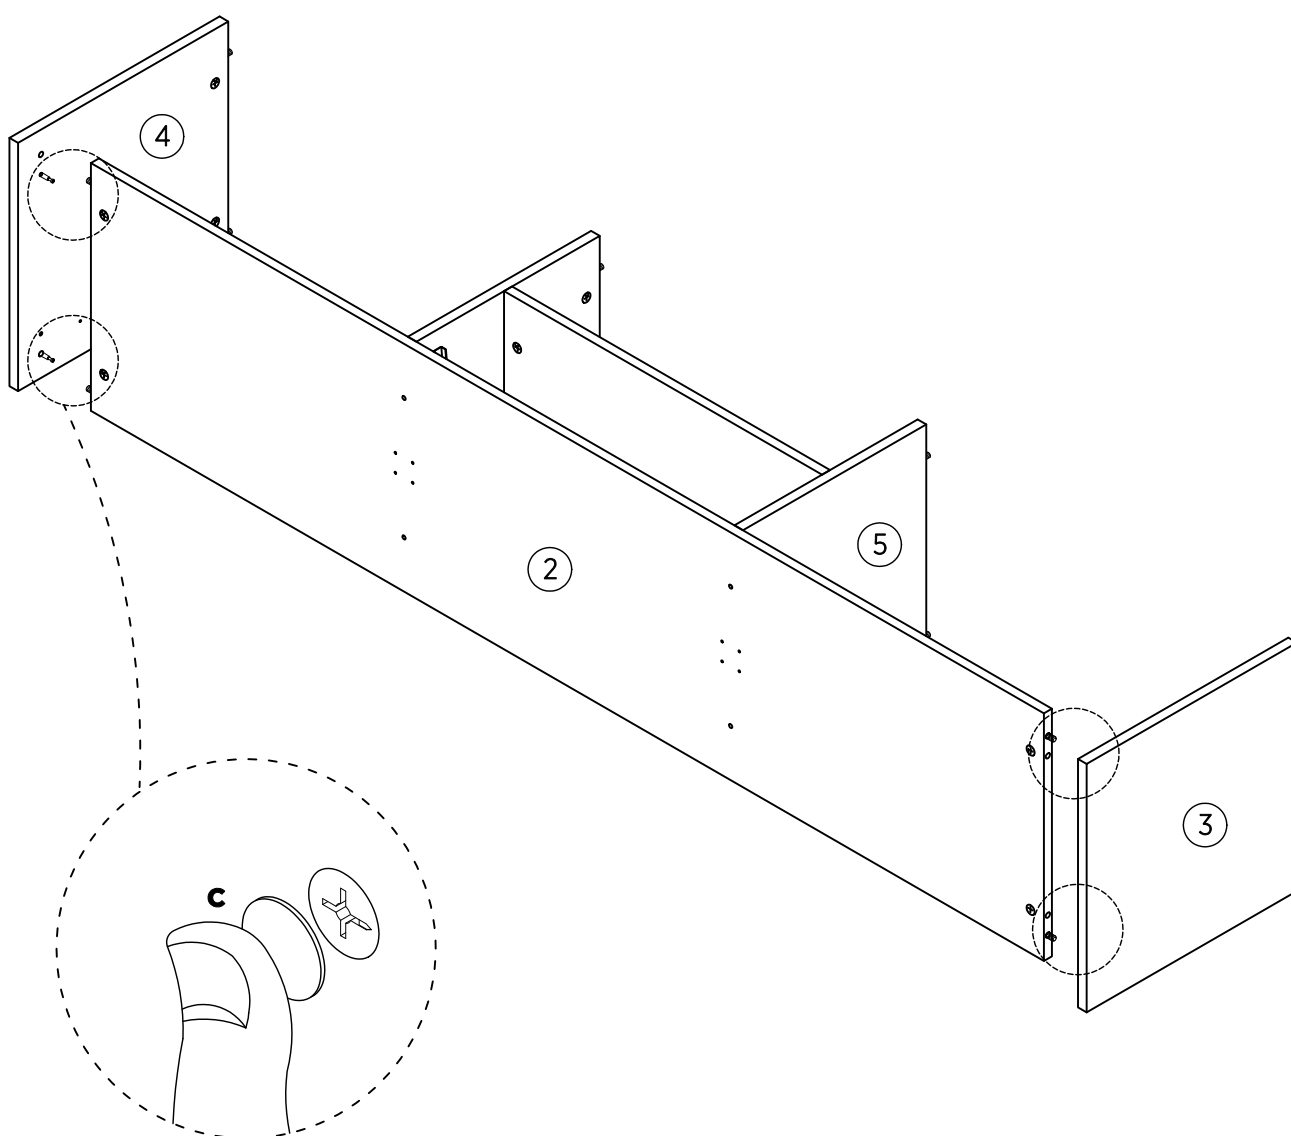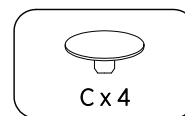



ASSEMBLY INSTRUCTIONS

STEP 7

Fix part 1 to parts 3,4,5 and 6, as shown.

Turn cam locks clockwise to tighten.

 
 
Place covers (C) over cam locks (A).

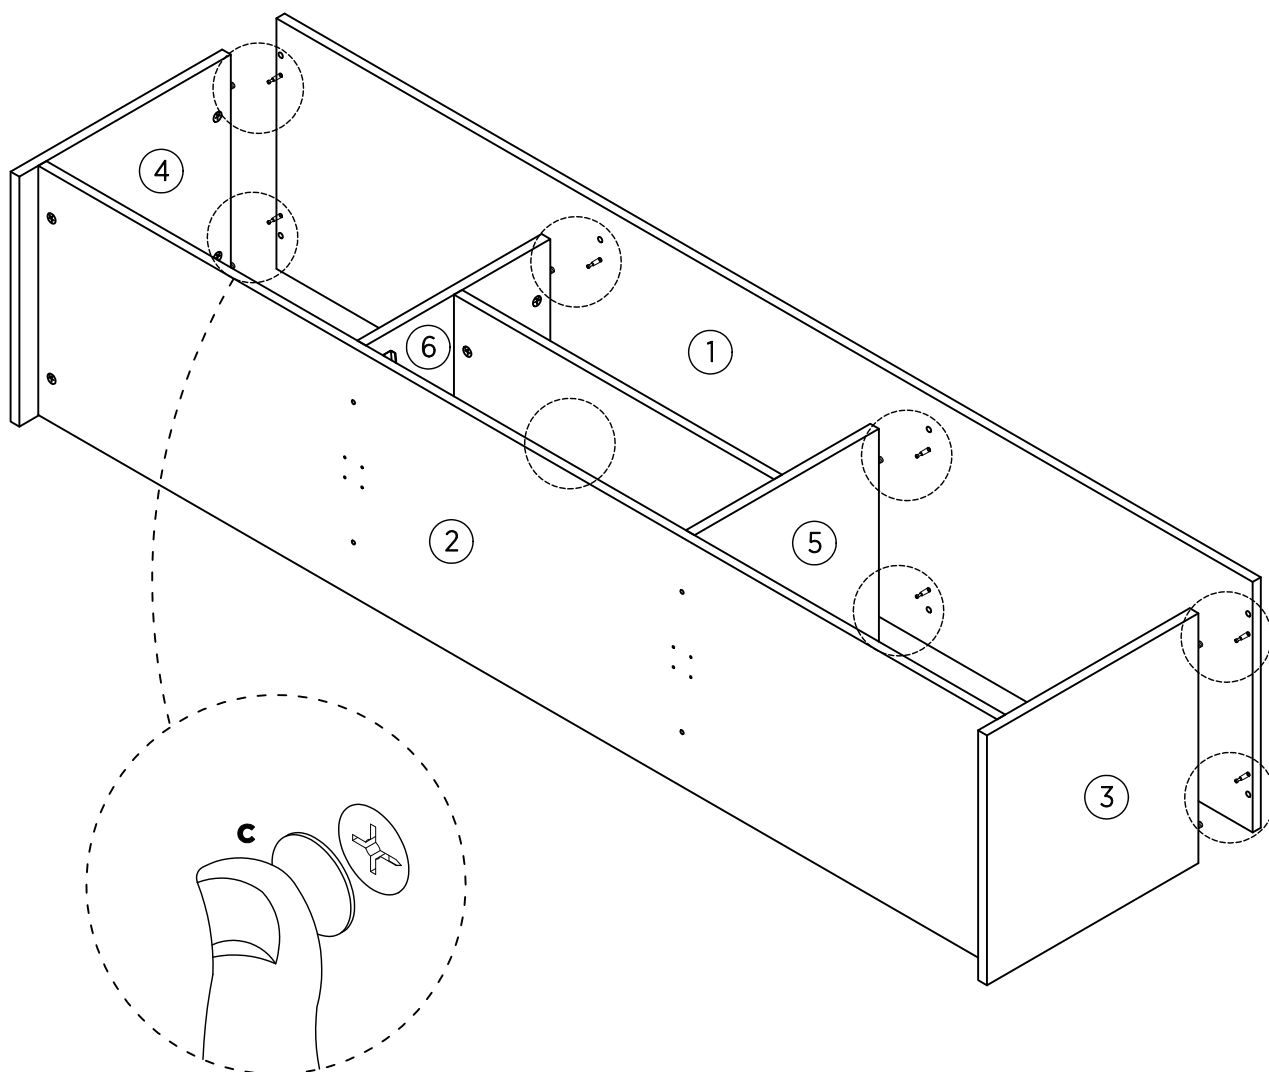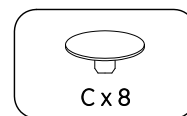

ASSEMBLY INSTRUCTIONS

STEP 8

  Secure back panel 8 to the back of the unit using nails (J) as shown.
Fix nail legs (K) to the bottom of parts 3 and 4, as shown.

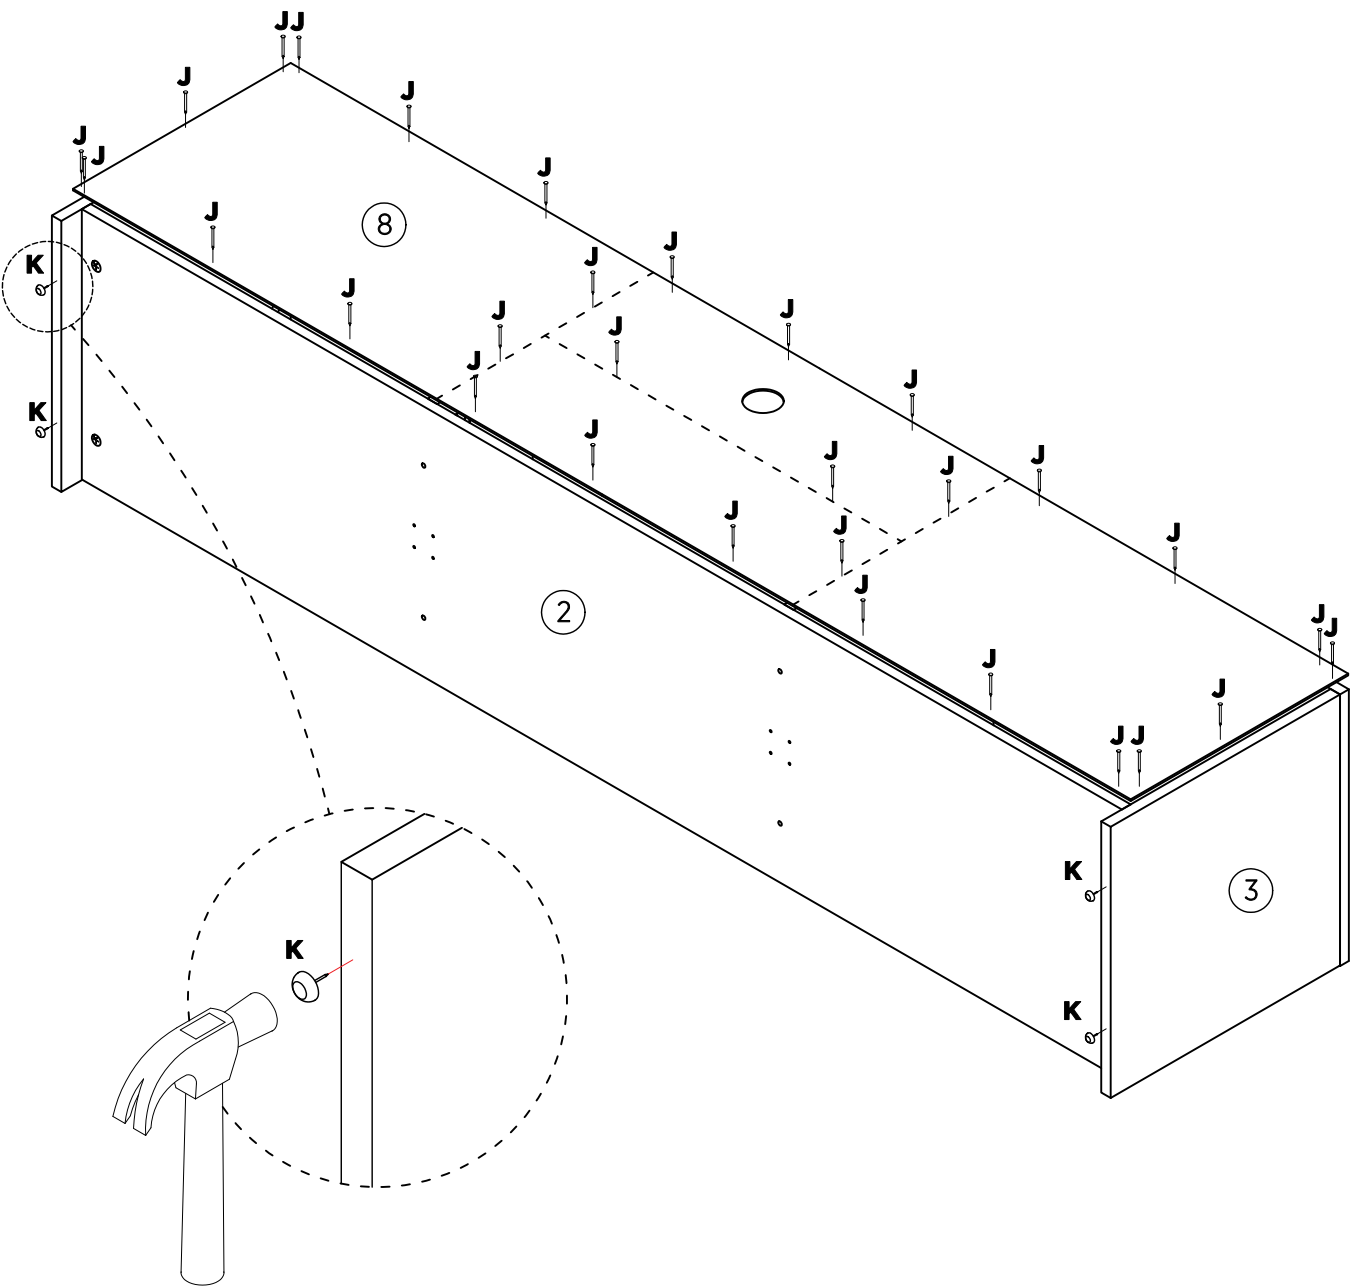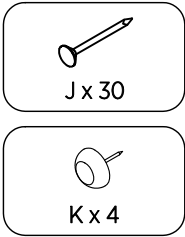

ASSEMBLY INSTRUCTIONS

STEP 9

 
Fix square legs (O) to the bottom of part 2 using screws G, as shown.



G x 8





O x 2

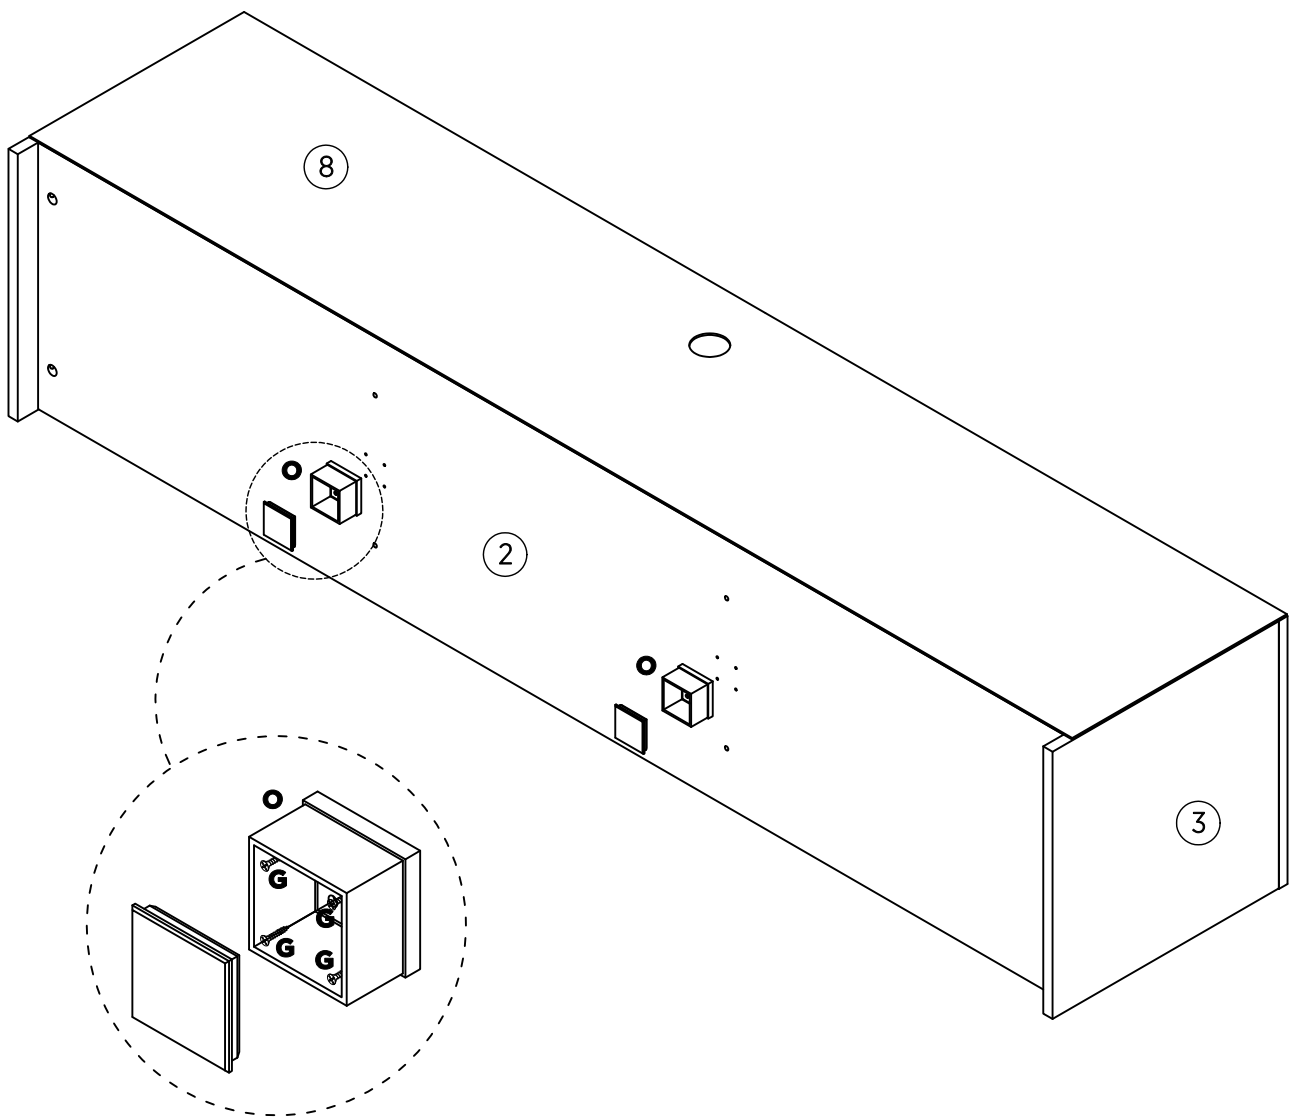

ASSEMBLY INSTRUCTIONS

STEP 10

 
 
Fix parts 9, 10 and 11 together using screws I, as shown.

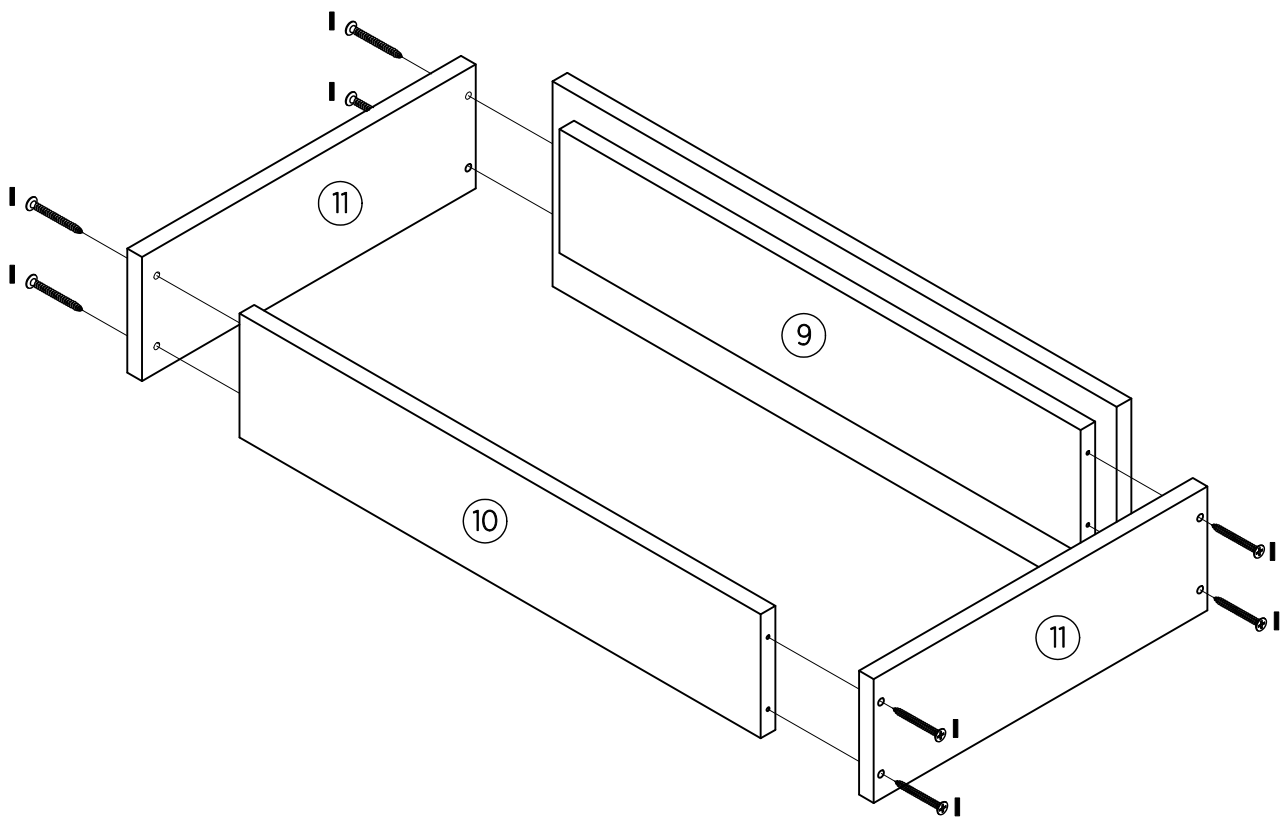

ASSEMBLY INSTRUCTIONS

STEP 11

  Fix parts 12 to parts 9, 10 and 11 using nails (J), as shown.

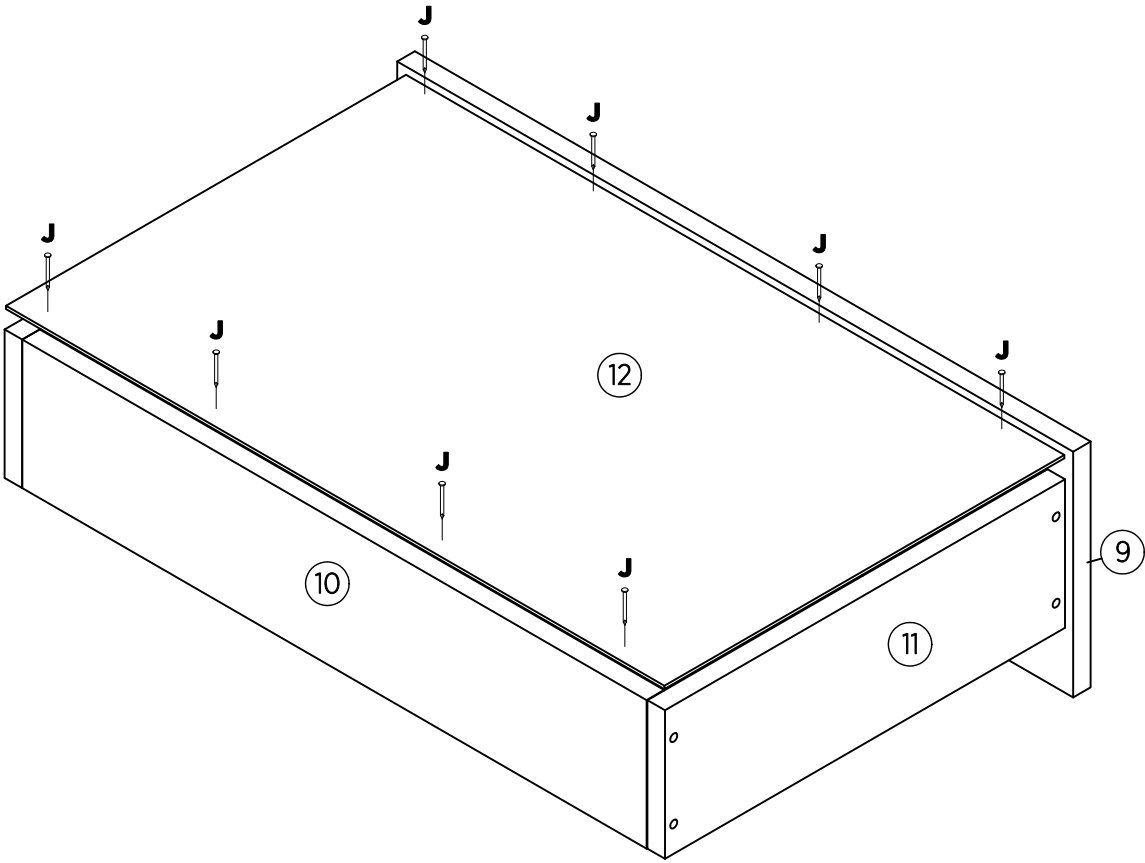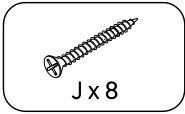


ASSEMBLY INSTRUCTIONS

STEP 12

Secure part 13 to the bottom of part 12 using screws (H), as shown.



 H x 4

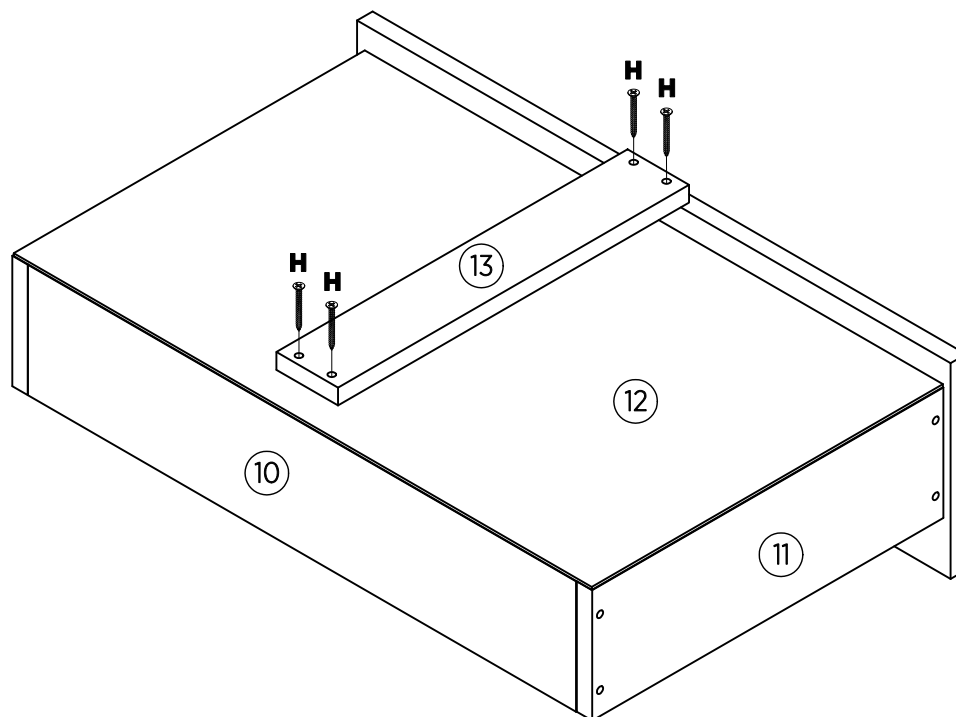


ASSEMBLY INSTRUCTIONS

STEP 13

Fix inner drawer runners (N) to parts 12 using screws (G), as shown.



 
G x 6

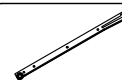

N x 2

WARNING

 
The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

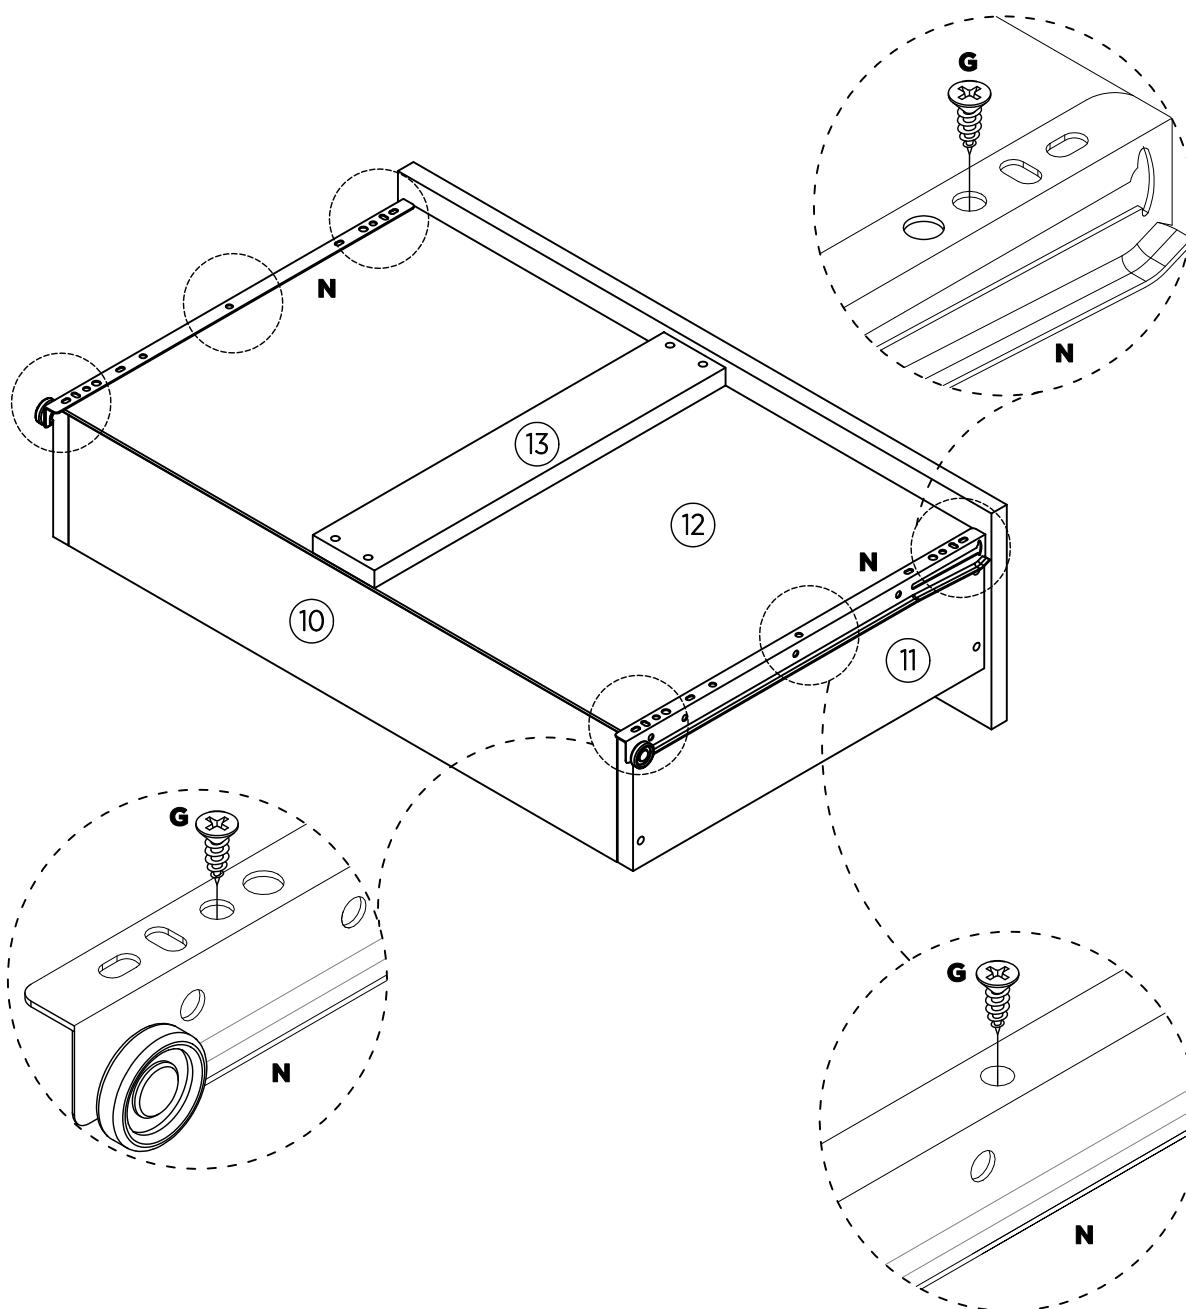

ASSEMBLY INSTRUCTIONS

STEP 14

 
Fit drawer to assembled unit, as shown.

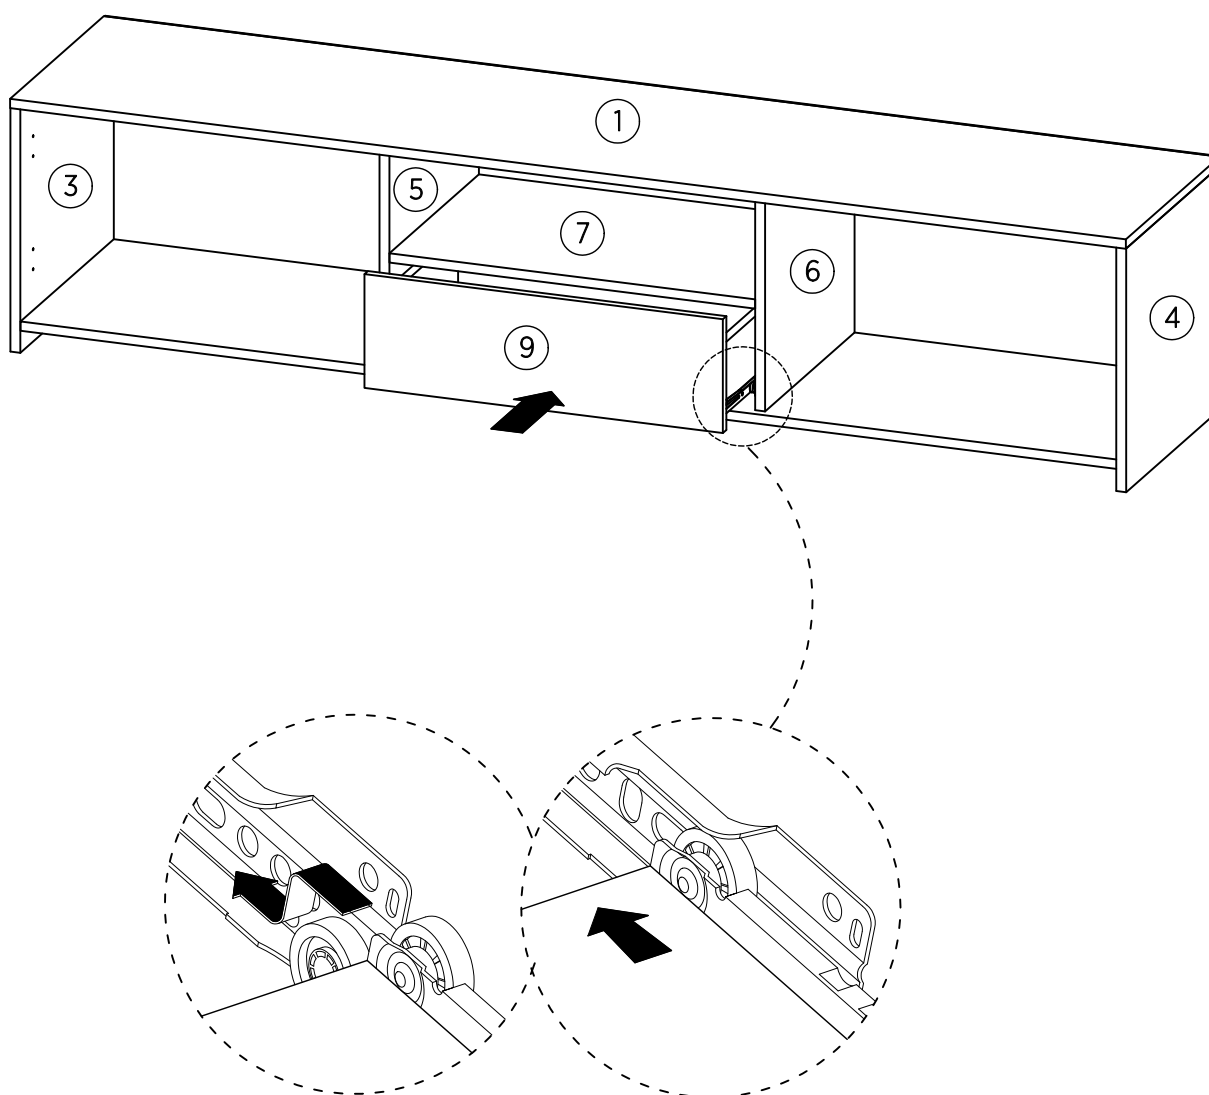

ASSEMBLY INSTRUCTIONS

STEP 15

 
Fix hinges (L) to parts 14 using screws (G).

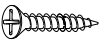

G x 8



 L x 4

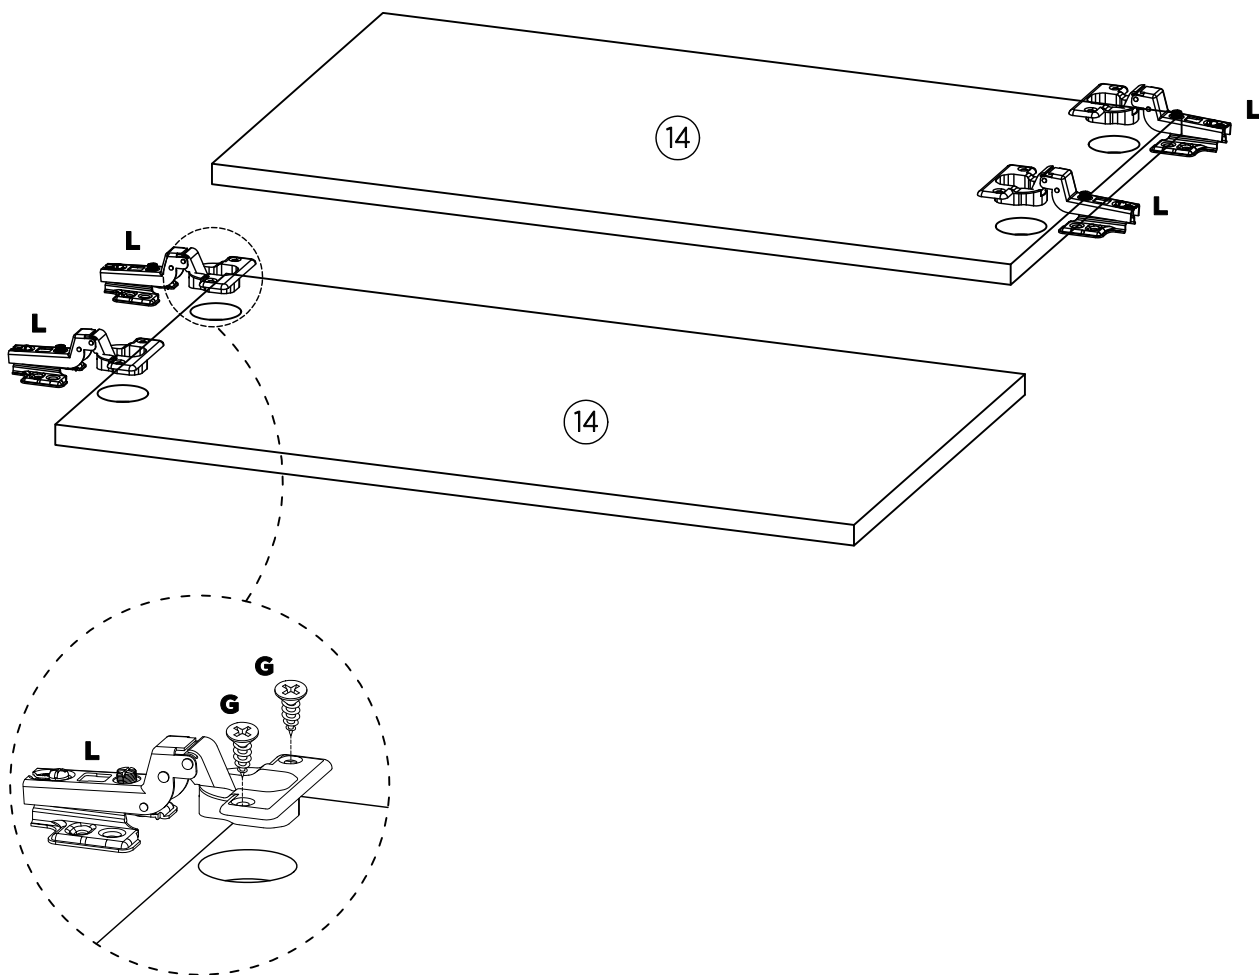


ASSEMBLY INSTRUCTIONS

STEP 16

Fix doors 14 to parts 3 and 4 using screws (G).




 G x 16

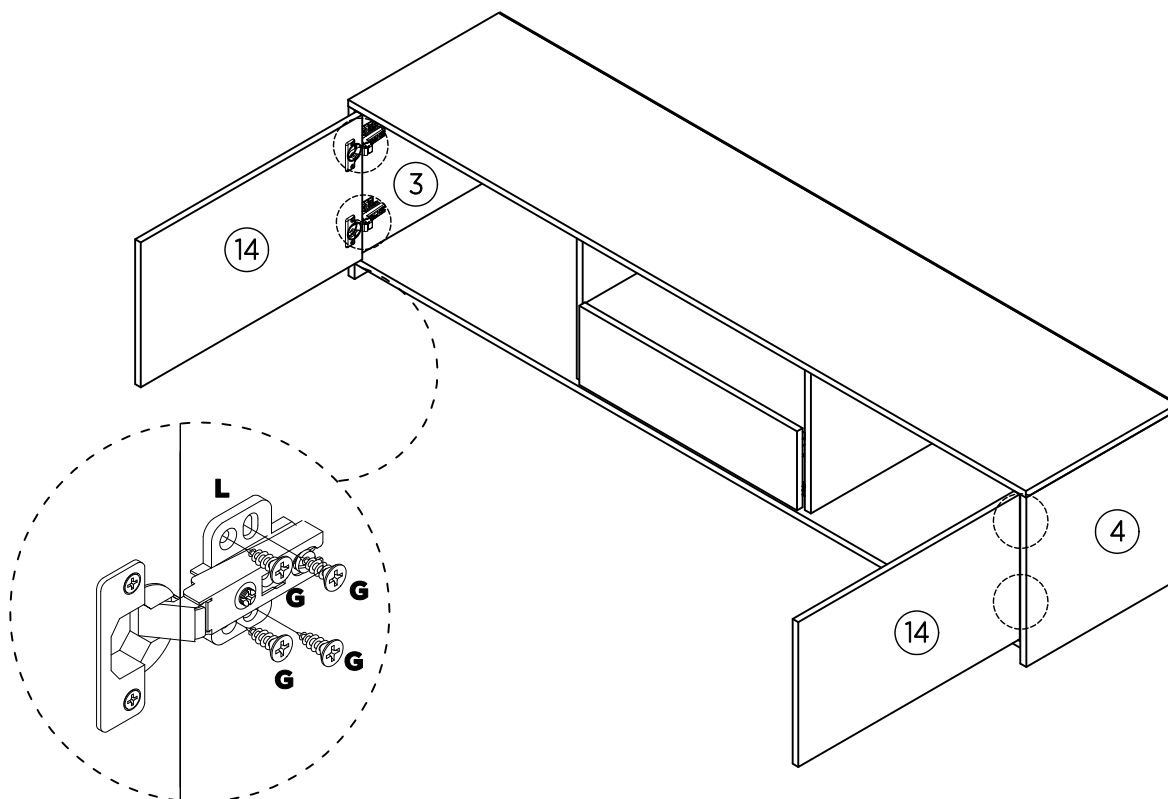


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

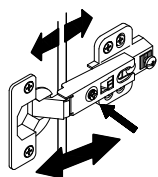

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

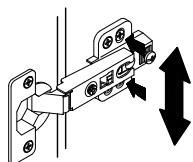

 
To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

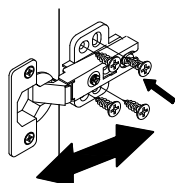

To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

ASSEMBLY INSTRUCTIONS

 STEP 17

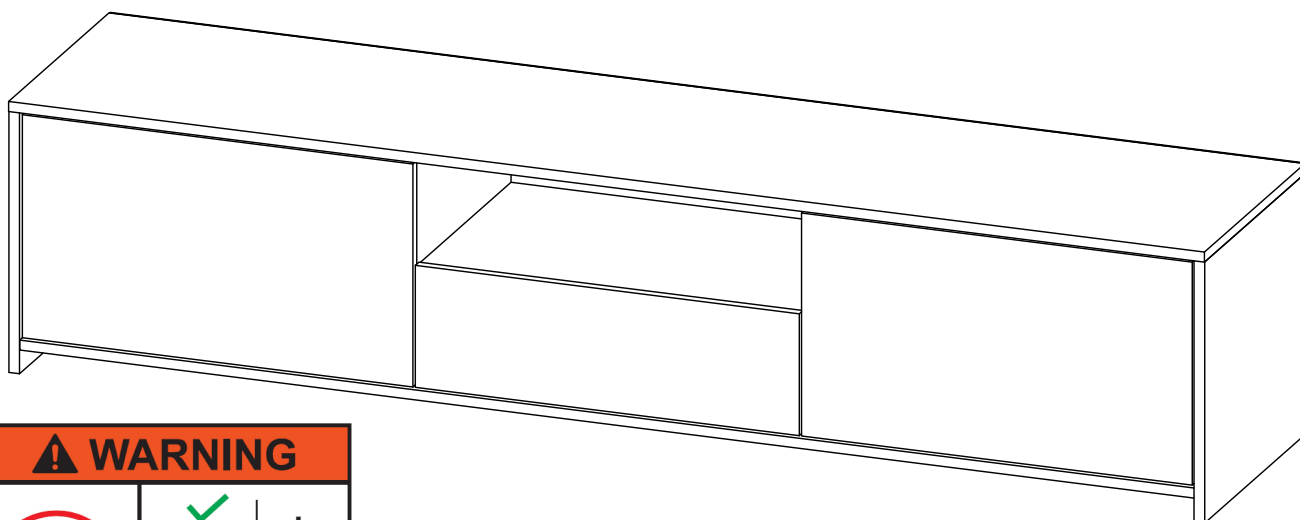

⚠ WARNING



Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

Please note: the maximum recommended weight is 15kg for the top, 7kg per shelf, open shelf and drawers.

Your product is ready for use.