 


TV UNIT 2 DOORS

ASSEMBLY INSTRUCTIONS

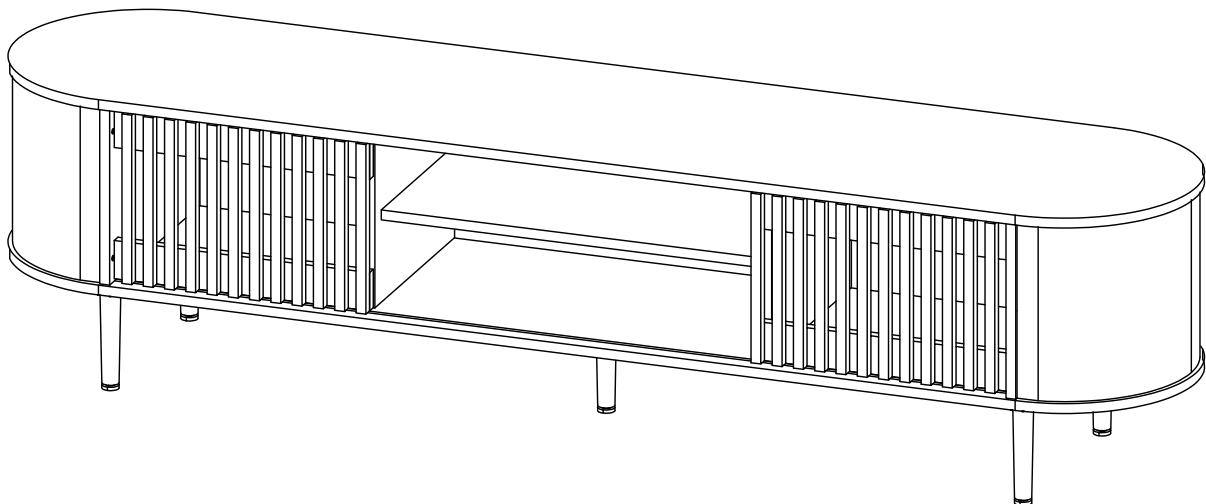

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ☑ To clean glass, please use glass cleaner.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- ☑ Equipment: phillips head screwdriver, flat head screwdriver, hammer
- ☑ 2 x adults required
- ☑ 2m x 2m assembly space required
- ☑ 1 hour assembly time approx.

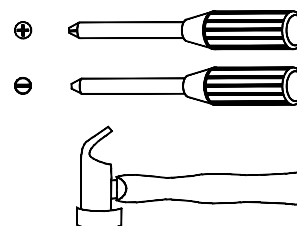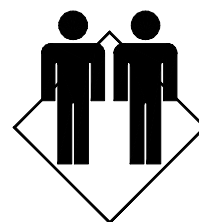

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FORM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

 
For more infirmation, visit <https://www.productsafety.gov.au>



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

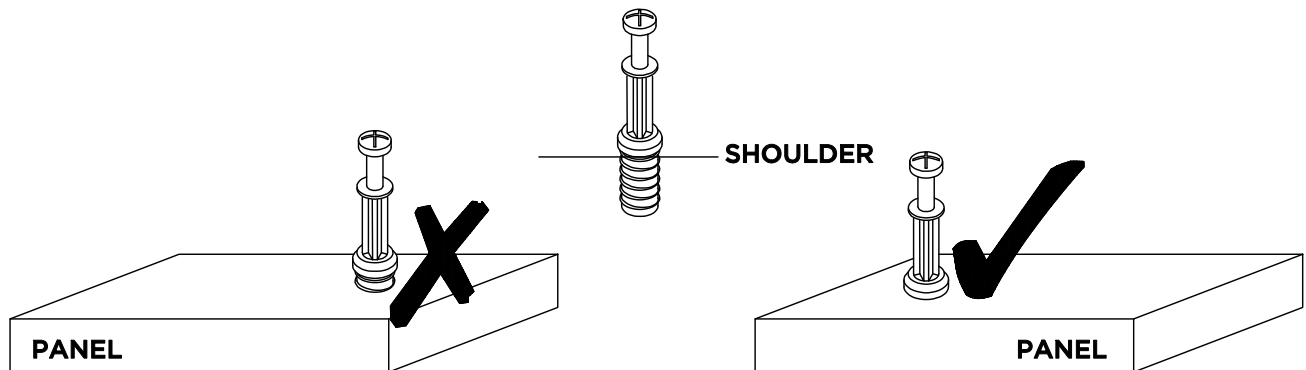



CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

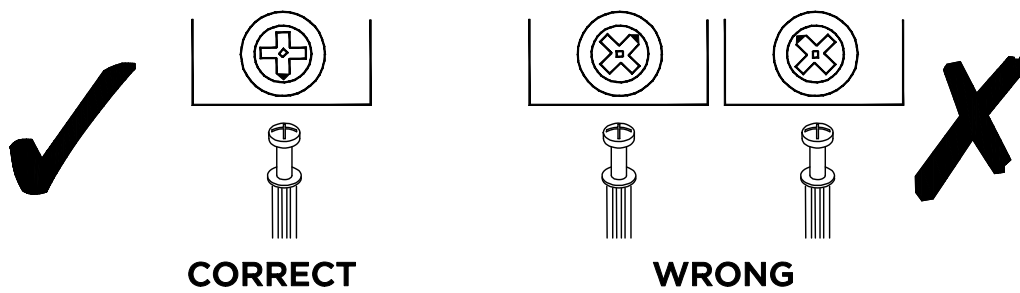

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

  
Turn cam lock clockwise to tighten.

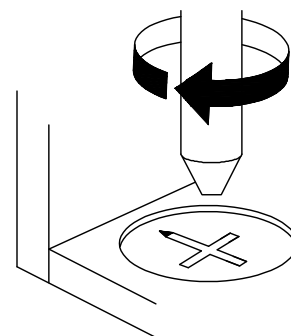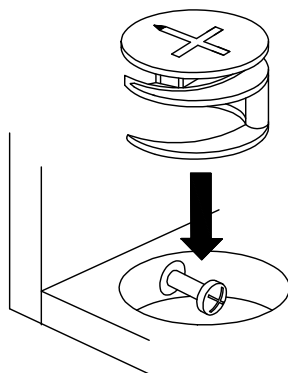

HARDWARE LIST



 
8 x A
Cam Lock




8 x B
Quickfit Screw



 
8 x C
Cam Lock Cover



20 x D
Wooden Dowel

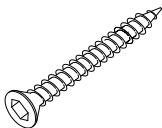 

8 x E
Screw

 

1 x F
Allen Key



20 x G
Screw



 
16 x H
Screw




8 x I
Screw



32 x J
Screw




4 x K
Metal Shelf
Support

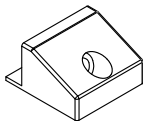 

12 x L
Wedge



 
12 x M
Screw



4 x N
Roller



 4 x O
Roller




5 x P
Leg



8 x Q
Sticker
Round

 PARTS LIST

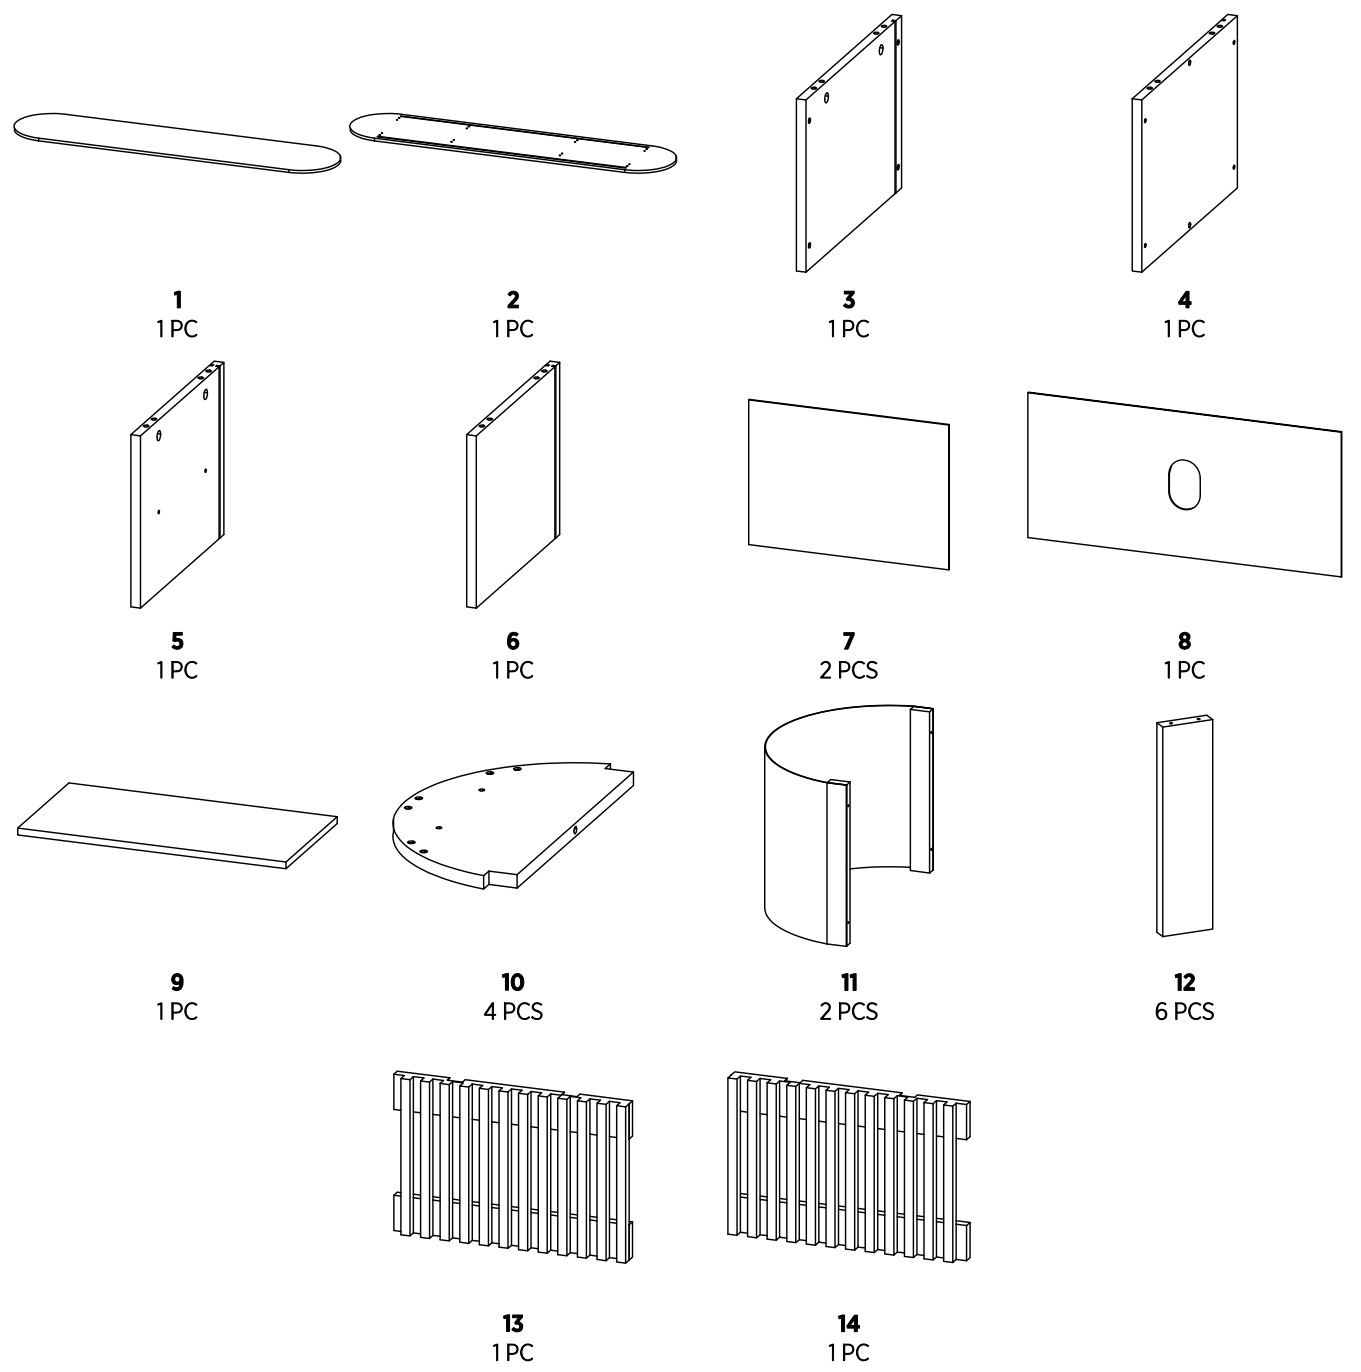

ASSEMBLY INSTRUCTIONS

STEP 1

 
Insert cam locks (A) to parts 3, 4, 5 and 6.

Insert quickfit screws (B) to parts 1.

Insert wooden dowels (D) to parts 3, 4, 5, 6 and 10, as shown.









A x 8



B x 8



      D x 20

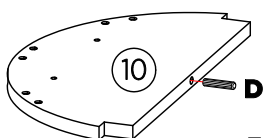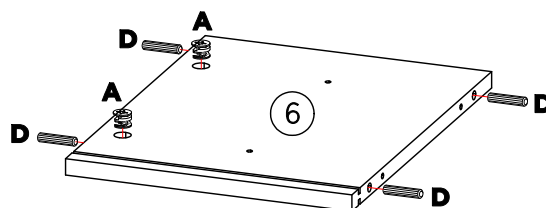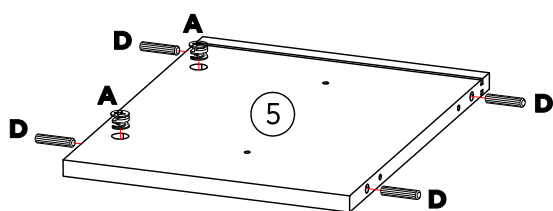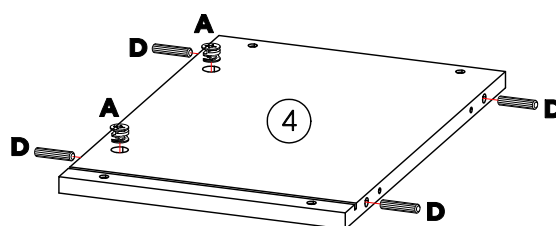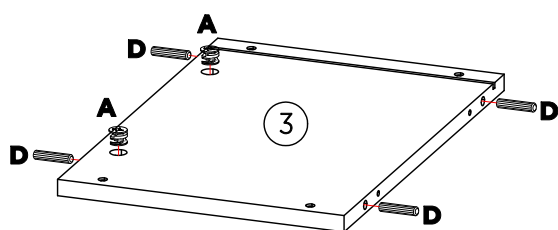
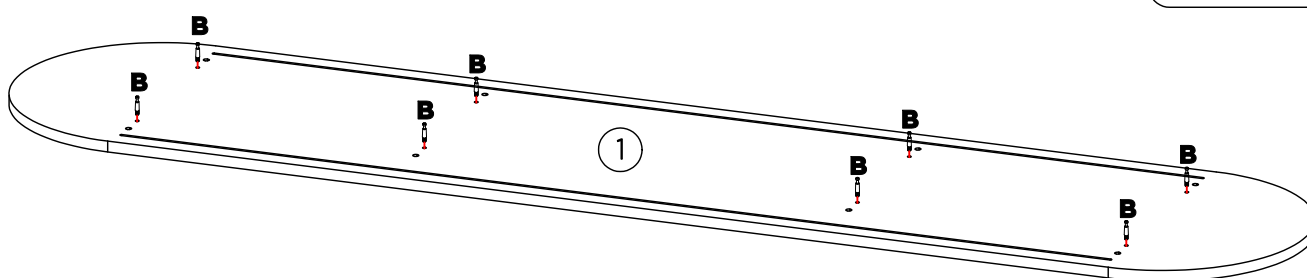


x4

ASSEMBLY INSTRUCTIONS

STEP 2

  Fix parts 10 to part 12 using screws (J), as shown.

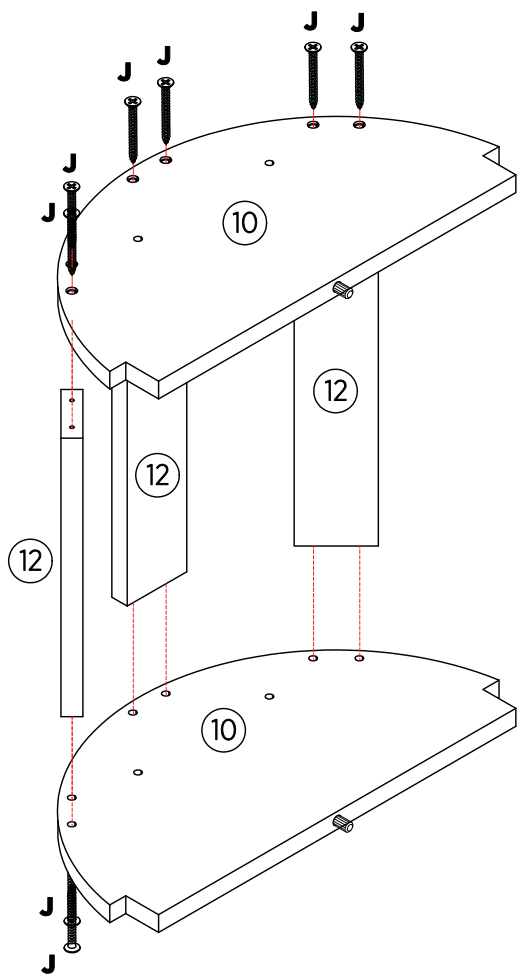



x2

ASSEMBLY INSTRUCTIONS

STEP 3

  Attach parts 3 and 4 to part 10, as shown.

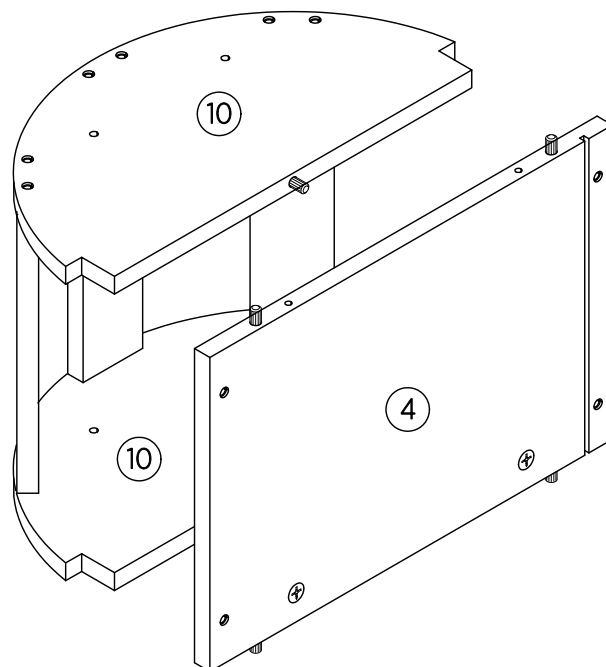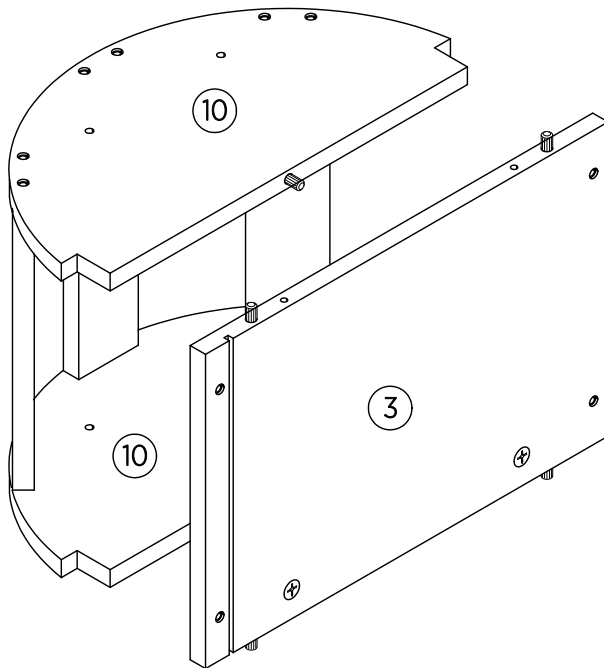



ASSEMBLY INSTRUCTIONS

STEP 4

Attach part 3, 4, 5 and 6 to parts 1.

Turn cam locks clockwise to tighten.

  
Attach cam lock covers (C), as shown.

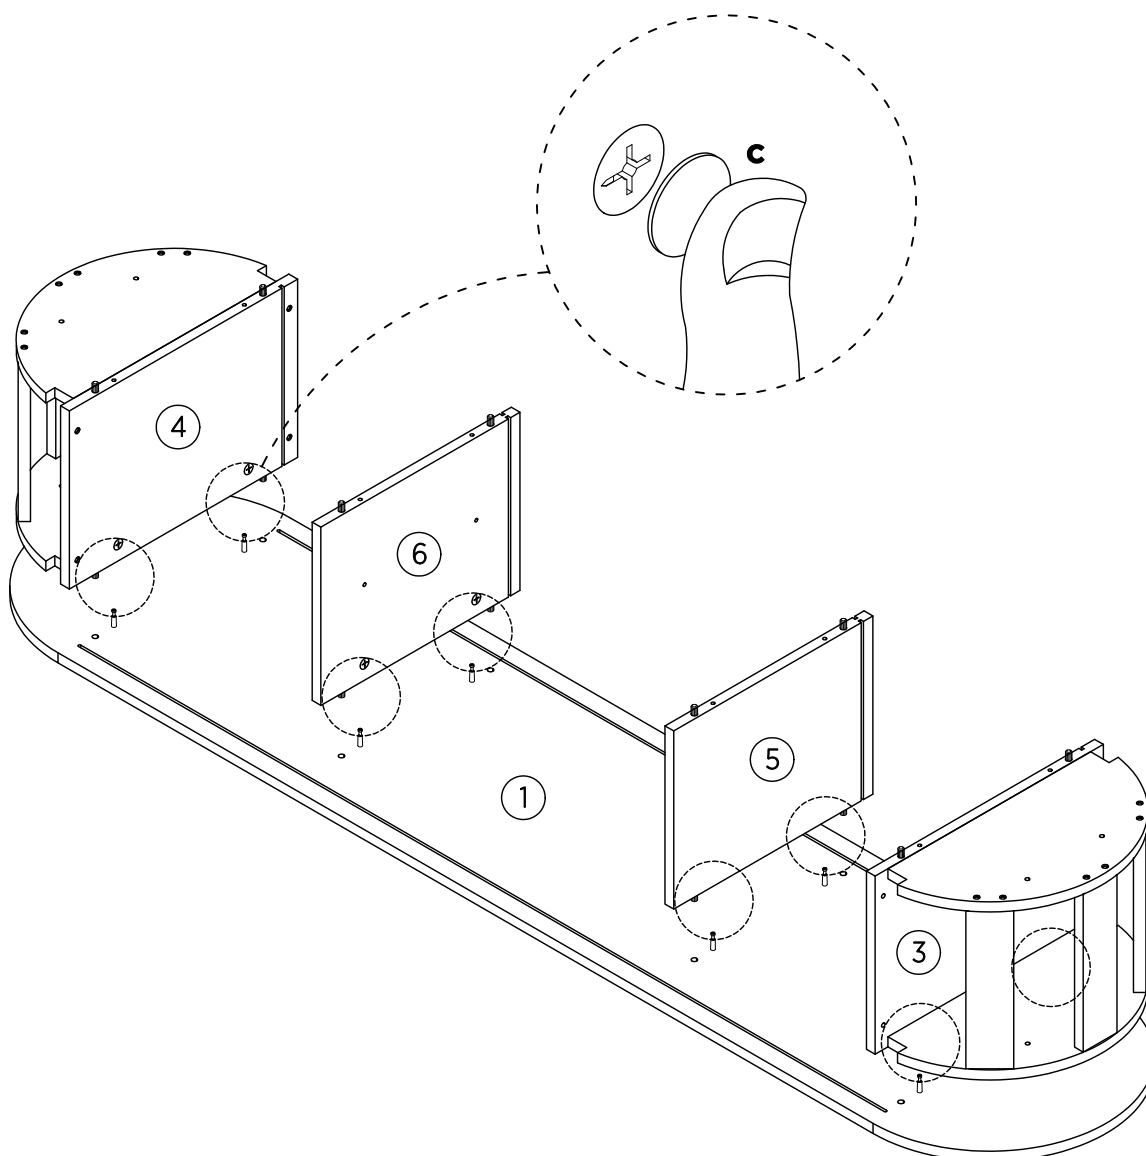

ASSEMBLY INSTRUCTIONS

STEP 5


 
Insert part 7 and 8 along the slot, as shown.

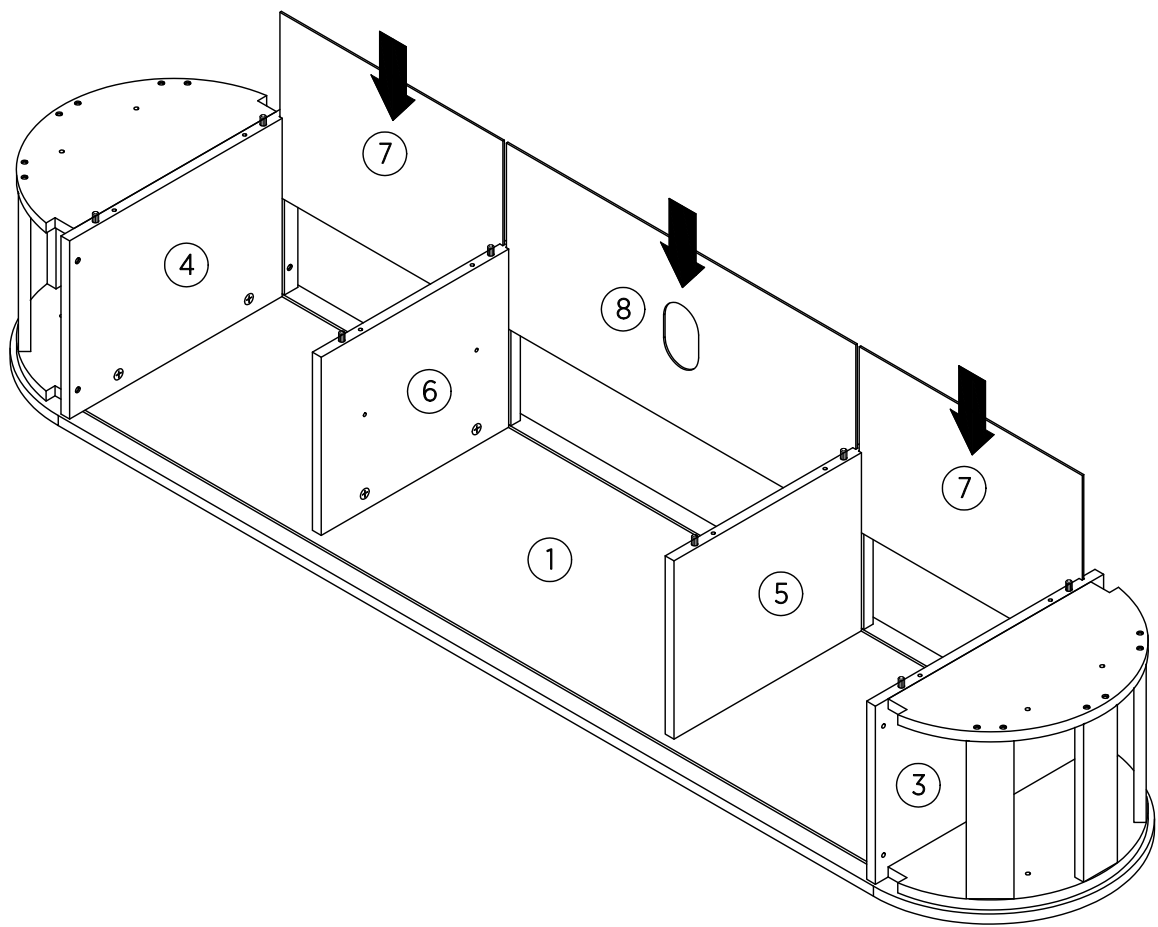

ASSEMBLY INSTRUCTIONS

STEP 6

 
 
Fix part 2 to parts 3, 4, 5 and 6 using screws (E) and allen key (F), as shown.

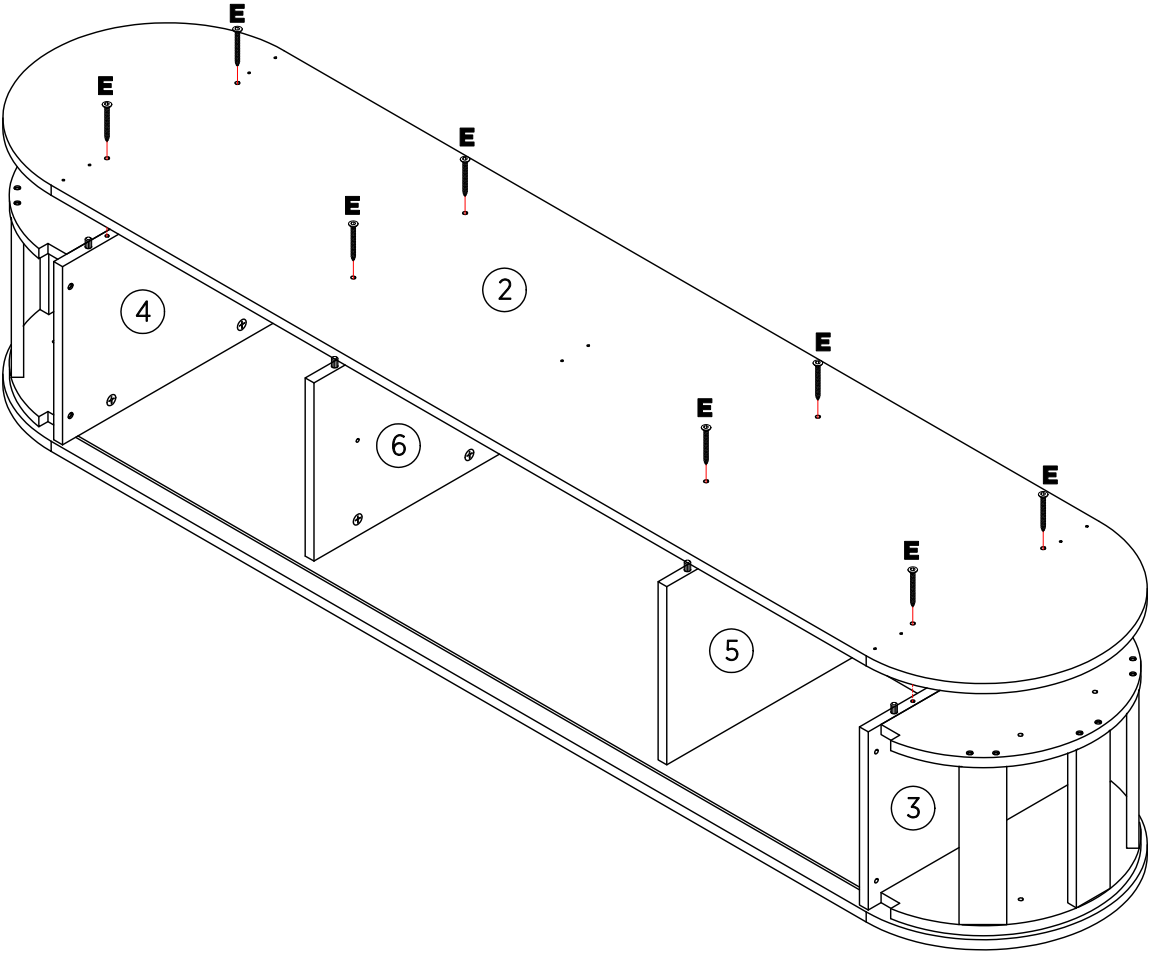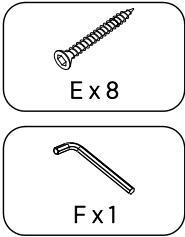

ASSEMBLY INSTRUCTIONS

STEP 7

  Fix parts 10 to part 1 and 2 using screws (I), as shown.


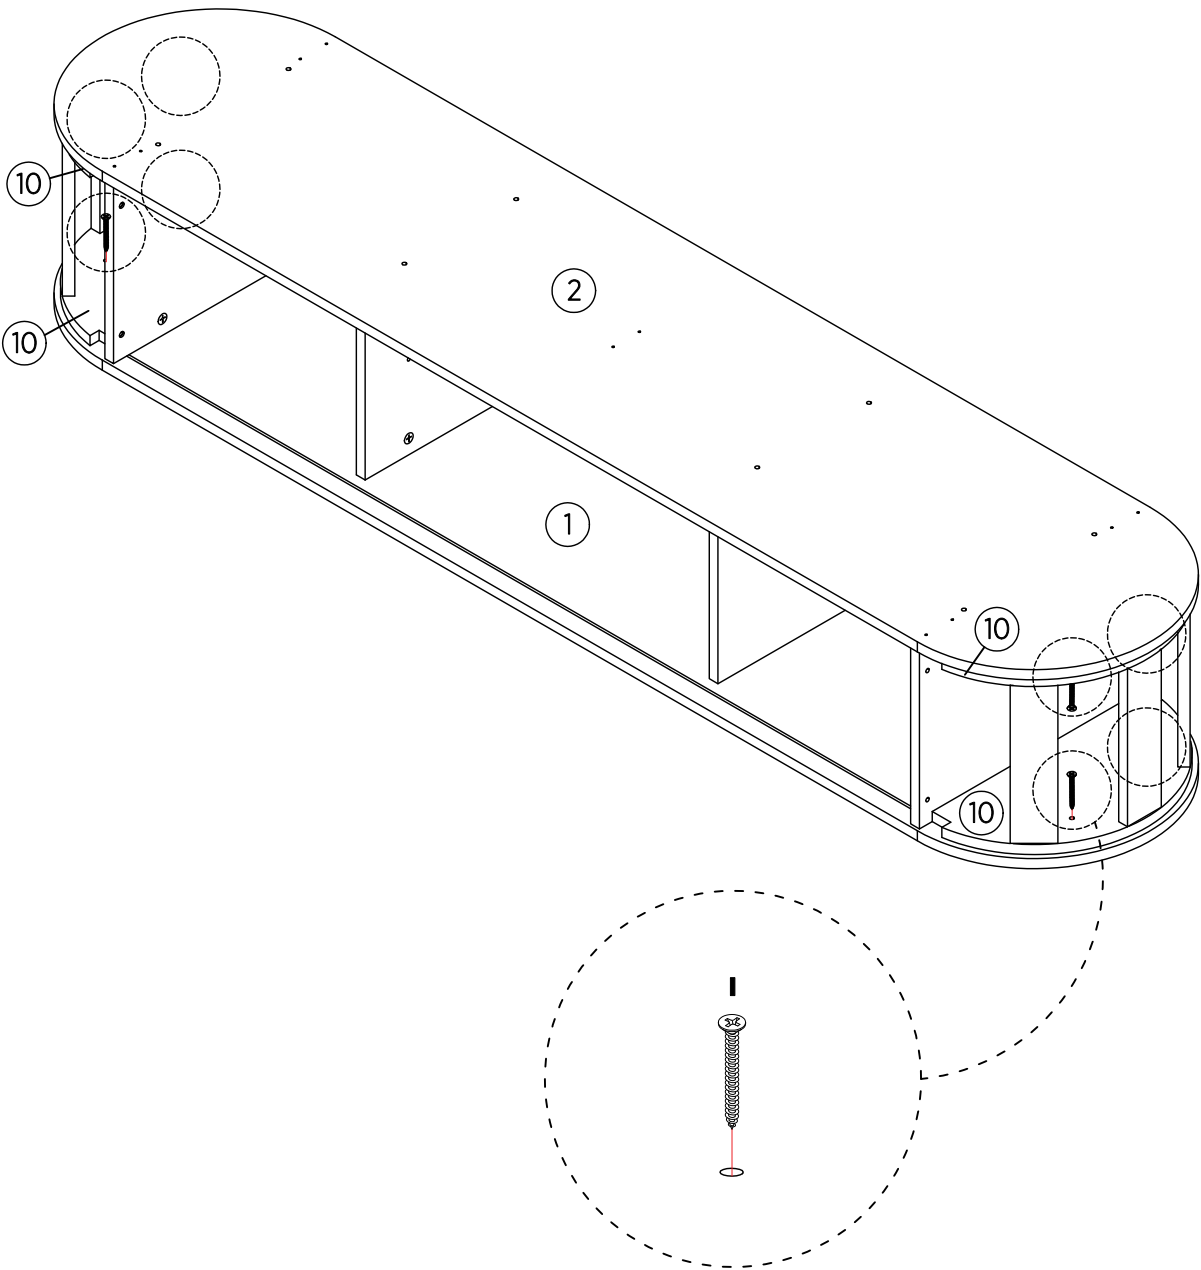



ASSEMBLY INSTRUCTIONS

STEP 8

Fix parts 3 and 4 to part 11 using screws (J).

   Attach sticker round (Q), as shown.

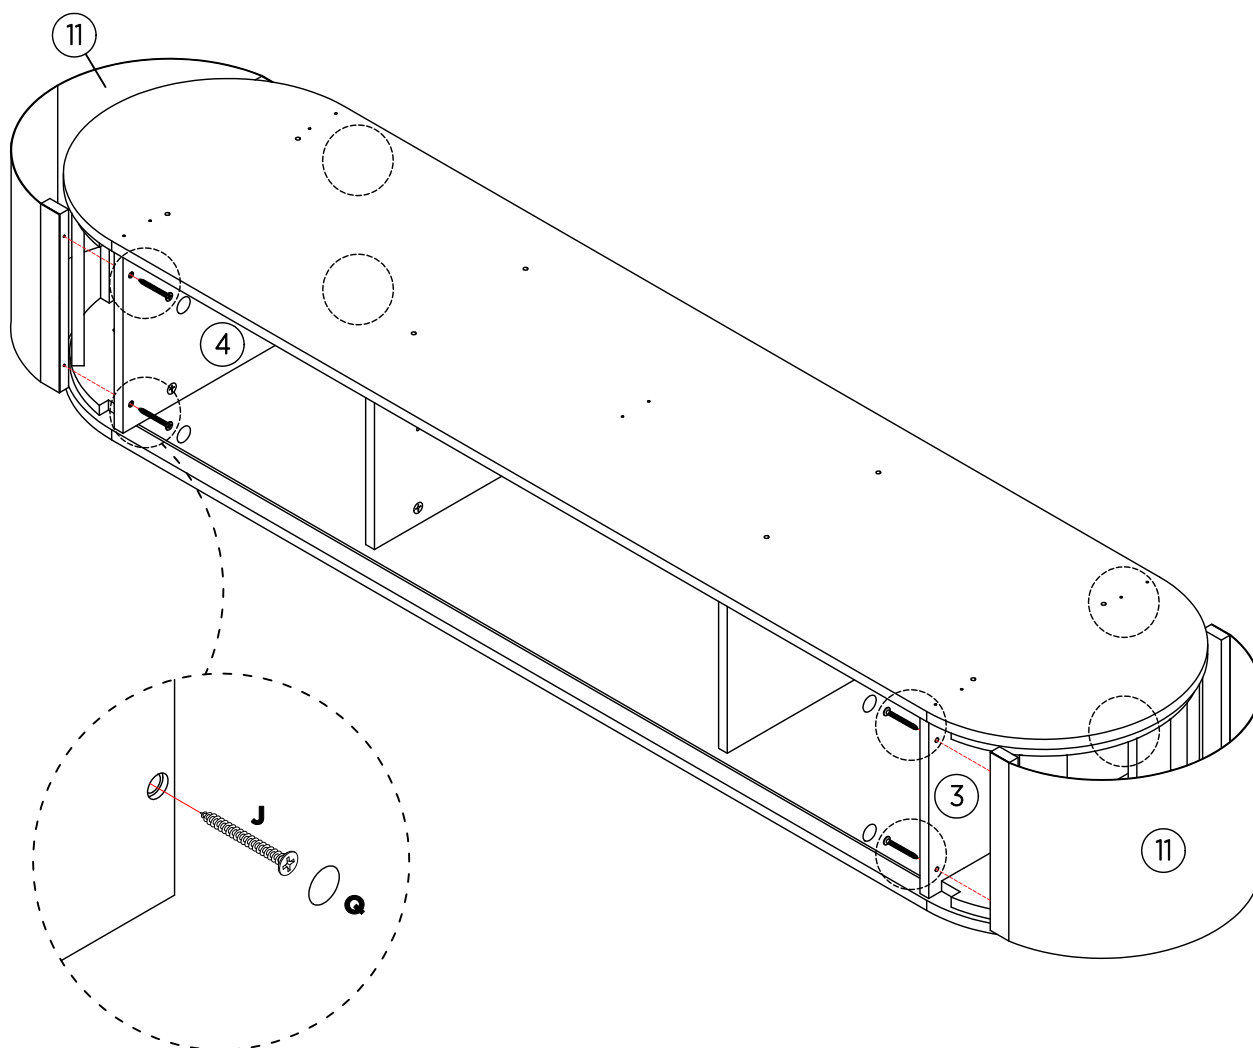

ASSEMBLY INSTRUCTIONS

STEP 9

Fix leg (P) to part 2 using screws (G), as shown.

 
Please note: leg (P) has plastic adjuster at the bottom to unscrew and adjust the height of leg (P) if necessary.



G x 20





P x 5

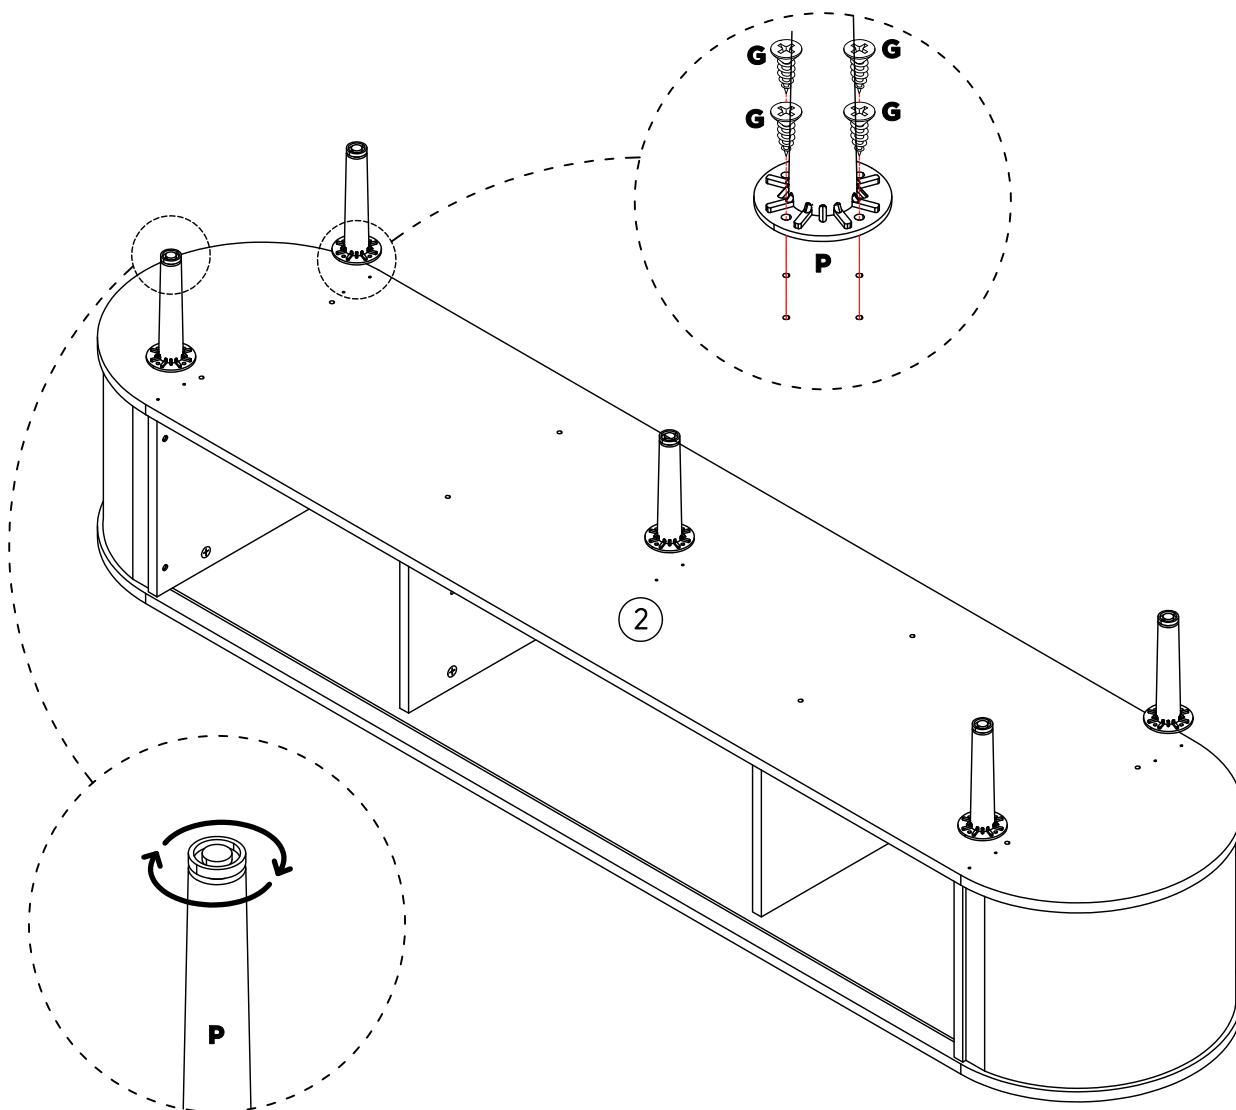

ASSEMBLY INSTRUCTIONS

STEP 10

  Secure part 7 and 8 by fixing wedges (L) using screw (M), as shown.

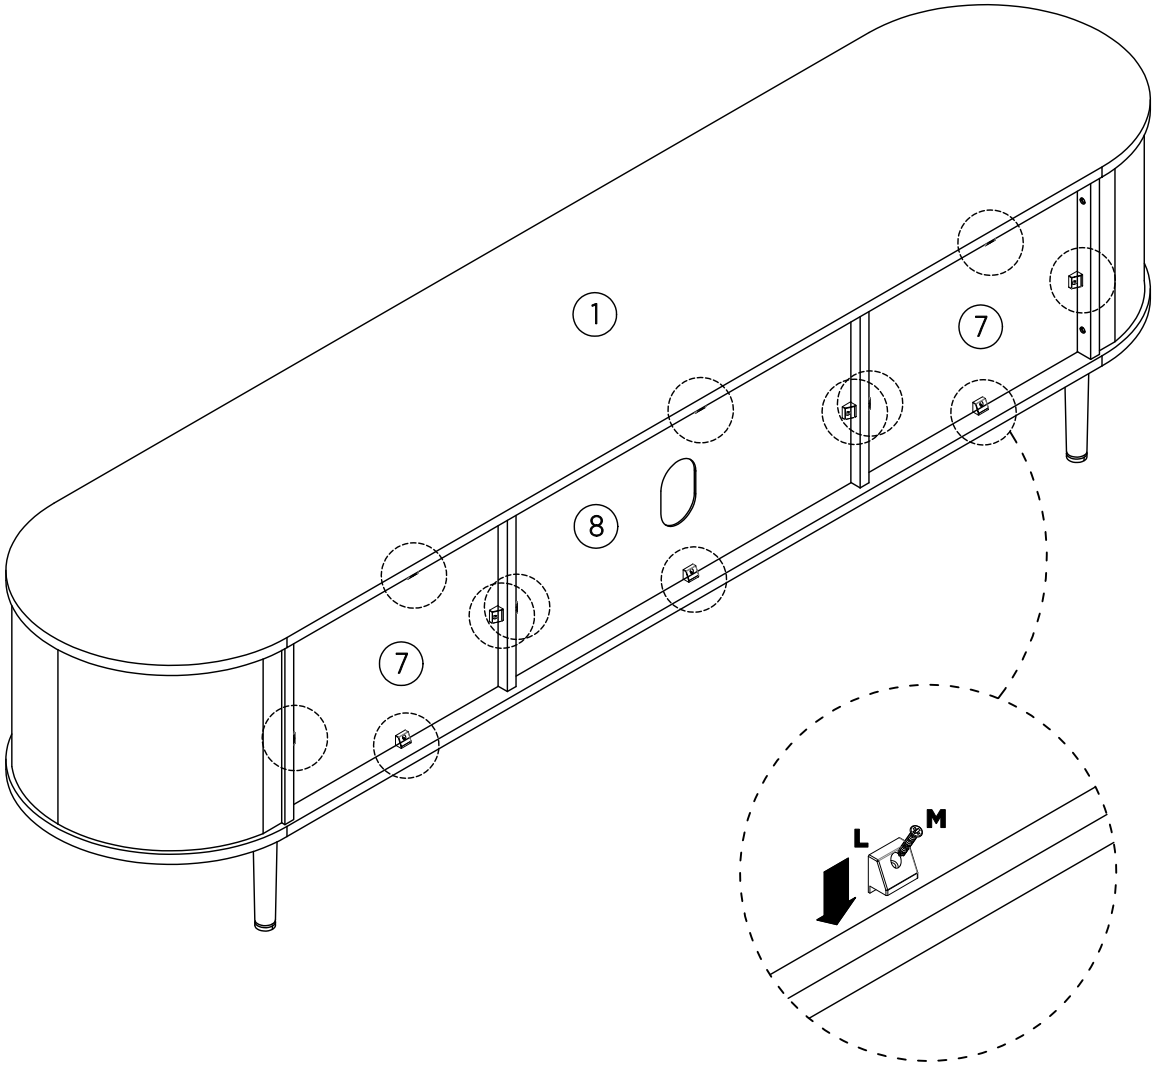


ASSEMBLY INSTRUCTIONS

STEP 11

Insert shelf pins (K) to parts 5 and 6, as shown.



 
K x 4

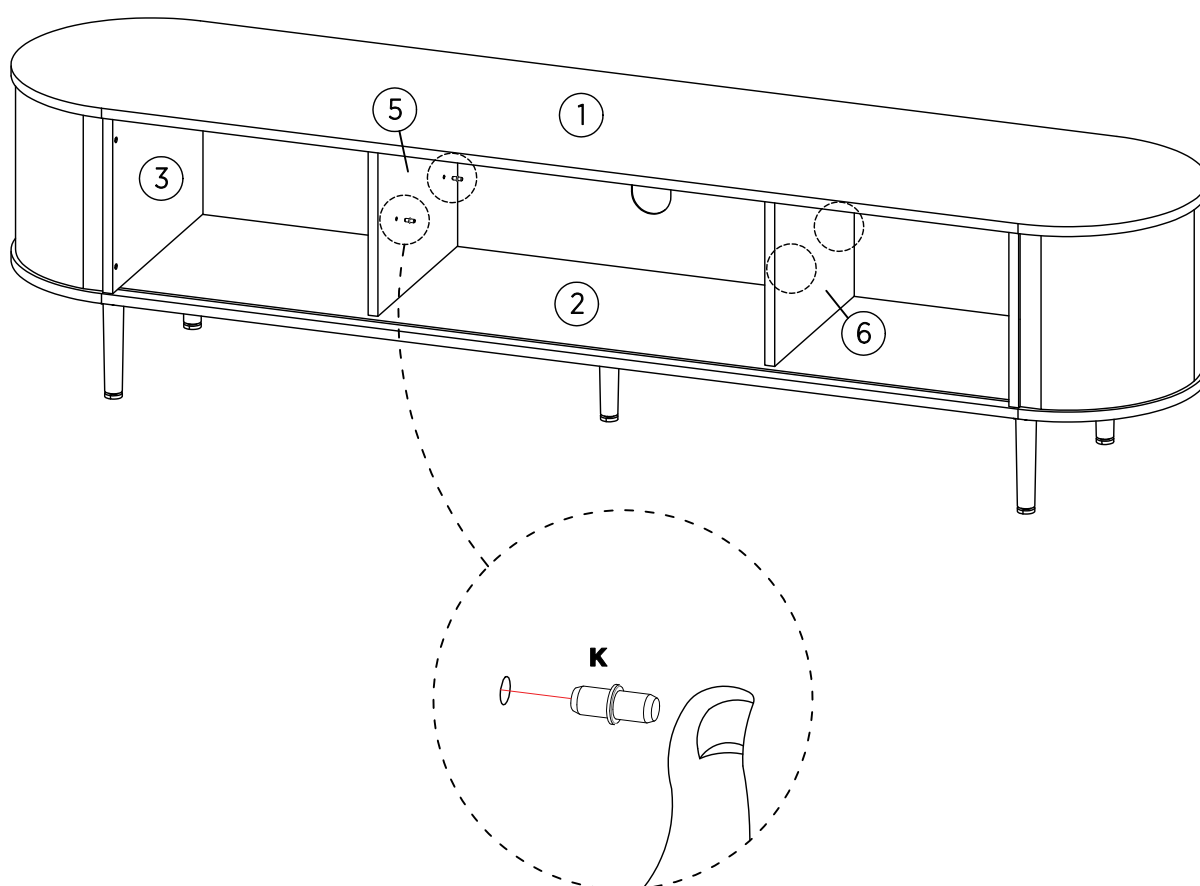

ASSEMBLY INSTRUCTIONS

STEP 12

 Insert shelves 9 to assembled unit, as shown.

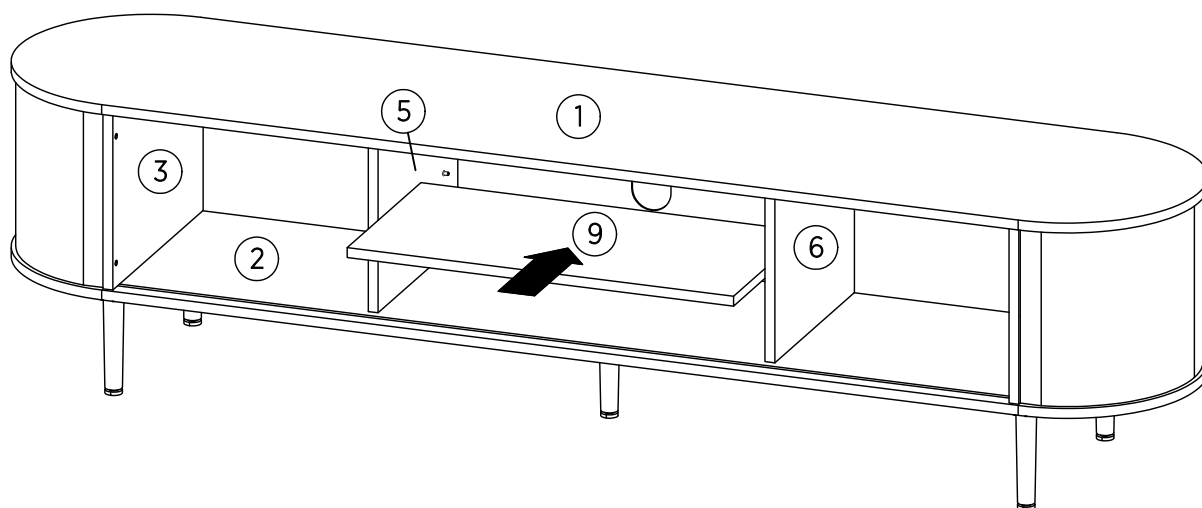

ASSEMBLY INSTRUCTIONS

STEP 13

Fix rollers (N) and (O) to part 13 and 14 using screws (H), as shown.



 
H x 16



N x 4




O x 4

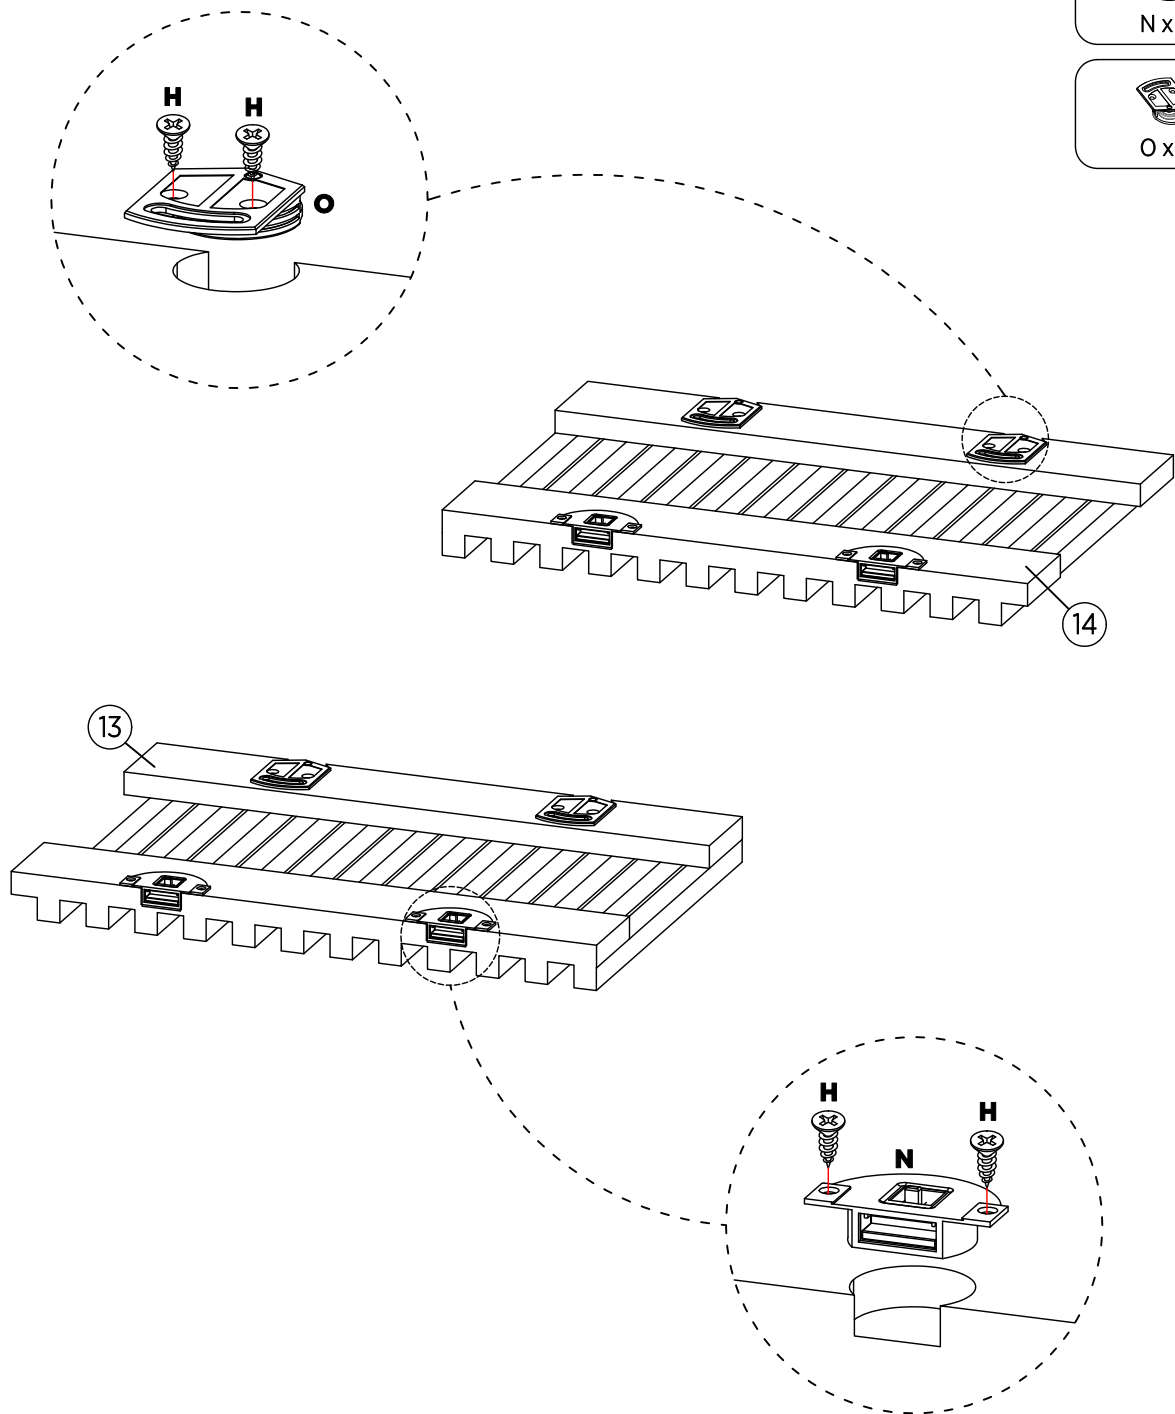

ASSEMBLY INSTRUCTIONS


STEP 14

 Insert part 13 and 14 to assembled tv unit, as shown.

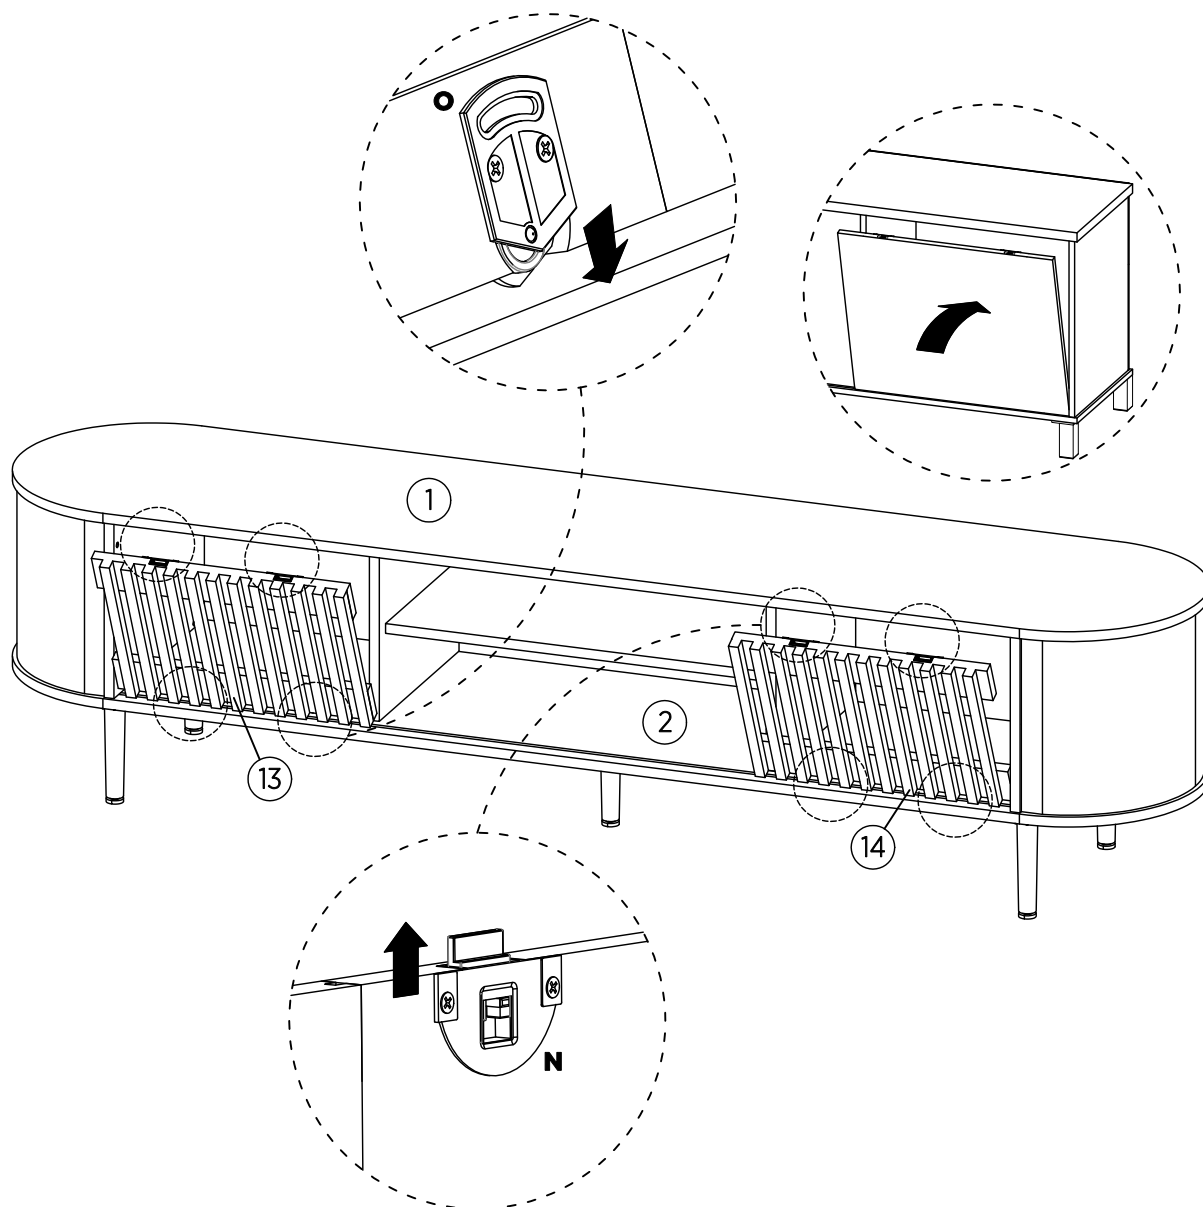

ASSEMBLY INSTRUCTIONS

 STEP 15

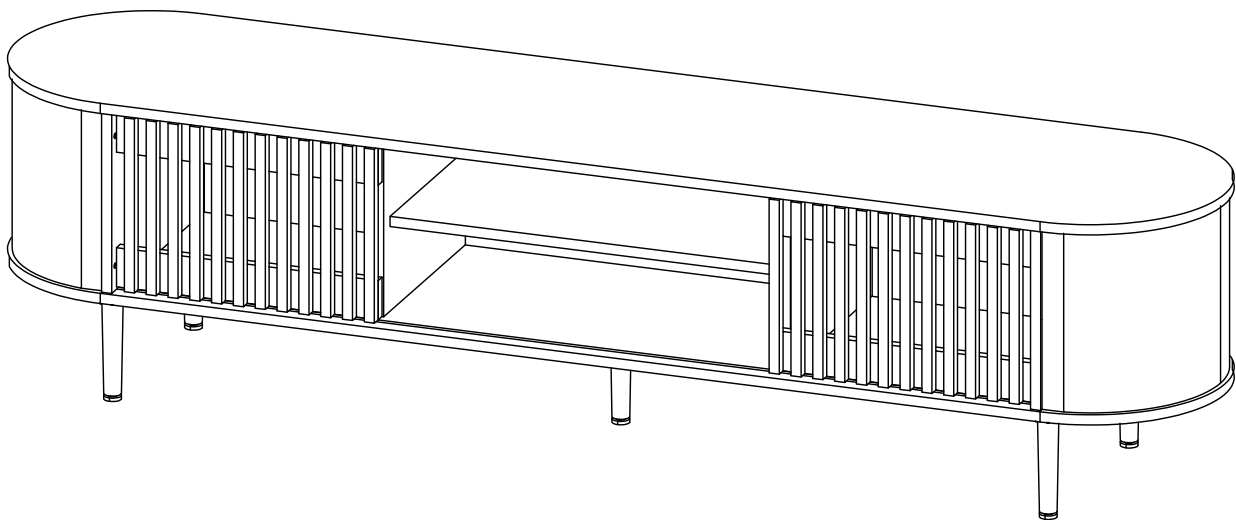

⚠ WARNING



Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device or mount the television on a wall.

Maximum recommended weight is 30 kg on top and 8 kg on shelves.

Your product is ready for use.