 


# MOBILE PEDESTAL 2 DRAWERS

## ASSEMBLY INSTRUCTIONS

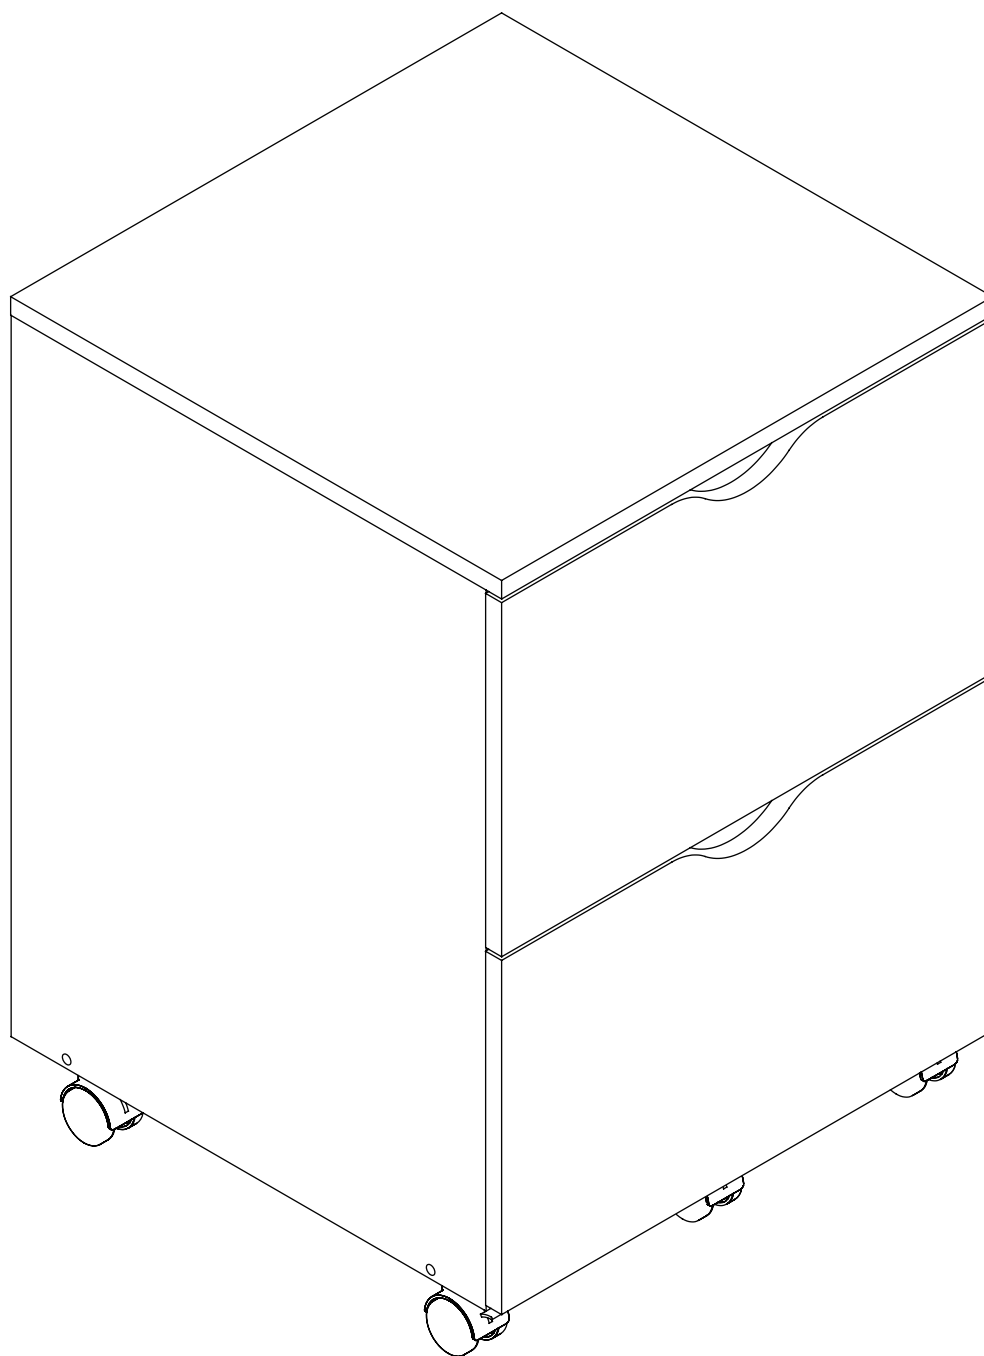

# TIPS BEFORE YOU START

---

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

## CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

## ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 1 x adult required
- ✓ 1m x 1m assembly space required
- ✓ 1 hour assembly time approx.



# ANTI-TOPPLING WARNING

## CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

**For more information, visit <https://www.productsafety.gov.au>**

 **WARNING**



**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

 
**NEVER put a TV on this furniture**



# USING CAM LOCK AND QUICKFIT


## QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

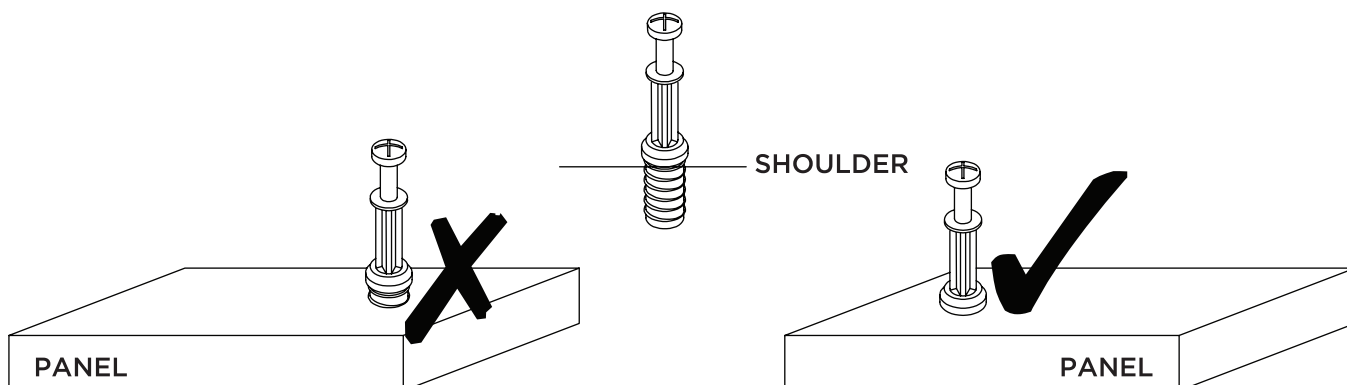


## CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

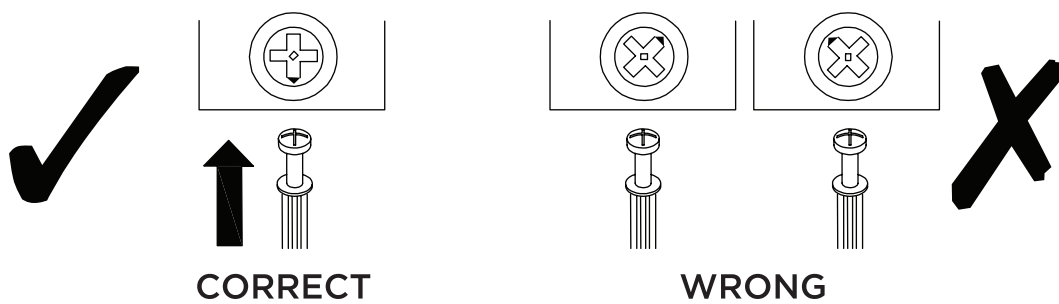

 Quickfit head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

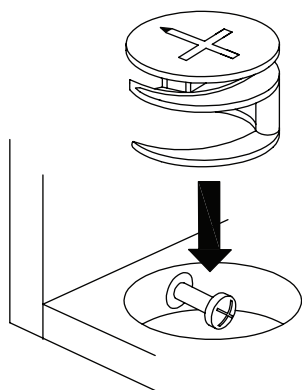

Turn cam lock clockwise to tighten.

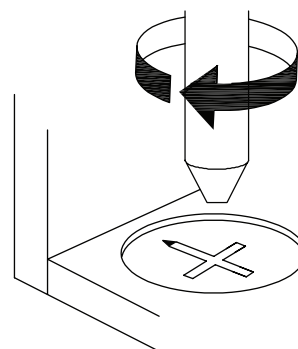 

# DRAWER SLIDE GUIDE

---

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

**Inner Drawer Runner (I2)**



The Drawer Slide components shown above are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

**Outer Drawer Runner (I1)**

 
 


Use these holes


The Drawer Slide components shown above are attached to the **Mobile Pedastal 2 Drawers**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for step 1 and 8.

# PRE-FIX DRAWER RUNNER INSTRUCTIONS

NOTE: Pull inner and outer drawer runners apart before fixing them to panels.

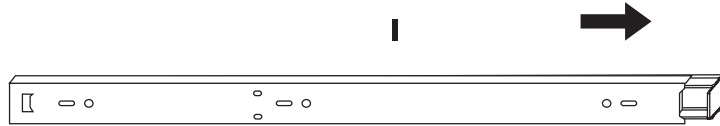


 Slide drawer runners apart until the drawer lock can be seen, as shown.


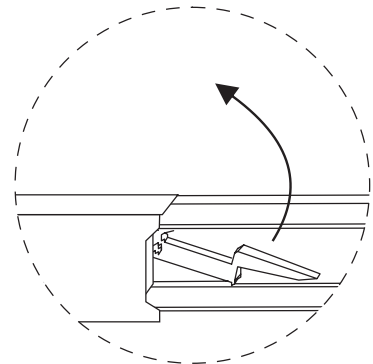


**I1 (outer runner)**

 **I2 (inner runner)**

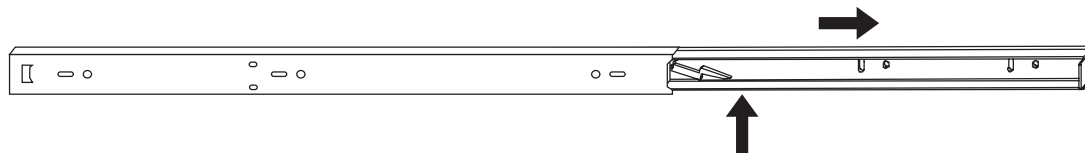

  
Press and hold the drawer runner lock upwards and then continue to slide drawer runners apart, as shown.

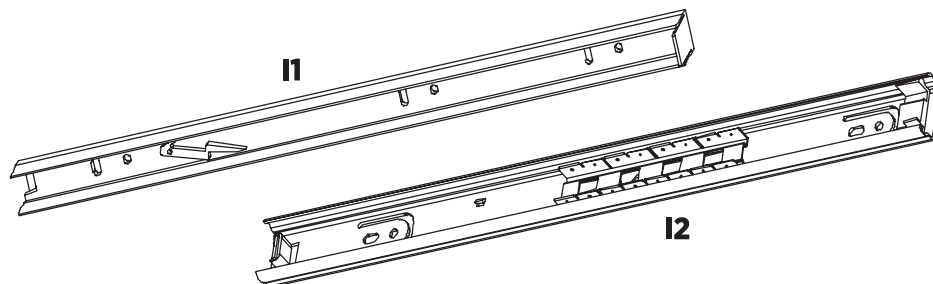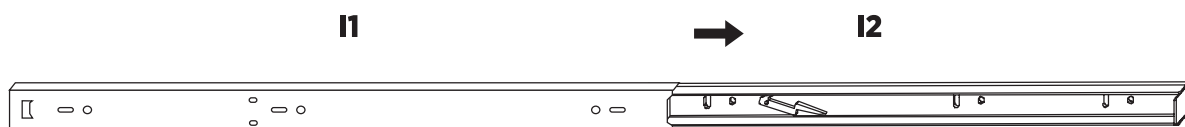

Your inner and outer drawer runners are ready to be fixed to panels.

# HARDWARE LIST

 
---




14 x A  
Quickfit Screw



 14 x B  
Cam Lock



18 x C  
Wooden Dowel

 


15 x D  
Screw




24 x E  
Screw



 
21 x F  
Screw



2 x G  
Castor Wheel  
with Lock

 

3 x H  
Castor Wheel

 

4 x I  
Drawer Runner



 
17 x J  
Nail



2 x K  
Washer



1 x L  
Wall Strap




1 x M  
Wall Plug




4 x N  
Sticker

# PARTS LIST

 
---

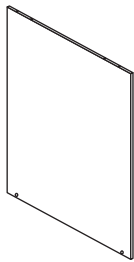


**1**  
1 PC

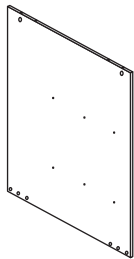 


**2**  
1 PC

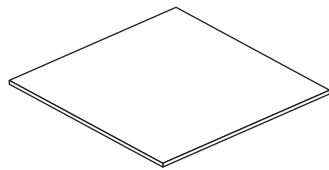 


**3**  
1 PC

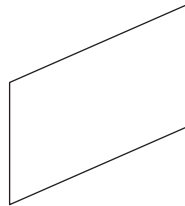 


**4**  
2 PCS

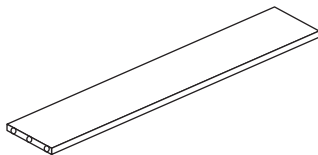 


**5**  
1 PC

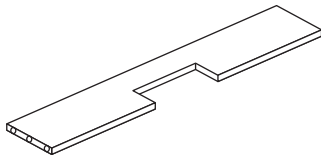 


**6**  
1 PC

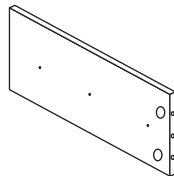 


**7**  
2 PCS

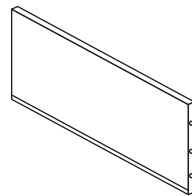 


**8**  
2 PCS

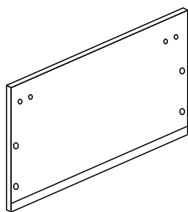 


**9**  
2 PCS

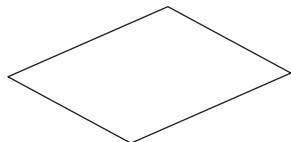 


**10**  
2 PCS

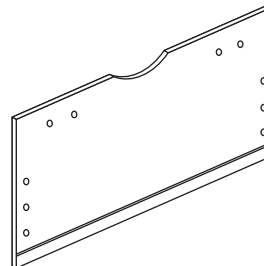 


**11**  
1 PC

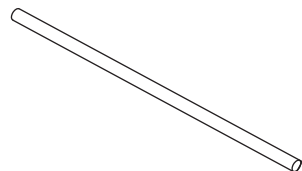 


**12**  
4 PCS

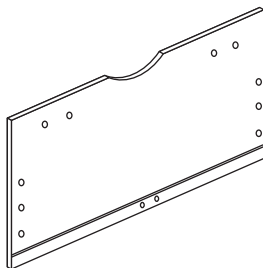 


**13**  
1 PC

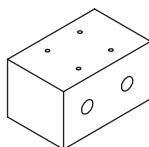 

**14**  
1 PC

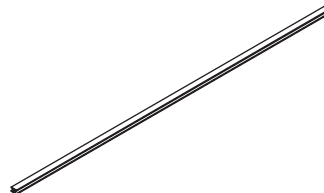 

**15**  
1 PC

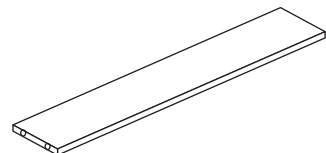 

**16**  
1 PC






# ASSEMBLY INSTRUCTIONS
   
## STEP 1

Fix inner drawer runners (I2) to parts 7 and 8 using screws (E), as shown.

### **WARNING**

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

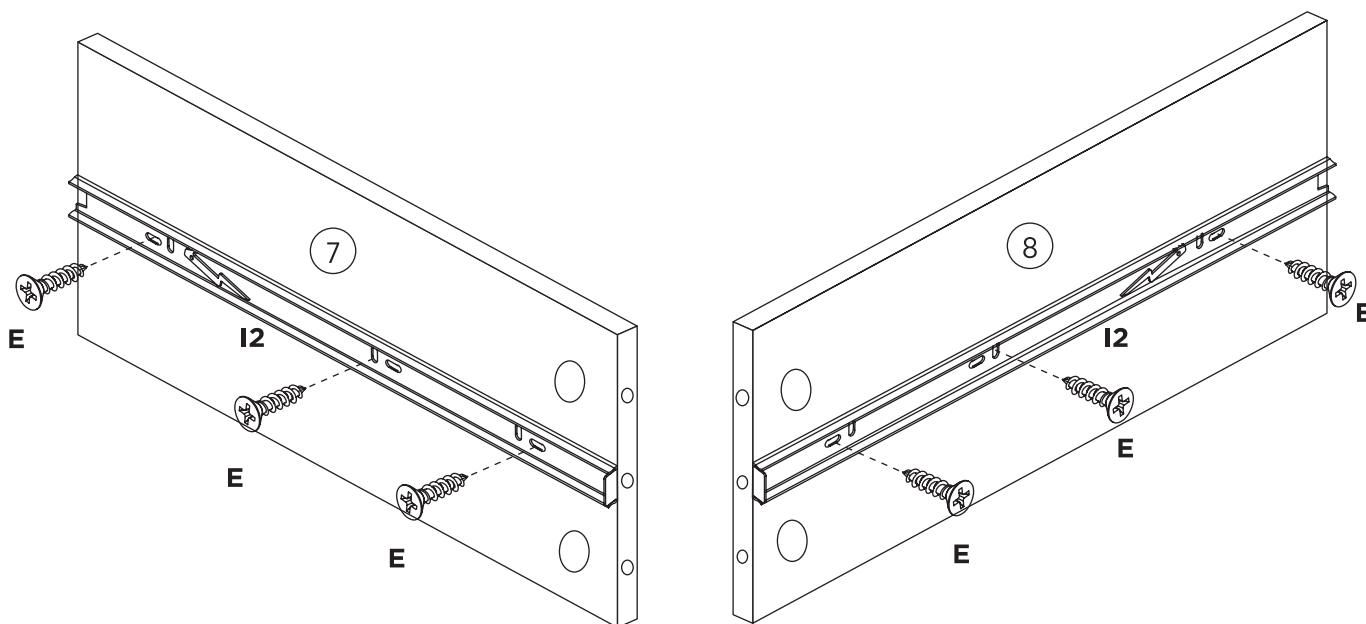



# x2

# ASSEMBLY INSTRUCTIONS

## STEP 2

  Fix parts 9 to parts 7 and 8 using screws (D), as shown.

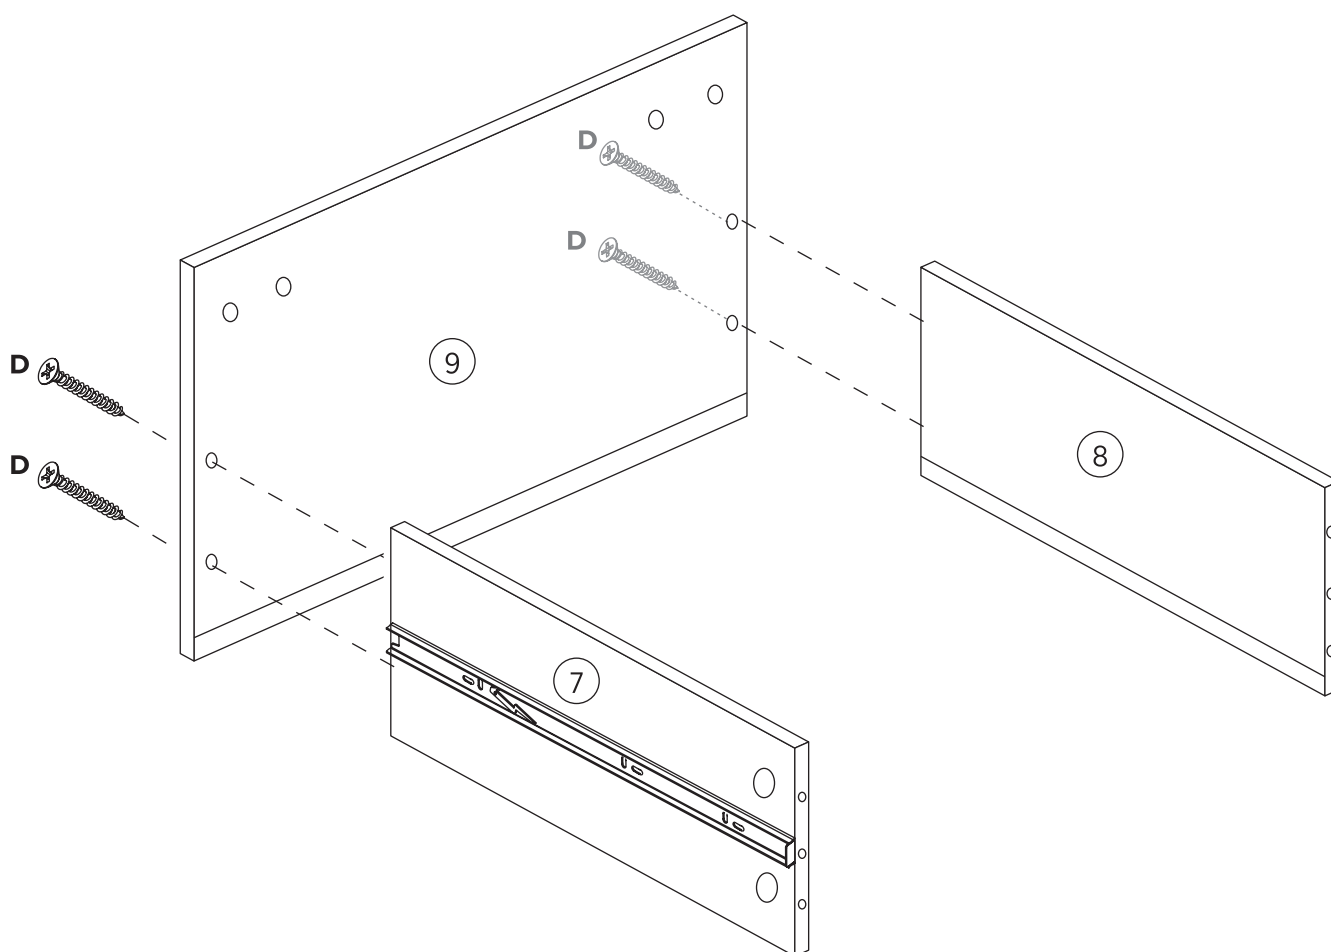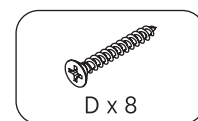

# x2

 
# ASSEMBLY INSTRUCTIONS

---

## STEP 3

Insert parts 10 into the grooves between parts 7 and 8.

Fix parts 12 to part 9, as shown.

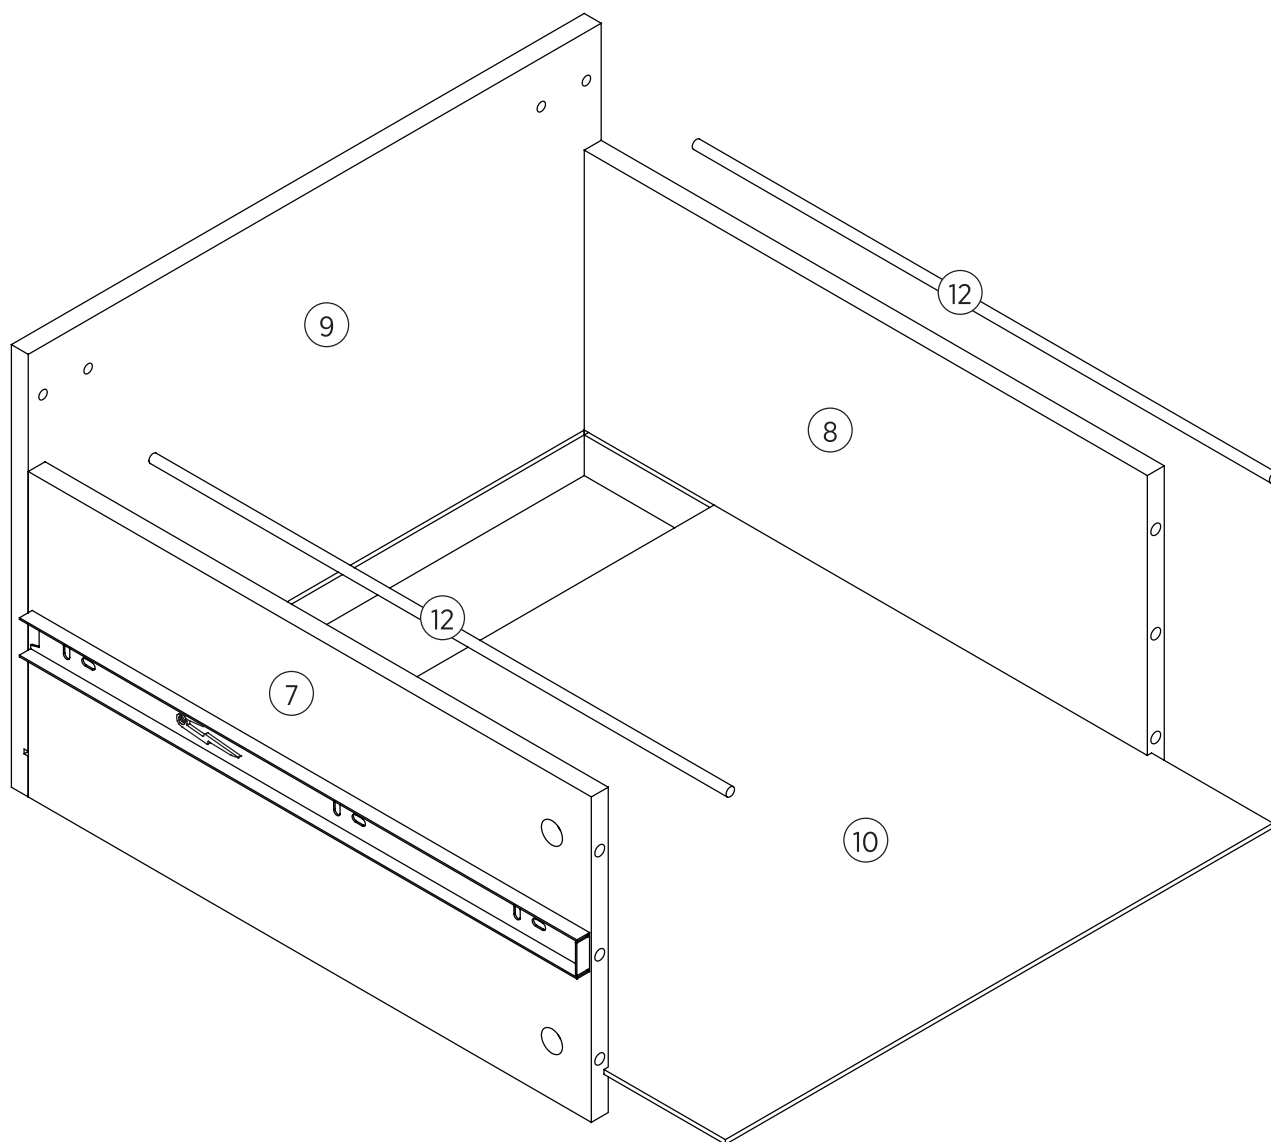

**x2**

# ASSEMBLY INSTRUCTIONS

 
## STEP 4

Insert quickfit screws (A) to part 11.

Insert cam locks (B) and wooden dowels (C) to parts 7 and 8.

Fix part 11 to parts 7, 8 and 12, as shown.


Turn cam locks (B) clockwise to tighten.




A x 4



 B x 4





C x 2

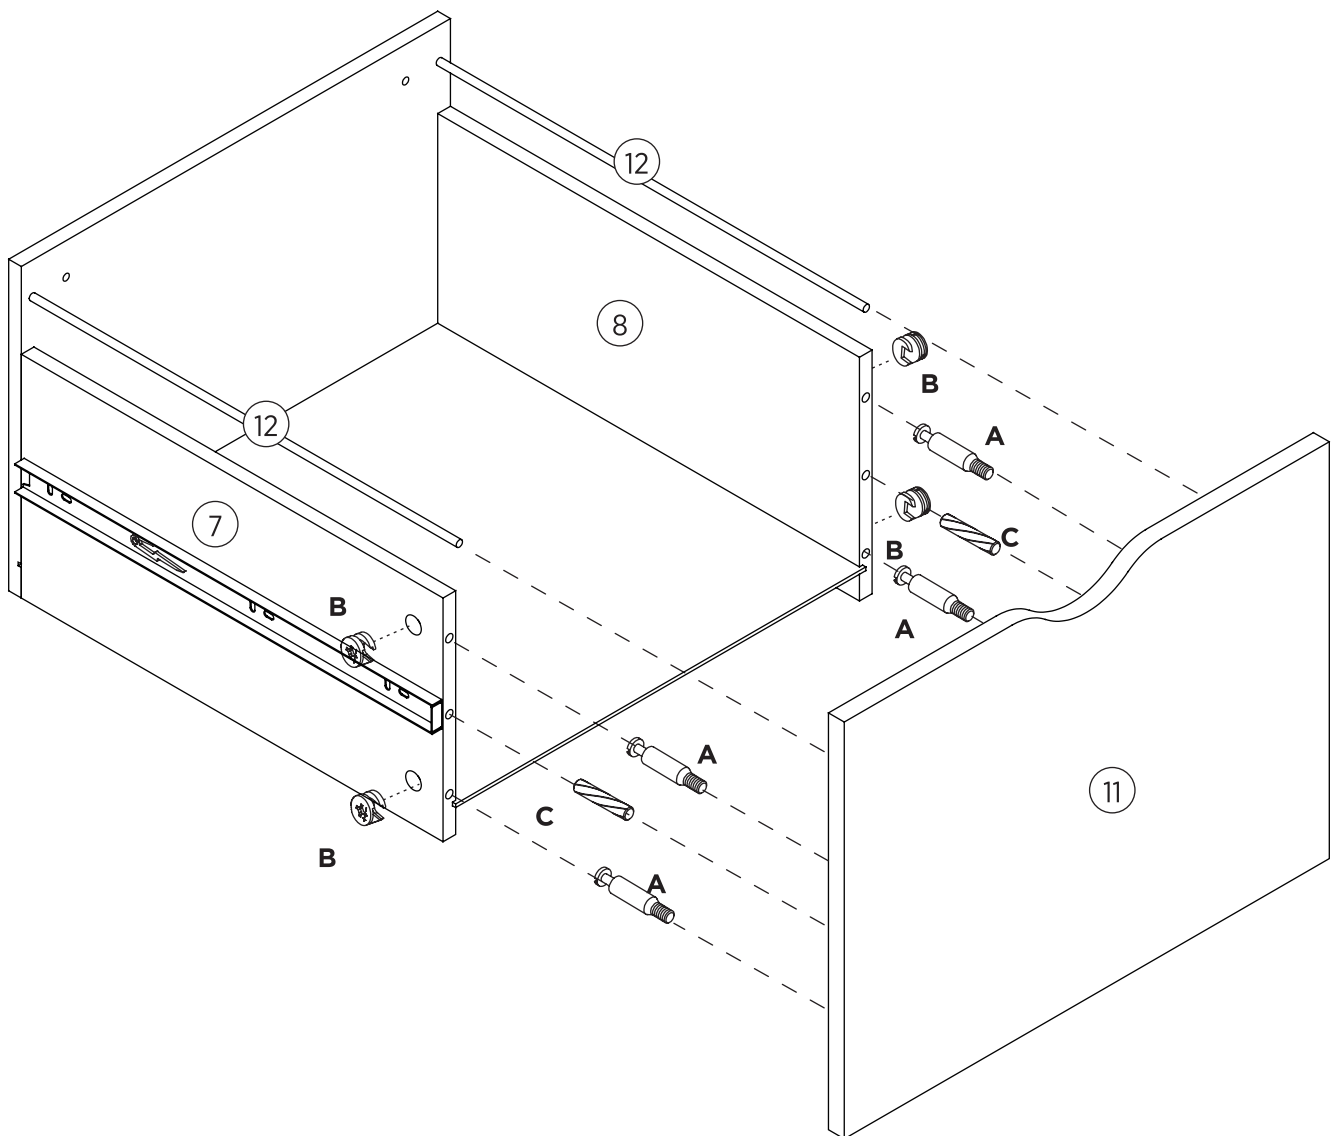 

# ASSEMBLY INSTRUCTIONS

## STEP 5

  Fix part 14 to part 13 using screws (D), as shown.

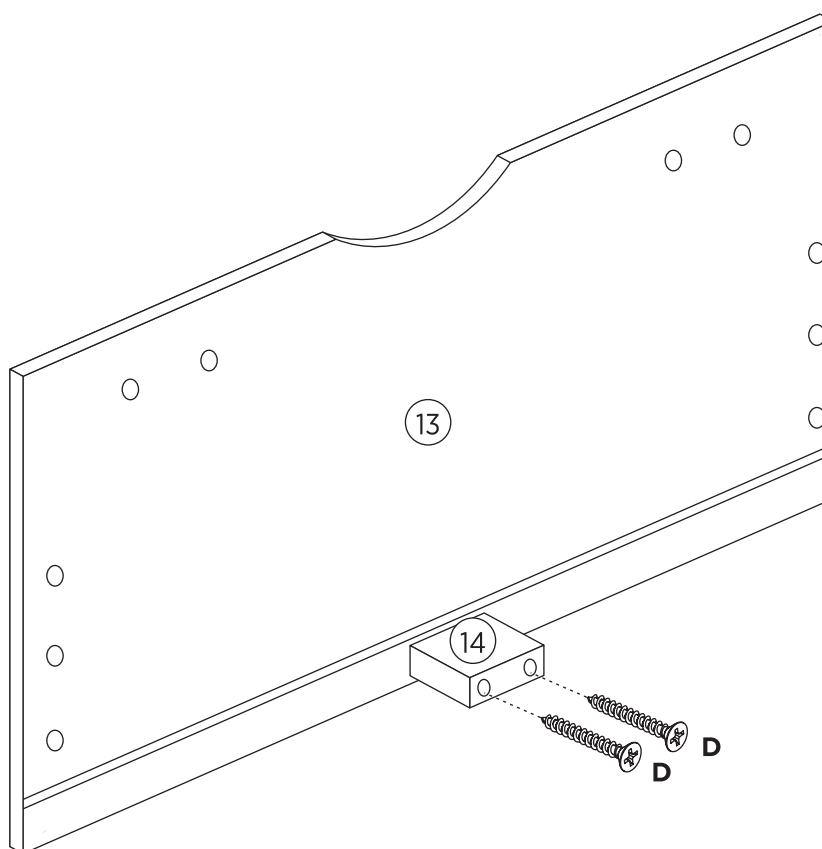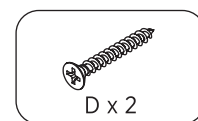

# ASSEMBLY INSTRUCTIONS

 
## STEP 6

Insert quickfit screws (A) to part 13.

Insert cam locks (B) and wooden dowels (C) to parts 7 and 8

Fix part 13 to parts 7, 8 and 12, as shown.


Turn cam locks (B) clockwise to tighten.




A x 4



 B x 4



C x 2

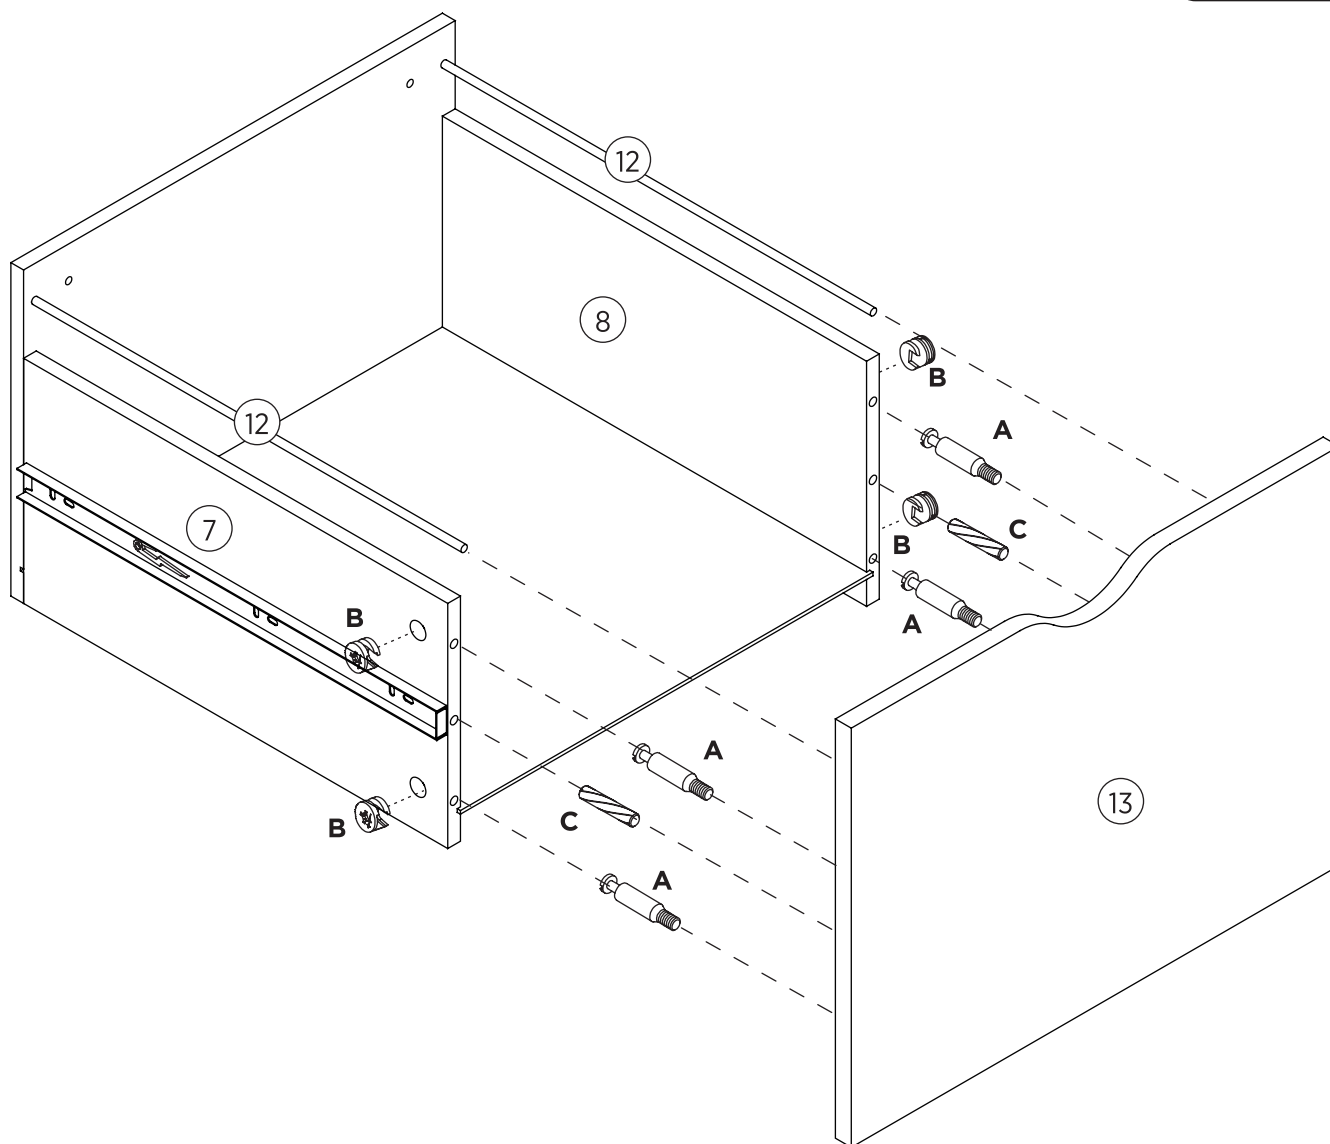 

# ASSEMBLY INSTRUCTIONS

## STEP 7

 
Attach castor wheel (H) to part 14 using screws (F), as shown.



F x 4



H x 1

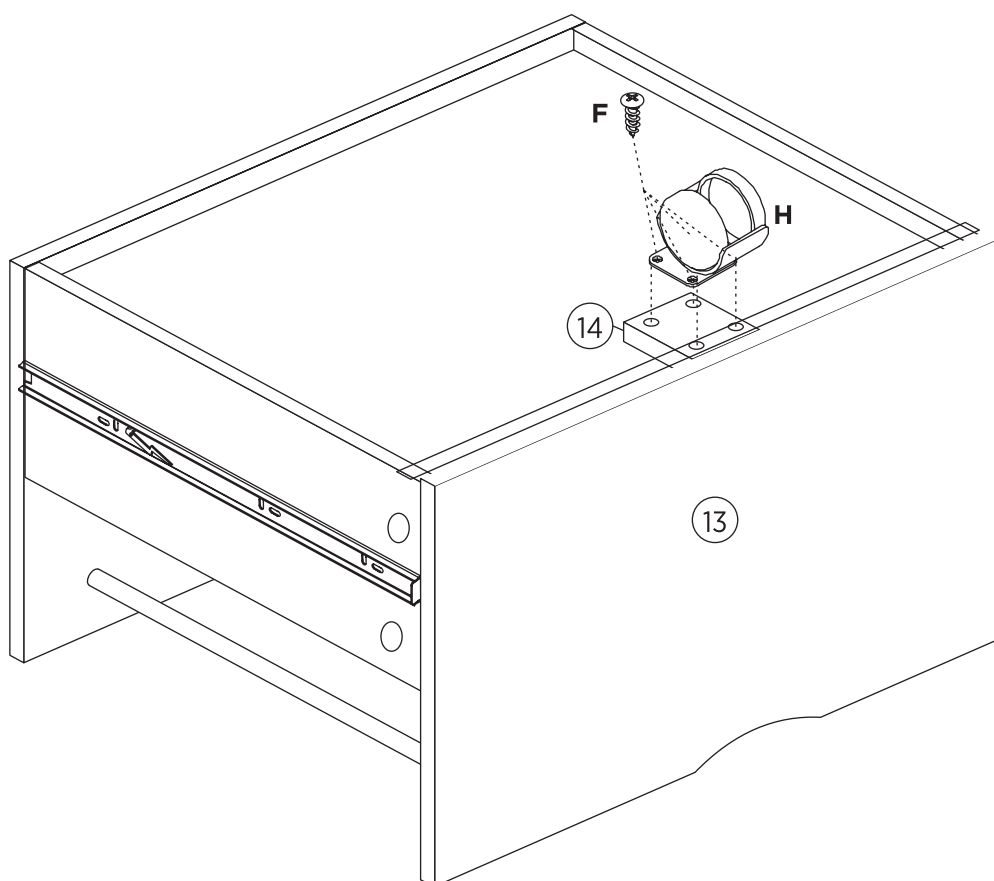

# ASSEMBLY INSTRUCTIONS

## STEP 8

 
Fix drawer outer runners (I1) to parts 1 and 2 using screws (E), as shown.

### **WARNING**




The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



E x 12



I x 4

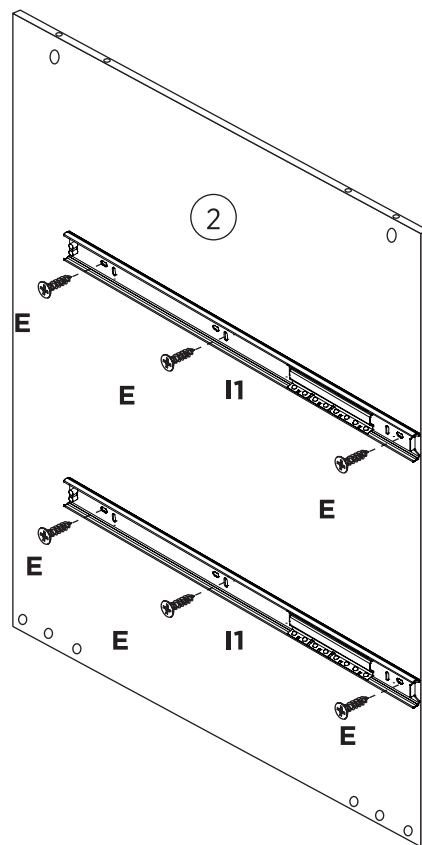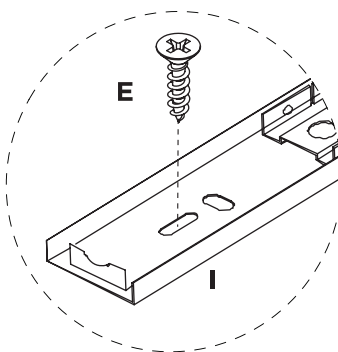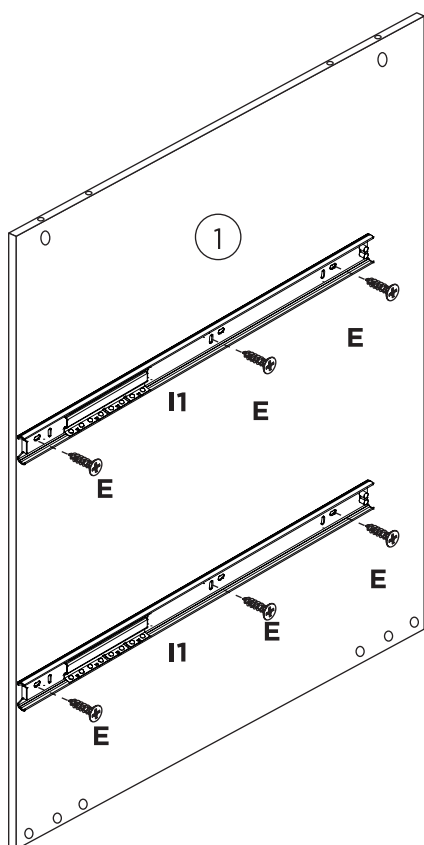   



# ASSEMBLY INSTRUCTIONS

## STEP 9

Insert quickfit screw (A) to part 1.

Insert cam lock (B) and wooden dowel (C) to part 16.

 
 
Attach part 16 to part 1.

Fix wooden dowels (C) to parts 5 and 6.

Attach parts 5 and 6 to part 1 using screws (D).

Put stickers (N) to screws (D), as shown.

Turn cam lock clockwise to tighten.

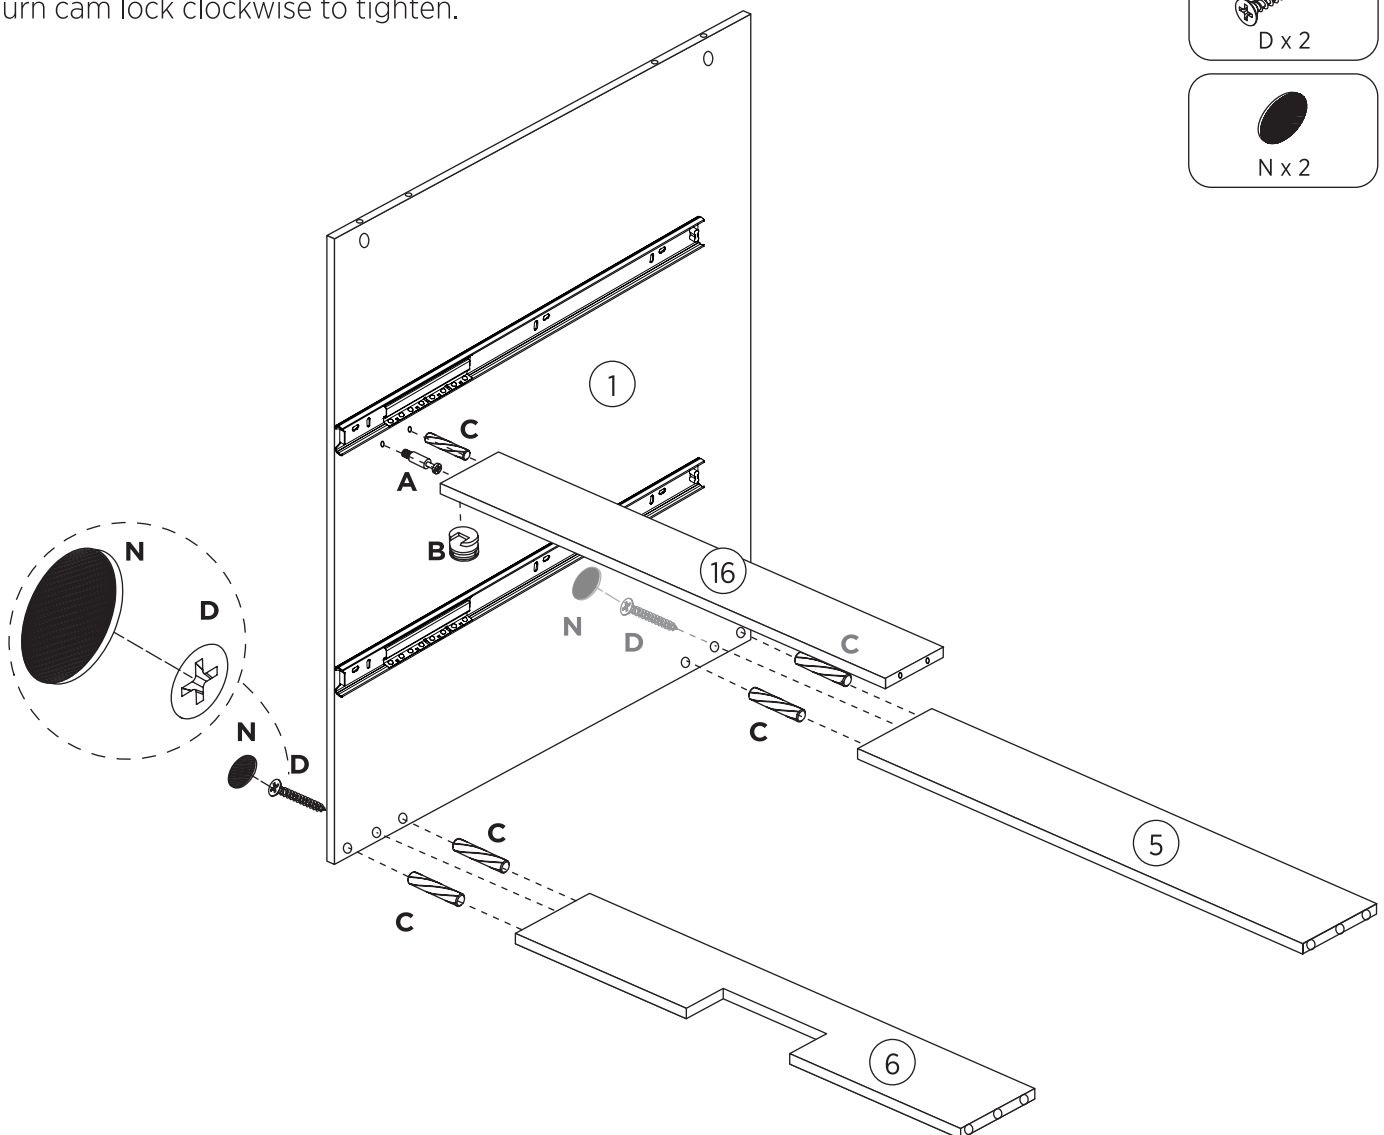

# ASSEMBLY INSTRUCTIONS

## STEP 10

Insert quickfit screw (A) to part 2.

Insert cam lock (B) and wooden dowel (C) to part 16.

 
 
 
Attach part 16 to part 2.

Fix wooden dowels (C) to parts 5 and 6.

Attach parts 5 and 6 to part 2 using screws (D).

Put stickers (N) to screws (D), as shown.

Turn cam lock clockwise to tighten.

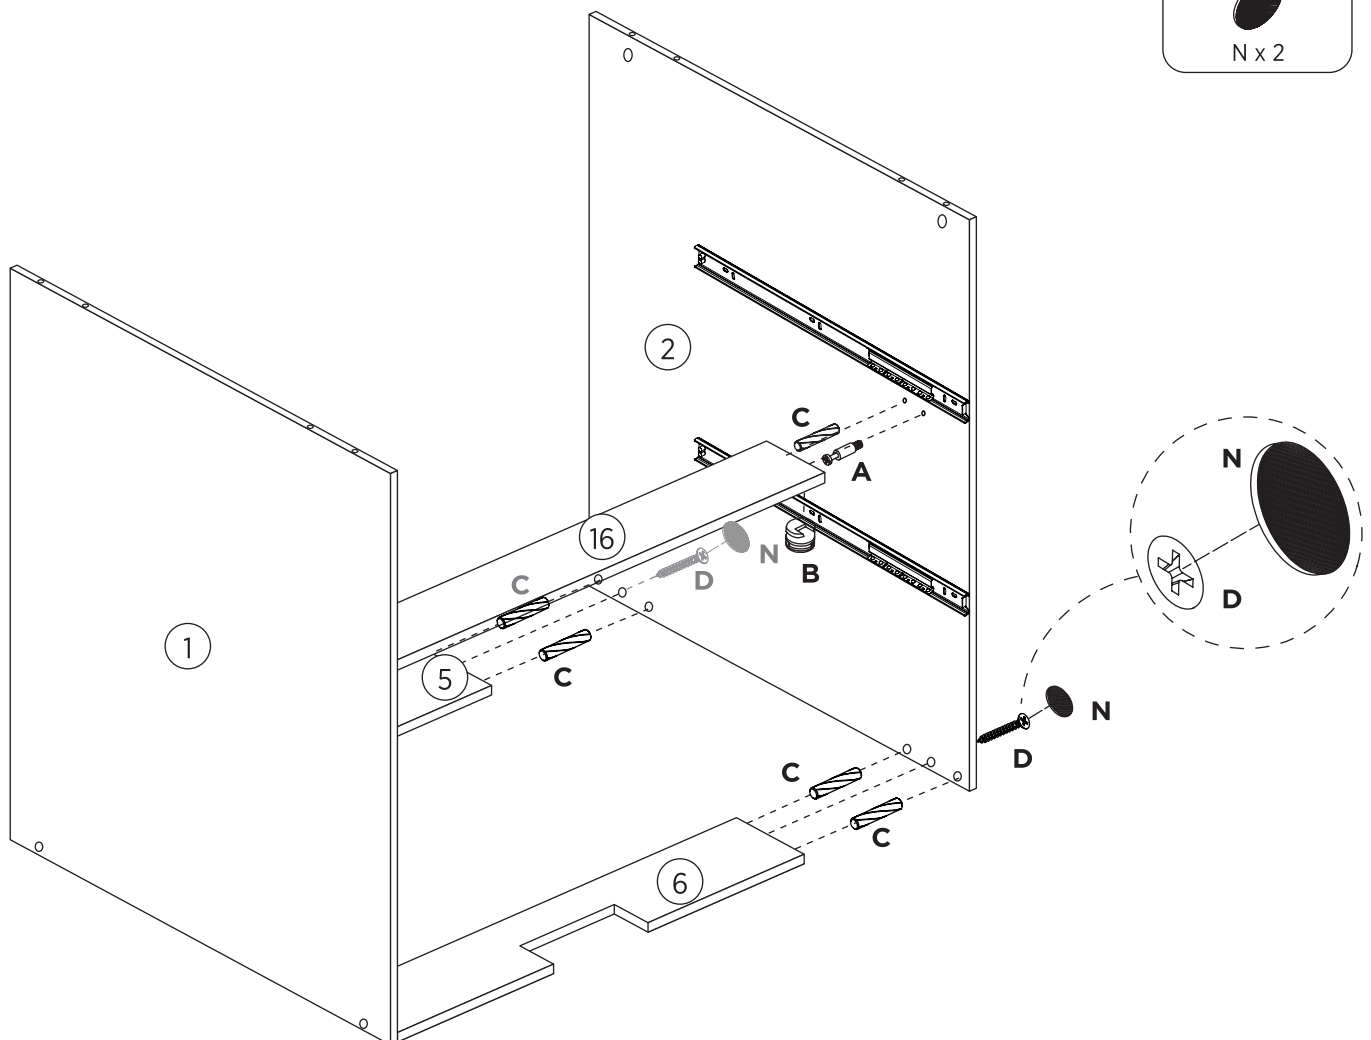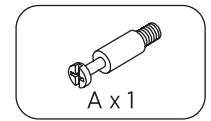

# ASSEMBLY INSTRUCTIONS

 
## STEP 11

Insert quickfit screws (A) to part 3.

Insert cam locks (B) and wooden dowels (C) to parts 1 and 2

Fix part 3 to parts 1 and 2, as shown.


Turn cam locks (B) clockwise to tighten.




A x 4



 B x 4



C x 4

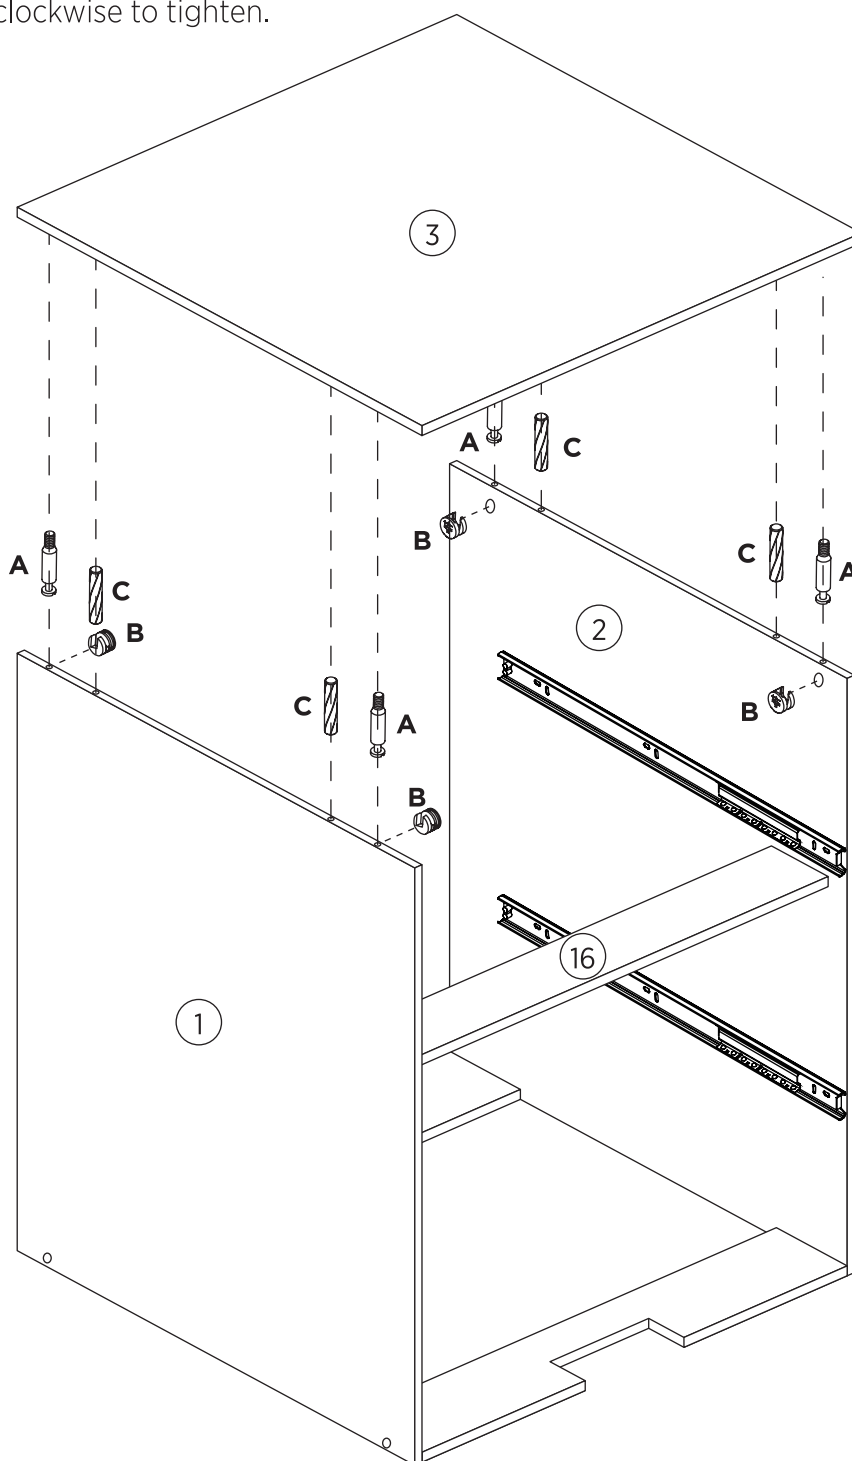 

# ASSEMBLY INSTRUCTIONS

## STEP 12

Insert parts 4 into the grooves of part 15.

Fix parts 4 and 15 to assembled unit using nails (J).

Fix wall strap (L) to unit using washer (K) and screw (F), as shown.



F x 1



 
J x 17



K x 1



L x 1

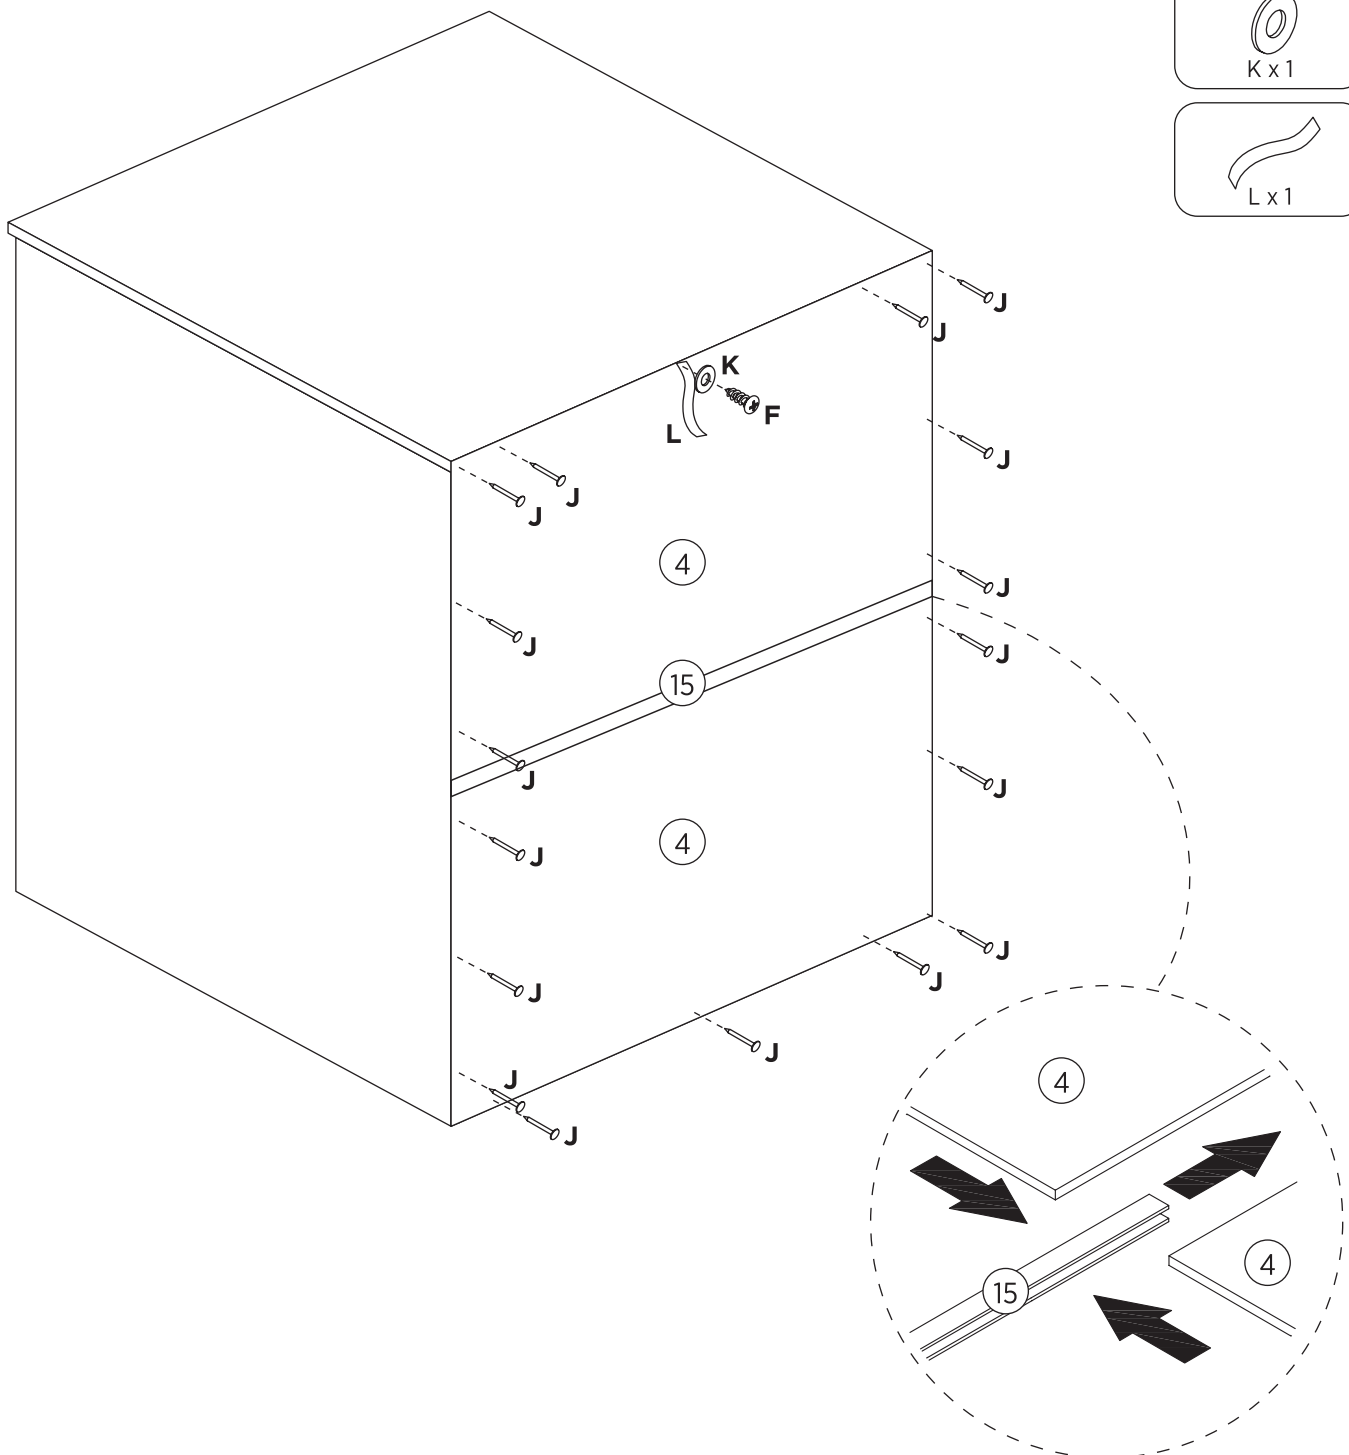

# ASSEMBLY INSTRUCTIONS

## STEP 13

Fix castor wheels with lock (G) to part 6 using screws (F).

Fix castor wheels (H) to part 5 using screws (F), as shown.



 
F x 16



G x 2



H x 2

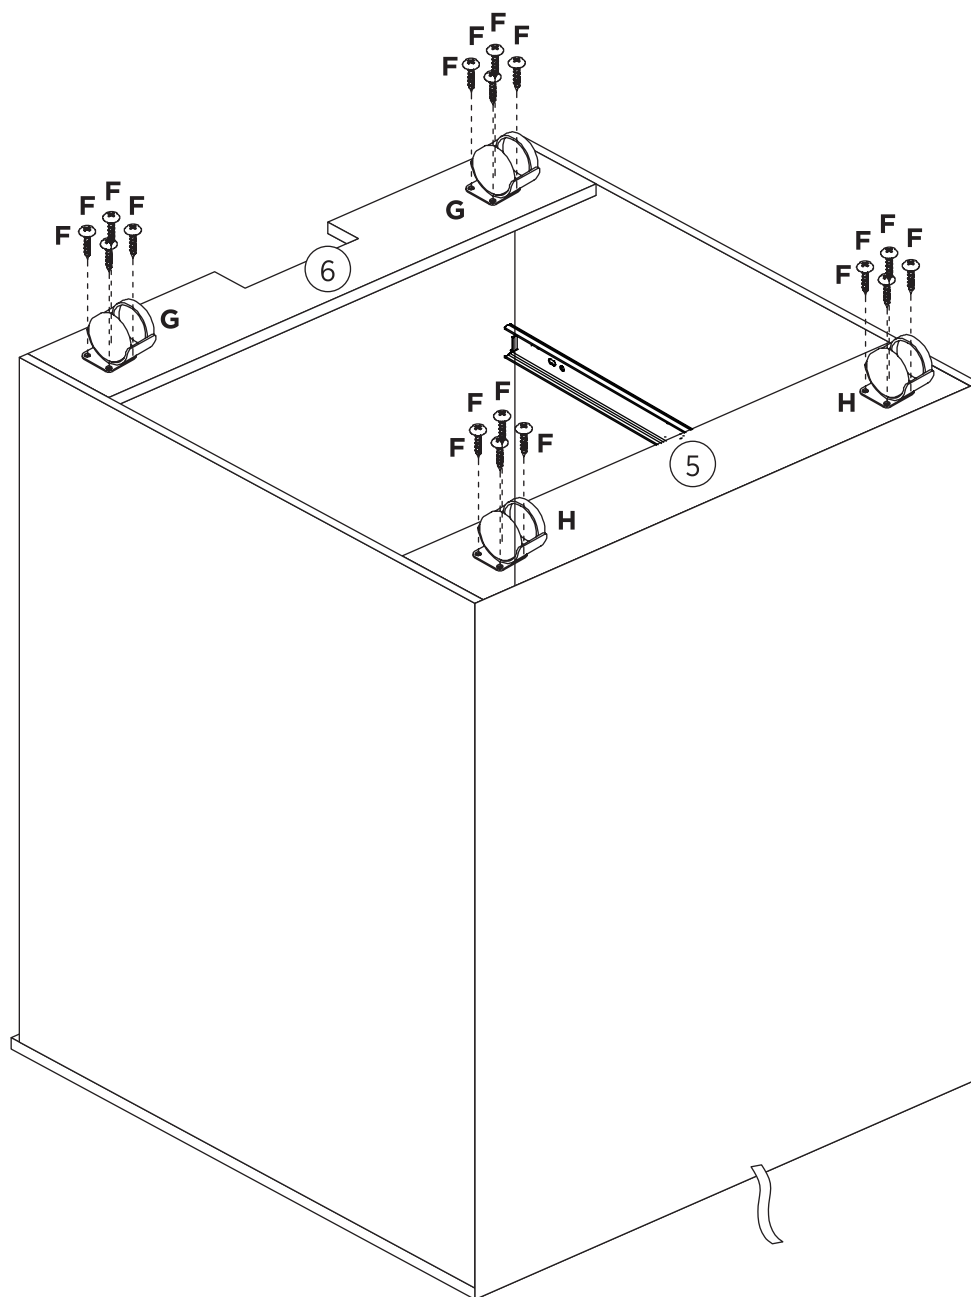


# ASSEMBLY INSTRUCTIONS

---

## STEP 14

 Slide in drawers into the assembled unit, as shown.

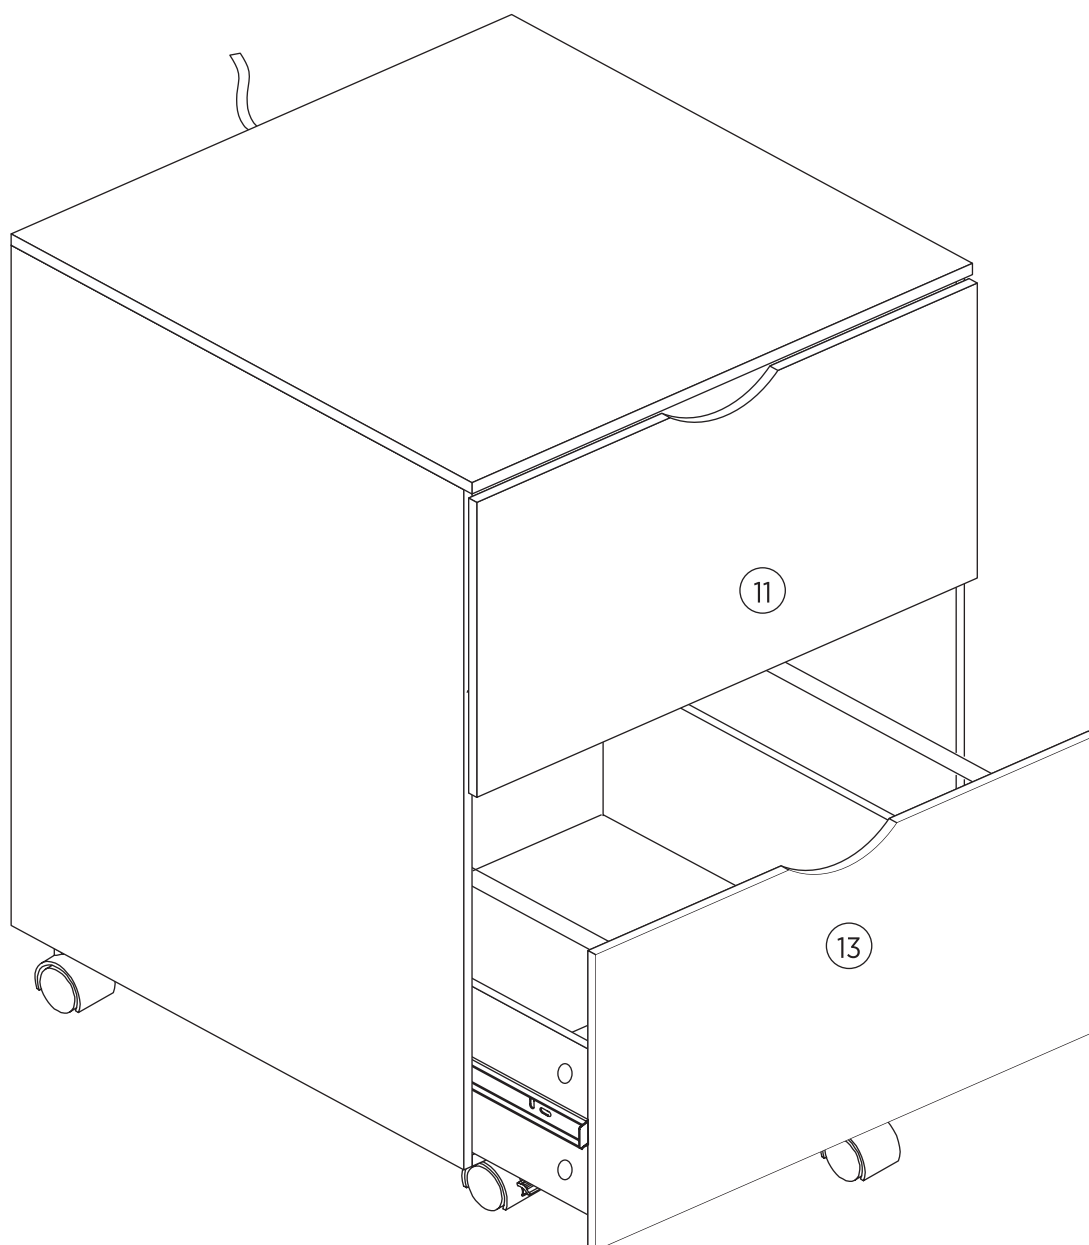

# ASSEMBLY INSTRUCTIONS

## STEP 15

**For extra stability, you must fix your mobile pedestal to the wall using the additional hardware (M, K and D), as shown.**

**Screw (D) is fixed through the washer (K) and wall strap (L) into the wall plug (M).**

**Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.**

**Please consider the wall mounting & fixing guide when securing your mobile pedestal.**



D x 1



K x 1



M x 1

 
**WARNING**



**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.


**NEVER put a TV on this furniture** 

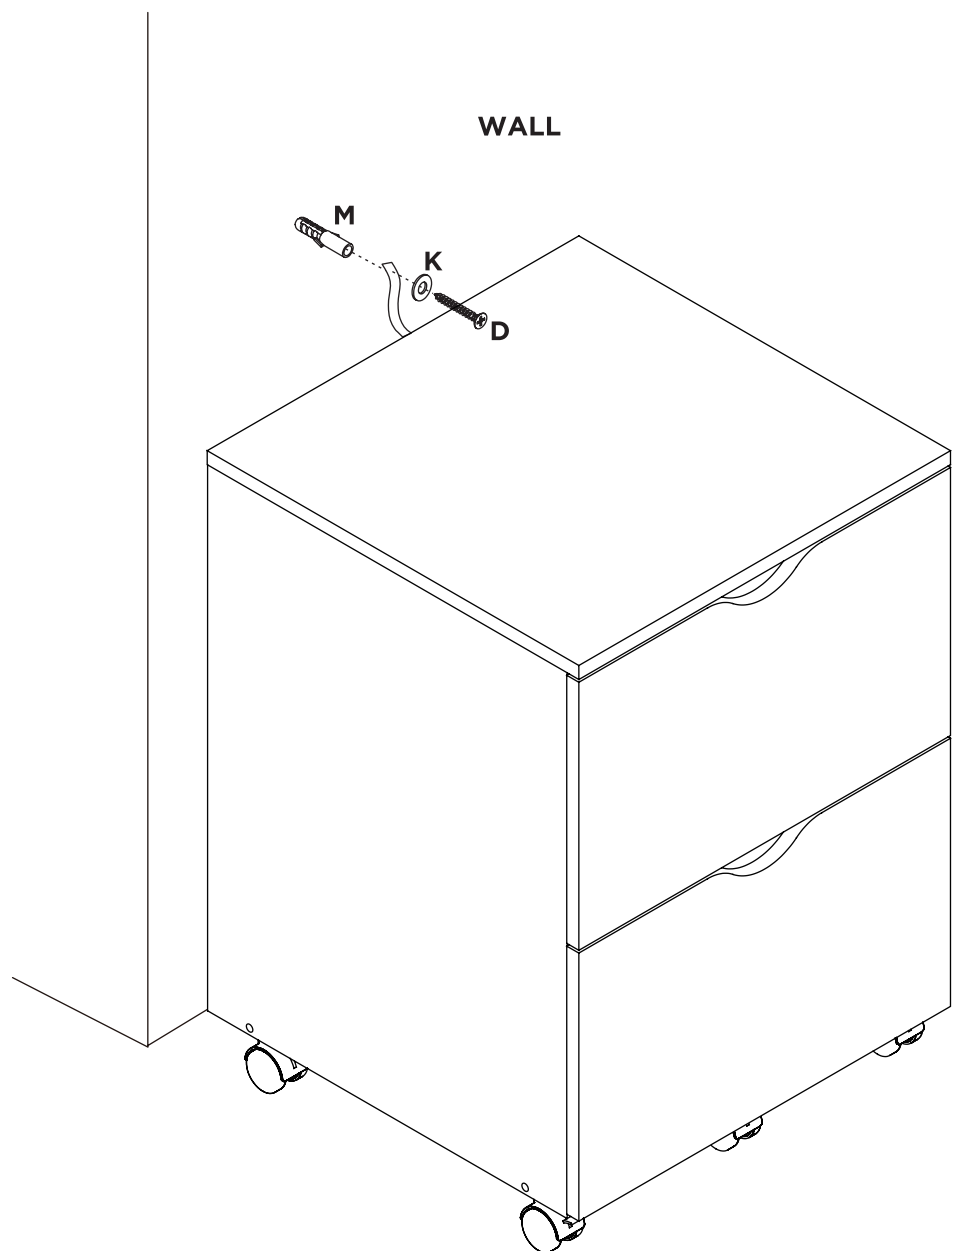

# ASSEMBLY INSTRUCTIONS

---
 
## STEP 16

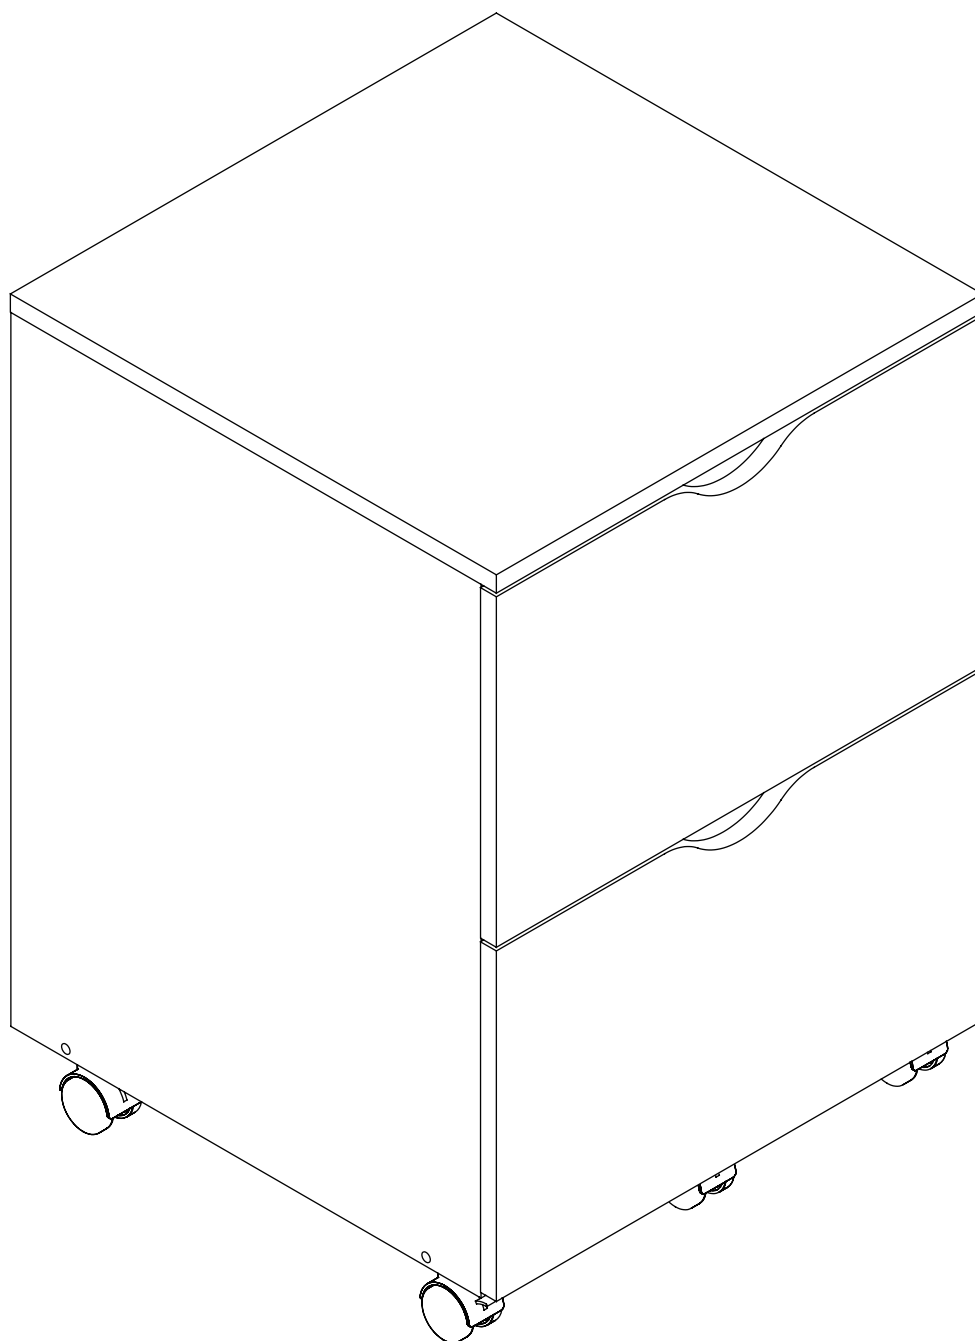

**The maximum recommended weight is 5kg on Top, 5kg on each drawer.**

Your Mobile pedestal 2 drawers is ready for use.



# WALL FIXING GUIDE

## **NOTE: Supplied wall plugs are only suitable for use in masonry walls.**

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



### **IMPORTANT:**

**When drilling into walls, always check for hidden wires or pipes, etc.**



## **Tips & Tricks**

 
**Make sure that the hardware used is suitable for supporting your unit.**

**Please consult a qualified tradesperson if unsure.**

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


## **Types of Walls**

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

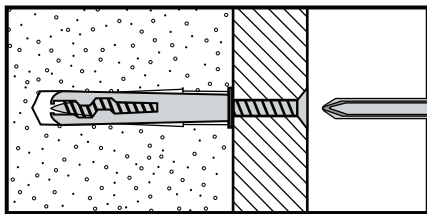


### **1. General Purpose Wall Plug**

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

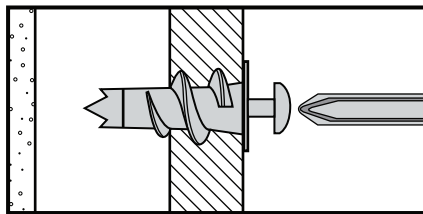


### **2. Plasterboard Wall Plug**

 For use when attaching light loads onto plasterboard partitions.

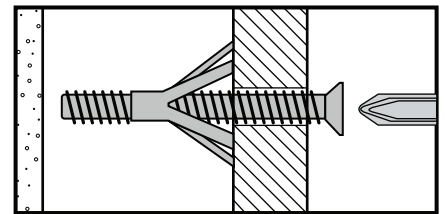


### **3. Cavity Fixing Wall Plug**

 For use with plasterboard partitions or hollow wooden doors.

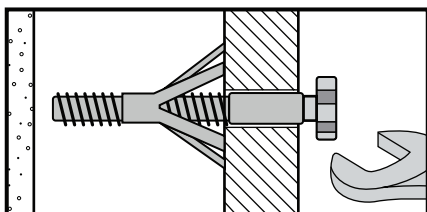


### **4. Cavity Fixing Heavy Duty Wall Plug**

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

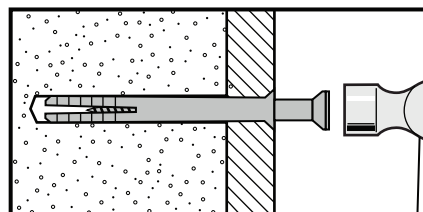

### **5. Hammer Fixing Wall Plug**

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

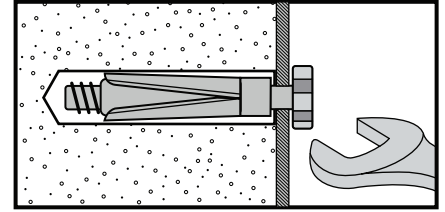

### **6. Shield Anchor Wall Plug Heavy Loads**

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.