 


CHEST OF 5 DRAWERS

ASSEMBLY INSTRUCTIONS

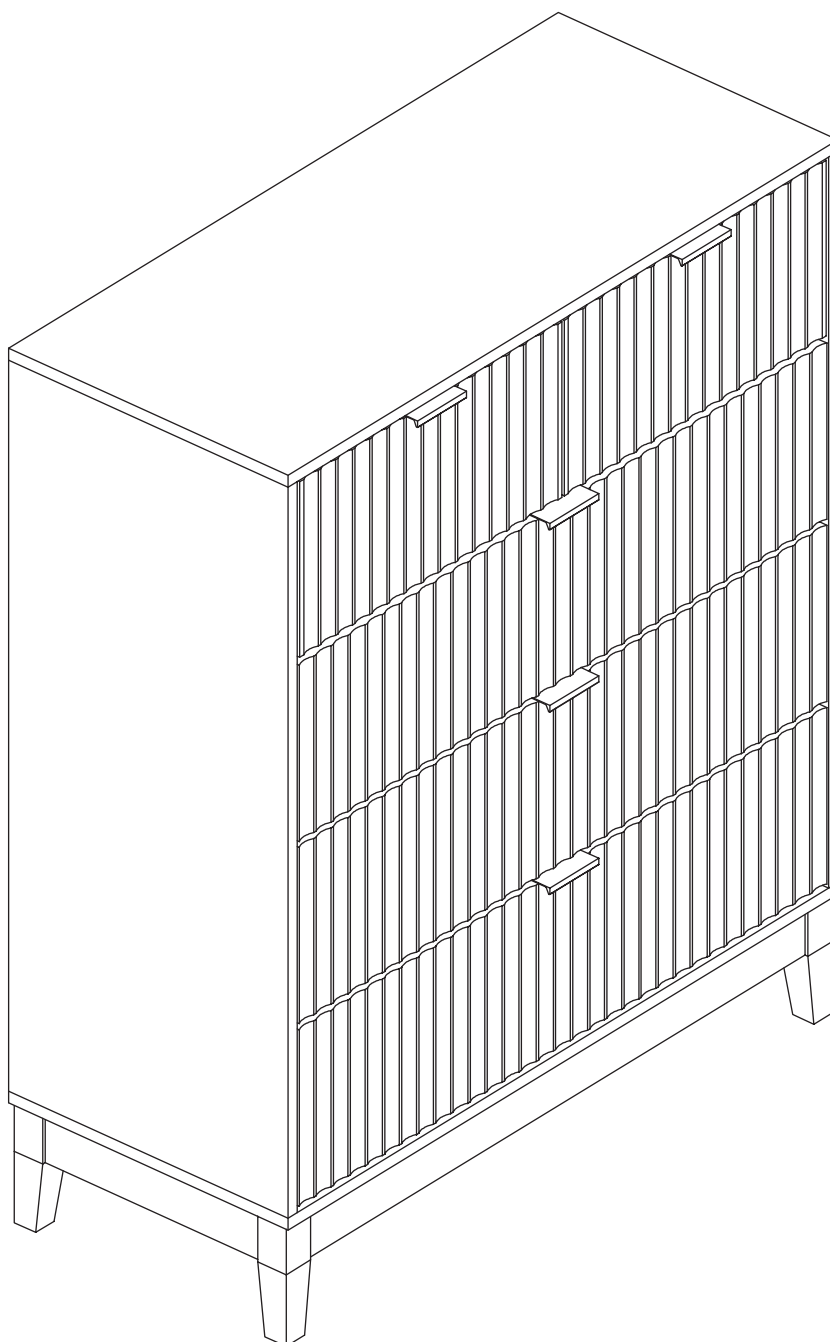

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protective surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

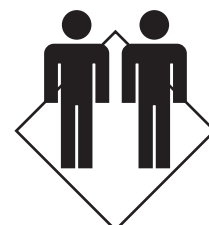

ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

For more information, visit <https://www.productsafety.gov.au>

 **WARNING**



Children have died from furniture tipover.

 
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

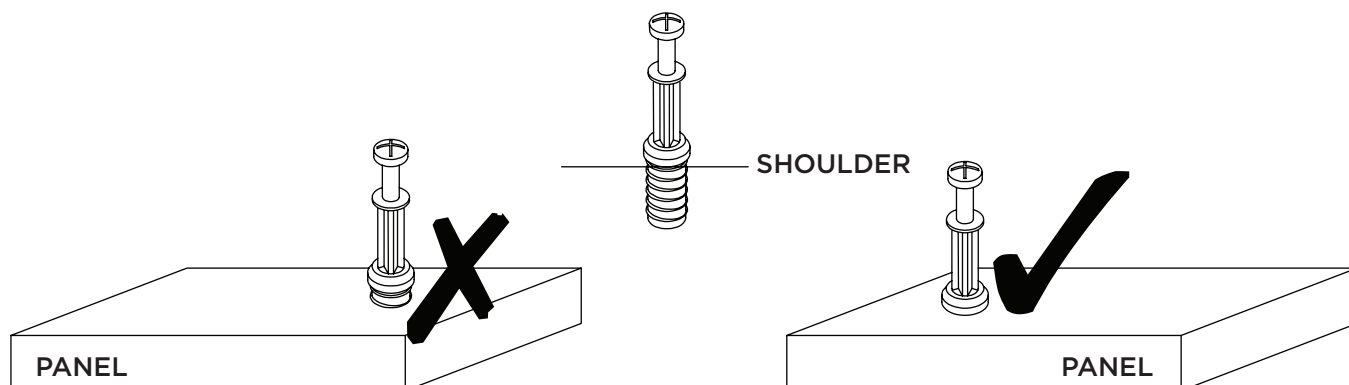


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

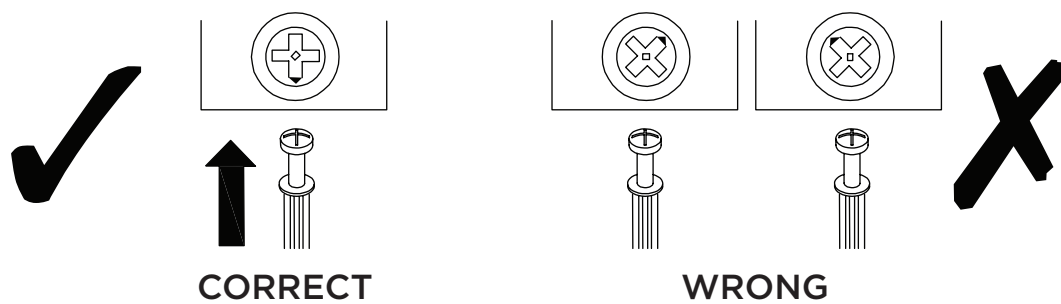

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

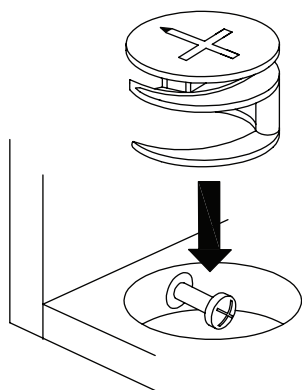


Turn cam lock clockwise to tighten.

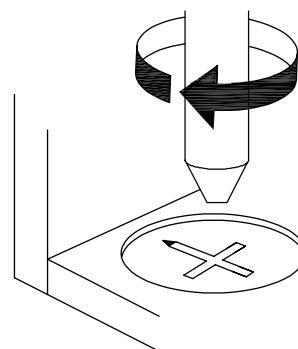 


DRAWER SLIDE GUIDE

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

 Inner Drawer Runner Left (G)




Inner Drawer Runner Right (H)

 


The Drawer Slide components shown above are attached to the **drawers**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

 Outer Drawer Runner Left (CL)

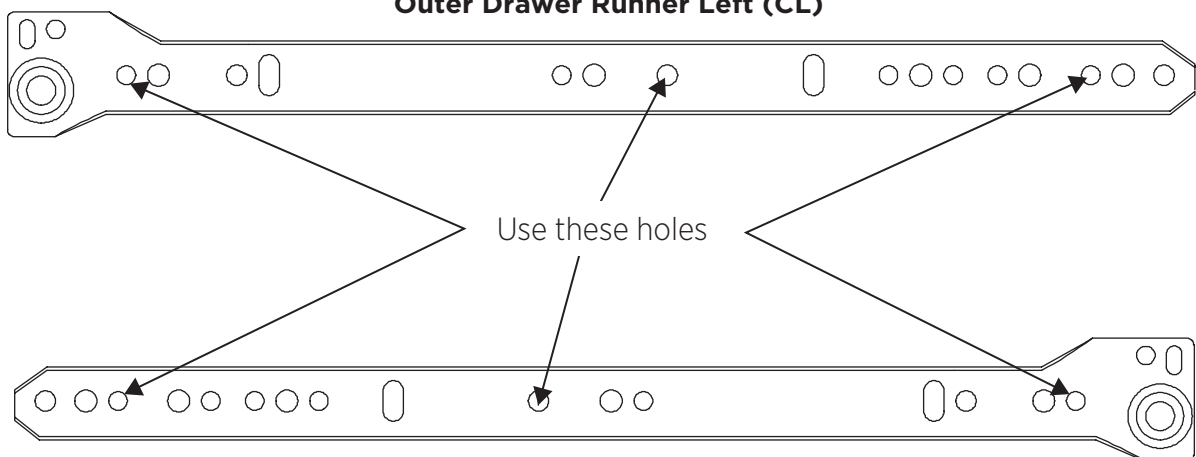

The Drawer Slide components shown above are attached to the **chest**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for step 2, 4 and 16.

 HARDWARE LIST



55 x A
Quickfit Screw



55 x B
Large Cam Lock



12 x C
Wooden Dowel



 
60 x D
Screw



12 x E
Screw




16 x F
Screw



31 x G
Screw



 12 x H
Wedge



5 x I
Handle



8 x J
Spacer



 
8 x K
Washer




8 x L
Bolt



1 x M
Allen Key



1 x N
Screw

 


2 x O
Wall Bracket




2 x P
Wall Plug



 
6 x Q
Screw

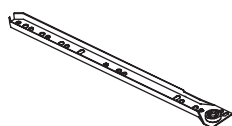


5 x CL
Inner Drawer Runner

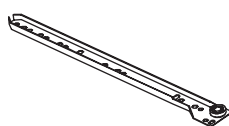 

5 x CR
Inner Drawer Runner

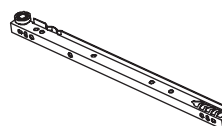 


5 x DL
Outer Drawer Runner

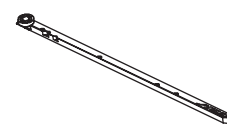 


5 x DR
Outer Drawer Runner

 
PARTS LIST

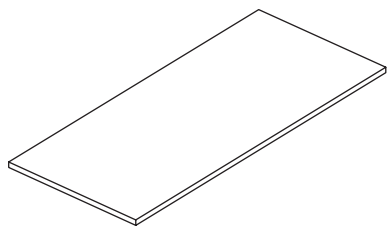


1
1 PC

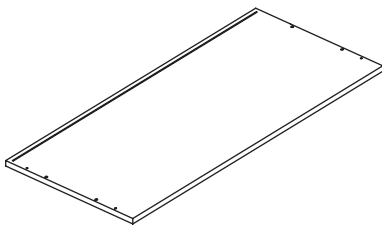 


2
1 PC

 


3
1 PC

 


4
1 PC

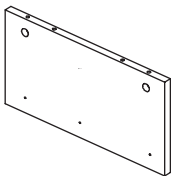 


5
1 PC

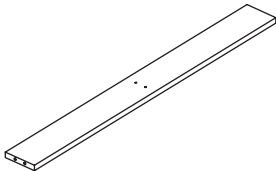 


6
1 PC

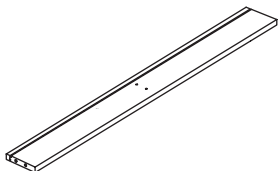 


7
1 PC

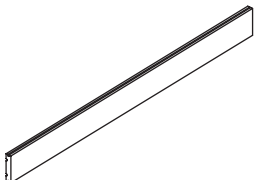 


8
1 PC

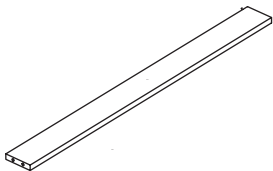 


9
1 PC

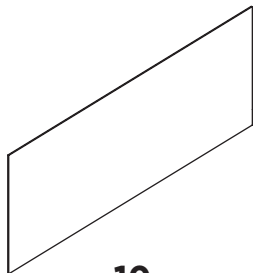 

10
1 PC

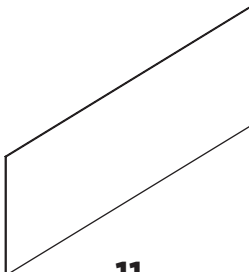 

11
1 PC

 


12
4 PCS


PARTS LIST



 
13
4 PCS

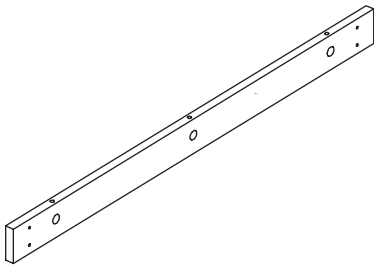


14
2 PCS

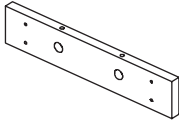 


15
2 PCS

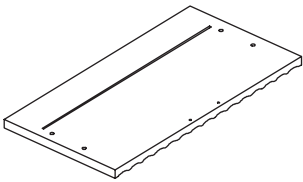 


16
1 PC

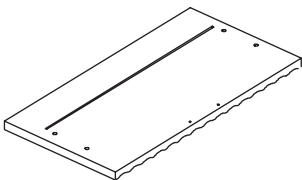 


17
1 PC

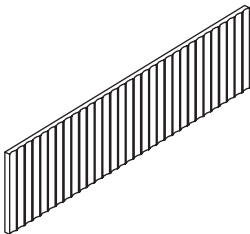 


18
3 PCS

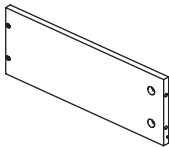 


19
5 PCS

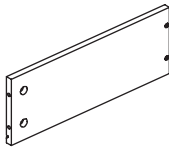 


20
5 PCS

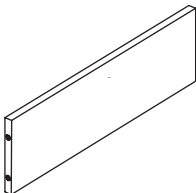 


21
2 PCS

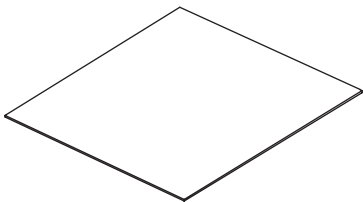 


22
2 PCS

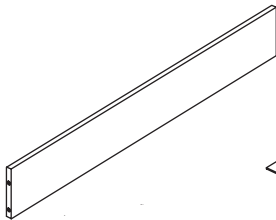 


23
3 PCS

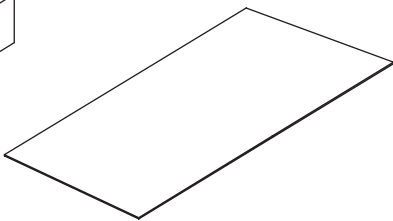 


24
3 PCS

 

25
3 PCS

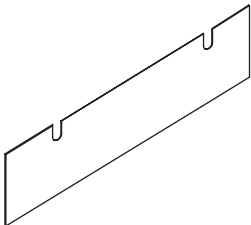 

26
3 PCS

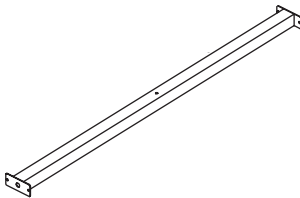 





27
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

Insert quickfit screws (A) to parts 1 and 2.

    Fix wall bracket (O) to part 1 using screws (Q), as shown.

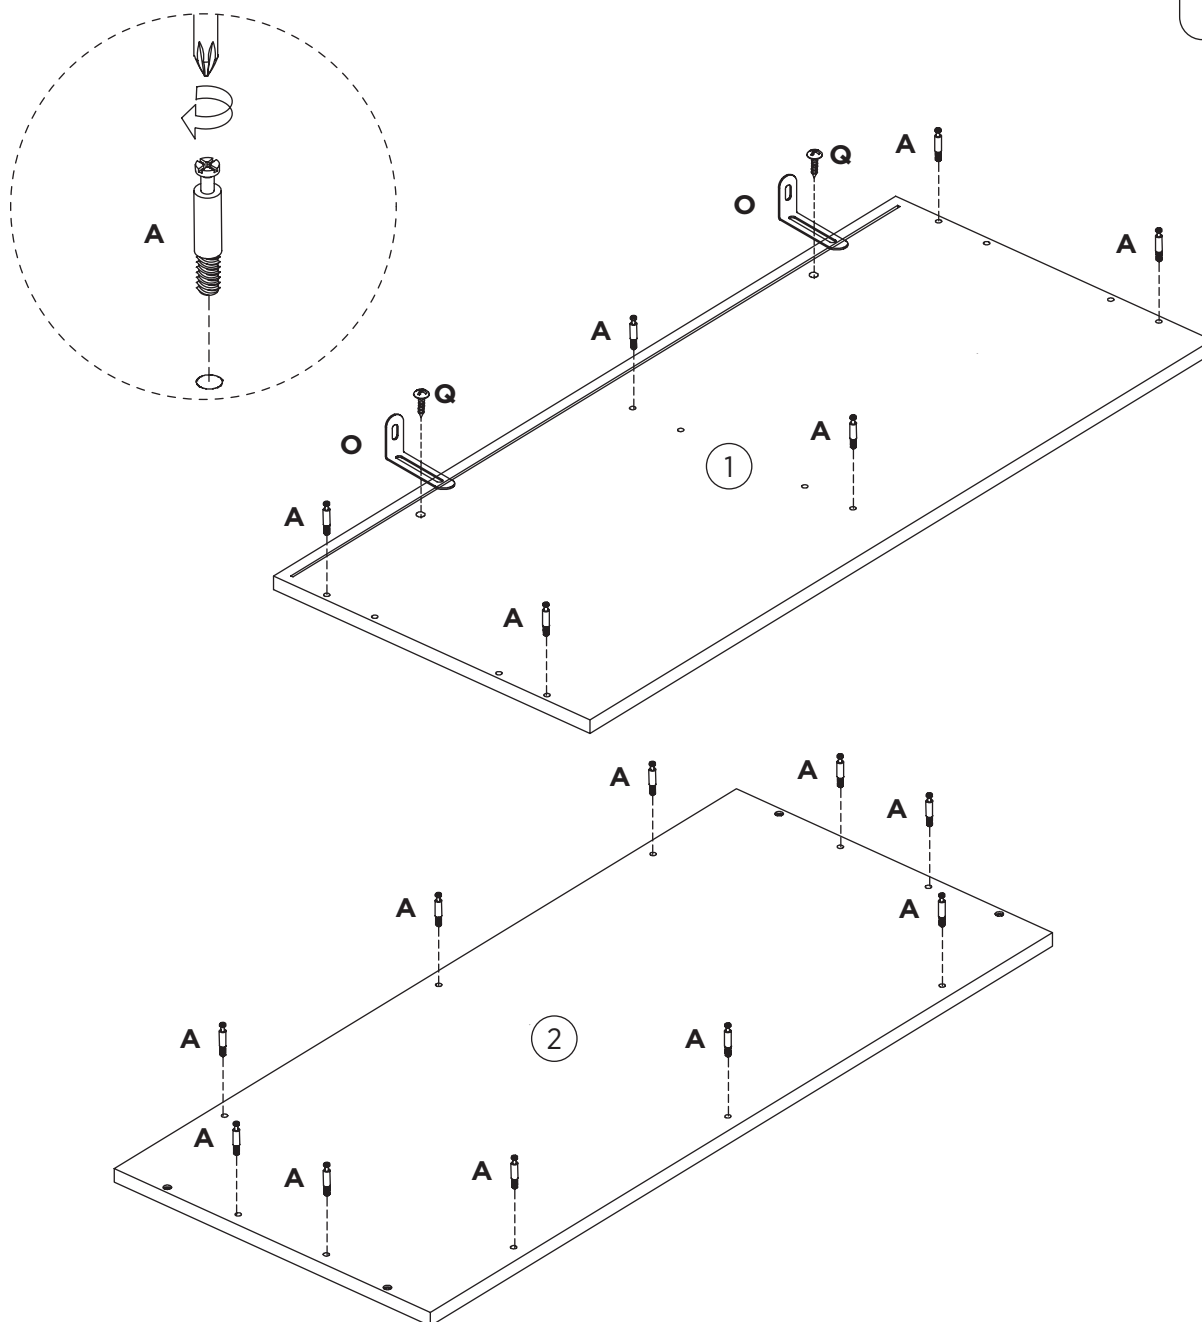

ASSEMBLY INSTRUCTIONS

STEP 2

Fix inner drawer runners (CR) to part 4 using screws (D).

Fix inner drawer runners (CL) to part 3 using screws (D), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
D x 24



CL x 4





CR x 4

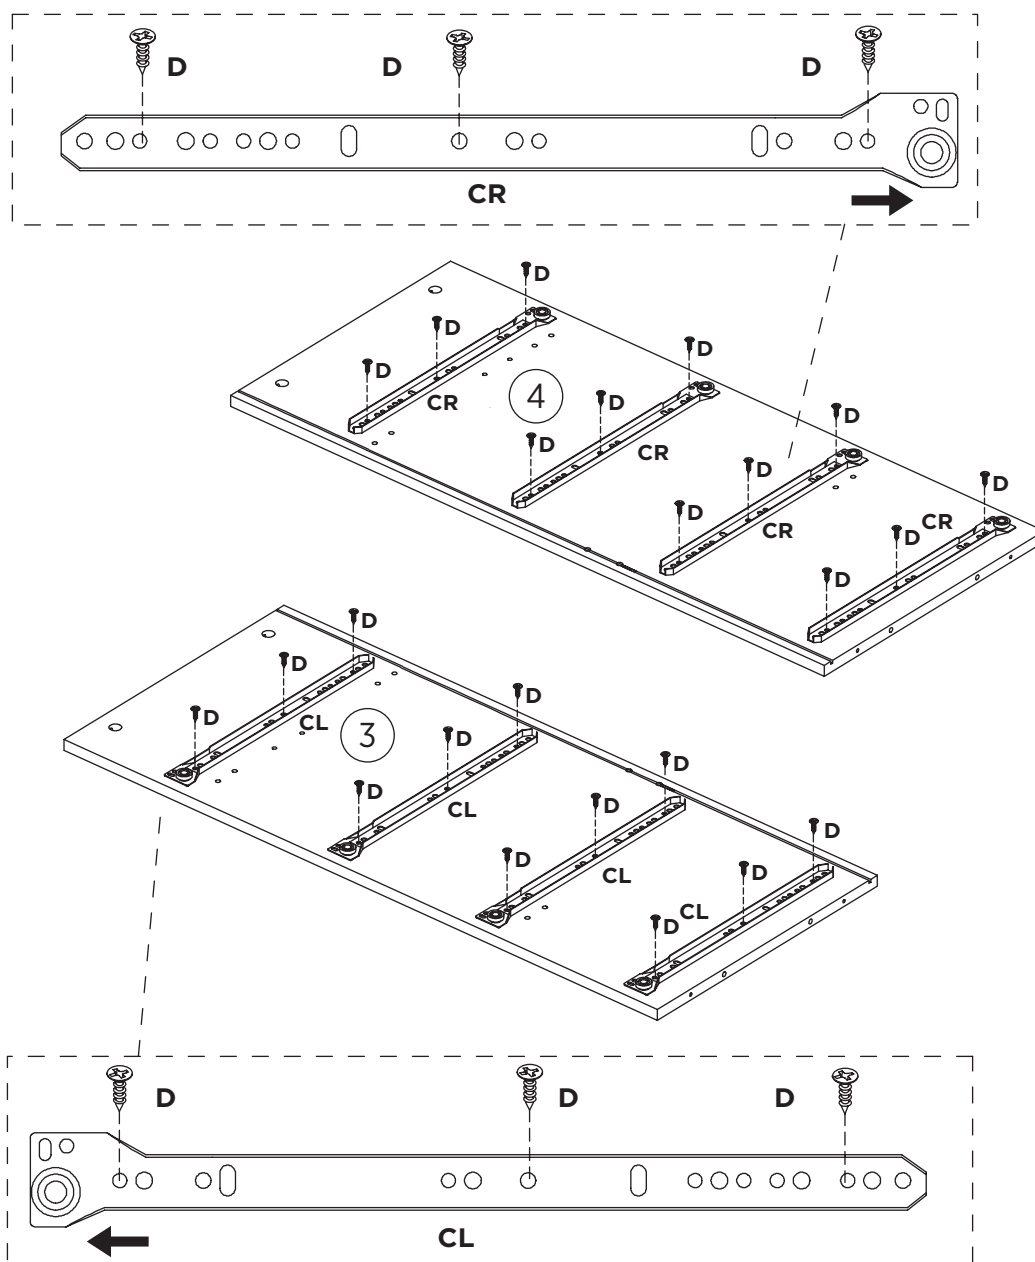

ASSEMBLY INSTRUCTIONS

STEP 3

  Insert quickfit screws (A) to parts 3 and 4, as shown.

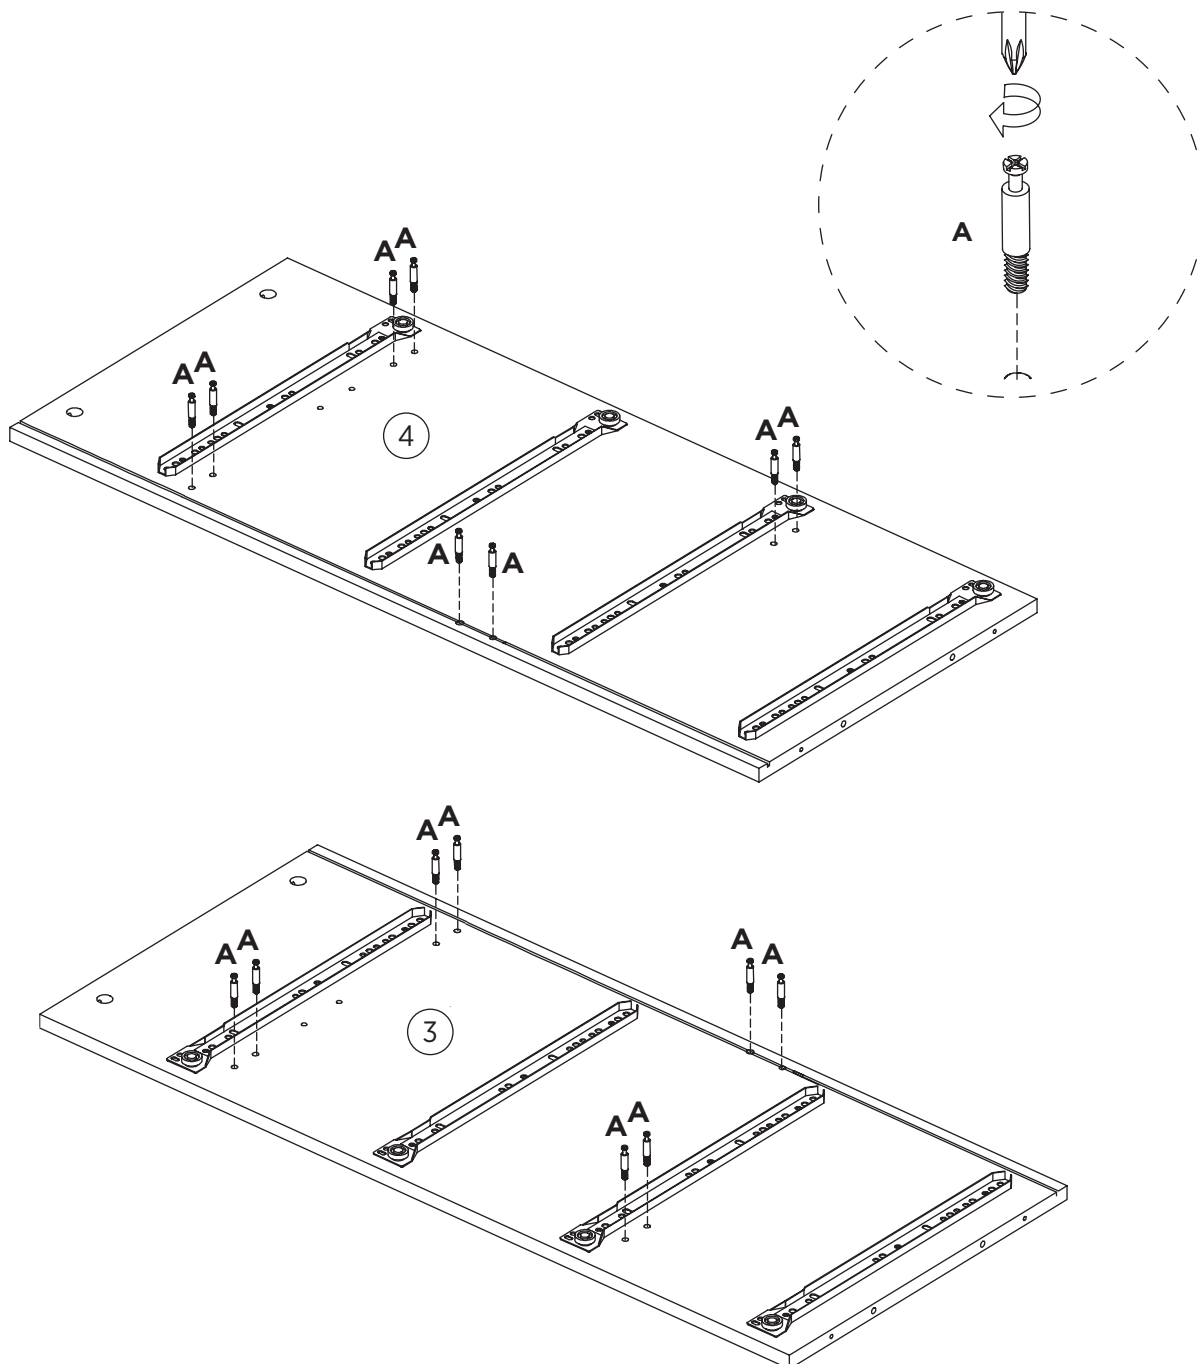

ASSEMBLY INSTRUCTIONS

 
 
 
 
STEP 4

Fix inner drawer runner (CL) to part 5 using screws (D).

On the other side of part 5, fix inner drawer runner (CR) using screws (D), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

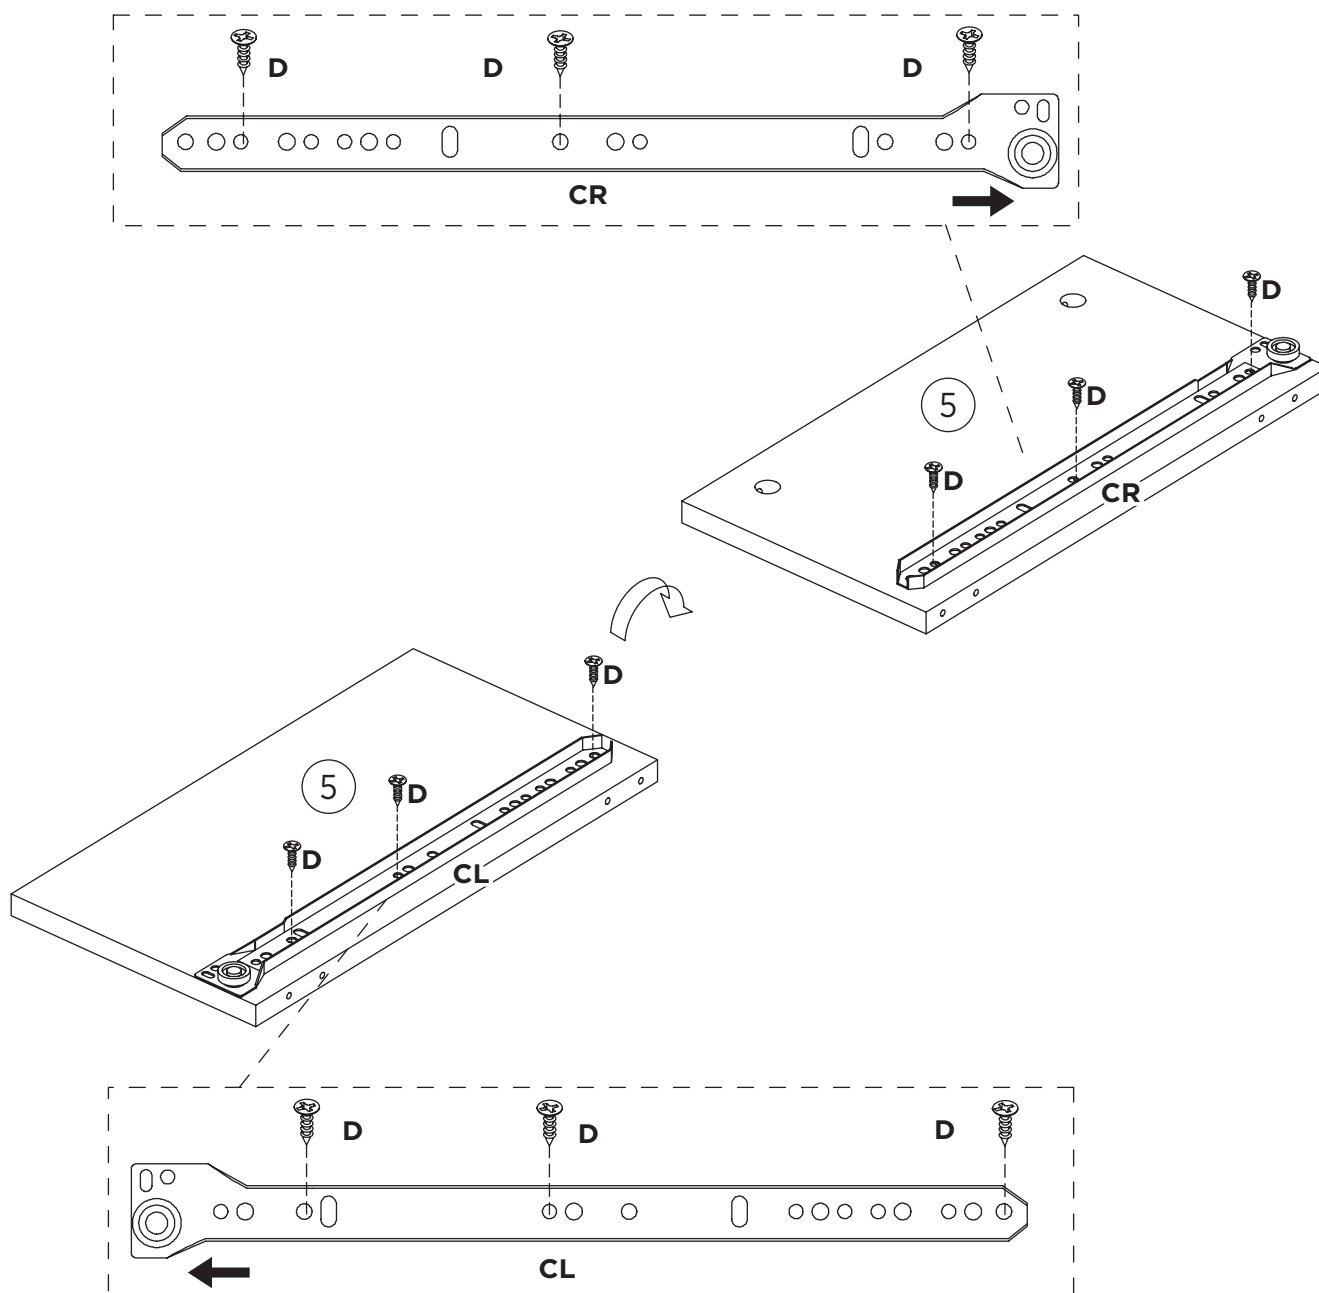

ASSEMBLY INSTRUCTIONS

 
STEP 5

Fix part 27 to part 3 using screws (Q).

Insert cam locks (B) to parts 6, 7, 8 and 9.

Attach parts 6, 7, 8 and 9 to part 3, as shown.


Turn cam locks clockwise to tighten.

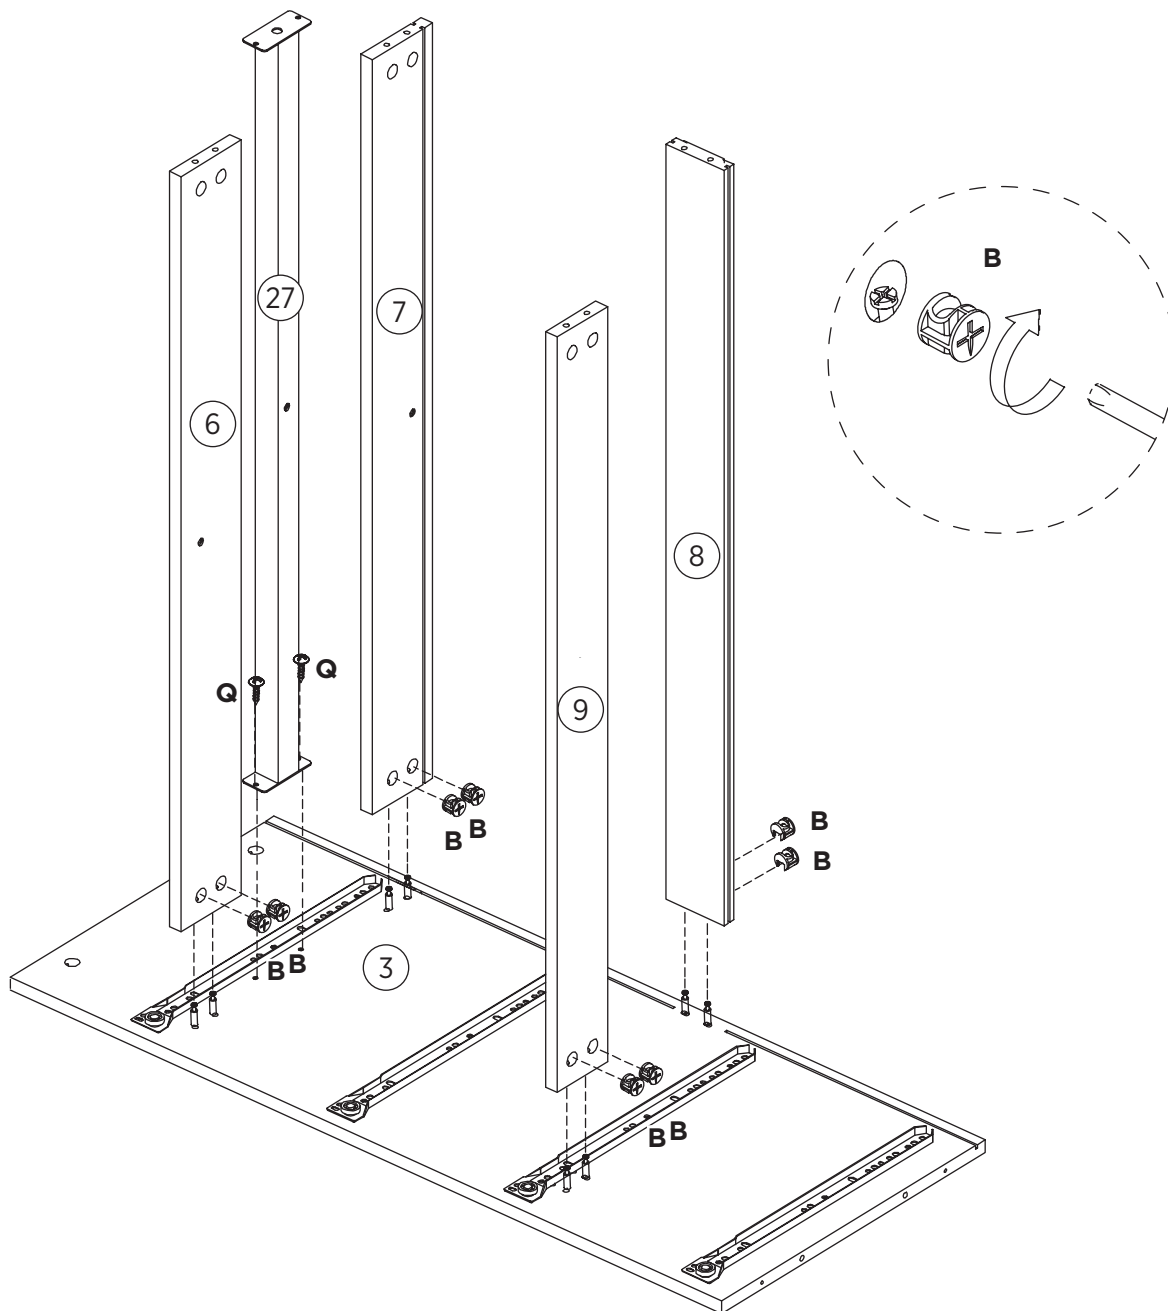

ASSEMBLY INSTRUCTIONS

STEP 6

 Insert part 11 into grooves of parts 3, 7 and 8, as shown.

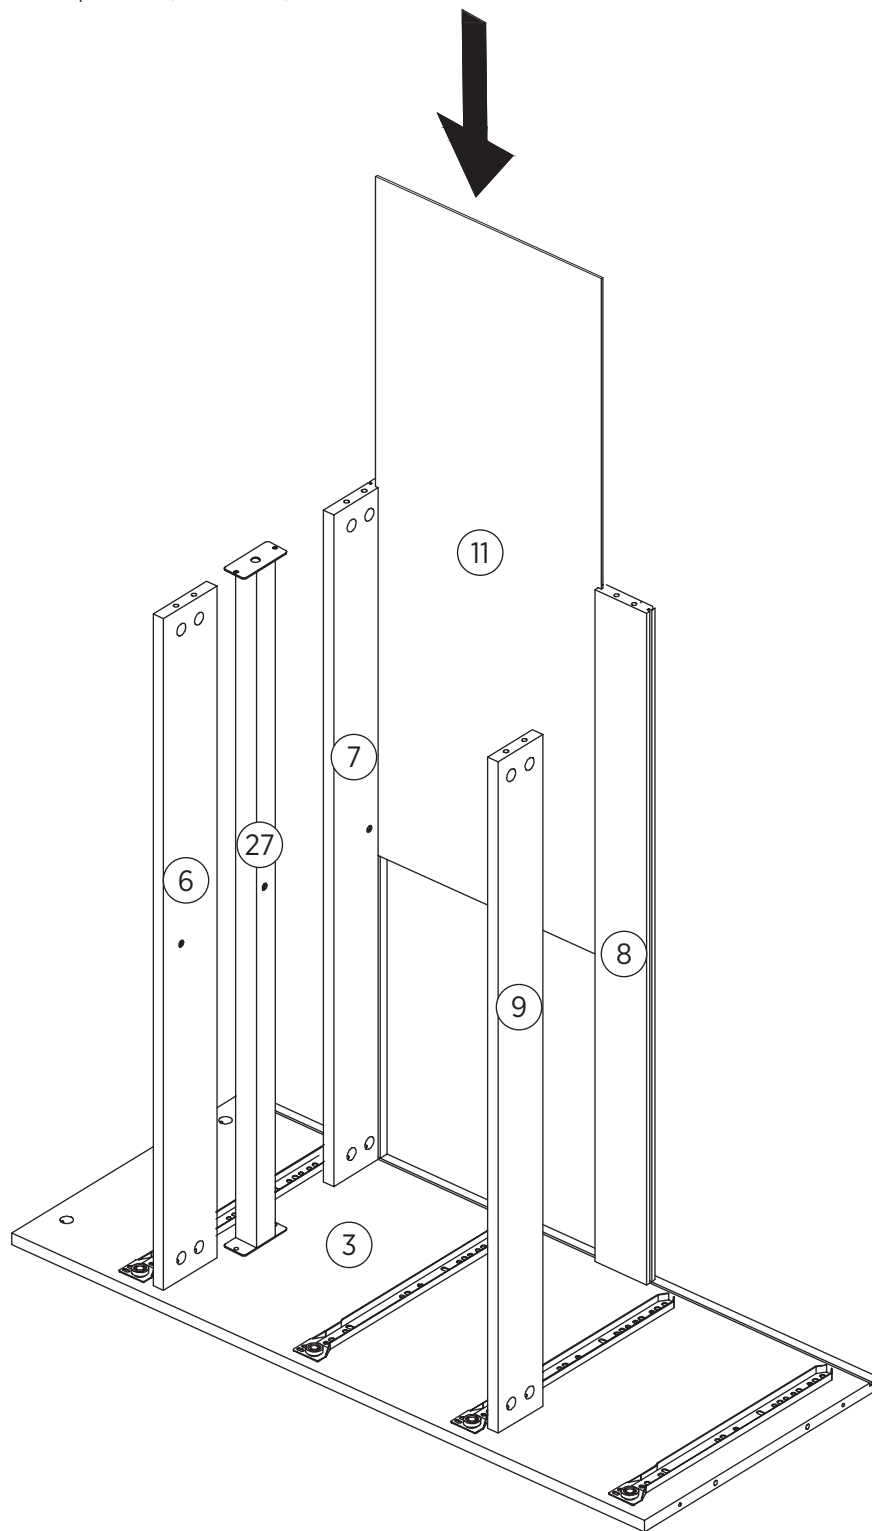

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 7

Fix part 4 to part 27 using screws (Q).

Insert cam locks (B) to parts 6, 7, 8 and 9.

Attach part 4 to parts 6, 7, 8 and 9, as shown.

Turn cam locks clockwise to tighten.


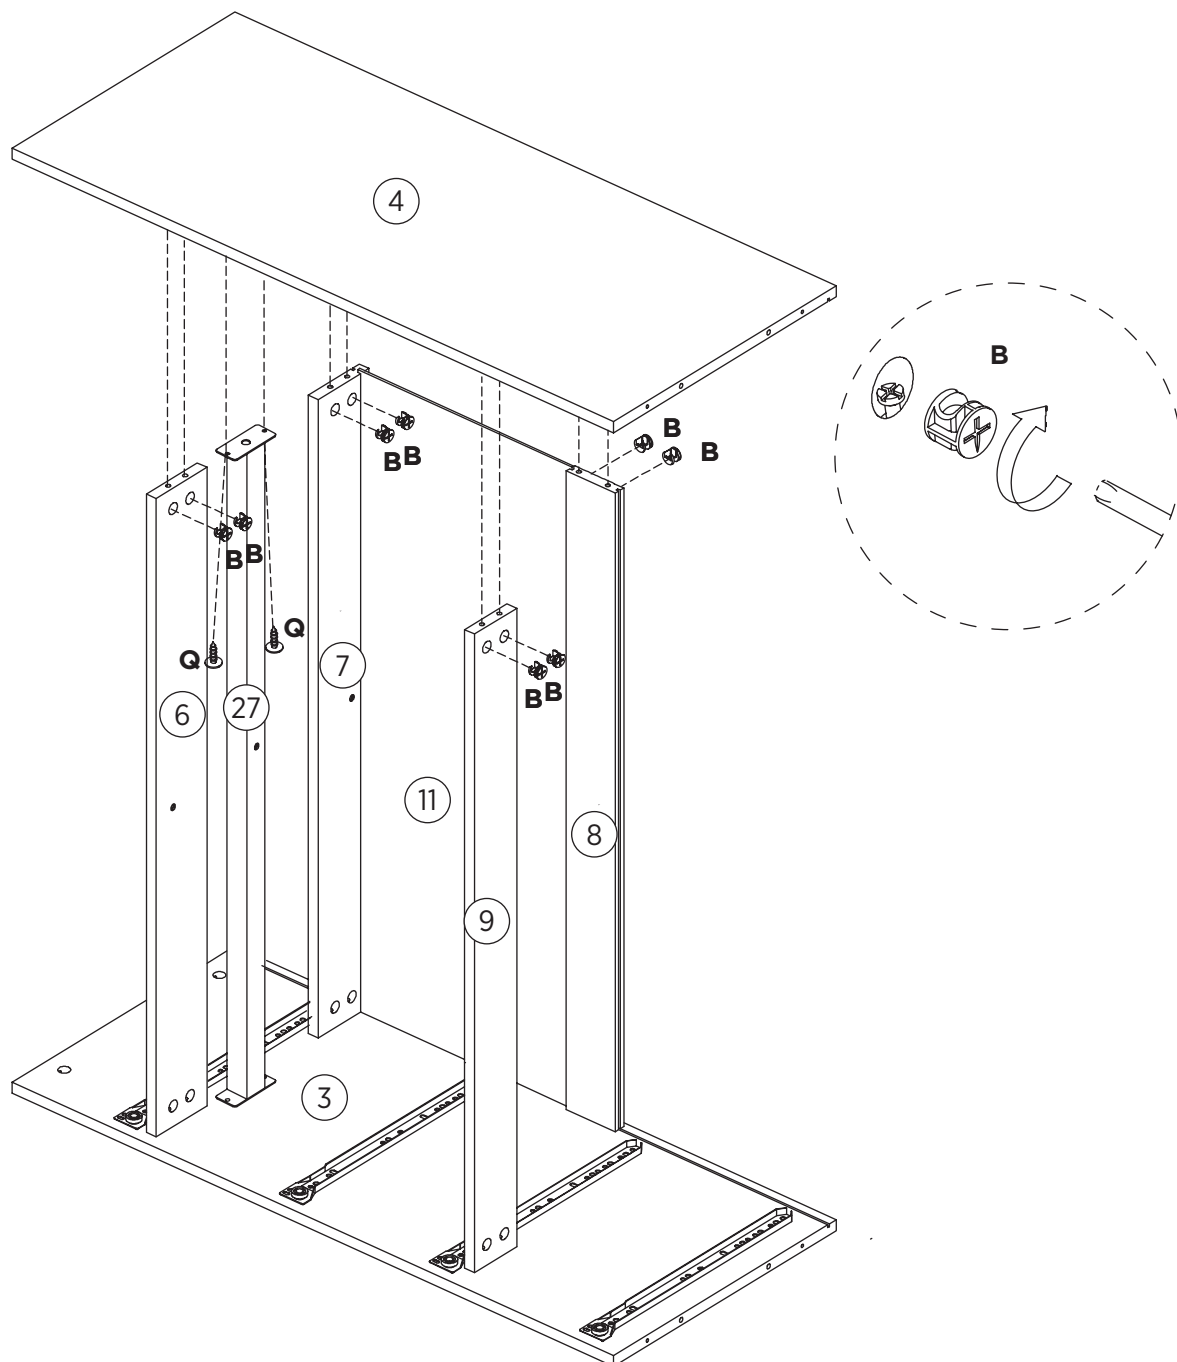

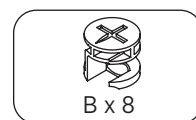


ASSEMBLY INSTRUCTIONS

STEP 8

Insert wooden dowels (C) to parts 6 and 7.

    
Attach part 5 to parts 6, 7 and 27 using screws (G) and screw (N), as shown.

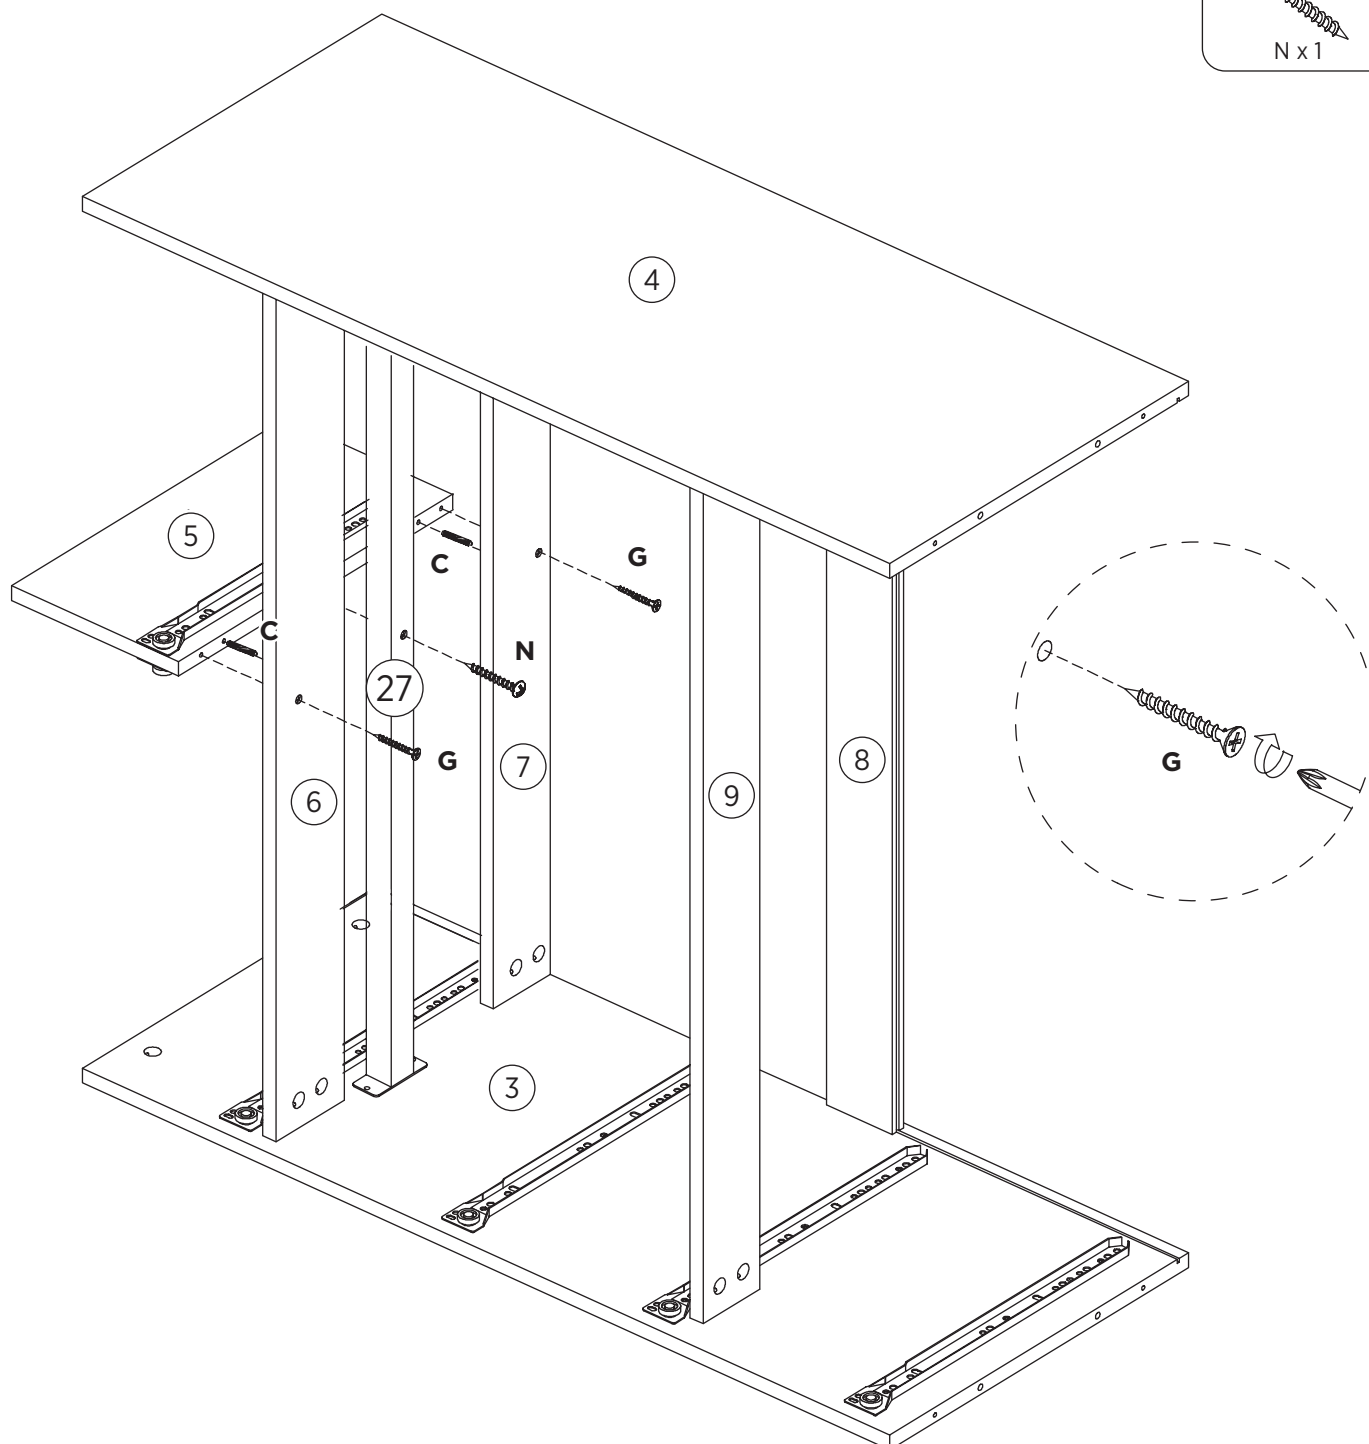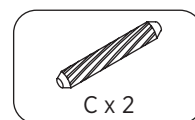

ASSEMBLY INSTRUCTIONS

STEP 9

 Insert part 26 into grooves of parts 3, 4 and 7, as shown.

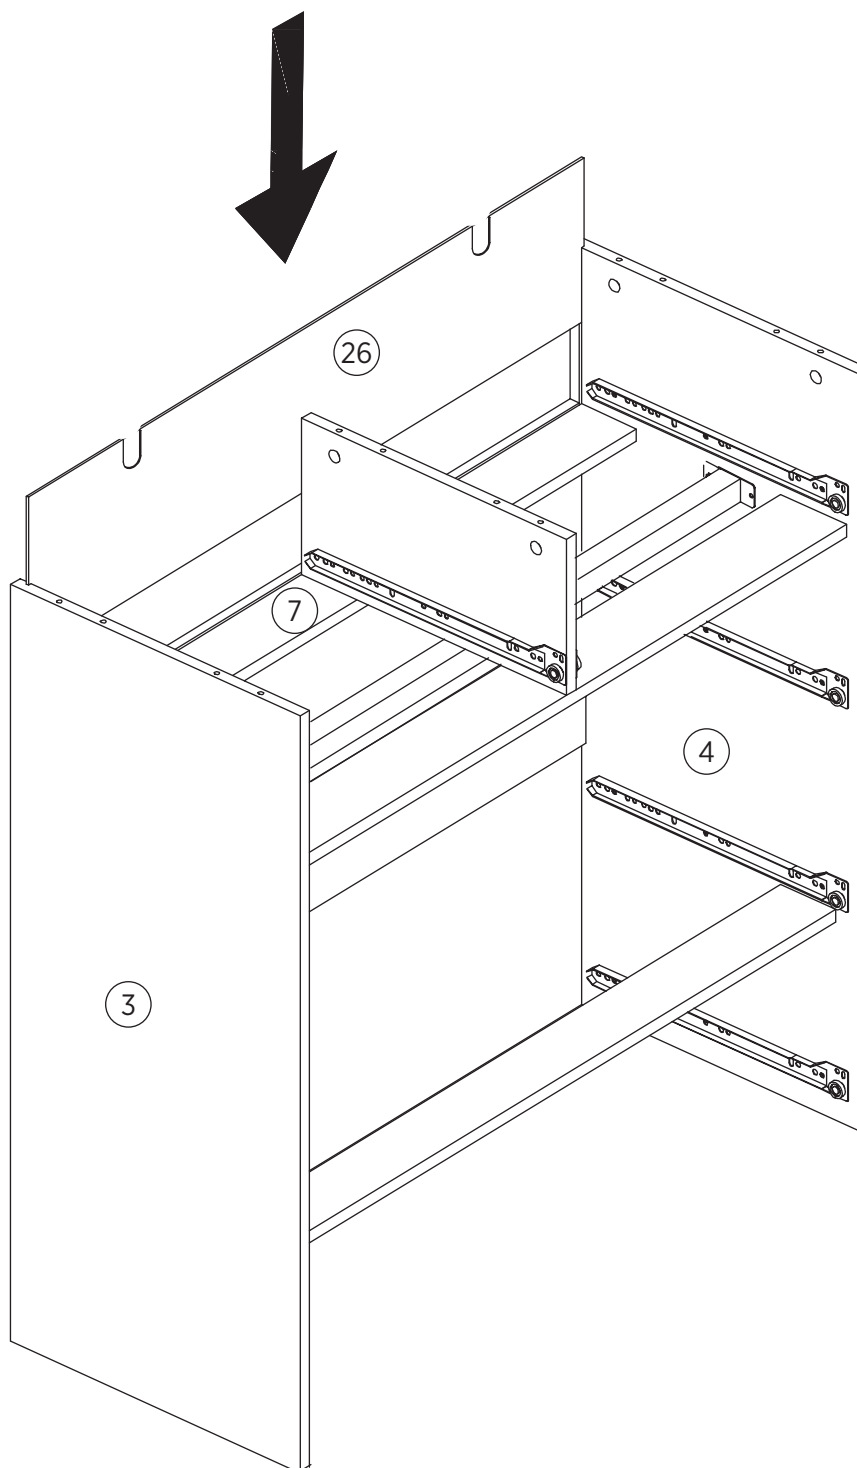

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 10

Insert wooden dowels (C) to parts 3, 4 and 5.

Insert cam locks (B) to parts 3, 4 and 5.

Fix part 1 to parts 3, 4 and 5, as shown.


Turn cam locks clockwise to tighten.

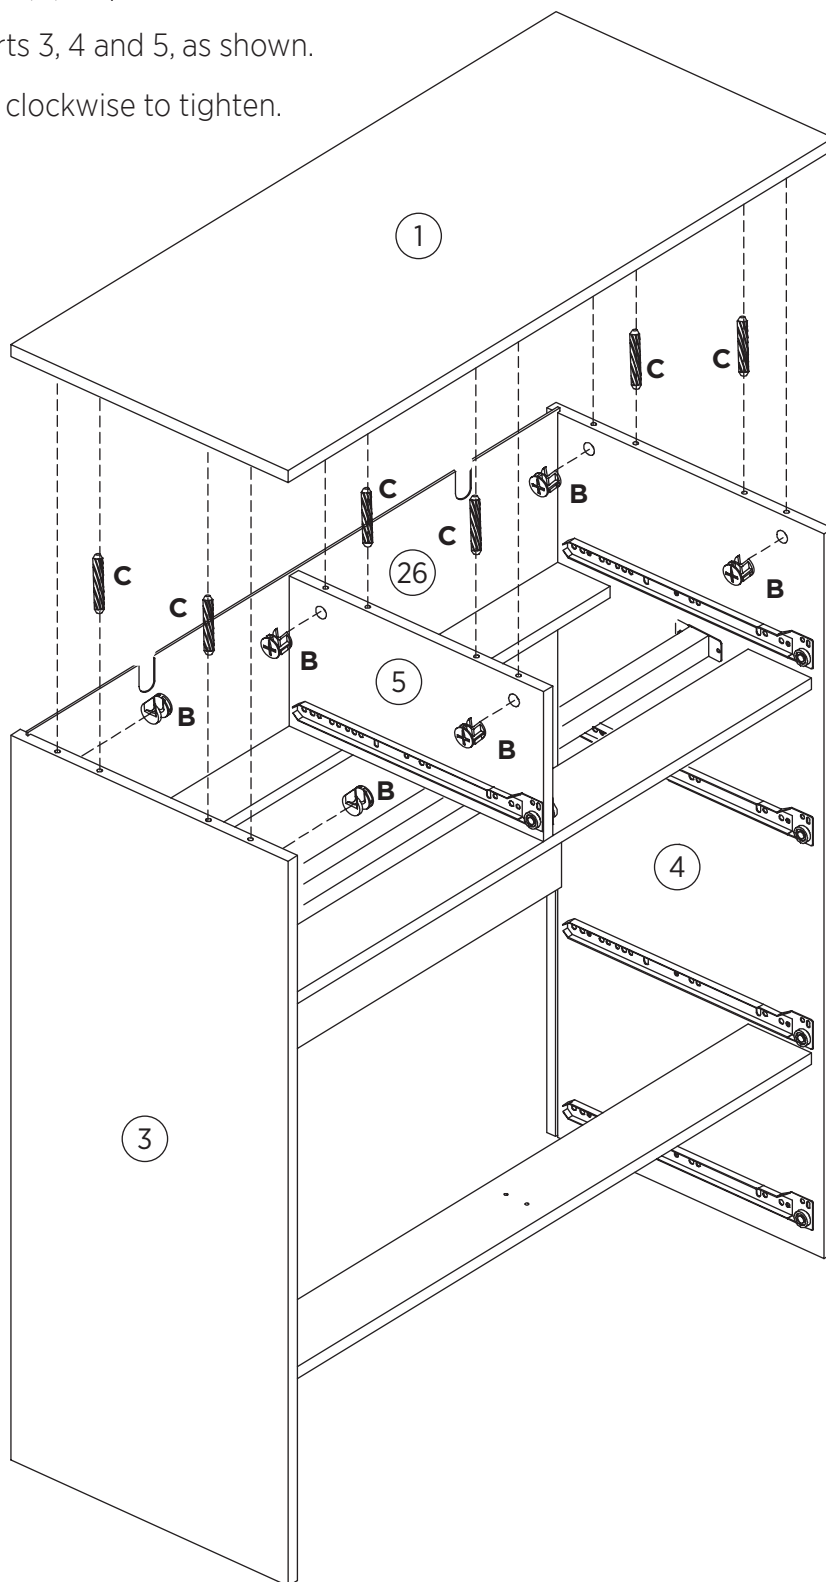

ASSEMBLY INSTRUCTIONS

STEP 11

 Insert part 10 into grooves of parts 3, 4 and 8, as shown.

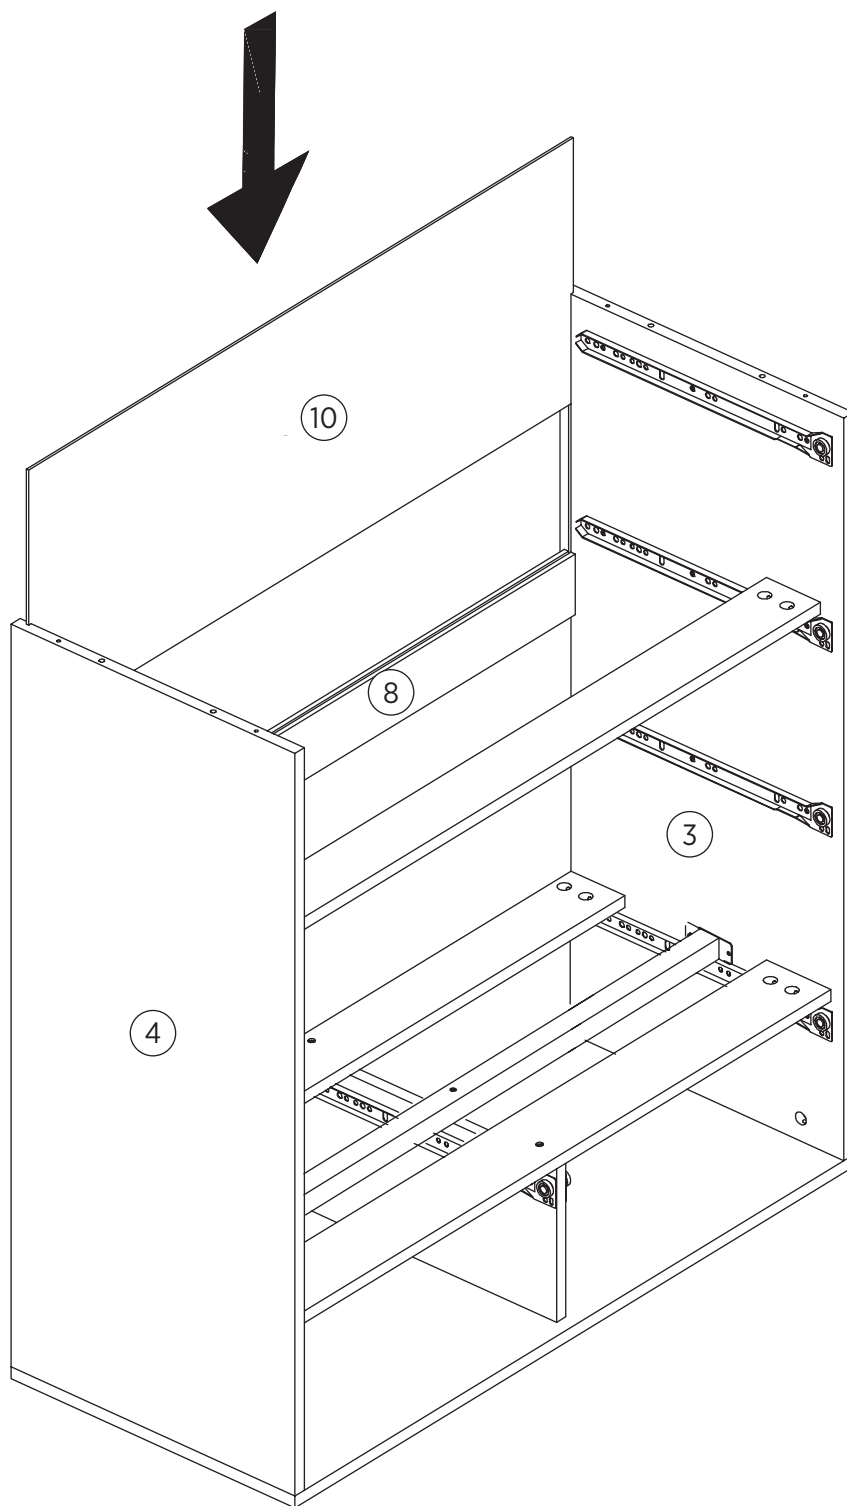

ASSEMBLY INSTRUCTIONS

STEP 12

Insert wooden dowels (C) to parts 3 and 4.

 
 
Fix part 2 to parts 3 and 4 using screws (G), as shown.



C x 4



G x 4

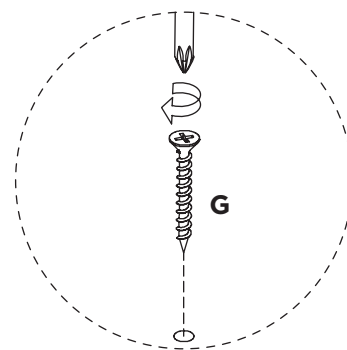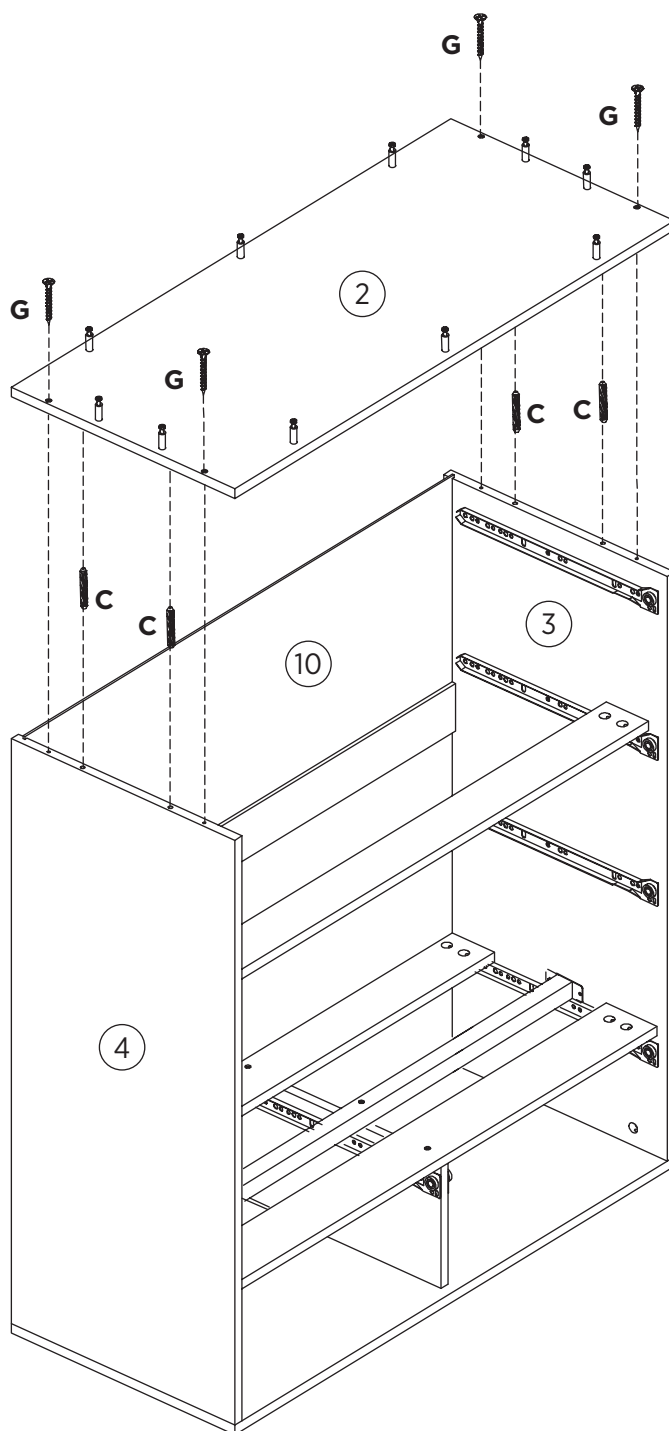




ASSEMBLY INSTRUCTIONS

STEP 13

Insert cam locks (B) to parts 14 and 15.

Fix parts 14 and 15 to part 2, as shown.

 
 
 
Turn cam locks clockwise to tighten.

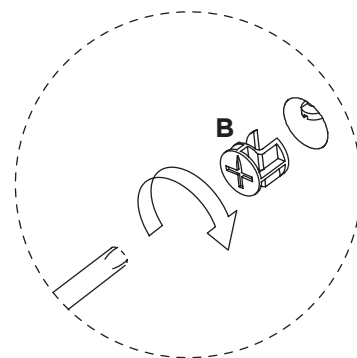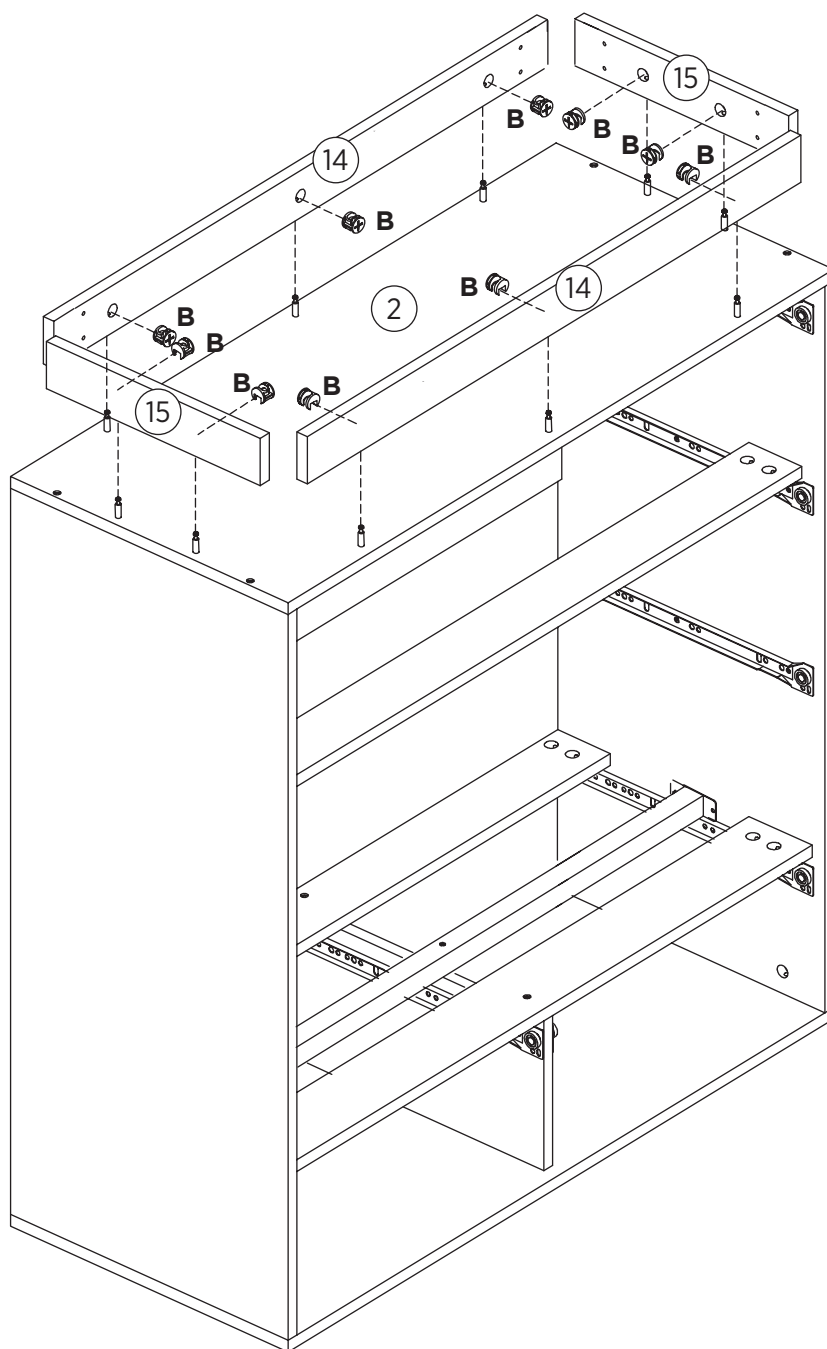

ASSEMBLY INSTRUCTIONS

STEP 14



 
 
 
Fix parts 12 to parts 14 and 15 using screws (F), as shown.

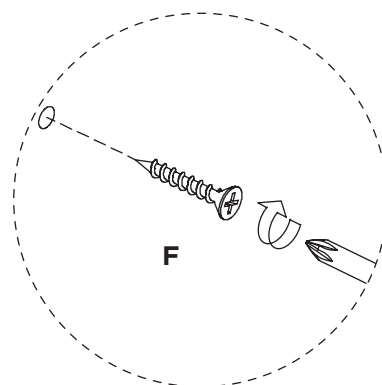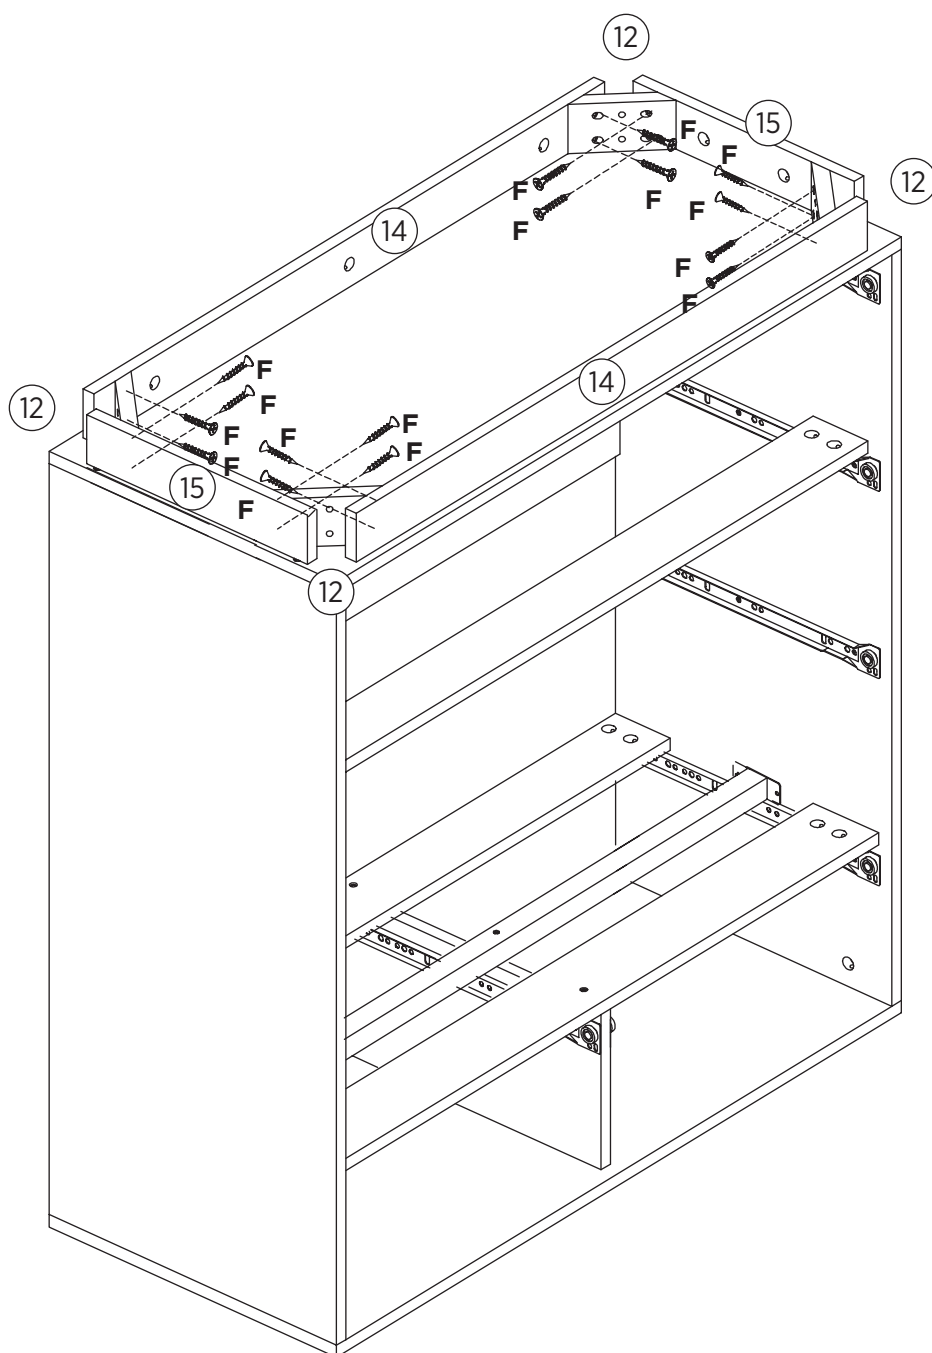

ASSEMBLY INSTRUCTIONS

STEP 15

     Fix parts 13 to parts 12 using washers (K), spacers (J), bolts (L) and allen key (M), as shown.

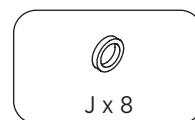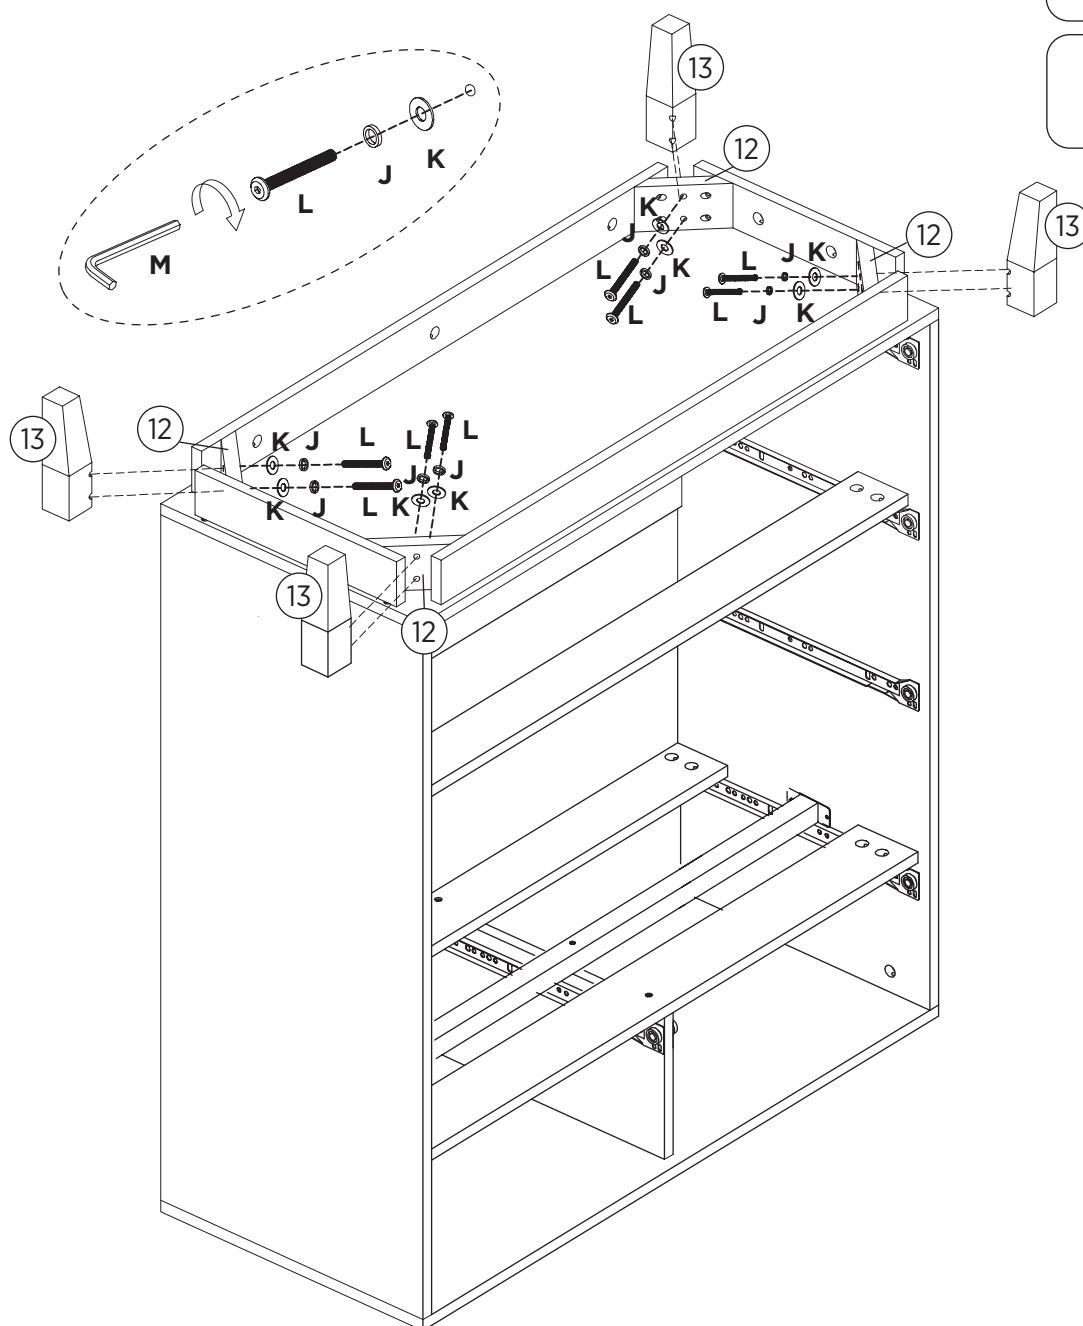





ASSEMBLY INSTRUCTIONS

STEP 16

Fix outer drawer runners (DL) and (DR) to parts 19 and 20 using screws (D), as shown.

WARNING

    The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

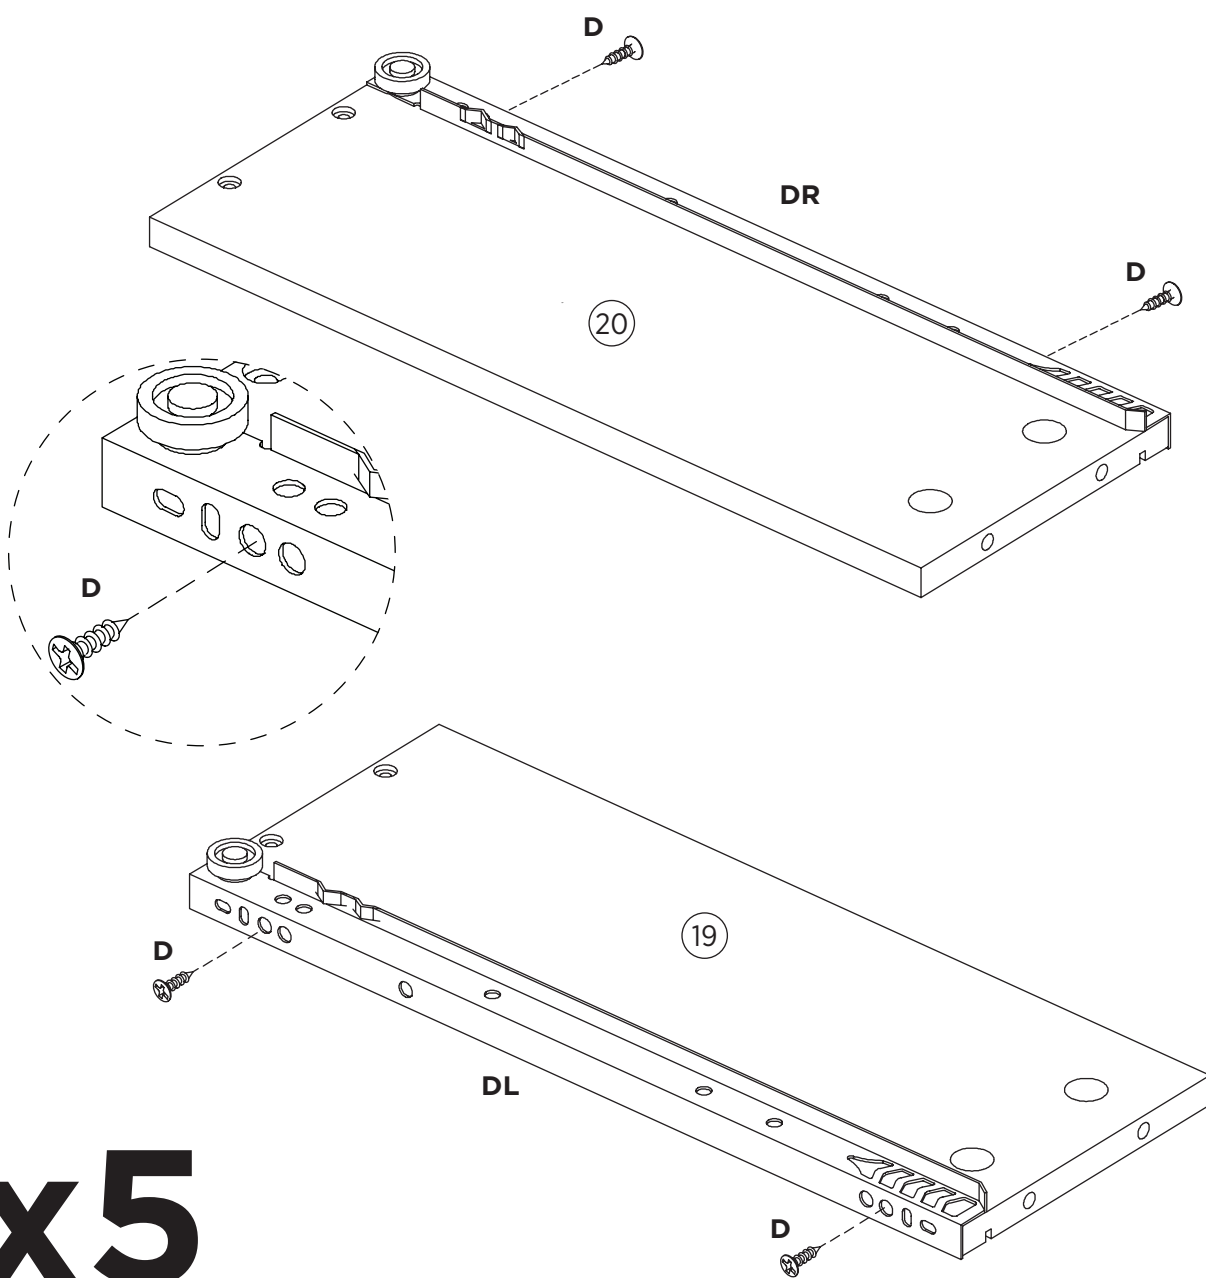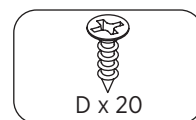


x5

ASSEMBLY INSTRUCTIONS

STEP 17

Insert quickfit screws (A) to parts 16 and 17.

 Fix handles (I) to parts 16 and 17 using screws (D), as shown.




A x 8



D x 4



 I x 2



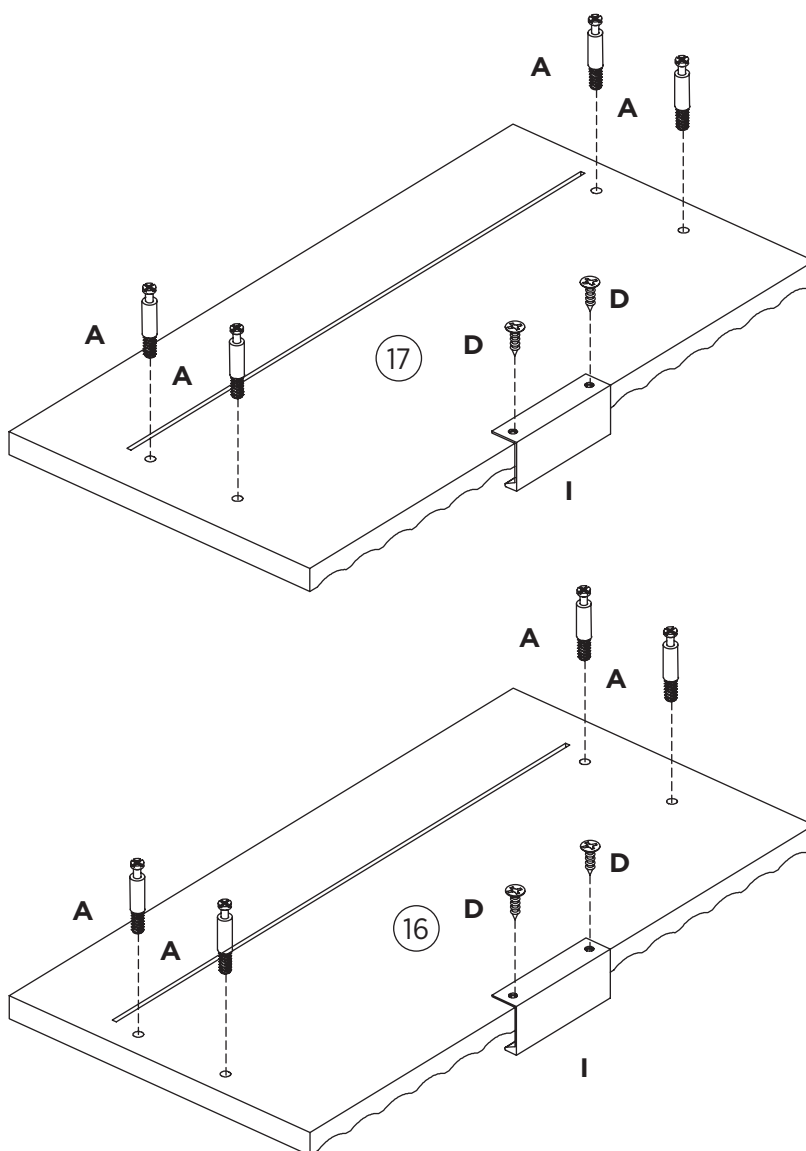


ASSEMBLY INSTRUCTIONS

STEP 18

Insert quickfit screws (A) to parts 18.

   Fix handles (I) to parts 18 using screws (D), as shown.

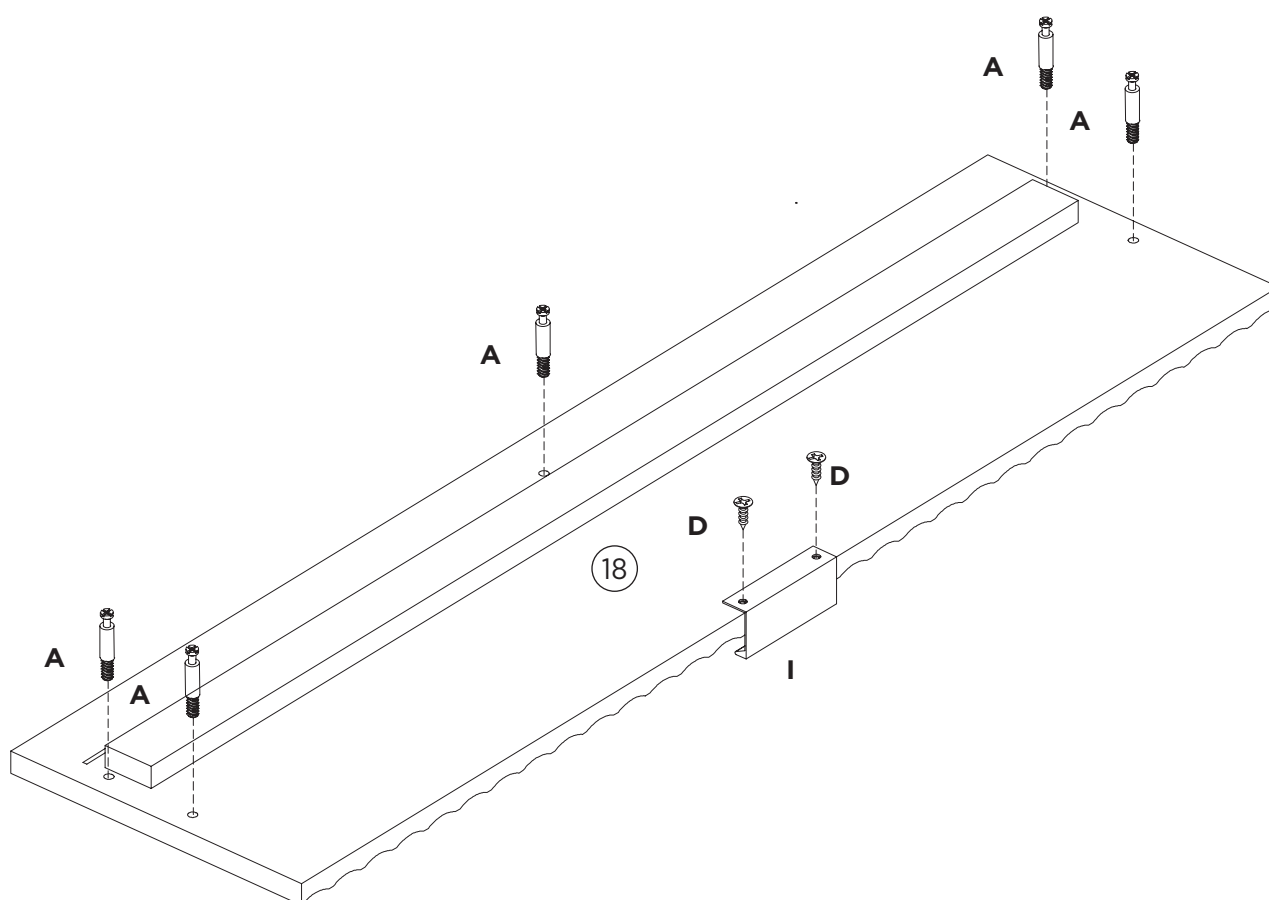
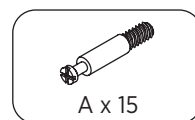


x3

ASSEMBLY INSTRUCTIONS

STEP 19

  Attach parts 19 and 20 to part 21 using screws (G), as shown.

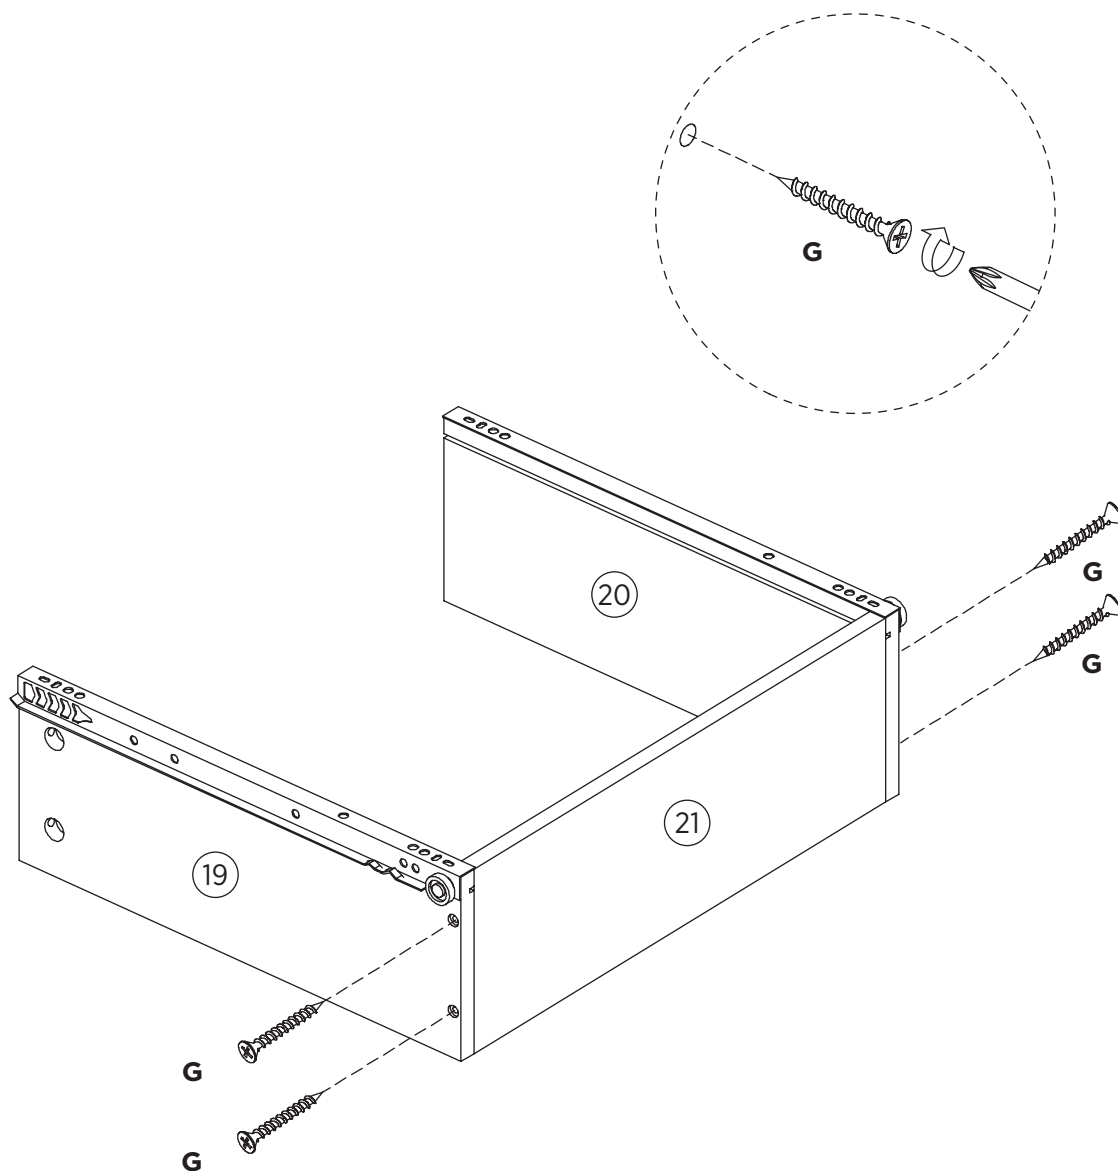
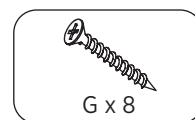


x2

ASSEMBLY INSTRUCTIONS

STEP 20

  Attach parts 19, 20 and 25 to part 23 using screws (G), as shown.

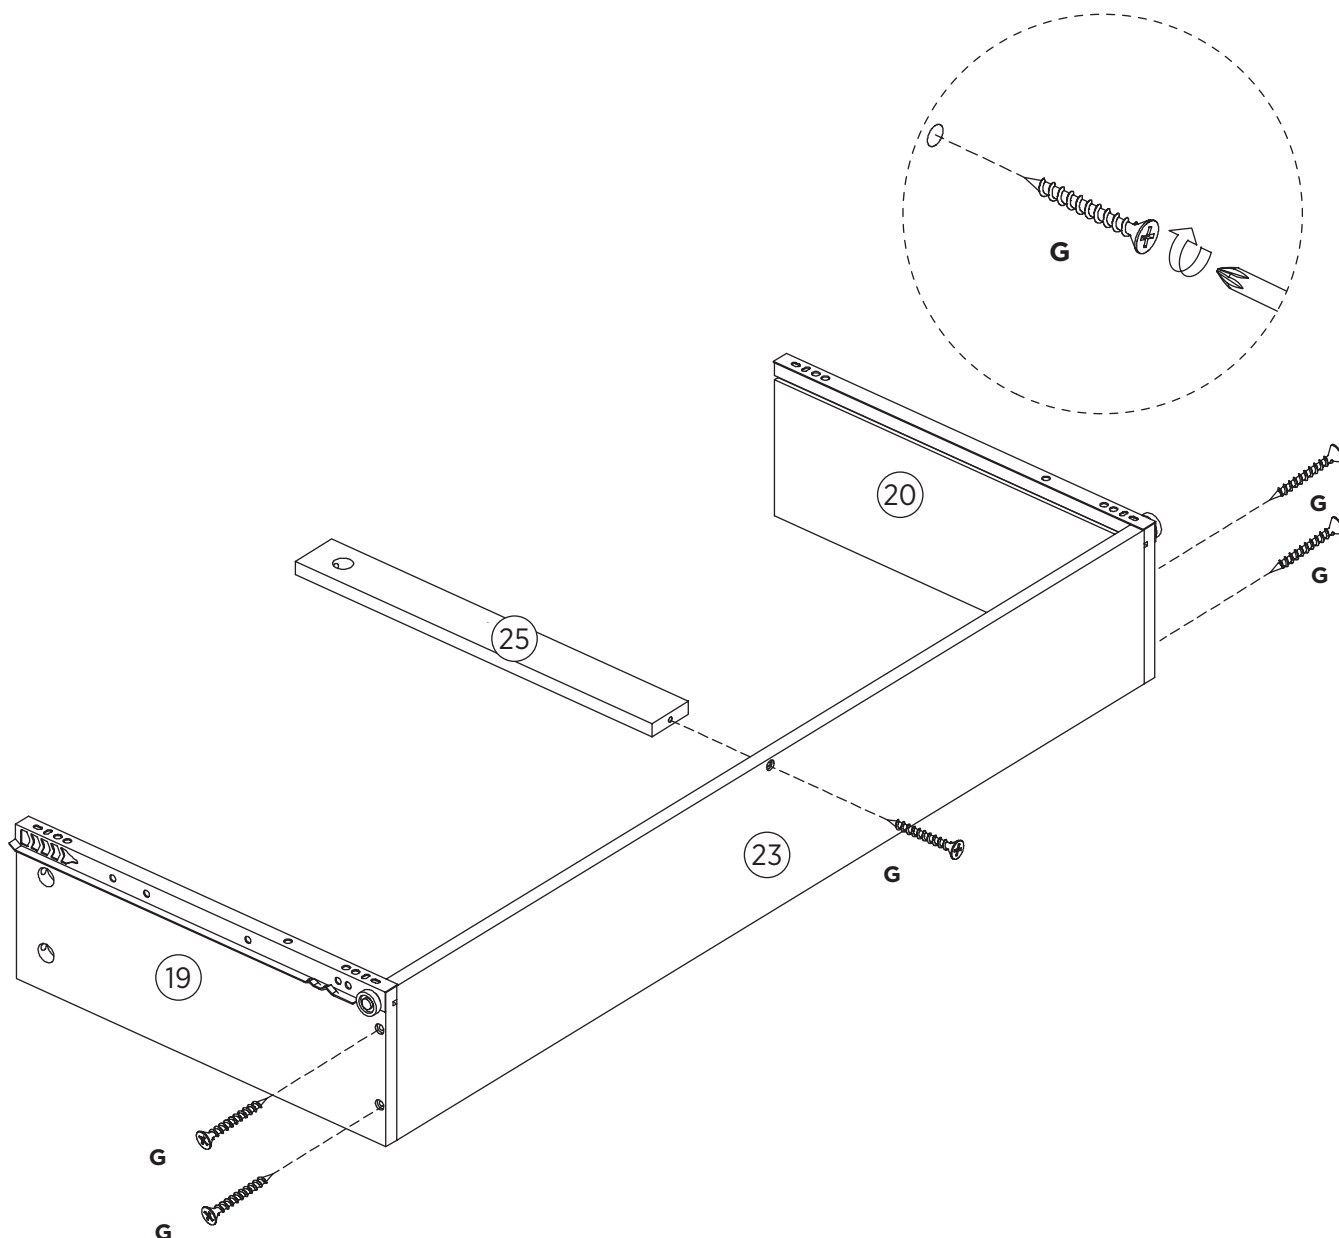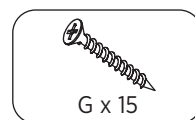


x3

ASSEMBLY INSTRUCTIONS

STEP 21

 Insert parts 22 into grooves of parts 19 , 20 and 21, as shown.

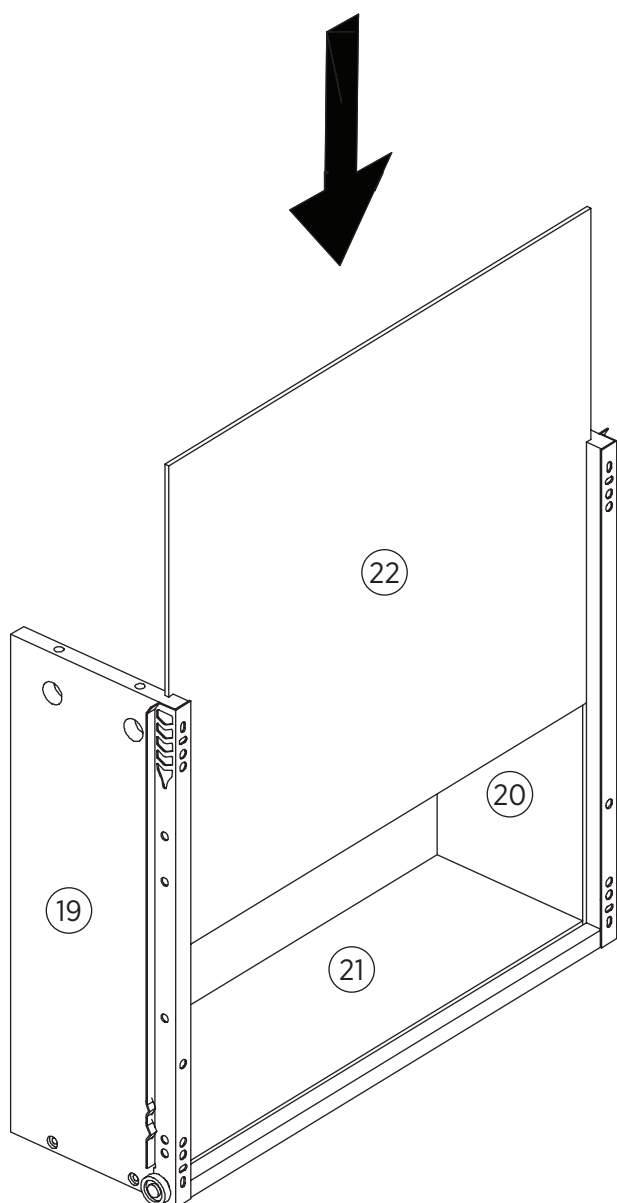


x2

ASSEMBLY INSTRUCTIONS

STEP 22

 Insert parts 24 into grooves of parts 19 , 20 and 23, as shown.

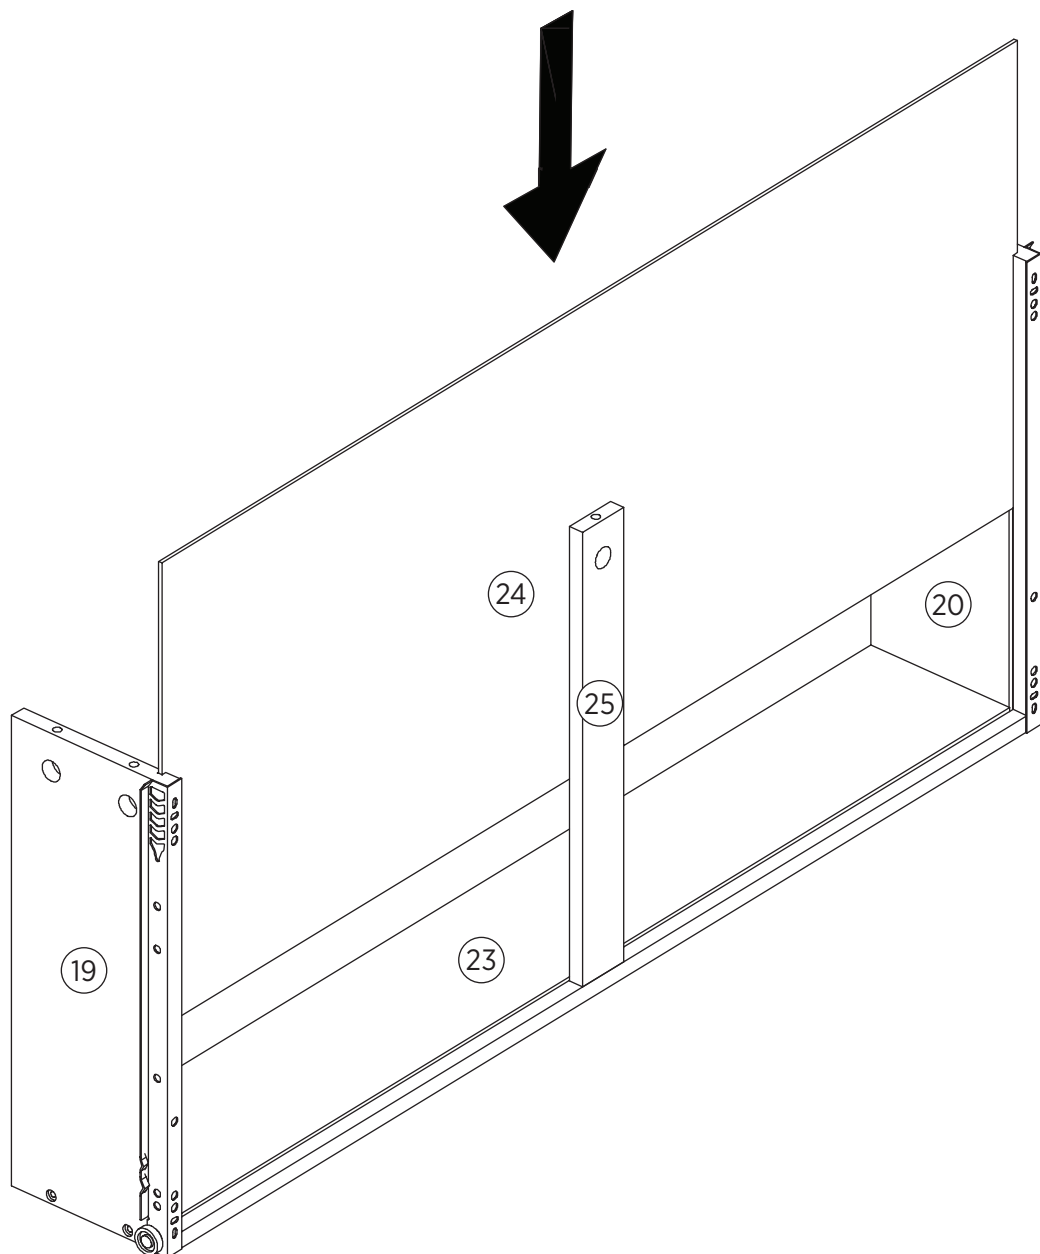

x3

 
ASSEMBLY INSTRUCTIONS

STEP 23

Insert cam locks (B) to parts 19 and 20.

Fix parts 16 and 17 to parts 19 and 20, as shown.

Turn cam locks clockwise to tighten.

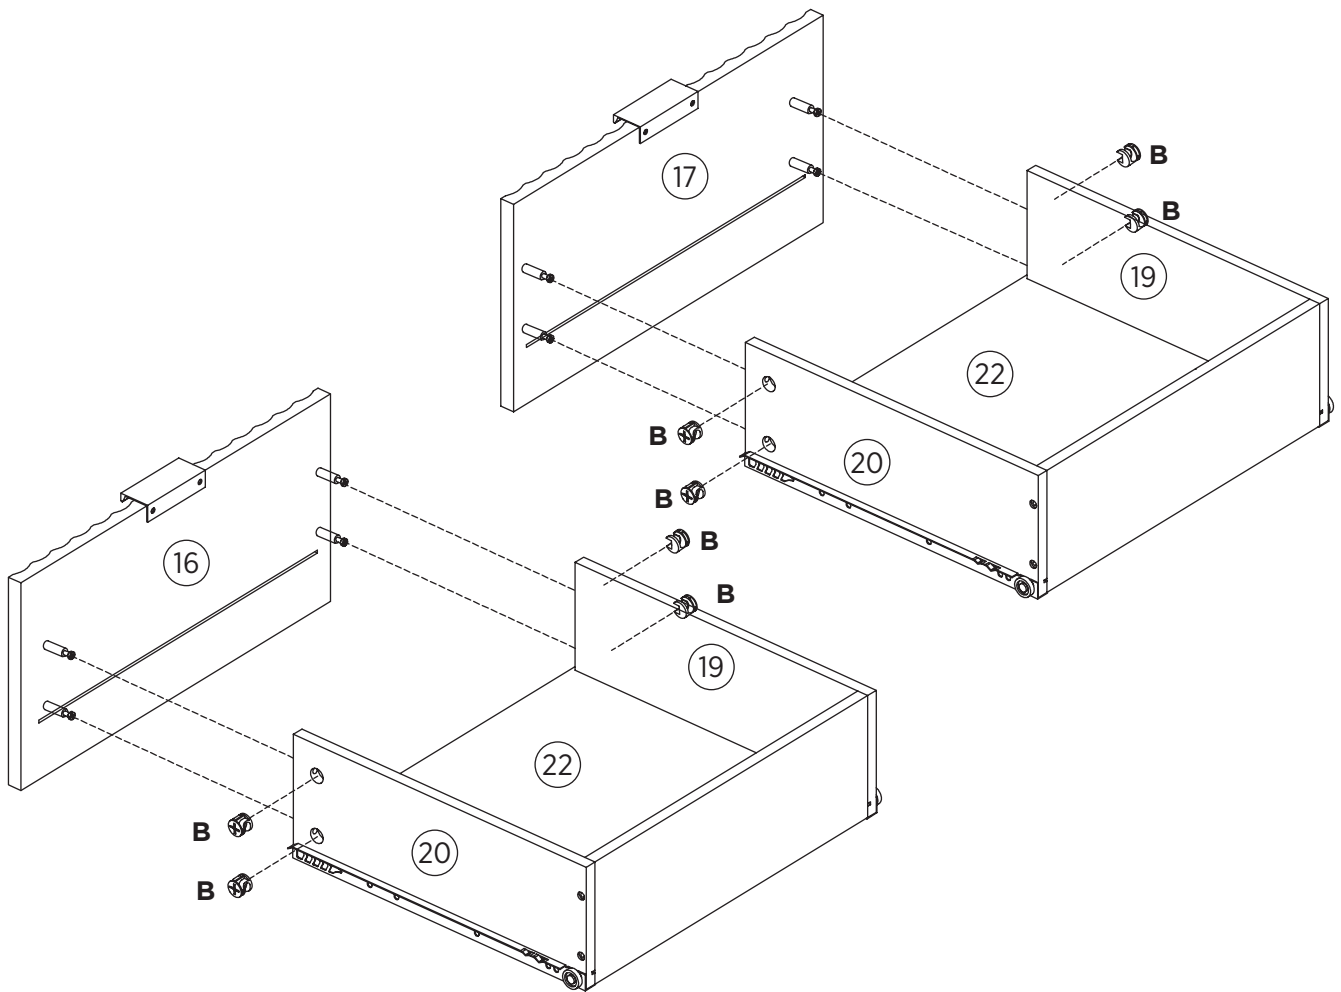



ASSEMBLY INSTRUCTIONS

STEP 24

Insert cam locks (B) to parts 19, 20 and 25.

Fix parts 18 to parts 19, 20 and 25, as shown.

  Turn cam locks clockwise to tighten.


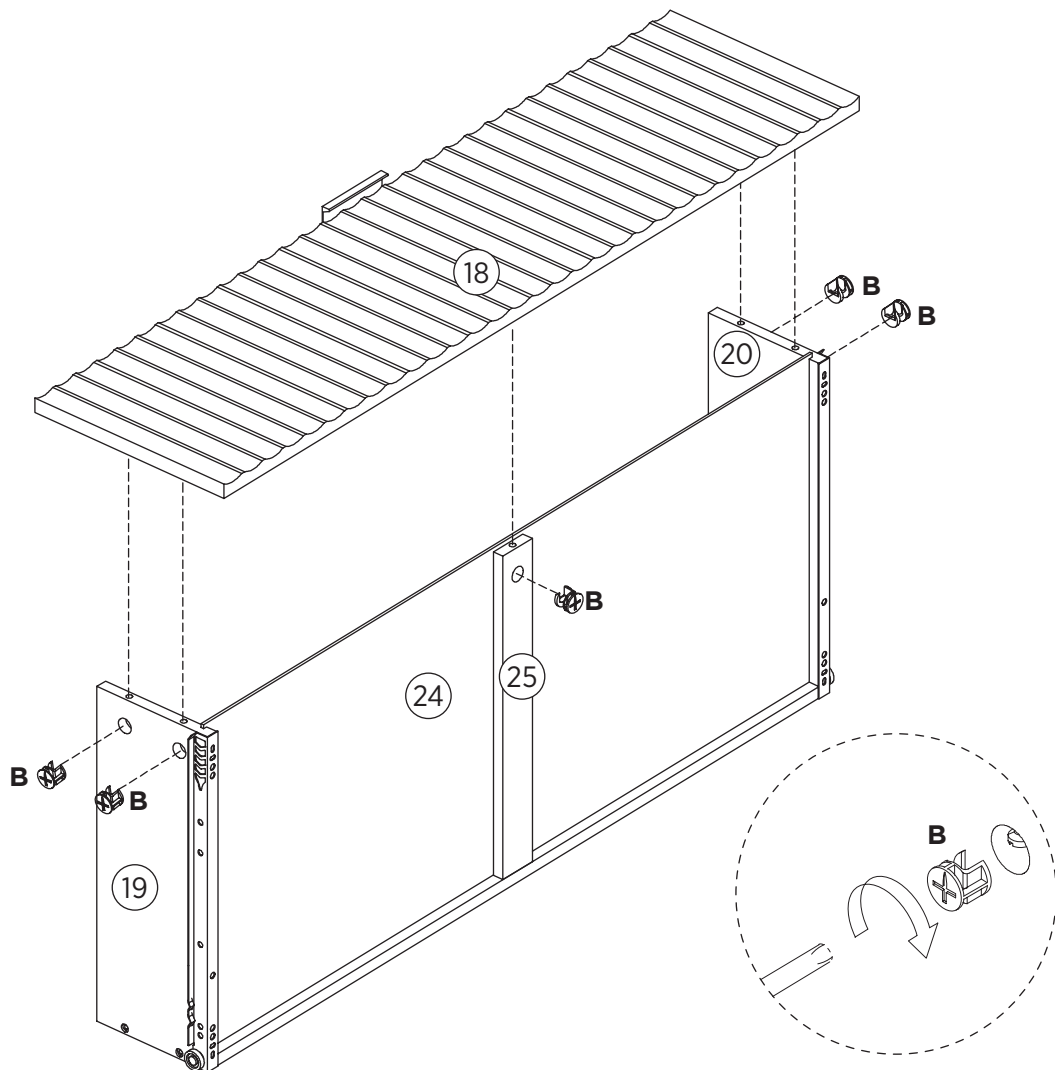
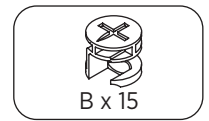


x3

ASSEMBLY INSTRUCTIONS

STEP 25

   Fix wedges (H) to parts 10, 11 and 26 using screws (E), as shown.

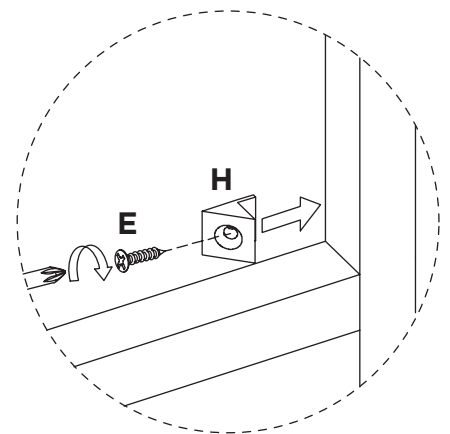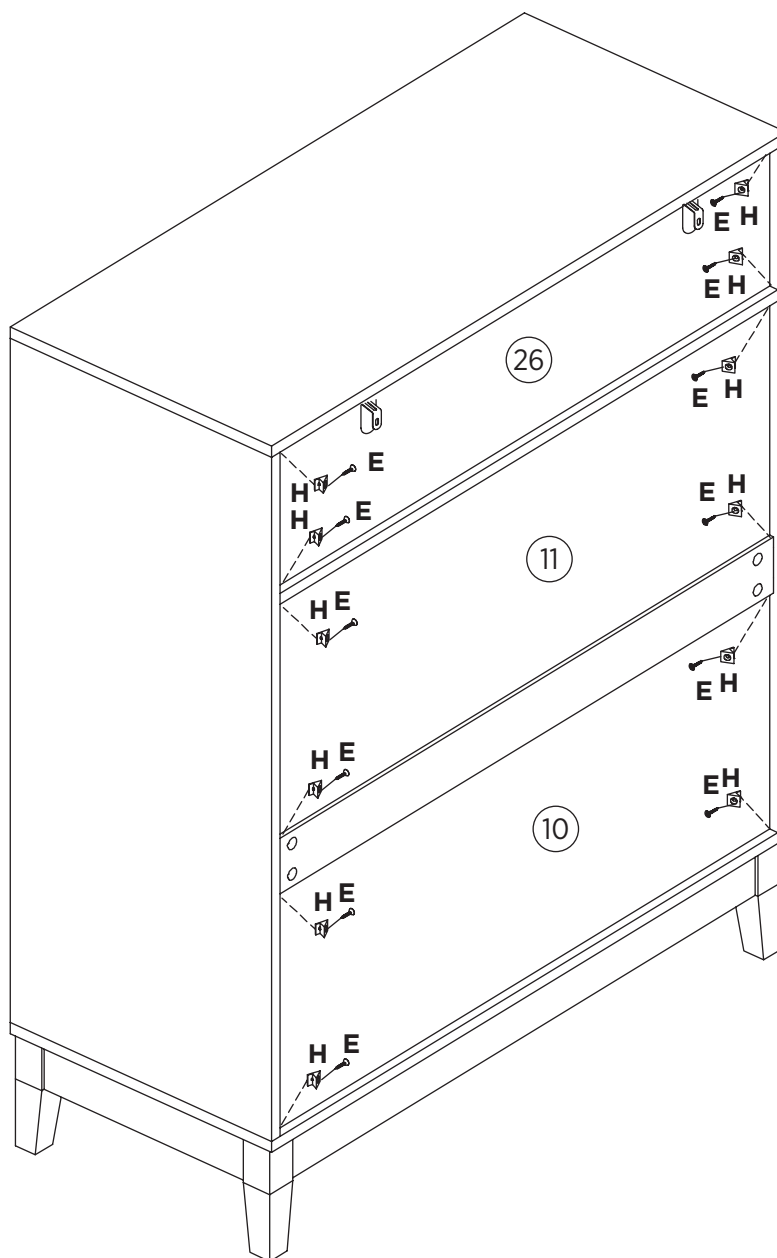

ASSEMBLY INSTRUCTIONS

 
STEP 26

For extra stability, you must fix your Chest to the wall using the additional hardware (P and G).

Screw (G) is fixed through the wall strap (O) and into the wall plug (P), as shown.

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your Chest.

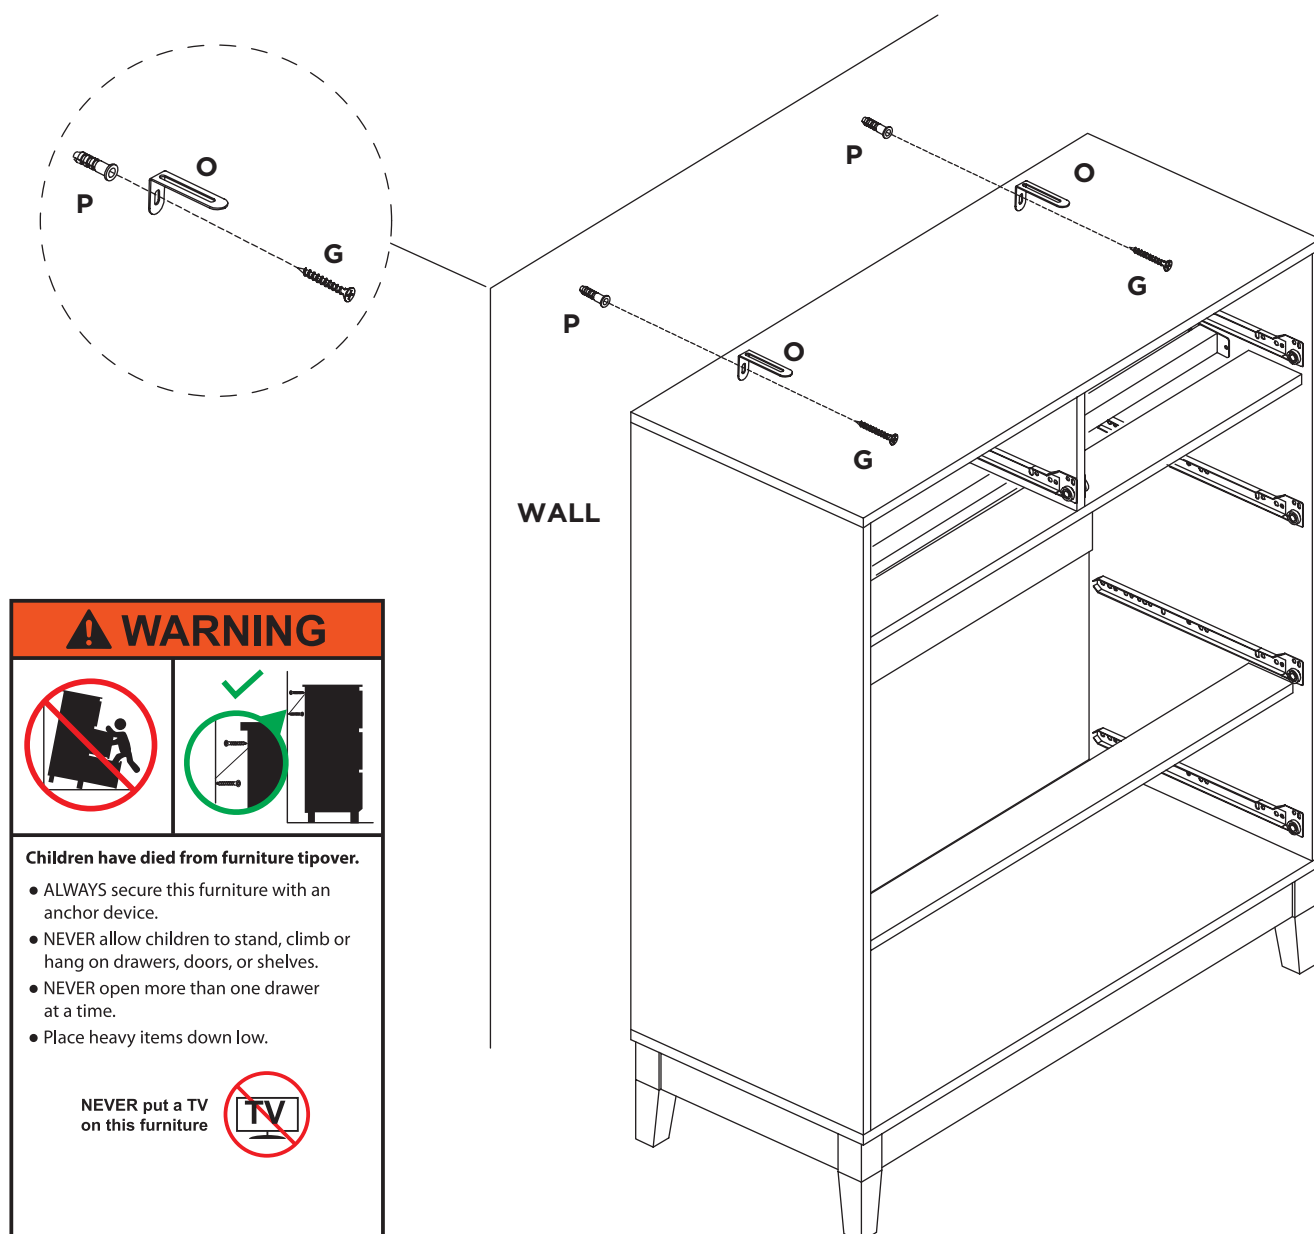

**WARNING**



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

 
NEVER put a TV on this furniture



ASSEMBLY INSTRUCTIONS


STEP 27

Insert drawers to the assembled unit, as shown.

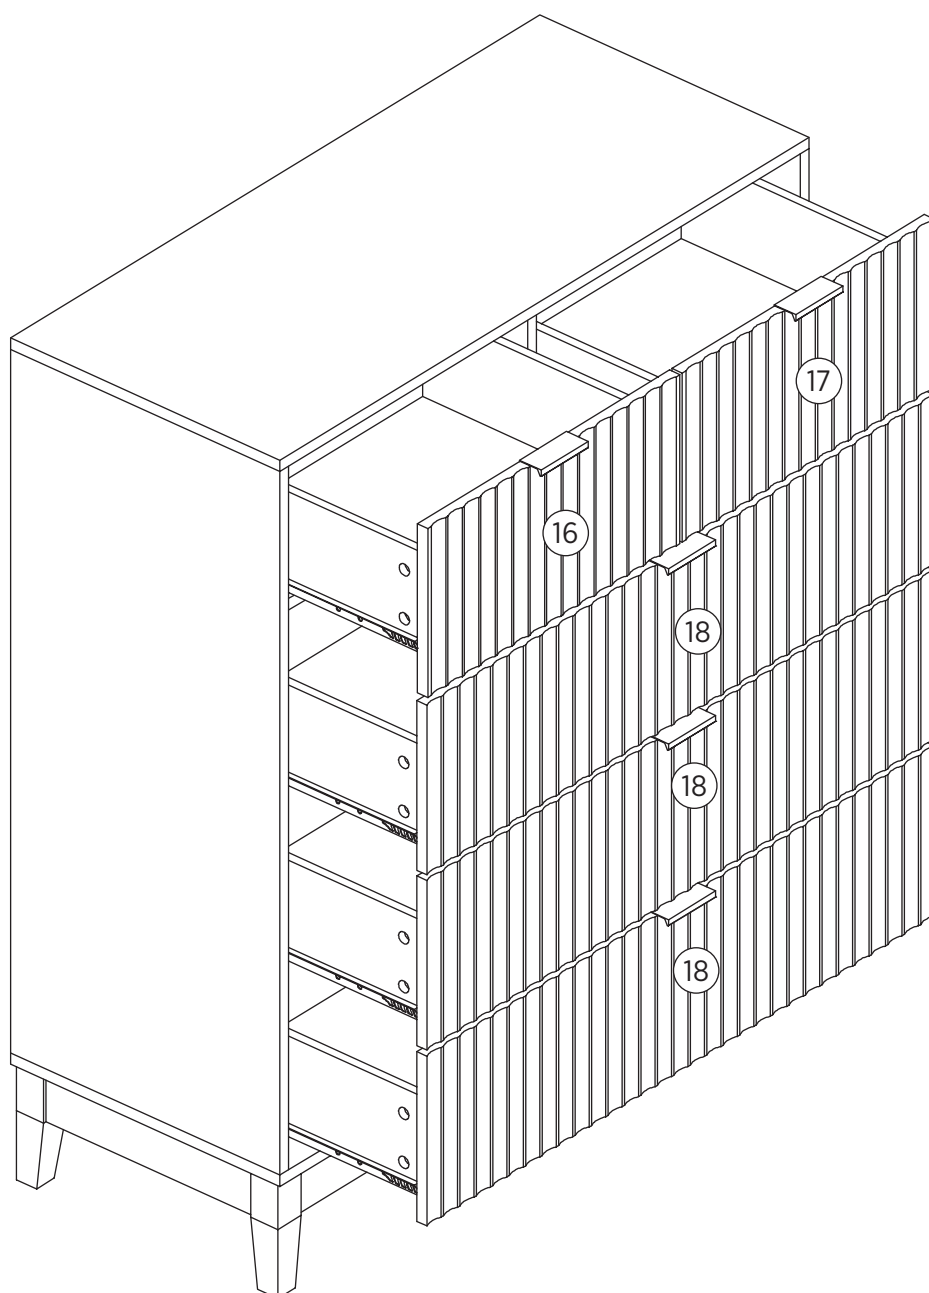

ASSEMBLY INSTRUCTIONS

 STEP 28

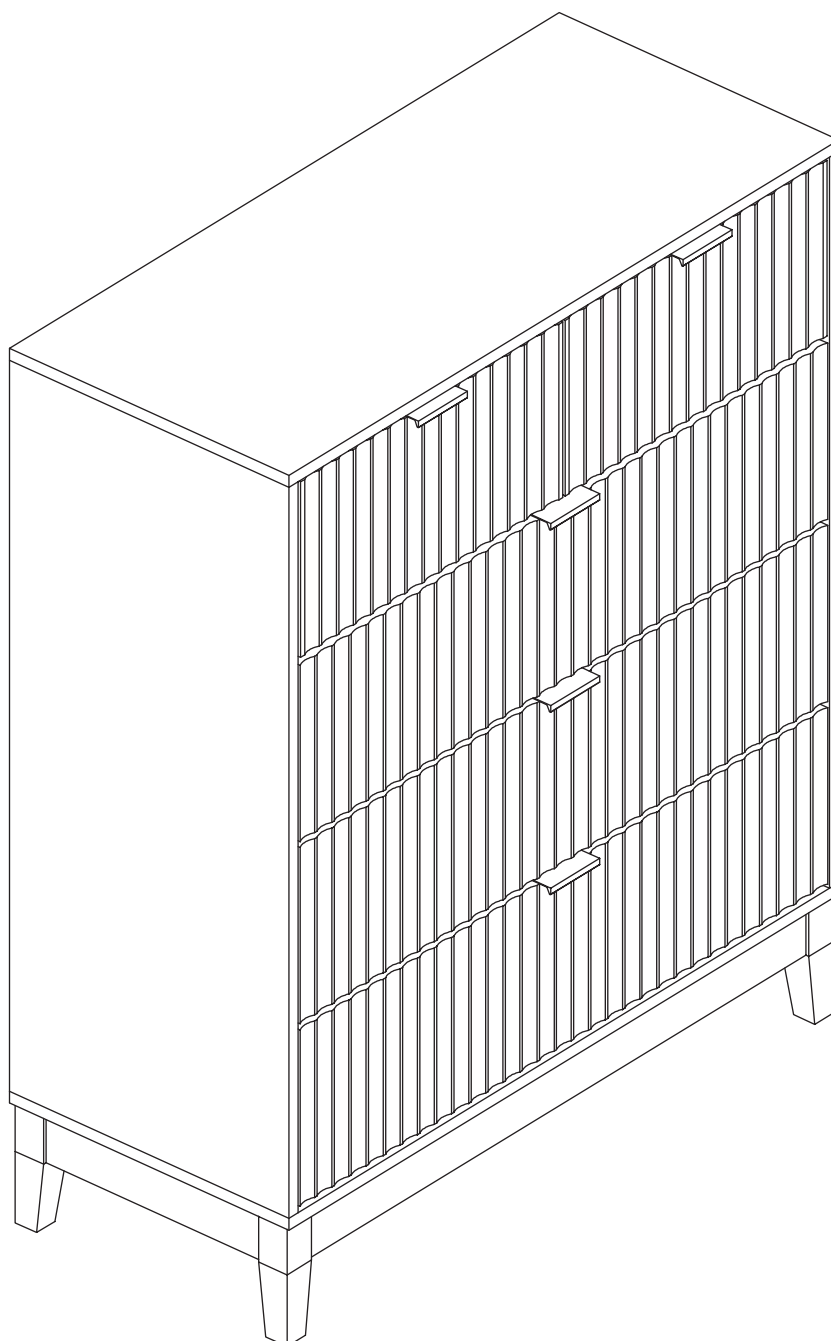

Maximum recommended weight is 15kgs on top and 5kgs on each drawer.

Your chest of 5 drawers is ready for use

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

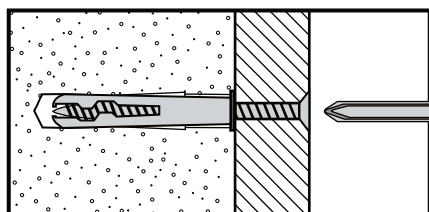


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

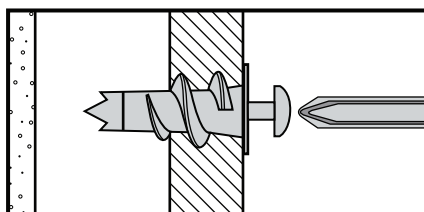


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

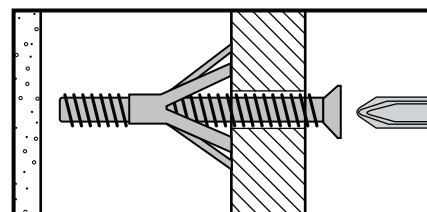


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

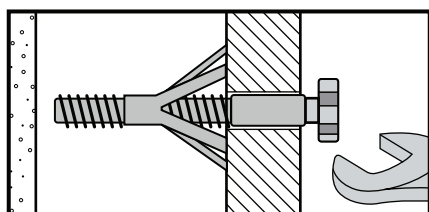


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

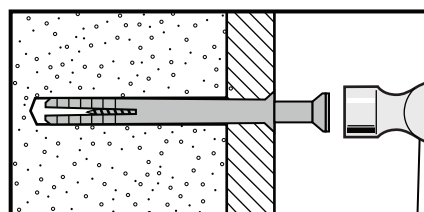

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

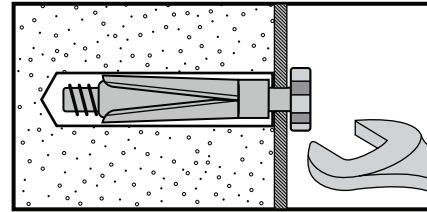

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.