 




# TALL CABINET 4 DOORS

## ASSEMBLY INSTRUCTIONS

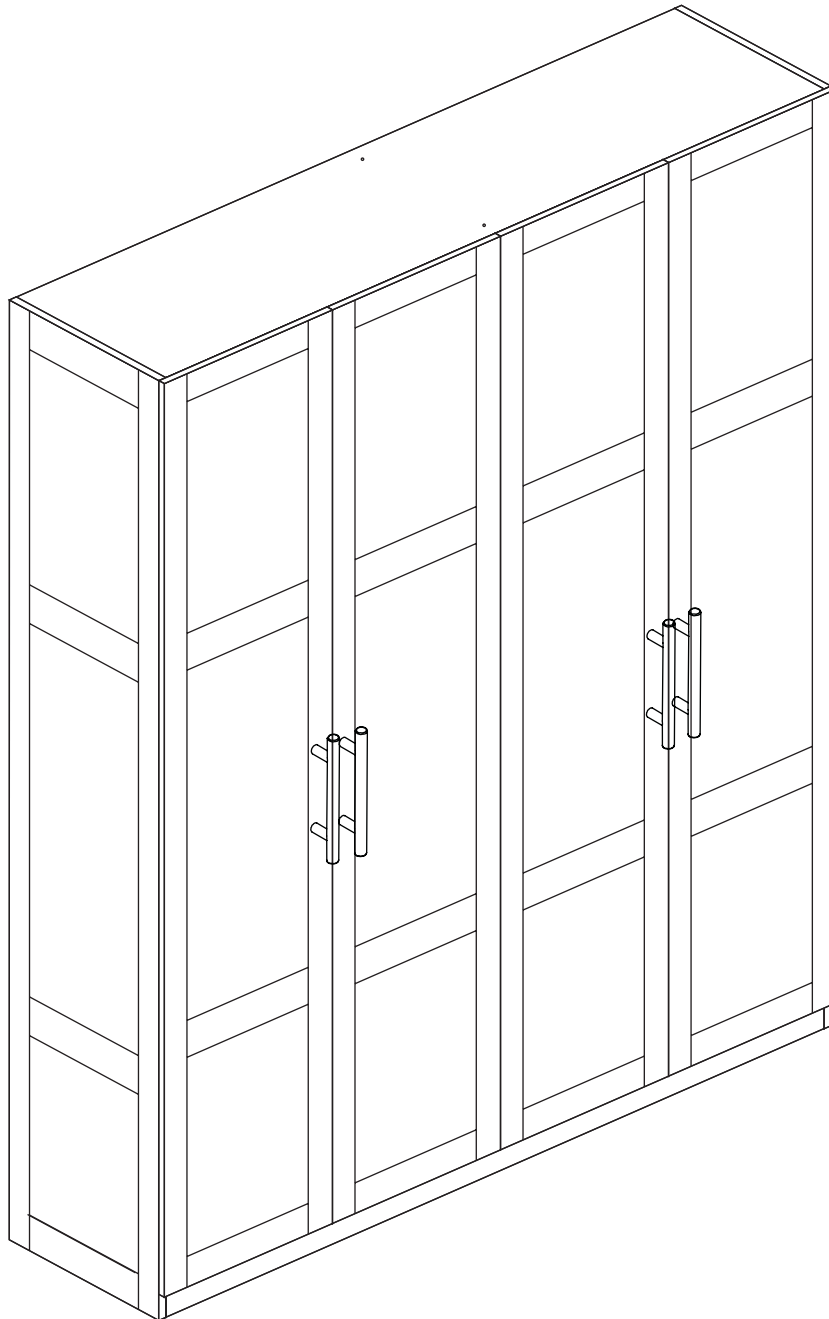

# TIPS BEFORE YOU START

---

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

## CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

## ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver, flat head screwdriver and hammer.
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

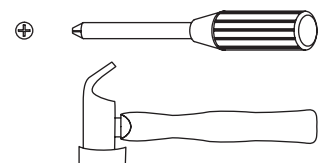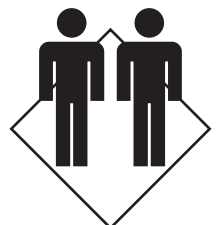

# ANTI-TOPPLING WARNING

## CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

**For more information, visit <https://www.productsafety.gov.au>**

 **WARNING**

	
--	---

**Children have died from furniture tipover.**

 
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER** put a TV on this furniture 

# USING CAM LOCK AND QUICKFIT


## QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

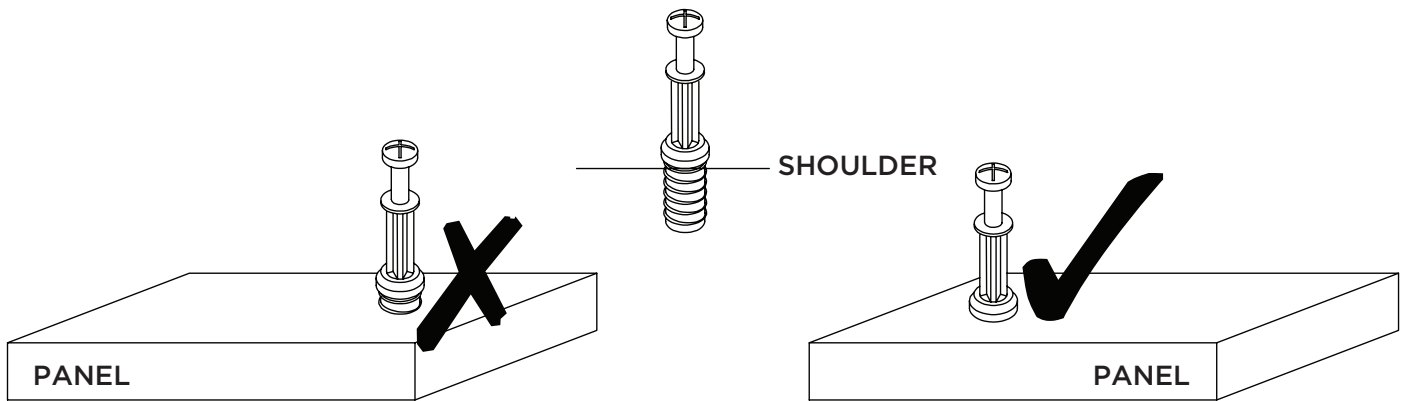


## CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

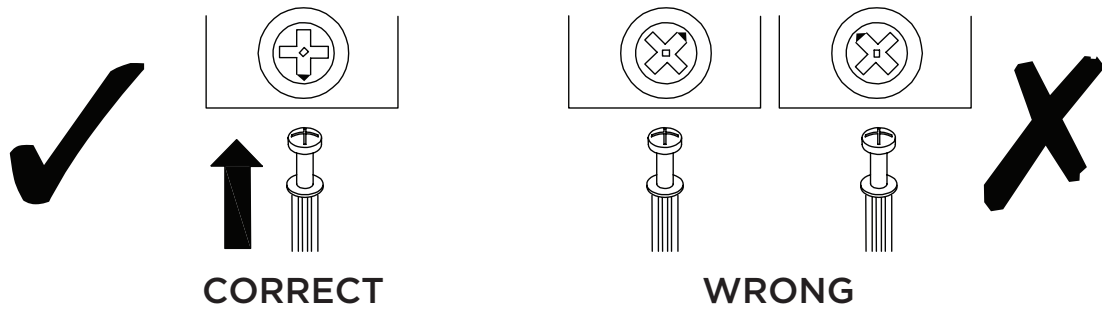


Quickfit head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

 Turn cam lock clockwise to tighten.

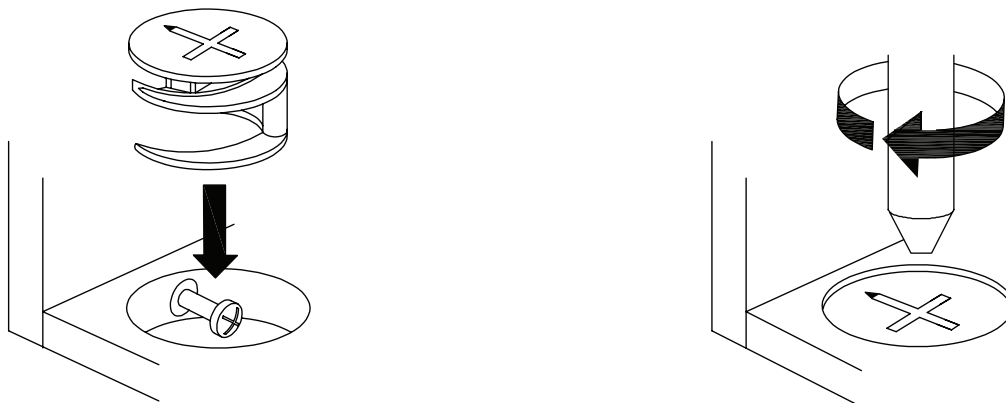


# HARDWARE LIST

 
---




40 x A  
Quickfit Screw

 


40 x B  
Cam Lock

 


30 x C  
Wooden Dowel

 


16 x D  
Shelf Support

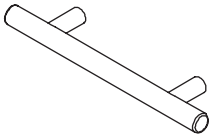 


4 x E  
Handle

 


72 x F  
Screw

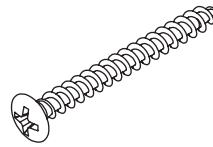 


9 x G  
Screw

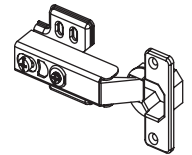 


6 x H  
Hinge

 

36 x I  
Nail

 


6 x J  
Hinge

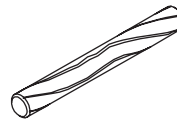 


4 x K  
Long Wooden Dowel



 
2 x L  
Screw

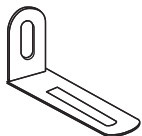


2 x M  
Wall Bracket

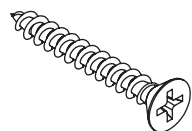 


4 x N  
Screw

 

2 x O  
Wall Plug

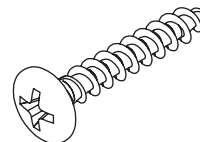 


8 x P  
Screw

 


15 x Q  
Screw

# PARTS LIST

 
---




**1**  
1 PC

 


**2**  
1 PC

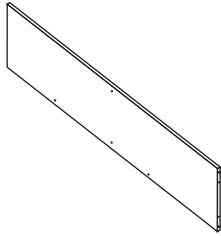 


**3**  
1 PC

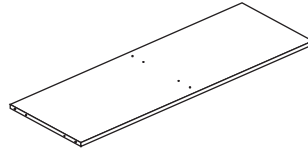 


**4**  
1 PC

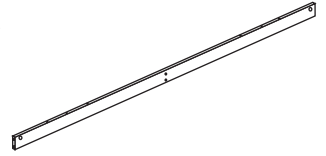 


**5**  
2 PCS

 


**6**  
1 PC

 


**7**  
1 PC

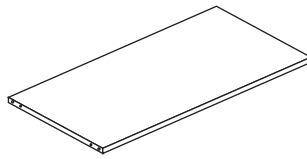 

**8**  
4 PCS

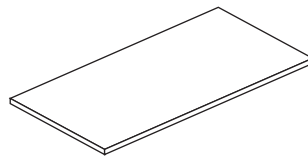 

**9**  
4 PCS

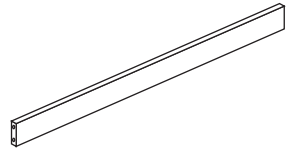 

**10**  
2 PCS



**11**  
2 PCS



**12**  
4 PCS



**13**  
4 PCS

# ASSEMBLY INSTRUCTIONS

 
 
 
## STEP 1

Insert quickfit screws (A) to parts 5.

Insert cam locks (B) to part 6

Attach parts 5 to part 6, as shown.

Turn cam locks clockwise to tighten.

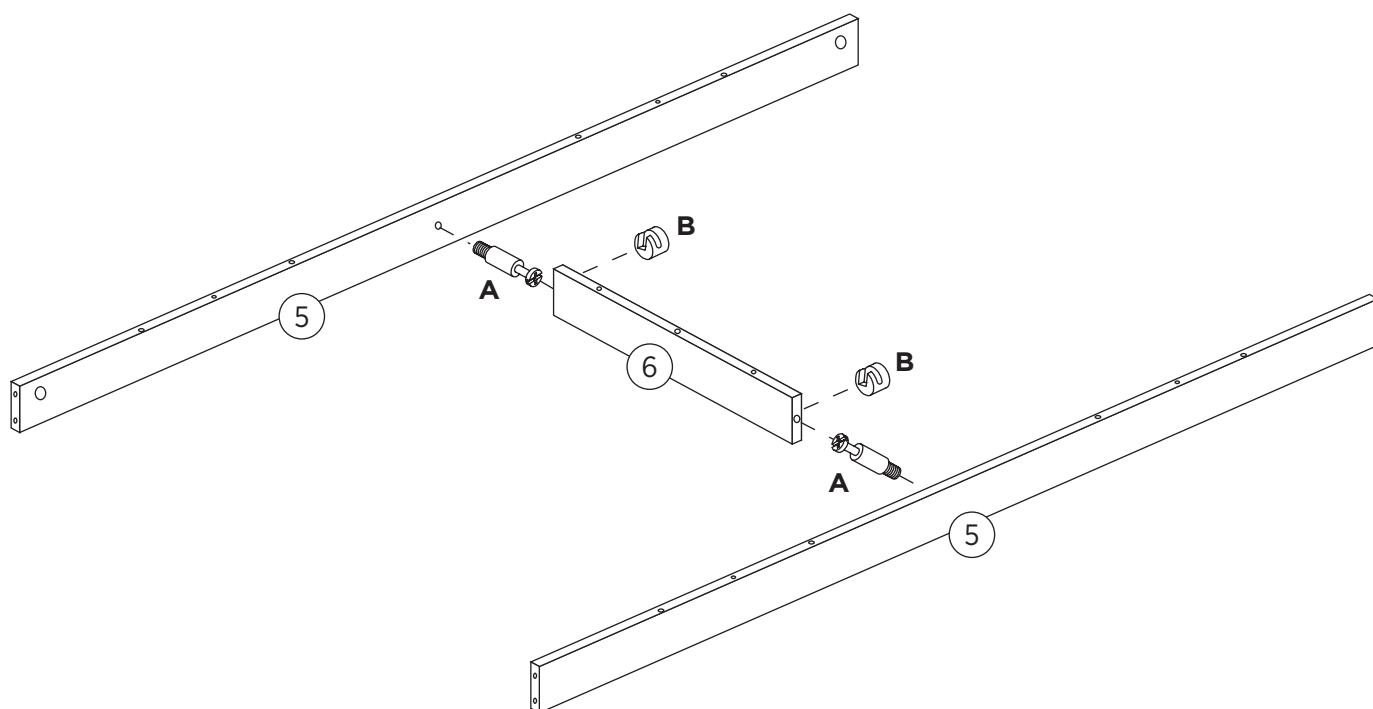




# ASSEMBLY INSTRUCTIONS

## STEP 2

Insert wooden dowels (C) to parts 5 and 6.

   Fix part 4 to parts 5 and 6 using screws (G), as shown.

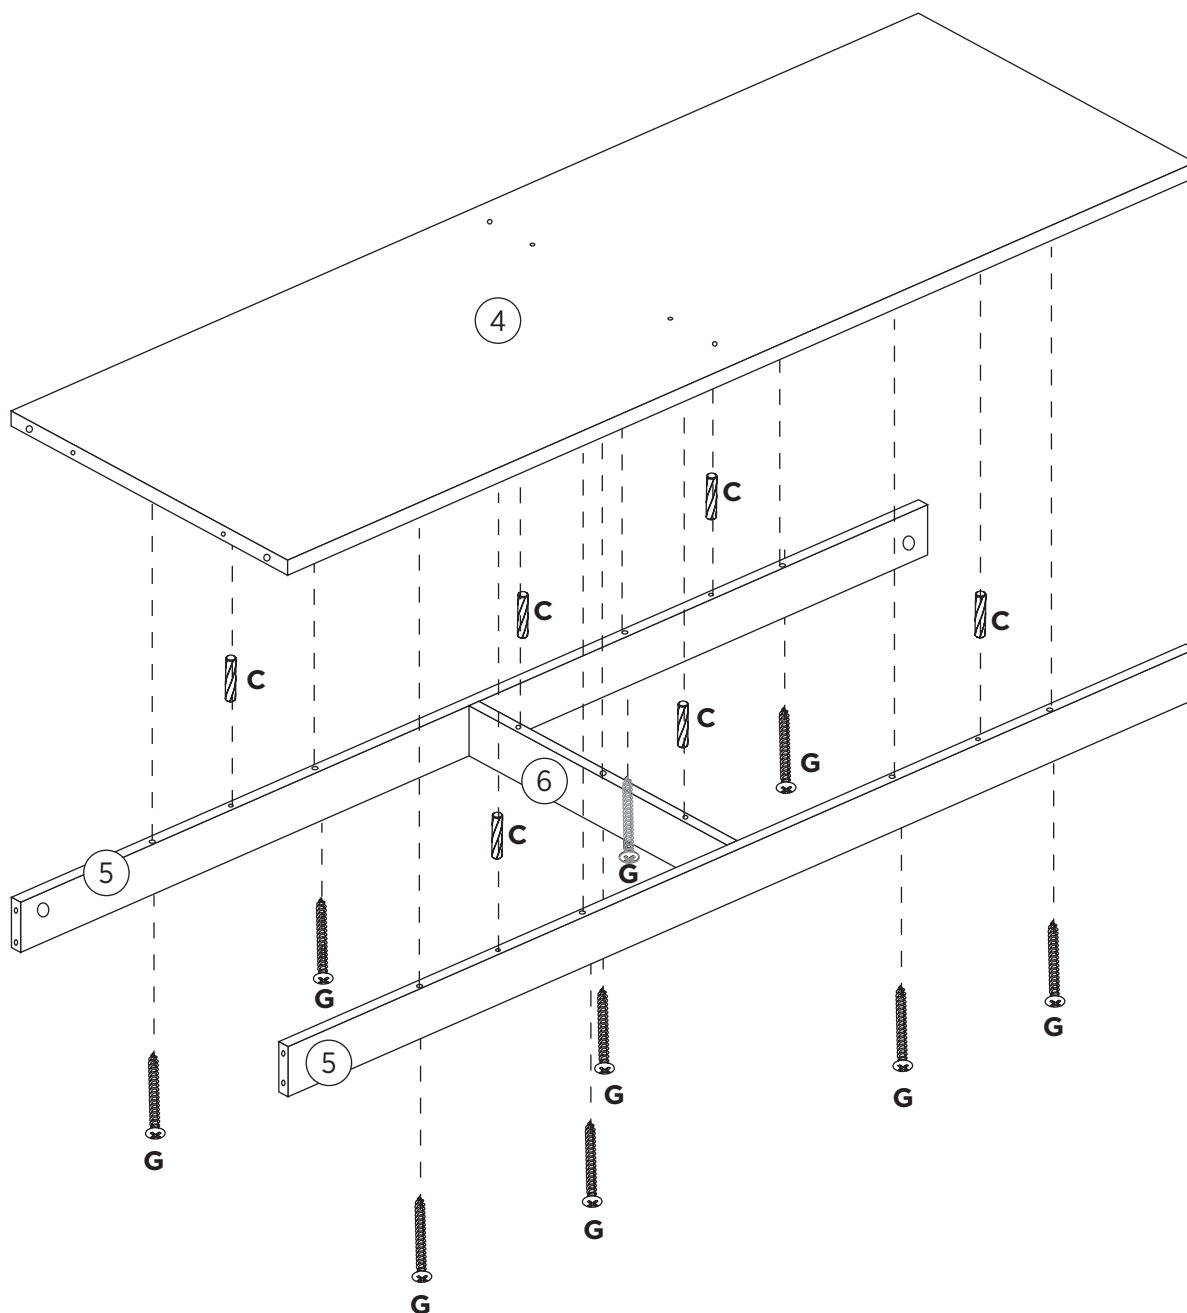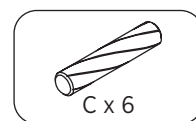

# ASSEMBLY INSTRUCTIONS

## STEP 3

Insert quickfit screws (A) to part 7.

 
 
 
Insert camlocks (B) to parts 8 and 10.

Insert long wooden dowels (K) to part 7.

Attach parts 8 and 10 to part 7, as shown.

Turn cam locks clockwise to tighten.

Please note: wooden dowels (K) protrude to the other side of part 7.

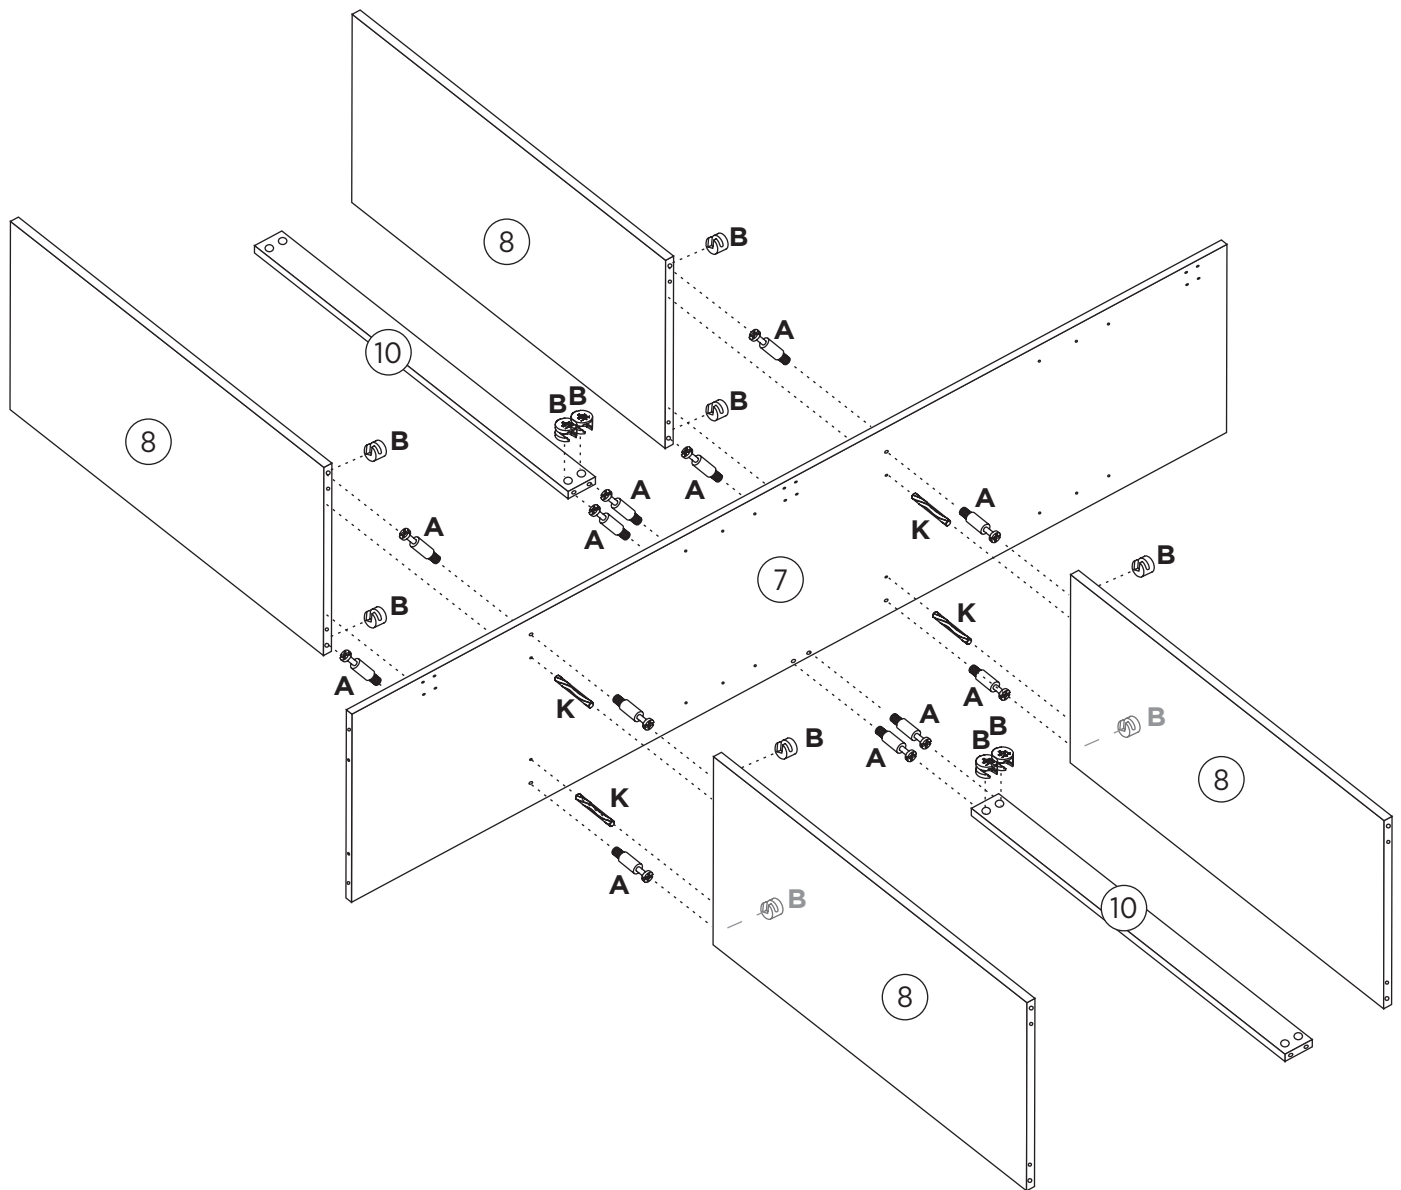

# ASSEMBLY INSTRUCTIONS

## STEP 4

 
 
 
 
 
Insert quickfit screws(A) to part 4.

Insert cam locks(B) and wooden dowels(C) to part 7.

Attach part 4 to part 7.

Turn cam locks clockwise to tighten.

Fix part 3 to part 7 using screws (N), as shown.

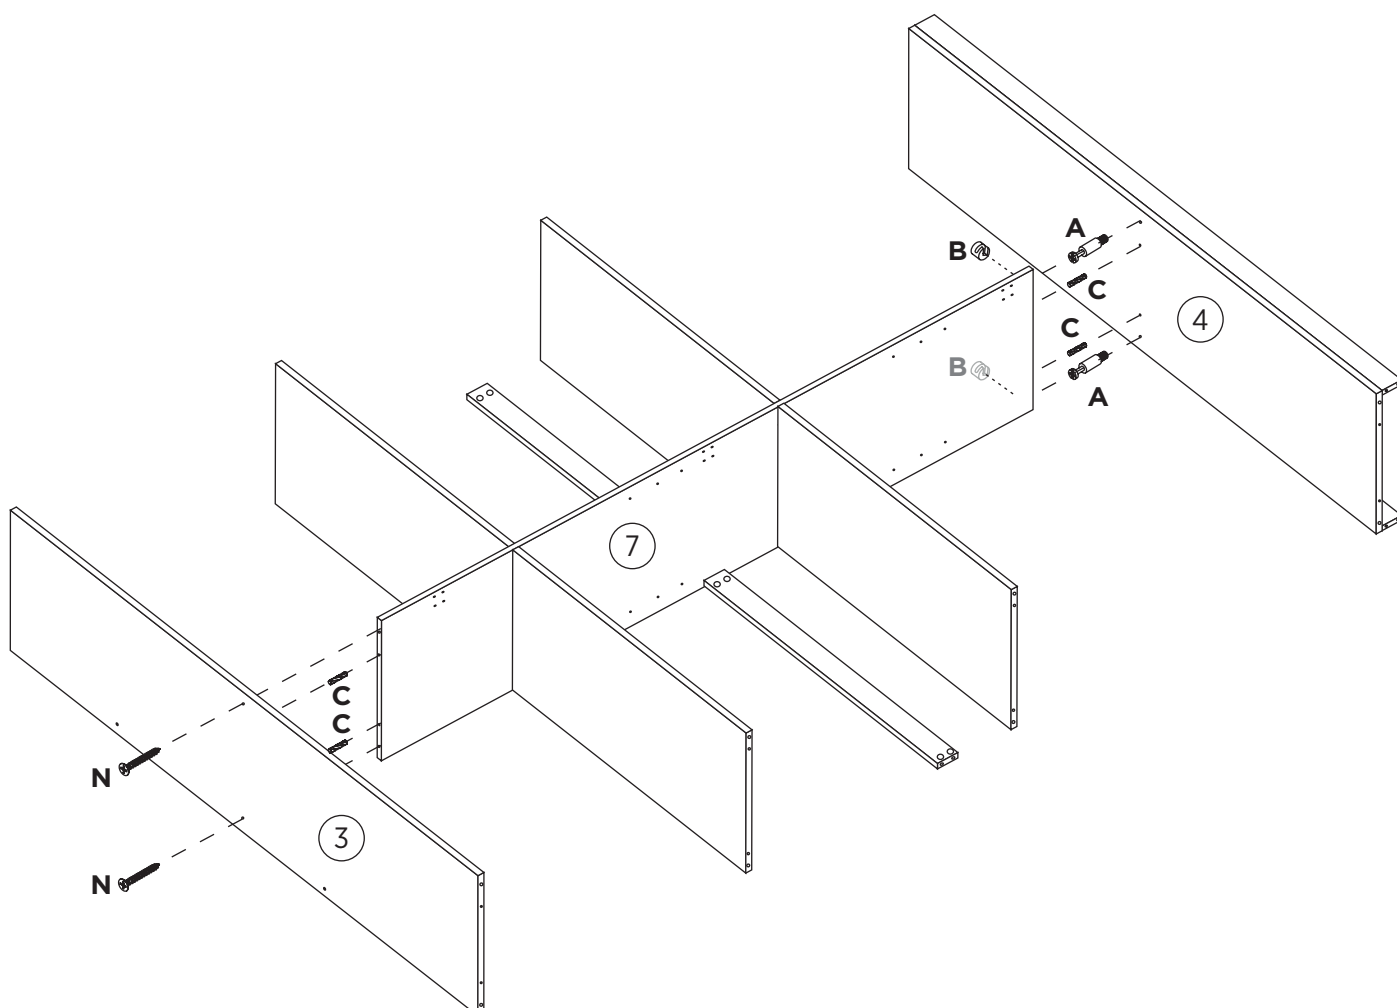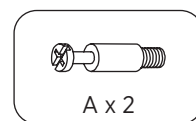

# ASSEMBLY INSTRUCTIONS

## STEP 5

Insert quickfit screws (A) and wooden dowels (C) to part 2.

 
Insert cam locks (B) to parts 3, 4, 5, 8 and 10, as shown..




A x 12



B x 12



C x 10




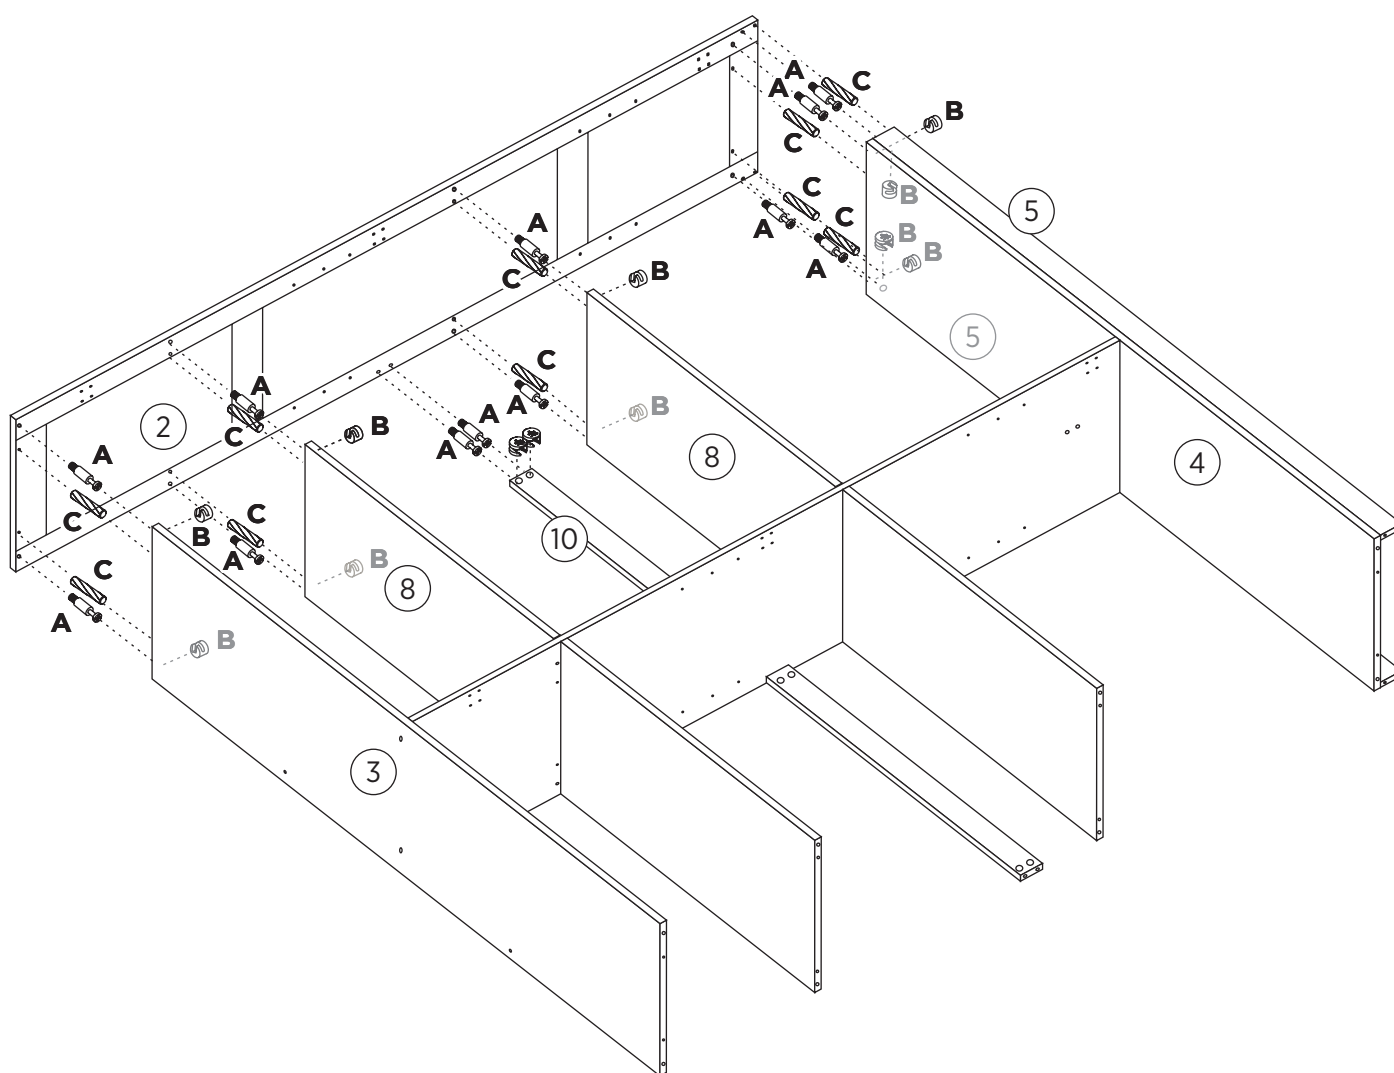 


# ASSEMBLY INSTRUCTIONS

## STEP 6

Insert quickfit screws (A) and wooden dowels (C) to part 1.

    Insert cam locks (B) to parts 3, 4, 5, 8 and 10, as shown.

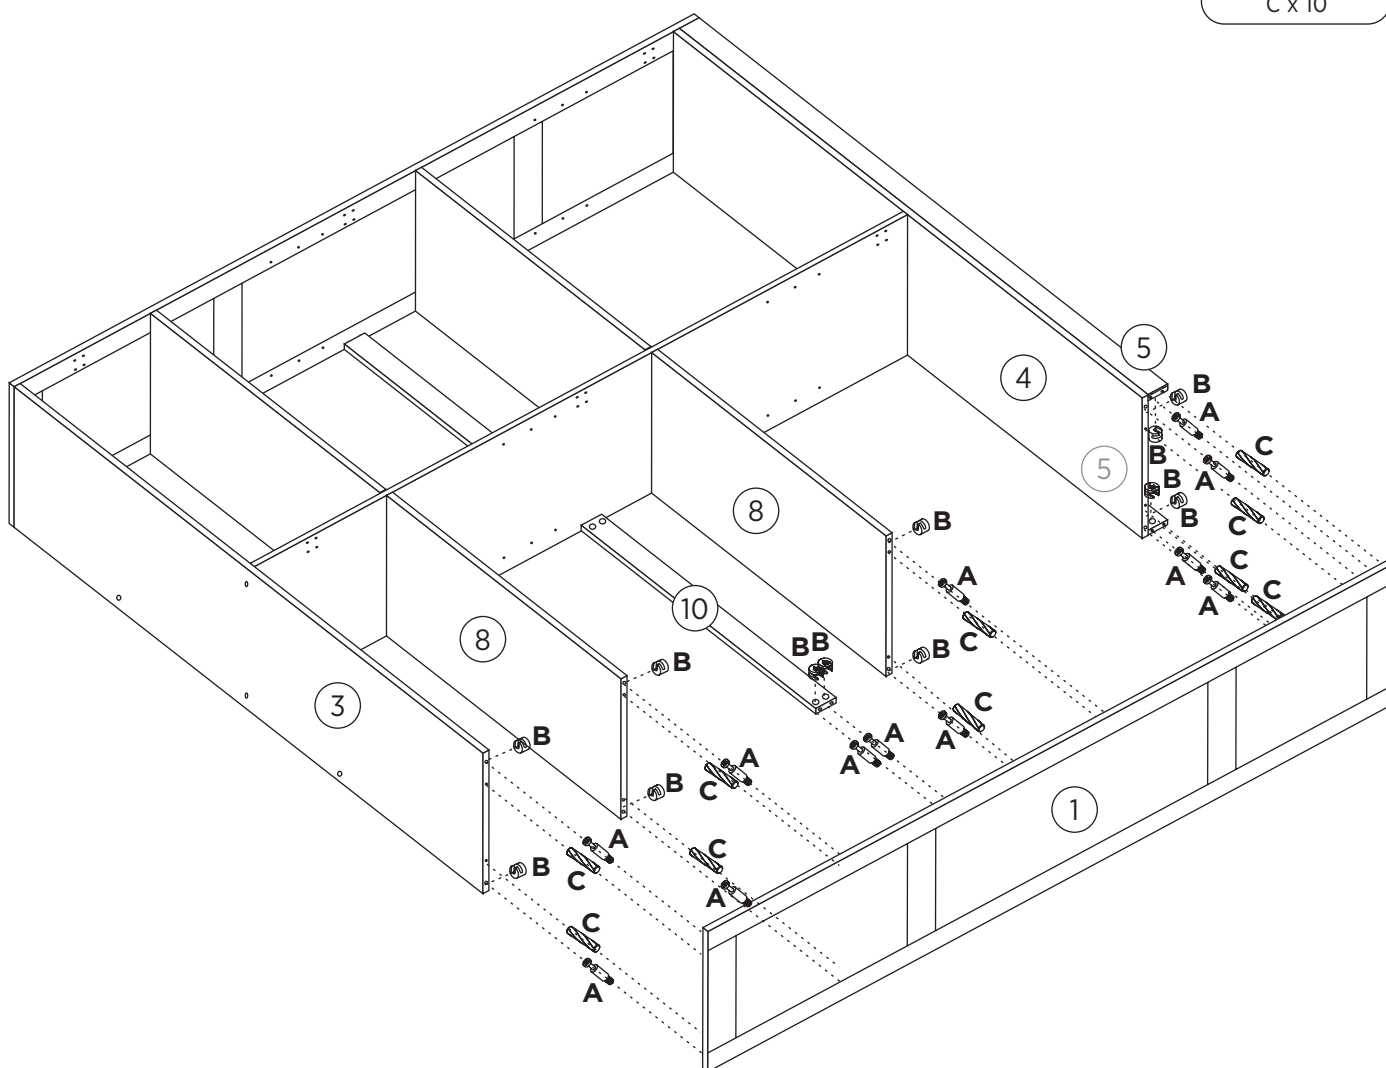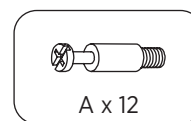





# ASSEMBLY INSTRUCTIONS

## STEP 7

Fix handles (E) to parts 13 using screws (P).

Fix hinges (H) to parts 13 using screws (F).

    Fix hinges (J) to parts 13 using screws (F), as shown.

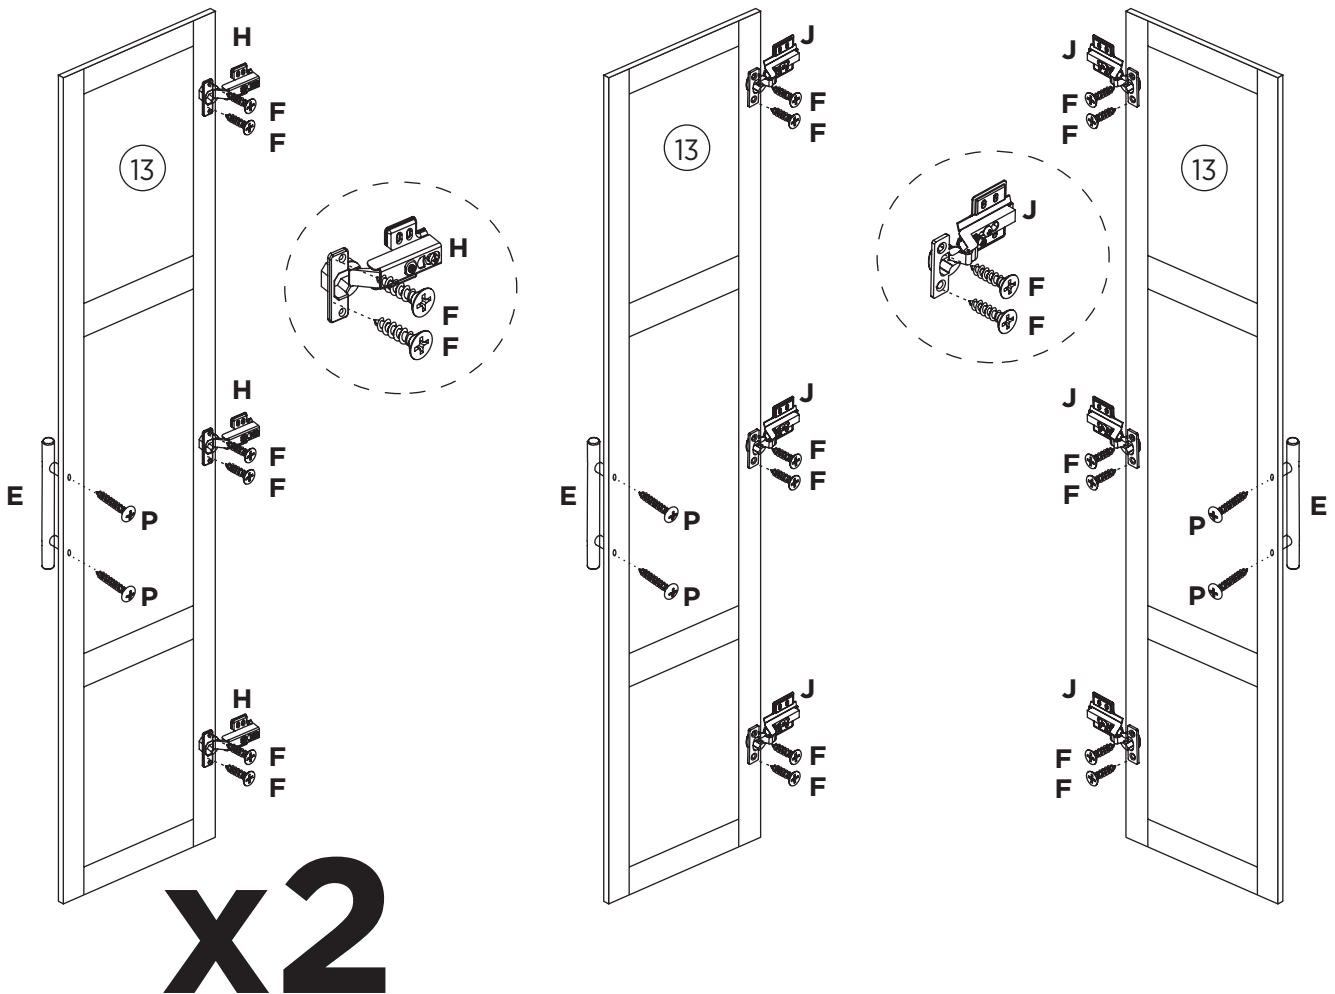




# ASSEMBLY INSTRUCTIONS

## STEP 8

Fix parts 11 and 12 to assembled unit using nails (I).

  
 
Fix parts 12 to assembled unit using screws (Q), as shown.

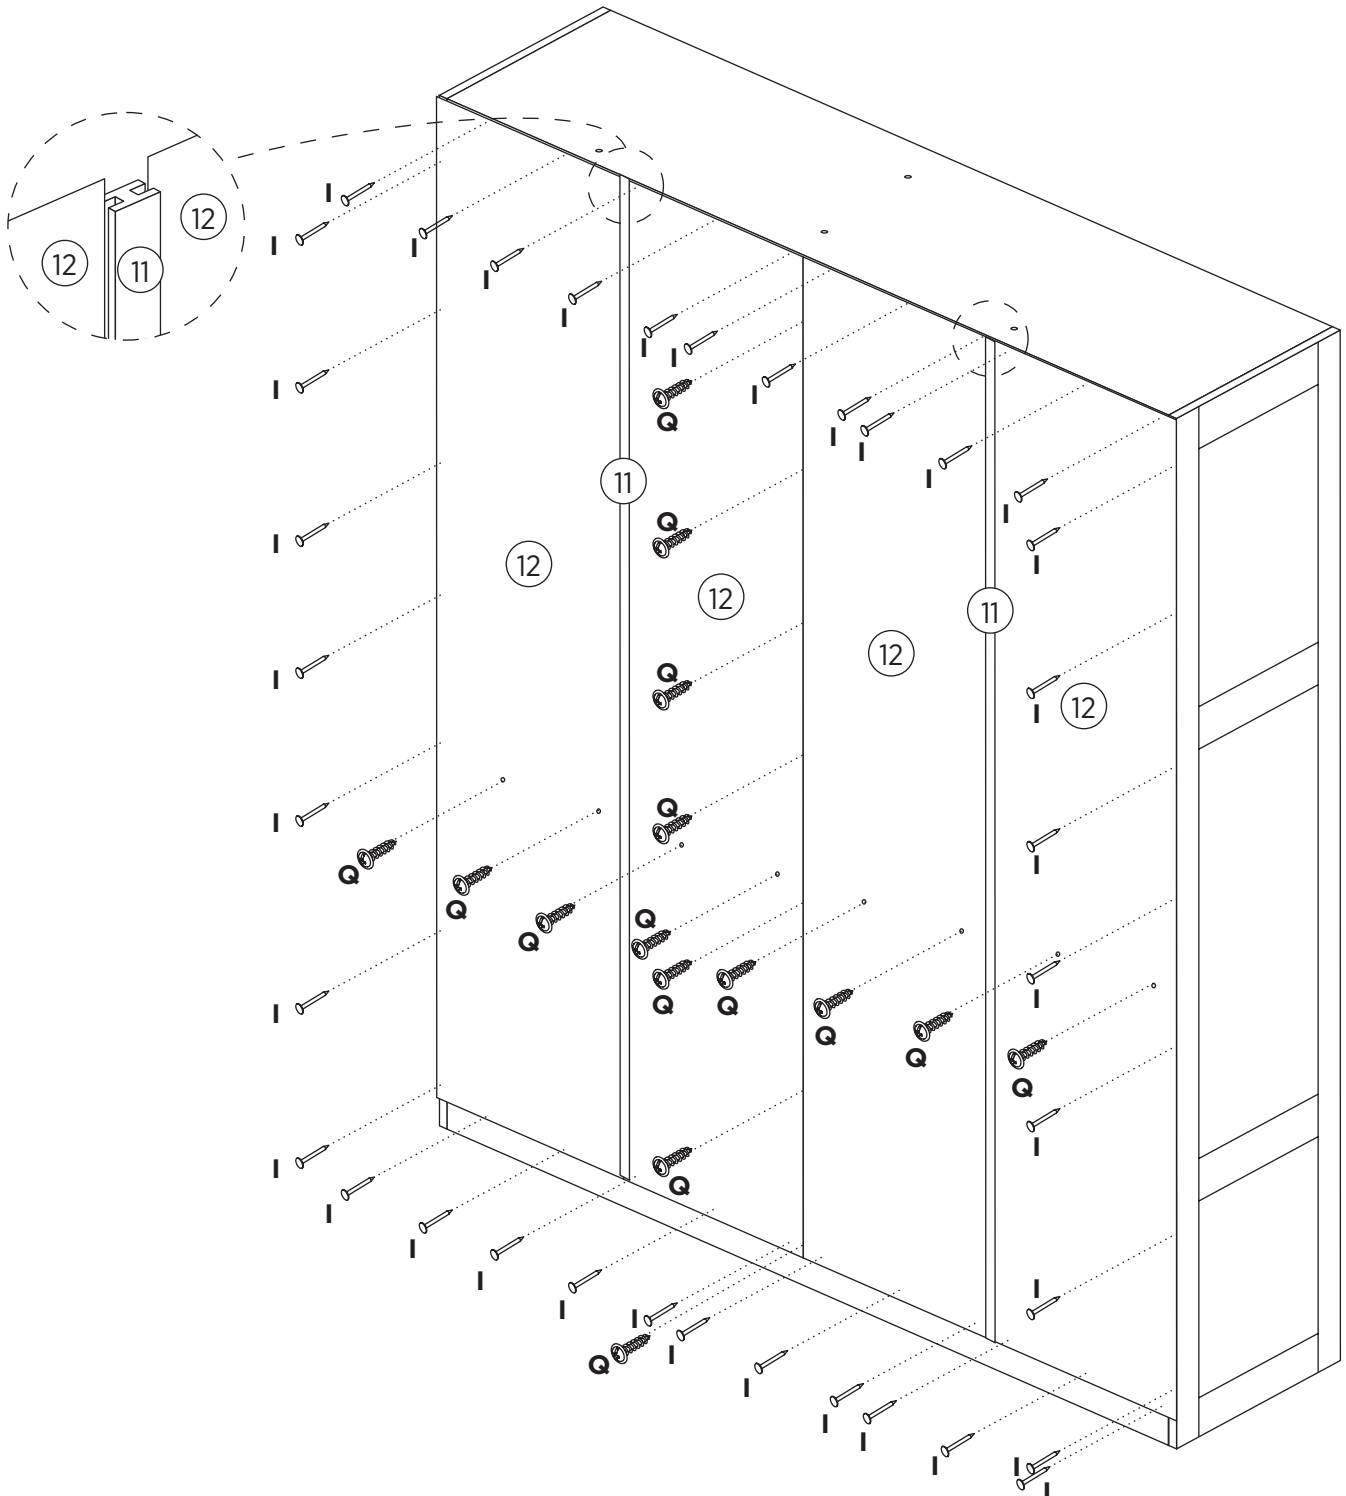

# ASSEMBLY INSTRUCTIONS

## STEP 9

  Insert shelf pins (D) to assembled unit, as shown.

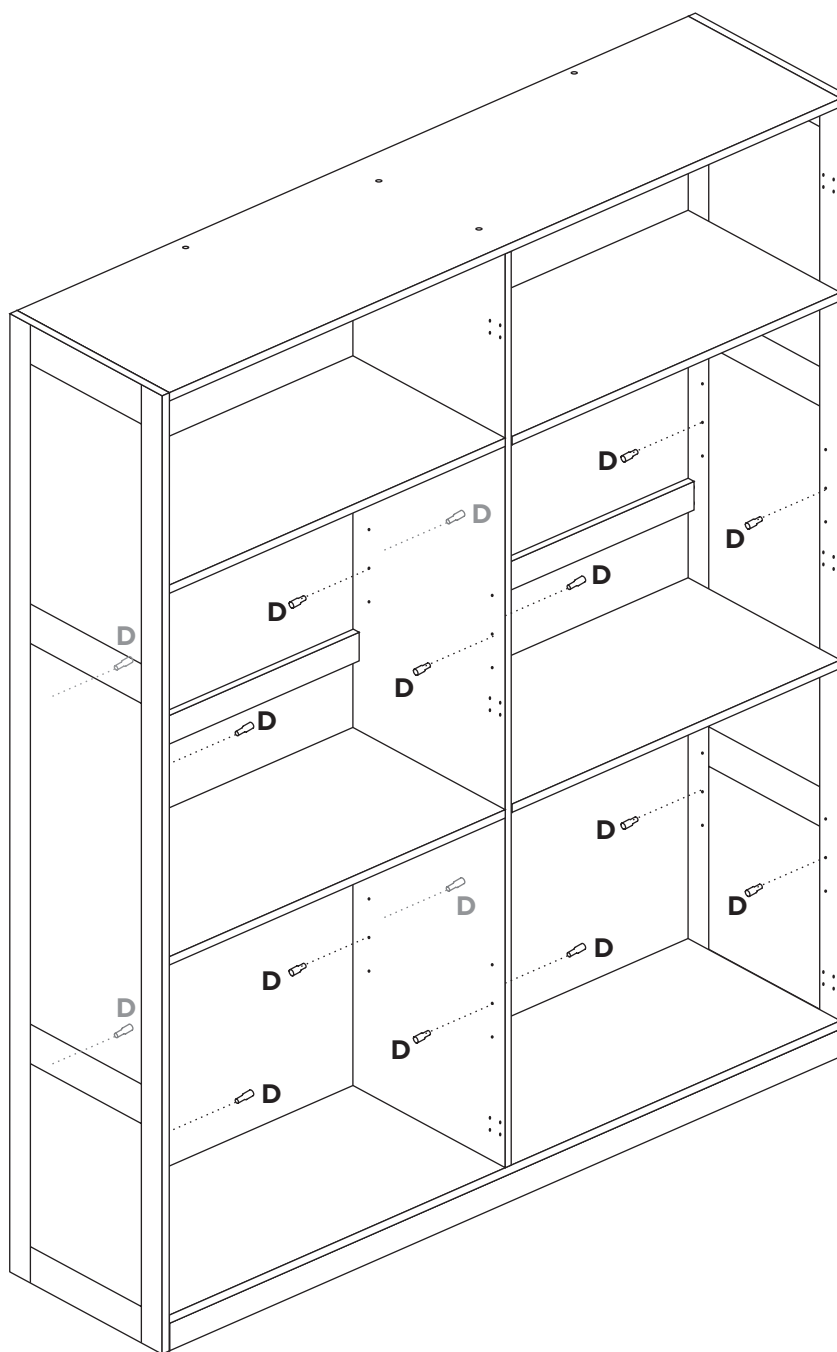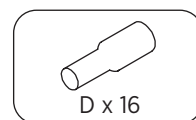


# ASSEMBLY INSTRUCTIONS

---

## STEP 10

 Insert parts 9 to assembled unit, as shown.

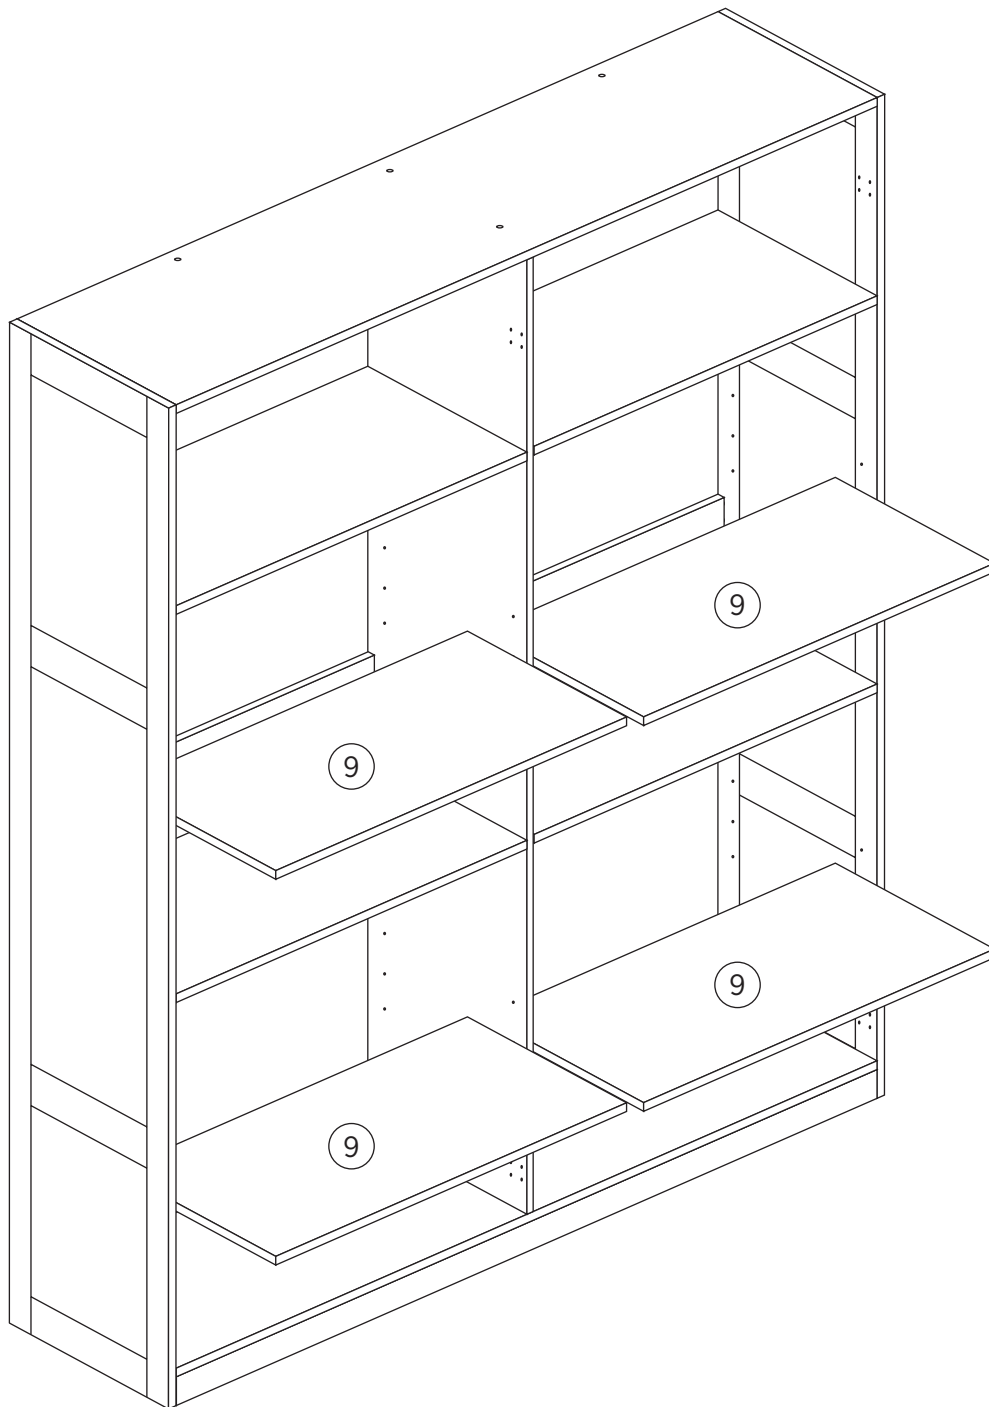


# ASSEMBLY INSTRUCTIONS

## STEP 11




 Fix parts 13 to assembled unit using screws (F), as shown.

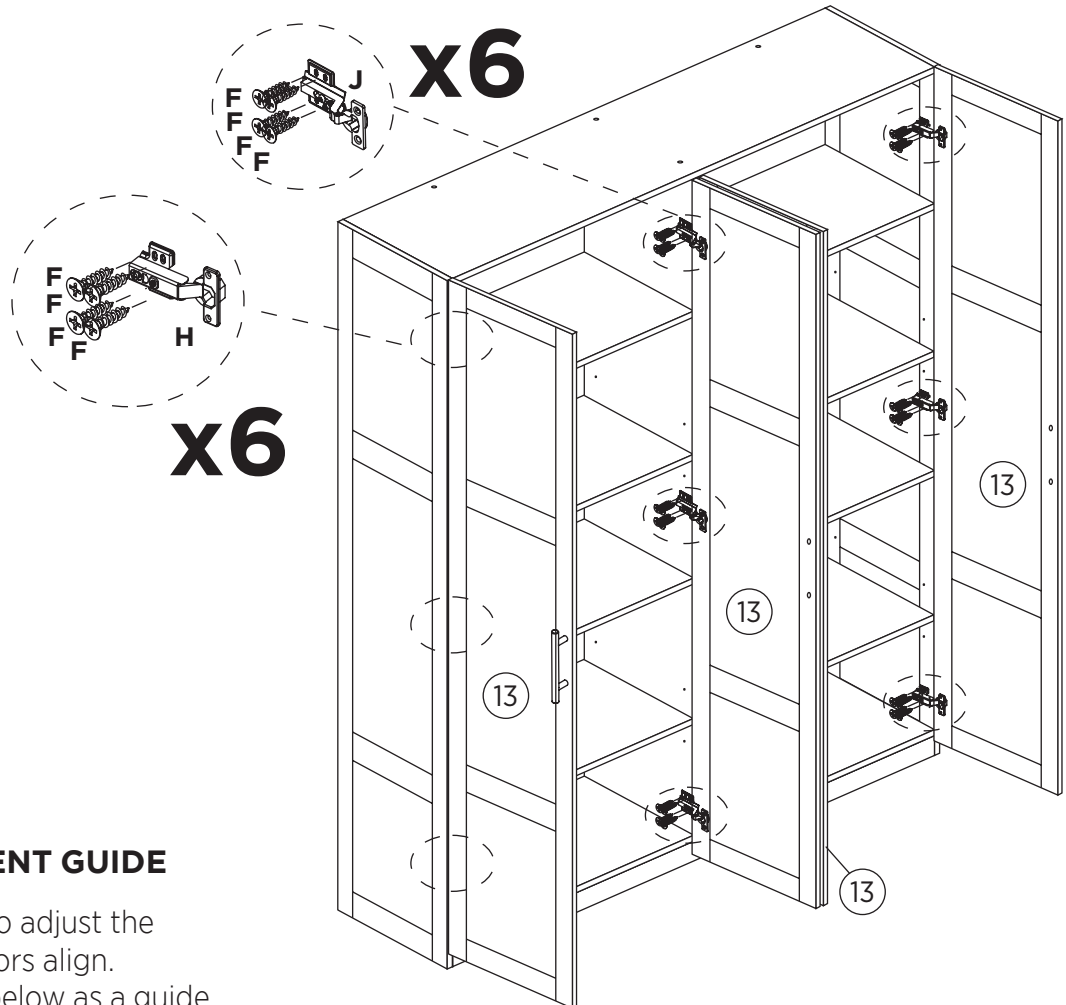


### HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

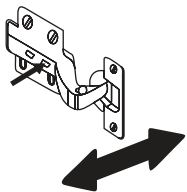

 To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

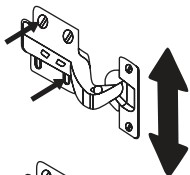

 To adjust the door **vertically** loosen the screw as shown and move up and down as needed.



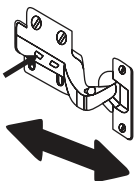


To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

# ASSEMBLY INSTRUCTIONS
   
## STEP 12

Fix wall brackets (M) to part 3 using screws (L), as shown.

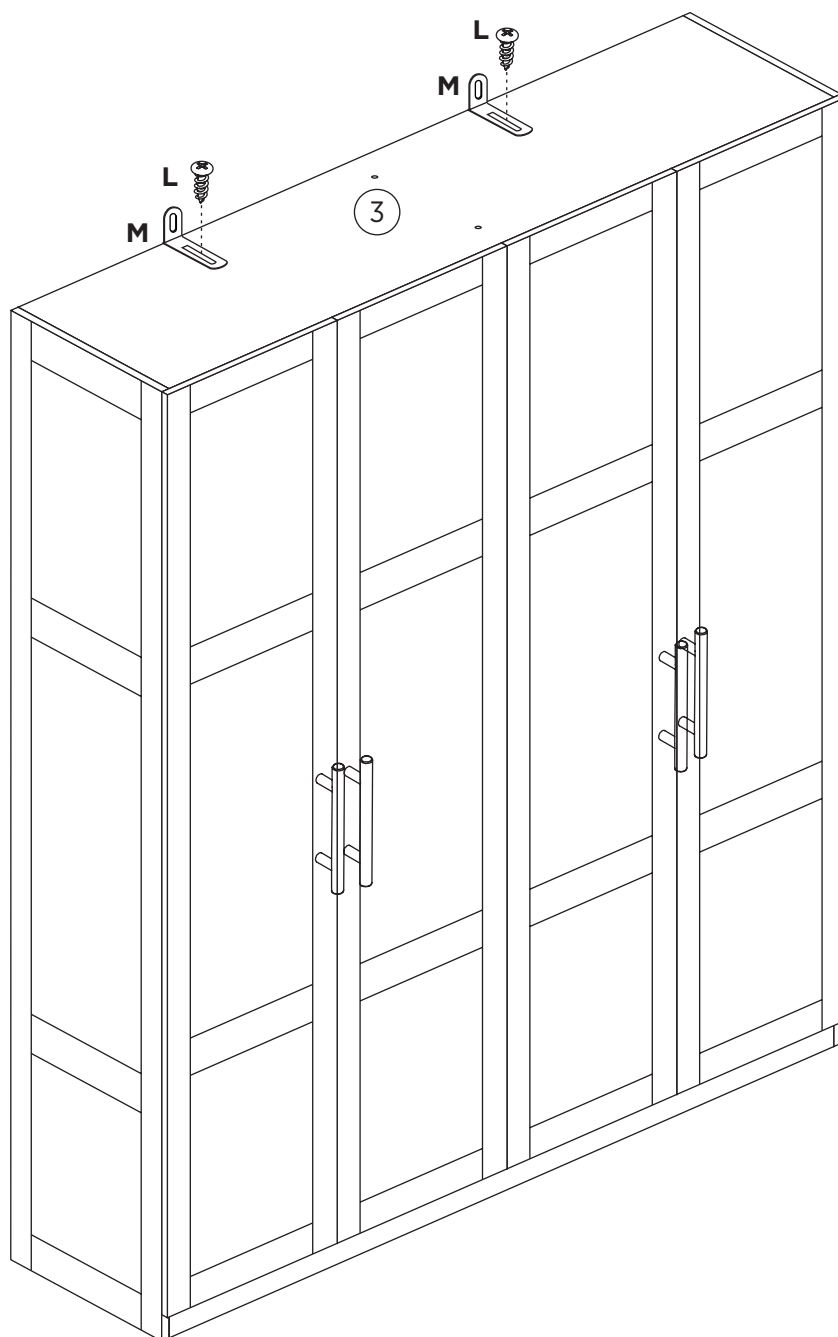

# ASSEMBLY INSTRUCTIONS

 
 
## STEP 13

**For extra stability, you must fix your cabinet to the wall using the additional hardware (N) and (O), as shown.**

**Screws (N) are fixed through the wall brackets (M) and into the wall plugs (O).**

**Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.**

**Please consider the wall mounting & fixing guide when securing your cabinet.**

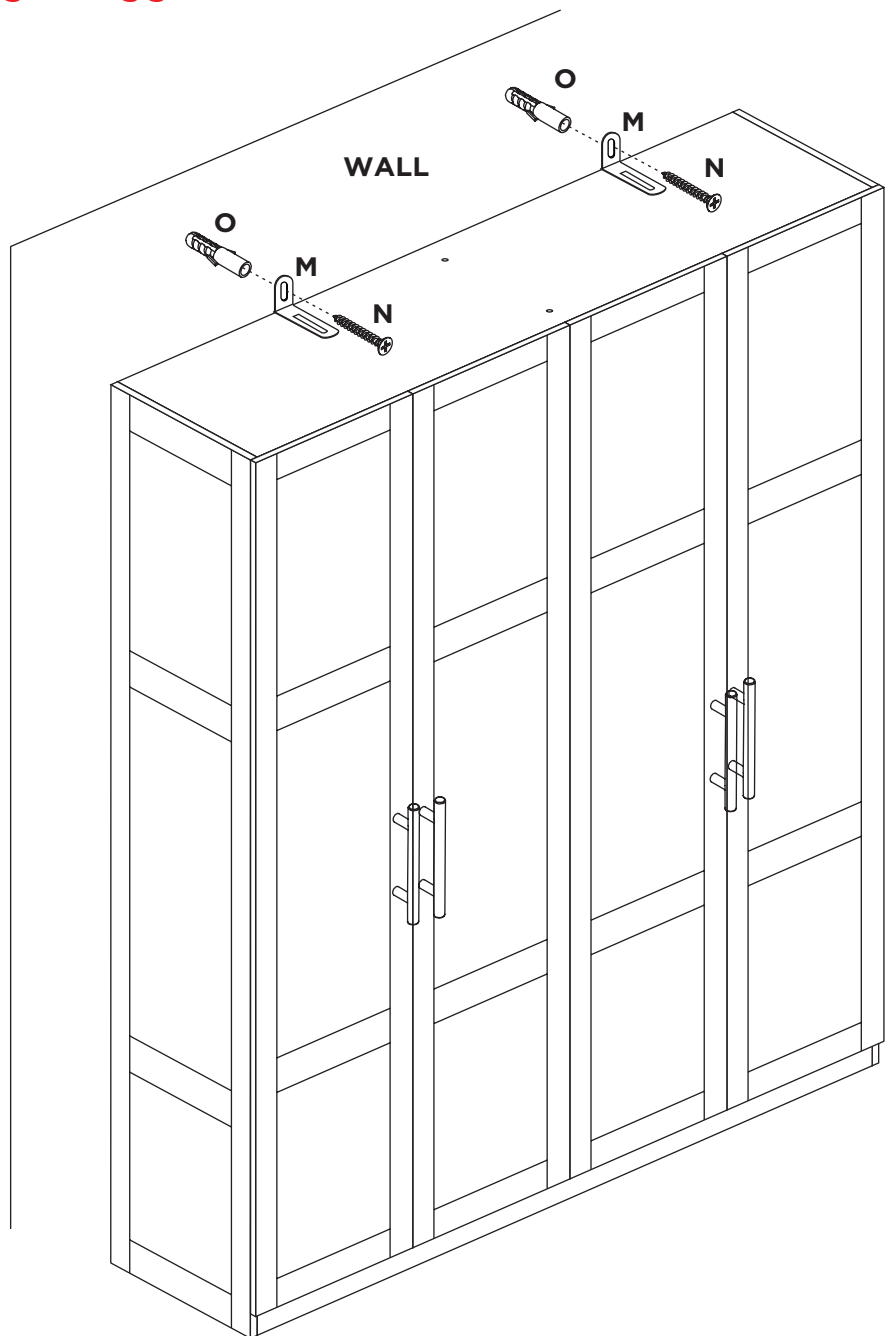

**WARNING**

Children have died from furniture tipover.

 
- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

# ASSEMBLY INSTRUCTIONS

---

## STEP 14

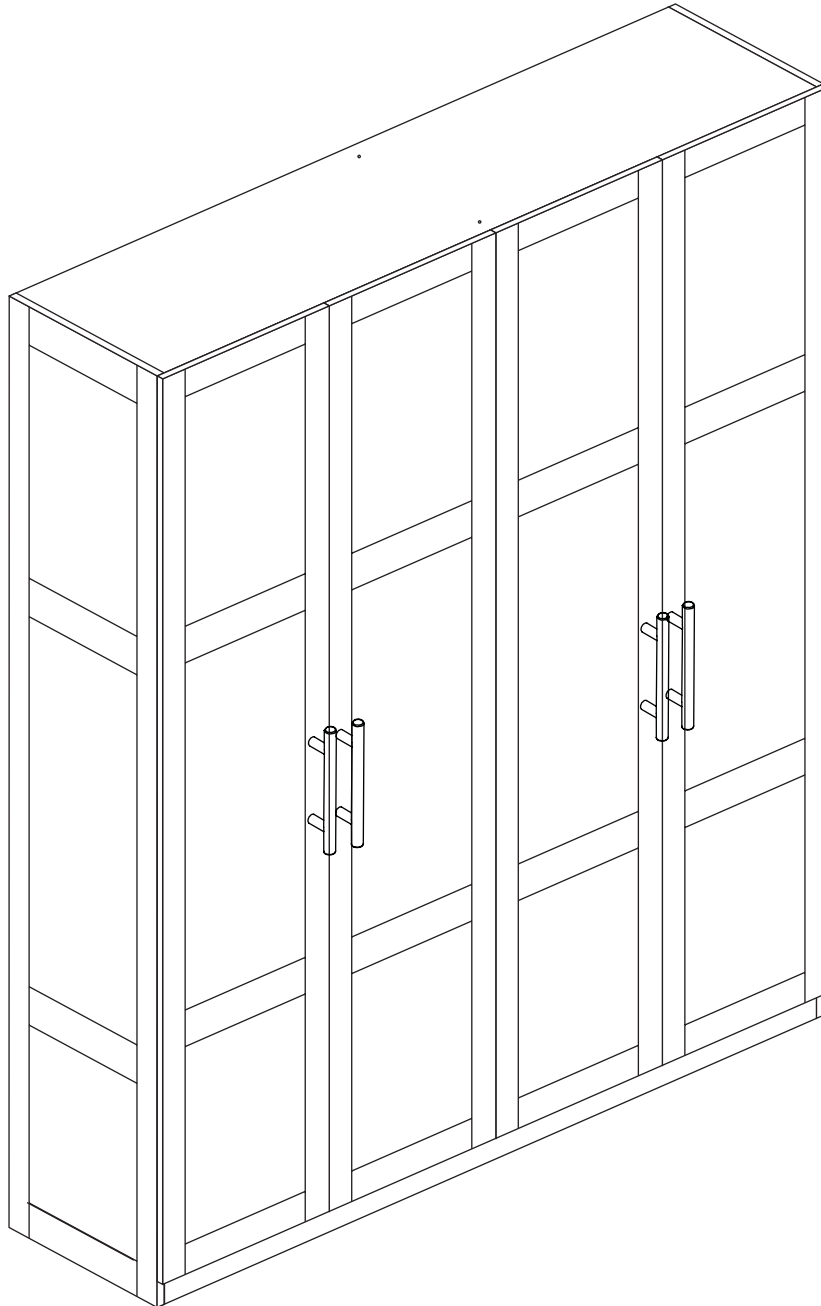

**Maximum recommended weight is 5kg each shelf.**

Your Tall Cabinet 4 doors is ready for use.

# WALL FIXING GUIDE

**NOTE: Supplied wall plugs are only suitable for use in masonry walls.**

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



## IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



## Tips & Tricks

 
**Make sure that the hardware used is suitable for supporting your unit.**

**Please consult a qualified tradesperson if unsure.**

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


## Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

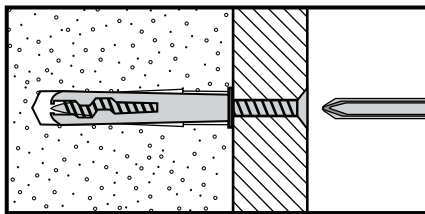


### 1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

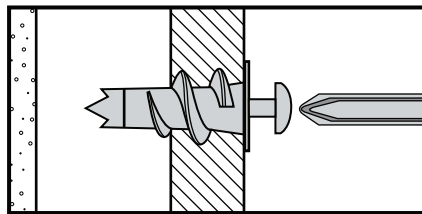


### 2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

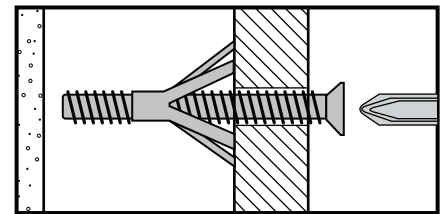


### 3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

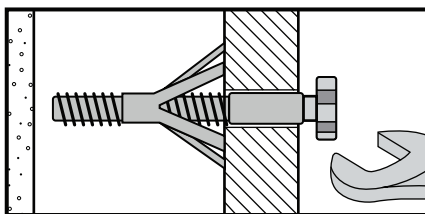


### 4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

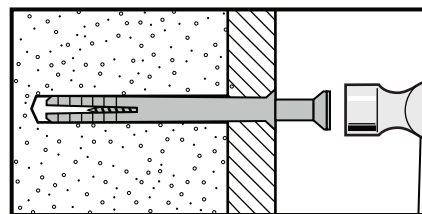

### 5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

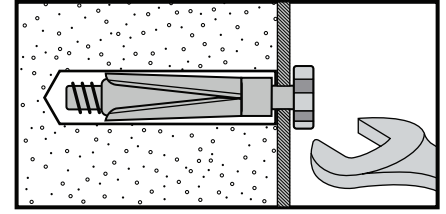

### 6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.