 


GLASS DISPLAY CABINET 4 TIER

ASSEMBLY INSTRUCTIONS

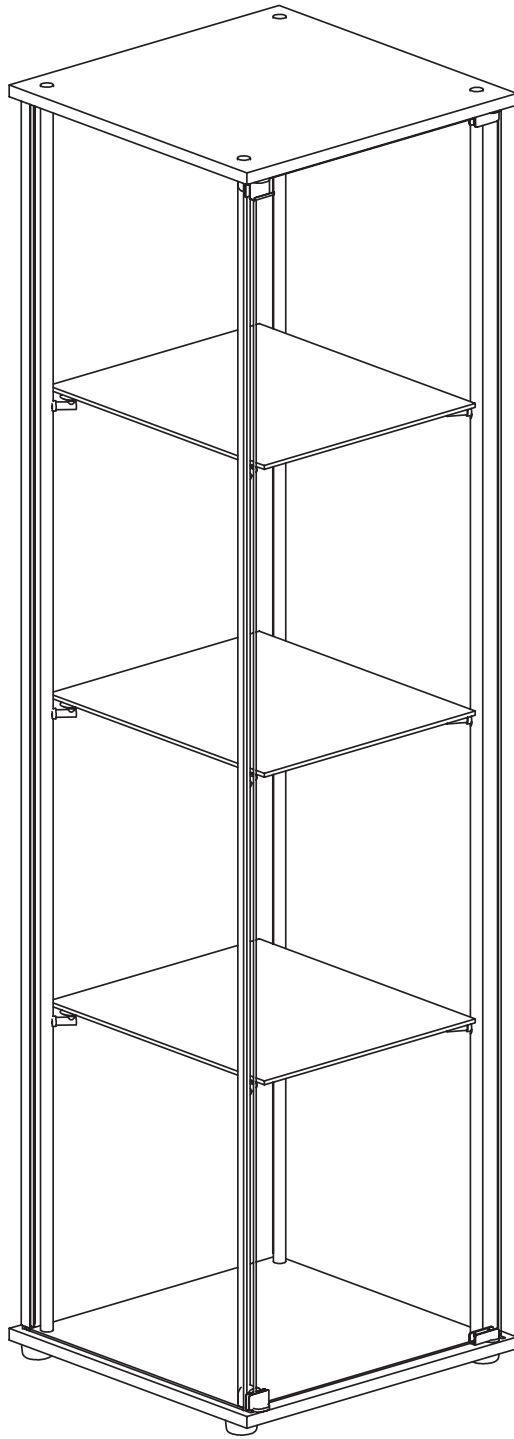 


TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

 
CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

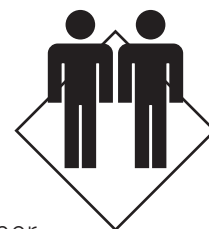 

 

 

 






 





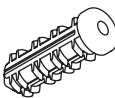



ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver and soft rubber hammer
- ✓ 2 x adults required
- ✓ 1m x 2m assembly space required
- ✓ 1 hour assembly time approx.

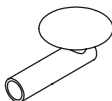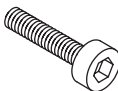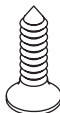


HARDWARE LIST

					
1 x A-1 Hinge	1 x A-2 Metal Plate	1 x B-1 Hinge	1 x B-2 Metal Plate	1 x C-1 Top Magnetic Catch	
					
1 x C-2 Foam Strip	1 x D-1 Bottom Magnetic Catch	1 x D-2 Foam Strip	12 x E Bolt	12 x F Shelf Support	
					
8 x G Bolt	4 x H Screw	2 x I Hinge Support	2 x J Magnet	4 x K Leg	
					
1 x L Allen Key	1 x M Screw	2 x N Washer	1 x O Wall Strap	1 x P Wall Plug (For Plaster Walls)	1 x Q Screw

 
PARTS LIST

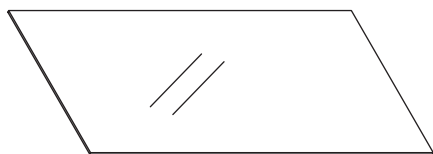


1
1 PC

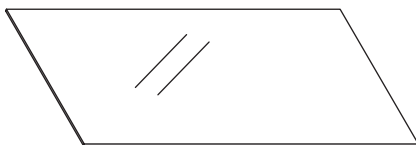 


2
2 PCS

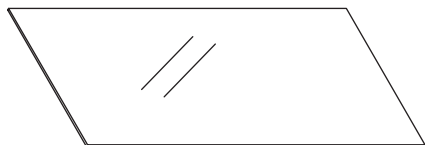 


3
1 PC

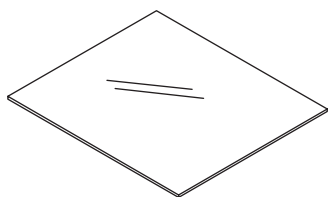 


4
3 PCS

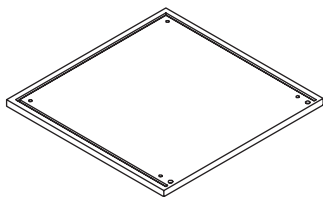 


5
1 PC

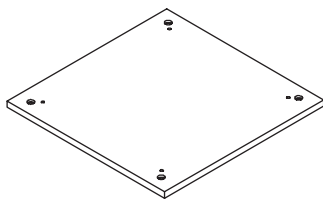 

6
1 PC

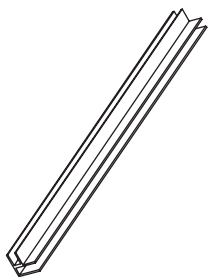 

7
2 PCS

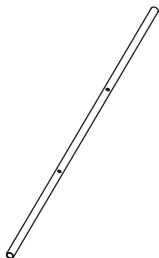 






8
4 PCS

ASSEMBLY INSTRUCTIONS

STEP 1

Fix shelf supports F in the desired locations of parts 8 using bolts (E).

     Fix parts 8 to part 6 using bolts (G) and Allen key (L), as shown.

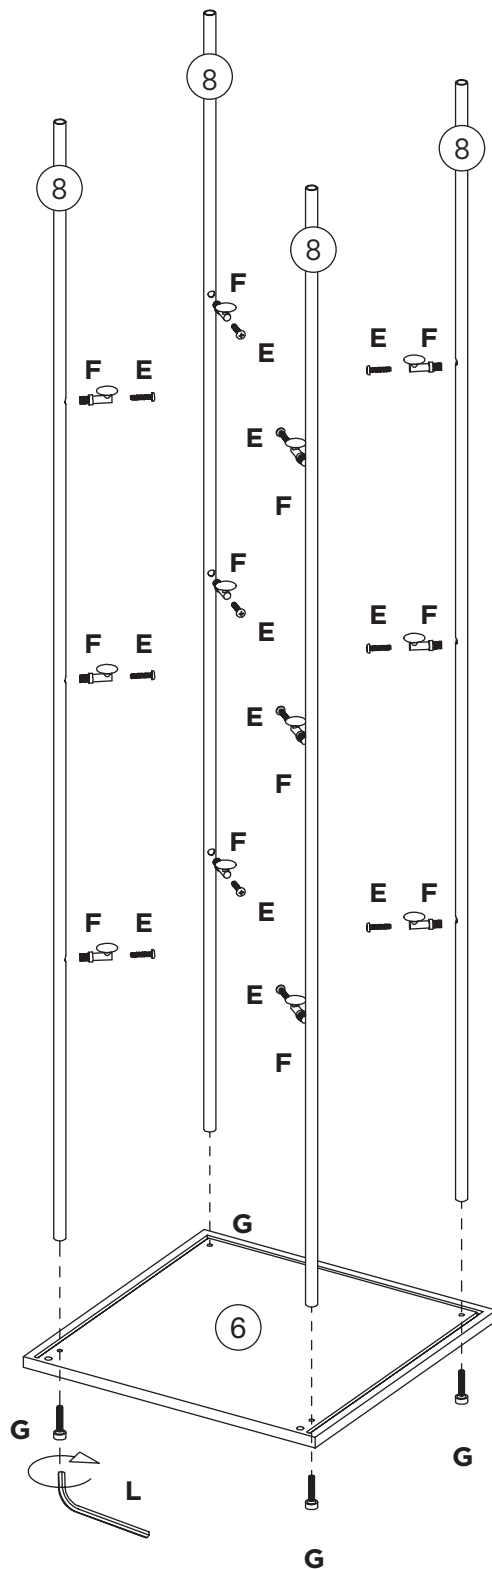


ASSEMBLY INSTRUCTIONS

STEP 2

Fit part 3 into slot in part 6 and lean against parts 8, as shown.

 
Have someone hold part 3 in place until step 4 is complete.

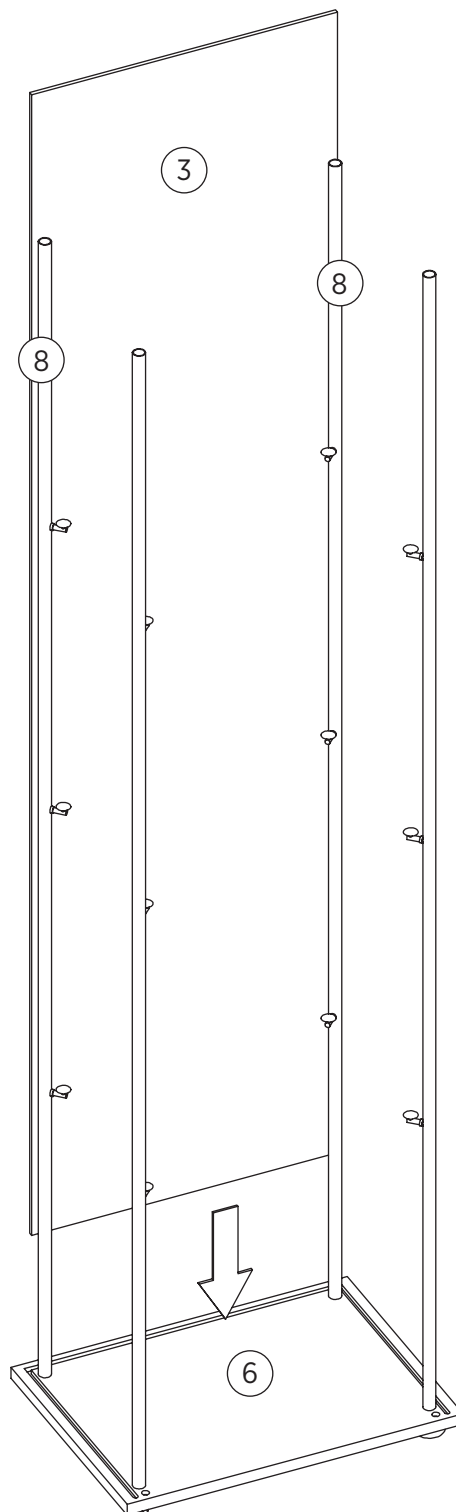

ASSEMBLY INSTRUCTIONS

STEP 3

 Clip parts 7 onto part 3, as shown.

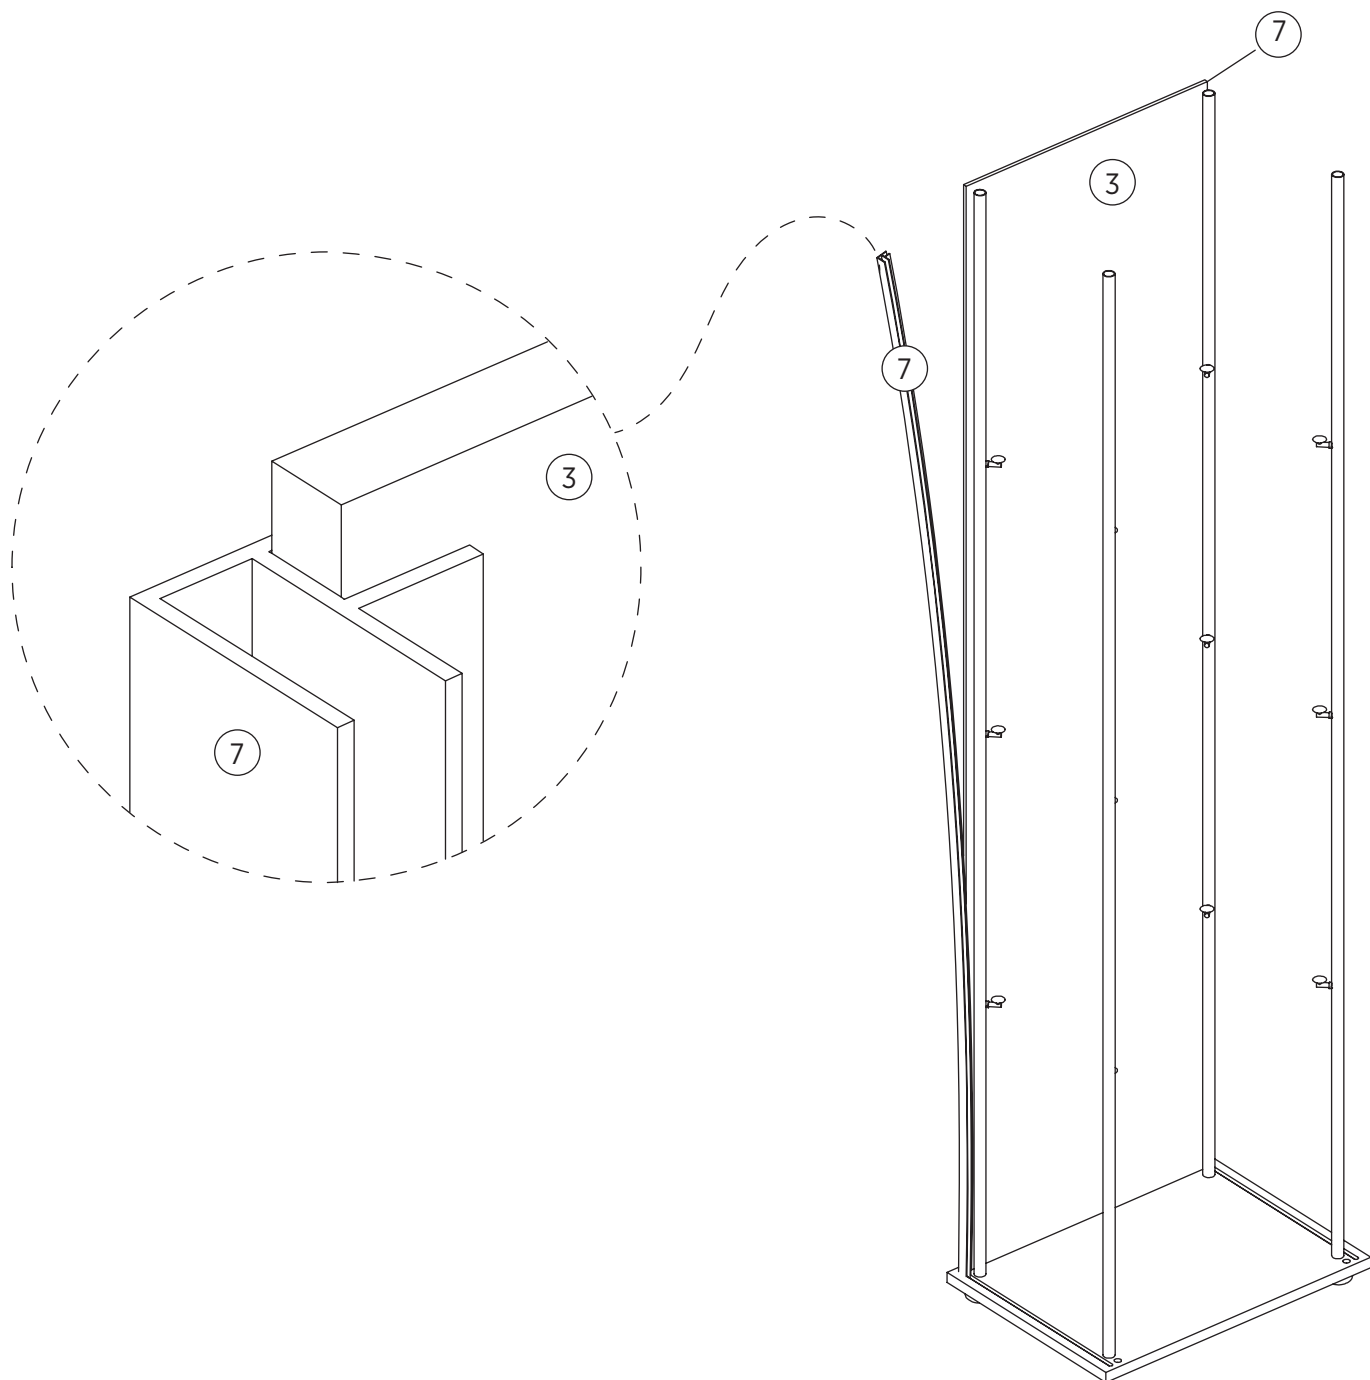


ASSEMBLY INSTRUCTIONS

STEP 4

Clip parts 2 into parts 7, as shown.



 
Carefully hold parts 7 in position.

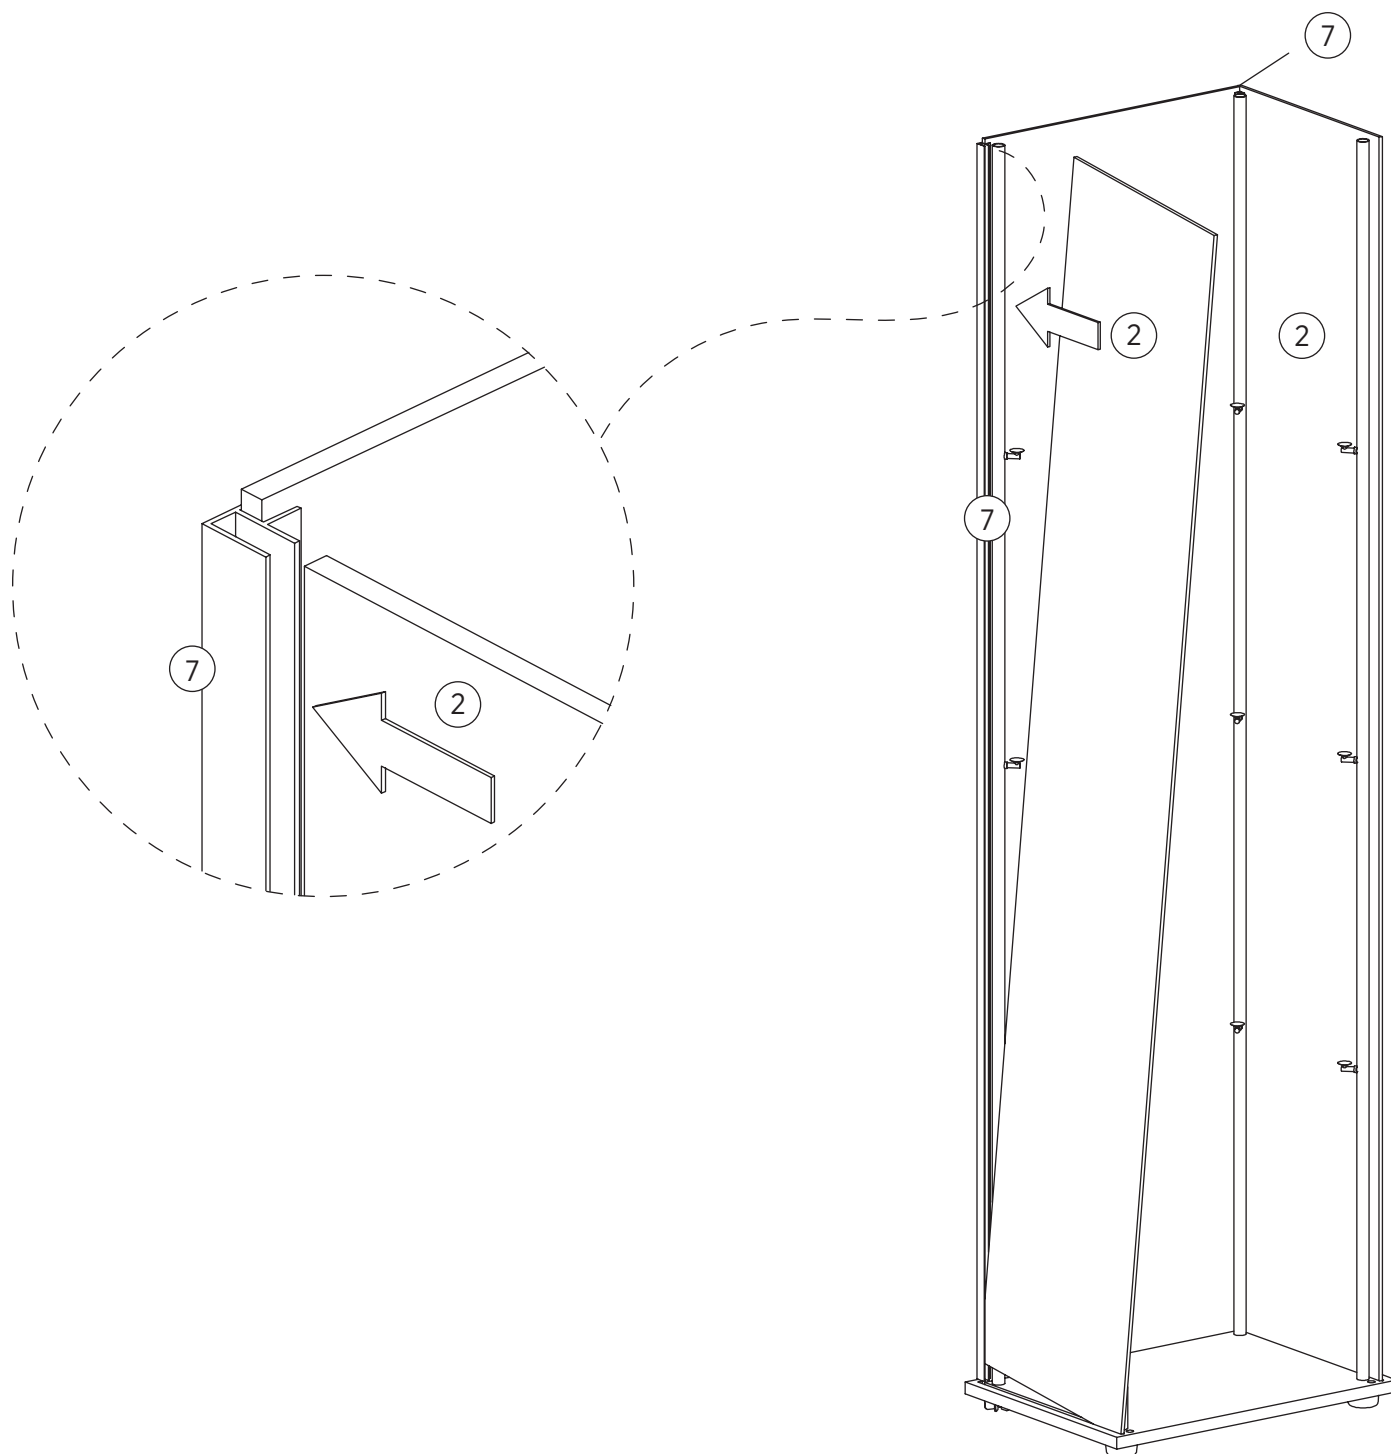

ASSEMBLY INSTRUCTIONS

STEP 5

   Fix part 5 to assembled unit using bolts (G) and Allen key (L), as shown.

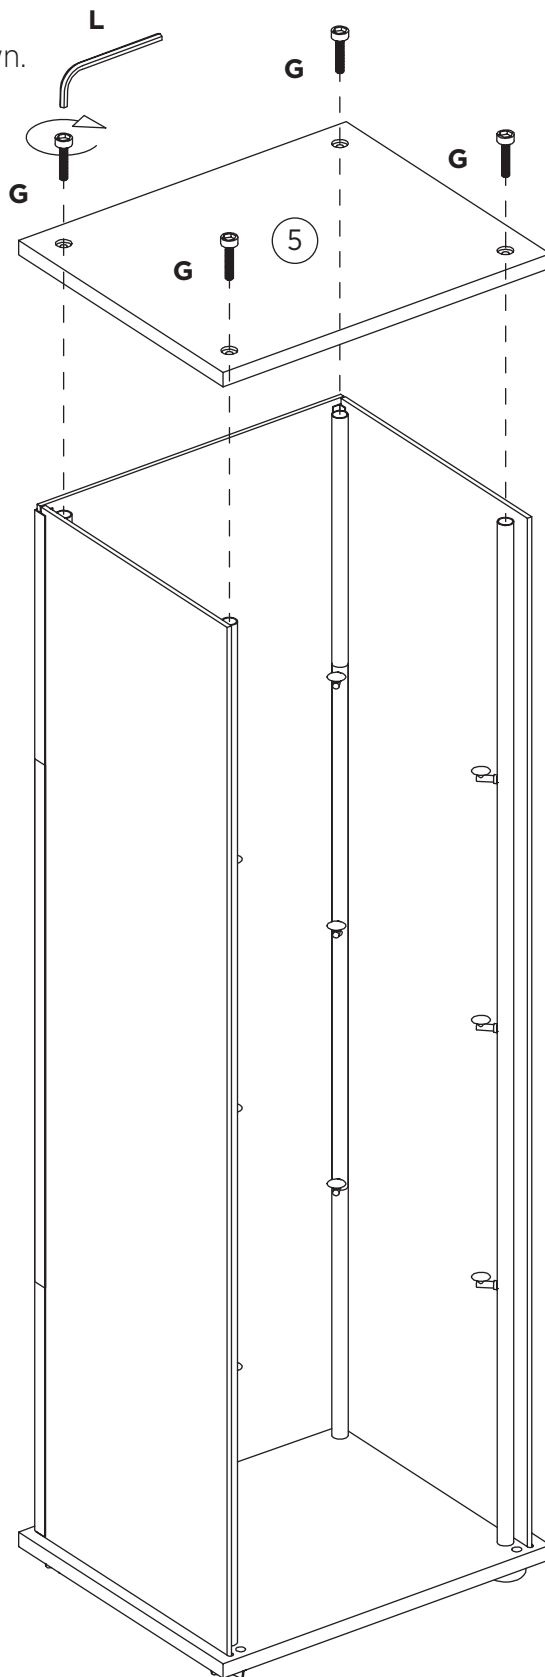

ASSEMBLY INSTRUCTIONS

STEP 6

Turn cabinet on its side, as shown.

Two people are needed for this step.

 
Fix feet (K) to bottom of cabinet using screws (H).



H x 4



K x 4

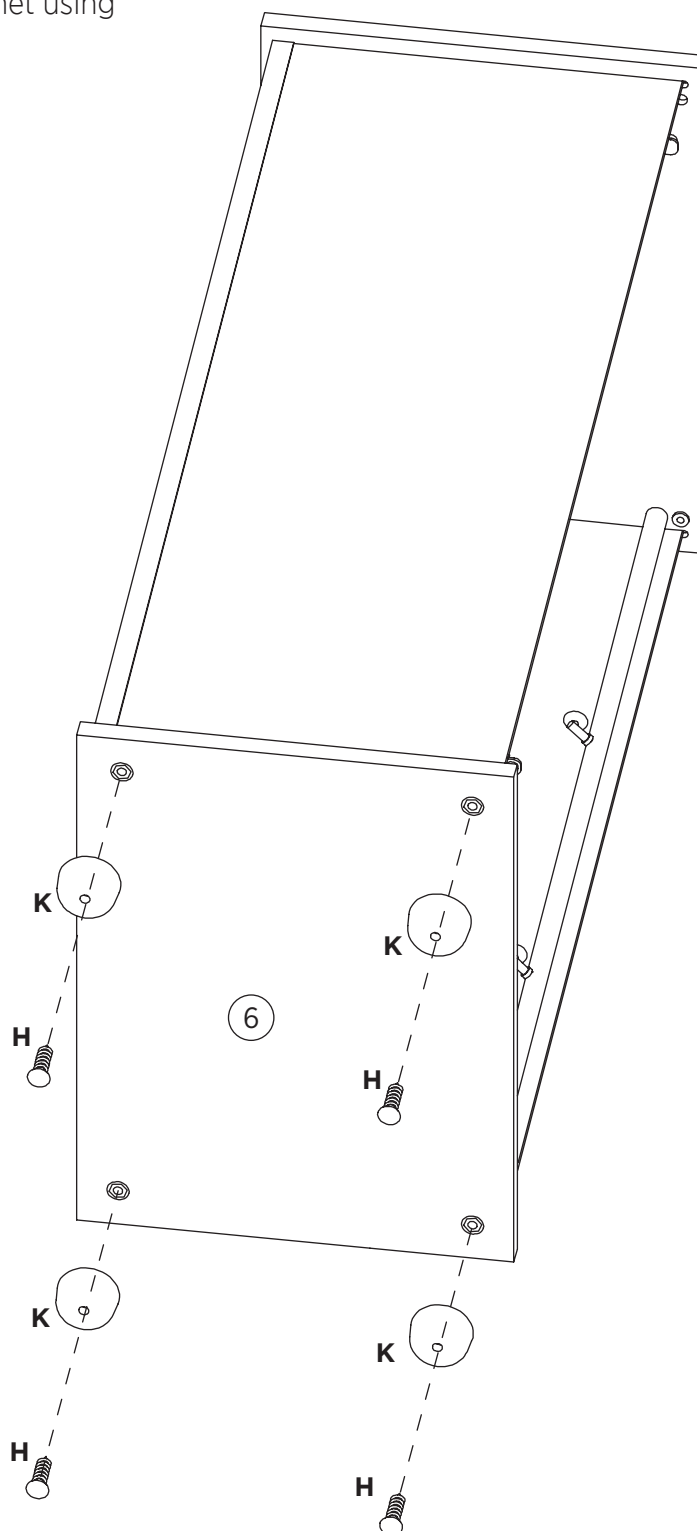

ASSEMBLY INSTRUCTIONS

STEP 7

Insert hinge supports I into holes in parts 5 and 6.

 
Fit metal plate (A-2) between door 1 and hinge (A-1), as shown.
Secure by tightening screws, as shown.

Fit hinge (A-1) onto bottom hinge support (I).

Fit hinge (B-1) into top hinge support (I).

Fit door 1 into hinge (B-1).

Fit metal plate (B-2) between door 1 and hinge (B-1), as shown. Secure by tightening screws, as shown.

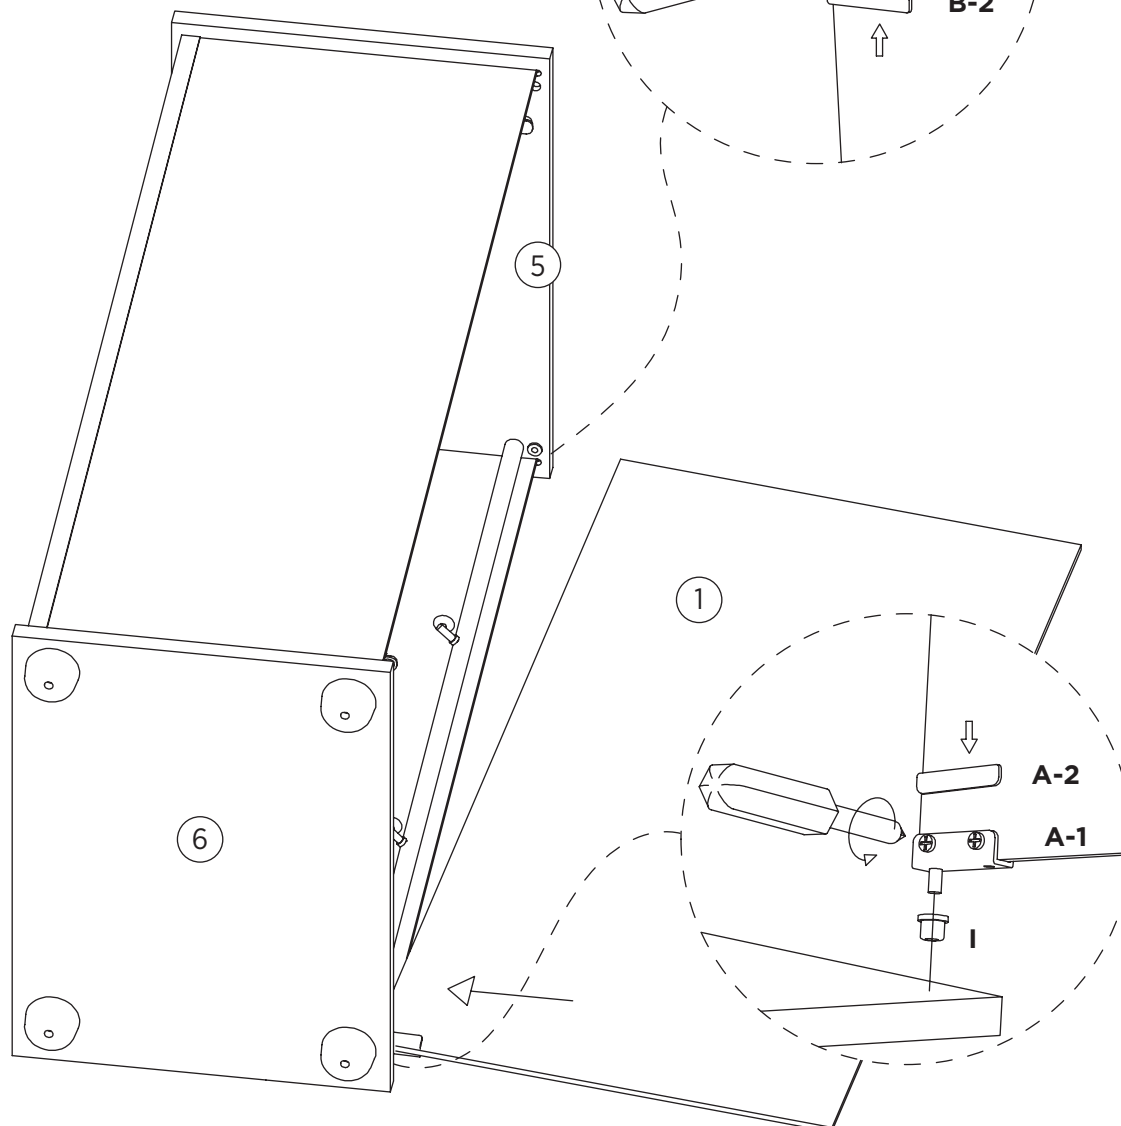

A-1 x 1



A-2 x 1



B-1 x 1



B-2 x 1



I x 2

ASSEMBLY INSTRUCTIONS

STEP 8

Fit magnets (J) to parts 5 and 6, as shown.

Fit top magnetic catch (C-1) to door 1 by sandwiching foam strip (C-2) between the magnetic catch and door, as shown.

Fit bottom magnetic catch (D-1) to door 1 by sandwiching foam strip (D-2) between the magnetic catch and door, as shown.

Make sure to position magnetic catches (C-1) and (D-1) so they meet up with magnets (J) when the door is closed.



C-1 x 1



C-2 x 1



 
D-1 x 1



D-2 x 1



J x 2

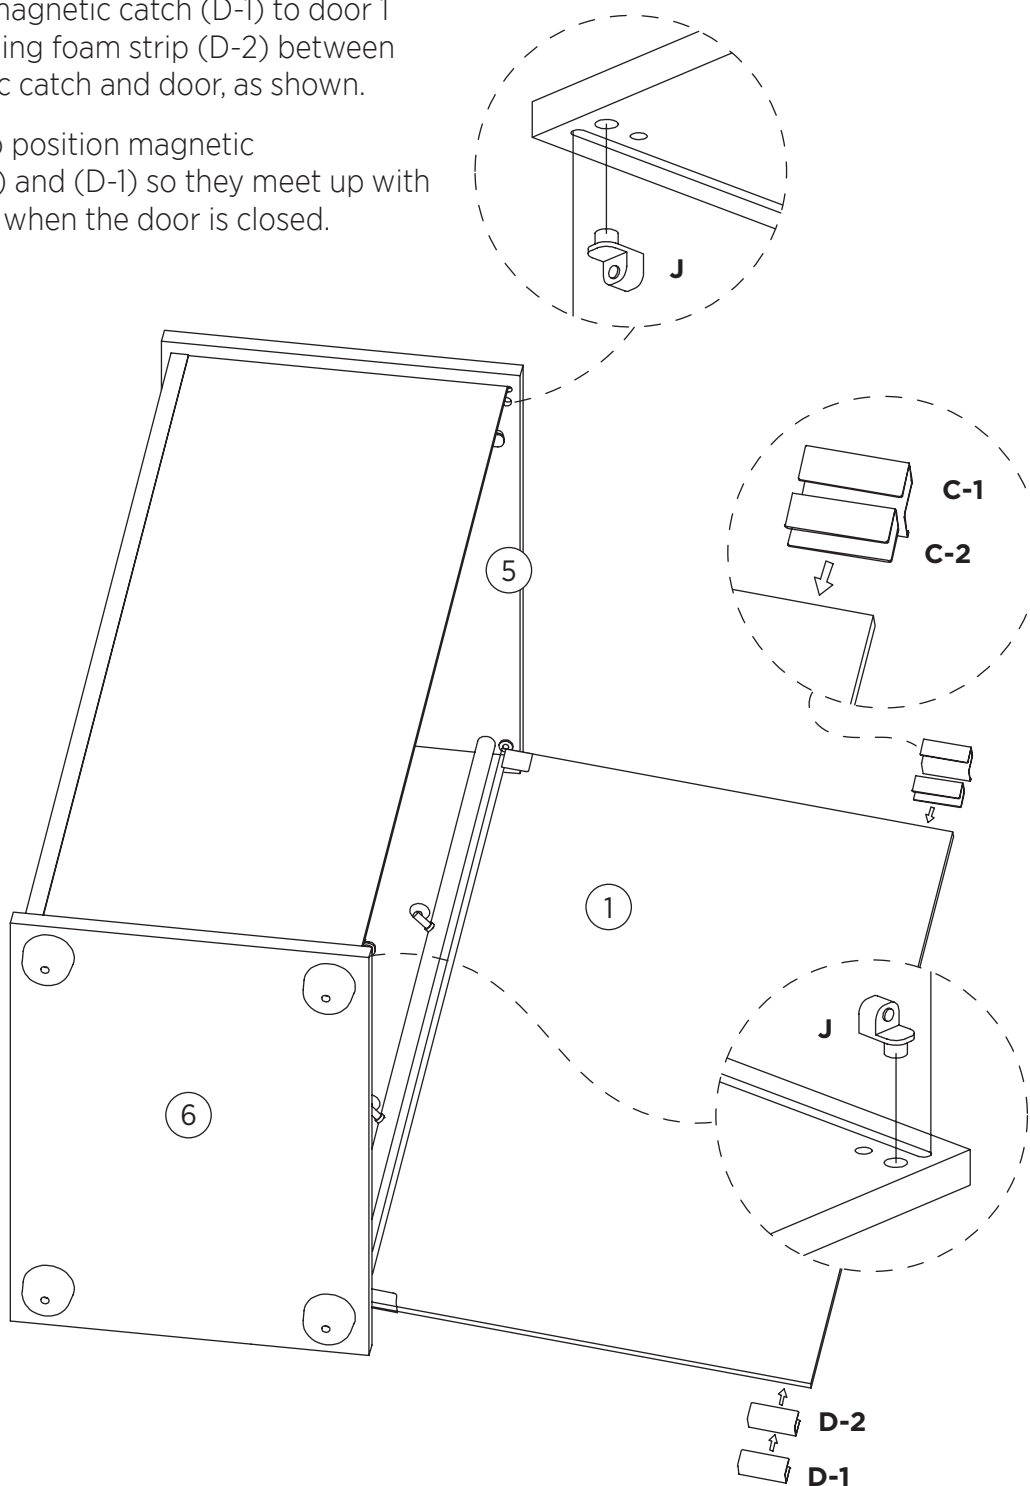


ASSEMBLY INSTRUCTIONS

STEP 9

Turn cabinet right-side up, as shown.

Two people are needed for this step.

 Insert parts 4 into cabinet, as shown.

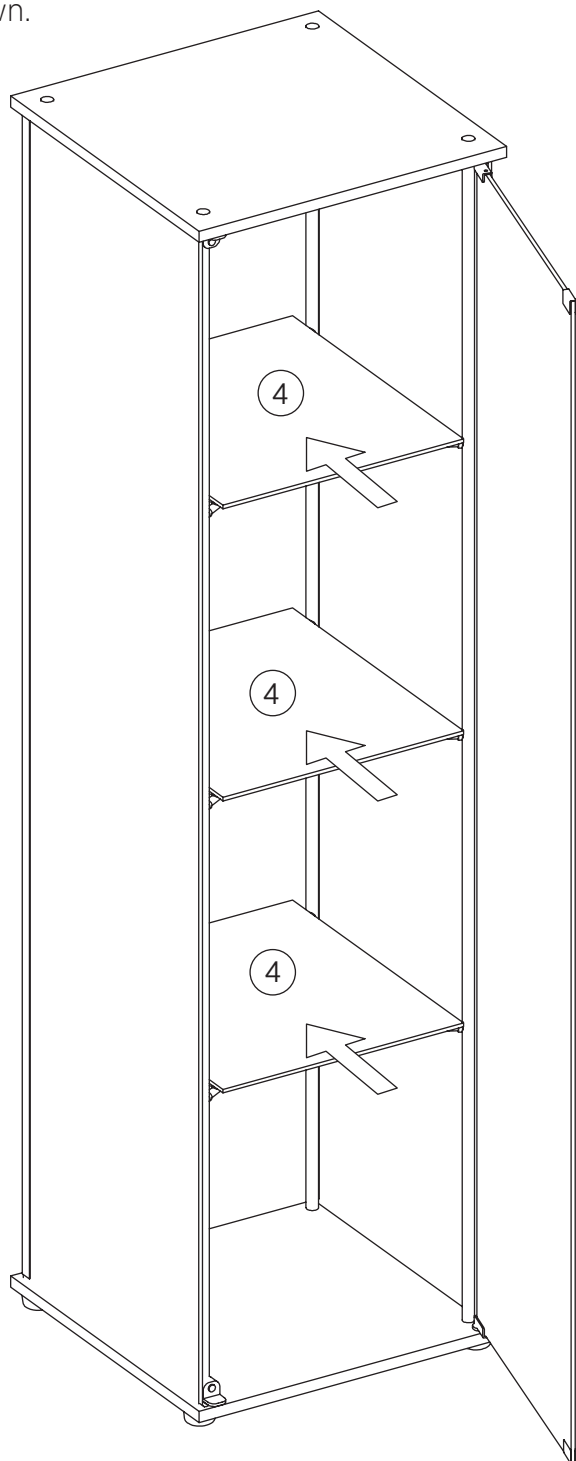

ASSEMBLY INSTRUCTIONS

 
STEP 10

**For extra stability, you must fix your product to the wall.
Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.**

Draw a pencil line directly where the top of the cabinet meets the wall, as shown.

Measure 10mm below the line and drill a hole to fit wall plug (P). Fix wall strap (O) to wall using screw (Q) and washer (N), as shown.

Pull wall strap (O) over the top of the cabinet and fix in place using screw (M) and washer (N).

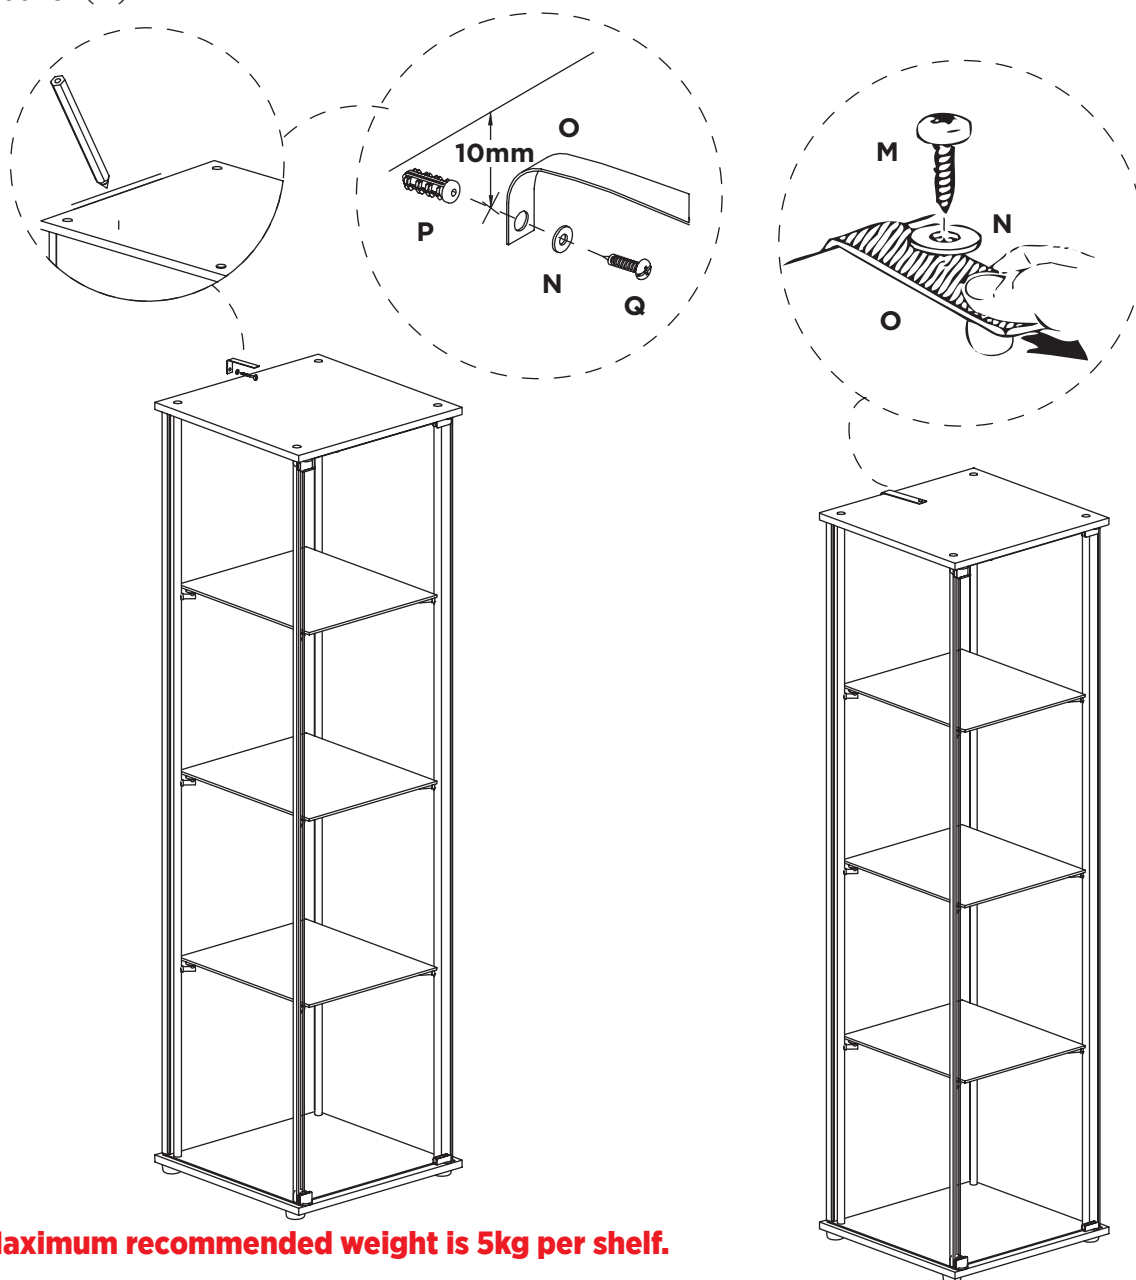

Maximum recommended weight is 5kg per shelf.

Your Glass Display Cabinet is ready for use.



WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

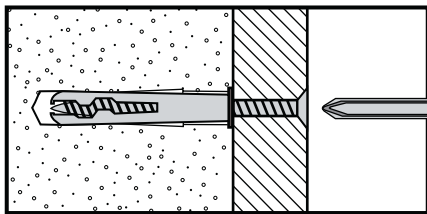


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

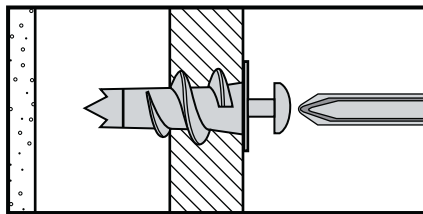


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

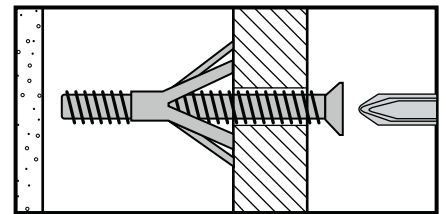


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

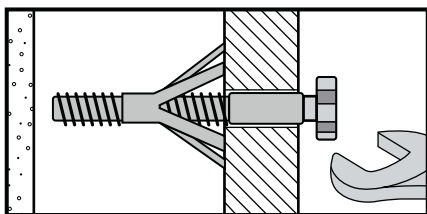


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

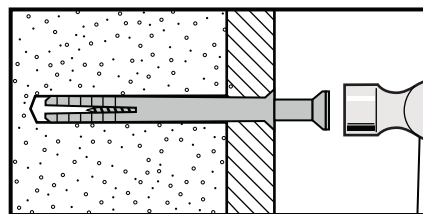

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

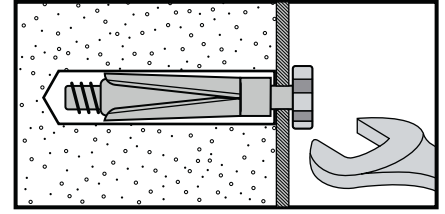

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.