 


CHEST OF 3 DRAWERS

ASSEMBLY INSTRUCTIONS

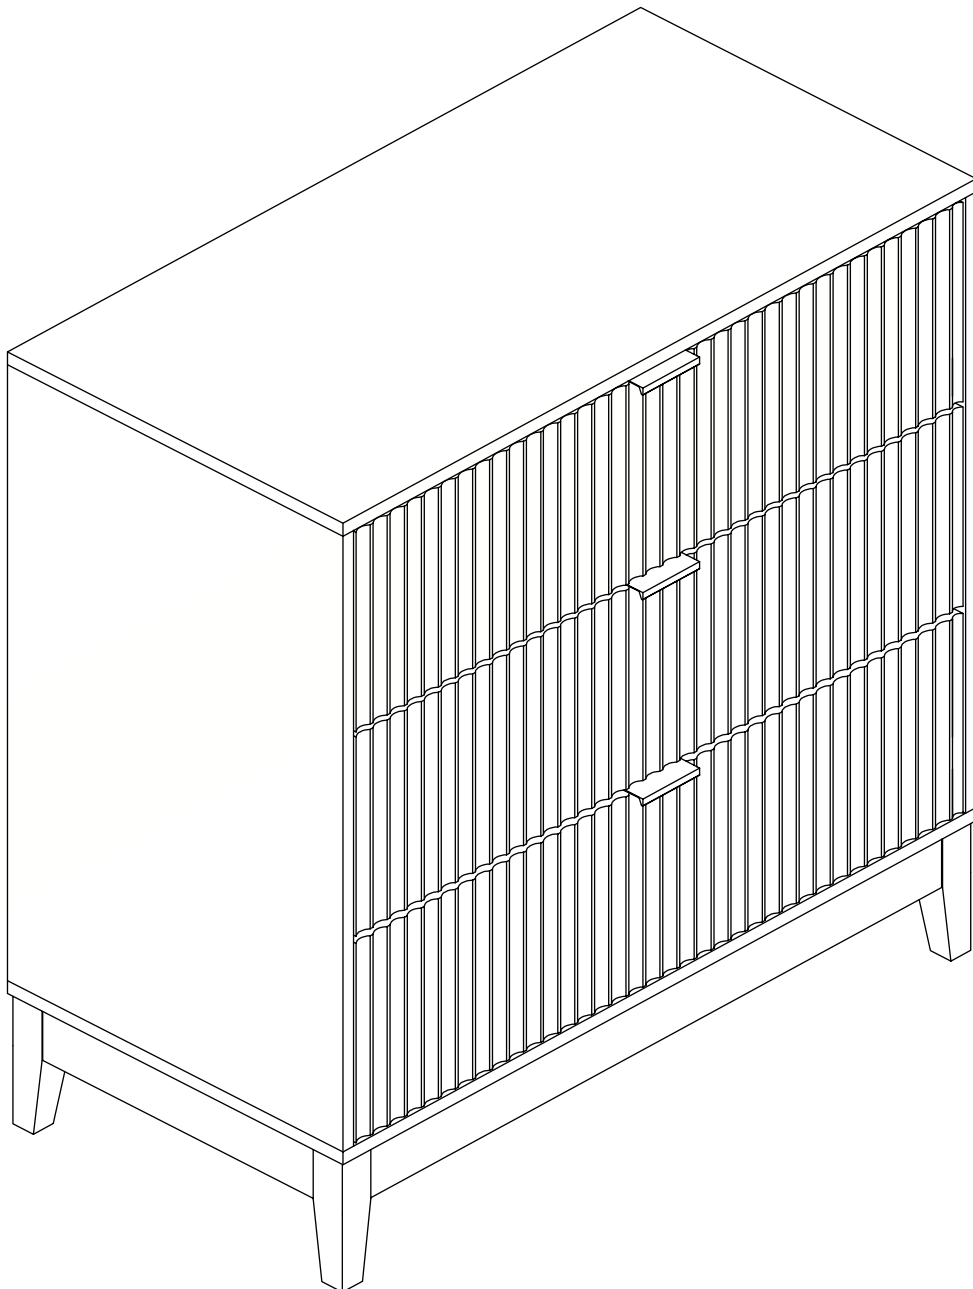

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 1.5 hour assembly time approx.

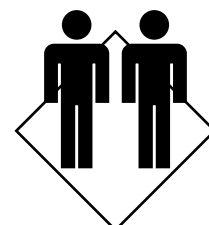

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

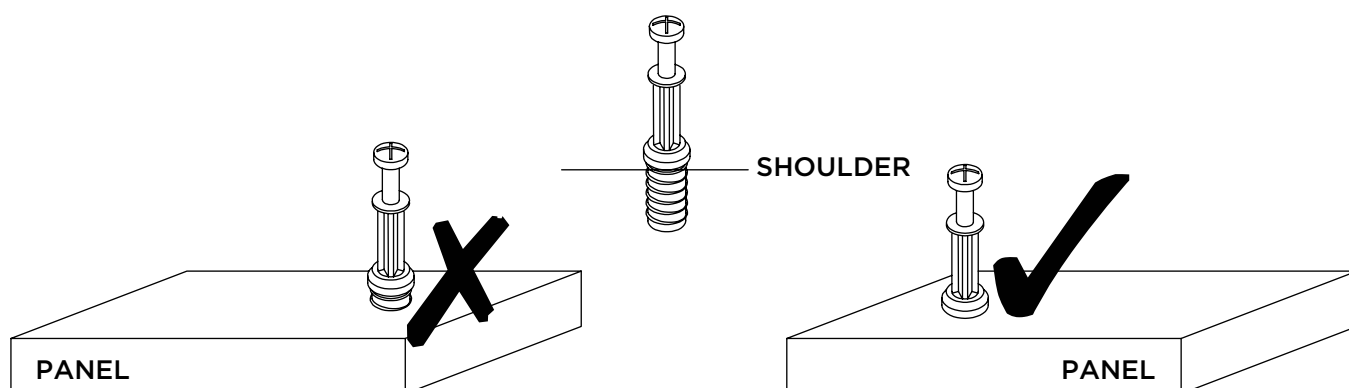


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

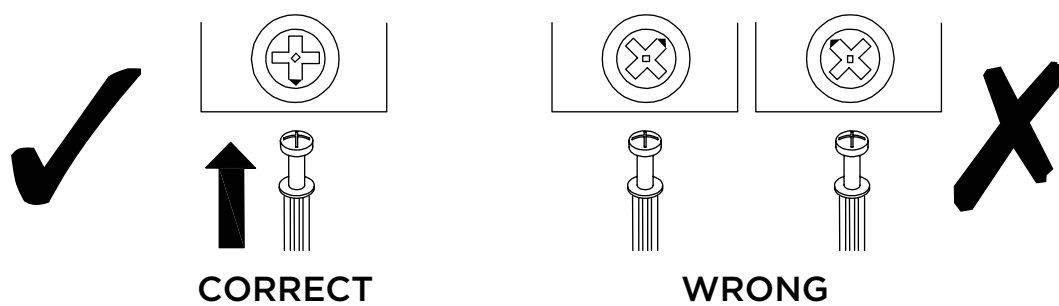

 
Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

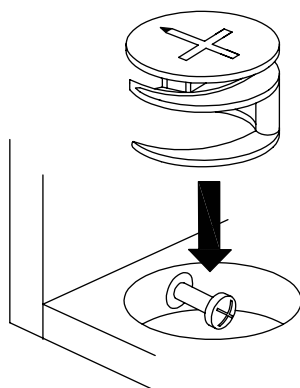

Turn cam lock clockwise to tighten.

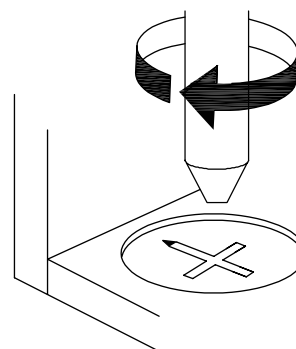 


HARDWARE LIST

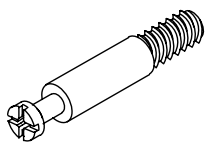 

37 x A
Quickfit Screw



 37 x B
Cam Lock

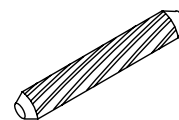


16 x C
Wooden Dowel




36 x D
Screw



 
8 x E
Screw




16 x F
Screw

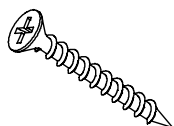 


25 x G
Screw

 

8 x H
Wedge

 

3 x I
Handle

 

8 x J
Bolts

 


8 x K
Washer



8 x L
Washer


HARDWARE LIST

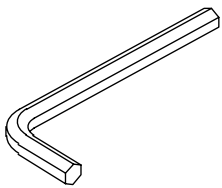


1 x M
Allen Key



 
4 x N
Rubber Pad

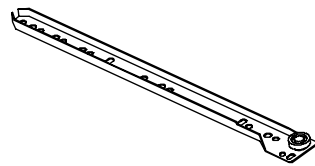


3 x O
Outer Drawer Runner

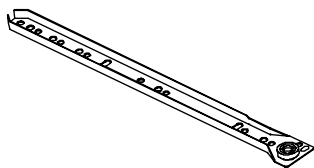 


3 x P
Outer Drawer Runner

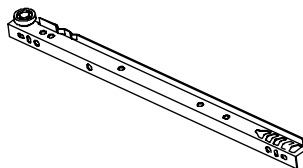 


3 x Q
Inner Drawer Runner

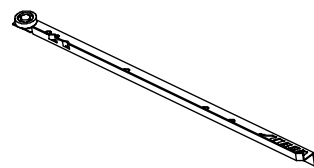 

3 x R
Inner Drawer Runner

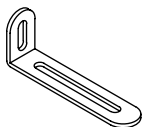 

2 x S
Wall Bracket

 


2 x T
Wall Plug




2 x U
Screw

 
PARTS LIST

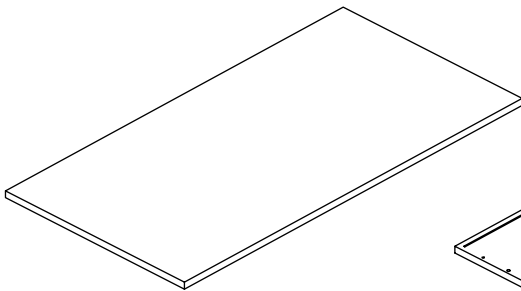


1
1 PC

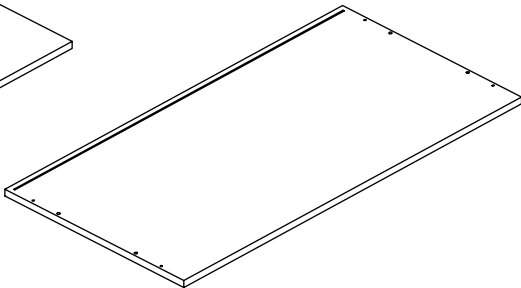 


2
1 PC

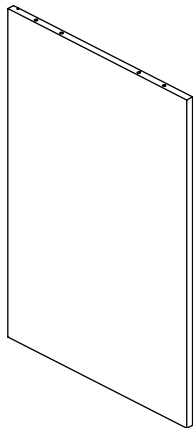 


3
1 PC

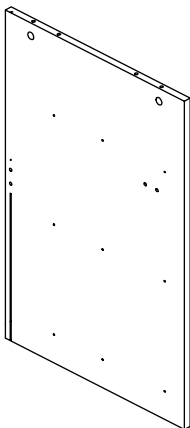 


4
1 PC

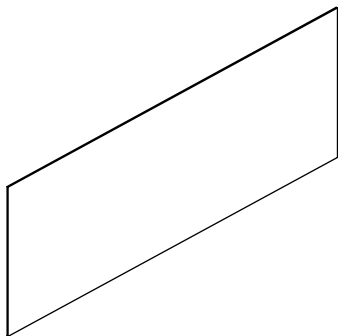 


5
1 PC

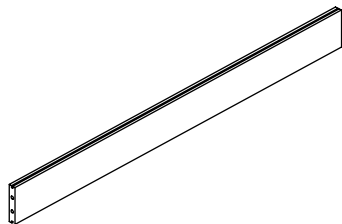 


6
1 PC

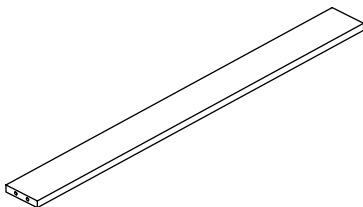 

7
1 PC

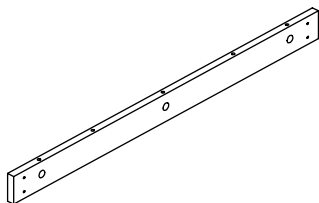 


8
2 PCS

 


9
2 PCS

 
PARTS LIST




10
4 PCS

 


11
4 PCS

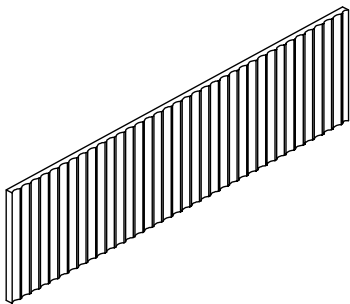 


12
3 PCS

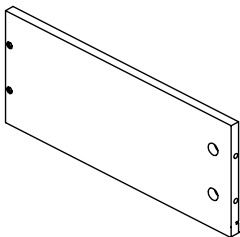 


13
3 PCS

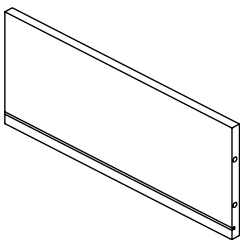 


14
3 PCS

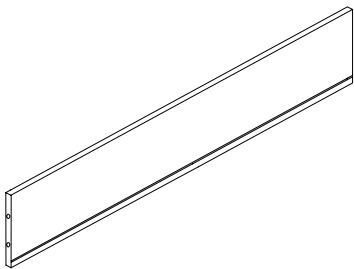 


15
3 PCS

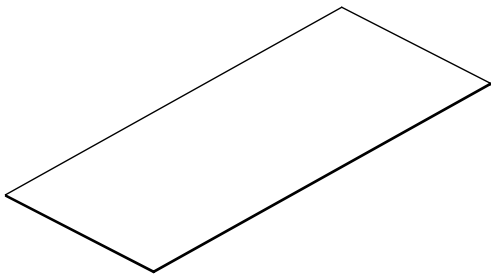 


16
3 PCS

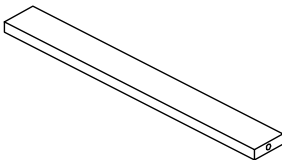 

17
3 PCS

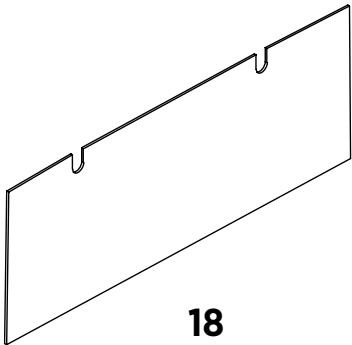 

18
1 PC

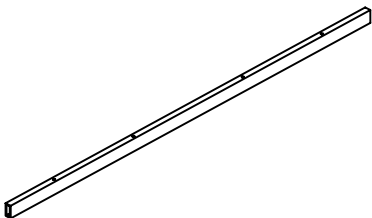 

19
1 PC

 
ASSEMBLY INSTRUCTIONS

STEP 1

Insert quickfit screw (A) to parts 1 and 2.

Fix wall bracket (S) to part 1 using screw (U).

Fix part 19 to part 1 using screw (G), as shown.



A x 14



 
 
G x 4



S x 2






U x 4

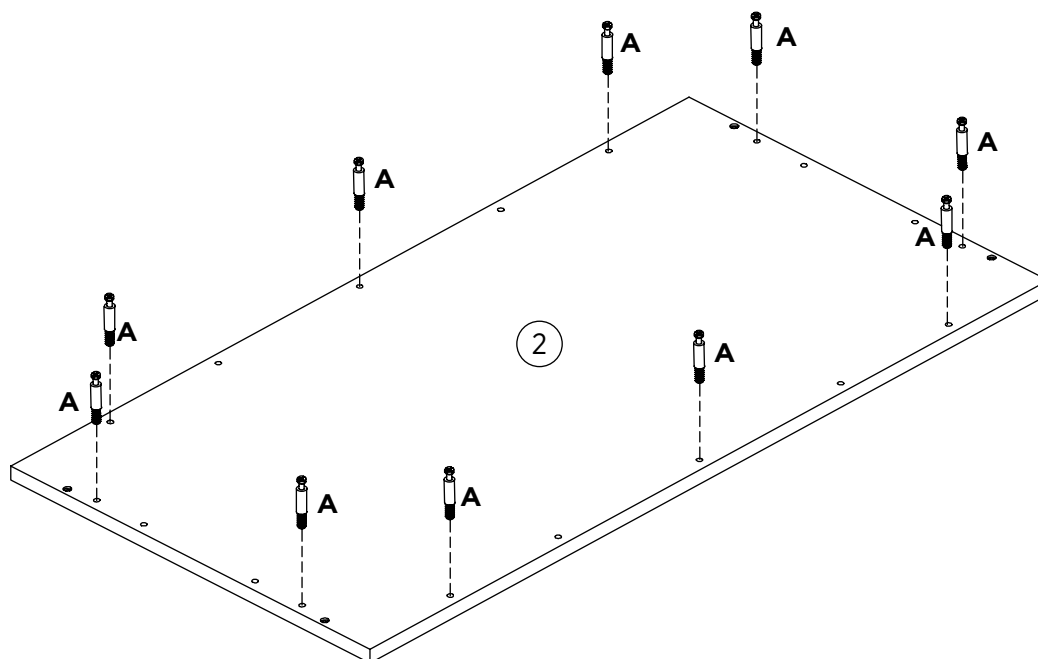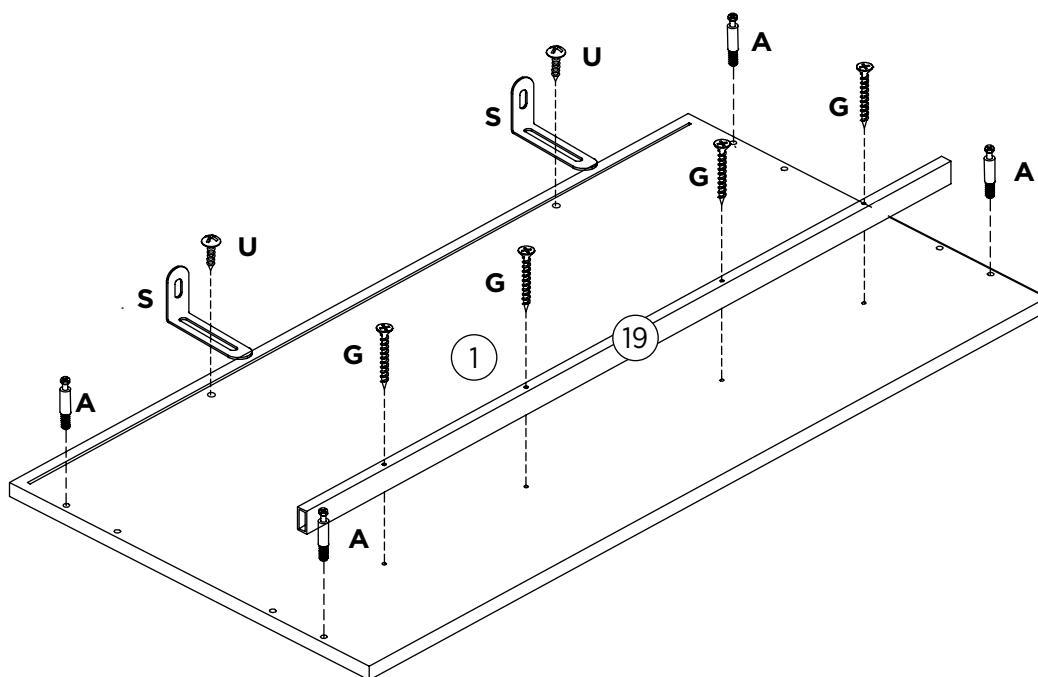

ASSEMBLY INSTRUCTIONS

STEP 2

   
Insert quickfit screw (A) to parts 3 and 4, as shown.

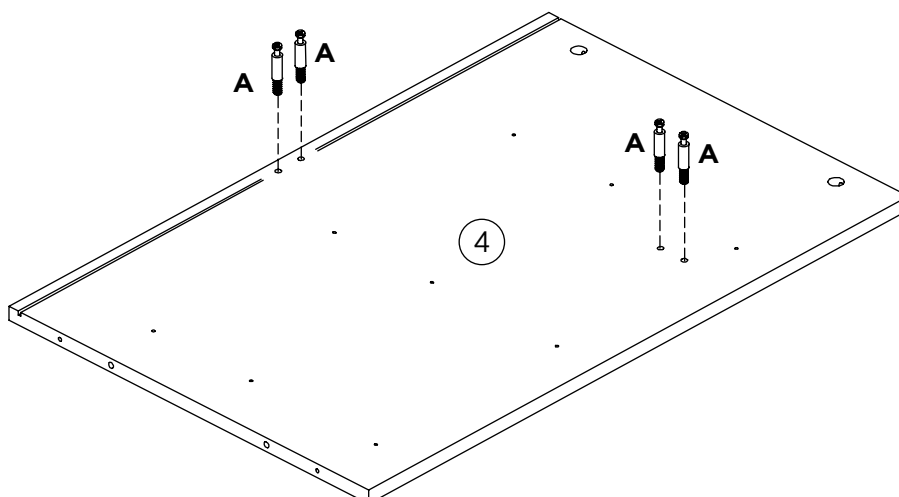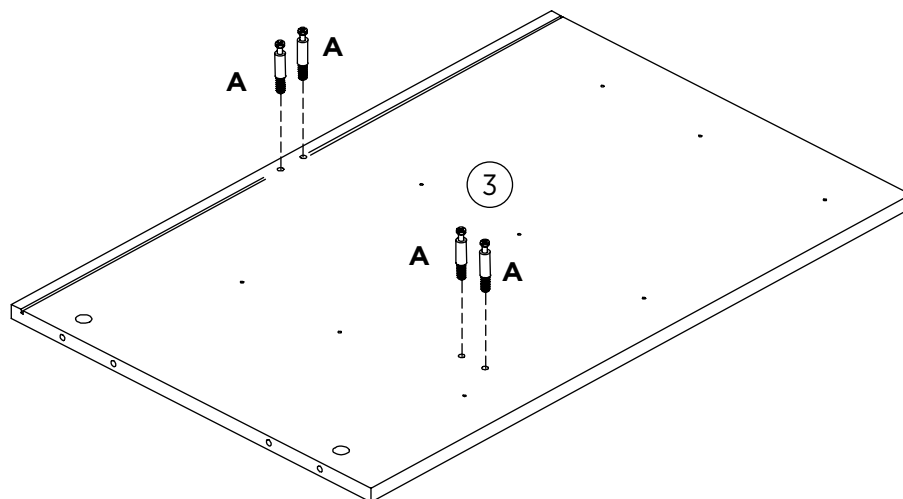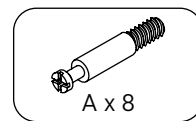

ASSEMBLY INSTRUCTIONS

STEP 3

 Fix outer drawer runners (P) to part 4 using screws (D), as shown.

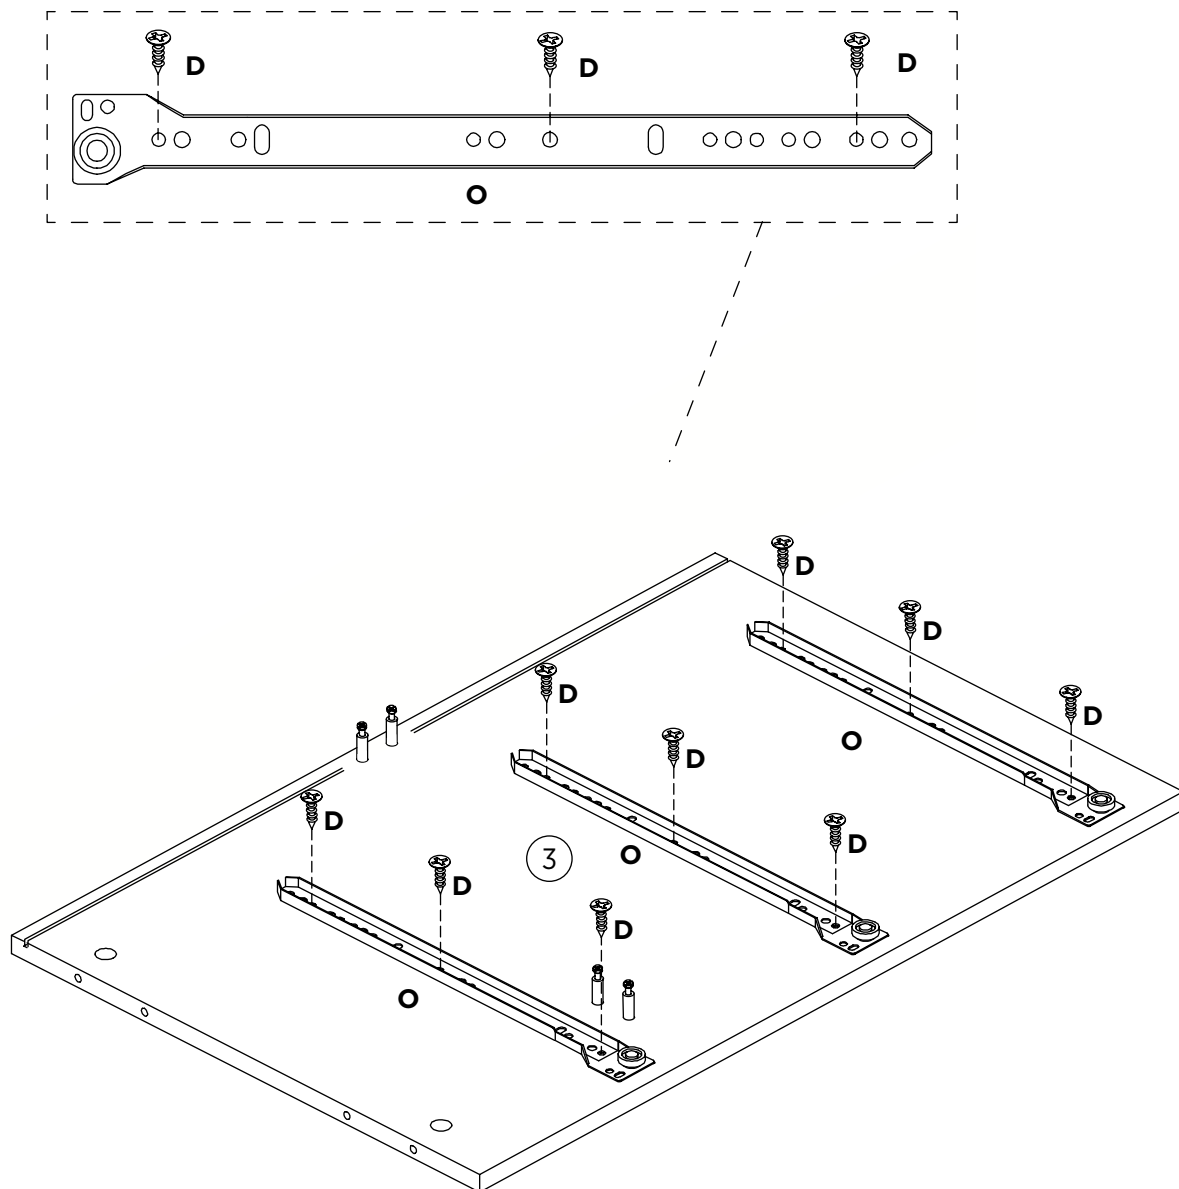


ASSEMBLY INSTRUCTIONS

STEP 4


Fix outer drawer runners (O) to part 4 using screws (D), as shown.



 D x 9



P x 3

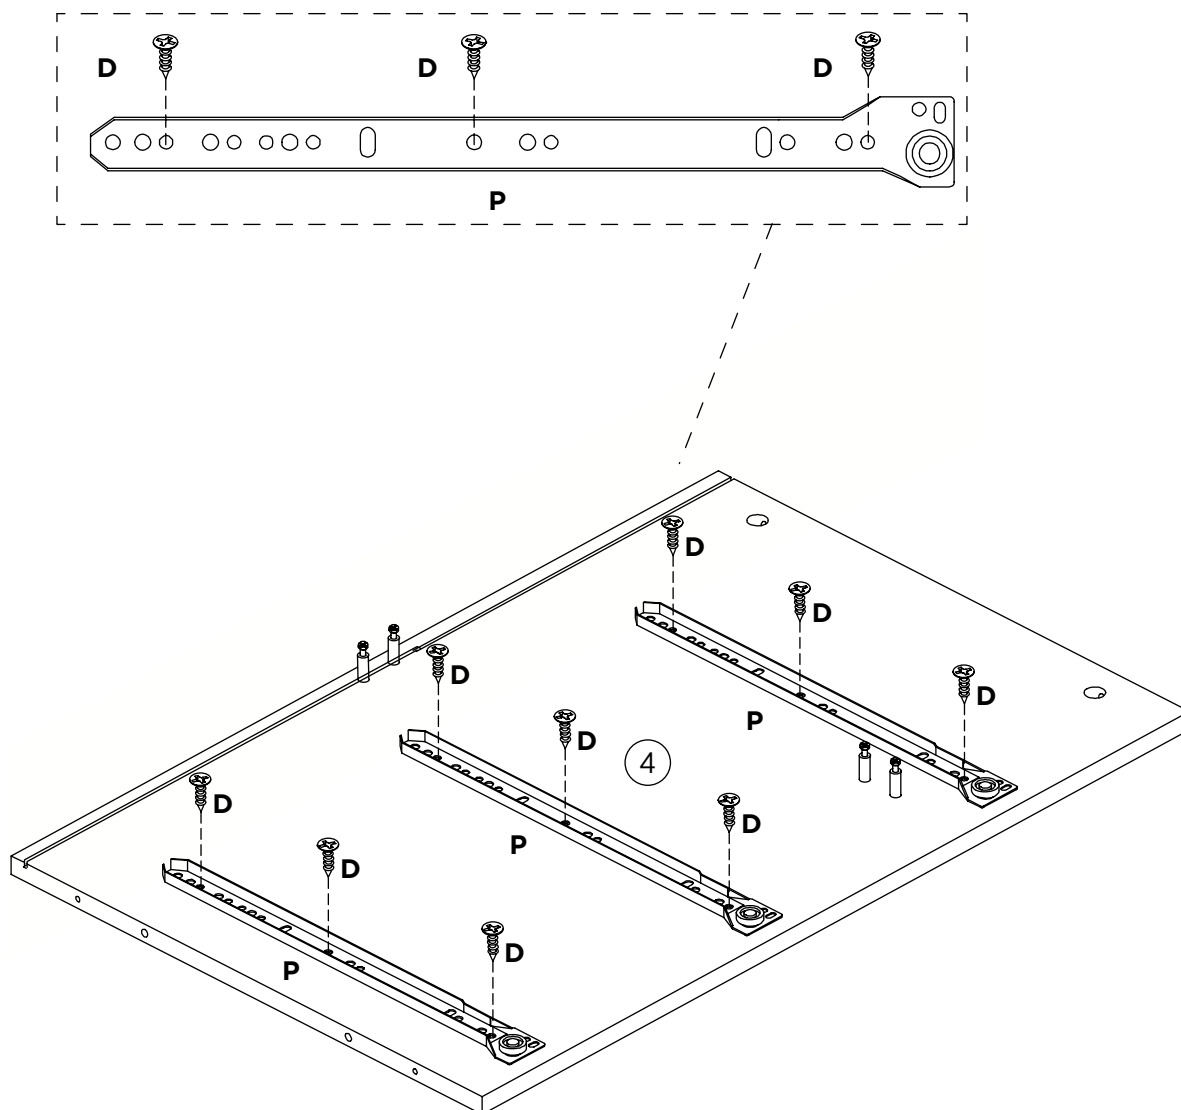 



ASSEMBLY INSTRUCTIONS

STEP 5

Insert cam locks (B) to parts 6 and 7.

Attached part 6 and 7 to parts 3 and 4, as shown.

  
Turn cam locks clockwise to tighten.

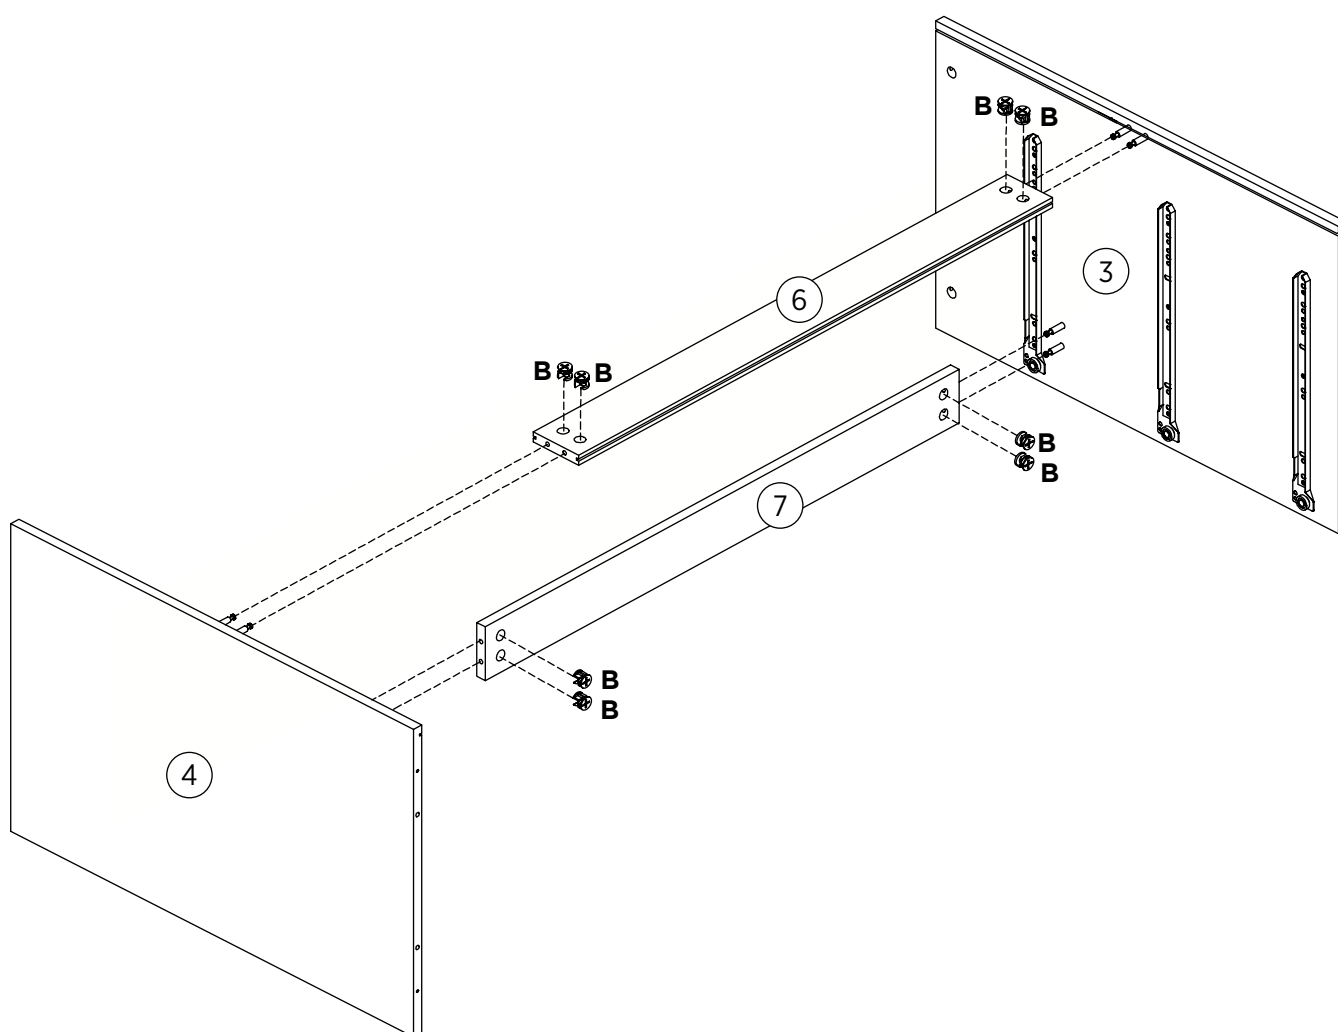

ASSEMBLY INSTRUCTIONS

STEP 6

 Insert part 5 into grooves between parts 3, 4 and 6, as shown.

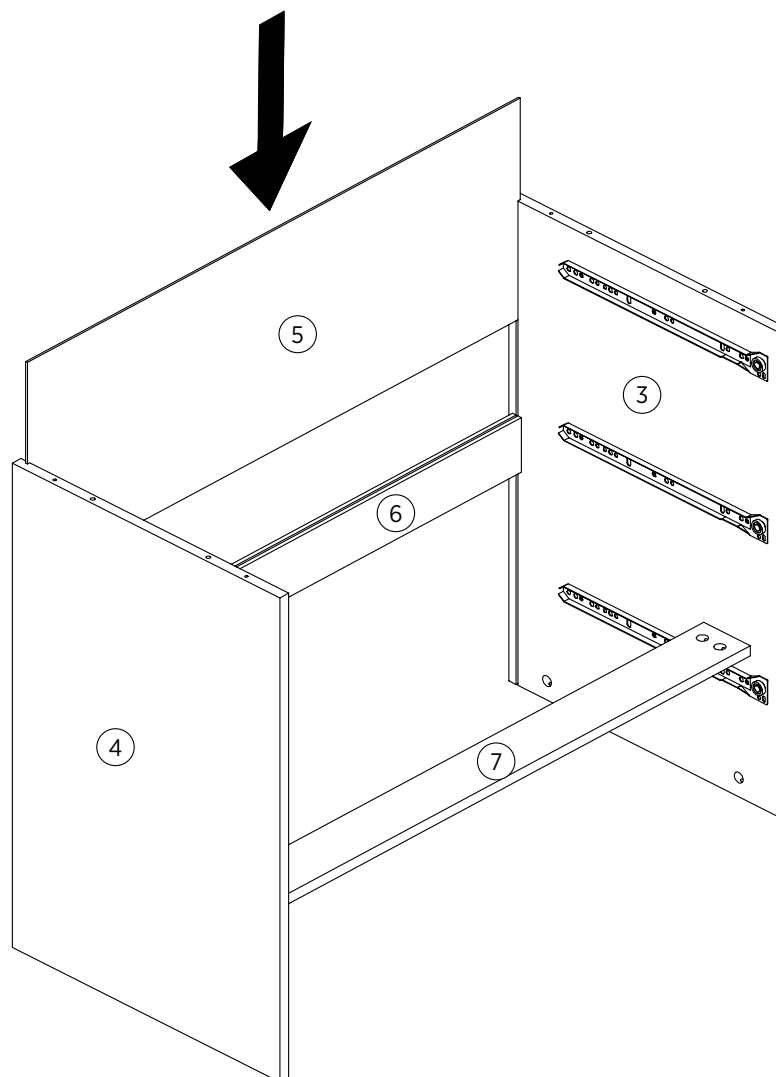

ASSEMBLY INSTRUCTIONS

STEP 7

Insert wooden dowel (C) to parts 3 and 4.

 
Attach part 2 to parts 3 and 4 using screws (G), as shown.



C x 4





G x 4

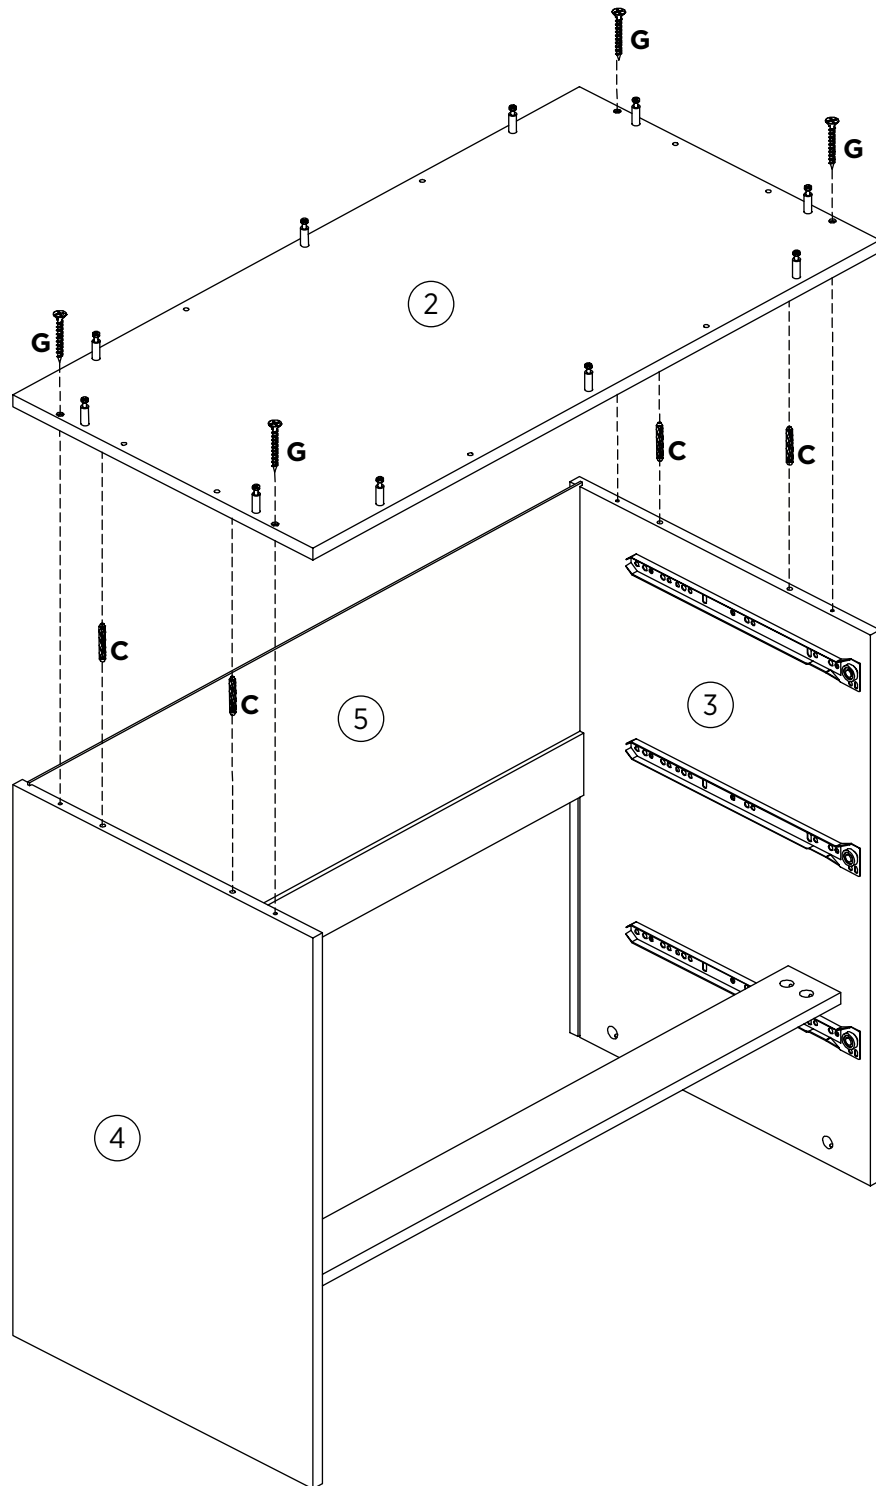

ASSEMBLY INSTRUCTIONS

STEP 8

 
 
Fix parts 10 to parts 8 and 9 using screws (F), as shown.

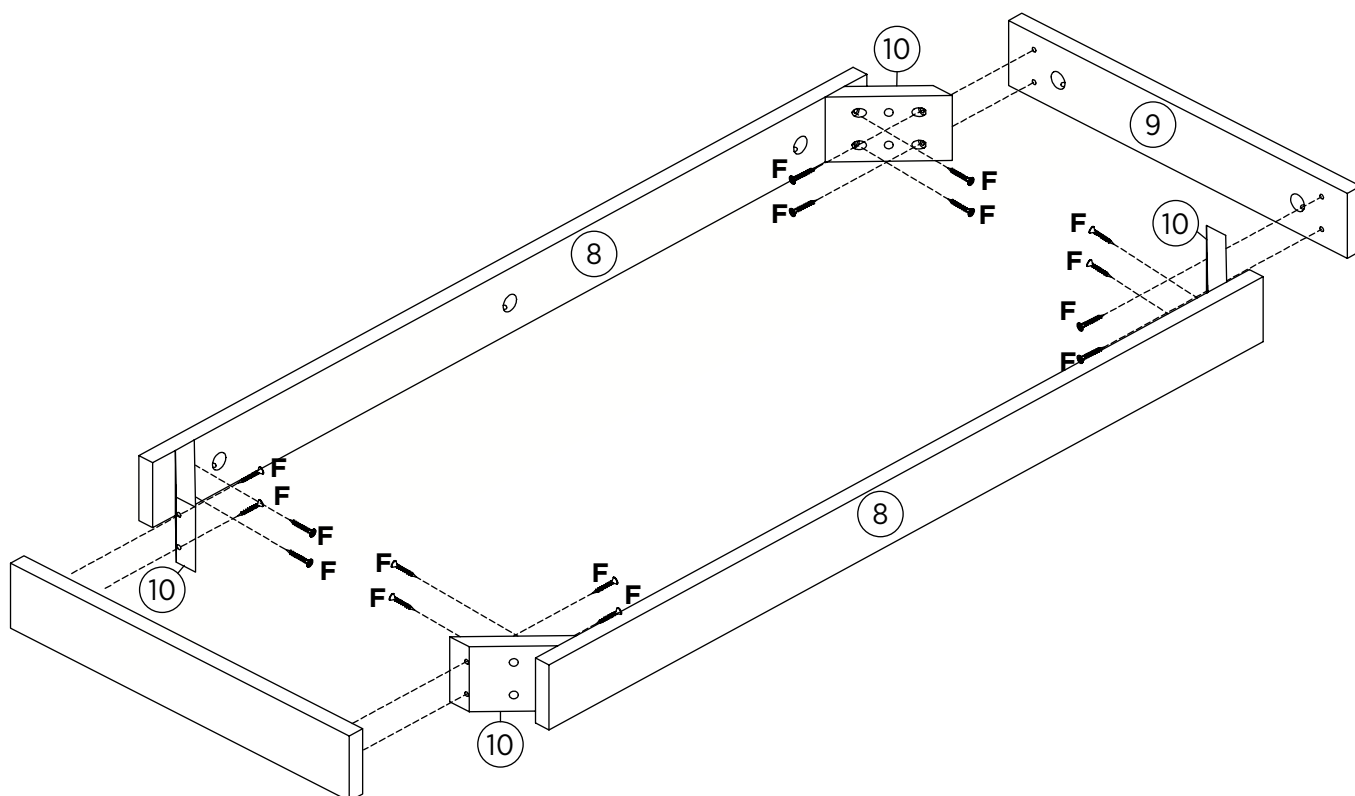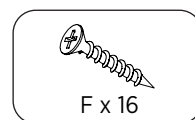

ASSEMBLY INSTRUCTIONS

STEP 9

  Insert wooden dowels (C) to part2, as shown.

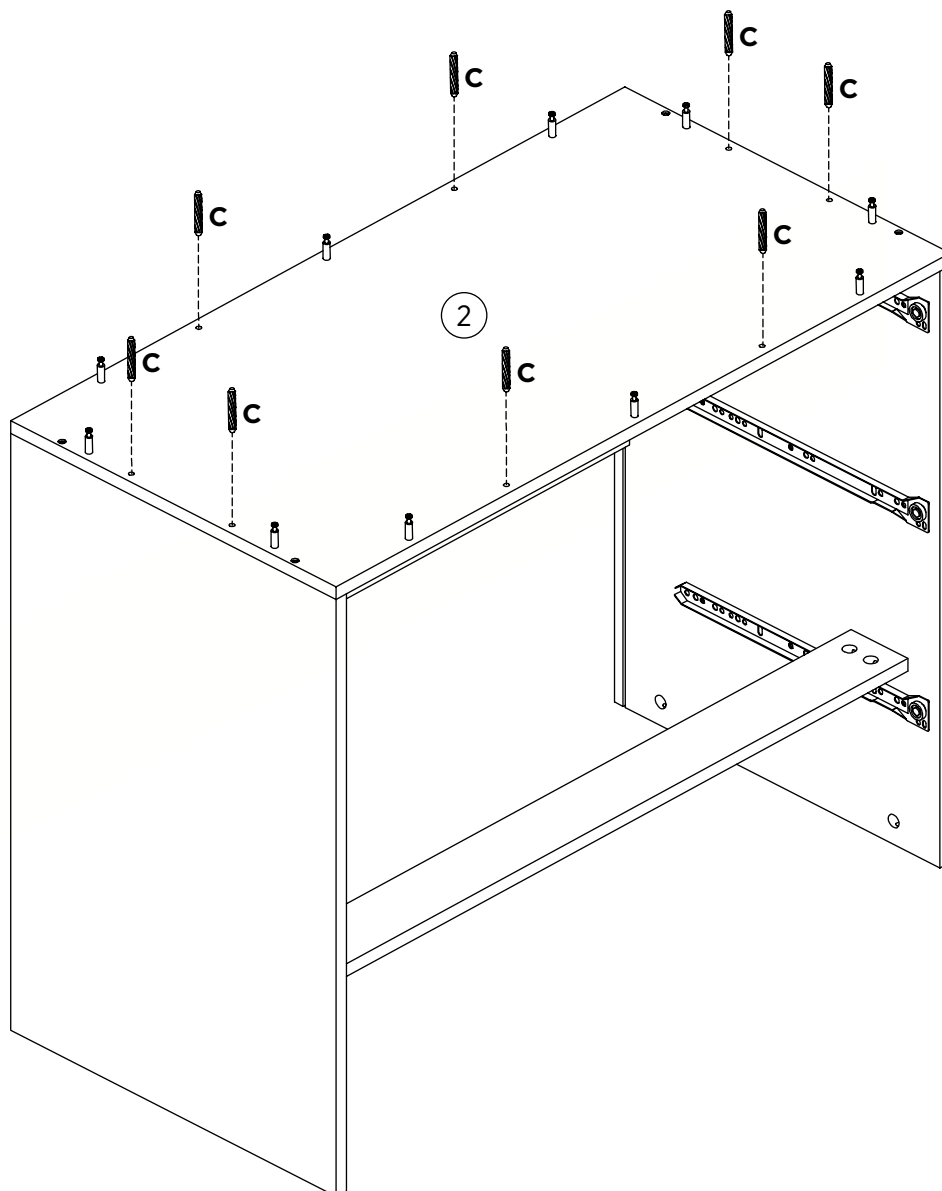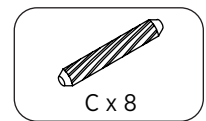



ASSEMBLY INSTRUCTIONS

STEP 10

Insert cam locks (B) to parts 8 and 9.

Attach the assembled unit to part 2, as shown.

  Turn cam locks clockwise to tighten.

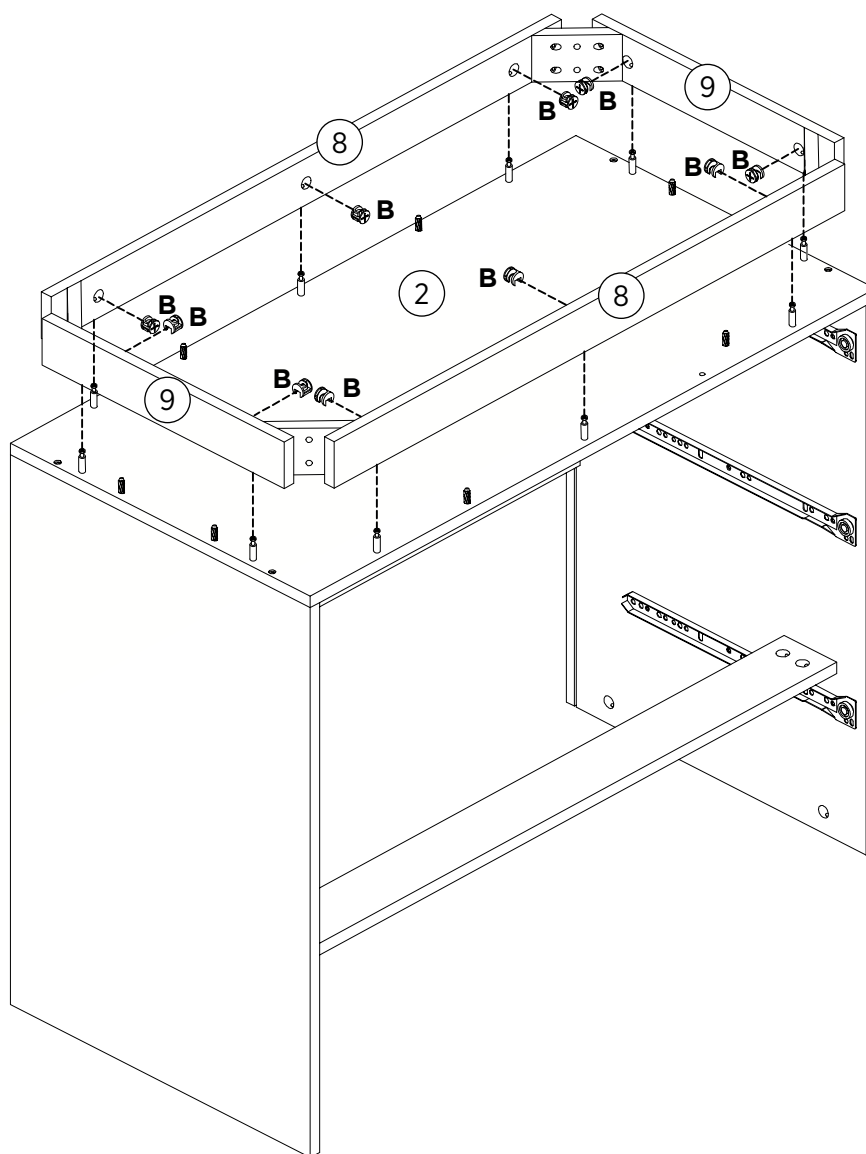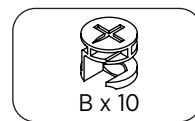


ASSEMBLY INSTRUCTIONS

STEP 11

Attach rubber pads (N) to parts 11.

 
Fix parts 11 to parts 10 using washers (L), washers (K) and bolts (J), as shown.

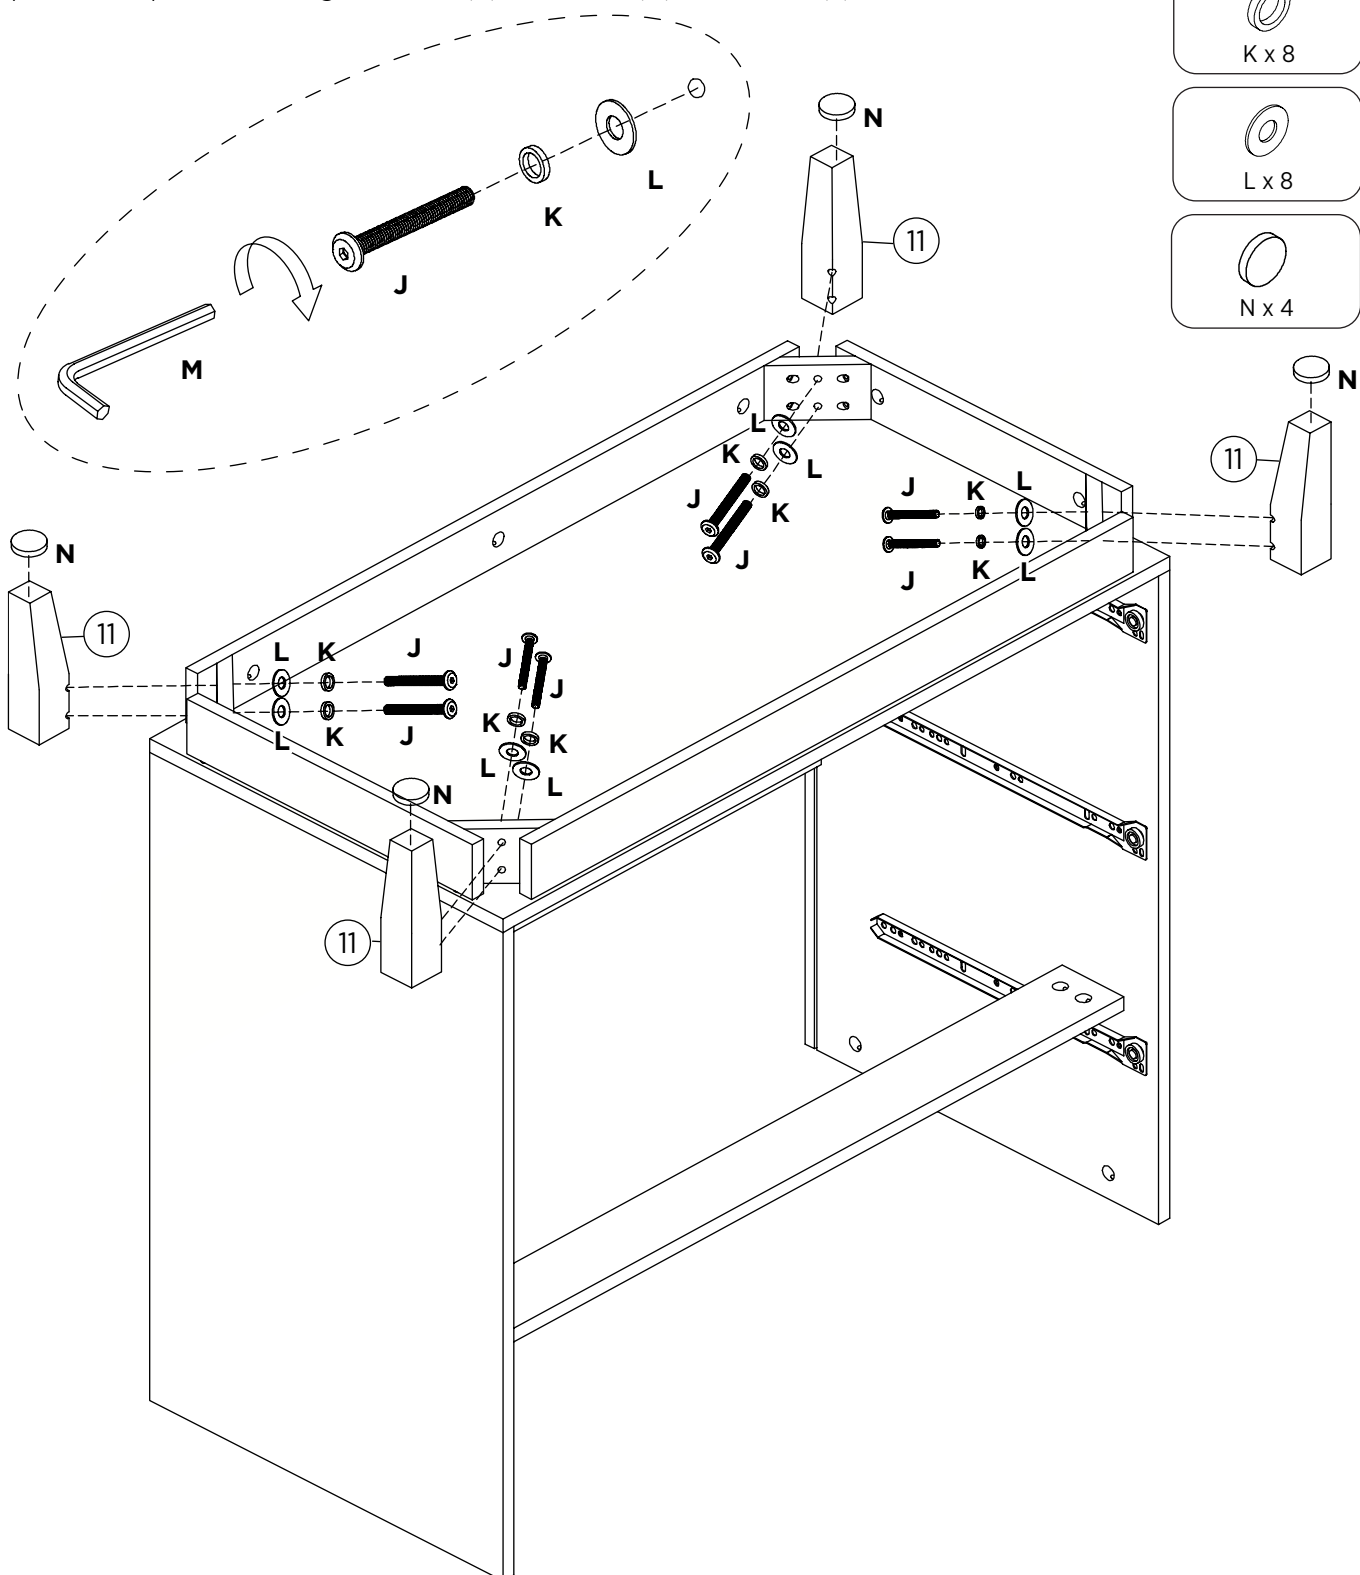

ASSEMBLY INSTRUCTIONS

STEP 12

 Insert part 18 into grooves between parts 3, 4 and 6, as shown.

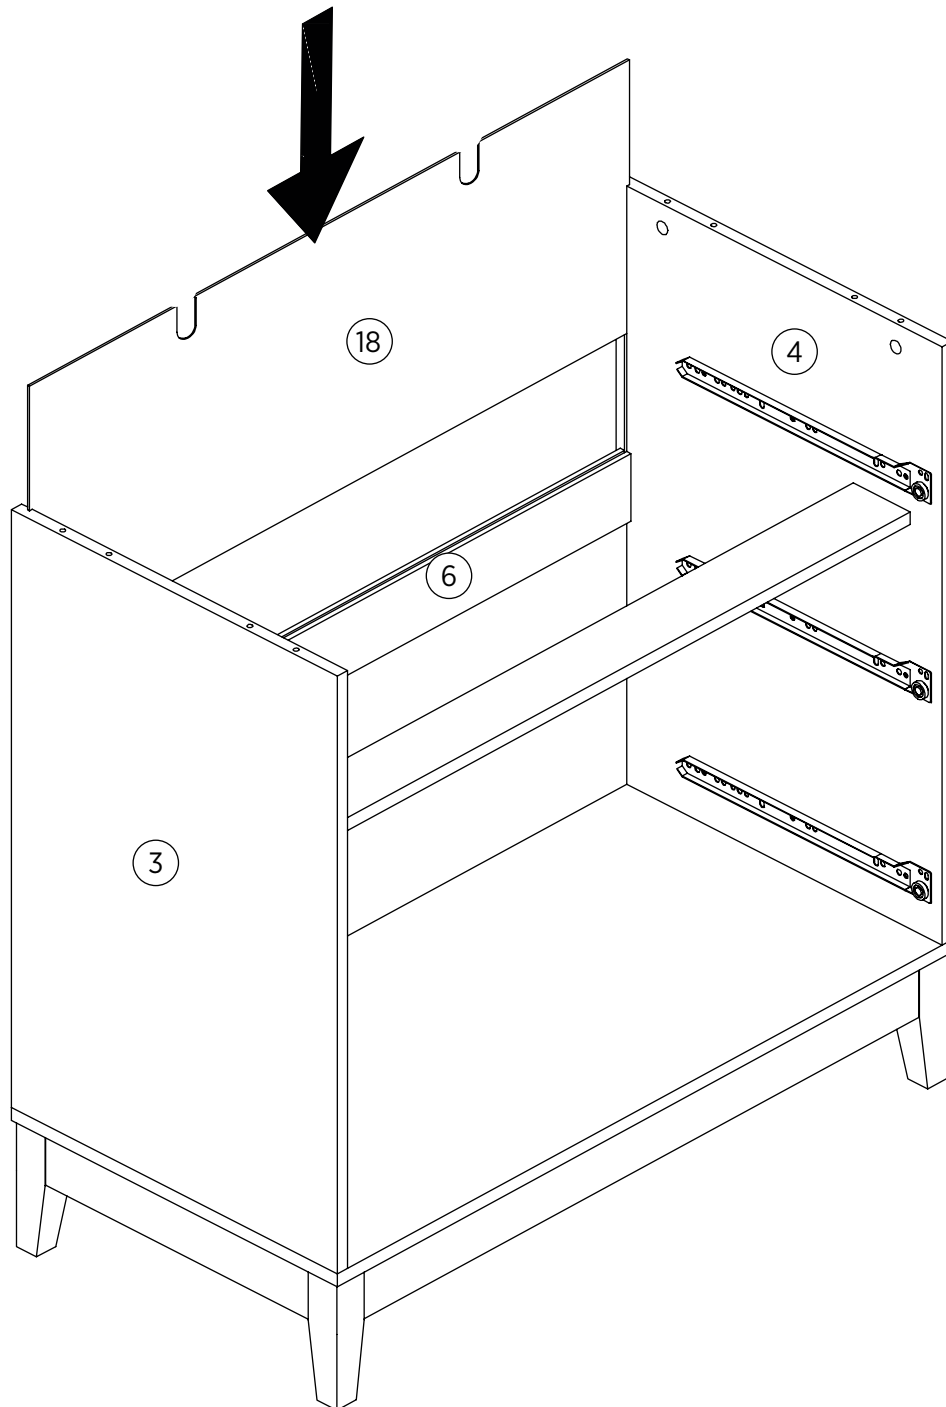



ASSEMBLY INSTRUCTIONS

STEP 13

Insert cam locks (B) and wooden dowel (C) to parts 3 and 4.

Fix part 1 to unit, as shown.



 
 
Turn cam locks clockwise to tighten.

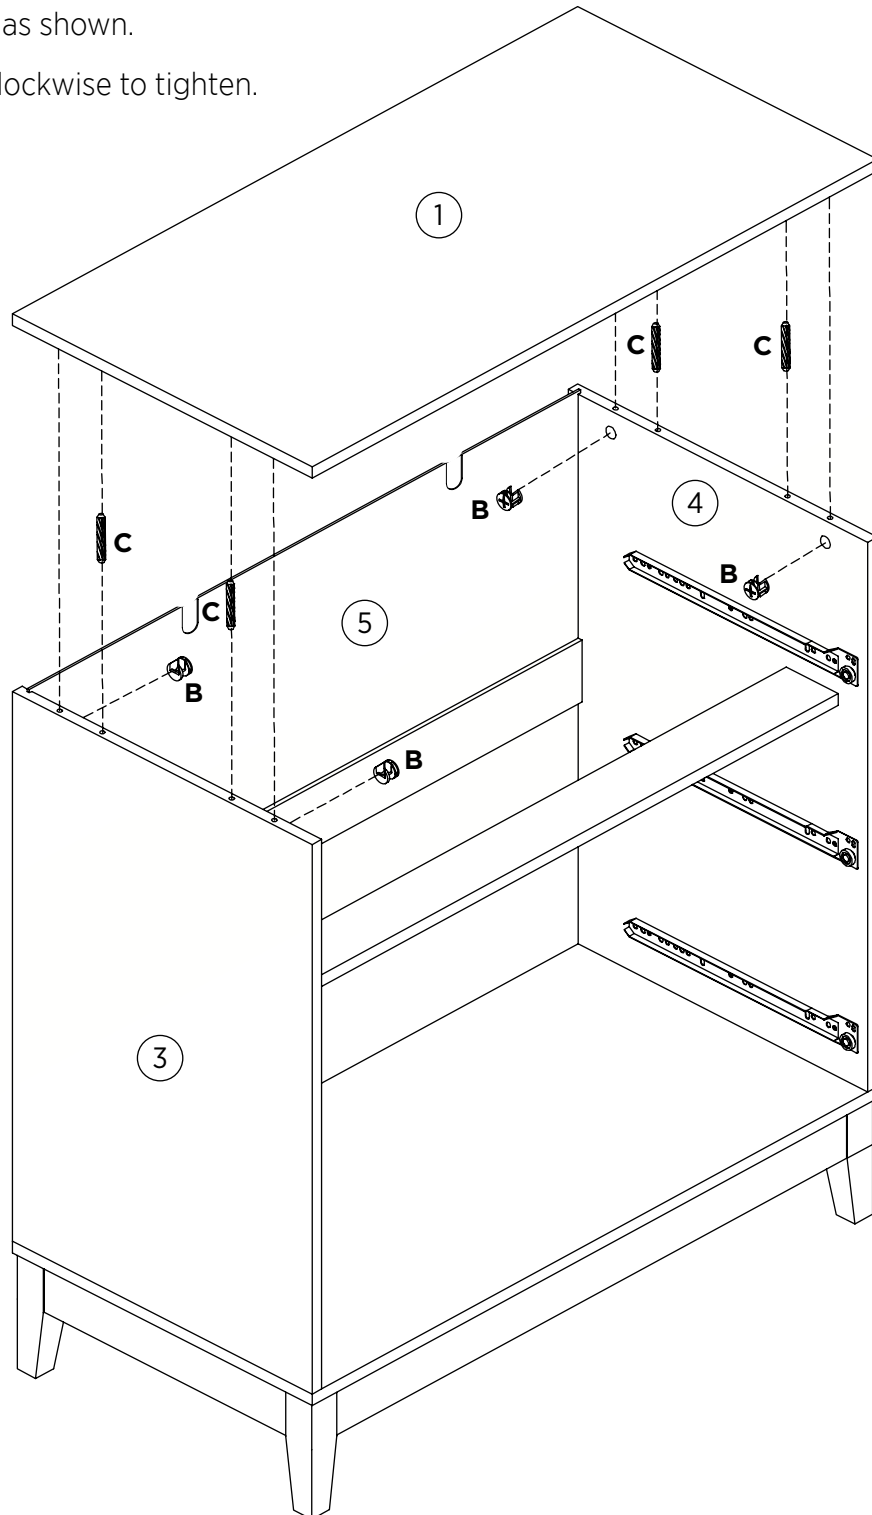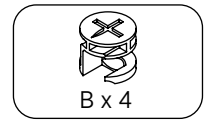

ASSEMBLY INSTRUCTIONS

STEP 14

    Fix inner drawer runners (Q and R) to parts 13 and 14 using screws (D), as shown.

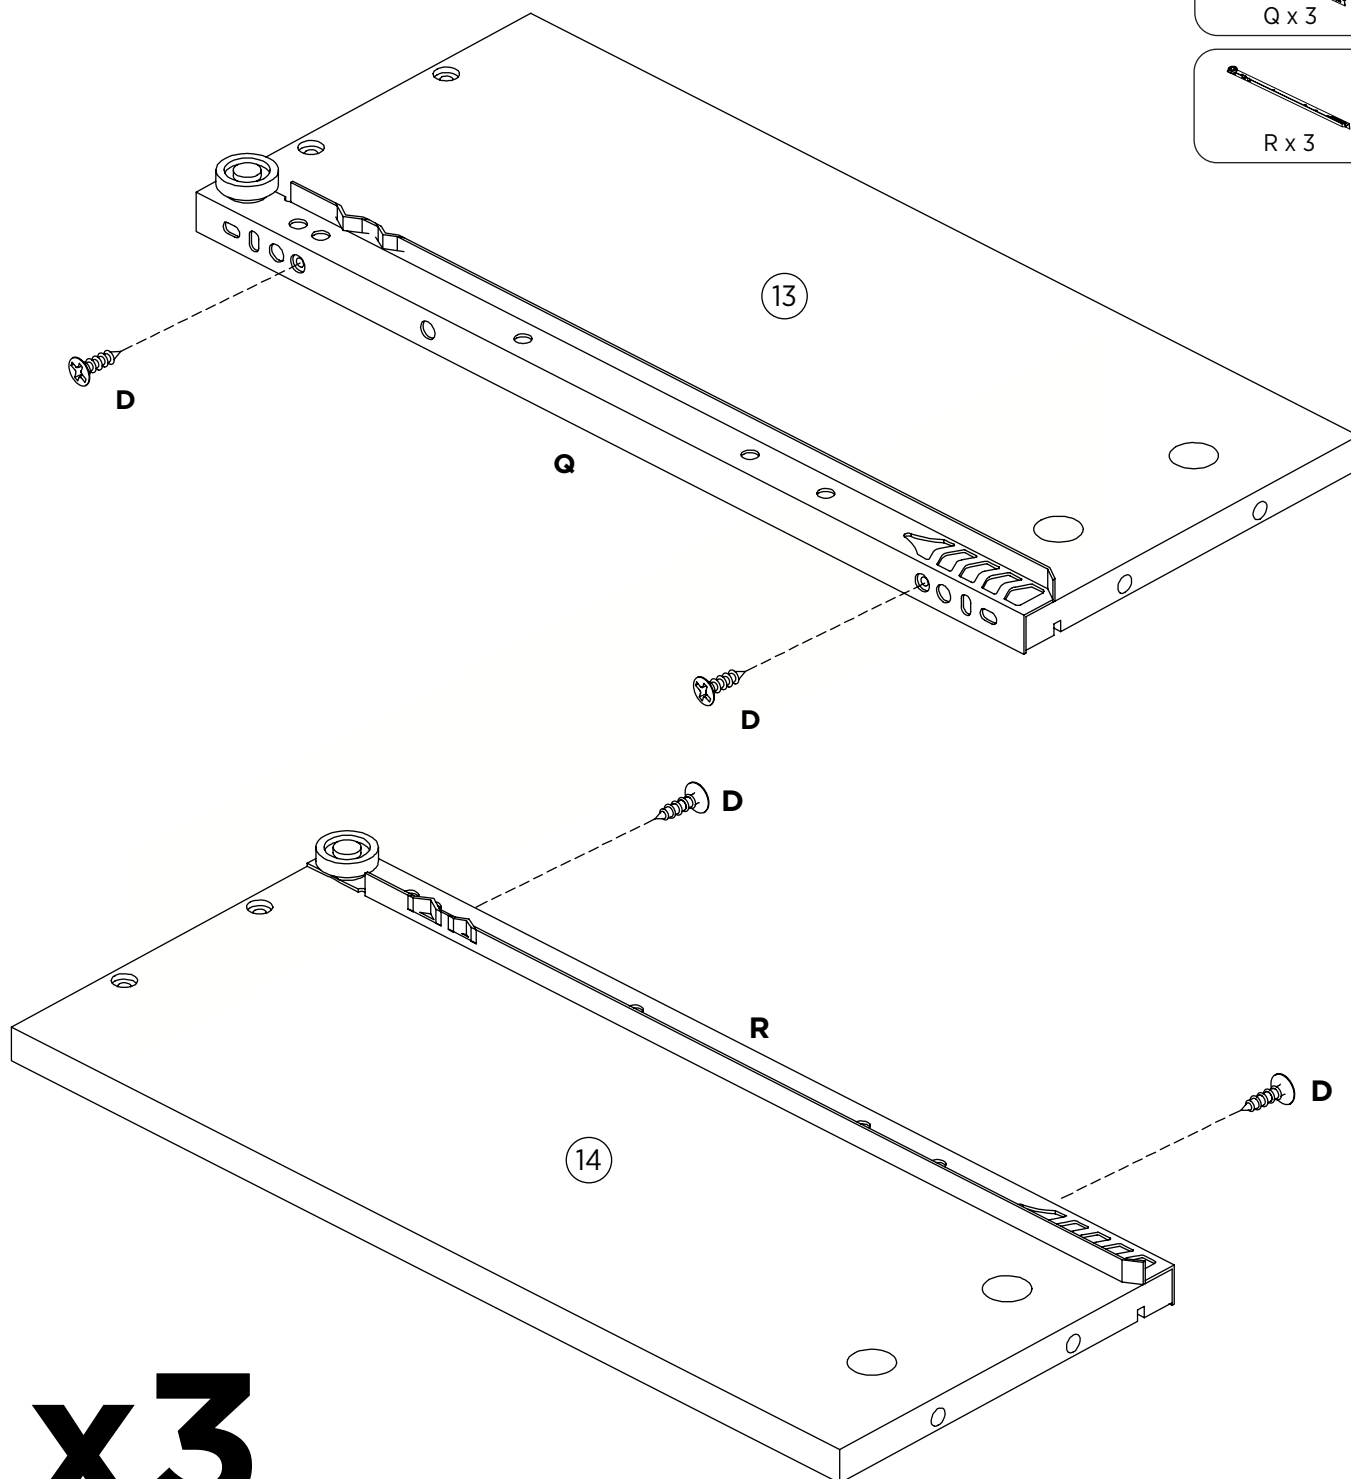





ASSEMBLY INSTRUCTIONS

STEP 15

Insert quickfit screws (A) to part 12.

    Fix the handle (I) to part 12 using screws (D), as shown.

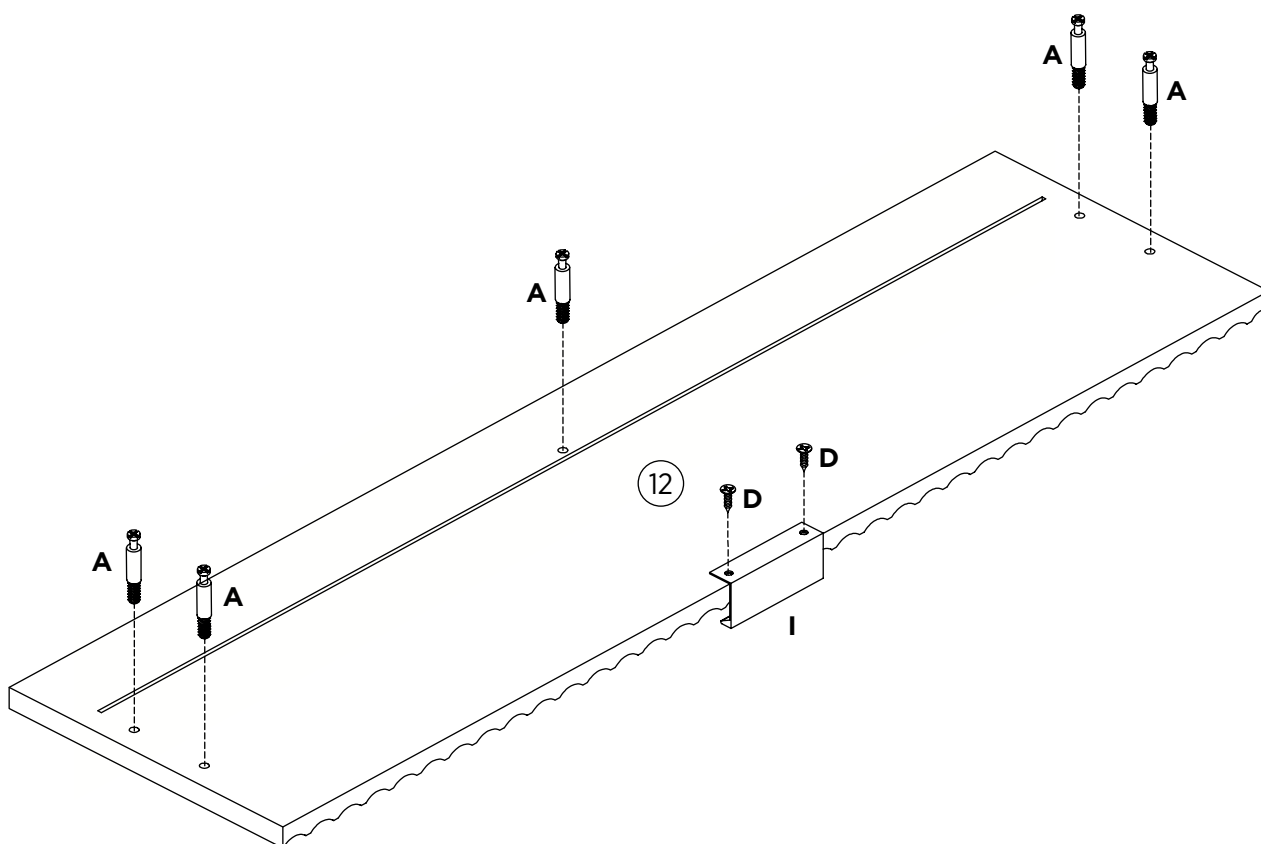



x3

ASSEMBLY INSTRUCTIONS

STEP 16

  Fix part 15 to parts 13, 14 and 17 using screws (G), as shown.

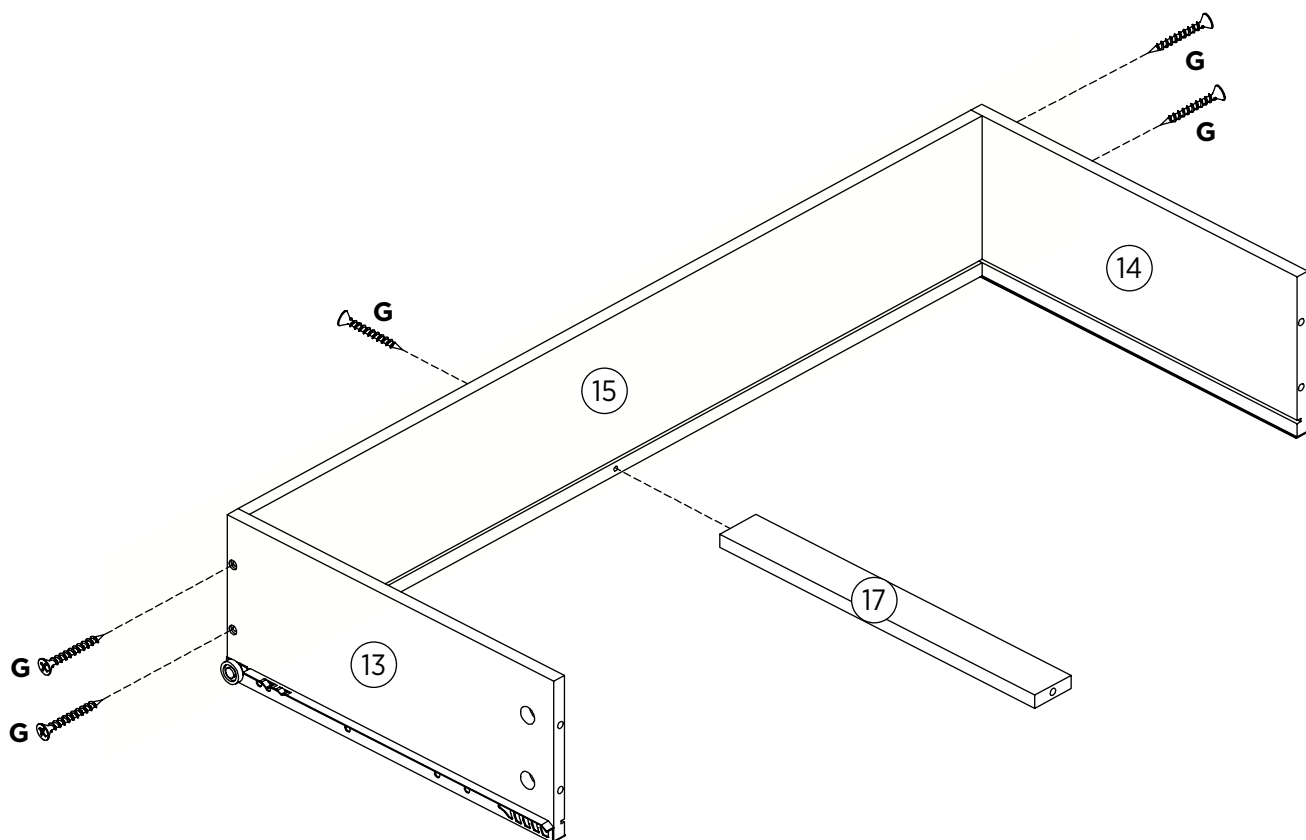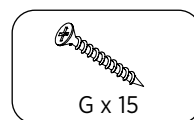


x3

ASSEMBLY INSTRUCTIONS

STEP 17

 Insert part 16 into grooves between parts 13, 14 and 15, as shown.

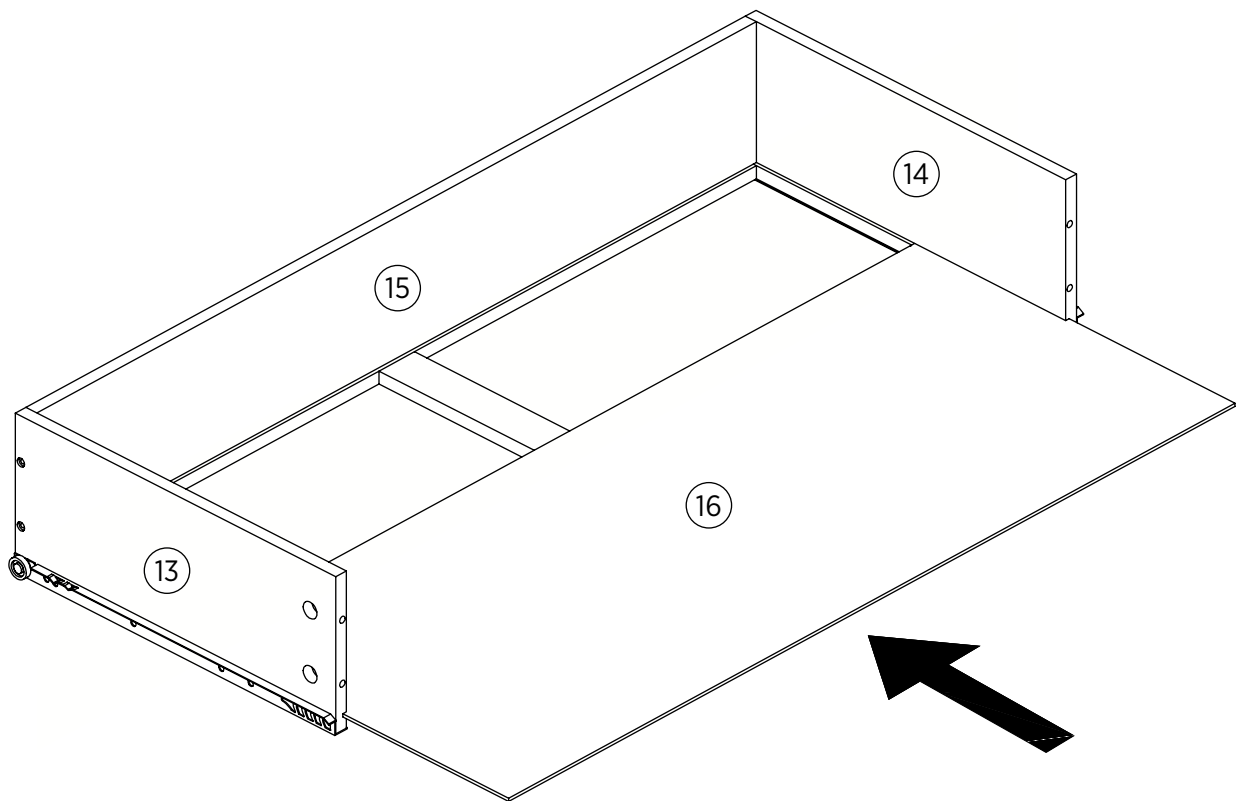

x3

 
 
ASSEMBLY INSTRUCTIONS

STEP 18

Insert cam locks (B) to parts 13, 14 and 17.

Fix part 12 to parts 13, 14 and 17, as shown.

Turn cam locks clockwise to tighten.

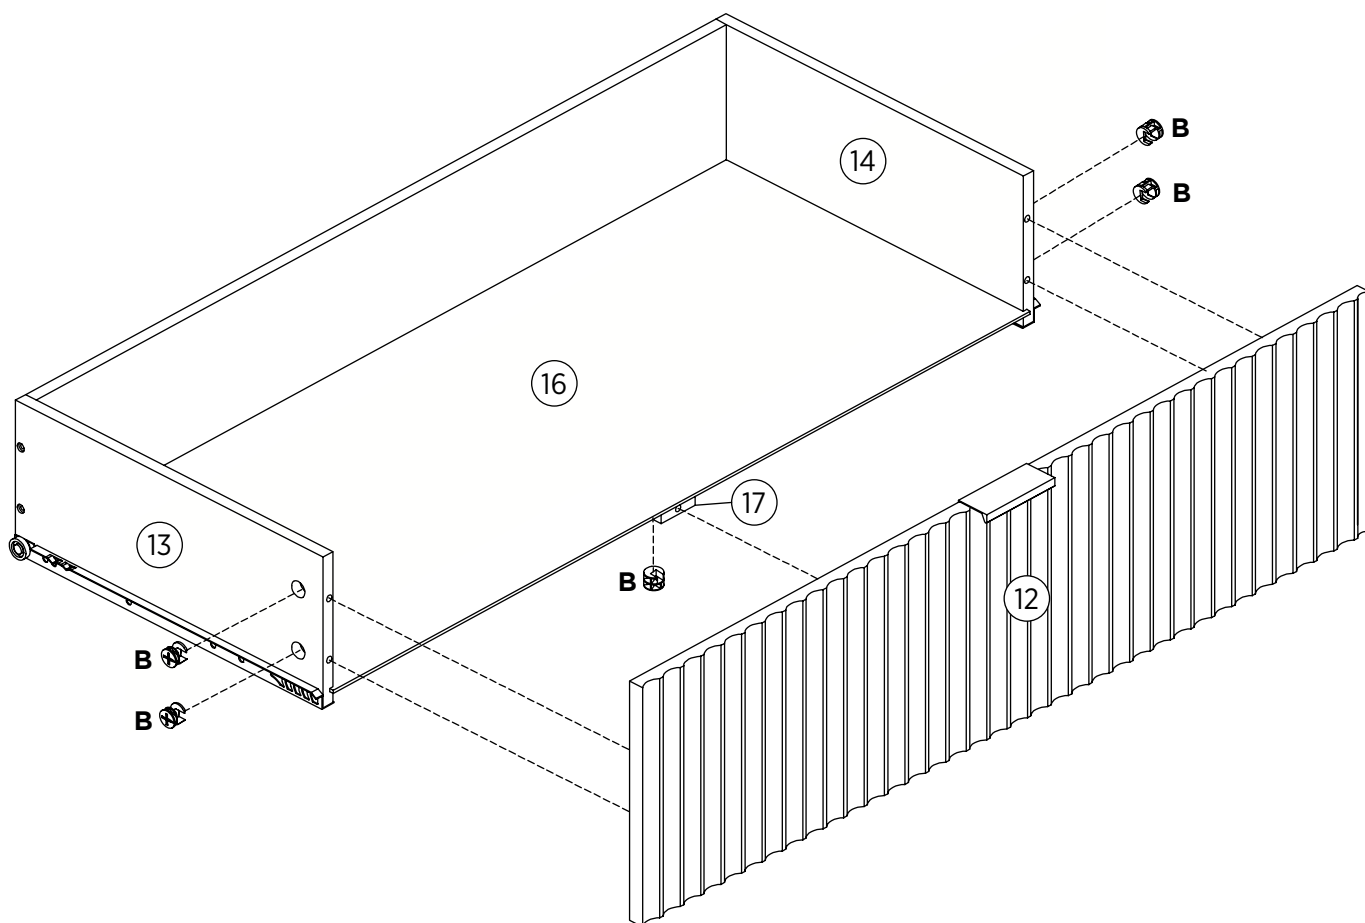

x3

ASSEMBLY INSTRUCTIONS

STEP 19

 
To secure part 5 and 18, fix wedges (H) using screws (E), as shown.



E x 4



H x 4

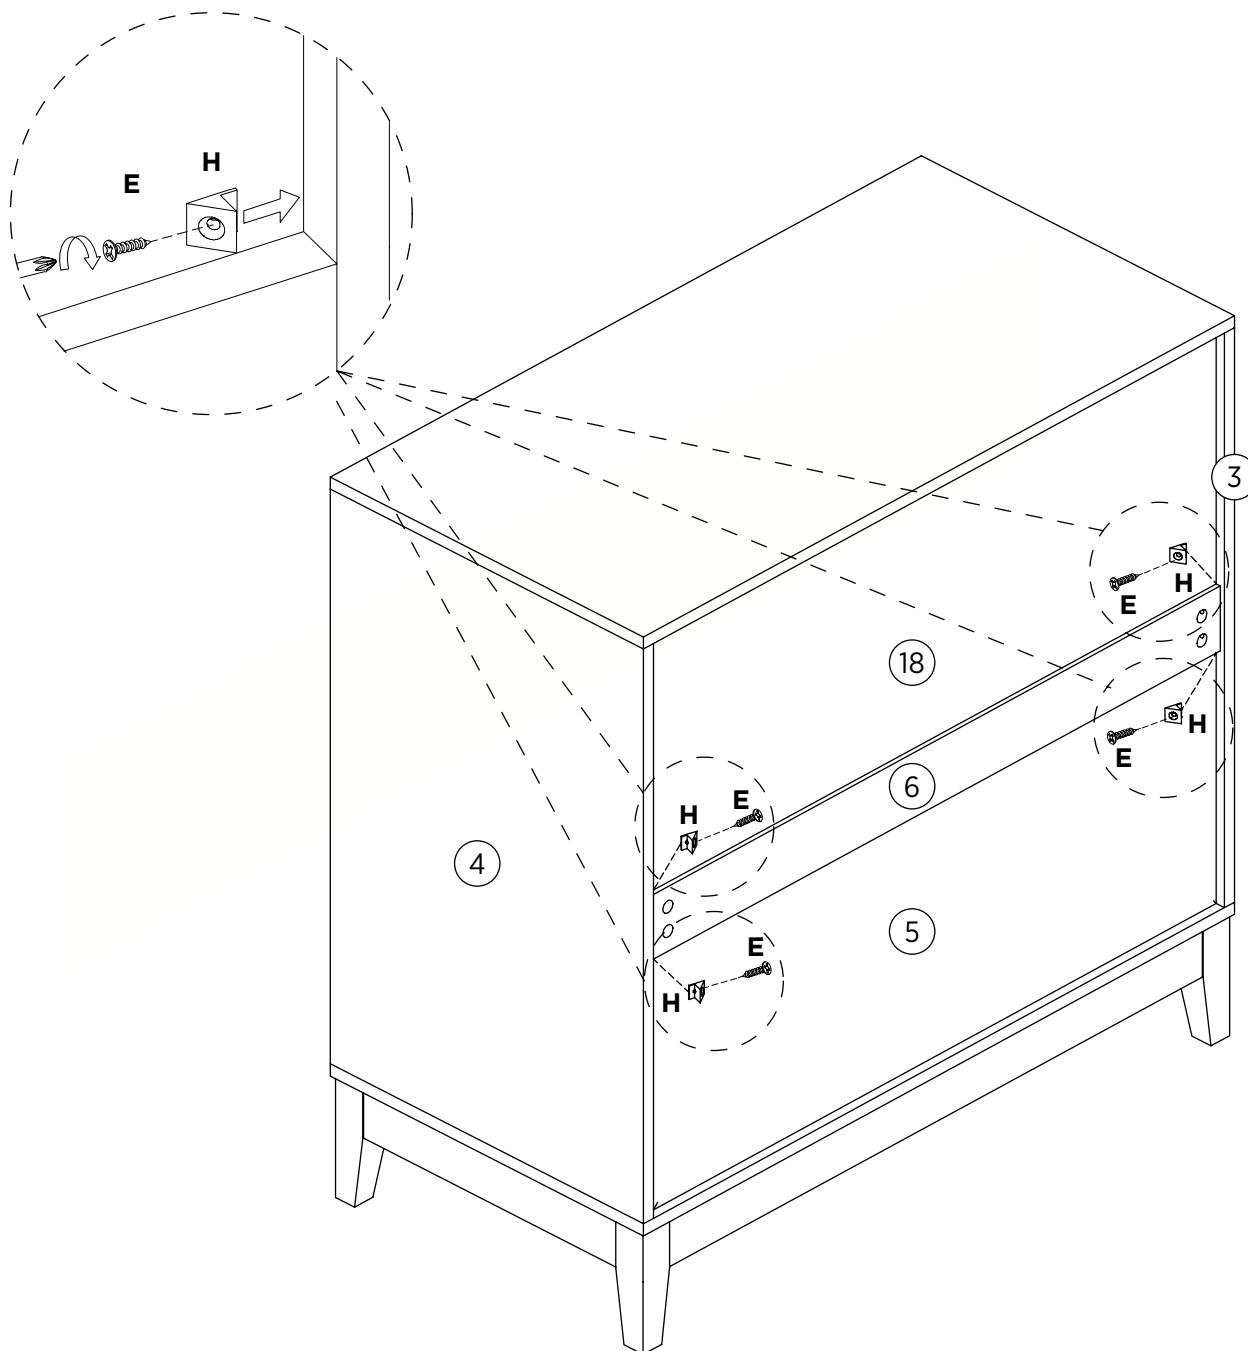

ASSEMBLY INSTRUCTIONS

STEP 20

 
Fix wedges (H) using screw (E), as shown.



E x 4



H x 4

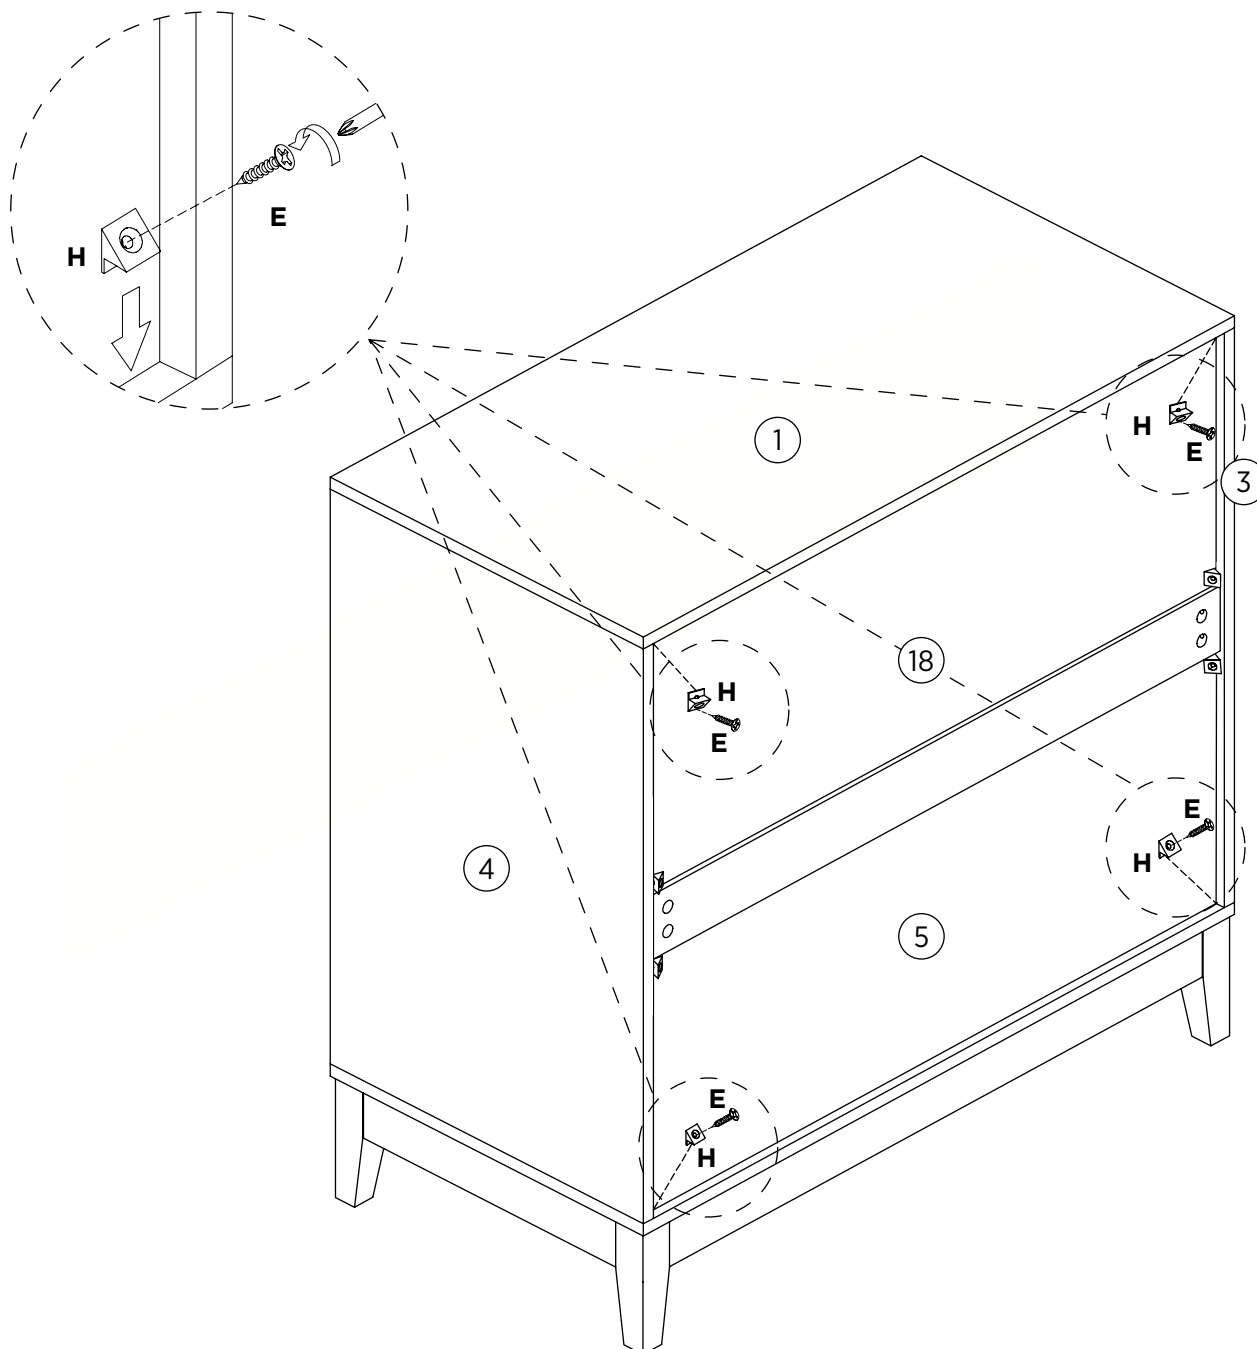

ASSEMBLY INSTRUCTIONS

 
 
 
 
STEP 21

For extra stability, you must fix your chest of 3 drawers to the wall using the additional hardware G and T, as shown.

Firstly, screw wall plug T into required position in your wall.

Screw G is then fixed from inside the unit, through the wall bracket S and into the wall plug T in your wall.


Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

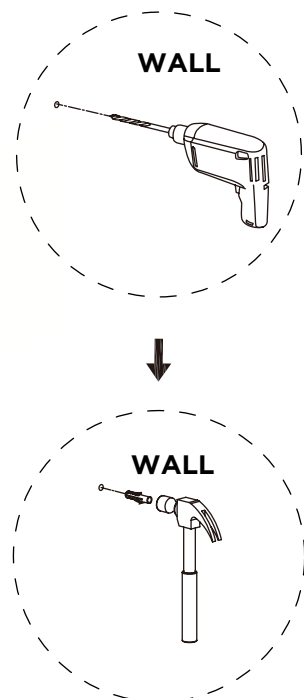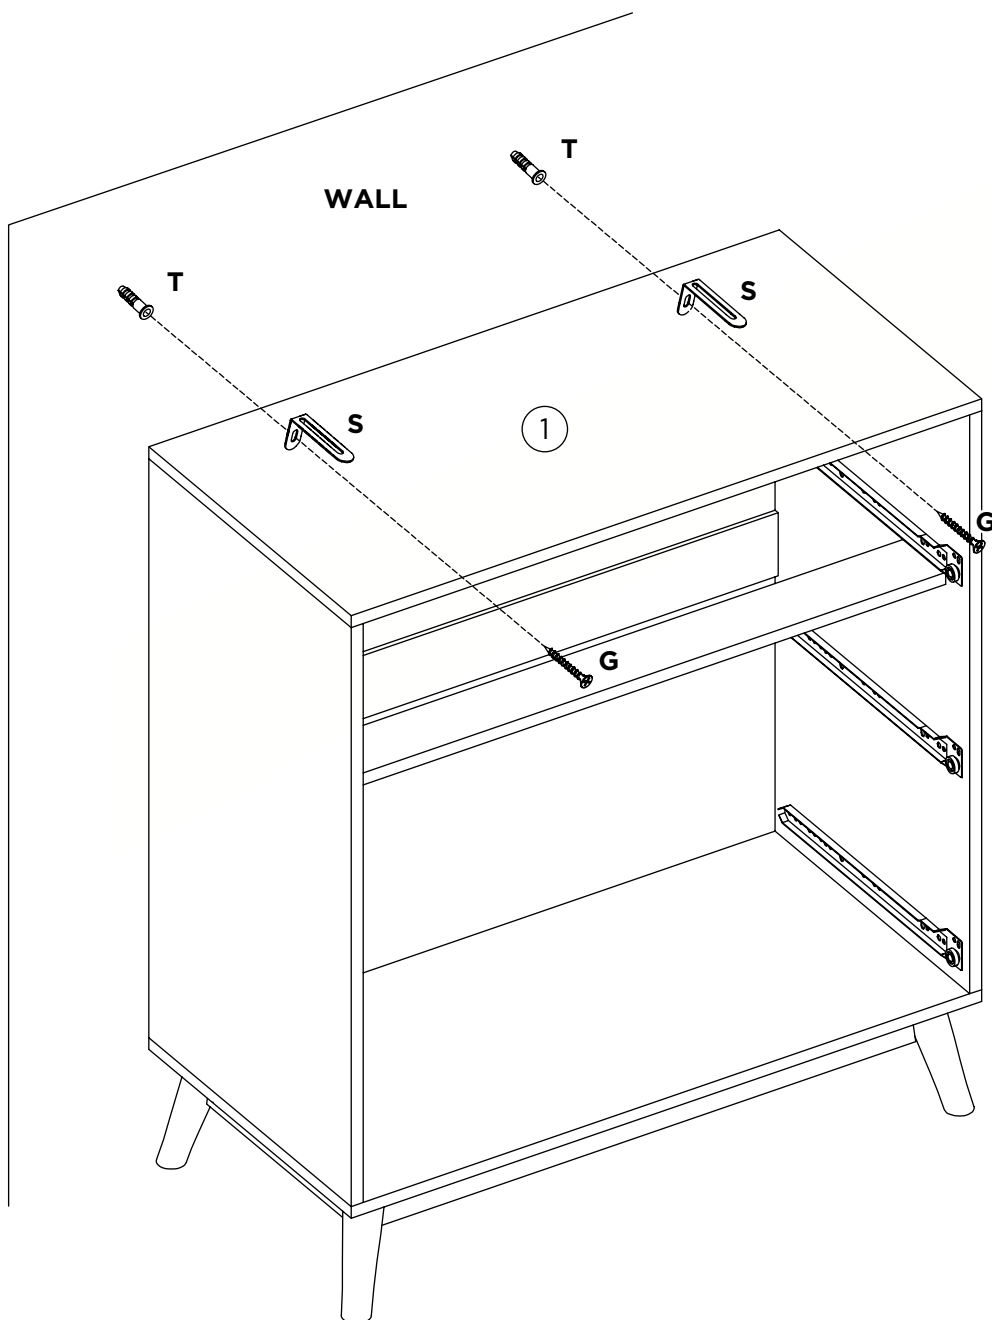

ASSEMBLY INSTRUCTIONS


STEP 22

 Insert drawers into assembled unit, as shown.

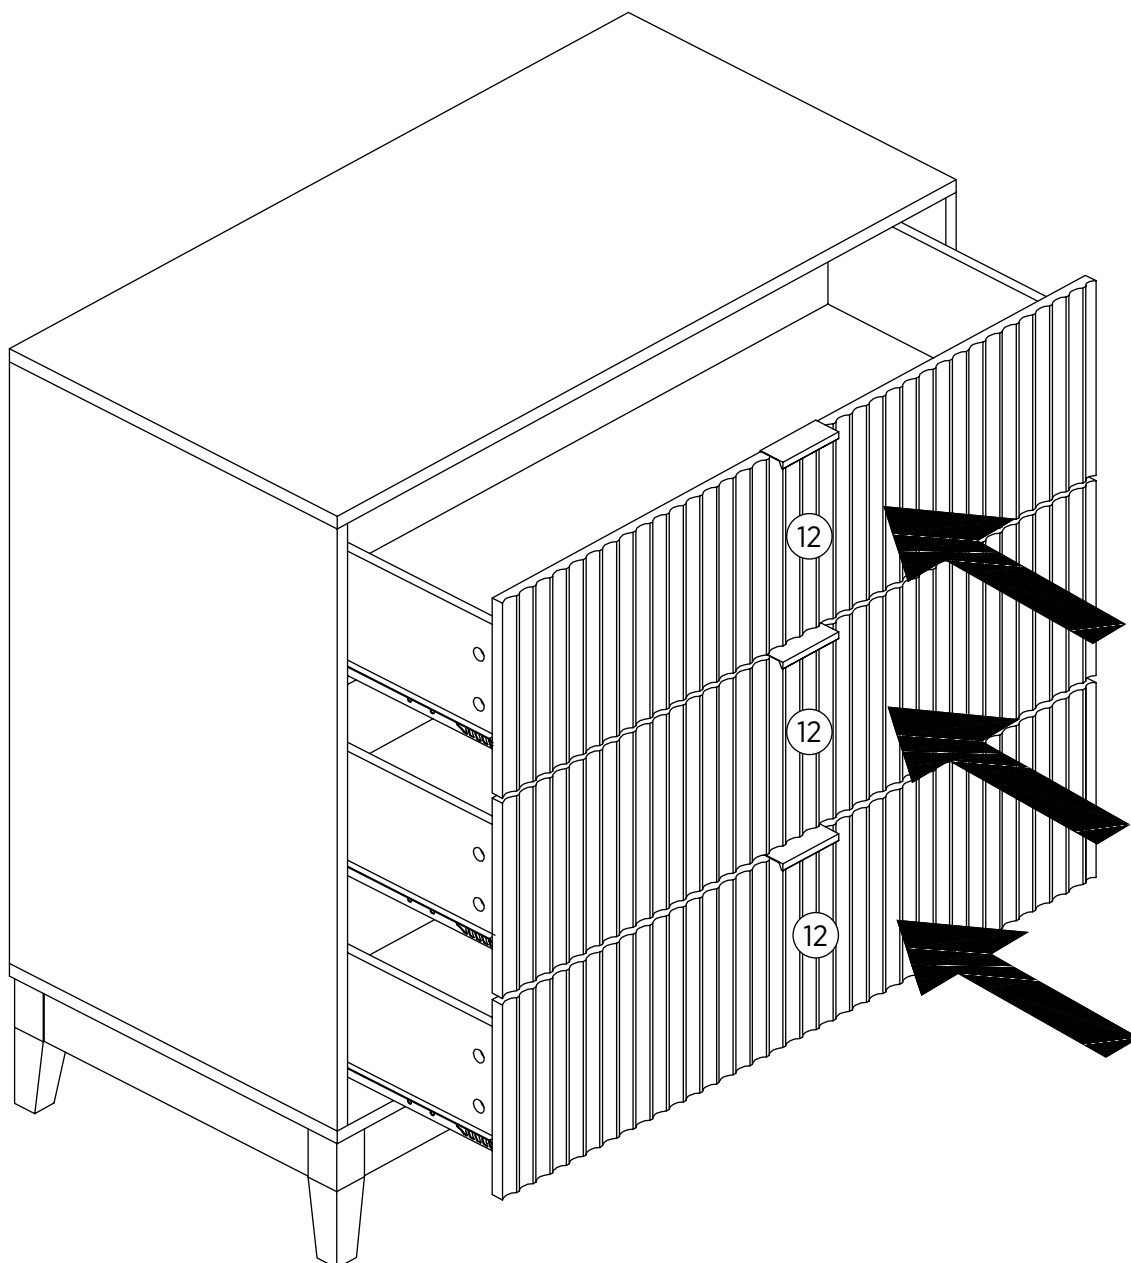

ASSEMBLY INSTRUCTIONS

 STEP 23

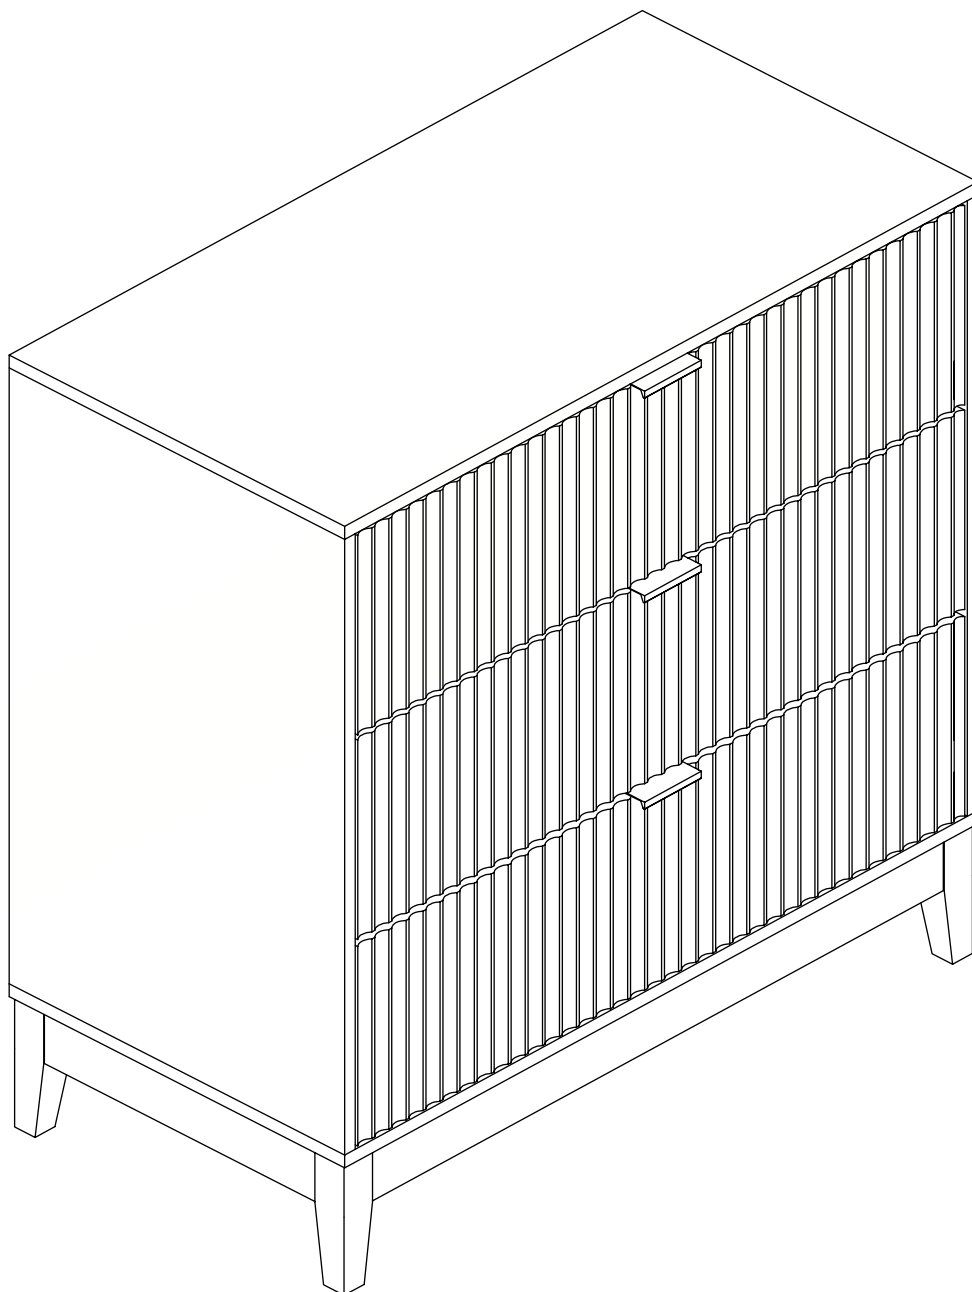

Maximum recommended weight is 10 kg on top, 5 kg inside each drawers.

Your chest of 3 drawers is ready for use.

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ☒ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☒ If you are unsure, please select a larger screw and wall plug.
- ☒ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☒ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

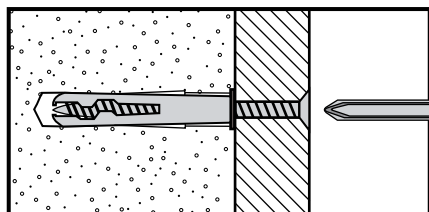


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

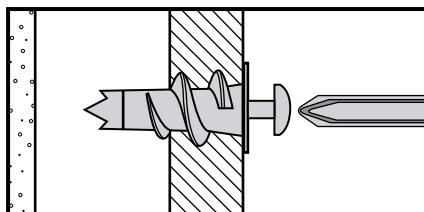


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

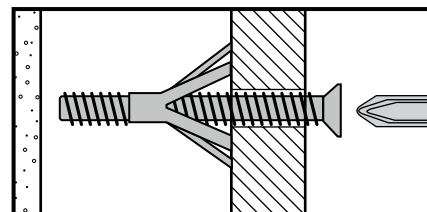


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

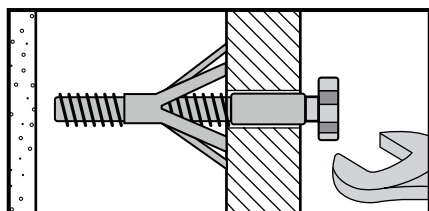


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

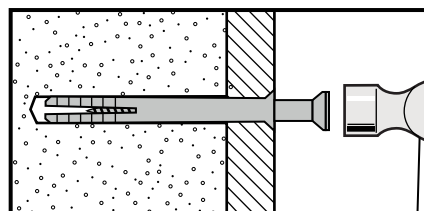

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

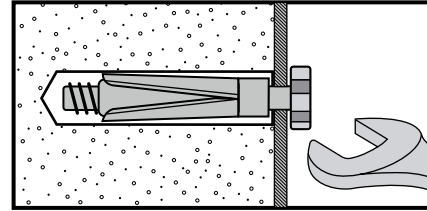

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.