 


TV UNIT 2 TIER

ASSEMBLY INSTRUCTIONS

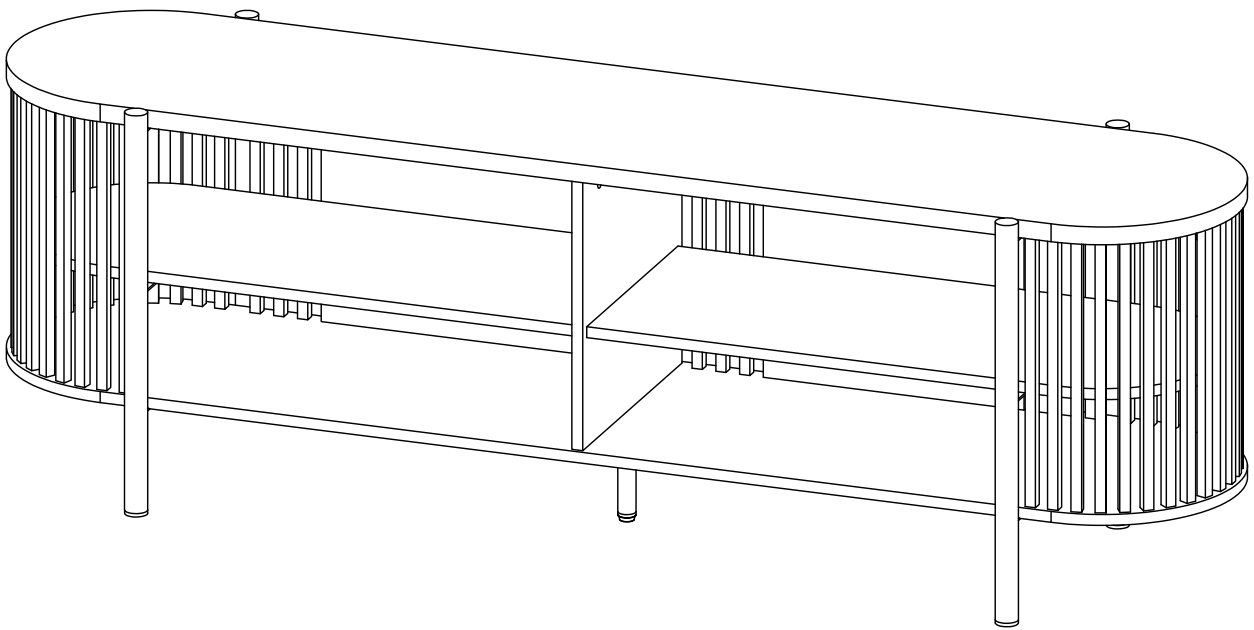

TIPS BEFORE YOU START

 
 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ☑ To clean glass, please use glass cleaner.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS


- ☑ Equipment: phillips head screwdriver, flat head screwdriver, hammer
- ☑ 2 x adults required
- ☑ 2m x 2m assembly space required
- ☑ 1 hour assembly time approx.

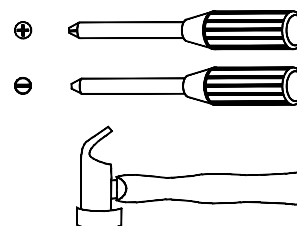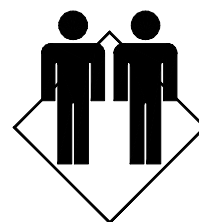

USING CAM LOCK AND QUICKFIT


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

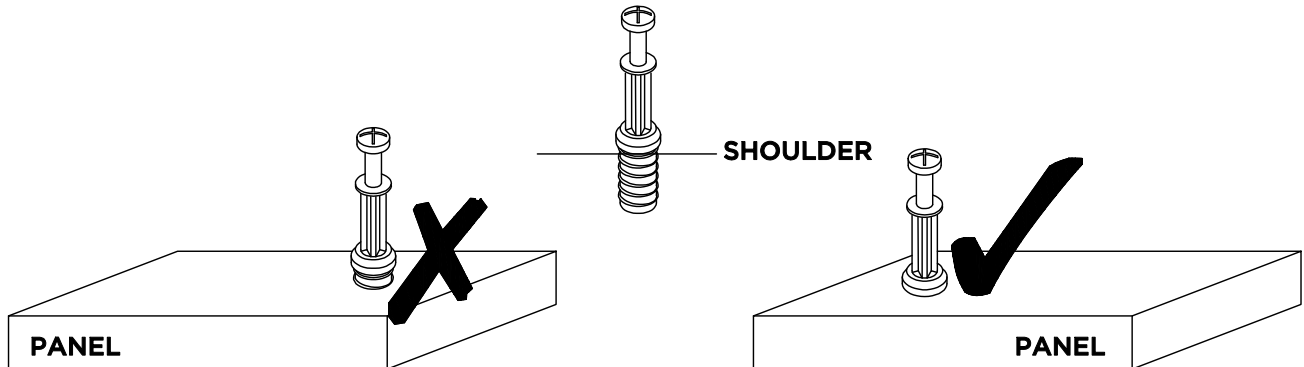



CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

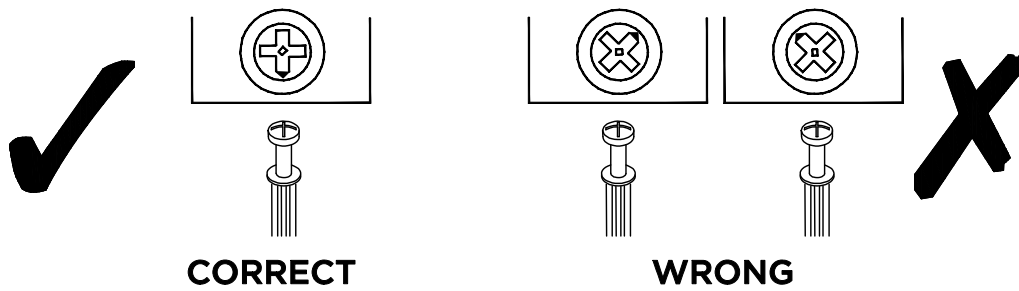

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

  
Turn cam lock clockwise to tighten.

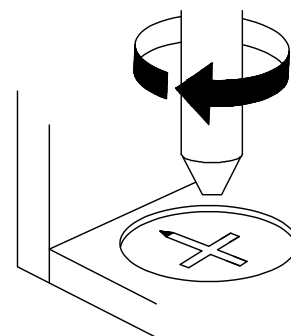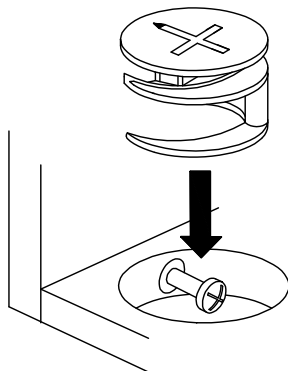

HARDWARE LIST



 
10 x A
Cam Lock




10 x B
Quickfit Screw



 
10 x C
Cam Lock Cover




16 x D
Wooden Dowel

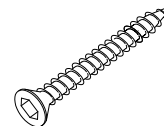 

10 x E
Screw

 

104 x F
Spring Door Support

 

1 x G
Allen Key



 
12 x H
Screw



4 x I
Screw



4 x J
L Bracket




20 x K
Bolt




1 x L
Metal Center Leg

 
PARTS LIST




1
1 PC

 

2
1 PC

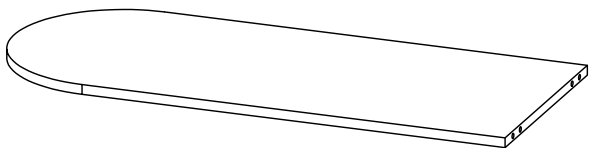 


3
1 PC

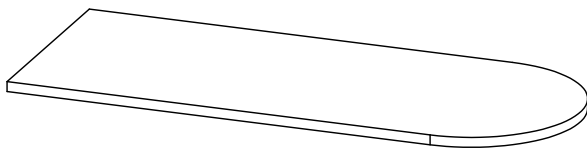 


4
1 PC



 
5
1 PC

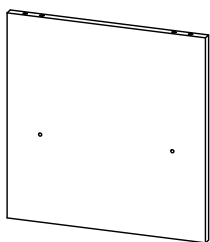

6
2 PCS

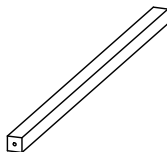 

7
4 PCS

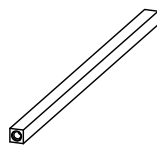 

8
50 PCS



9
4 PCS

ASSEMBLY INSTRUCTIONS

STEP 1

Insert cam locks (A) and wooden dowels (D) to part 3, 4, 5 and 6.

Insert quickfit screws (B) to parts 1 and 5, as shown.

Fix L bracket (J) onto part 1 using screw H, as shown.



A x 10



B x 10



 
D x 16



H x 4



J x 4

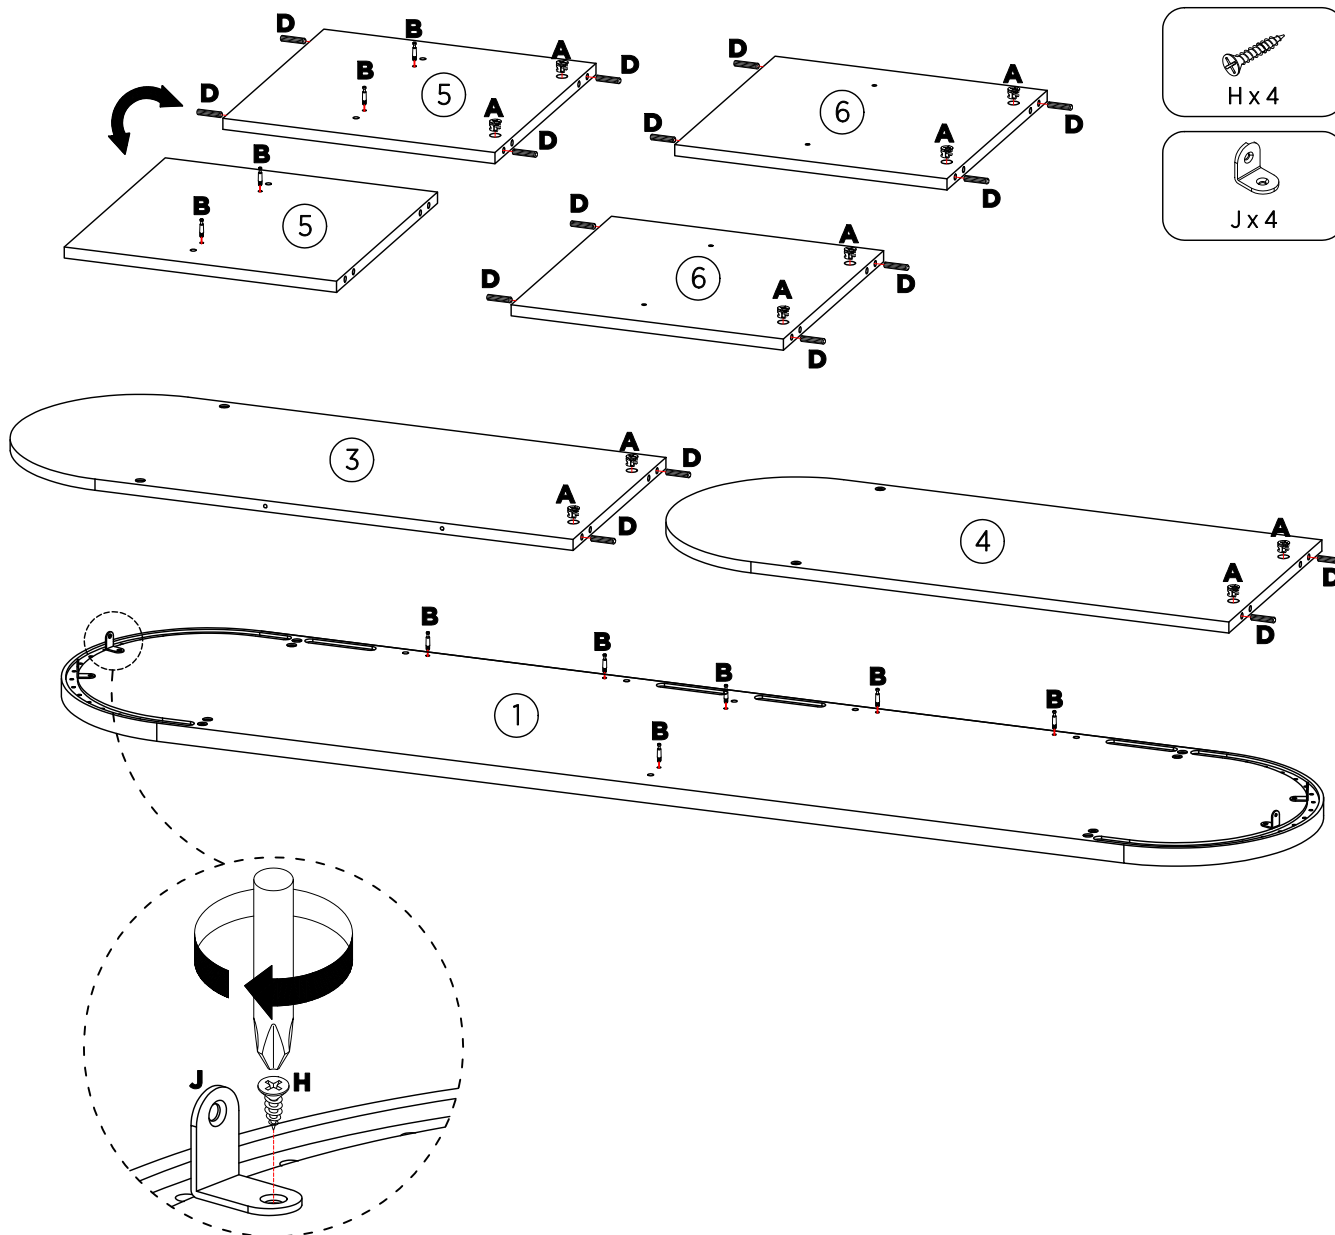



ASSEMBLY INSTRUCTIONS

STEP 2

Attach part 5 and 6 to parts 1.

Turn cam locks clockwise to tighten.

  Attach cam lock covers (C), as shown.

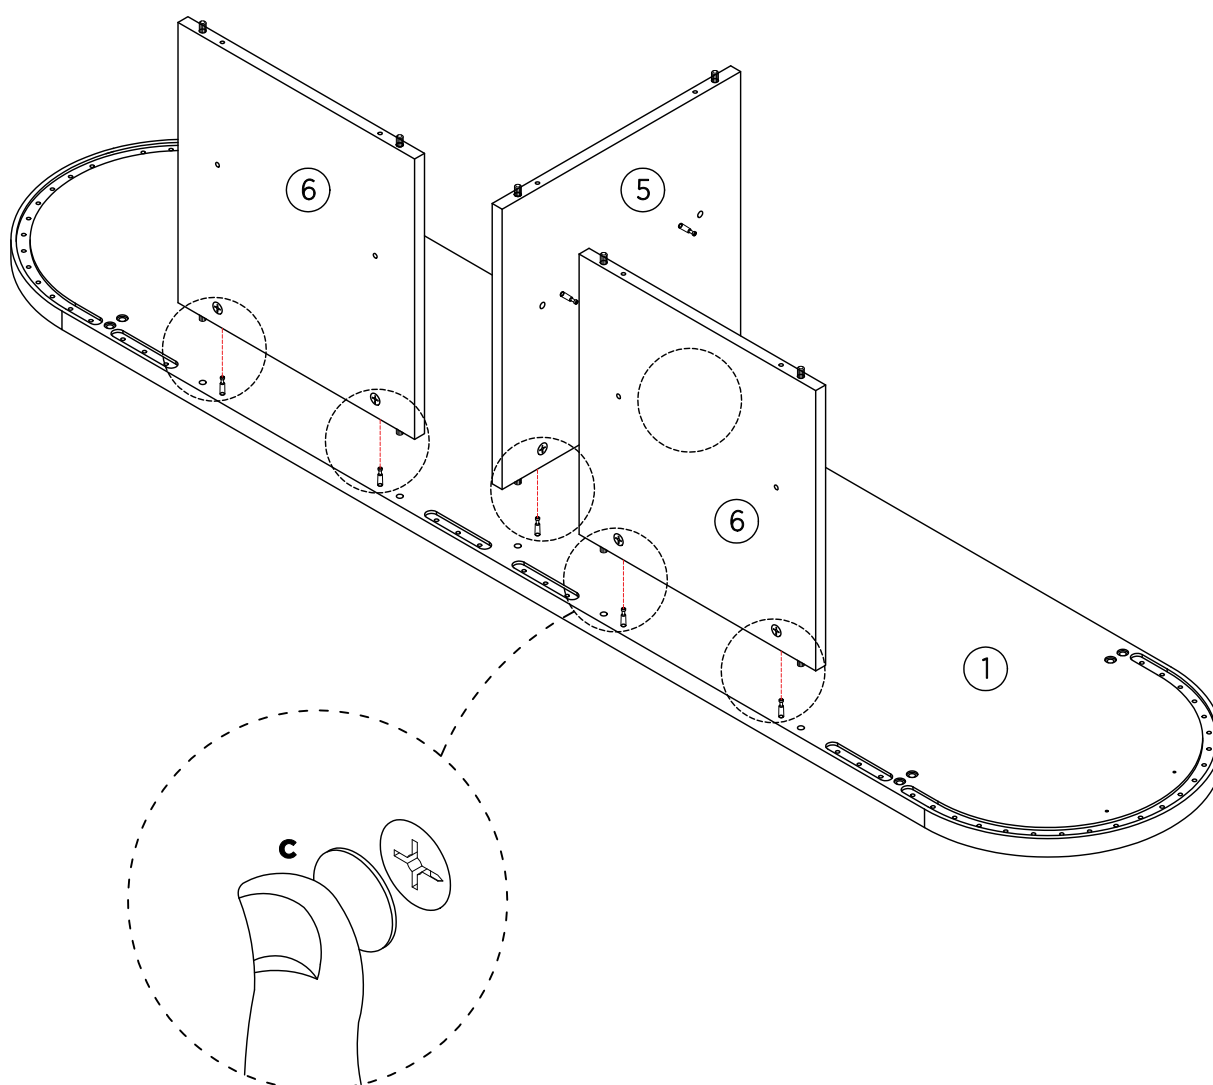



ASSEMBLY INSTRUCTIONS

STEP 3

Attach part 3 and 4 to parts 5.

Turn cam locks clockwise to tighten.

  Attach cam lock covers (C), as shown.

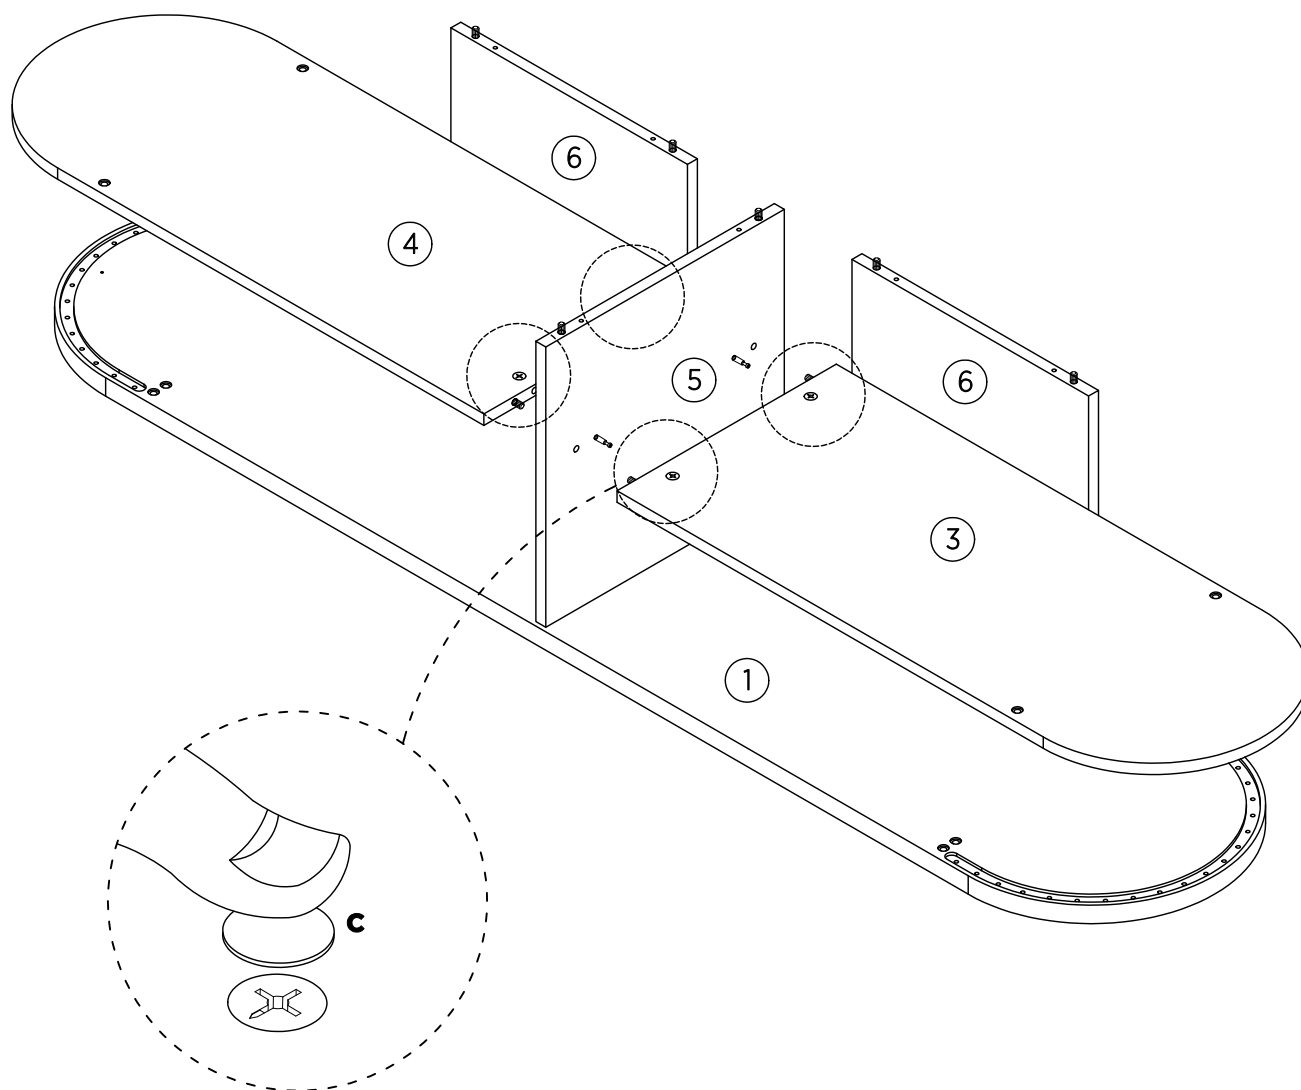

ASSEMBLY INSTRUCTIONS

STEP 4

 
Fix part 6 to parts 3 and 4 using screws (E) and allen key (G), as shown.



E x 4





G x 1

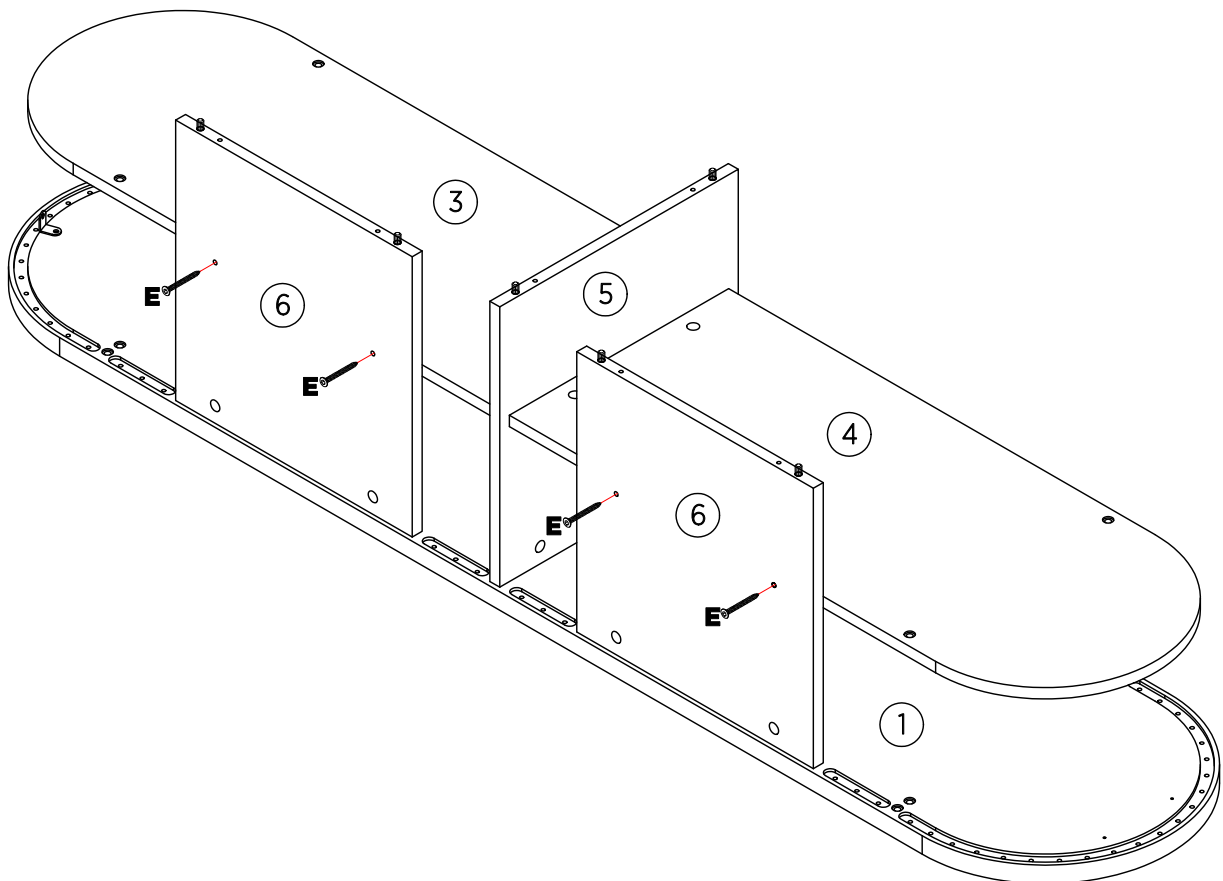

ASSEMBLY INSTRUCTIONS

STEP 5

 
 
Fix part 2 to parts 5 and 6 using screws (E) and allen key (G), as shown.

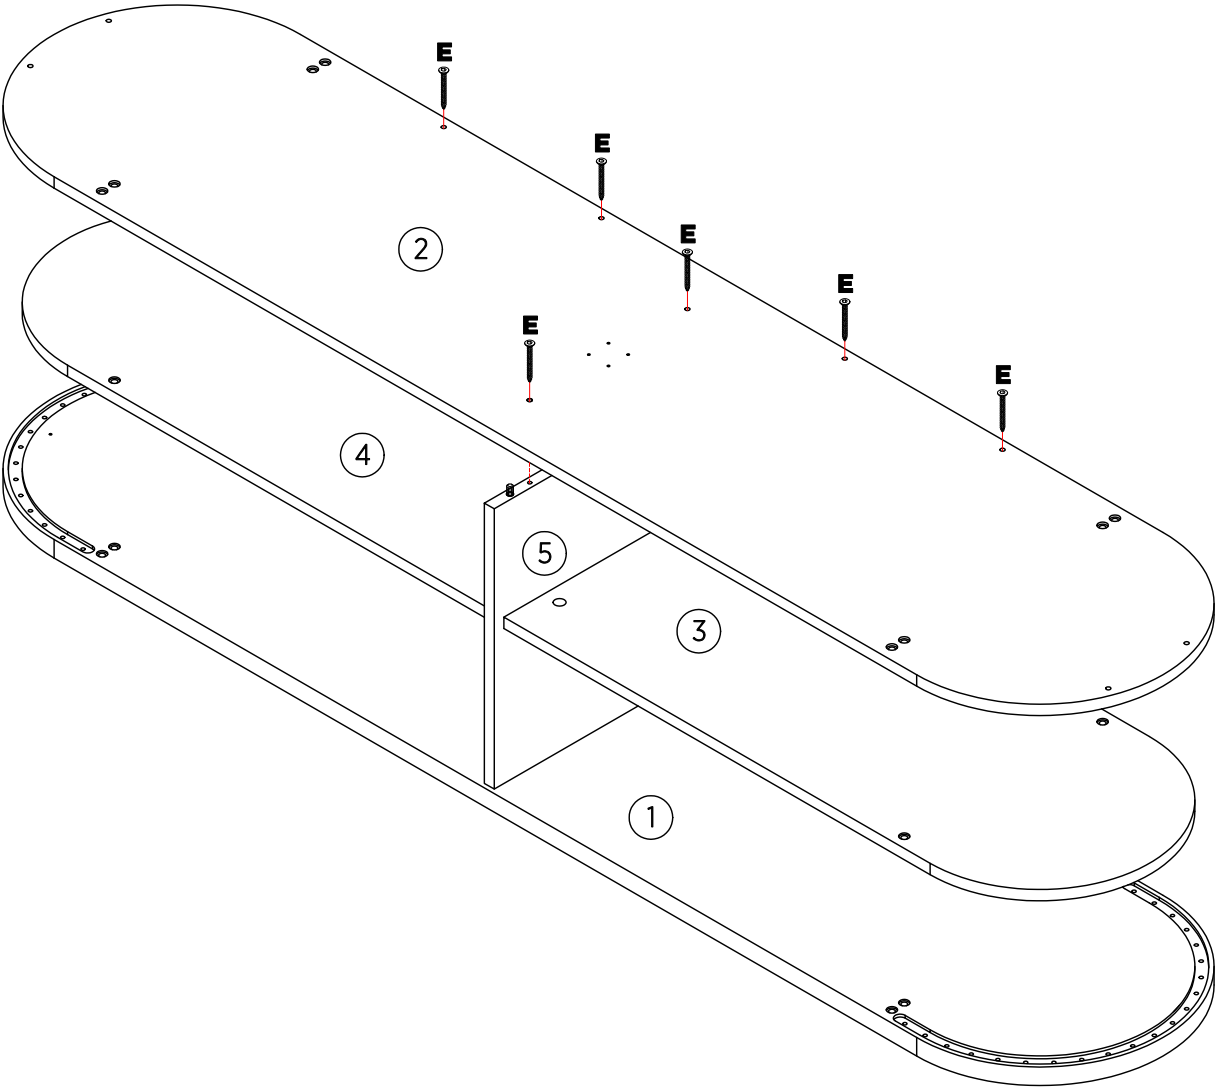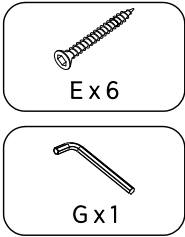

ASSEMBLY INSTRUCTIONS

STEP 6

 
 
Fix leg 9 to parts 1, 2, 3 and 4 using bolts (K) and allen key (G), as shown.

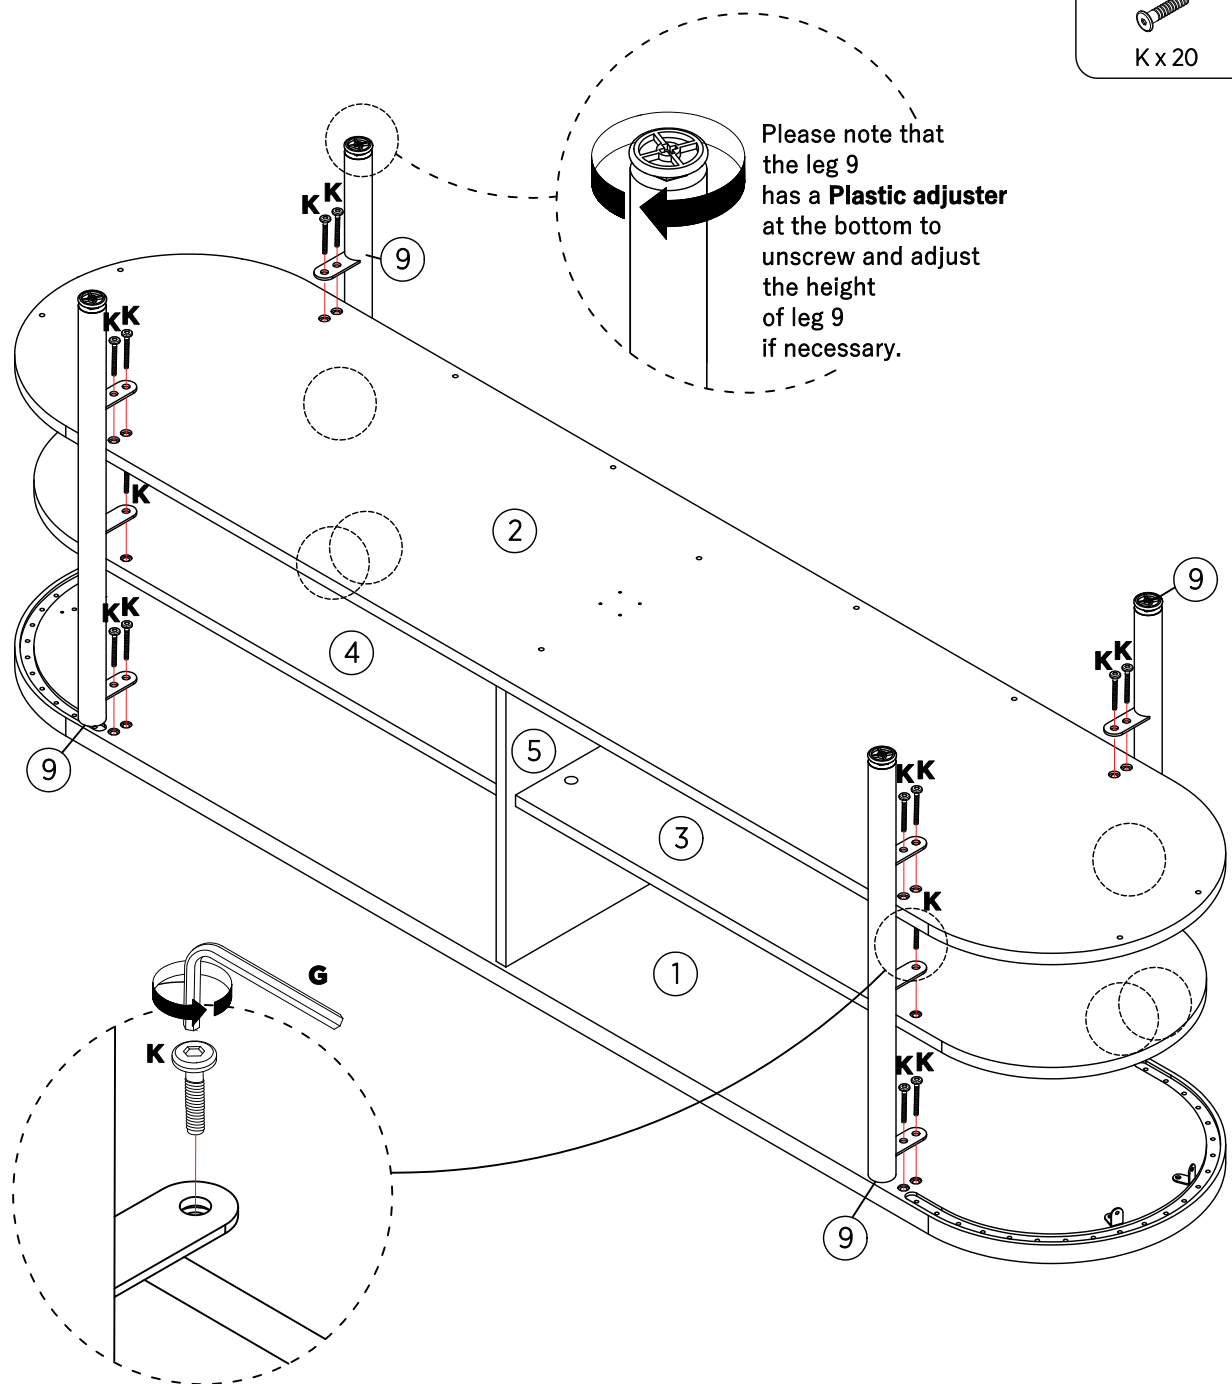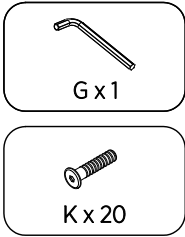

ASSEMBLY INSTRUCTIONS


STEP 7

  Attach spring door support (F) into part 7 and 8, as shown.

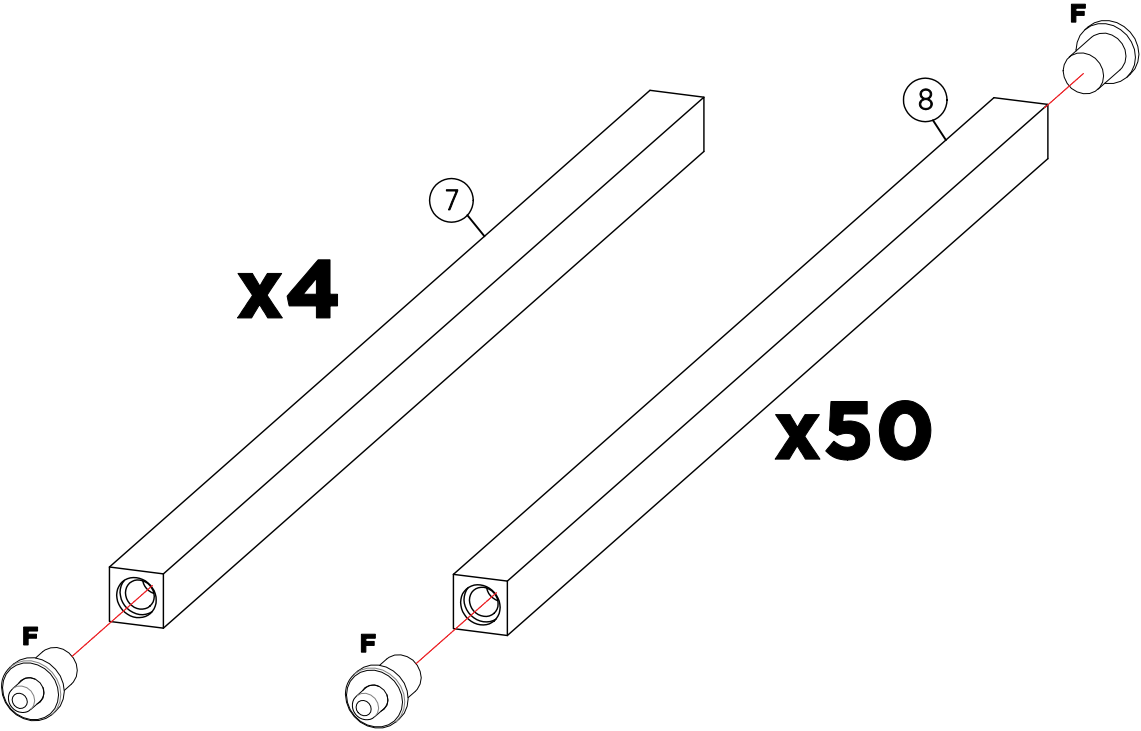

STEP 8

Fix parts 7 into between part 1 and 2, as shown.



AFTER SALES SUPPORT
 1300 777 137

 
ASSEMBLY INSTRUCTIONS

UH11200 UH11201

ASSEMBLY INSTRUCTIONS

STEP 9

Fix L bracket (J) to parts 7 using screws (H), as shown.

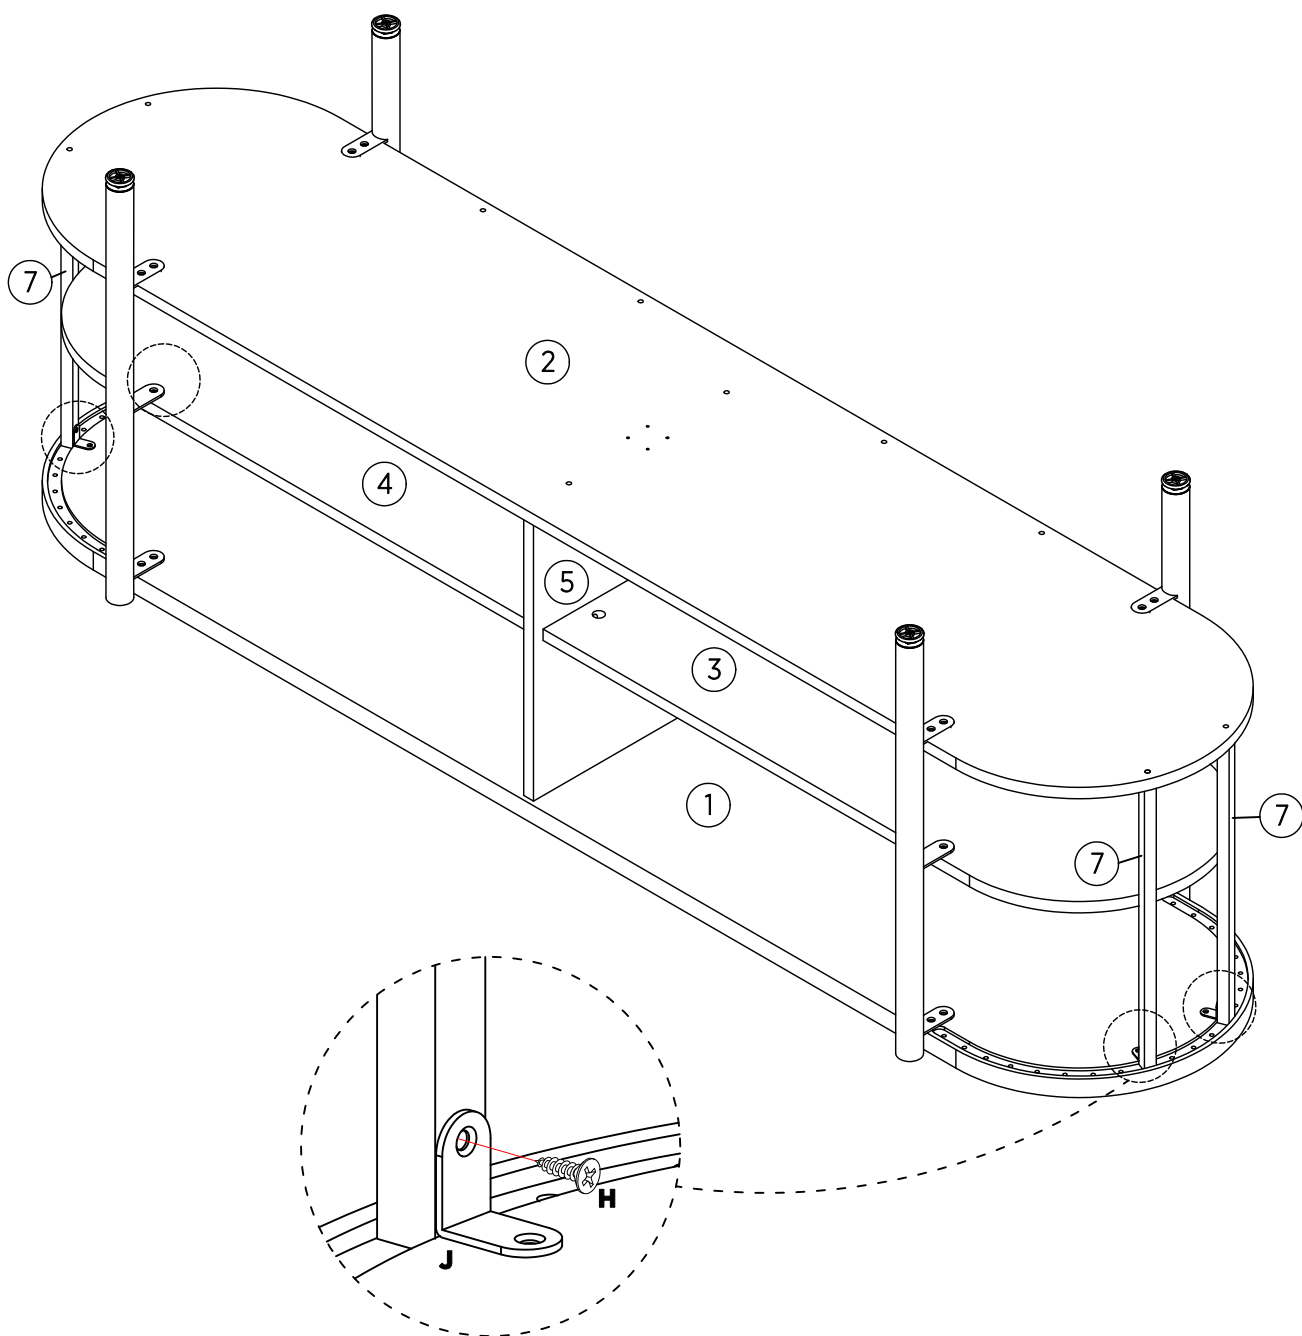


ASSEMBLY INSTRUCTIONS

STEP 10

Press spring door support (F).

 
Fix parts 8 into between parts 1 and 2, as shown.

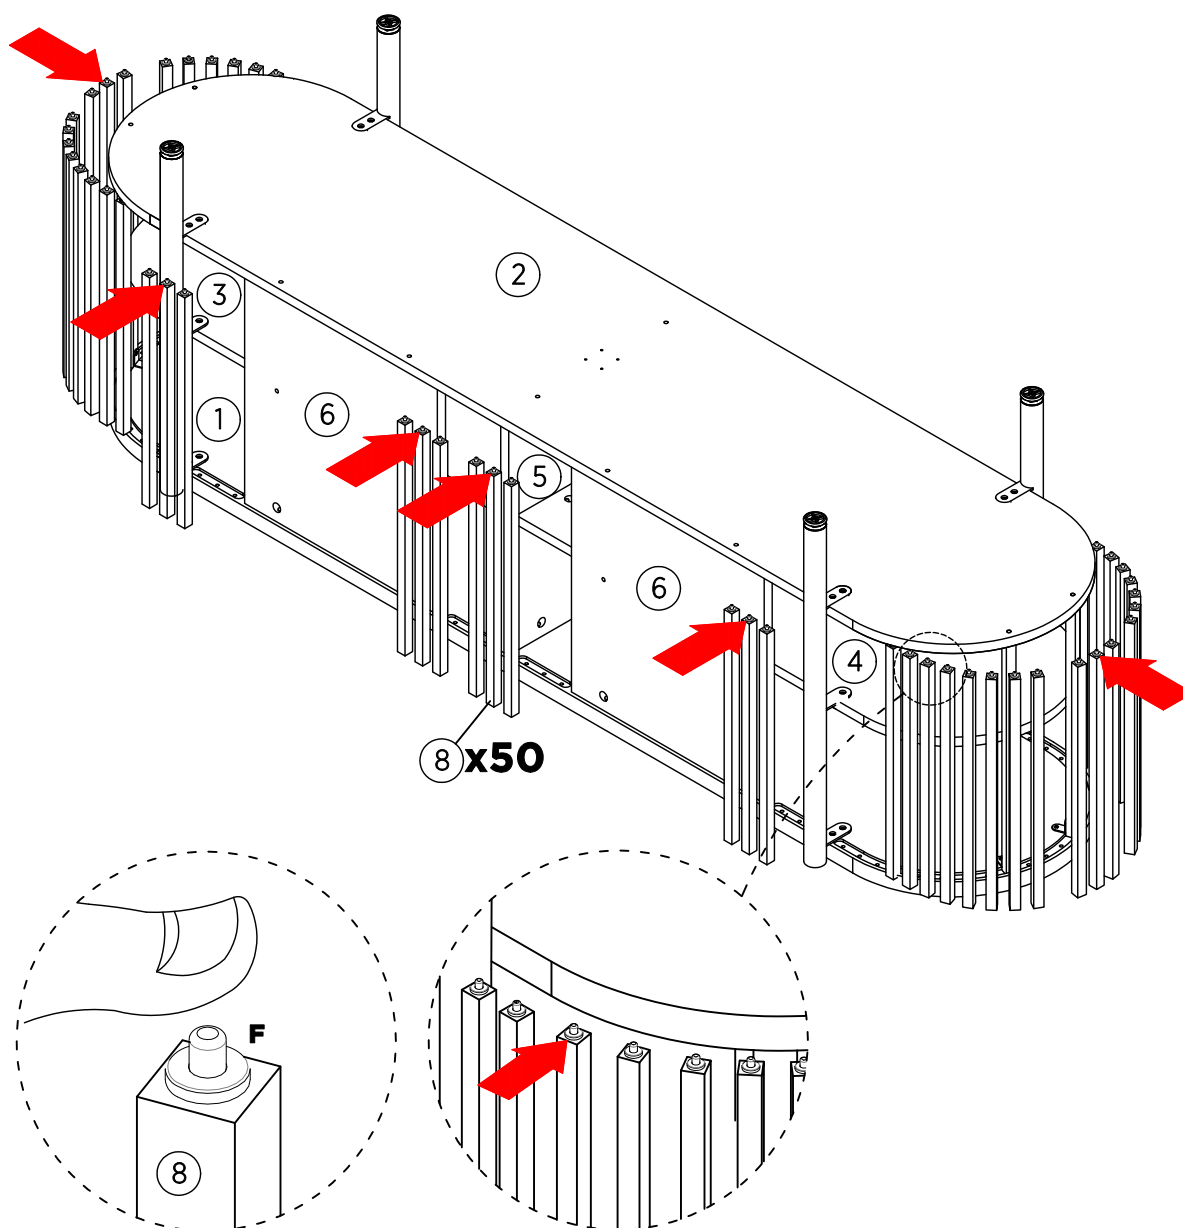

ASSEMBLY INSTRUCTIONS


STEP 11

 Fix hardware L to part 2 using screws (H), as shown.

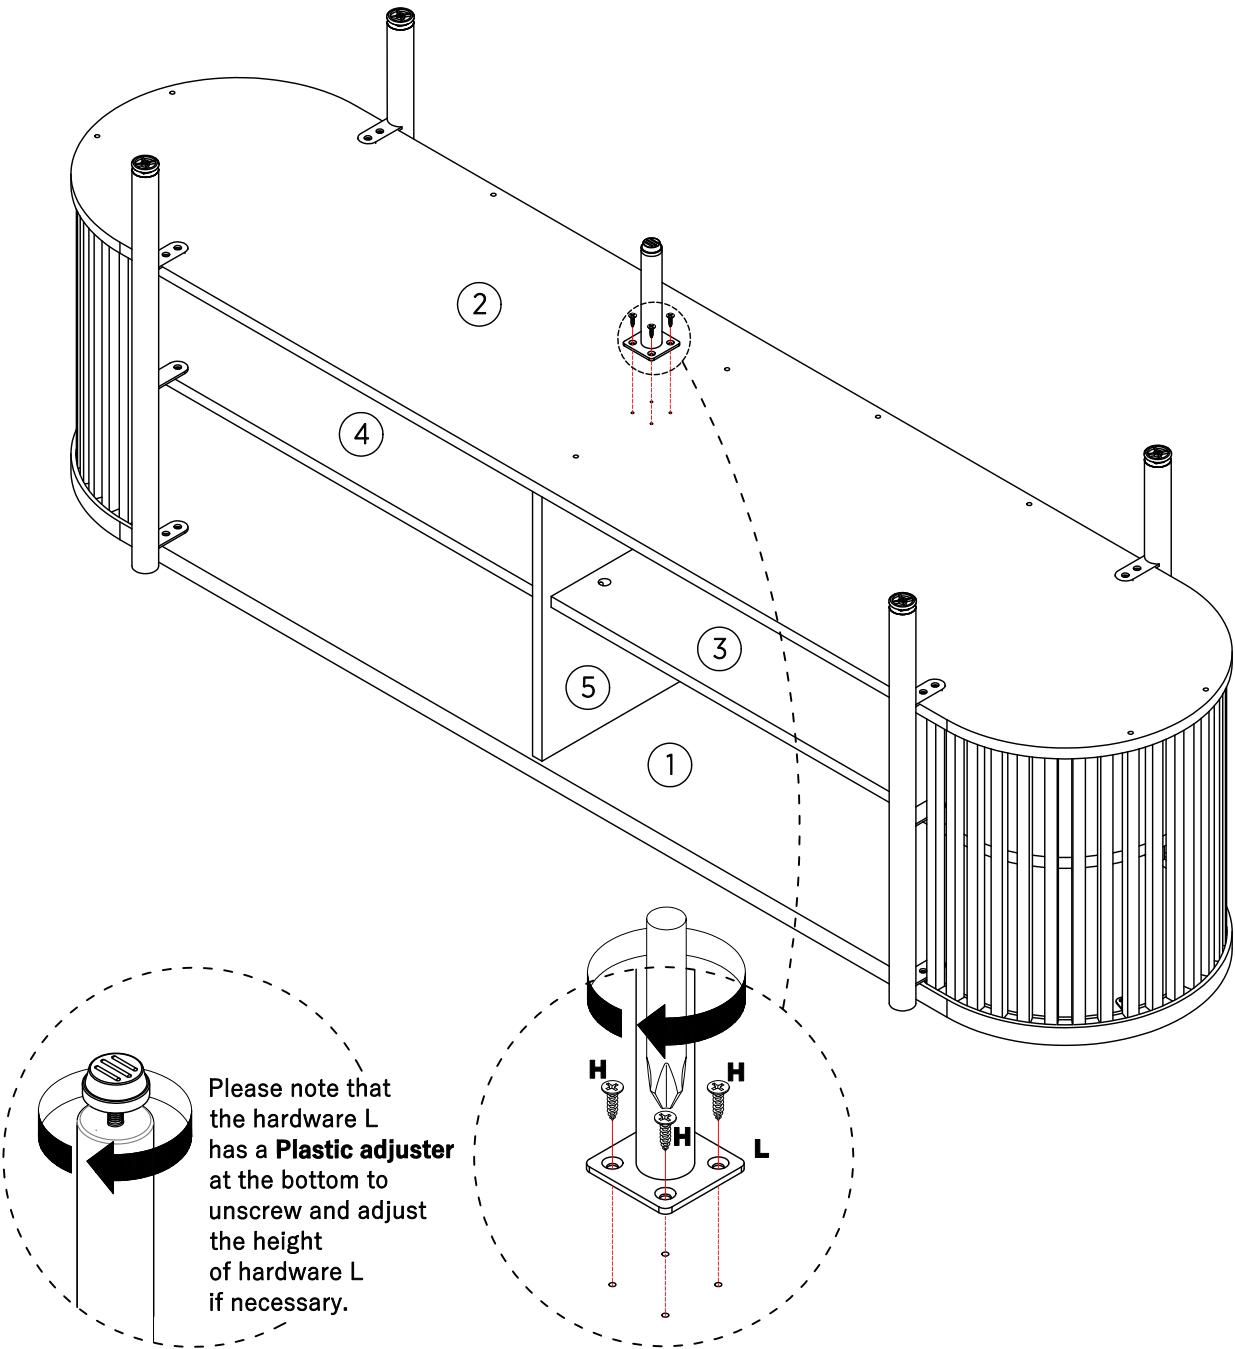

ASSEMBLY INSTRUCTIONS

 STEP 12

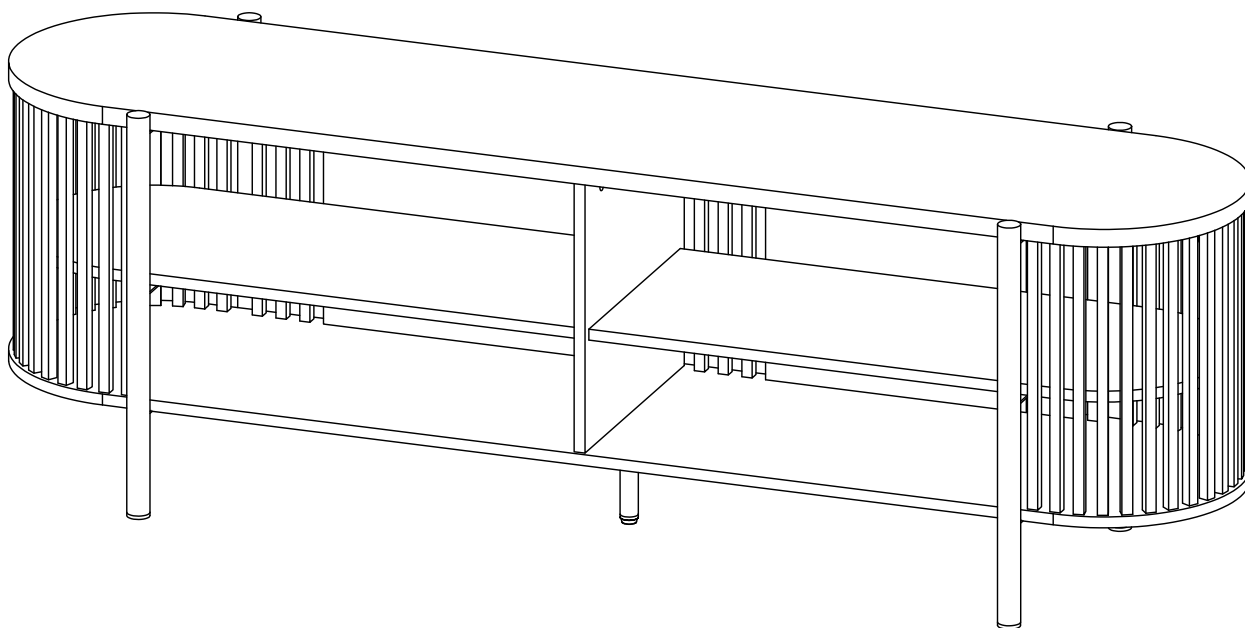

Maximum recommended weight is 25 kg on top, 5 kg on each shelf.

Your product is ready for use.