 


DISPLAY SHELF CUBE 3 STEP

ASSEMBLY INSTRUCTIONS

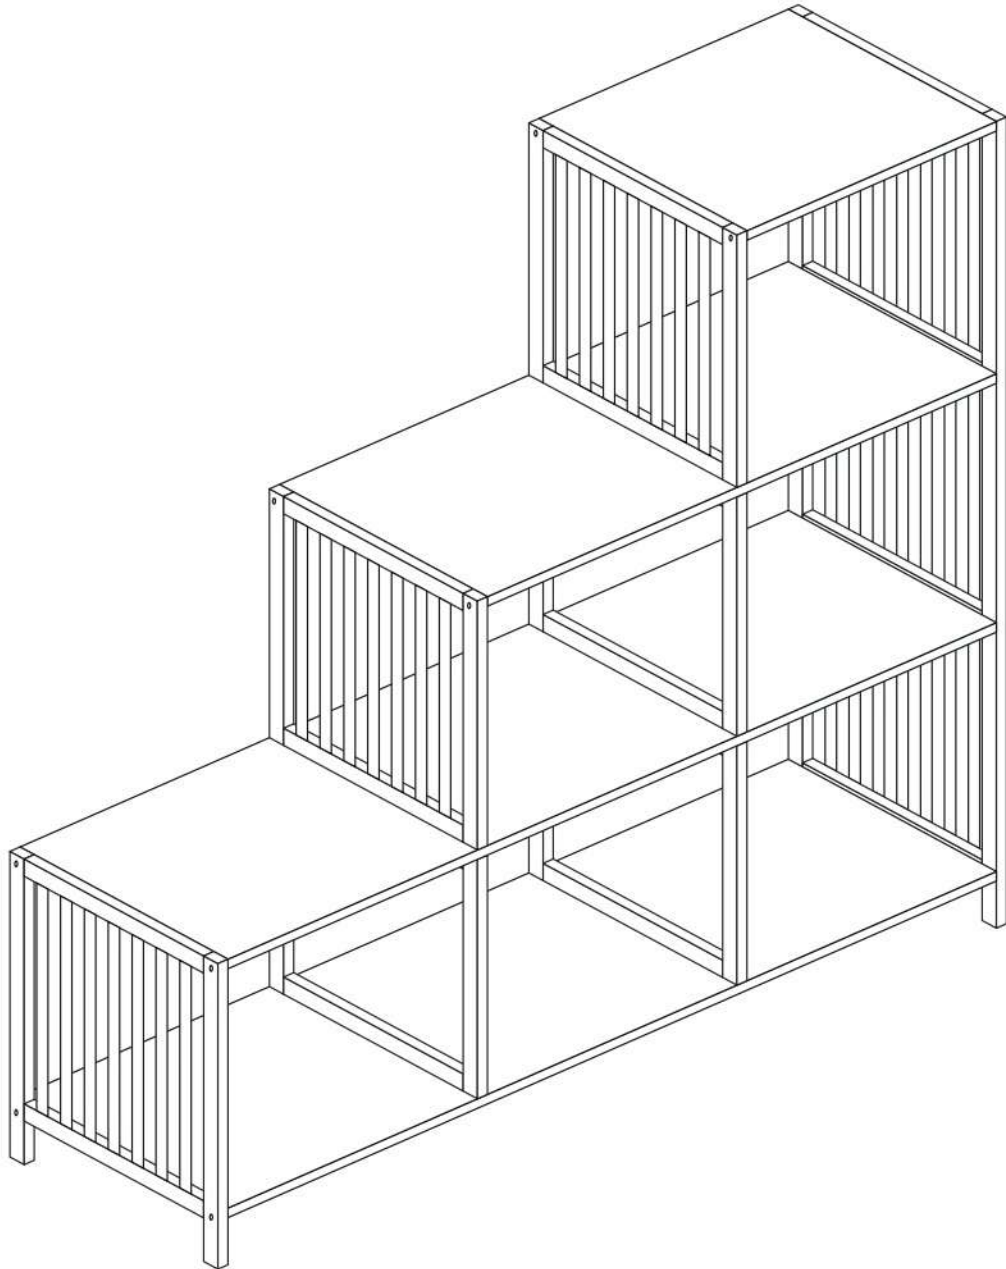

TIPS BEFORE YOU START

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- To clean glass, please use glass cleaner.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (eg. hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

ASSEMBLY REQUIREMENTS

- Equipment: phillips head screwdriver, flat head screwdriver and hammer
- 2 x adults required
- 2m x 2m assembly space required
- 1.5 hour assembly time approx.



ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

For more information, visit <https://www.productsafety.gov.au>

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

 
HARDWARE LIST



20 x A
Screw



6 x B
Bolt

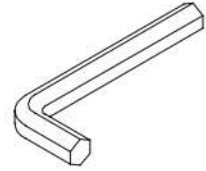

1 x C
Allen Key



1 x D
Screw



1 x E
Wall Bracket



1 x F
Wall Plug



1 x G
Screw

 
PARTS LIST




1
1 PC




2
1 PC

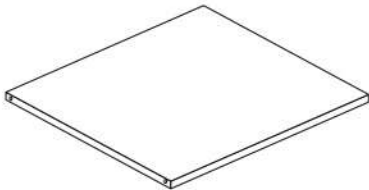

3
1 PC

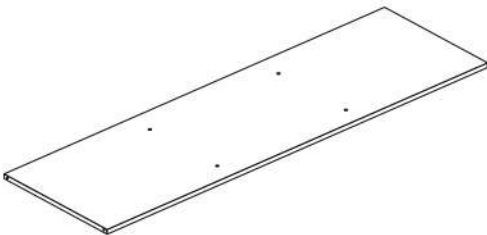 


4
1 PC

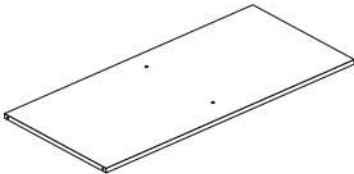 


5
1 PC



 6
2 PCS

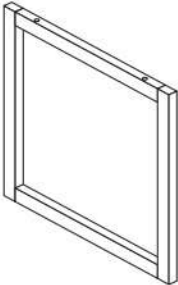

7
3 PCS

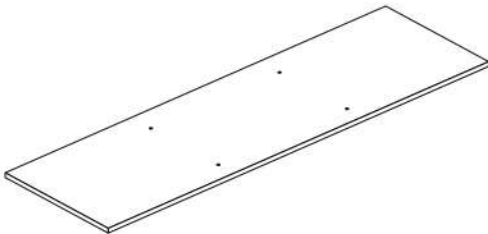 


8
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

 
Fix wall bracket (E) to part 3 using screw (D), as shown.

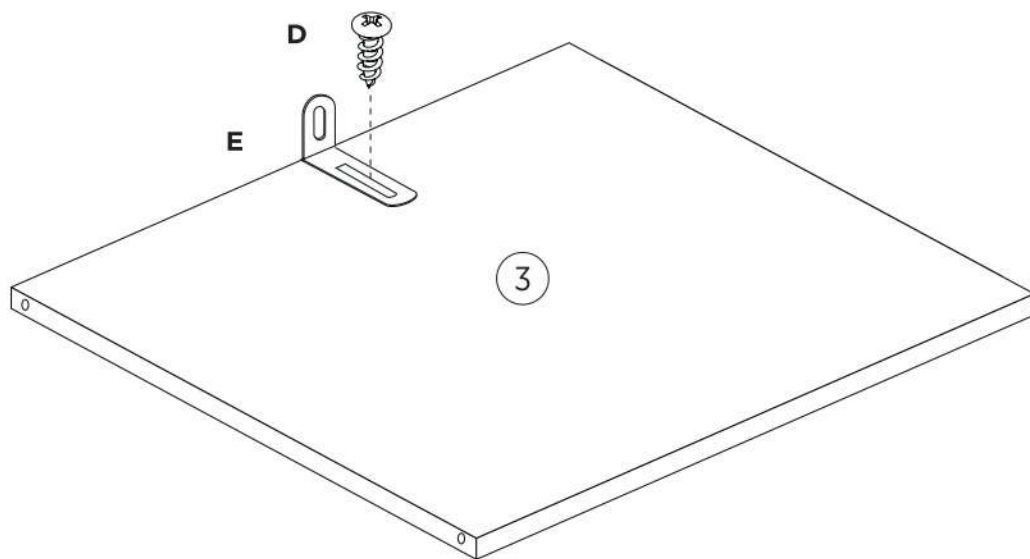

ASSEMBLY INSTRUCTIONS

STEP 2

 
Fix part 4 to parts 7 using screws (A), as shown.

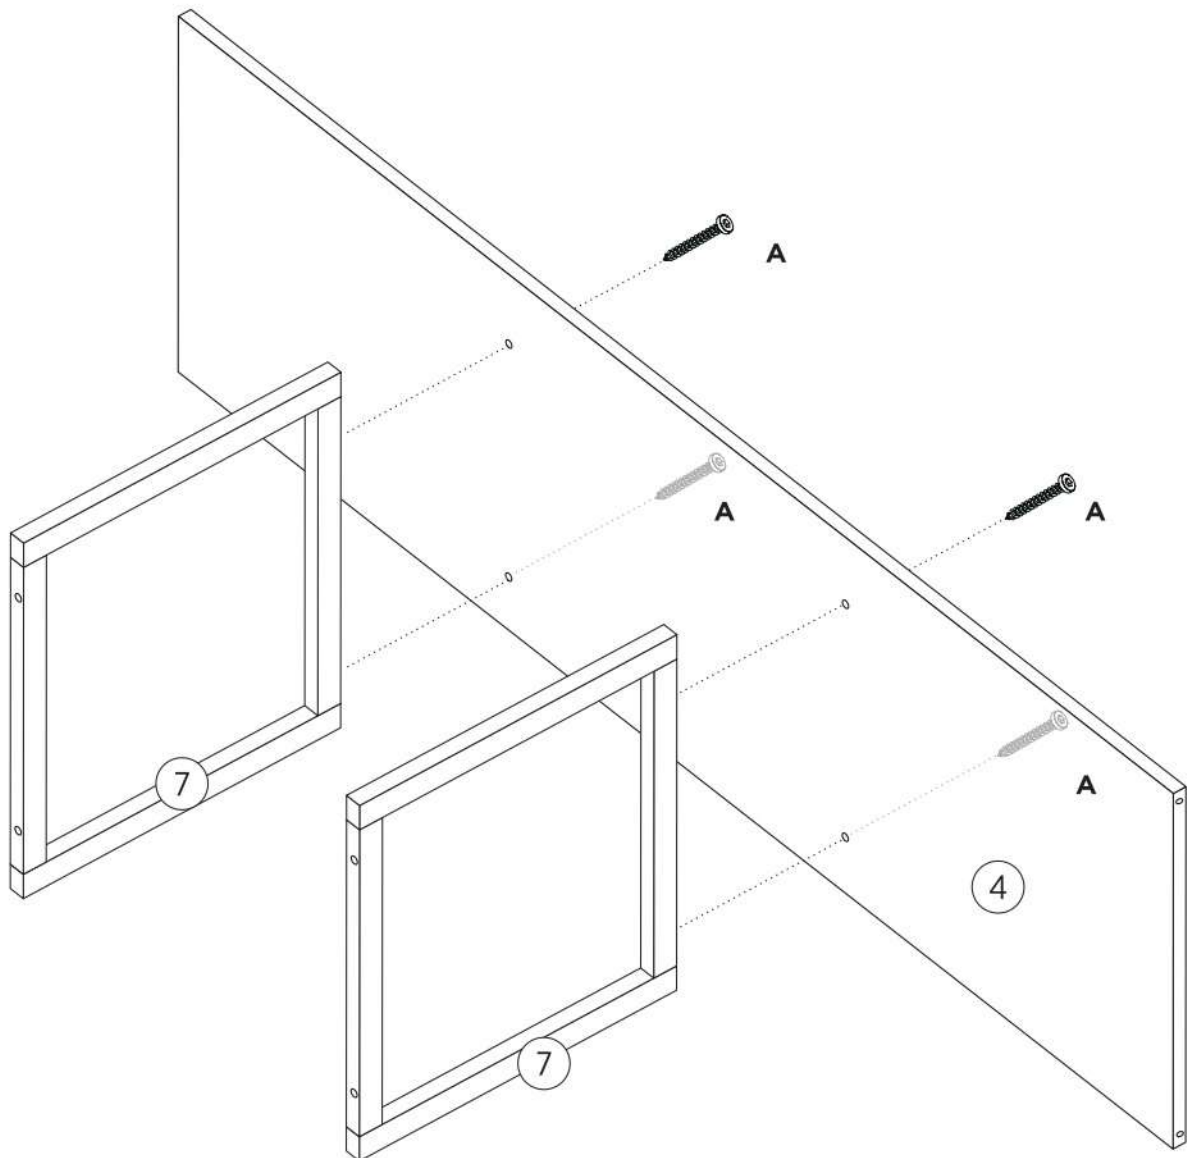

ASSEMBLY INSTRUCTIONS

STEP 3

 Screws (B) is fixed through part 8 and into part 7 and part 6, as shown.

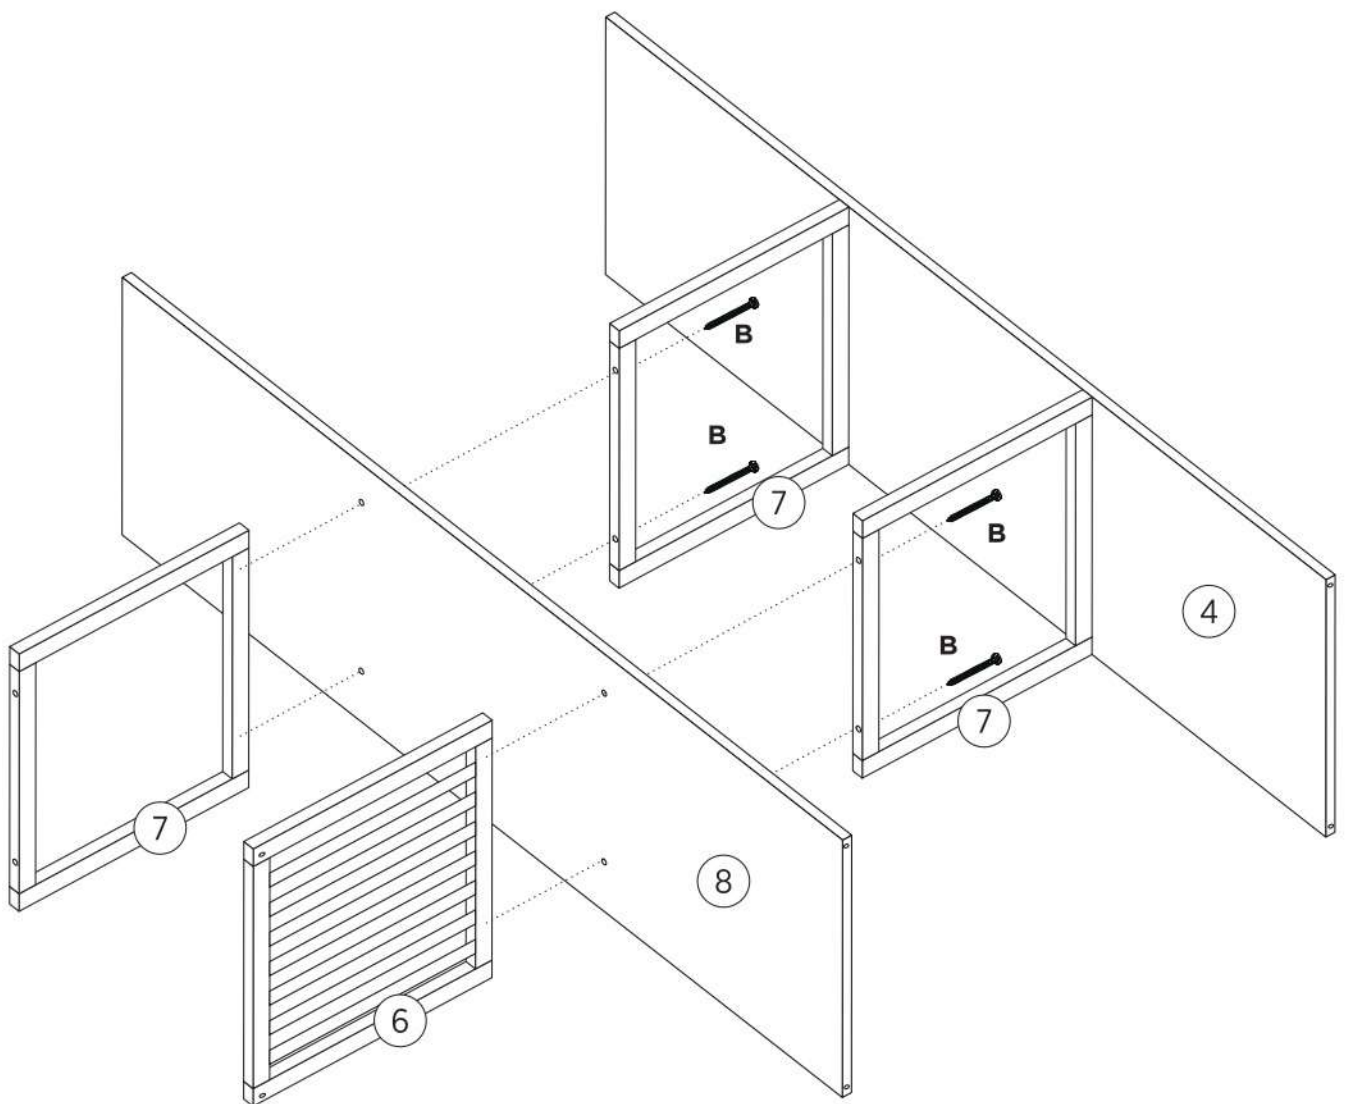


ASSEMBLY INSTRUCTIONS

STEP 4

Screws (B) is fixed through part 5 and into part 6.

 
Fixed part 1 to parts 4 and 8 using screws (A), as shown.

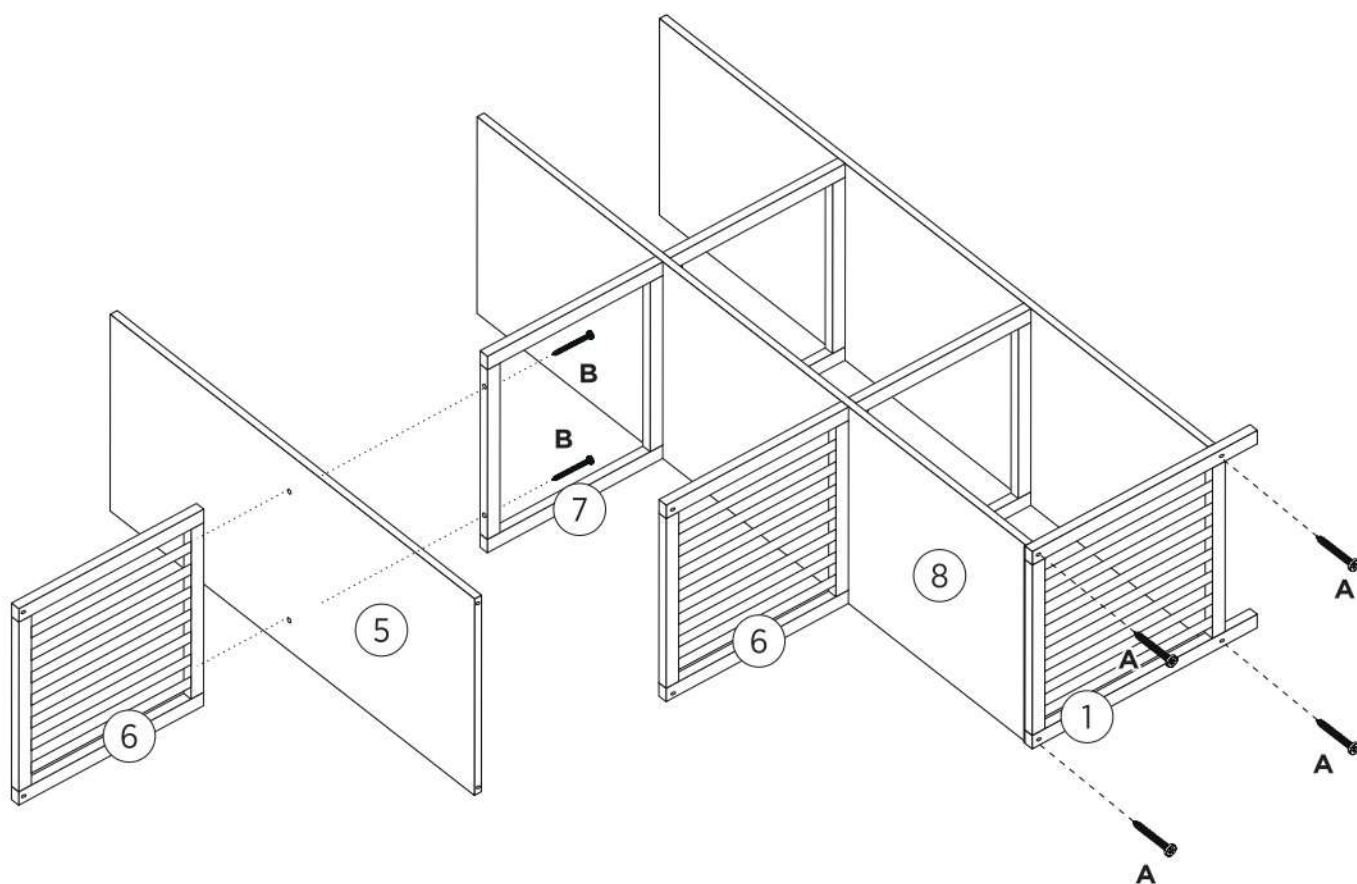

ASSEMBLY INSTRUCTIONS

STEP 5

 Fixed part 6 to part 5 using screws (A), as shown.

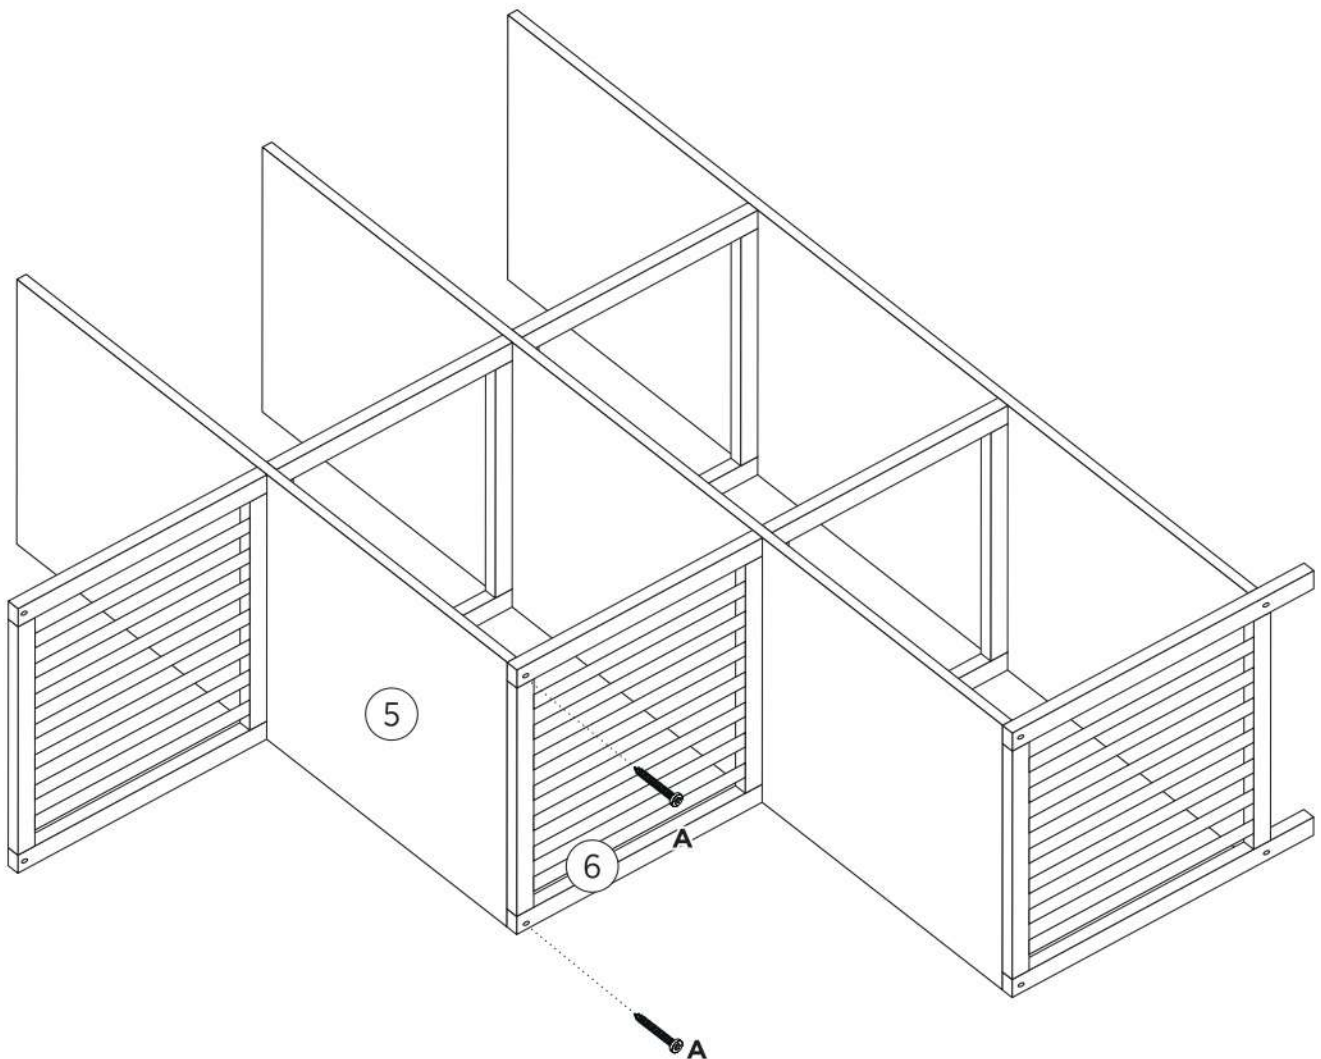


ASSEMBLY INSTRUCTIONS

STEP 6

Fixed part 6 to part 3 using screws (A).

 Attach part 2 to parts 3, 4, 5 and 8 using screws (A), as shown.

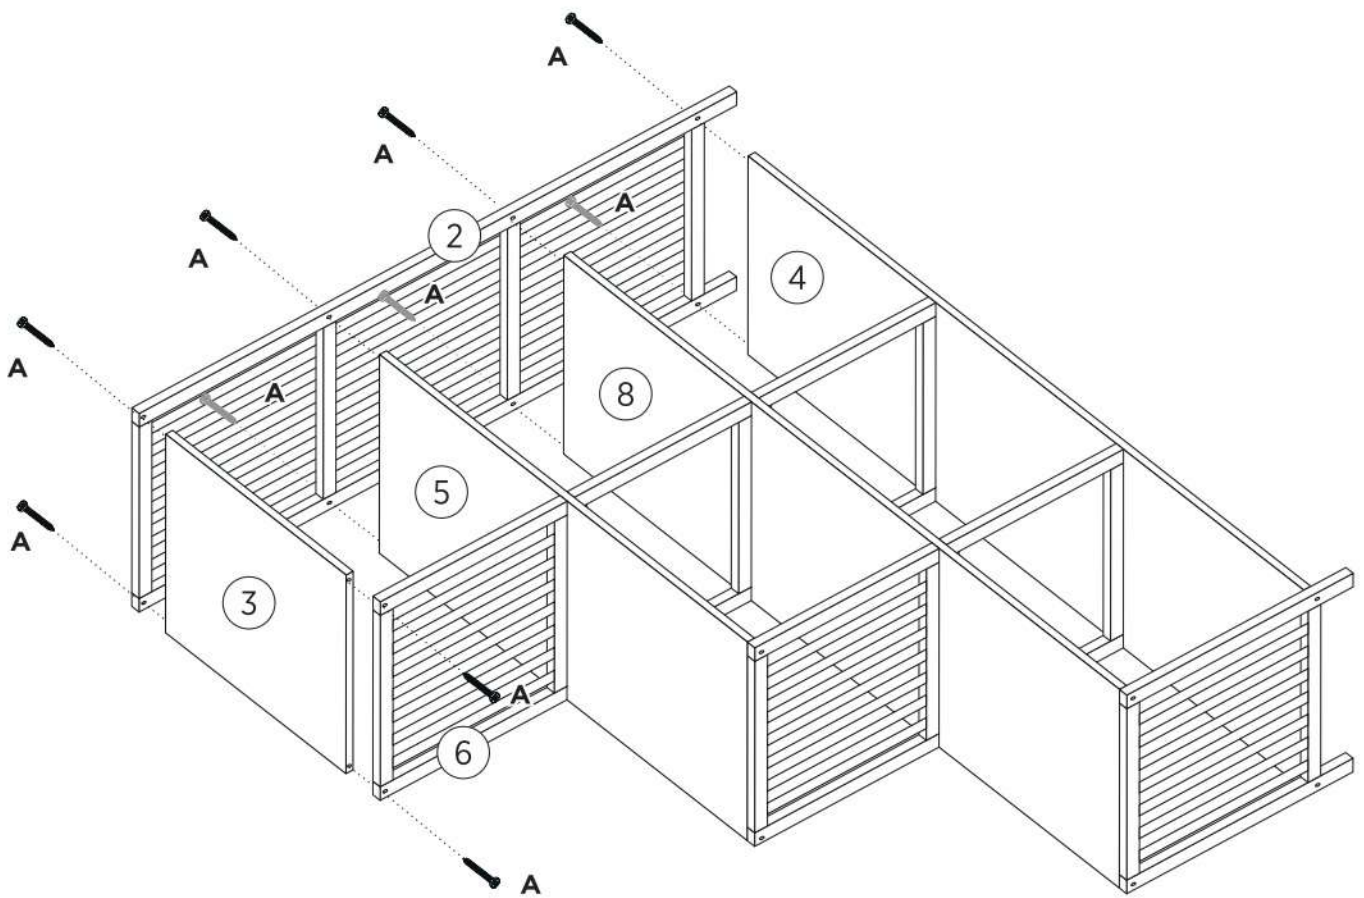

ASSEMBLY INSTRUCTIONS

 
STEP 7

For extra stability, you must fix your buffet to the wall using the additional hardware (F) and (G), as shown.

Screw (G) is fixed through the bracket (E) and into the wall plug (F).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Please consider the wall mounting & fixing guide when securing your display shelf cube.

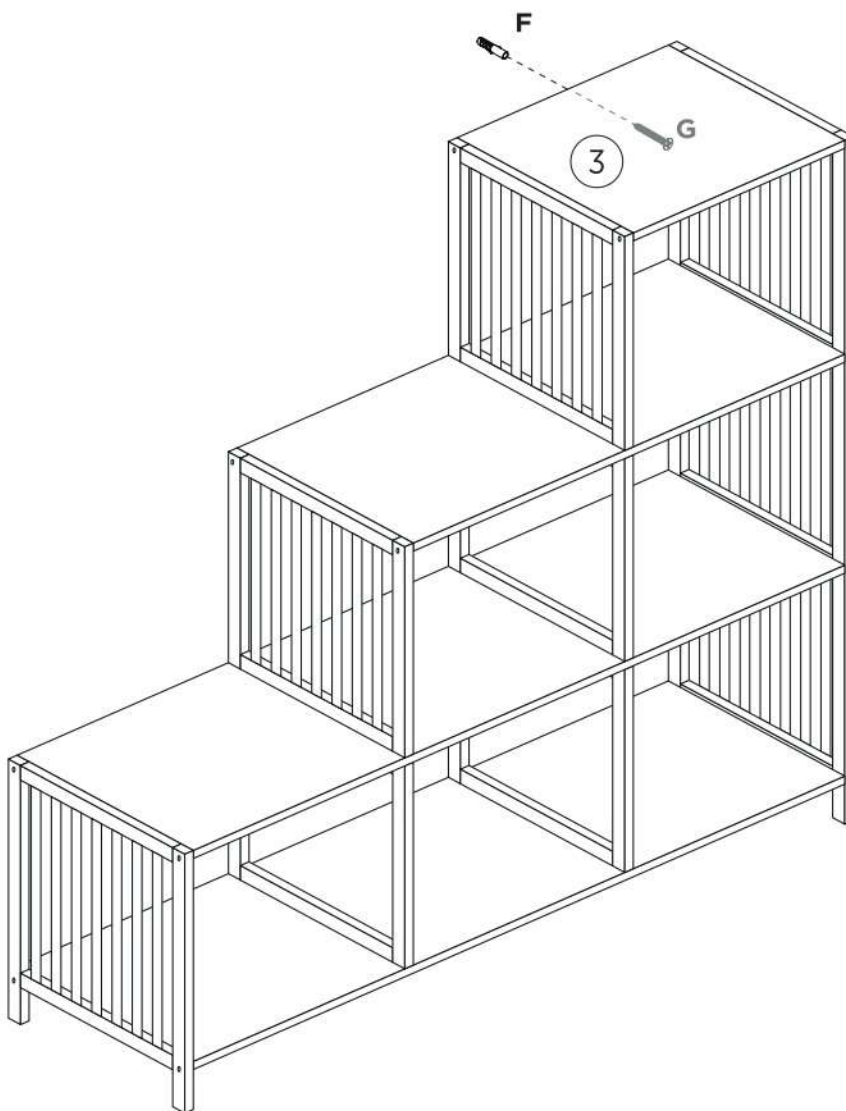

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

Ask staff for more information or visit <https://www.productsafety.gov.au>

Maximum recommended weight is 5kgs for shelves.

Your Display Shelf Cube 3 Step is ready for use.