 


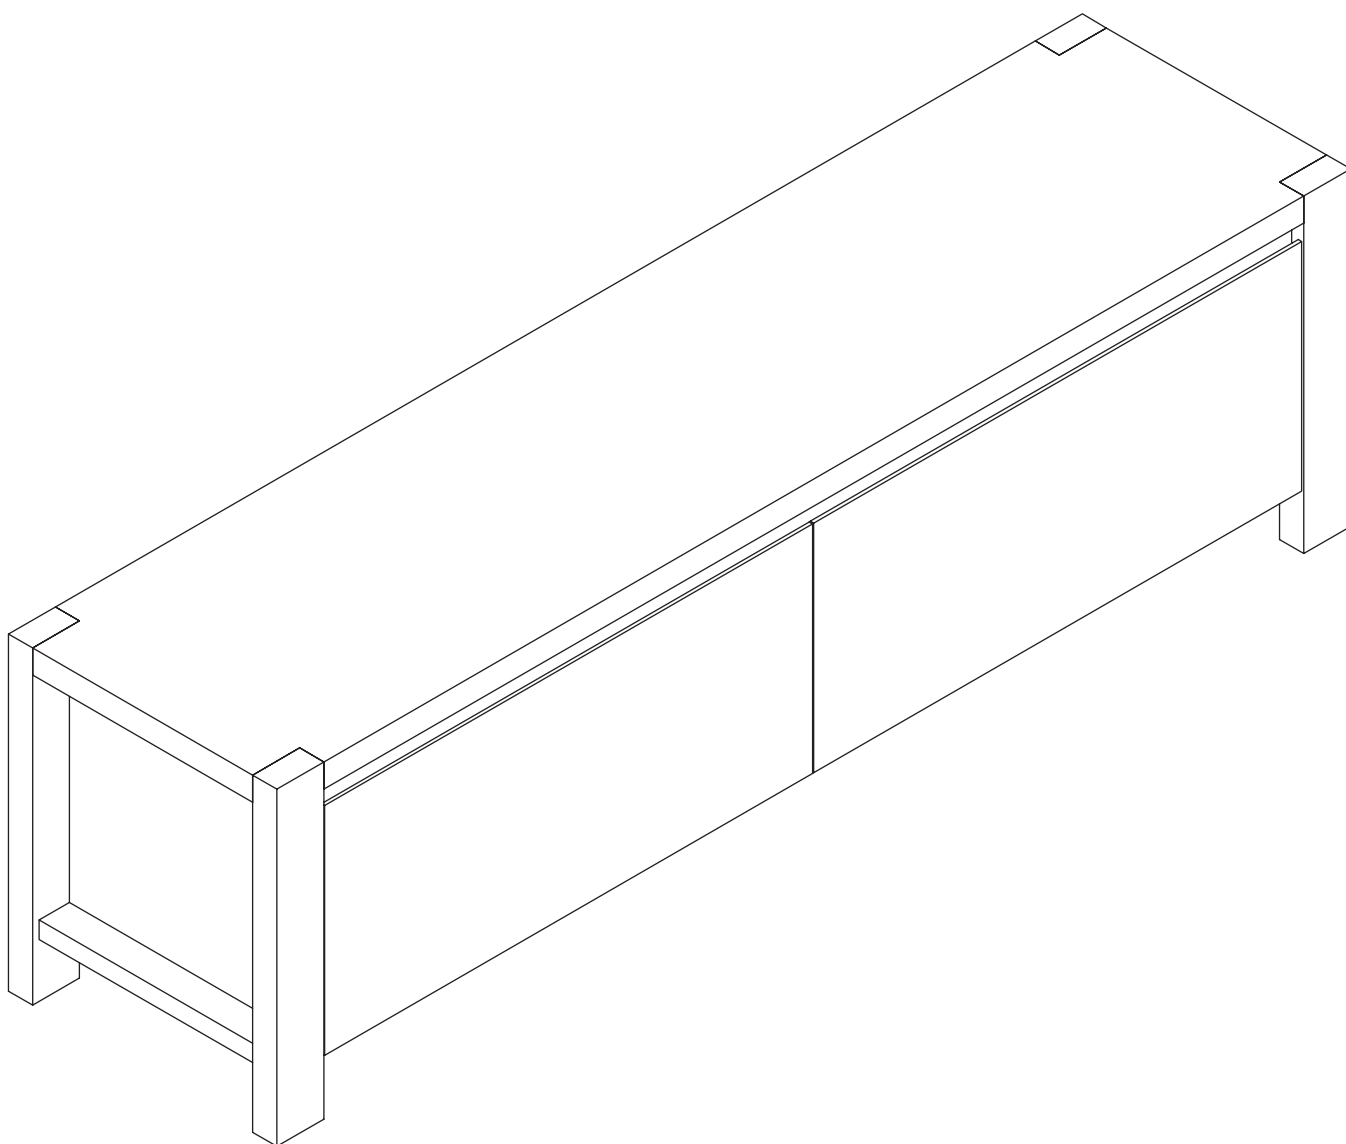

TV UNIT 2 DRAWERS

ASSEMBLY INSTRUCTIONS



TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

ASSEMBLY REQUIREMENTS

- ✓ Equipment: phillips head screwdriver
- ✓ 1 x adult required
- ✓ 1m x 1m assembly space required
- ✓ 1 hour assembly time approx.



ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **ALWAYS** secure your television to this furniture with an anchor device or mount the television on a wall

 
For more information, visit <https://www.productsafety.gov.au>



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

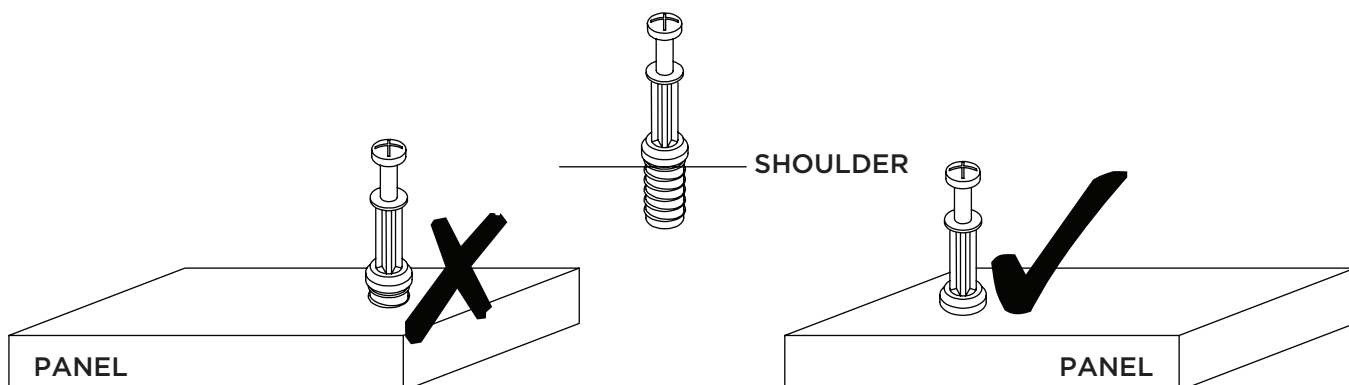


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

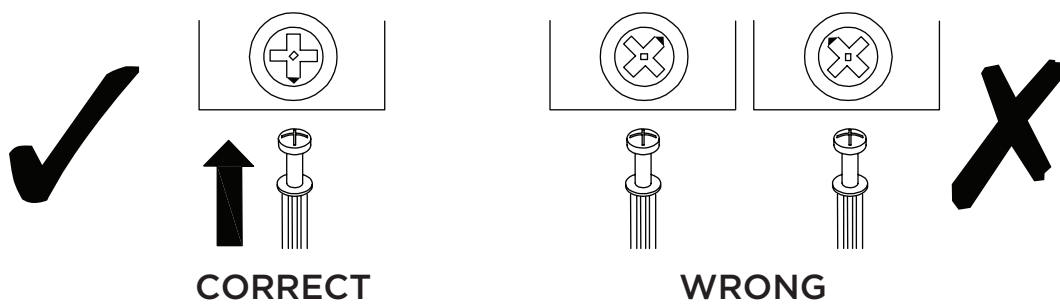

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

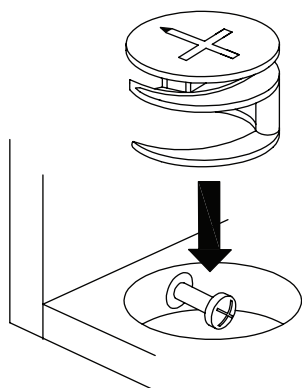


Turn cam lock clockwise to tighten.

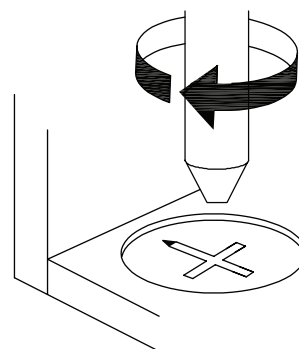 


DRAWER SLIDE GUIDE

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

 Inner Drawer Runner Left




Inner Drawer Runner Right

 


The Drawer Slide components shown above are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

 Outer Drawer Runner Left

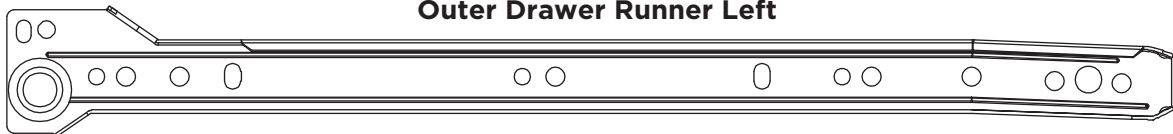


Outer Drawer Runner Right

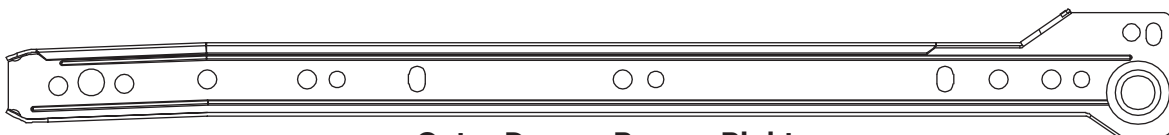 

The Drawer Slide components shown above are attached to the **TV Unit**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for step 8, 9, 10 and 23.

 HARDWARE LIST



36 x A
Quickfit
Screw



36 x B
Cam Lock



24 x C
Wooden
Dowel



 
28 x D
Screw




2 x E
Screw




1 x F
Adjustable Foot

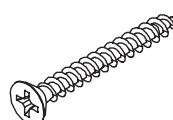

16 x G
Screw

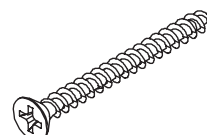 


4 x H
Screw

 

2 x I
Wall Bracket



 2 x J
Wall Plug




8 x K
Screw




8 x L
Wedge



 
4 x M
Foot Pad

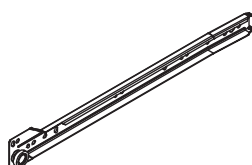


2 x CL
Outer Drawer
Runner

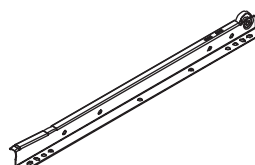 

2 x DL
Inner Drawer
Runner

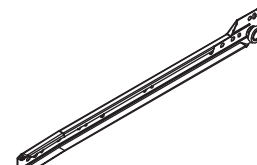 


2 x CR
Outer Drawer
Runner

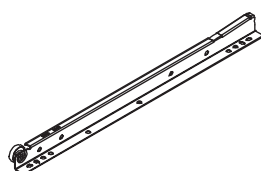 


2 x DR
Inner Drawer
Runner

 
PARTS LIST

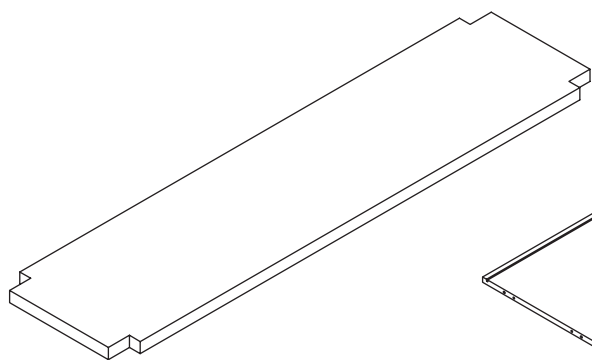

1
1 PC

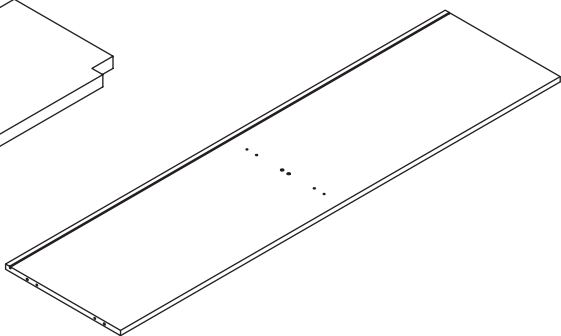 

2
1 PC

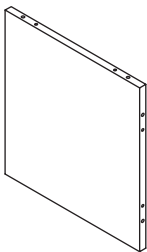 

3
1 PC



4
1 PC



 
5
1 PC




6
1 PC




7
1 PC



8
2 PCS

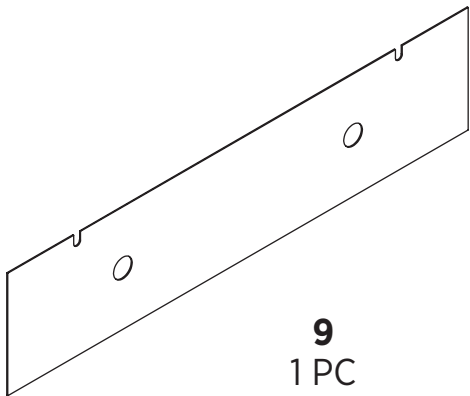 


9
1 PC

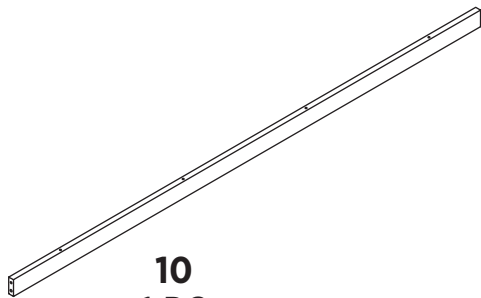 

10
1 PC




 11
1 PC

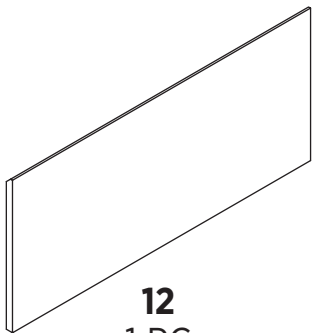


12
1 PC

 
PARTS LIST

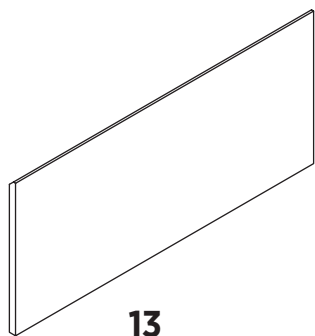


13
1 PC

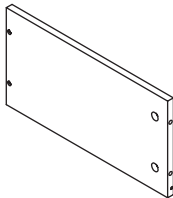 


14
2 PCS

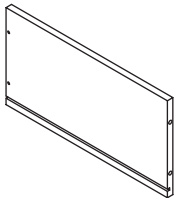 


15
2 PCS

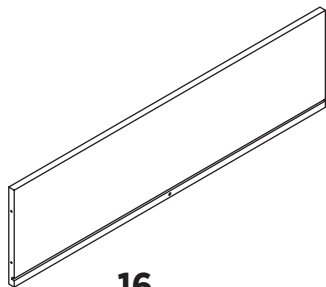 


16
2 PCS

 


17
2 PCS

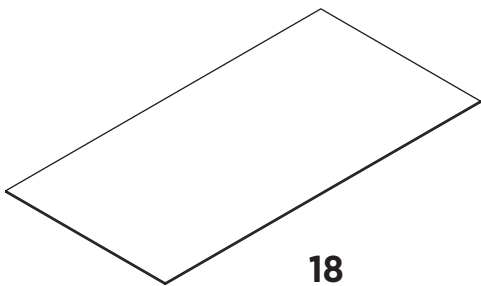 

18
2 PCS

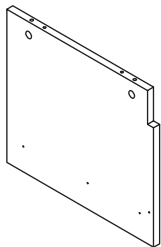 

19
1 PC



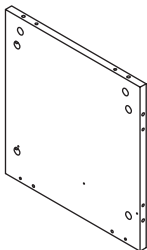 


20
1 PC

ASSEMBLY INSTRUCTIONS

STEP 1

   Insert quickfit screws (A) into parts 3 and 20.

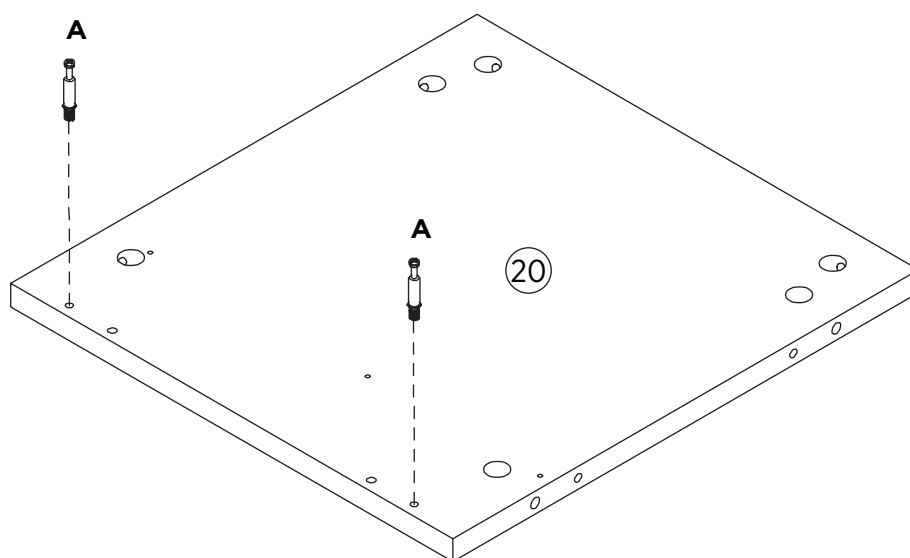
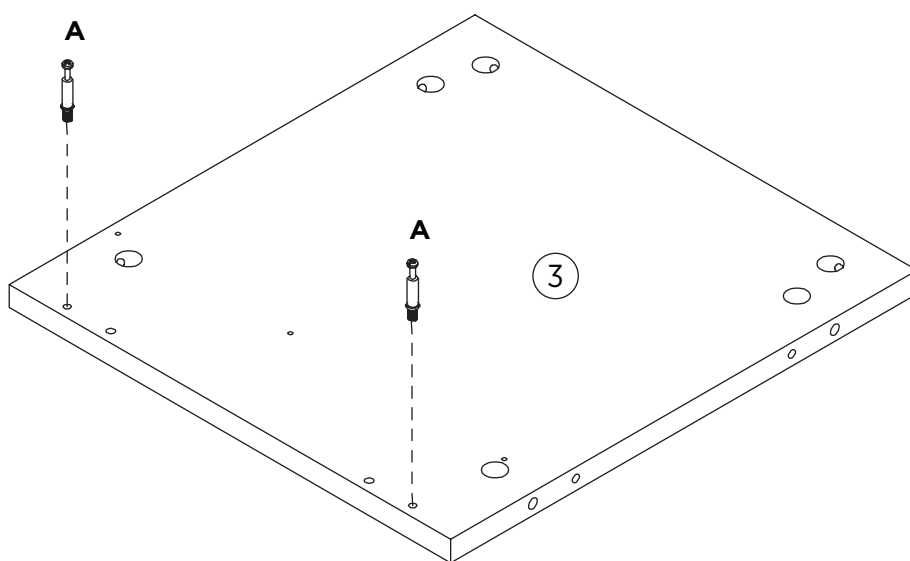



ASSEMBLY INSTRUCTIONS

STEP 2

Insert quickfit screws (A) into part 4.

   Attach foot pad (M) to part 4.

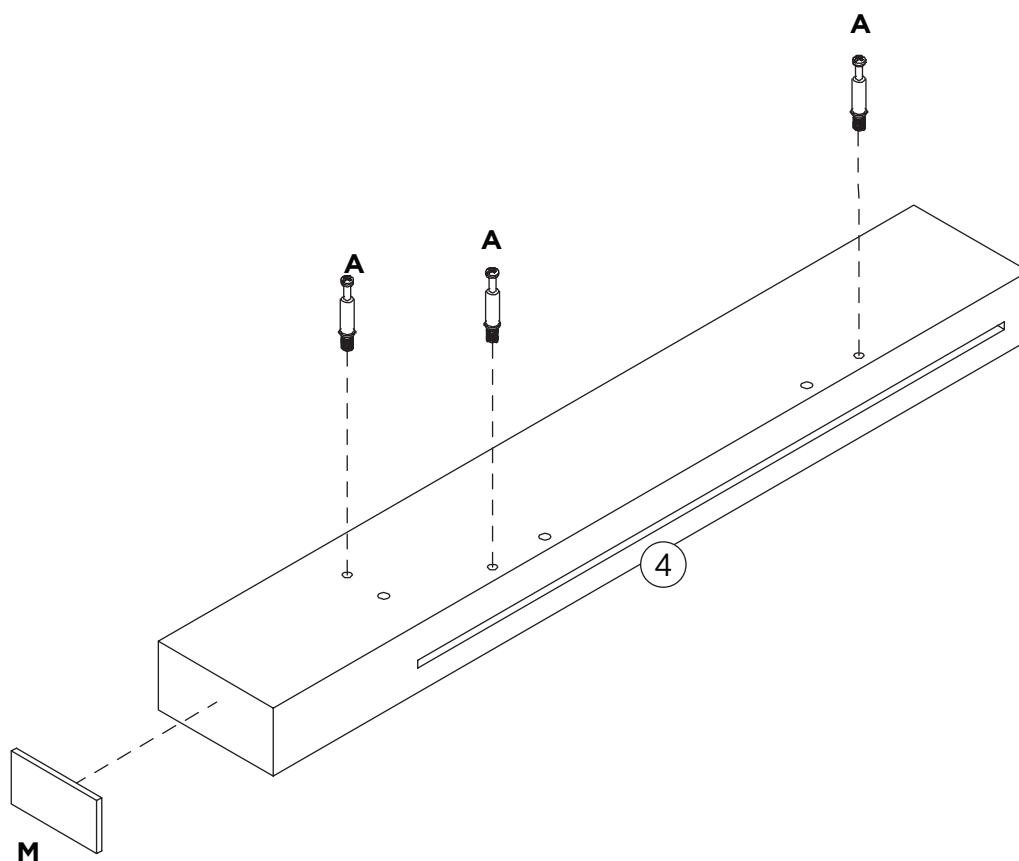

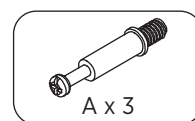


ASSEMBLY INSTRUCTIONS

STEP 3

Insert quickfit screws (A) into part 6.

   Attach foot pad (M) to part 6.

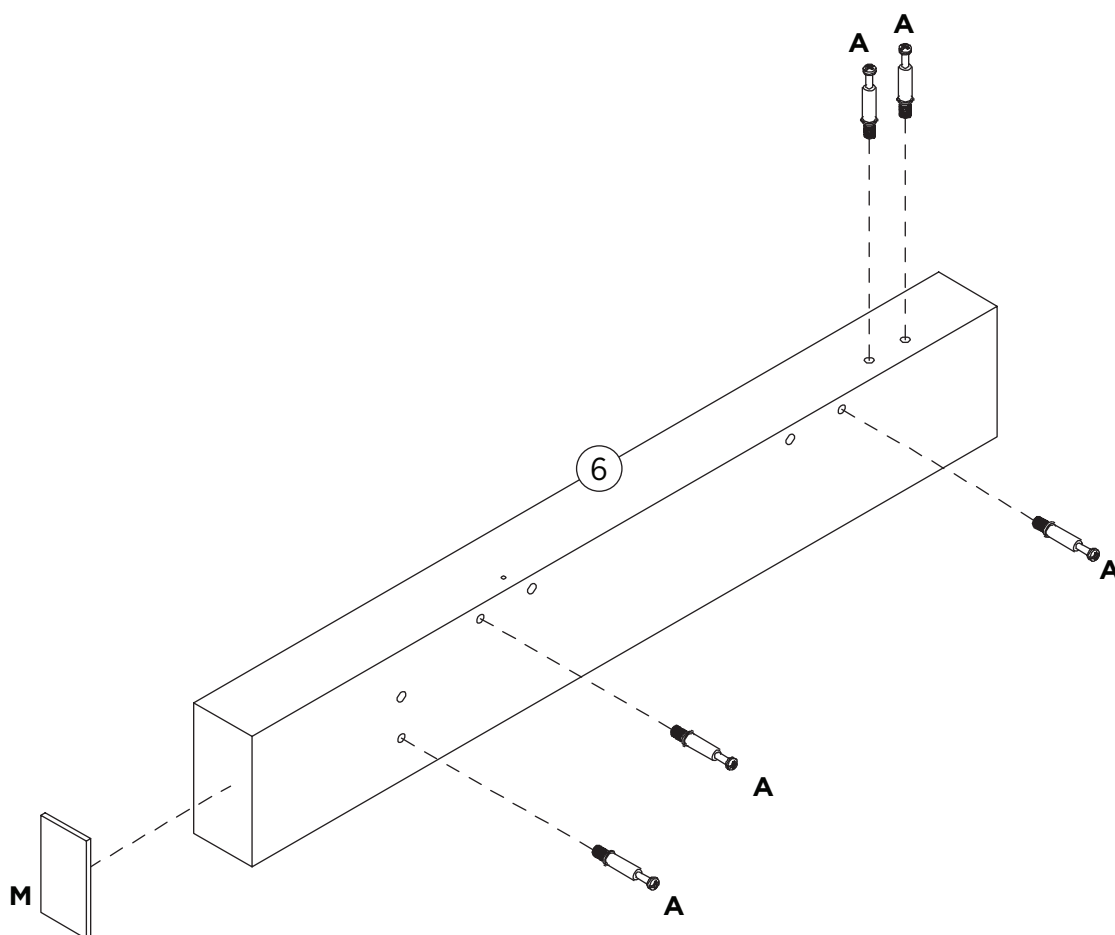

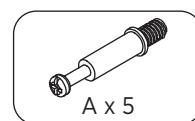


ASSEMBLY INSTRUCTIONS

STEP 4

Insert quickfit screws (A) into part 7.

   Attach foot pad (M) to part 7.

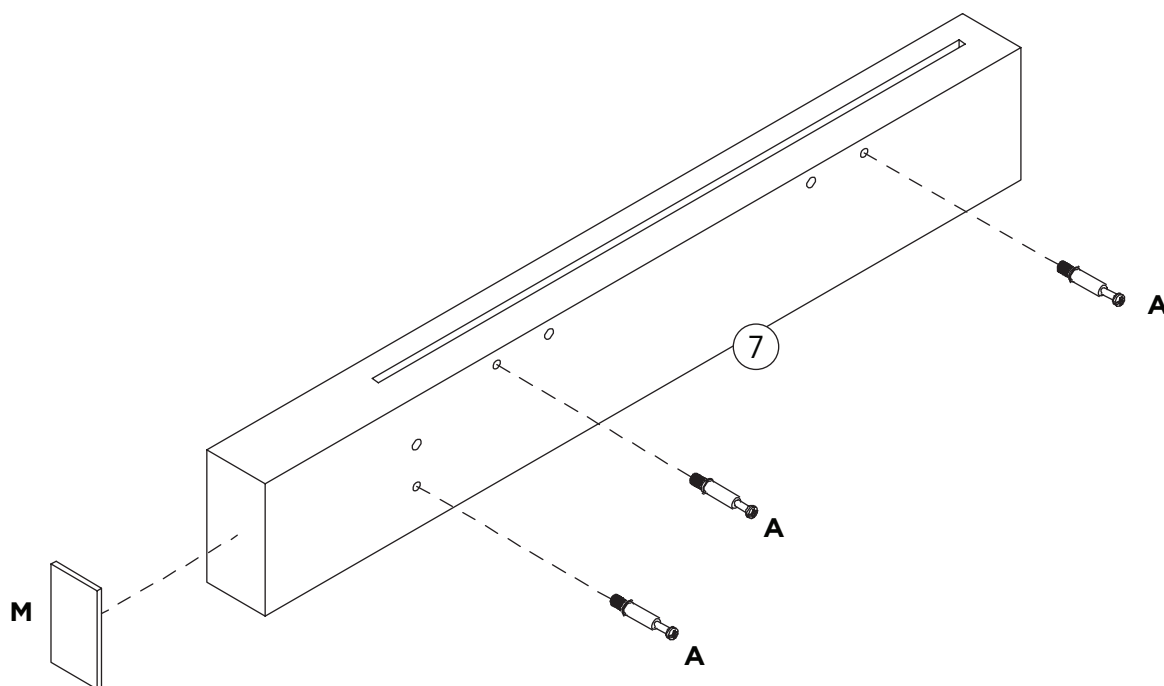




ASSEMBLY INSTRUCTIONS

STEP 5

Insert quickfit screws (A) into part 5.

   Attach foot pad (M) to part 5.

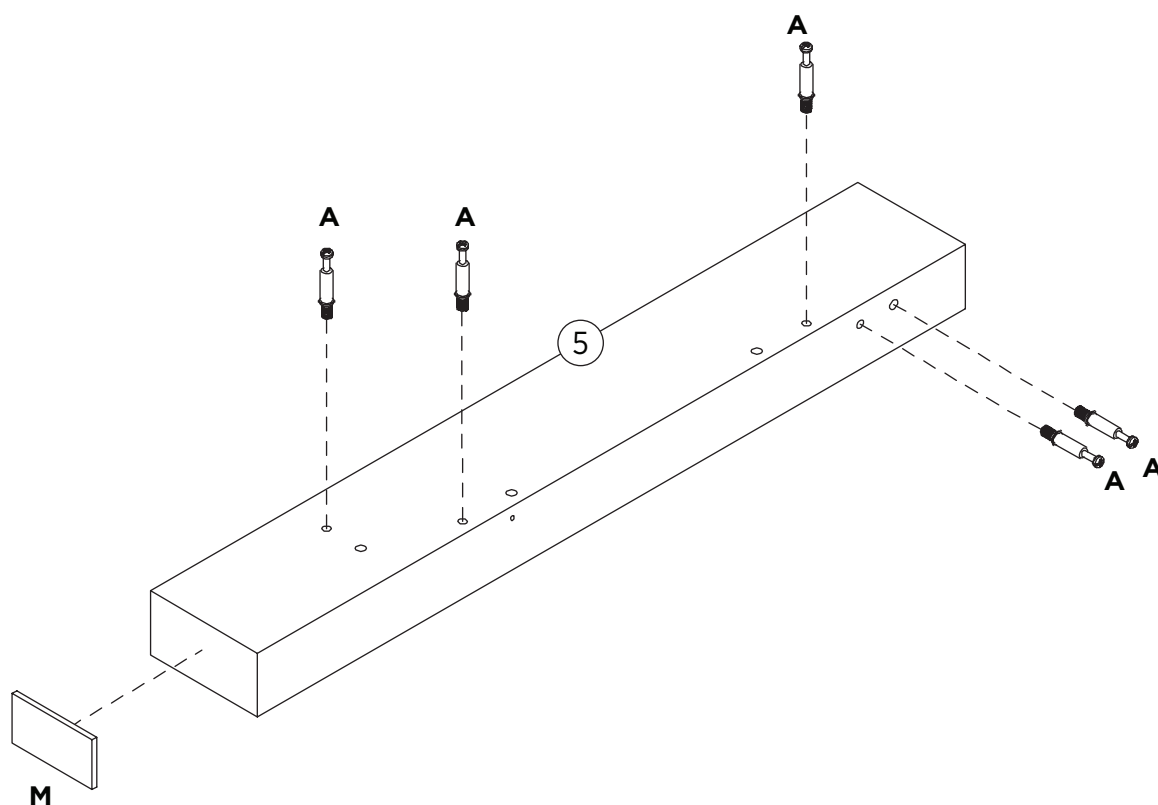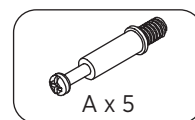




ASSEMBLY INSTRUCTIONS

STEP 6

Insert wooden dowels (C) to parts 3 and 8.

Attach parts 3 and 8 to parts 4 and 6 using cam locks (B).

   Turn cam locks clockwise to tighten.

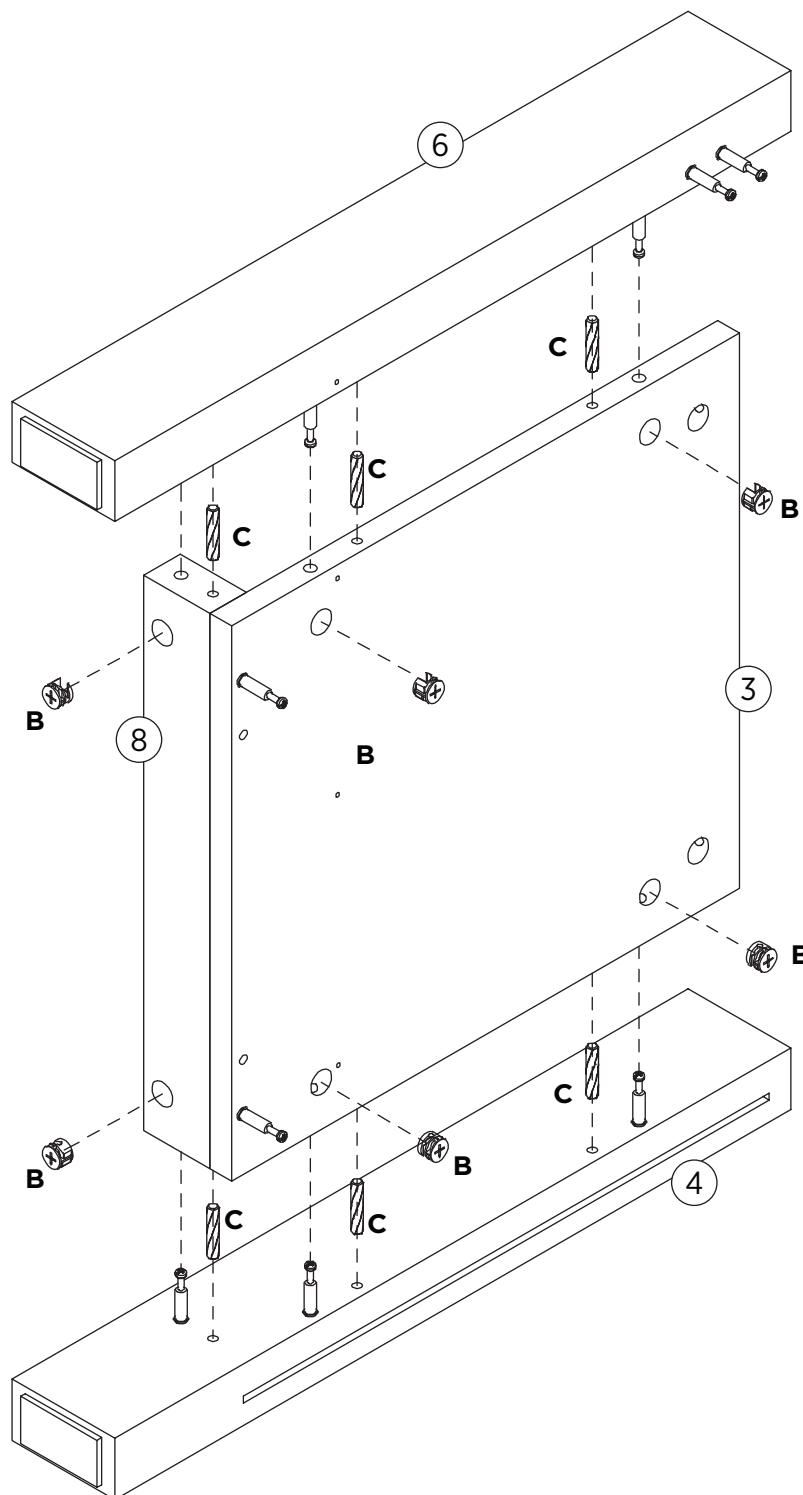




ASSEMBLY INSTRUCTIONS

STEP 7

Insert wooden dowels (C) to parts 20 and 8.

Attach parts 8 and 20 to parts 5 and 7 using cam locks (B), as shown.

   Turn cam locks clockwise to tighten.

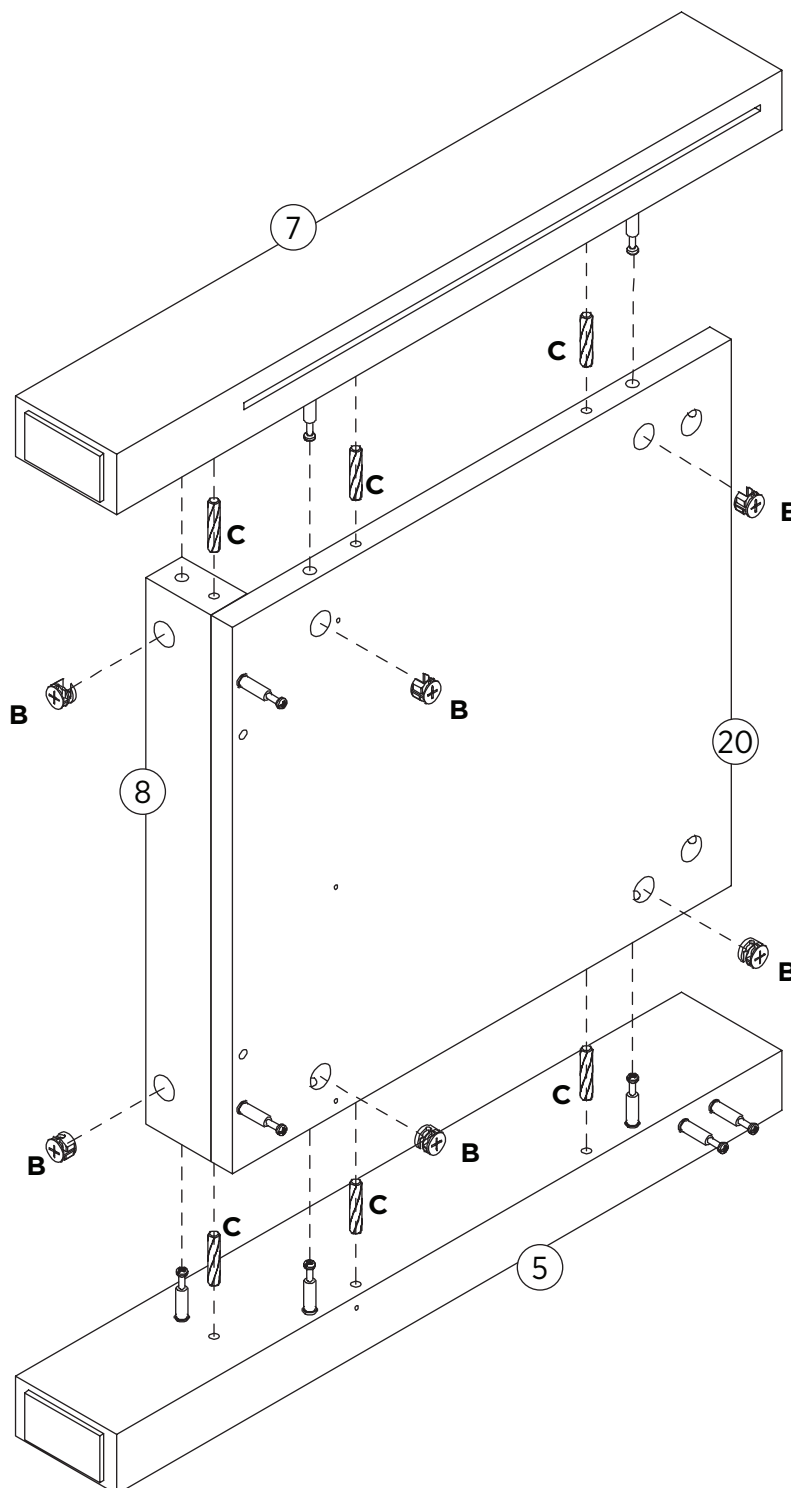

ASSEMBLY INSTRUCTIONS

STEP 8

Fix outer drawer runner (CL) to part 3 using screws (D), as shown.



 
D x 4



CL x 1

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

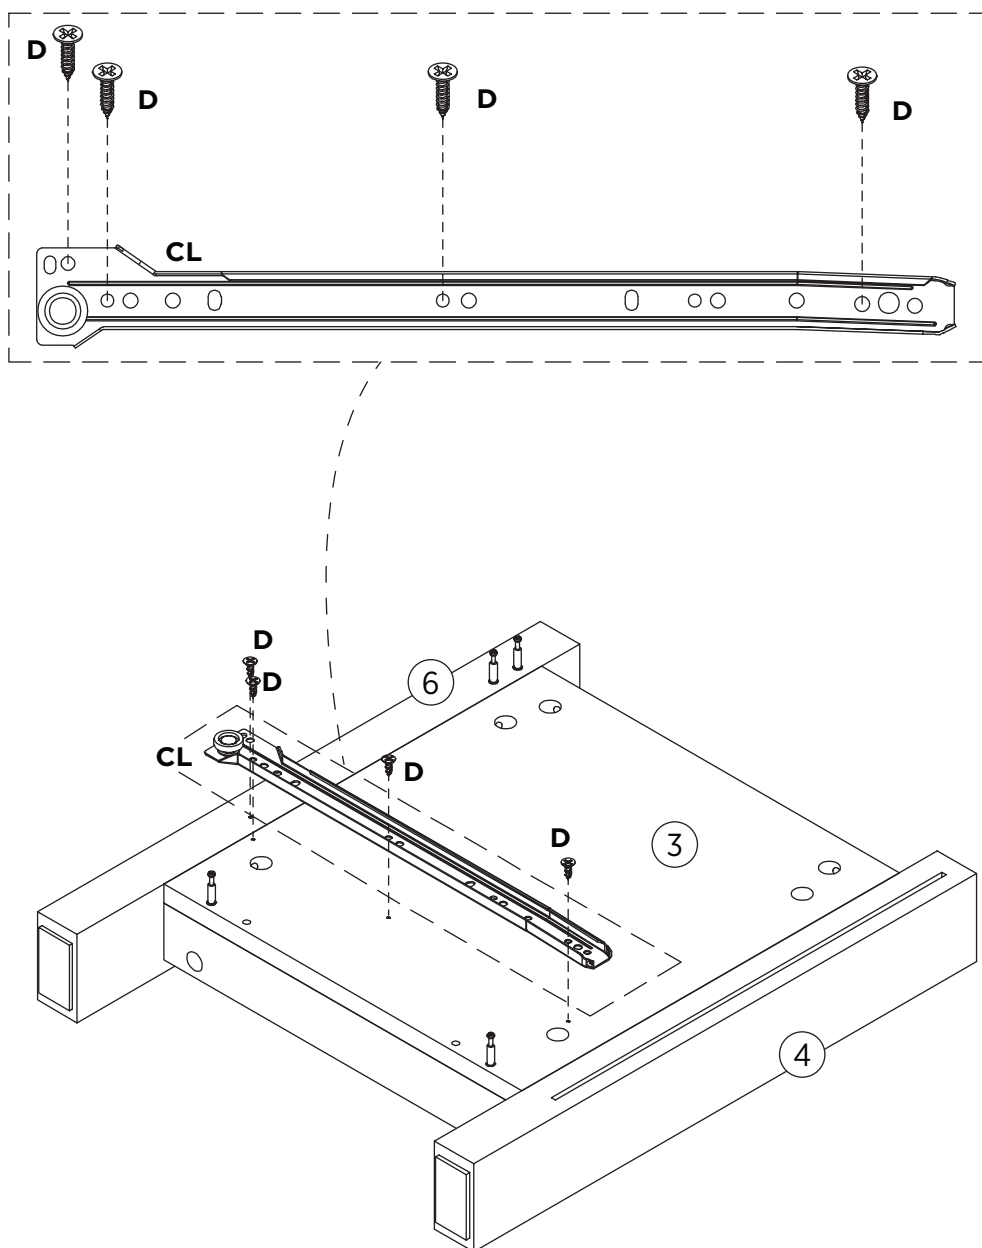

ASSEMBLY INSTRUCTIONS

STEP 9

Fix outer drawer runner (CR) to part 20 using screws (D), as shown.



 
D x 4



CR x 1

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.

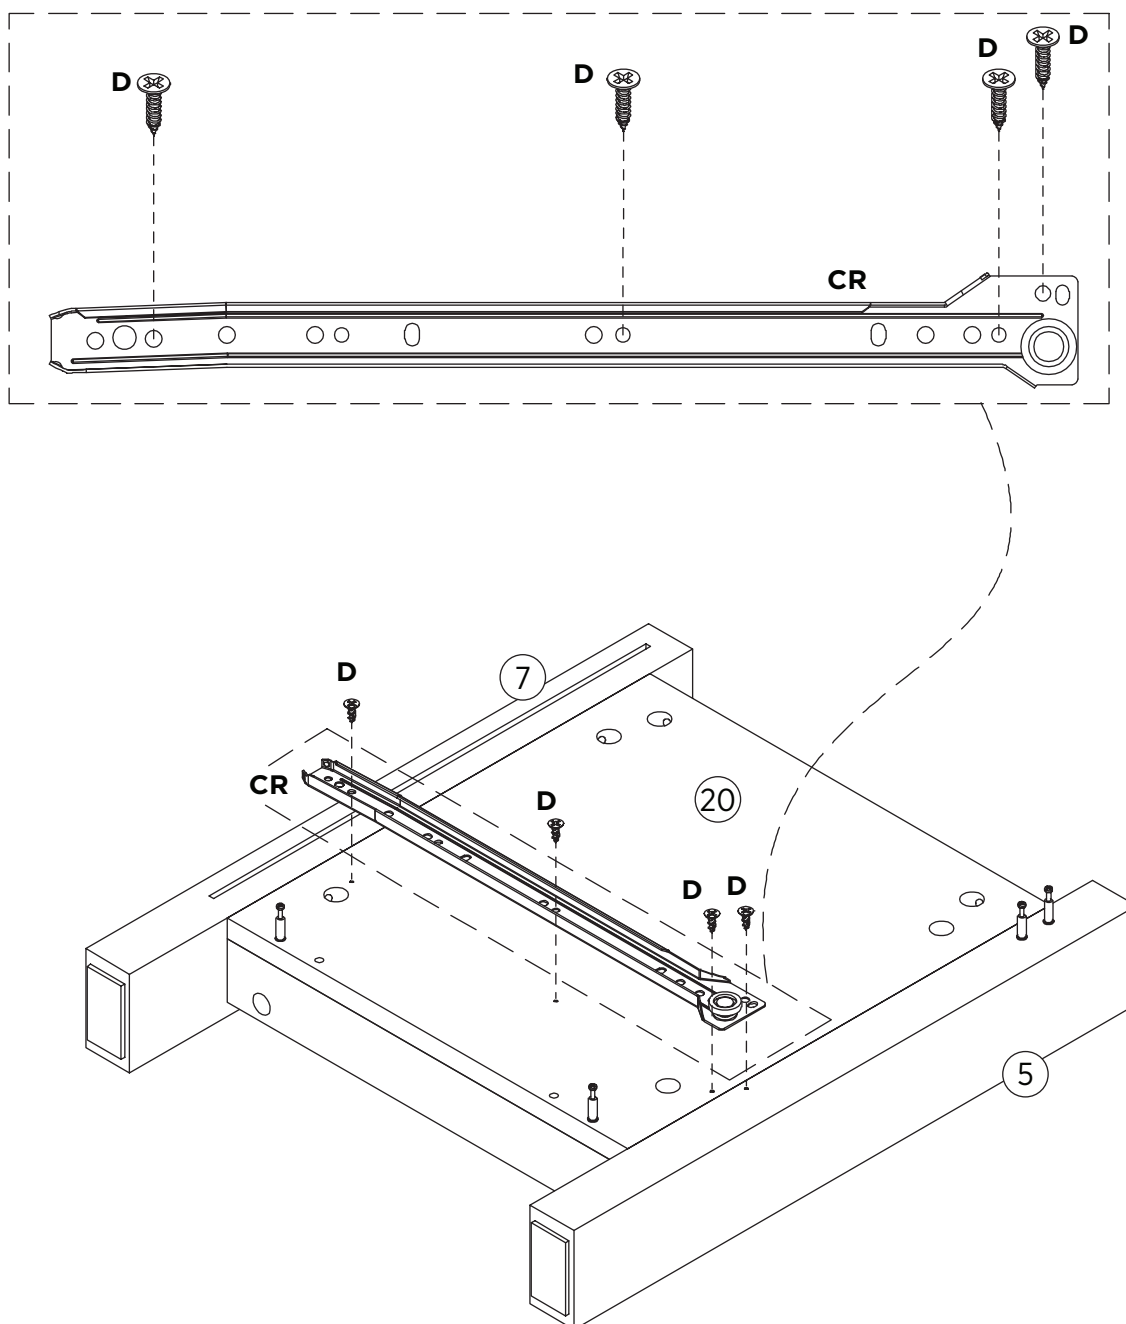

ASSEMBLY INSTRUCTIONS

STEP 10

Fix outer drawer runners (CL) and (CR) to part 19 using screws (D), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
 
 
 
D x 8



CL x 1



CR x 1

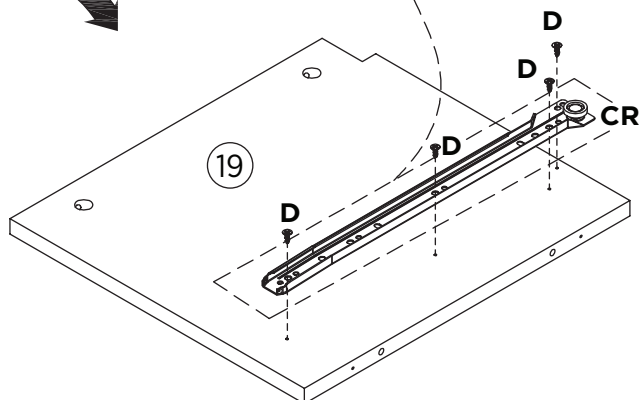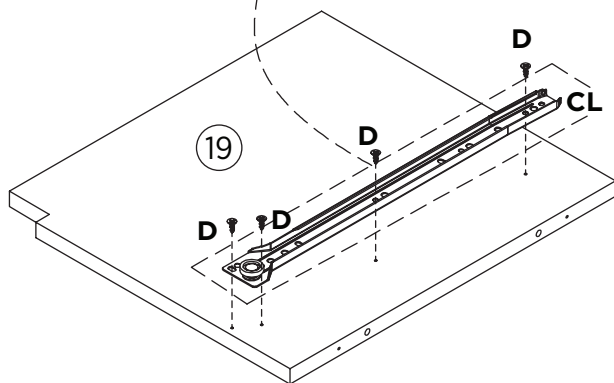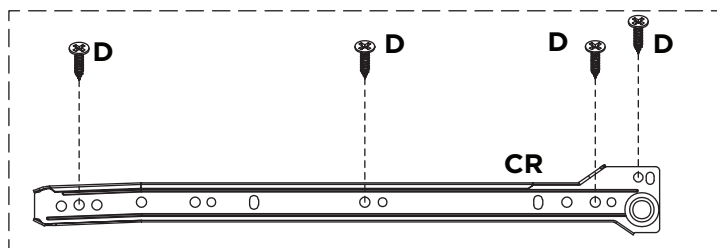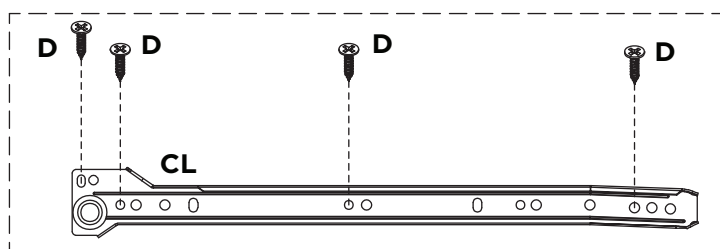

ASSEMBLY INSTRUCTIONS

STEP 11

 
 
Insert wooden dowels (C) to part 2.

Fix part 11 to part 2 using screws (G).

Fix adjustable foot (F) to part 11.

Attach part 3 to part 2 using cam locks (B), as shown.

Turn cam locks clockwise to tighten.

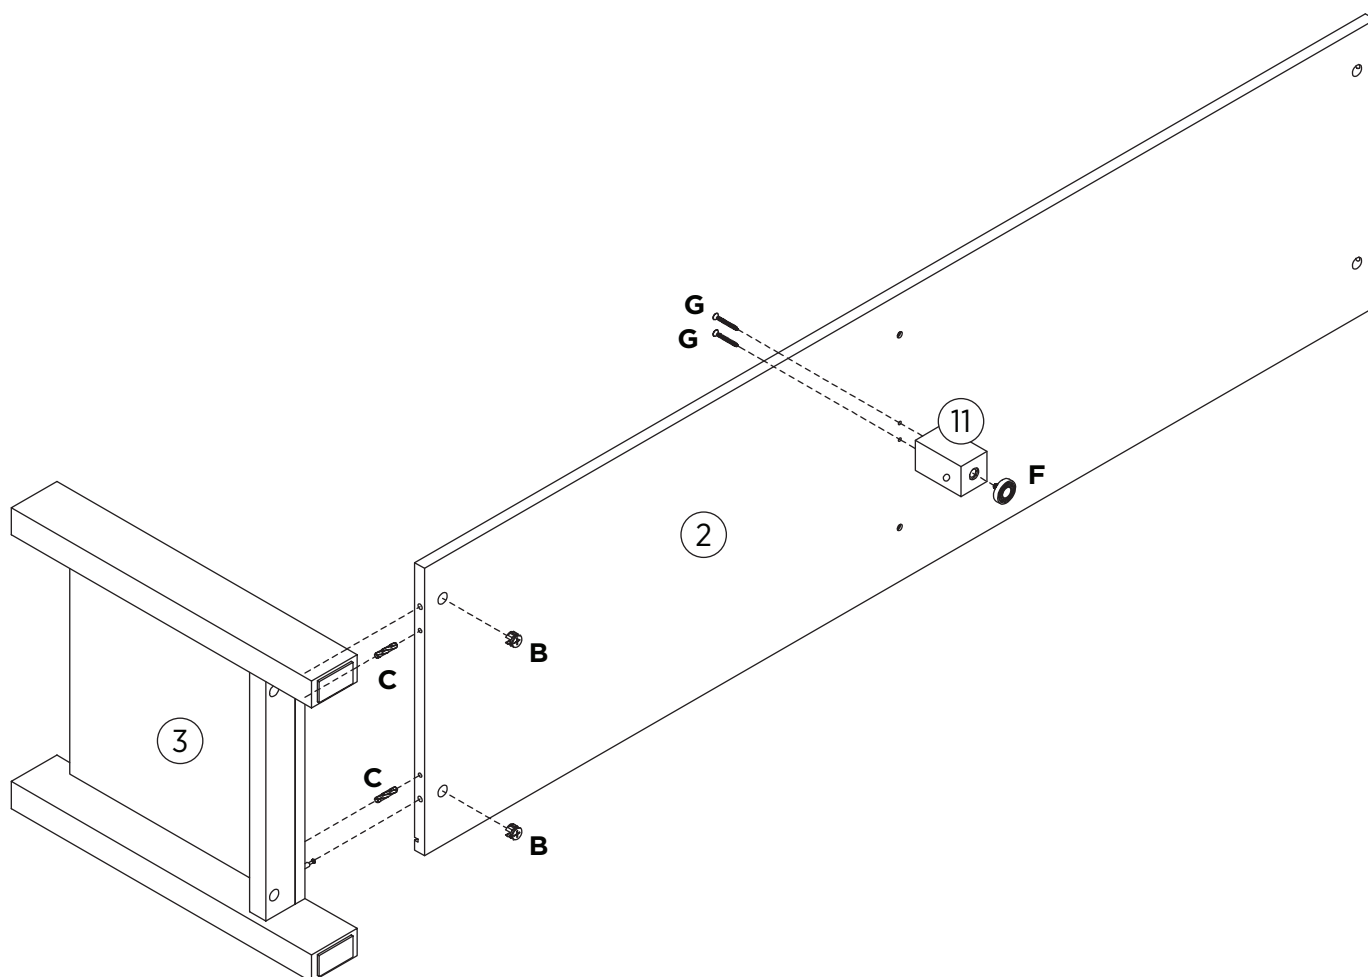



ASSEMBLY INSTRUCTIONS

STEP 12

Insert wooden dowels (C) to part 19.

  Fix part 19 to part 2 using screws (G), as shown.

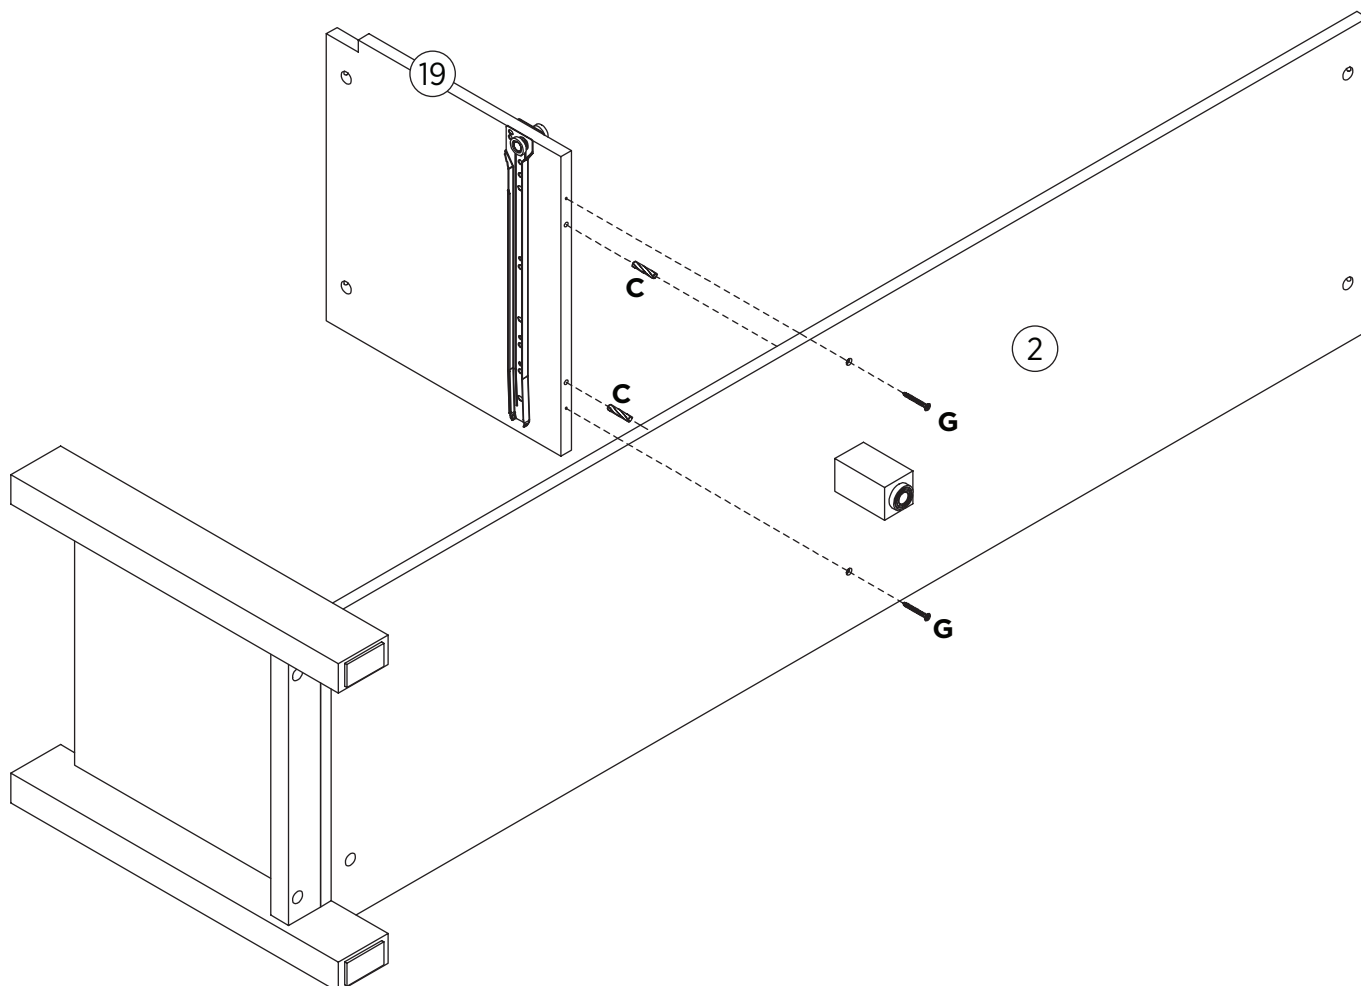


ASSEMBLY INSTRUCTIONS

STEP 13

Attach part 10 to part 6 using cam locks (B).

Turn cam locks clockwise to tighten.

 Insert part 9 into groove between parts 2 and 4, as shown.

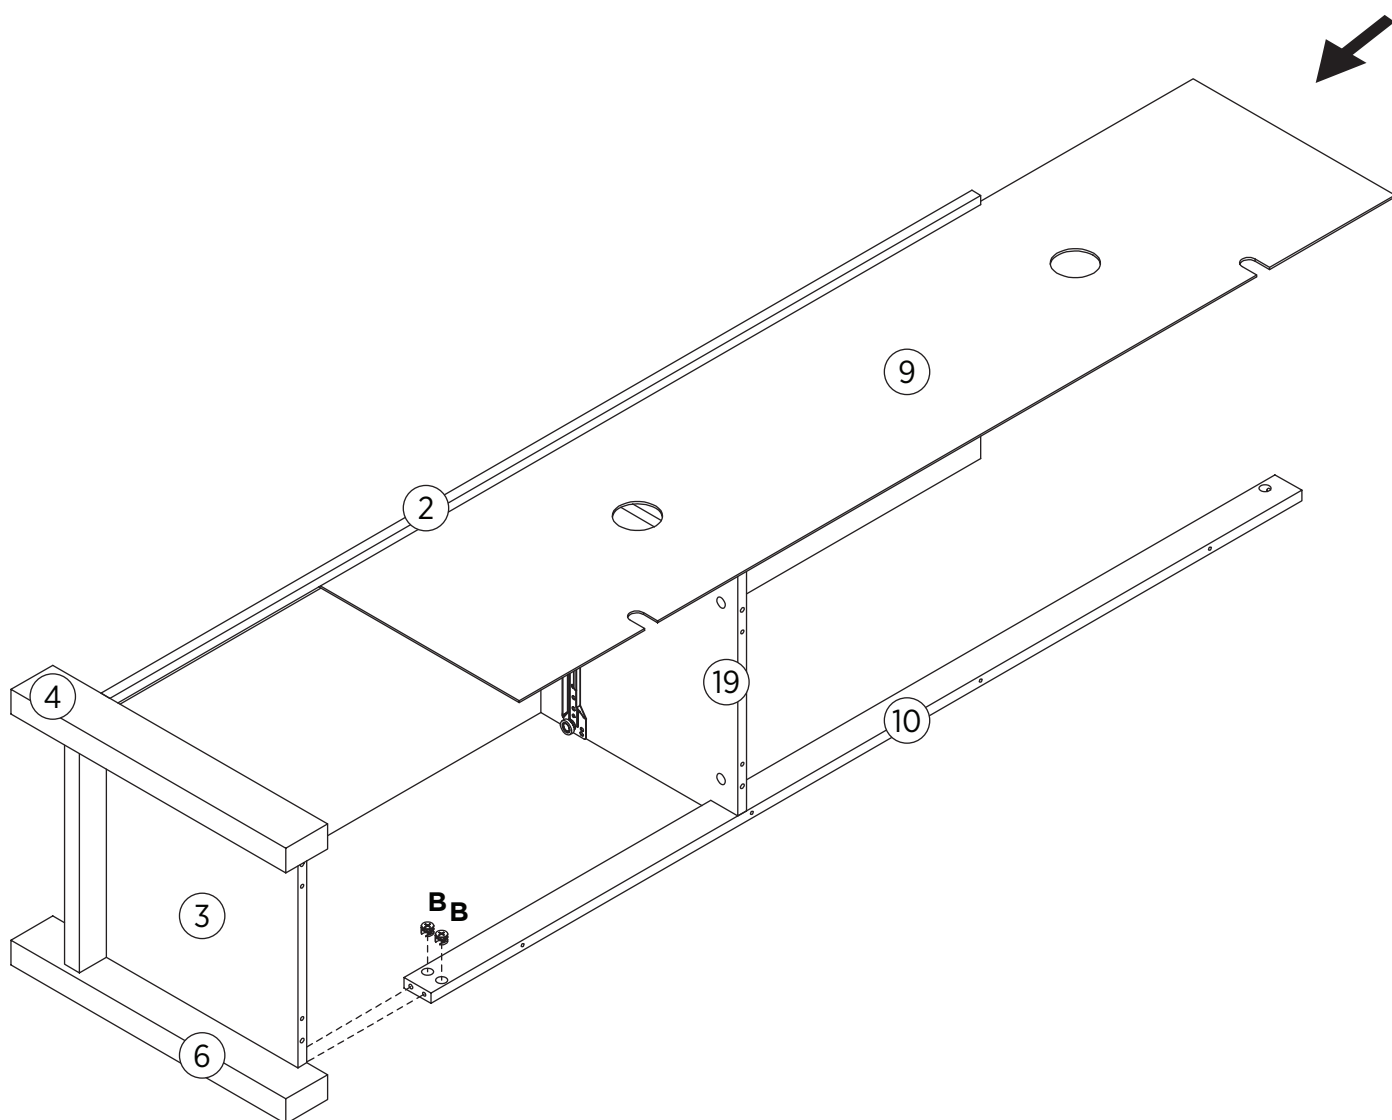

ASSEMBLY INSTRUCTIONS

STEP 14

Insert quickfit screws (A) into part 1.

Fix wall brackets (I) to part 1 using screws (E), as shown.



 
A x 6



E x 2



I x 2

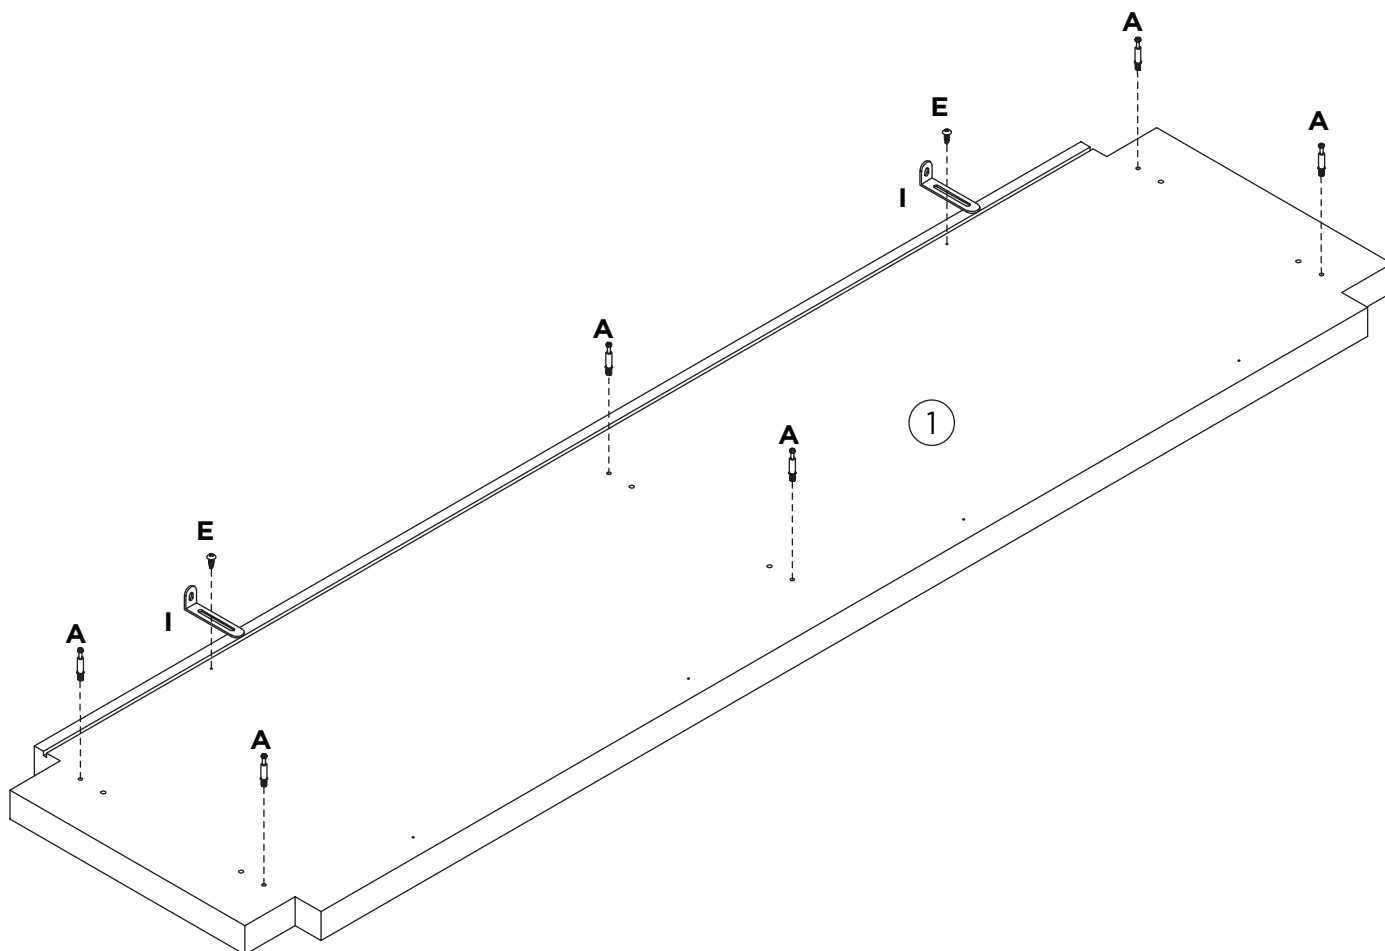

ASSEMBLY INSTRUCTIONS

 
 
STEP 15

Insert wooden dowels (C) to part 2.

Insert cam locks (B) to parts 2 and 10.

Attach parts 5, 7 and 20 to parts 9, 10 and 2, as shown.

Turn cam locks clockwise to tighten.

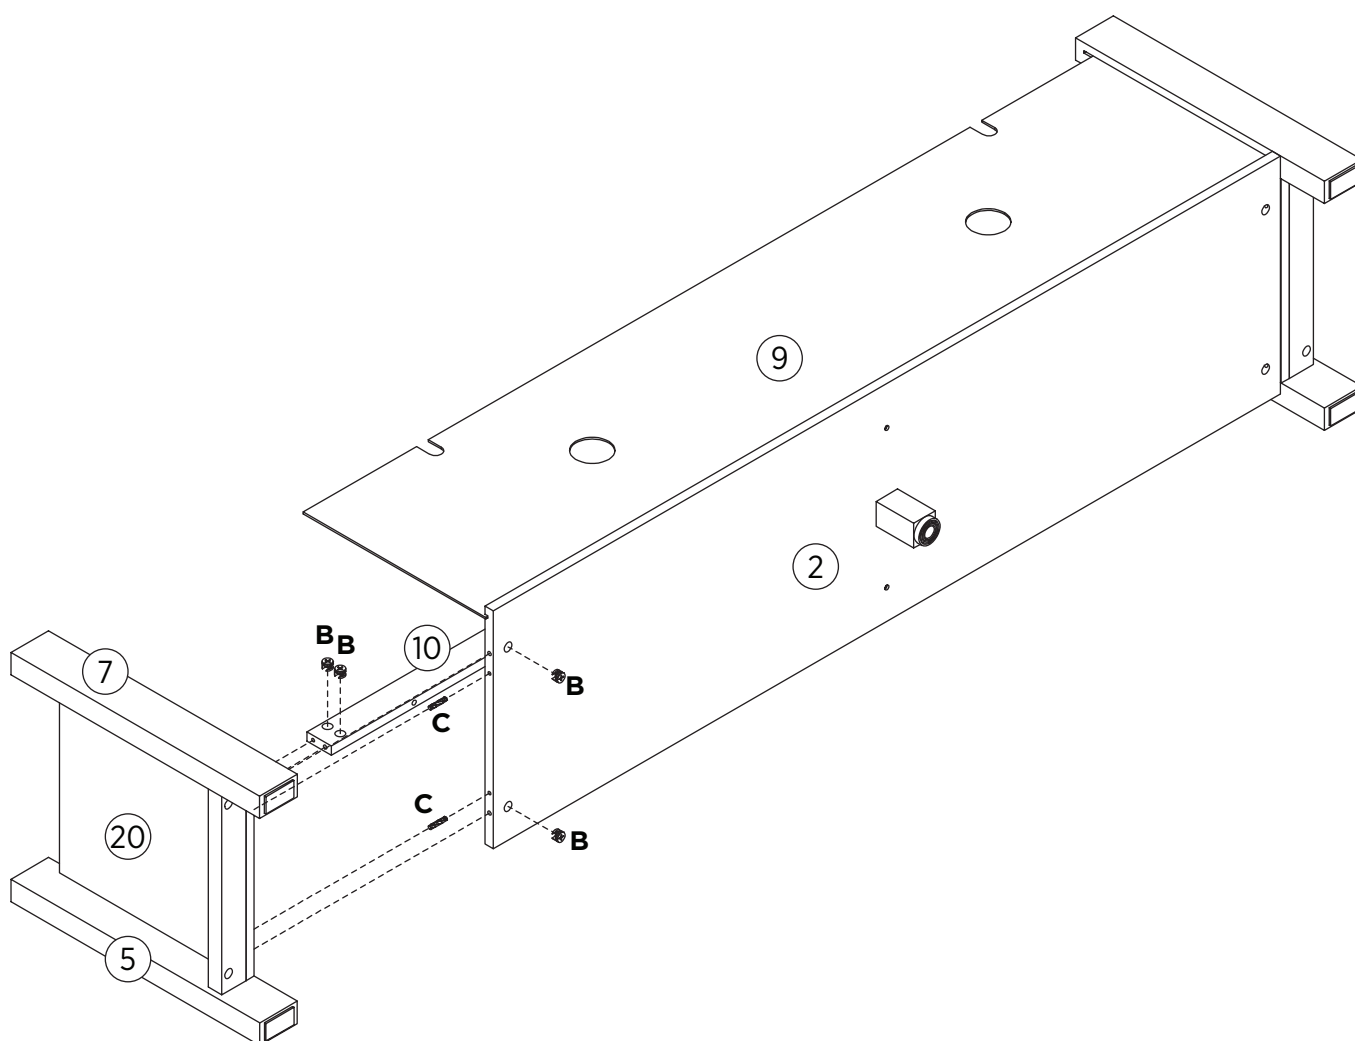

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 16

Insert cam locks (B) and wooden dowels (C) to parts 3, 19 and 20.

Attach part 1 to parts 3, 19 and 20.

Fix part 10 to part 1 using screws (H), as shown.




Turn cam locks clockwise to tighten.

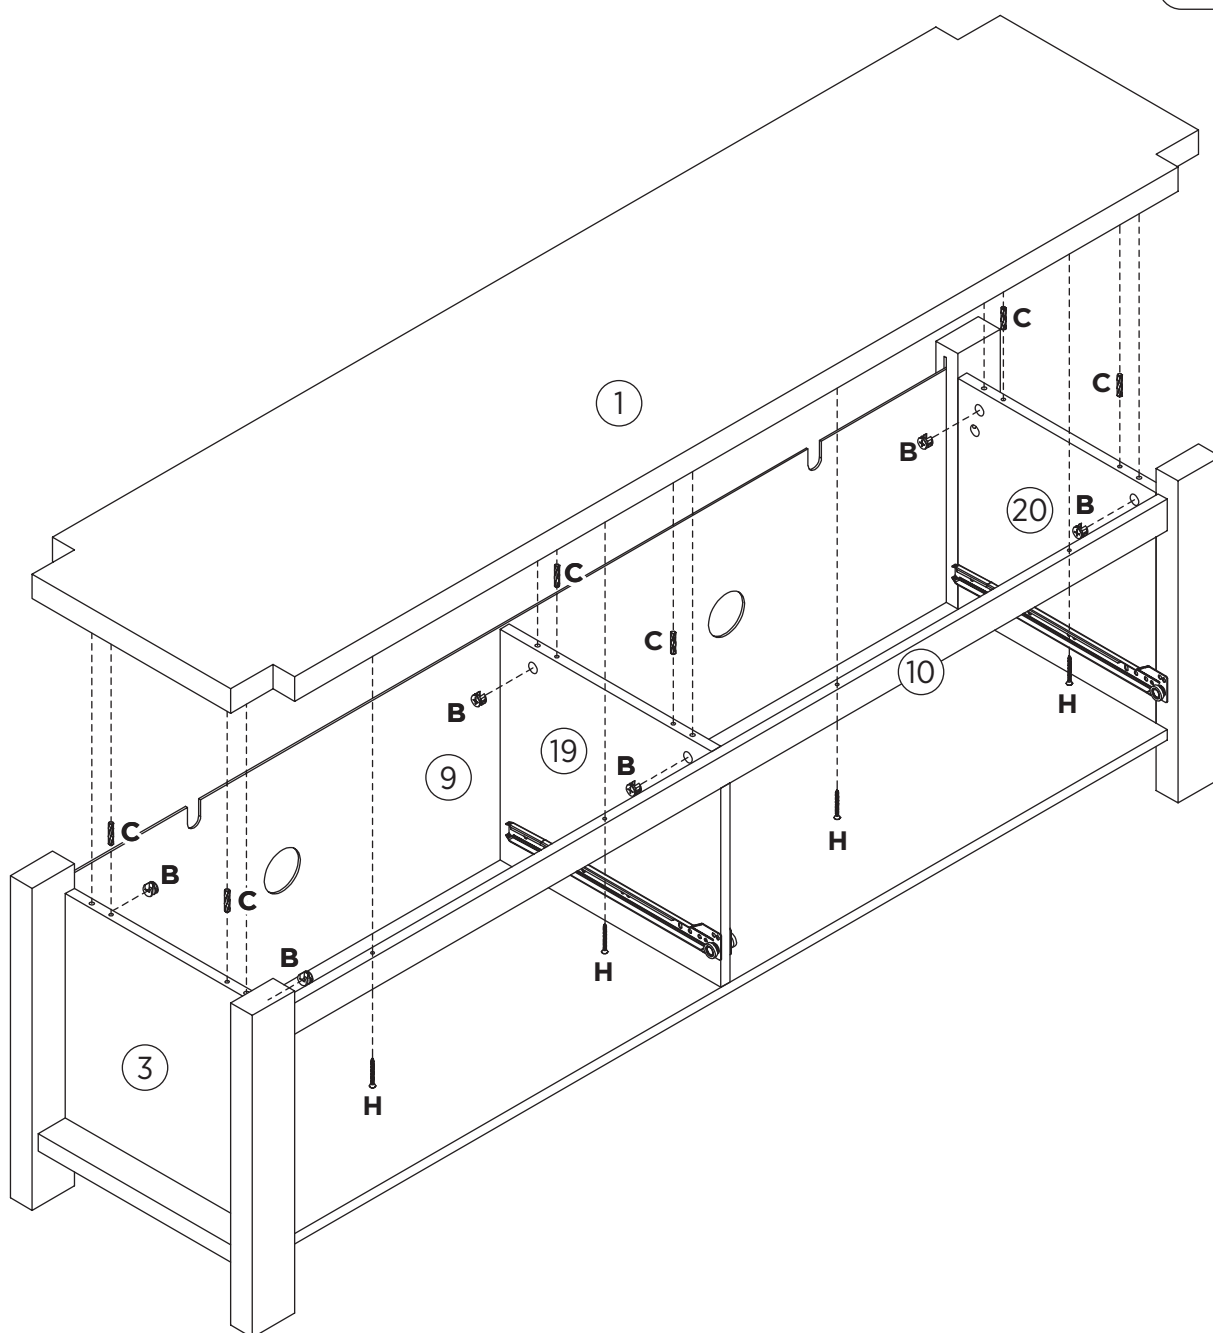

ASSEMBLY INSTRUCTIONS

STEP 17

  
 
Secure part 9 using screws (K) and wedges (L), as shown.

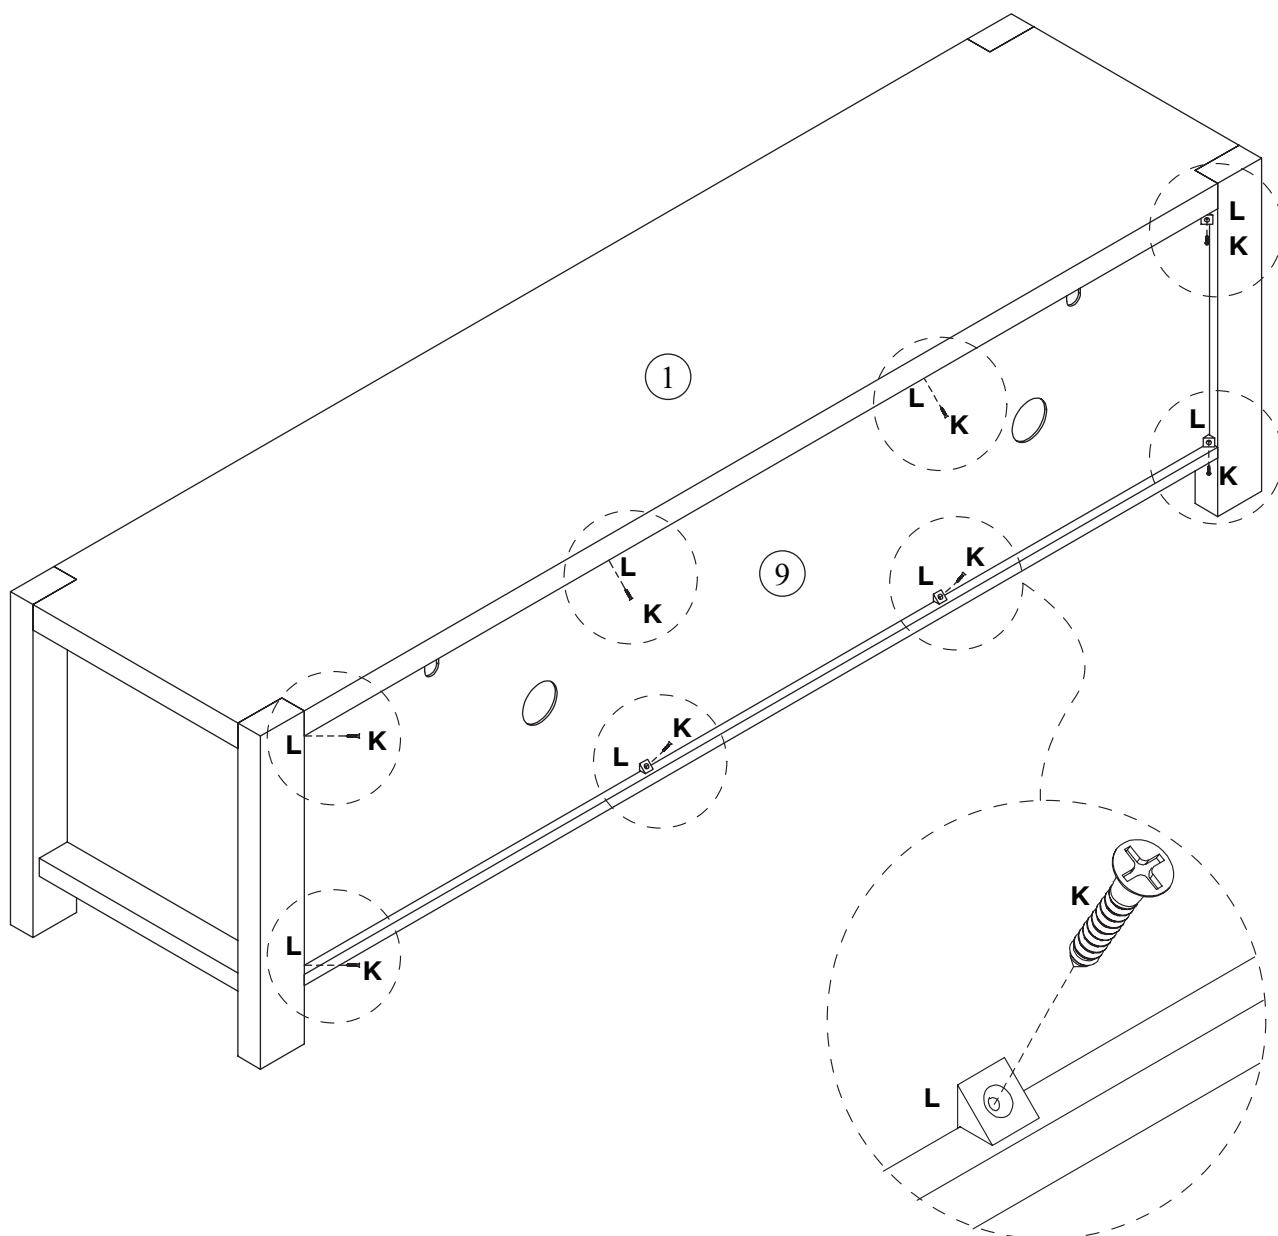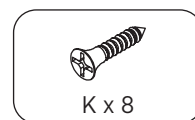

ASSEMBLY INSTRUCTIONS

STEP 18

 
 
Insert quickfit screws (A) into parts 12 and 13.

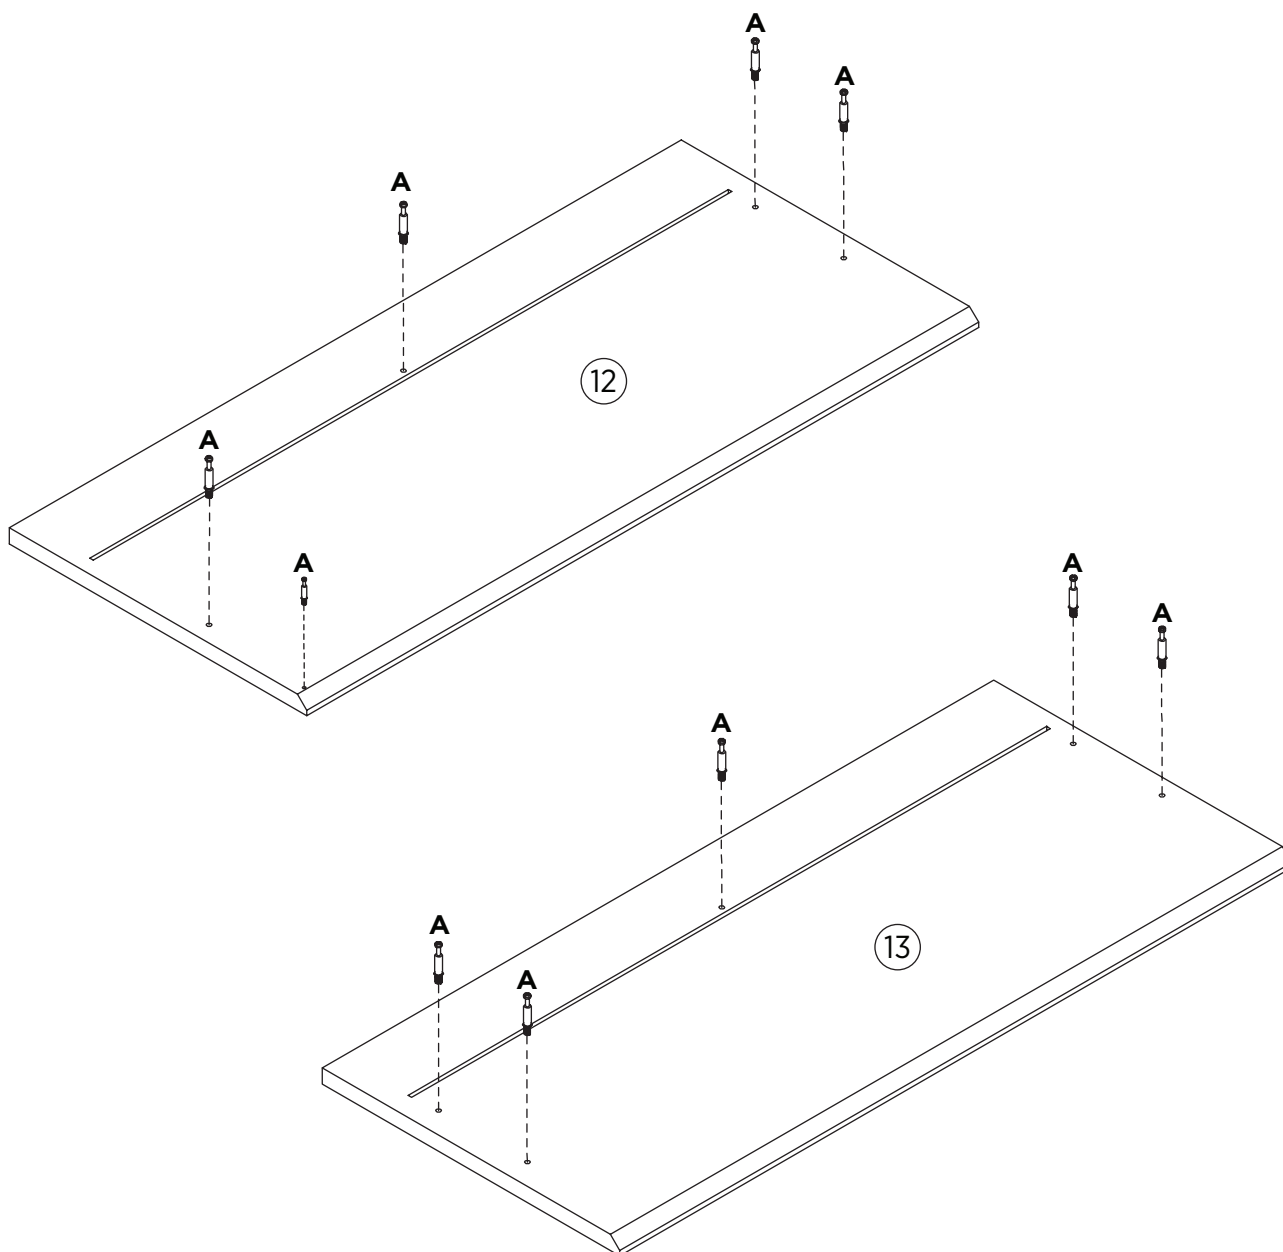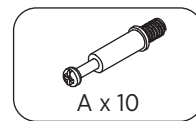

ASSEMBLY INSTRUCTIONS

STEP 19

  Attach parts 14, 15, 17 to part 16 using screws (G), as shown.

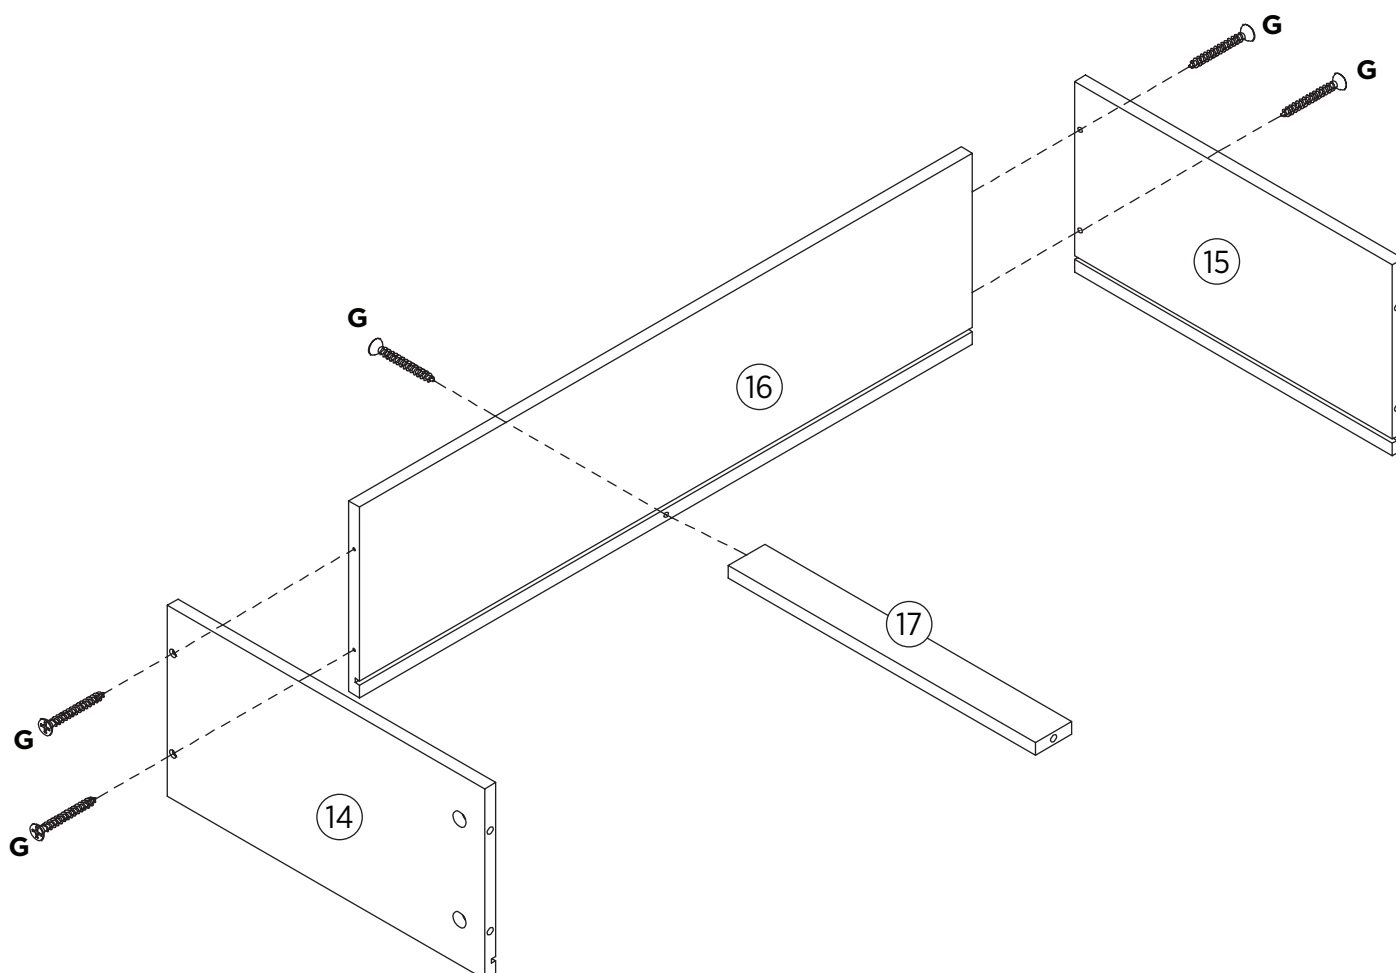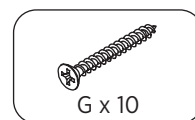


x2

ASSEMBLY INSTRUCTIONS

STEP 20

 Insert part 18 into grooves between parts 14, 15 and 16, as shown.

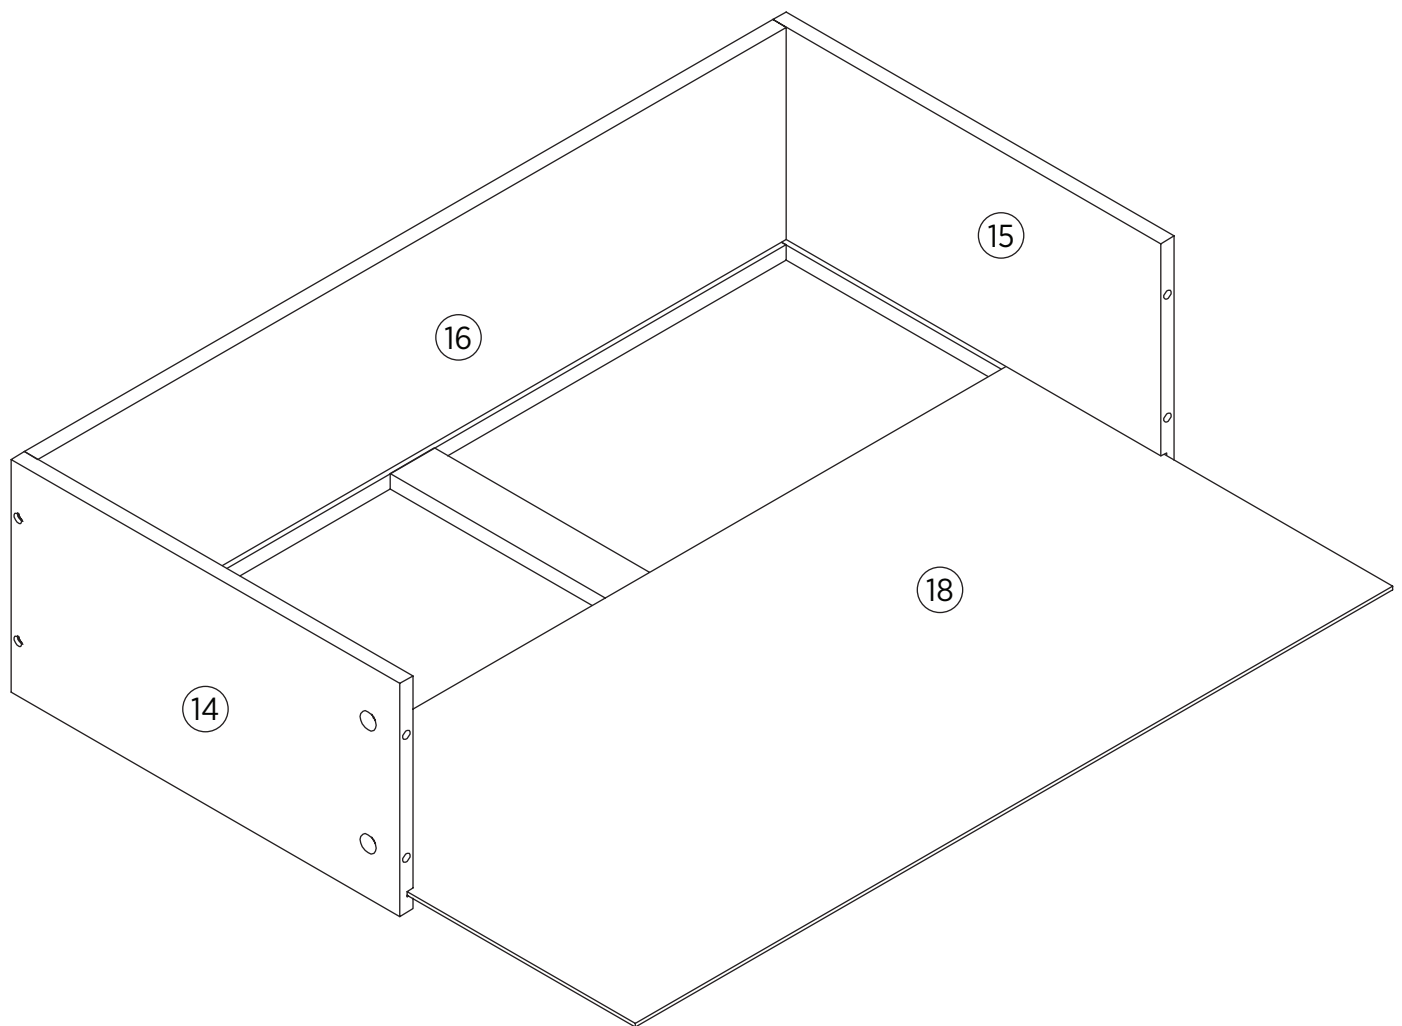



x2

ASSEMBLY INSTRUCTIONS

STEP 21

Fix parts 12 and 13 to parts 14, 15, 17 and 18 using cam locks (B), as shown.

  Turn cam locks clockwise to tighten.

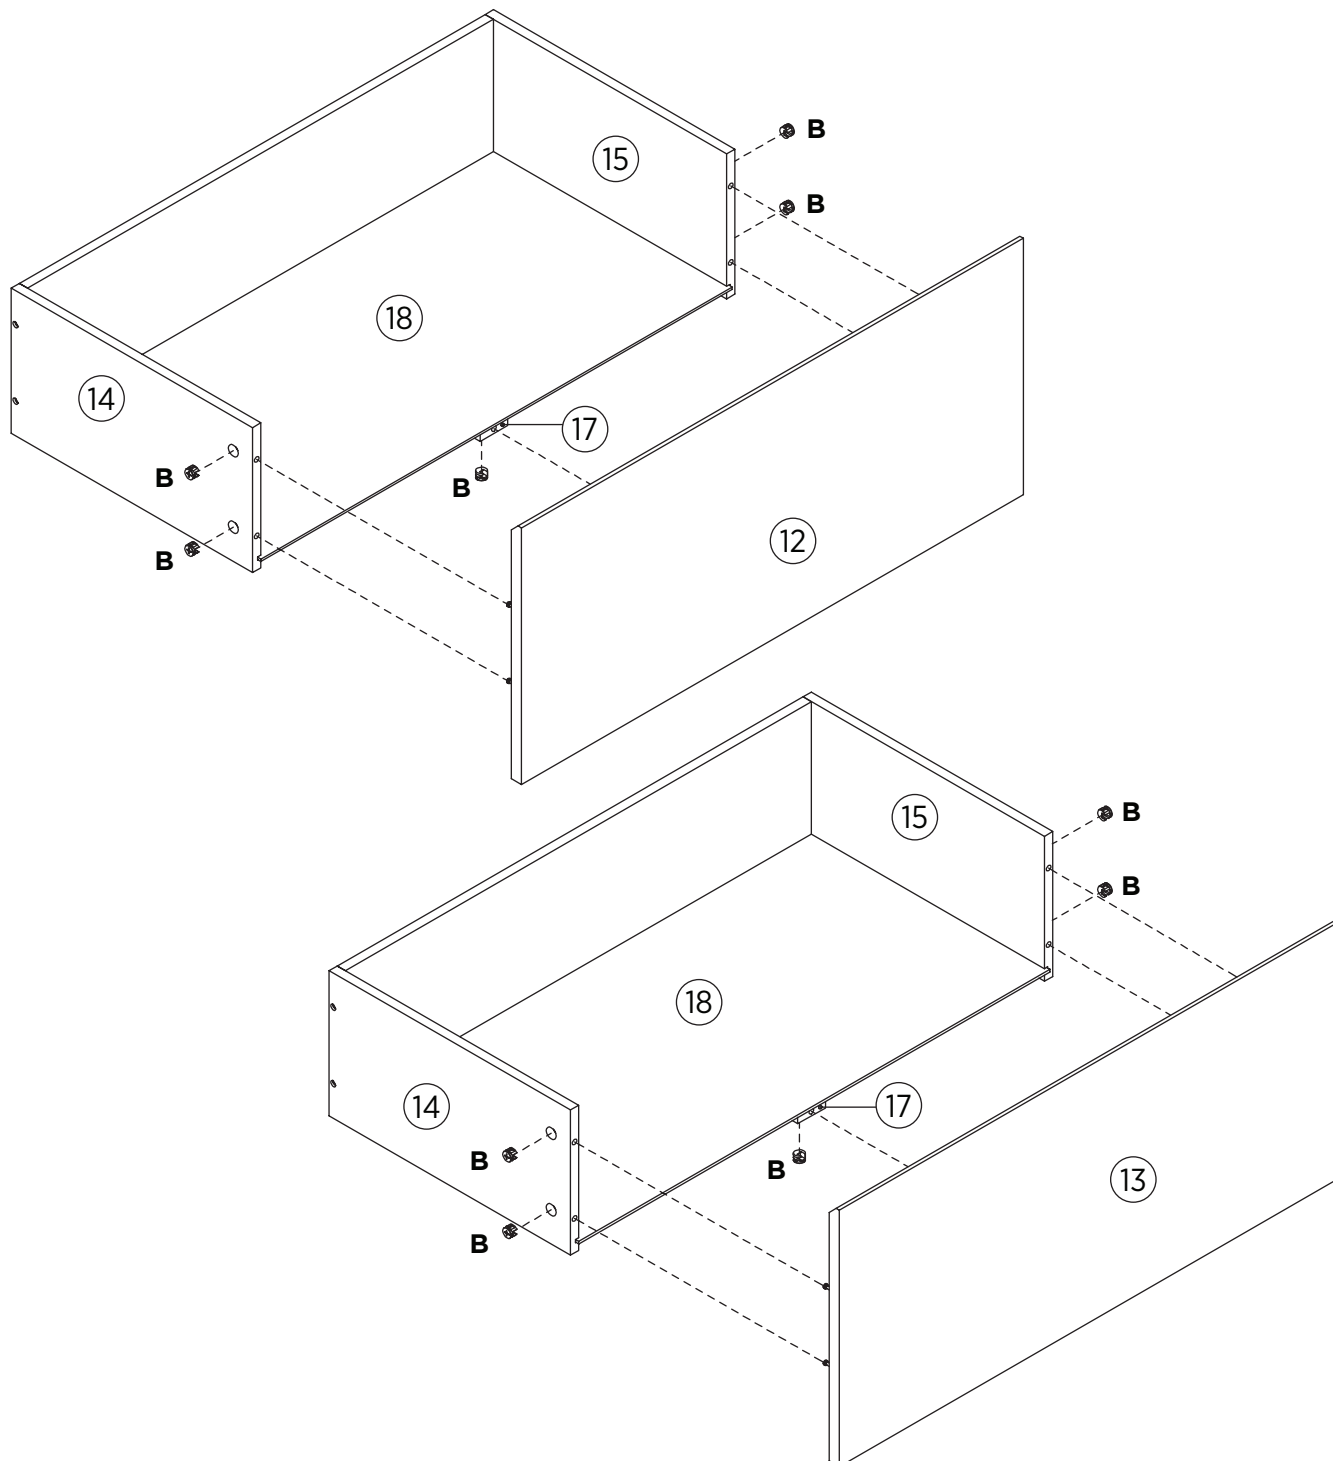

ASSEMBLY INSTRUCTIONS

STEP 22

Fix inner drawer runner (DL) to part 14 using screws (D).

Fix inner drawer runner (DR) to part 15 using screws (D).

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
D x 6



DL x 1



DR x 1

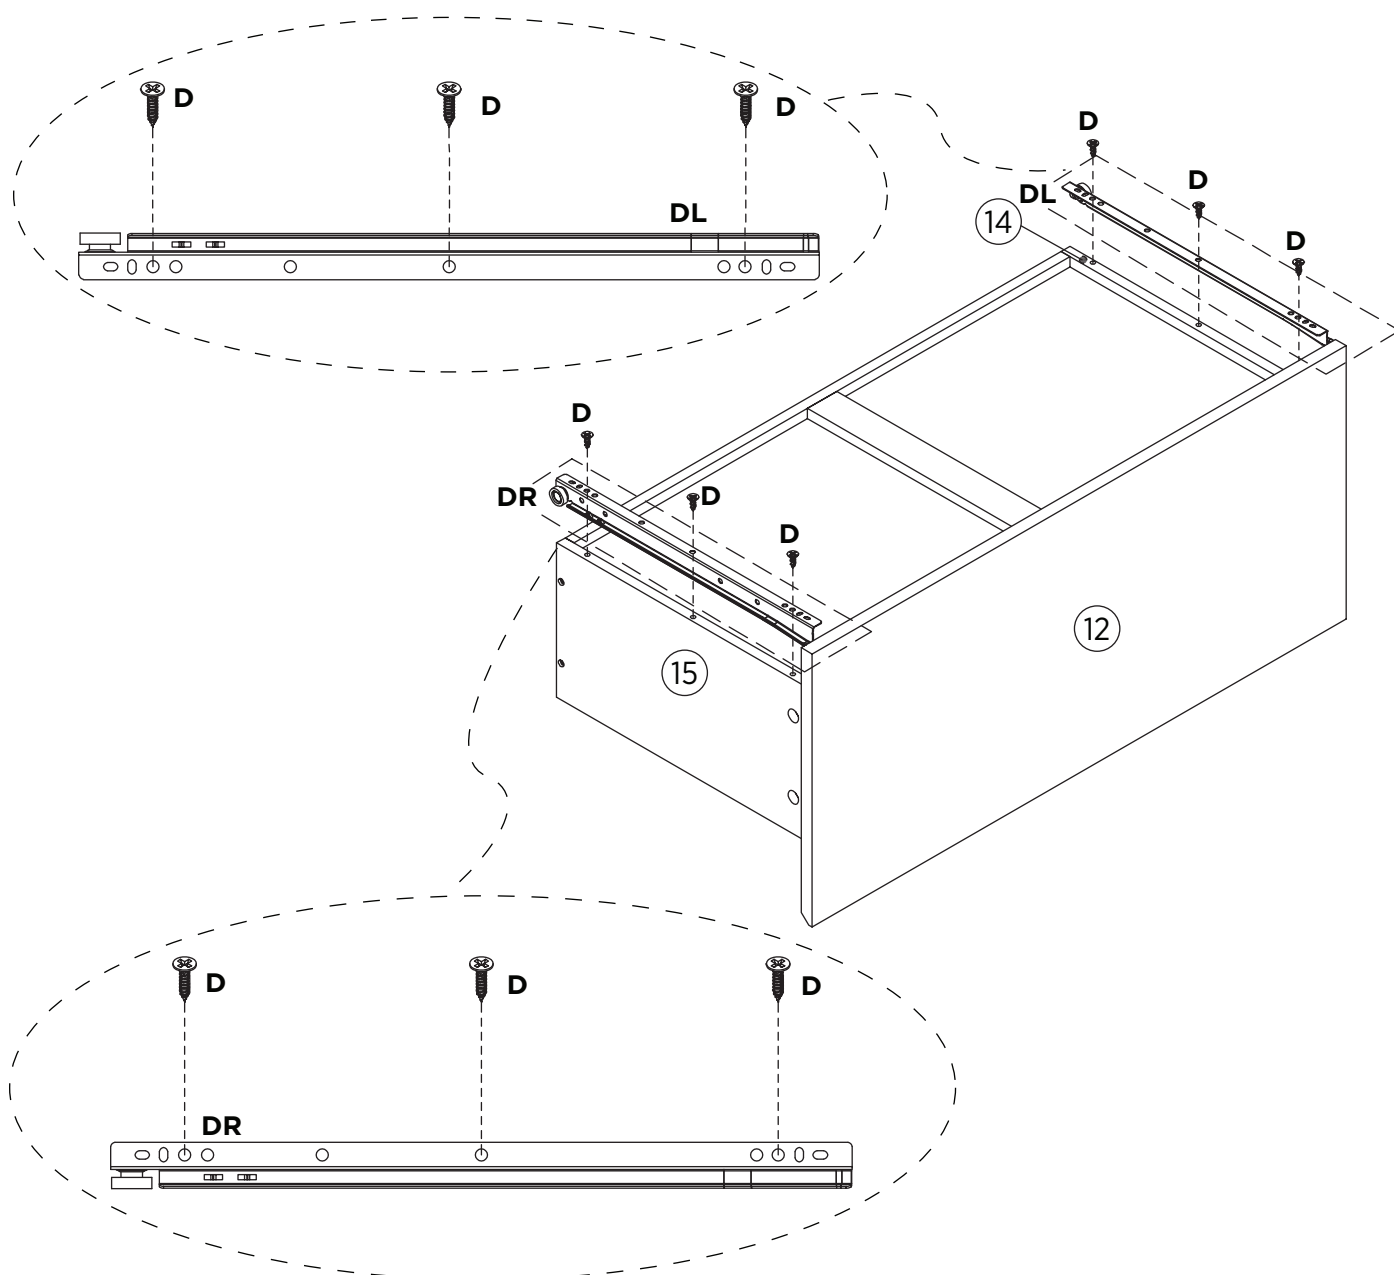

ASSEMBLY INSTRUCTIONS

STEP 23

Fix inner drawer runner (DL) to part 14 using screws (D).

Fix inner drawer runner (DR) to part 15 using screws (D).

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
D x 6



DL x 1



DR x 1

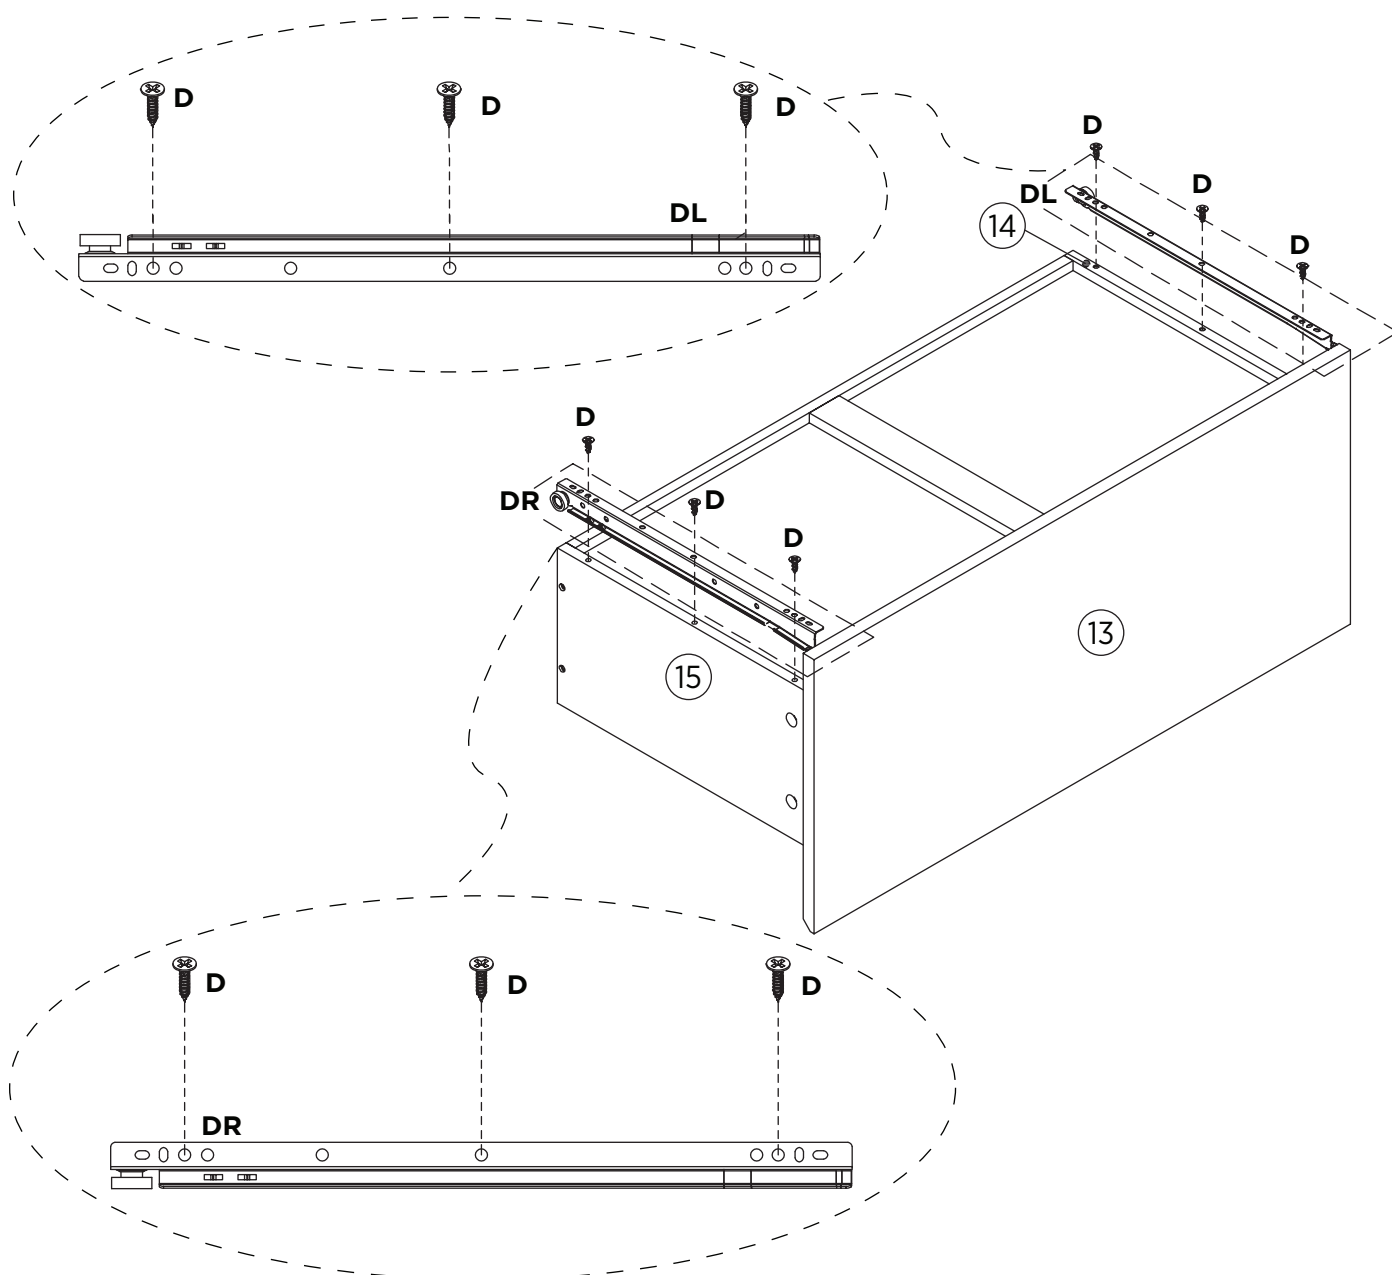

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 24

For extra stability, you must fix your chest to the wall using the additional hardware (G), (I) and (J), as shown.

Screw (G) is fixed through the wall bracket (I) and into the wall plug (J).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.


Please consider the wall mounting & fixing guide when securing your chest.

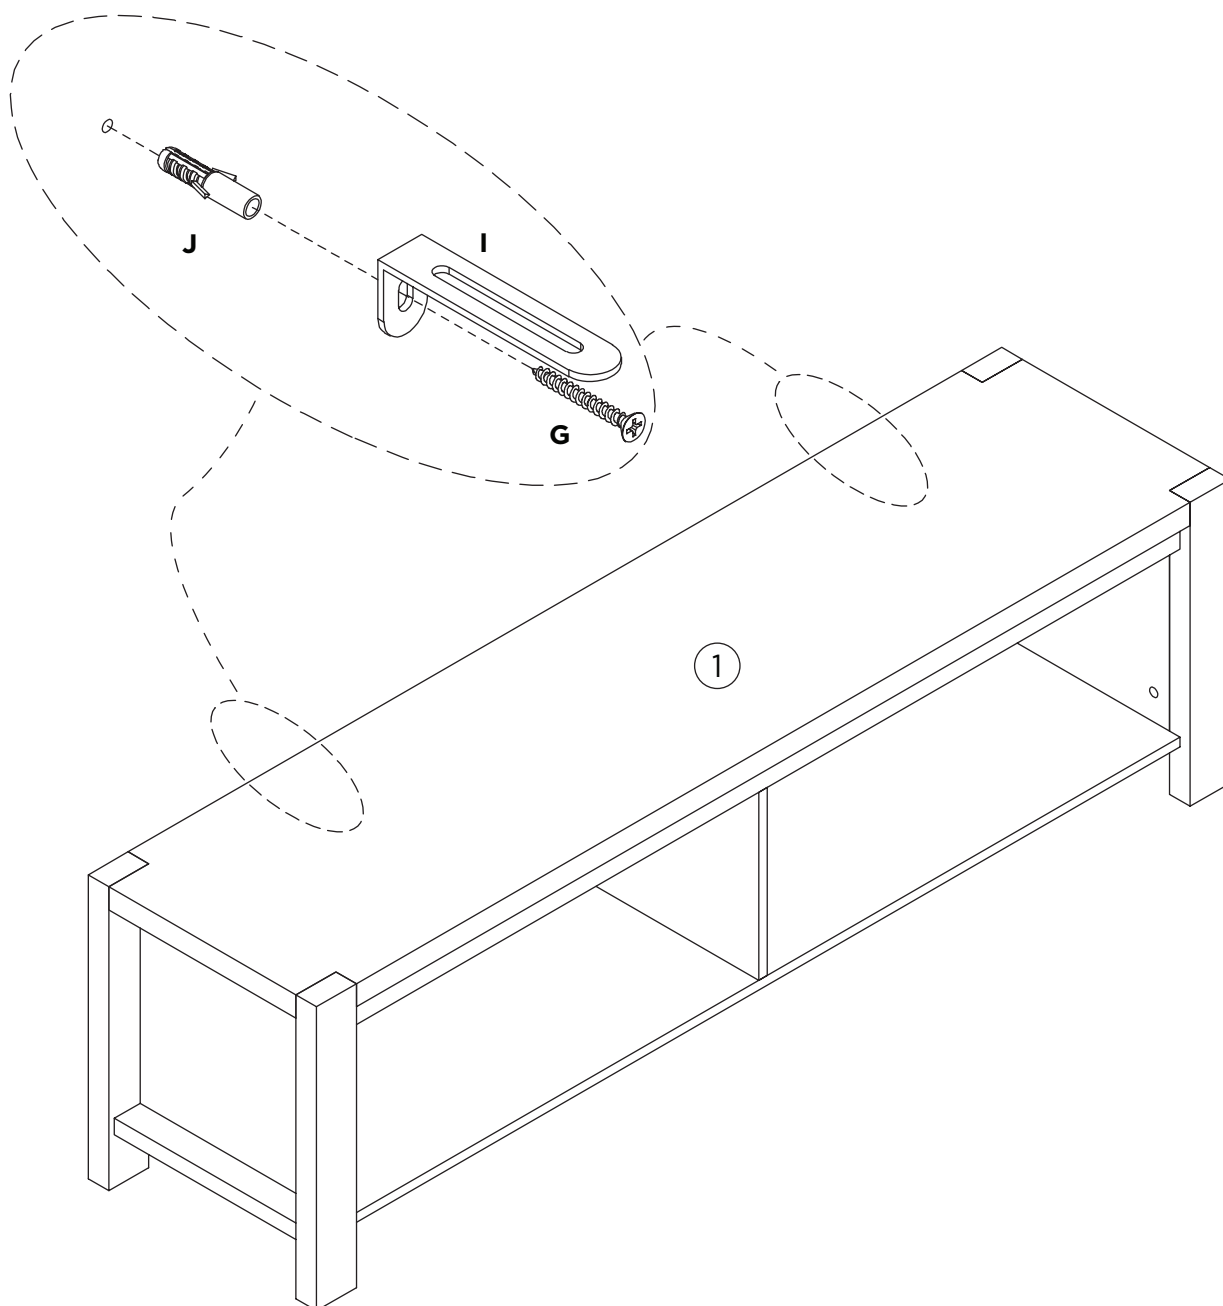

ASSEMBLY INSTRUCTIONS

STEP 25

 Insert drawers into assembled unit.

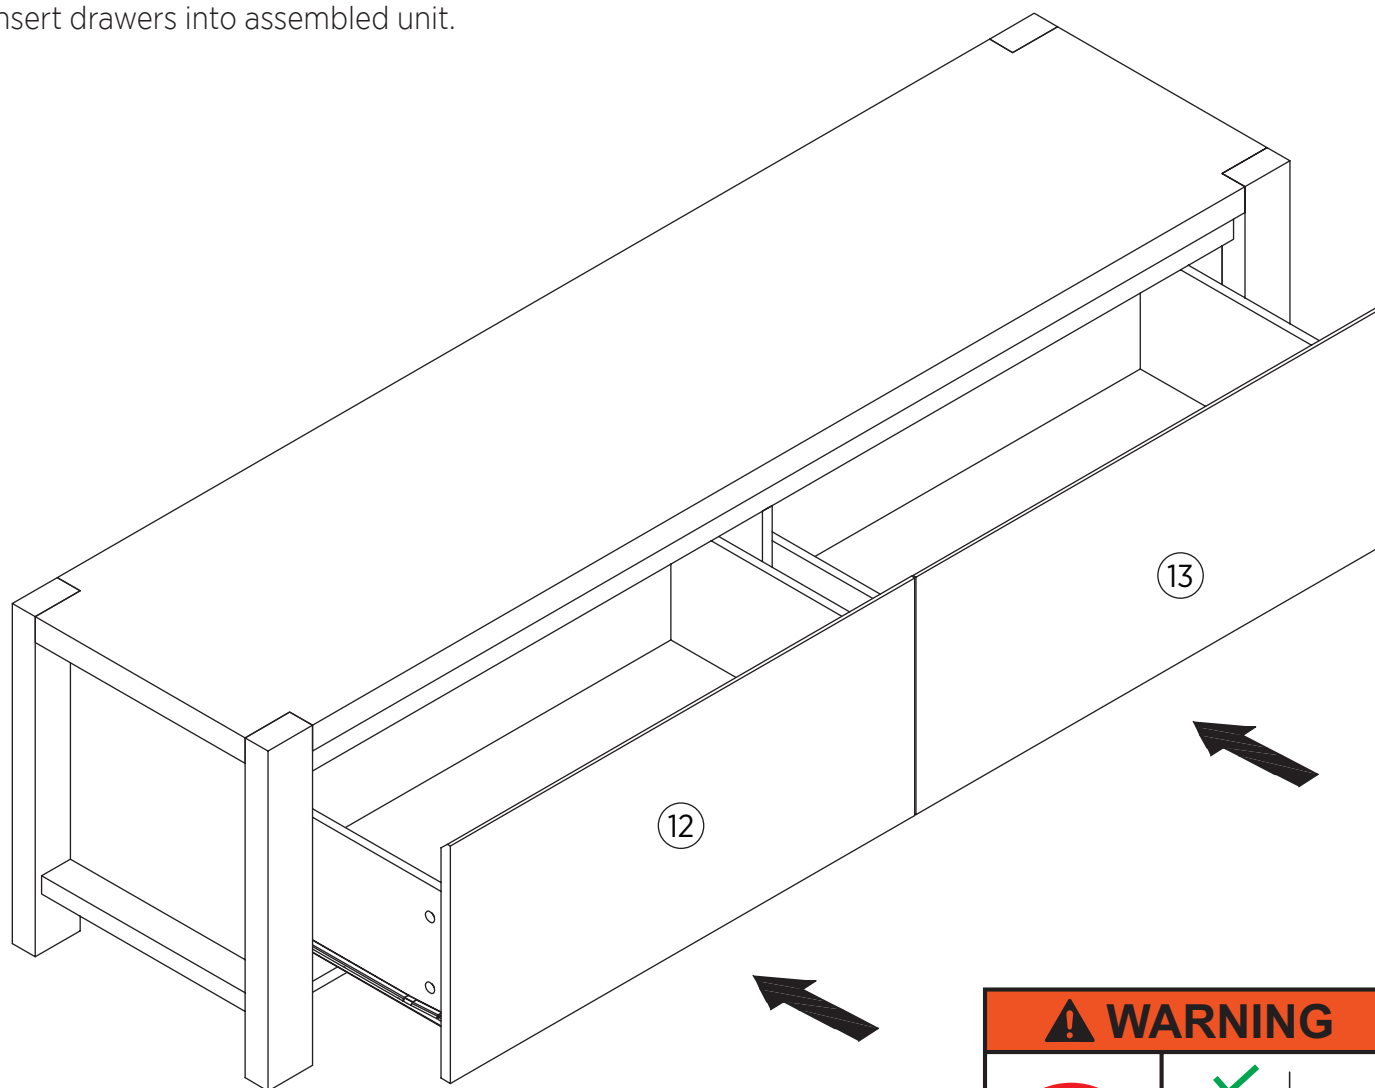

Maximum recommended weight is 22kg on top and 5kg on each drawer.

Your TV unit is ready for use.

⚠ WARNING	
Children have died from furniture tipover. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • ALWAYS secure your television with an anchor device or mount the television on a wall.	

WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



Tips & Tricks

 
Make sure that the hardware used is suitable for supporting your unit.

Please consult a qualified tradesperson if unsure.

- ✓ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ✓ If you are unsure, please select a larger screw and wall plug.
- ✓ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ✓ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

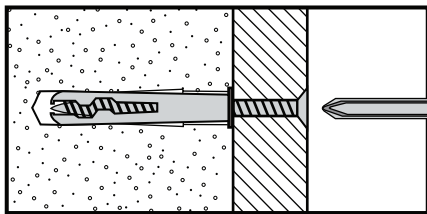


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

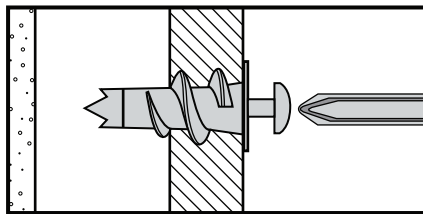


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

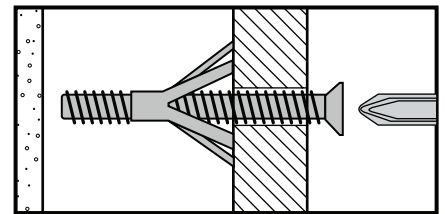


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

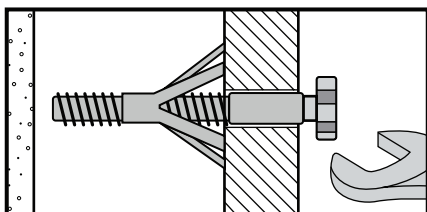


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

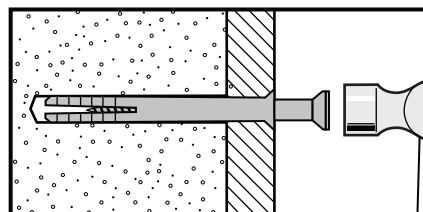

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

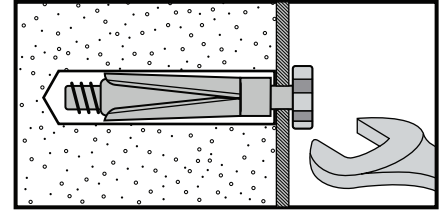

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.