 


WARDROBE

2 DOORS 2 DRAWERS

ASSEMBLY INSTRUCTIONS

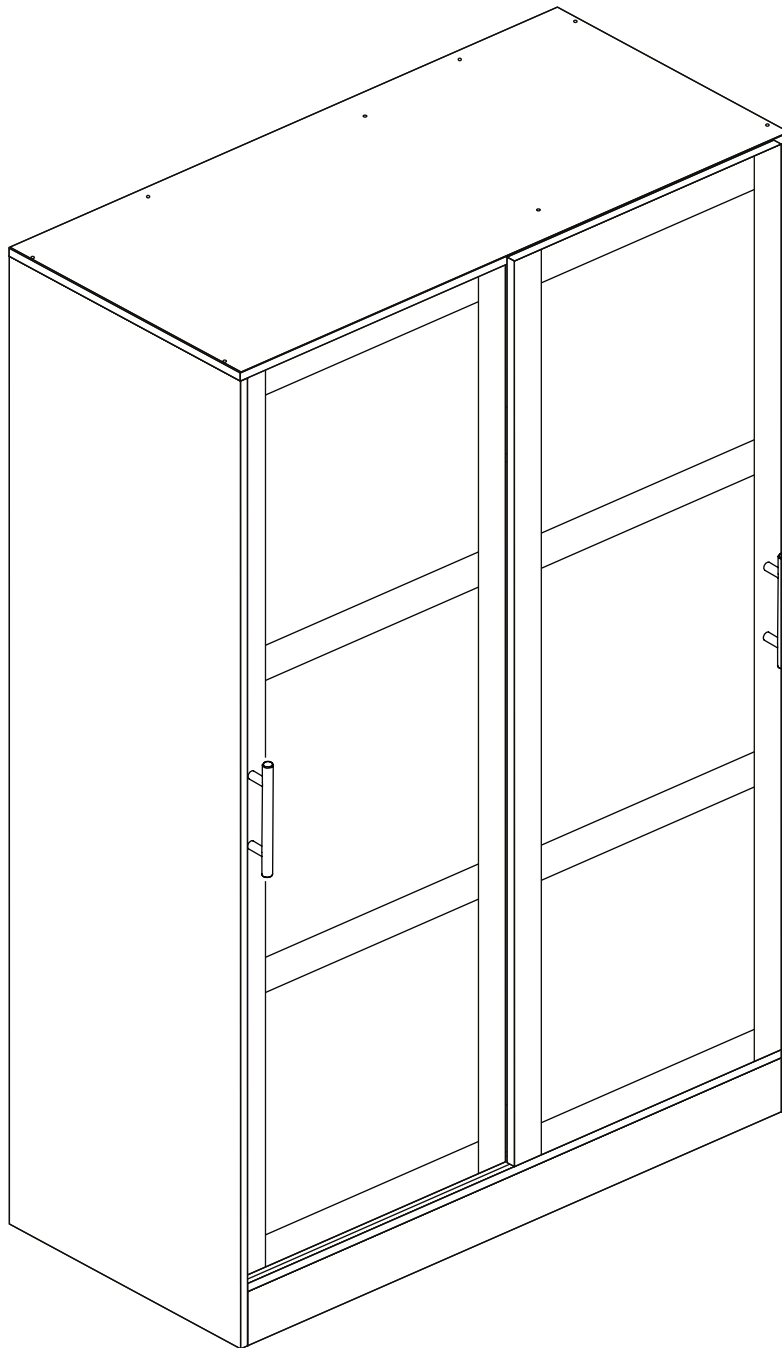 


TIPS BEFORE YOU START

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.




CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

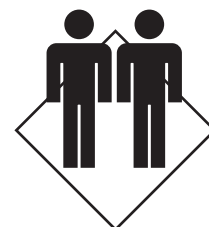

ASSEMBLY REQUIREMENTS

   - ✓ Equipment: phillips head screwdriver, flat head screwdriver and soft rubber hammer
- ✓ 2 x adults required
- ✓ 2m x 2.5m assembly space required
- ✓ 2 hour assembly time approx.




ANTI-TOPPLING WARNING

CHILDREN HAVE DIED FROM FURNITURE TIPOVER.

- **ALWAYS** secure this furniture with an anchor device
- **NEVER** allow children to stand, climb or hang on drawers, doors or shelves
- **NEVER** open more than one drawer at a time
- **NEVER** put a TV on this furniture
- Place heavy items down low

For more information, visit <https://www.productsafety.gov.au>

 **WARNING**

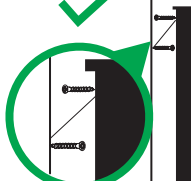 

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

 
NEVER put a TV on this furniture



USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

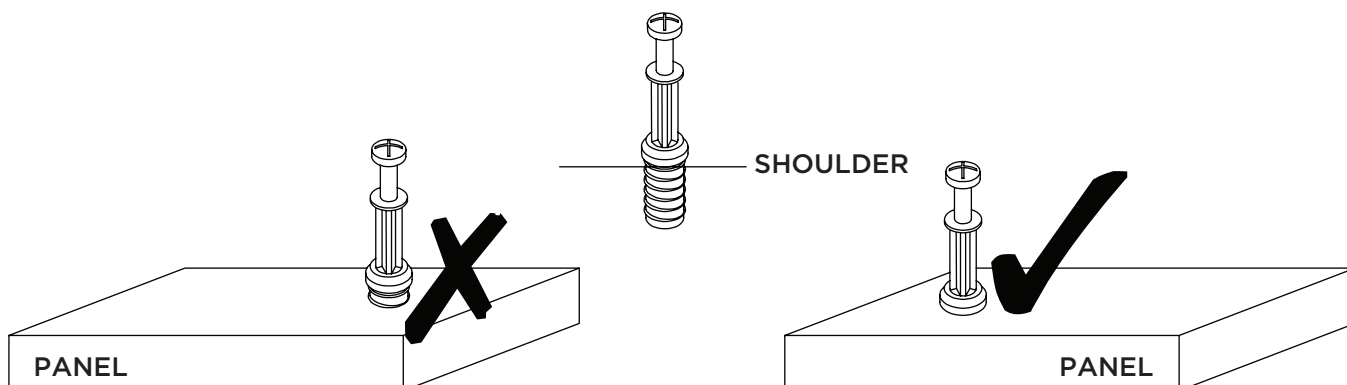


CAM LOCK

 
When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

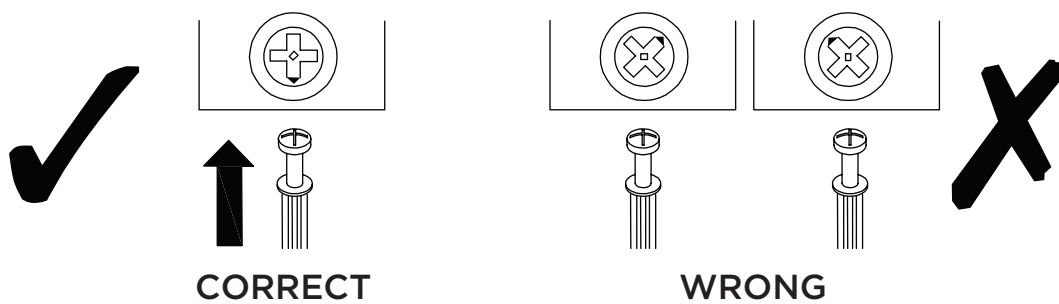

 Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

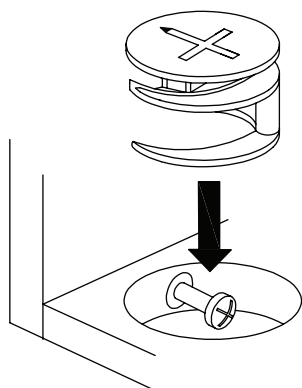


Turn cam lock clockwise to tighten.

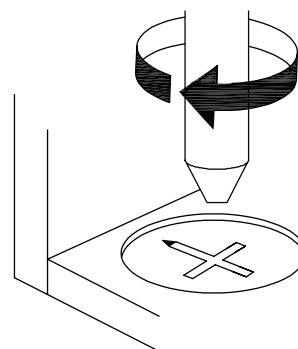 


DRAWER SLIDE GUIDE

 Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.

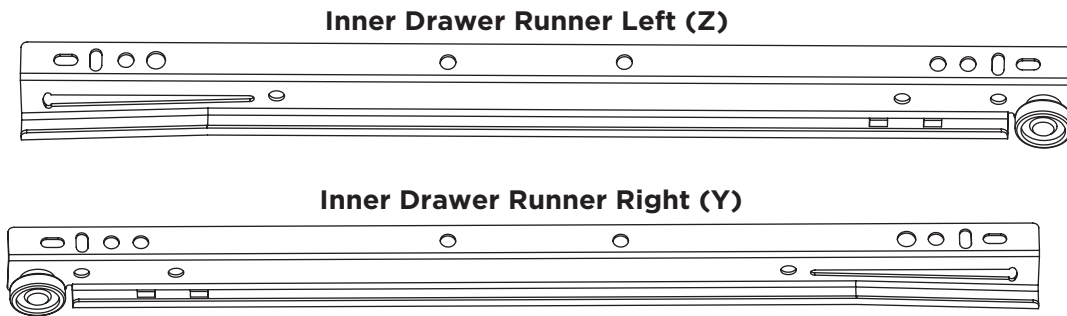


 The Drawer Slide components shown above are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later.

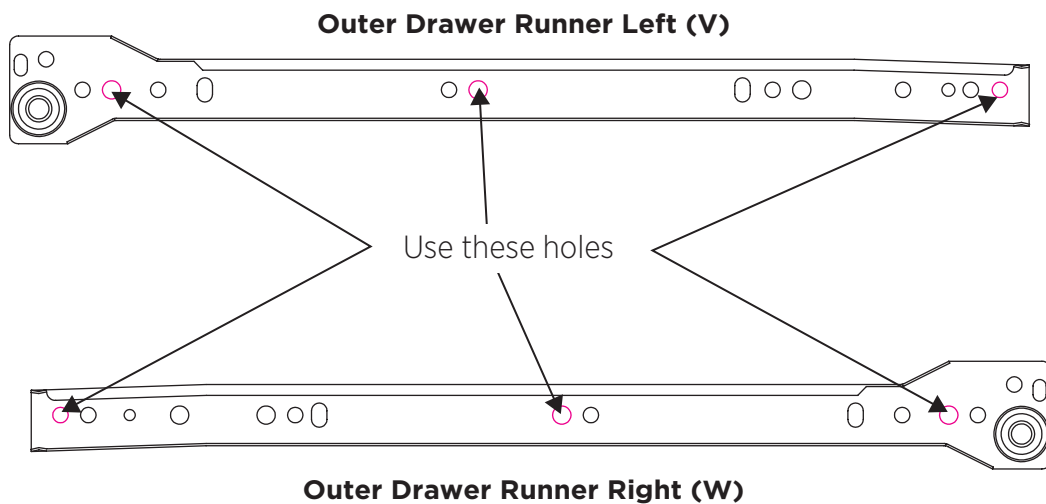


The Drawer Slide components shown above are attached to the **wardrobe**. They have the letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for step 3 and 15.

 
HARDWARE LIST




52 x A
Quickfit Screw

 


52 x B
Cam Lock

 

32 x C
Wooden Dowel

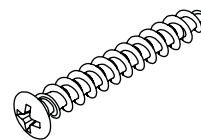 


8 x D
Screw

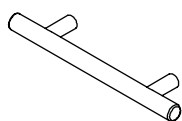 


2 x E
Handle



 
40 x F
Screw




4 x G
Sliding Mechanism
Top

 


4 x H
Sliding Mechanism
Bottom

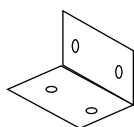 


4 x I
Bracket

 


18 x J
Screw

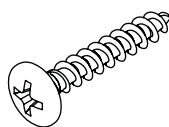 


4 x K
Screw

 


36 x L
Nail

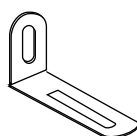 

2 x M
Wall Bracket

 


2 x N
Wall Plug

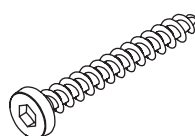 


8 x O
Screw



 
4 x P
Hanging Rail Bracket

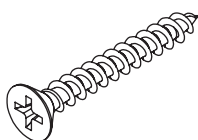


12 x Q
Screw

 

8 x R
Screw

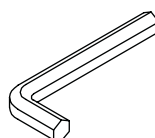 


1 x S
Allen Key

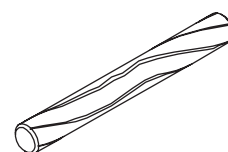 


2 x T
Long Wooden Dowel

 
HARDWARE LIST




20 x U
Screw

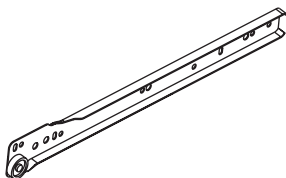 


2 x V
Outer Drawer Runner
Left

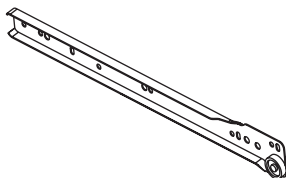 

2 x W
Outer Drawer Runner
Right

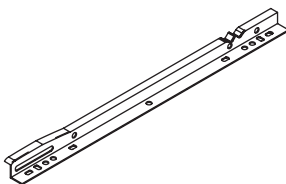 


2 x Z
Inner Drawer Runner
Left

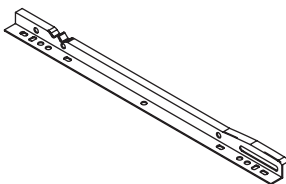 


2 x Y
Inner Drawer Runner
Right

 
PARTS LIST

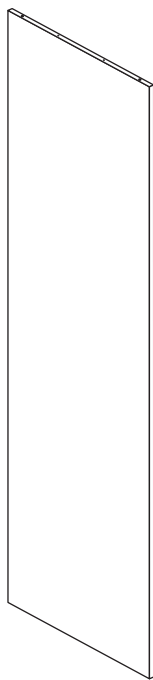


1
1 PC

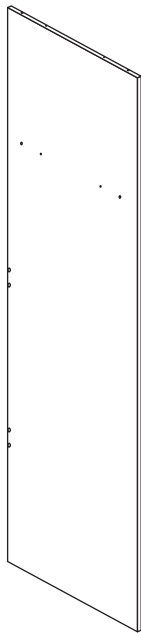 


2
1 PC

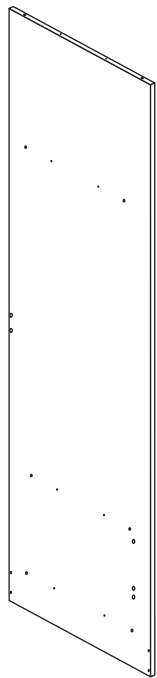 


3
1 PC

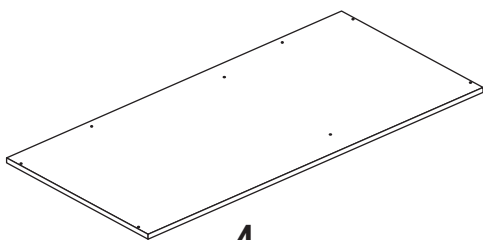 


4
1 PC

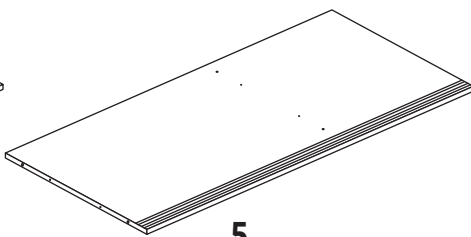 


5
1 PC

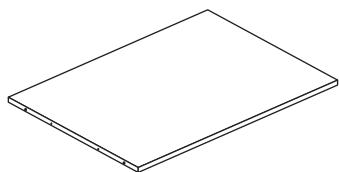 

6
1 PC

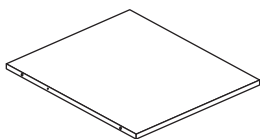 


7
1 PC

 


8
2 PCS



 
9
1 PC

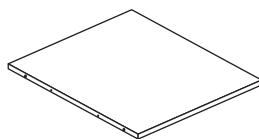


10
1 PC

 


11
1 PC

 

12
1 PC

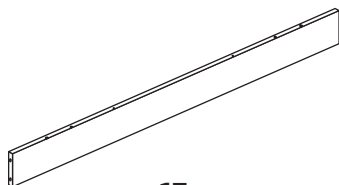 


13
2 PCS

 

14
2 PCS

 PARTS LIST




15
4 PCS




16
3 PCS



 
17
2 PCS

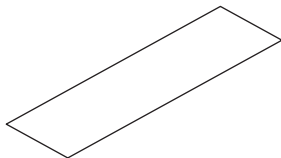


19
2 PCS

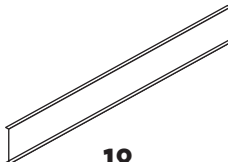 


18
2 PCS

 


20
2 PCS

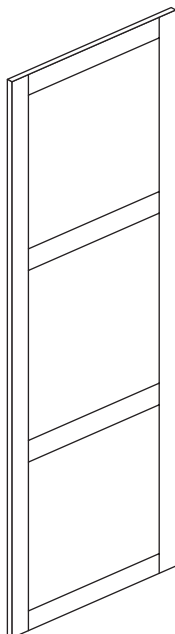 

21
1 PC

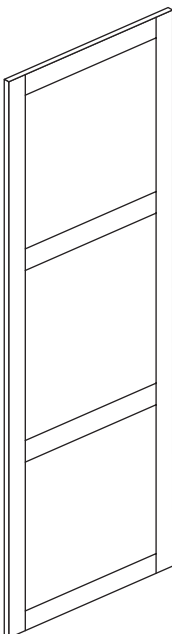 

22
1 PC

 


23
1 PC



24
1 PC



 25
2 PCS







26
2 PCS

ASSEMBLY INSTRUCTIONS

STEP 1

Insert quickfit screws (A) to parts 2.

    Fix hanging rail brackets (P) to parts 2 using screws (F), as shown.

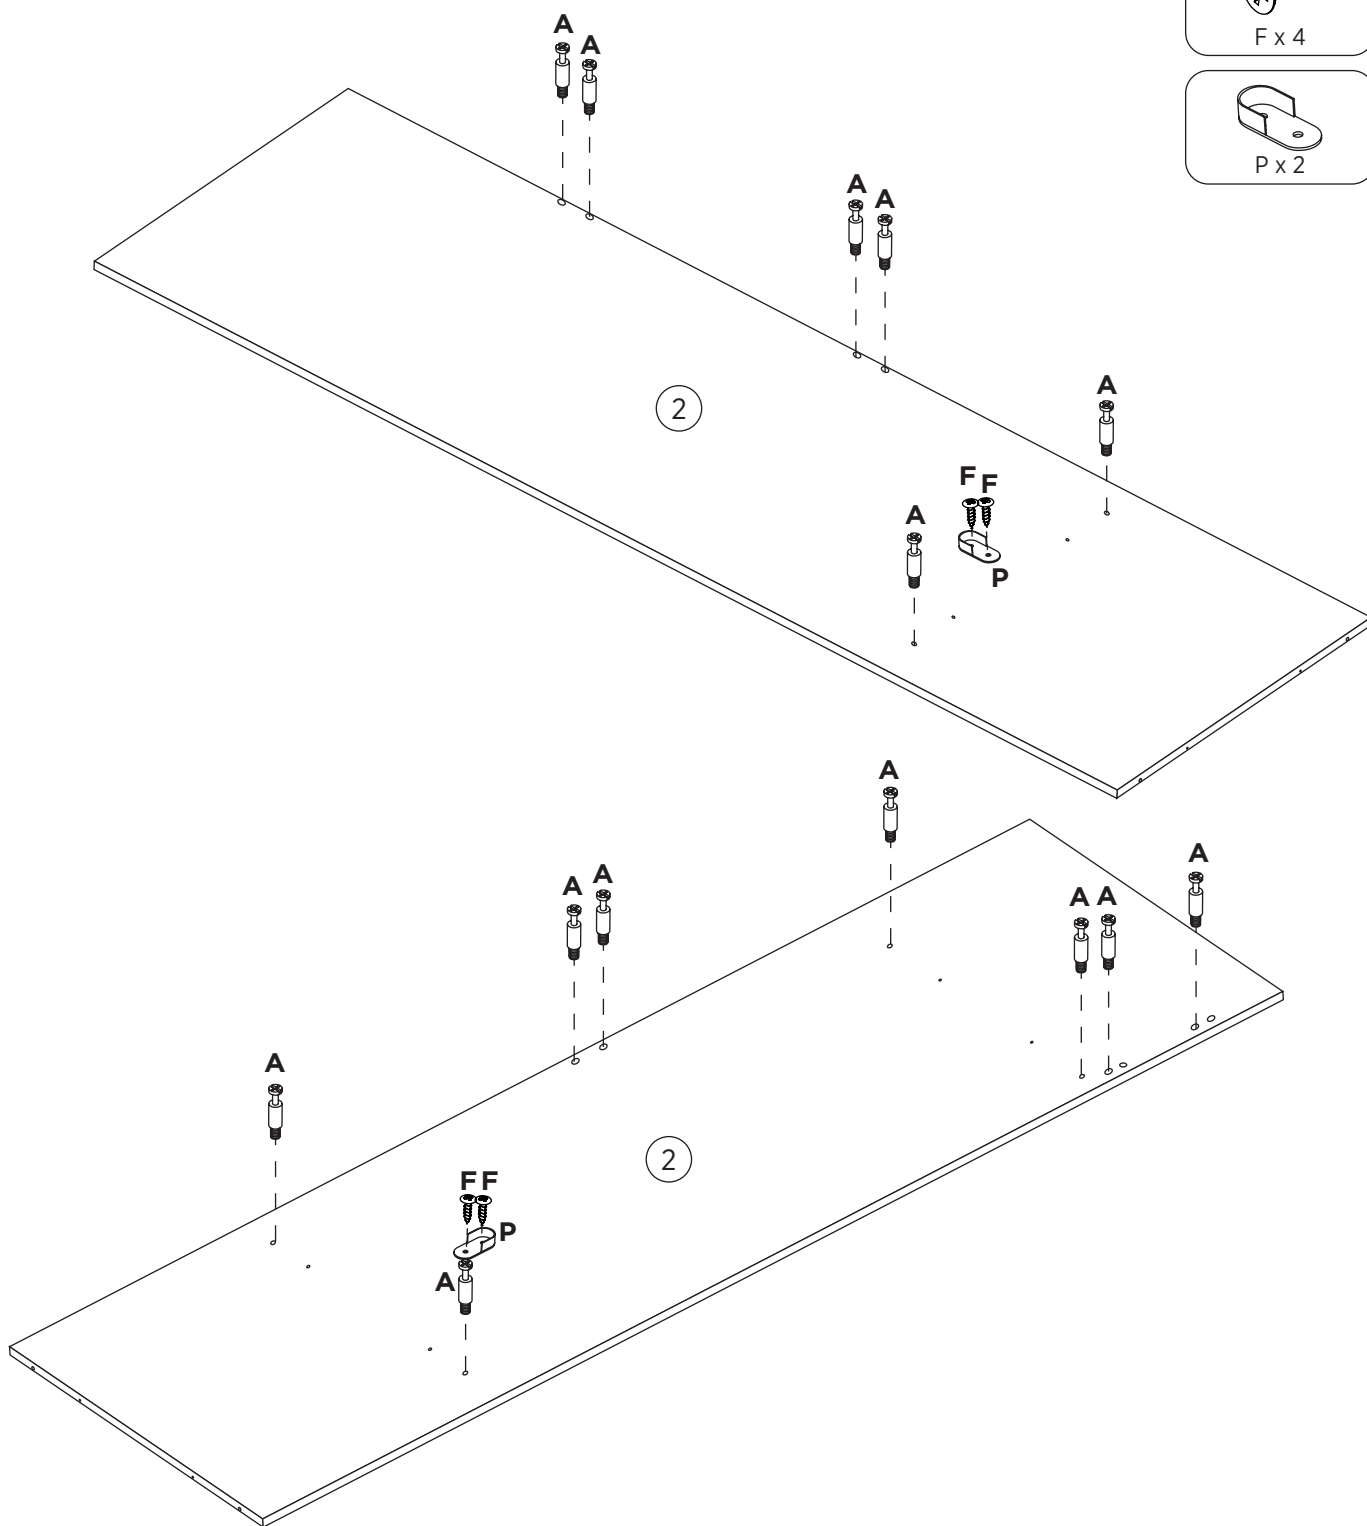


ASSEMBLY INSTRUCTIONS

STEP 2

Insert quickfit screws (A) to parts 1 and 3.

 Fix hanging rail brackets (P) to parts 1 and 3 using screws (F), as shown.

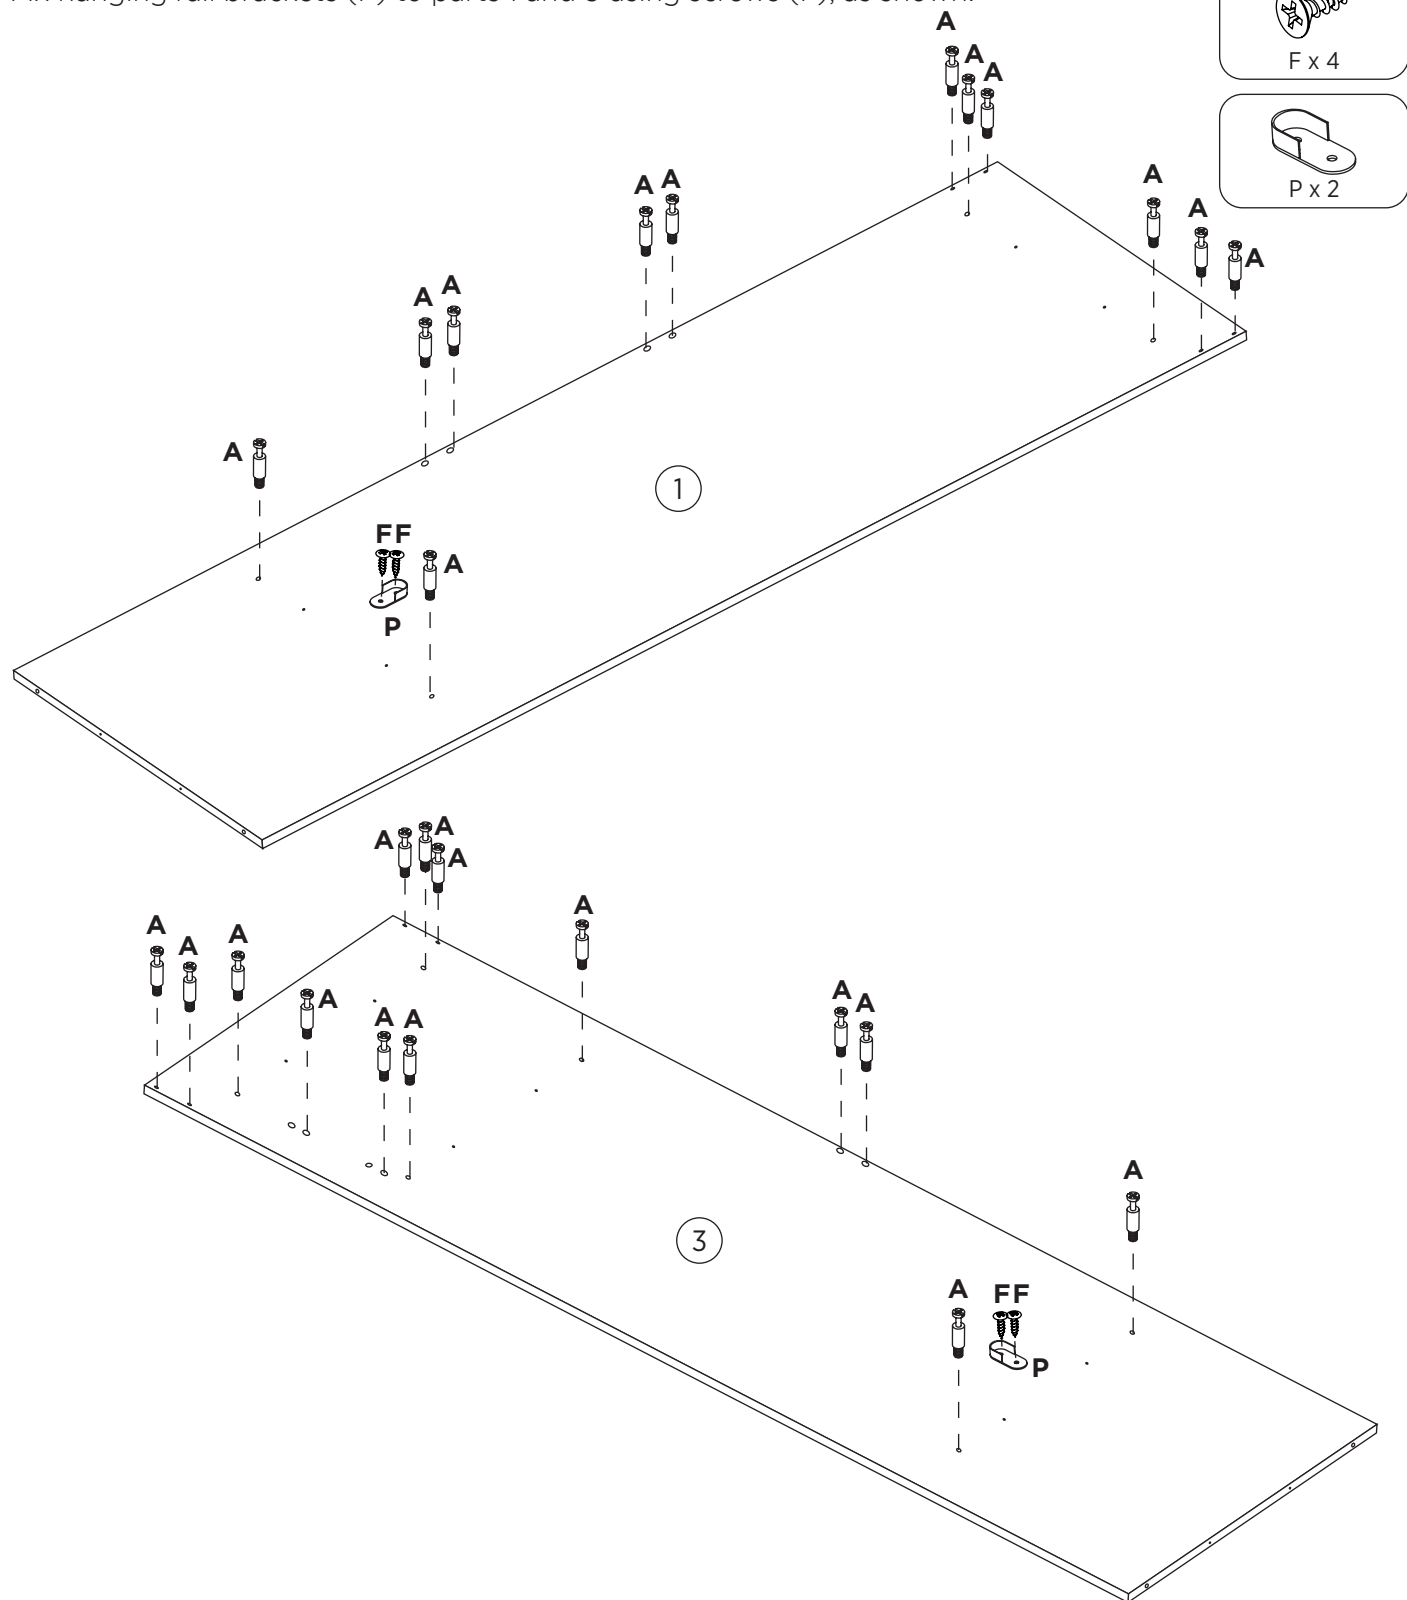

ASSEMBLY INSTRUCTIONS

STEP 3

Fix outer drawer runners (V) and (W) to parts 2 and 3 using screws (U), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
U x 12



V x 2



W x 2

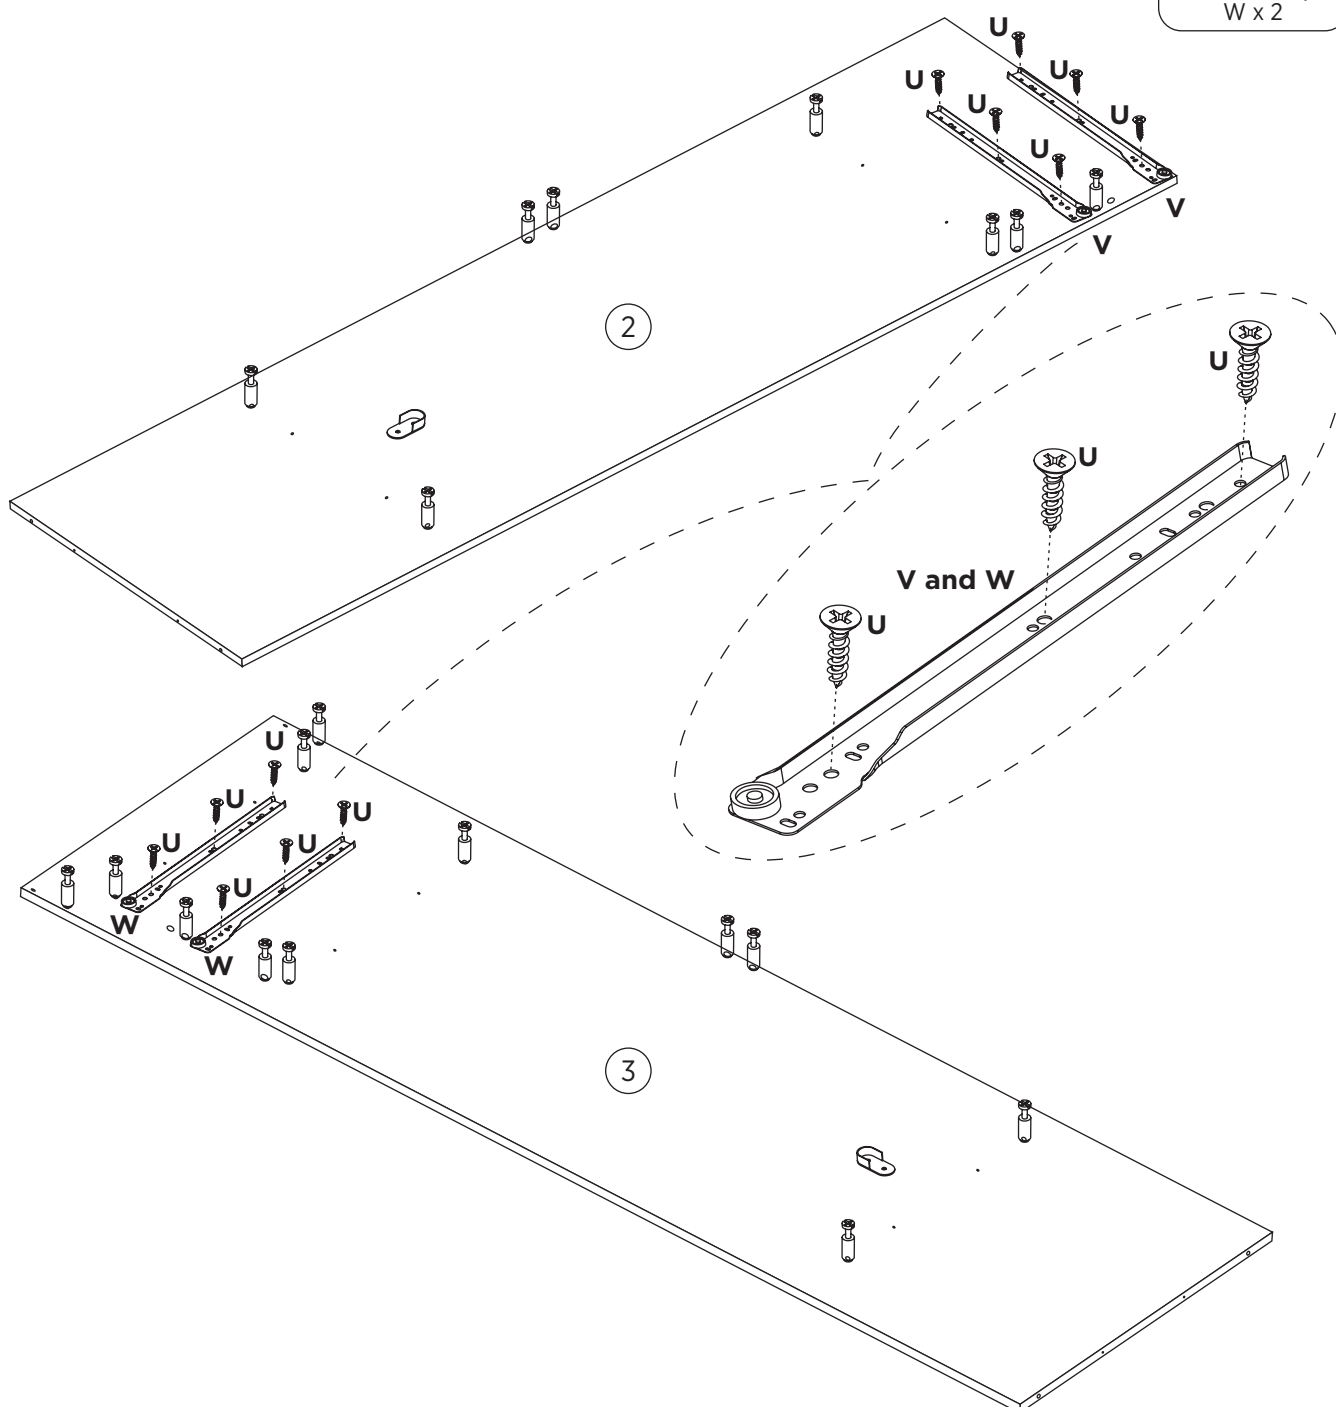

ASSEMBLY INSTRUCTIONS

STEP 4

 
 
 
 
Insert quickfit screws (A) to parts 13.

Insert wooden dowels (C) to parts 14.

Insert cam locks (B) to parts 14.

Attach parts 13 to parts 14, as shown.

Turn cam locks clockwise to tighten.

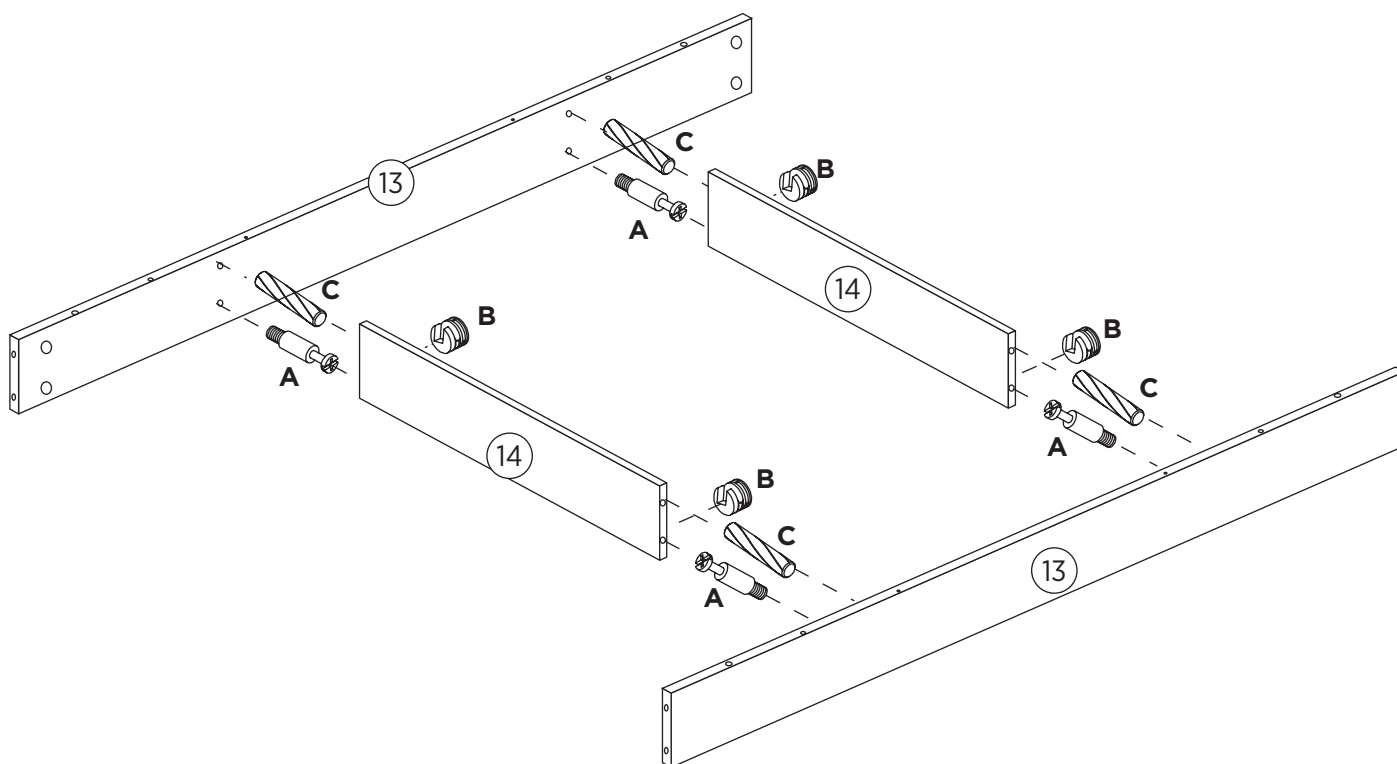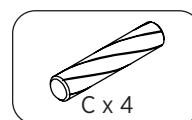

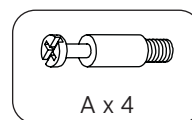


ASSEMBLY INSTRUCTIONS

STEP 5

Insert wooden dowels (C) to parts 13.

   Attach parts 13 to part 5 using screw (D), as shown.


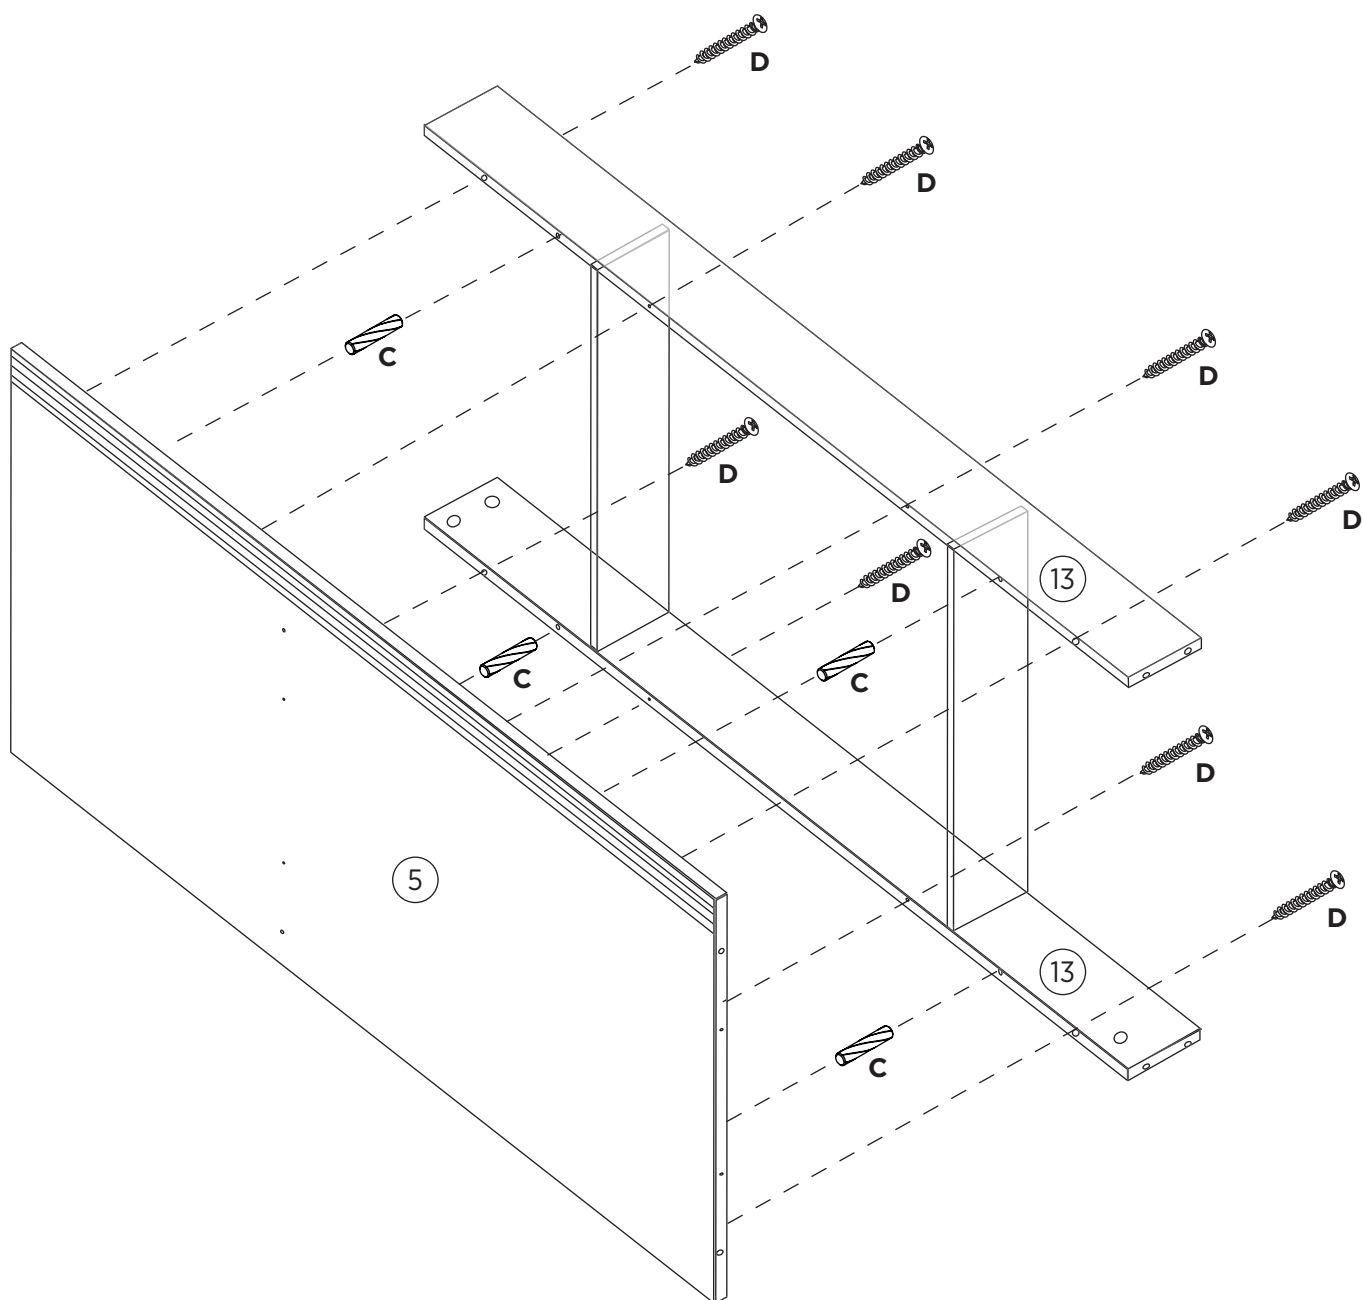

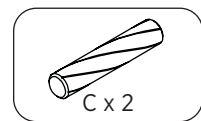


ASSEMBLY INSTRUCTIONS

STEP 6

Insert wooden dowels (C) to part 2.

    Attach part 5 to part 2 using screws (O) and allen key (S), as shown.

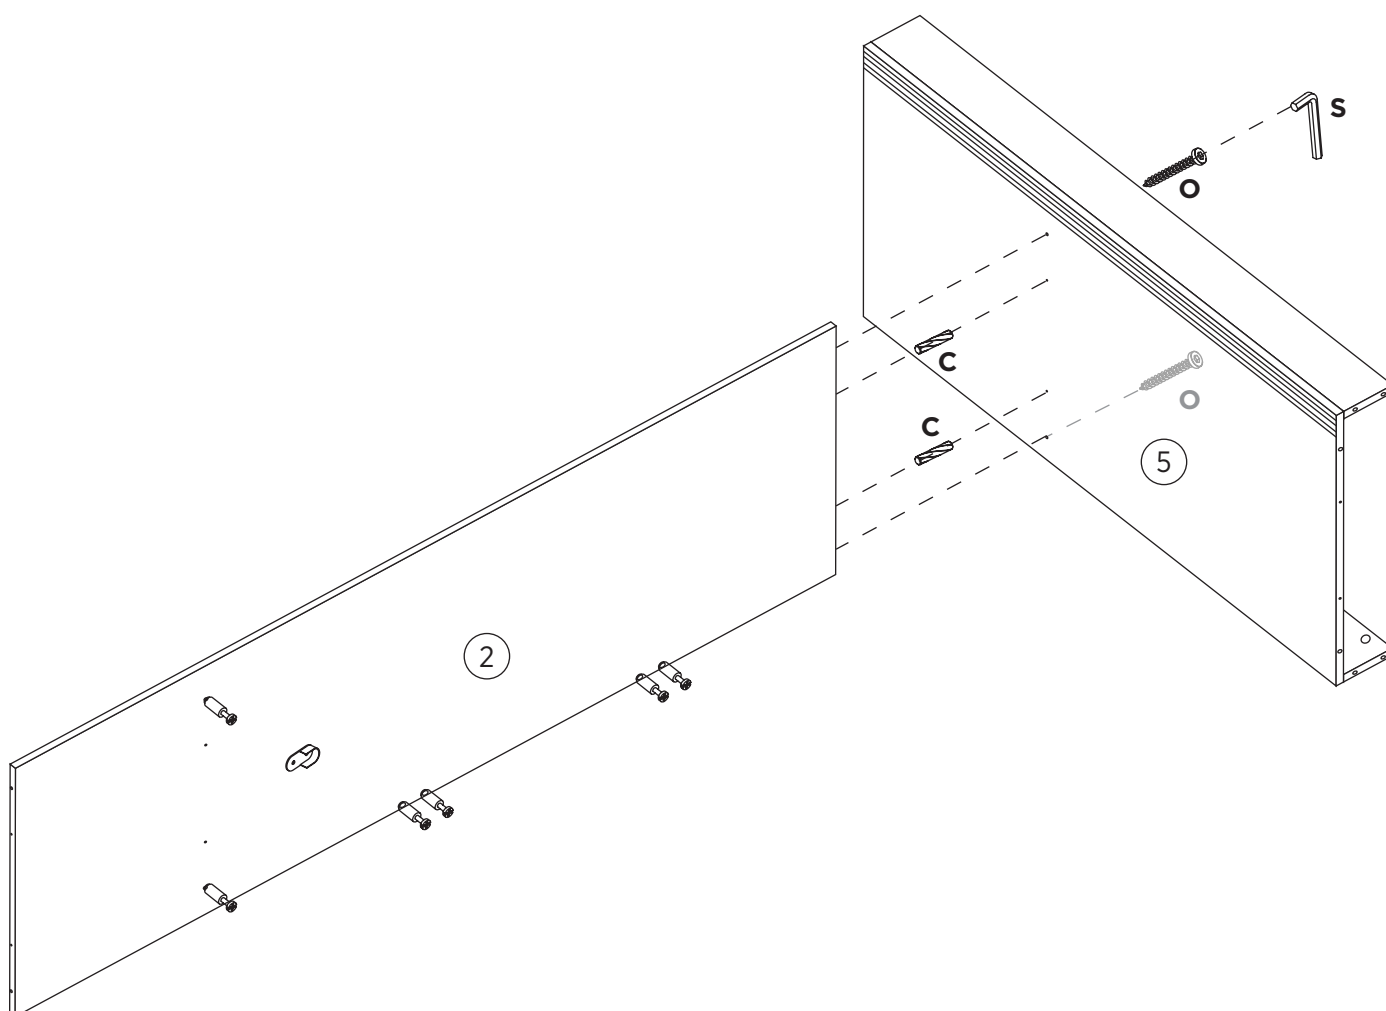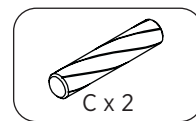

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 7

Insert wooden dowels (C) to parts 10, 11 and 12.

Insert cam locks (B) to parts 8, 9, 10, 11 and 12.

Attach part 2 to parts 8, 9, 10, 11 and 12, as shown.

Turn cam locks clockwise to tighten.

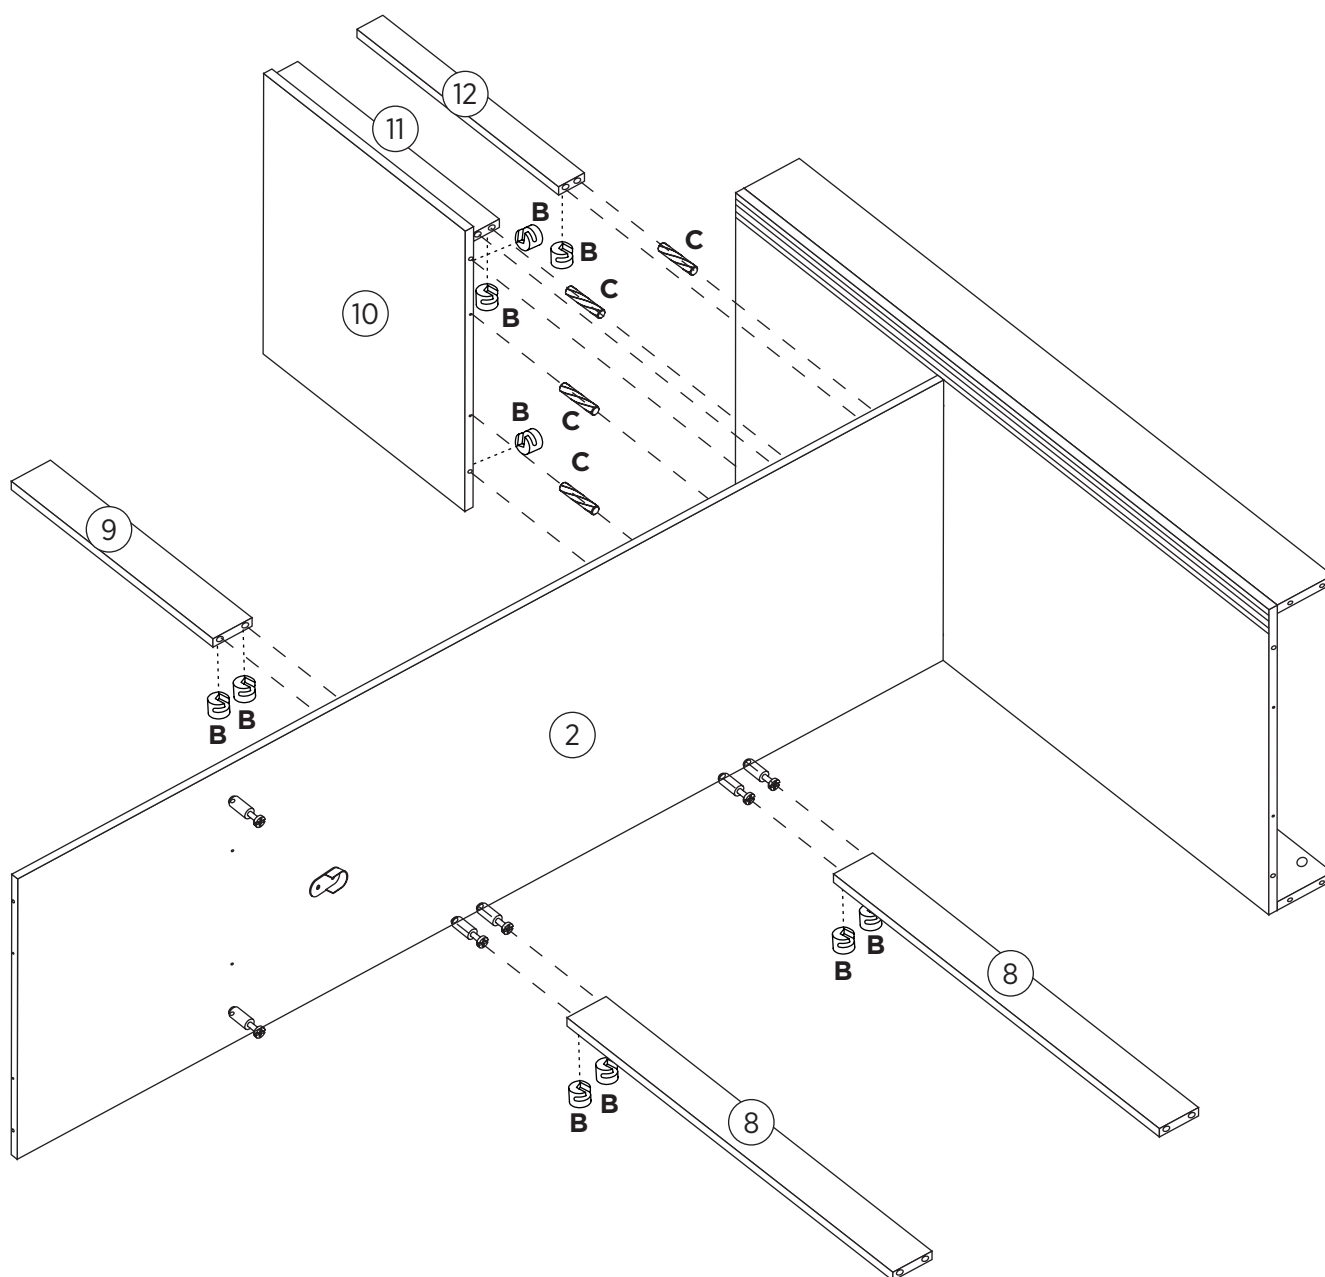

ASSEMBLY INSTRUCTIONS

STEP 8

Insert cam locks (B) to parts 5, 7, 9, 10, 11 and 13.

 
 
 
 
Insert wooden dowels (C) to parts 5, 7 and 10.

Insert long wooden dowels (T) to part 2.

Attach part 7 to part 2.

Attach part 3 to parts 7, 10, 11, 5 and 13, as shown.

Turn cam locks clockwise to tighten.

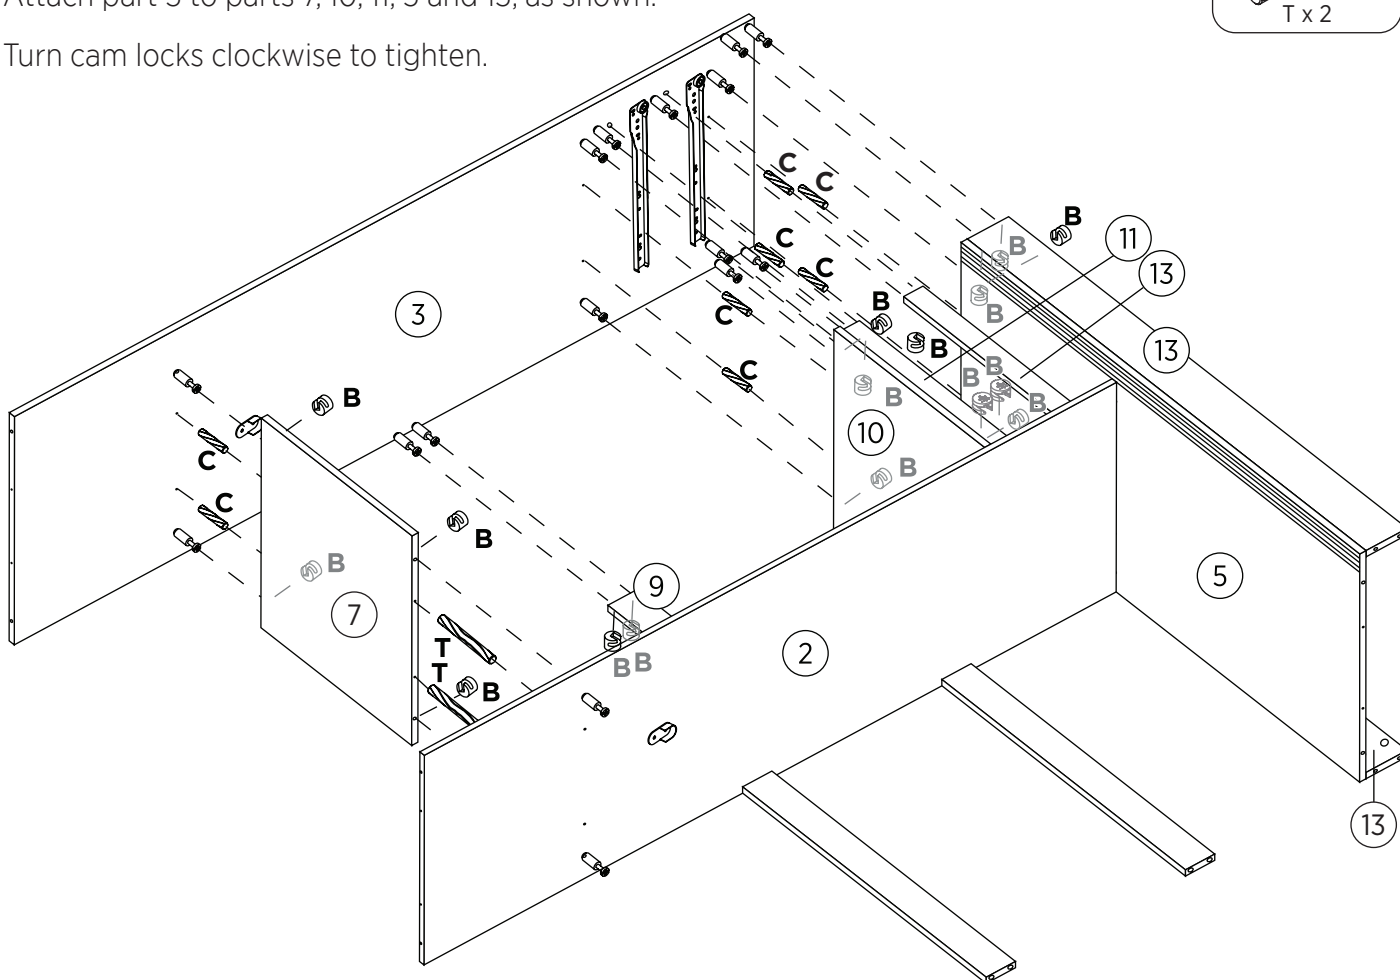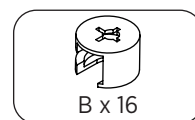

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 9

Insert cam locks (B) to parts 5, 6, 8 and 13.

Insert wooden dowels (C) to parts 5 and 6.

Fit part 1 to parts 5, 6, 8 and 13, as shown.

Turn cam locks clockwise to tighten.

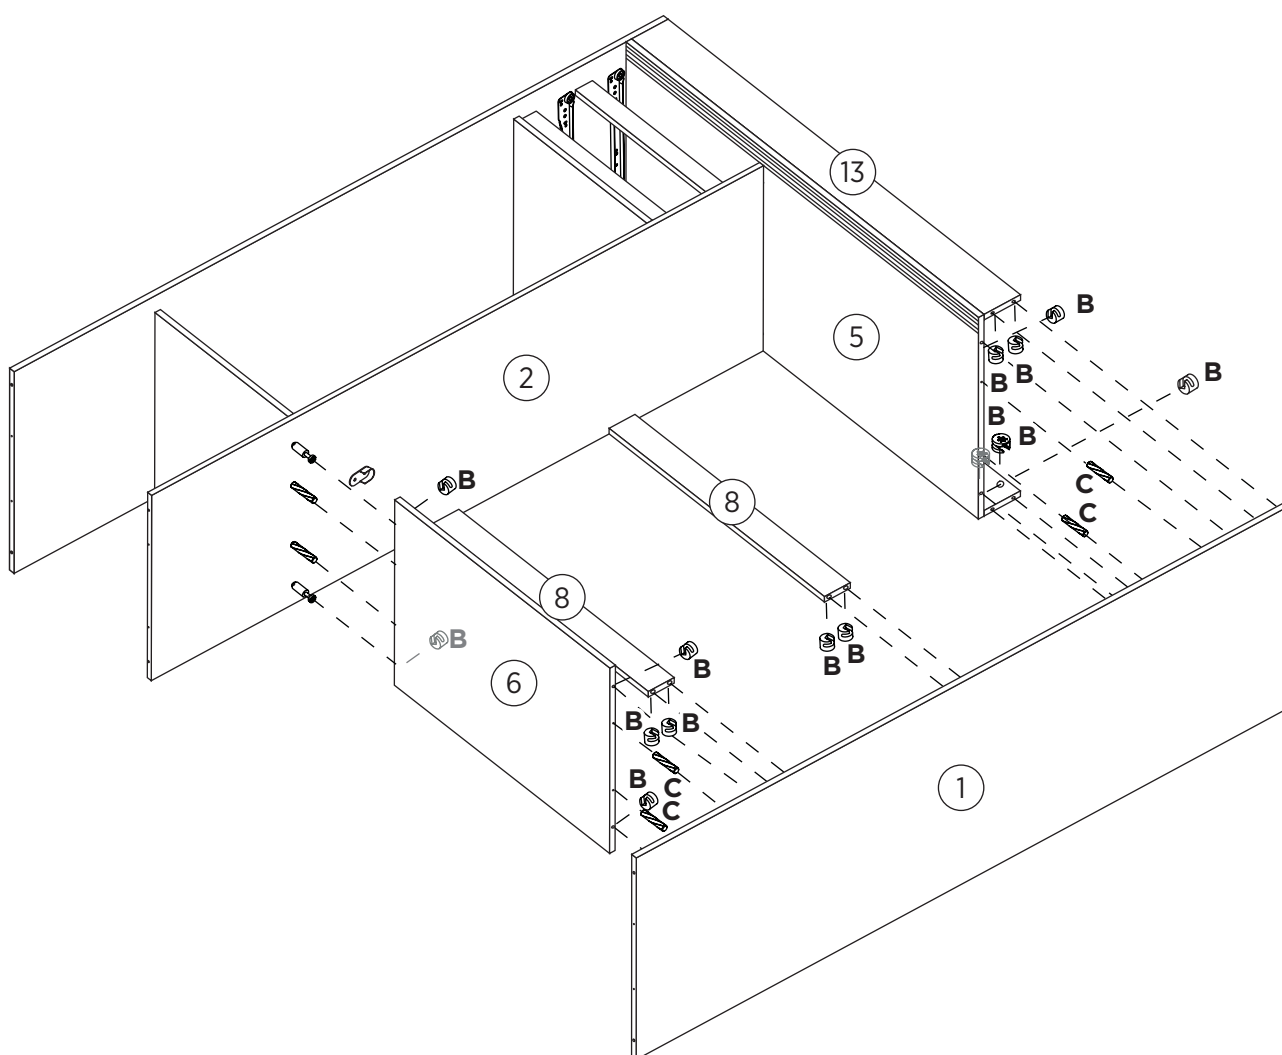







ASSEMBLY INSTRUCTIONS

STEP 10

Fix brackets (I) to parts 1, 3 and 5 using screws (J).

Insert wooden dowels (C) to parts 1, 2 and 3.

      Fix part 4 to parts 1, 2 and 3 using screws (O) and allen key (S), as shown.

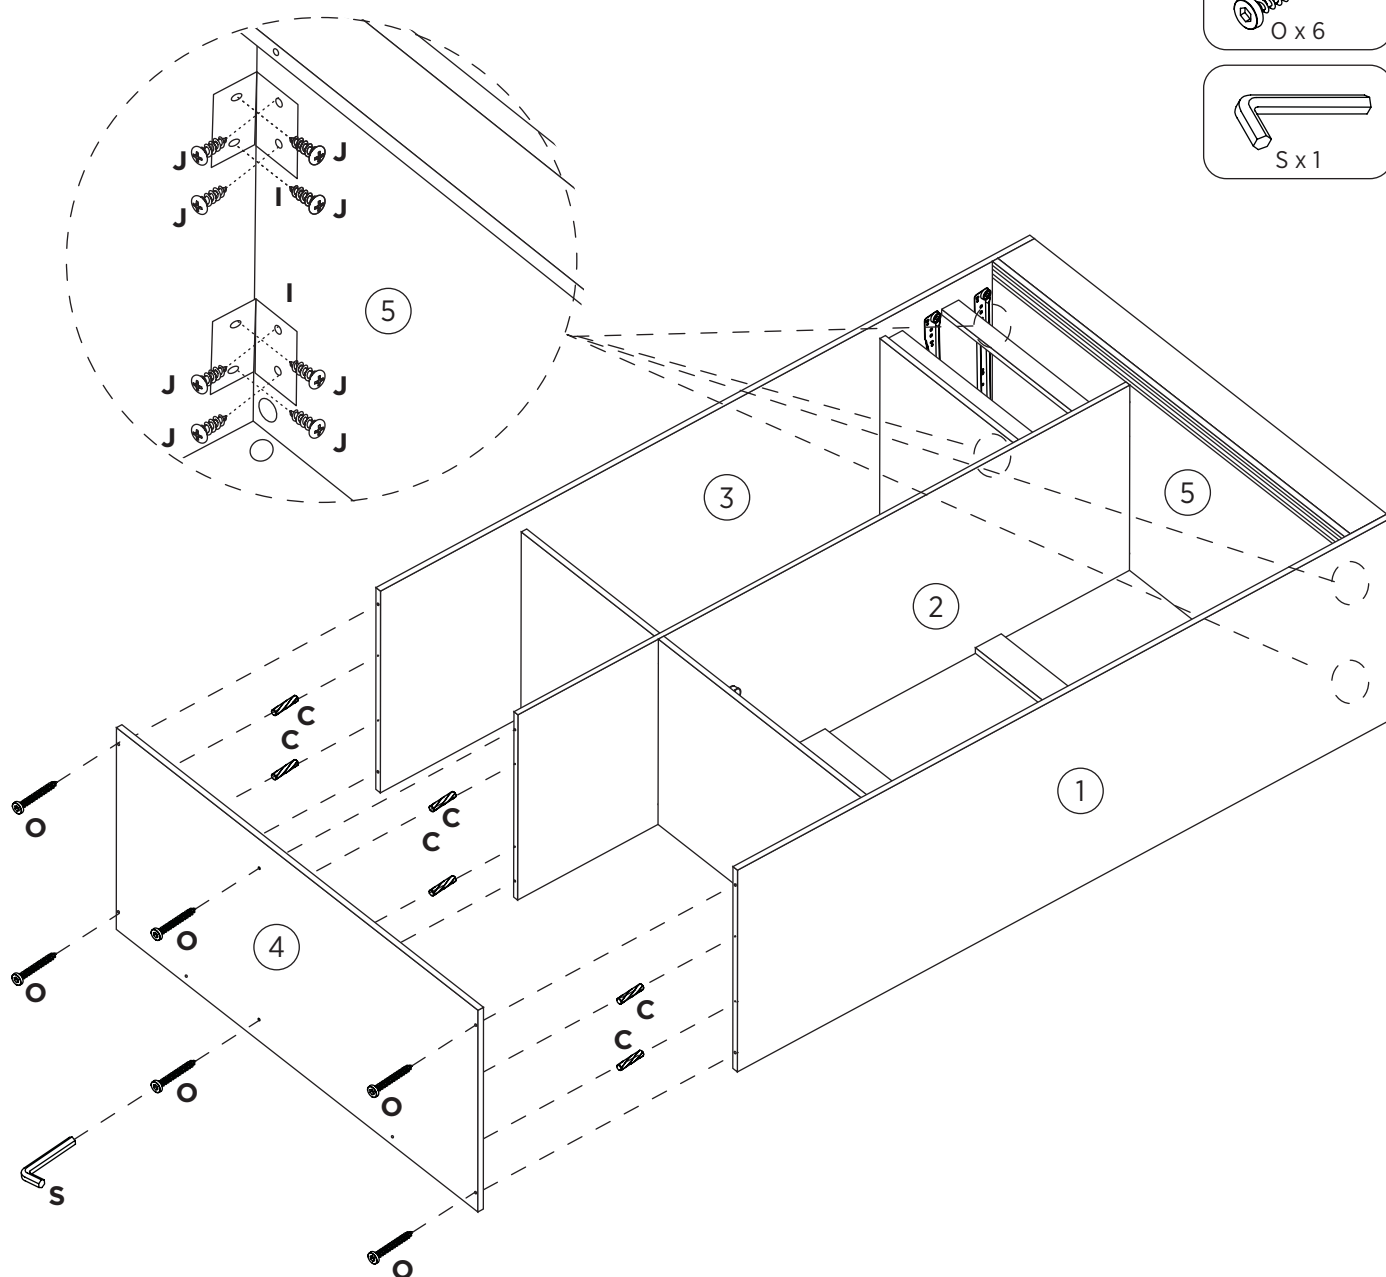

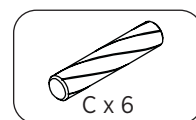


ASSEMBLY INSTRUCTIONS

STEP 11

Slide parts 15 into grooves on part 16.

   Fix parts 15 and 16 to assembled unit using nails (L) and screws (R), as shown.

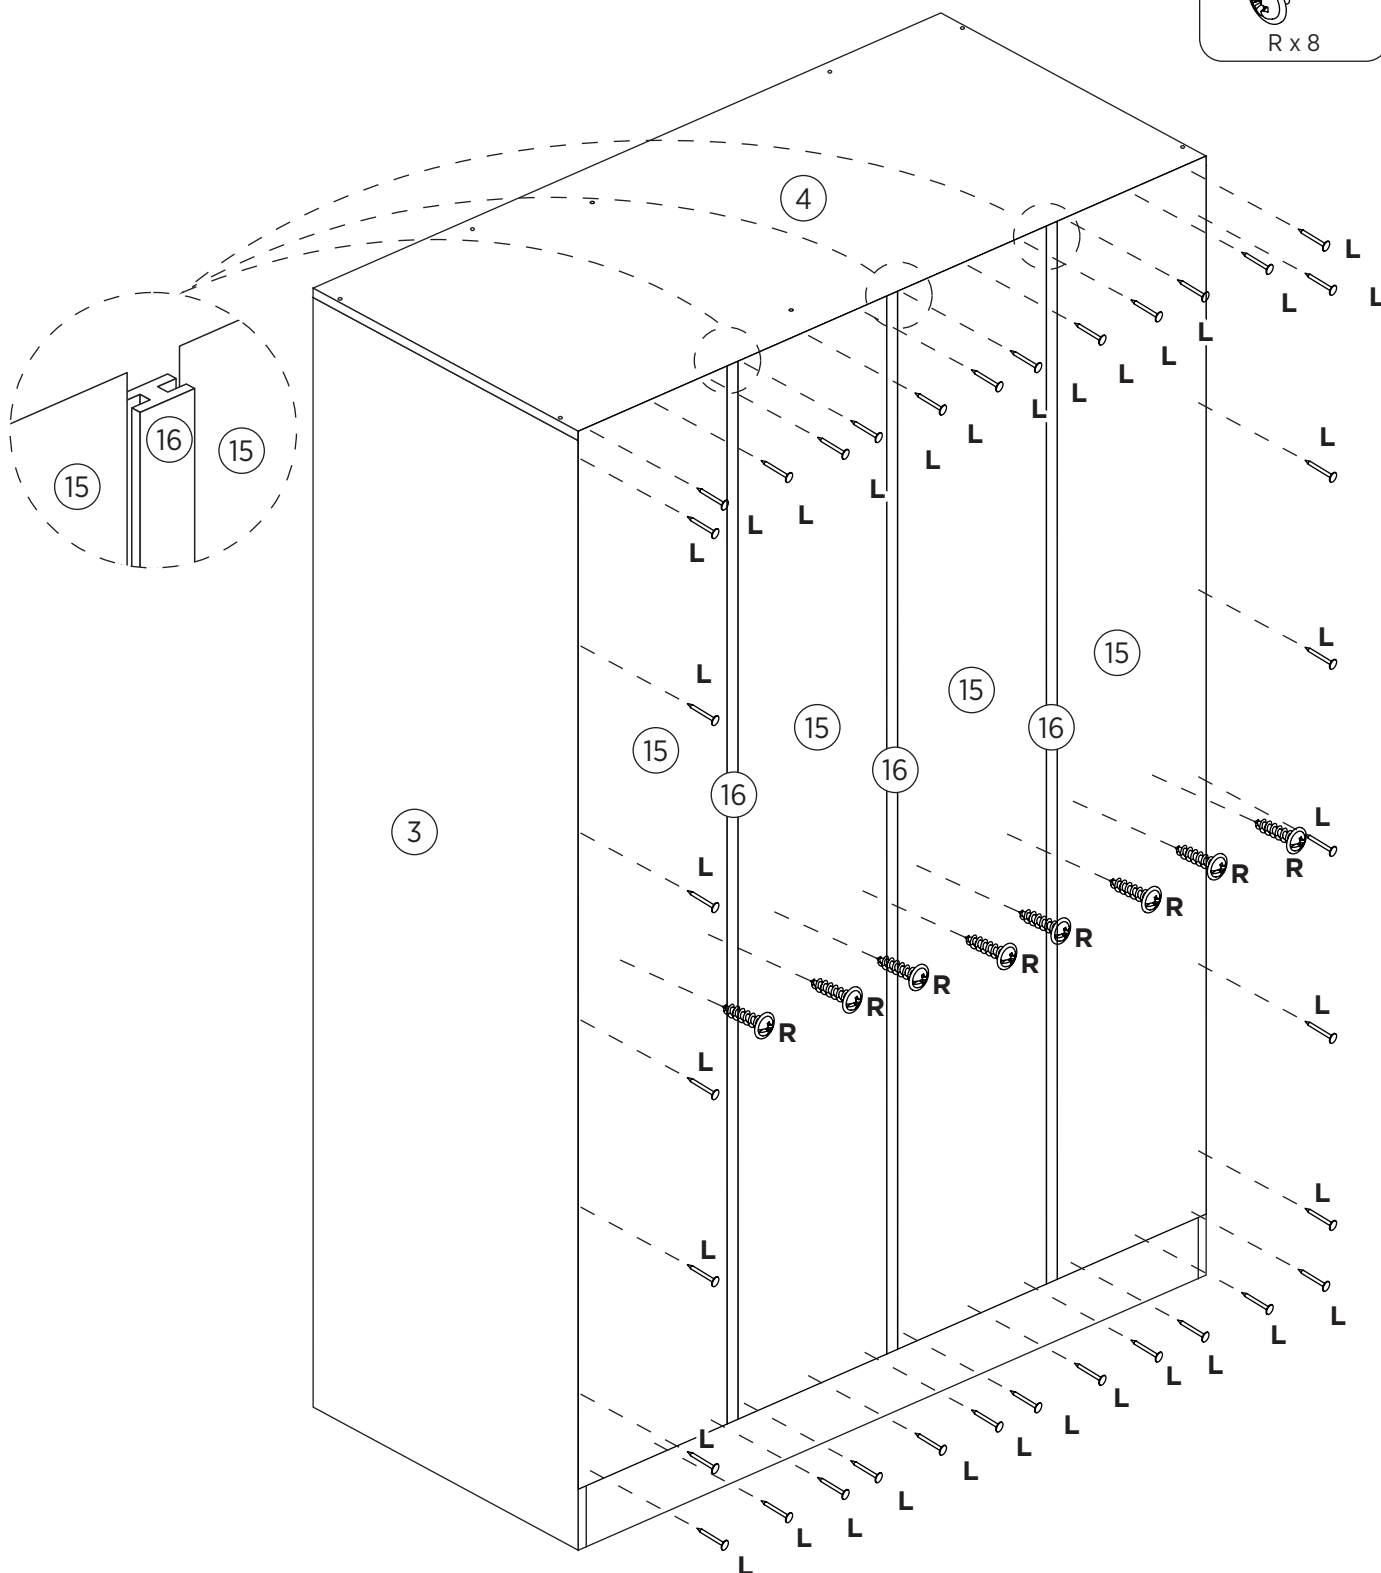
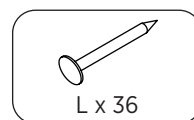


ASSEMBLY INSTRUCTIONS

STEP 12

Fix part 18 to parts 17, 25 and 26 using screws (Q).

  Fix part 26 to part 18 using screw (Q), as shown.

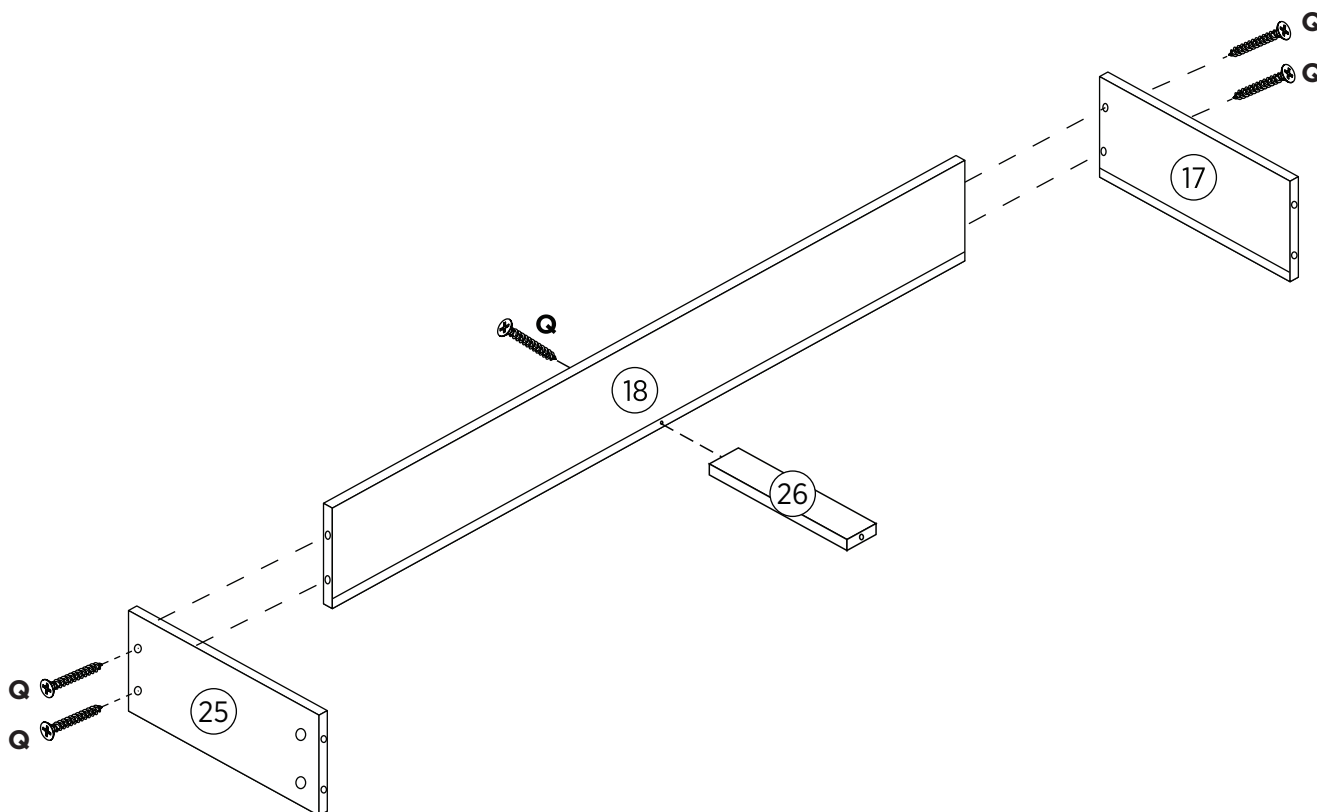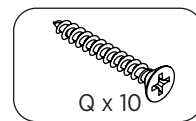


x2

ASSEMBLY INSTRUCTIONS

STEP 13

 Slide part 19 into grooves between parts 17, 25 and 18, as shown.

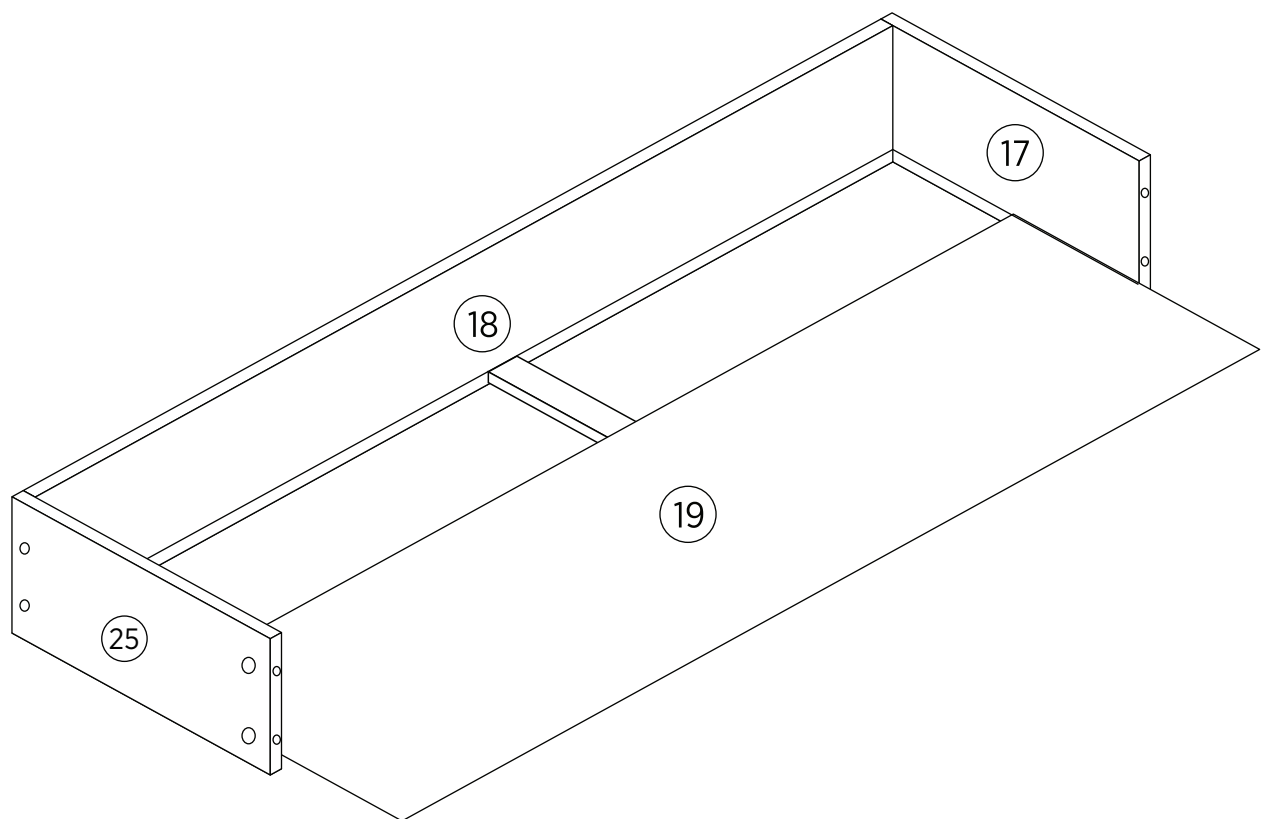

x2

ASSEMBLY INSTRUCTIONS

 
 
 
STEP 14

Insert quickfit screws (A) to part 20.

Insert cam locks (B) to parts 17, 25 and 26.

Fit part 20 to parts 17, 25 and 26, as shown.

Turn cam locks clock clockwise to tighten.

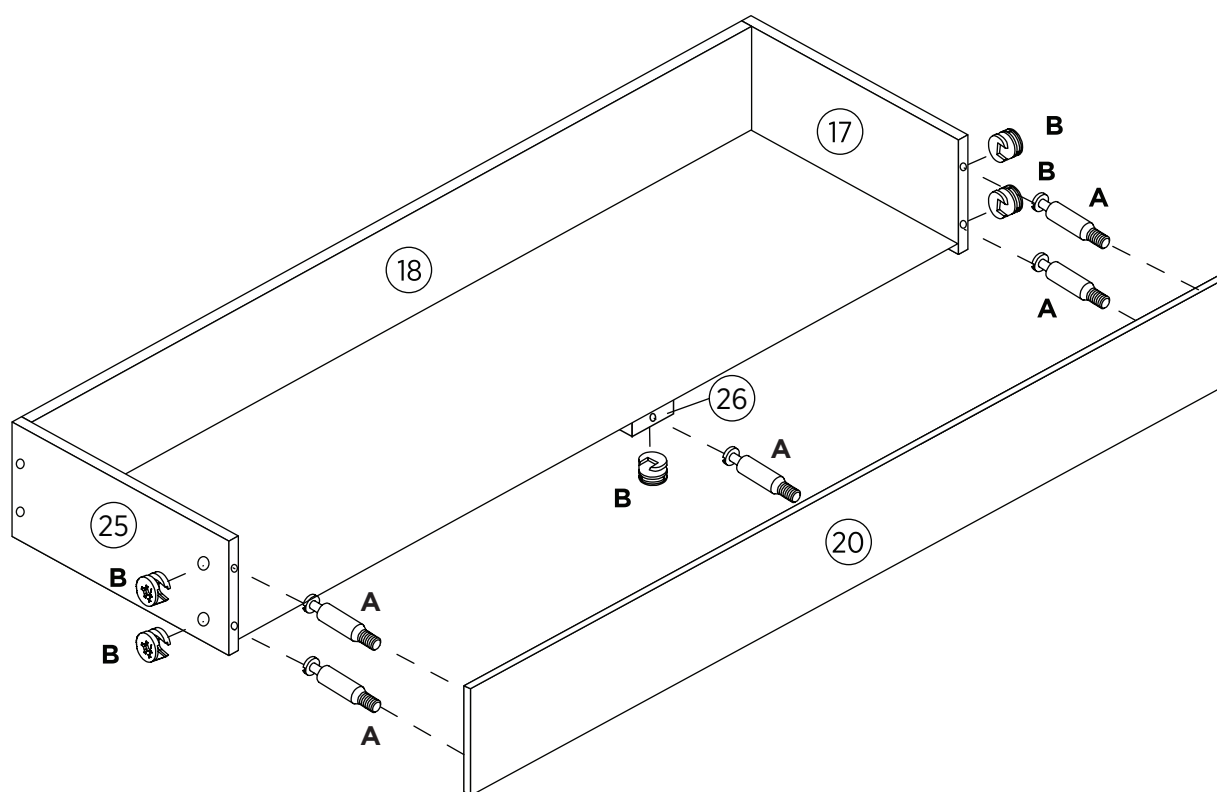

x2

ASSEMBLY INSTRUCTIONS

STEP 15

Fix inner drawer runners (Y) and (Z) to parts 16 and 17 using screws (U), as shown.

WARNING

The most common cause of drawers being misaligned is at the drawer assembly and runner installation stage. Please ensure all instructions and screw hole positions are followed as indicated to avoid misaligned drawers.



 
Z x 2



Y x 2



U x 8

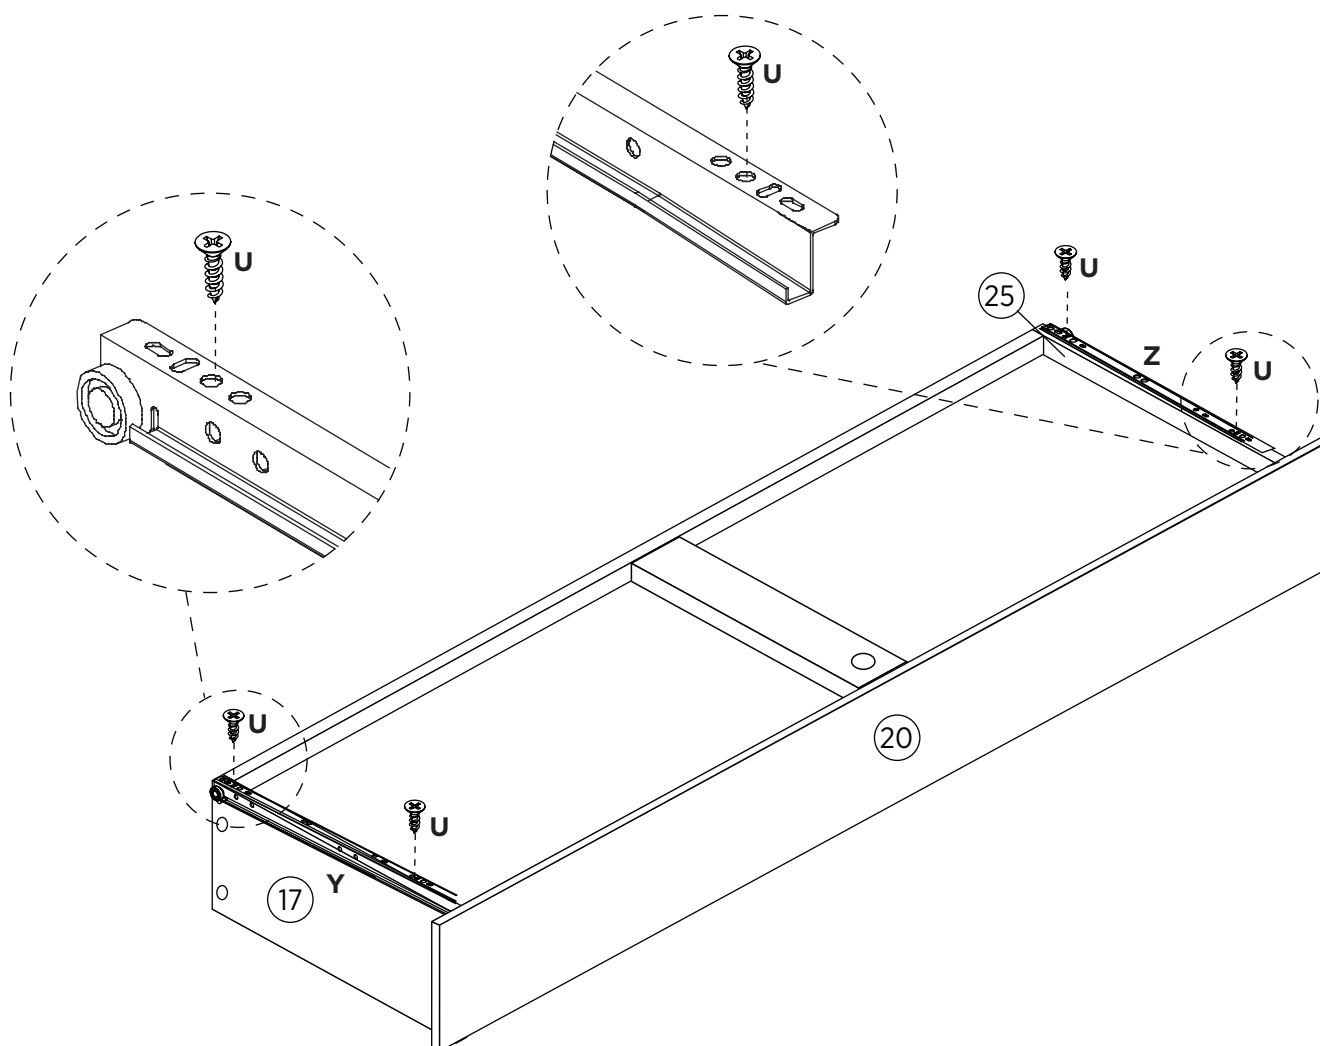

x2

ASSEMBLY INSTRUCTIONS

STEP 16

Fix sliding mechanism (G) to parts 21 and 22 using screws (F).

Fix sliding mechanism (H) to the bottom of parts 21 and 22 using screws (F), as shown.



 
F x 32



G x 4




H x 4

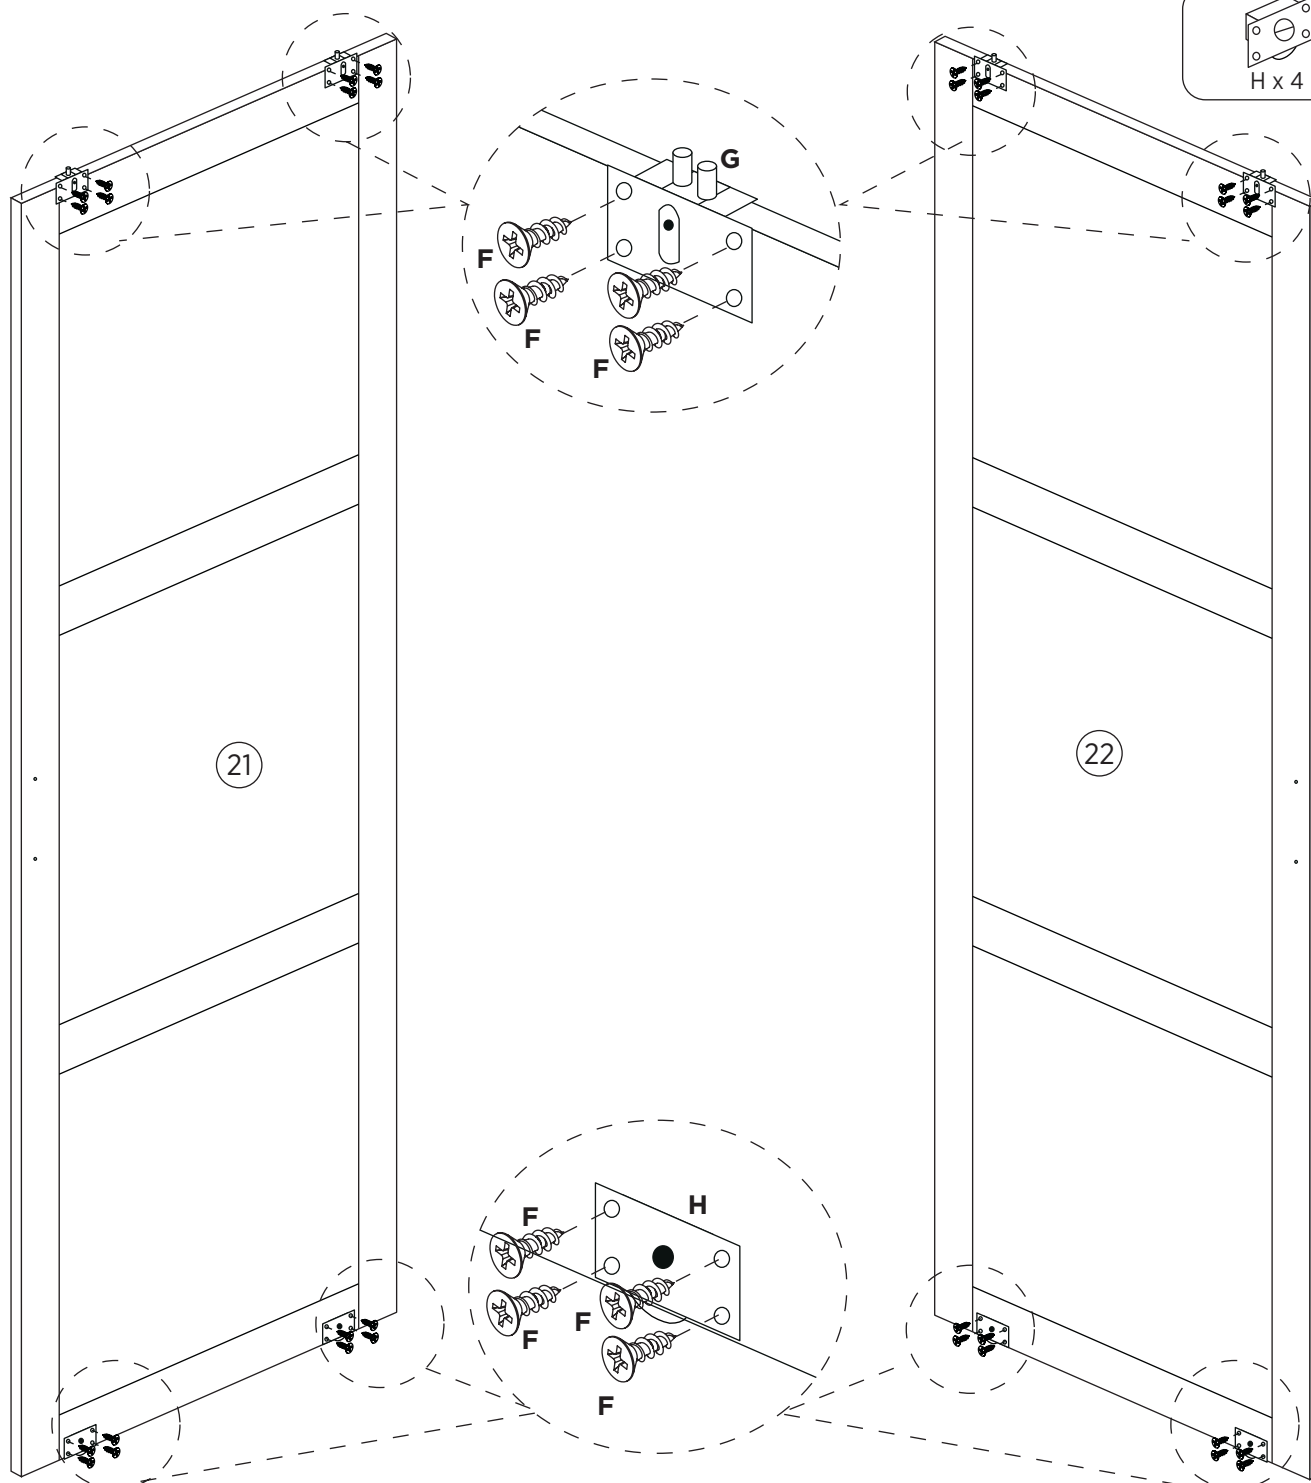

ASSEMBLY INSTRUCTIONS

STEP 17

 
Place drawers into assembled unit, as shown.

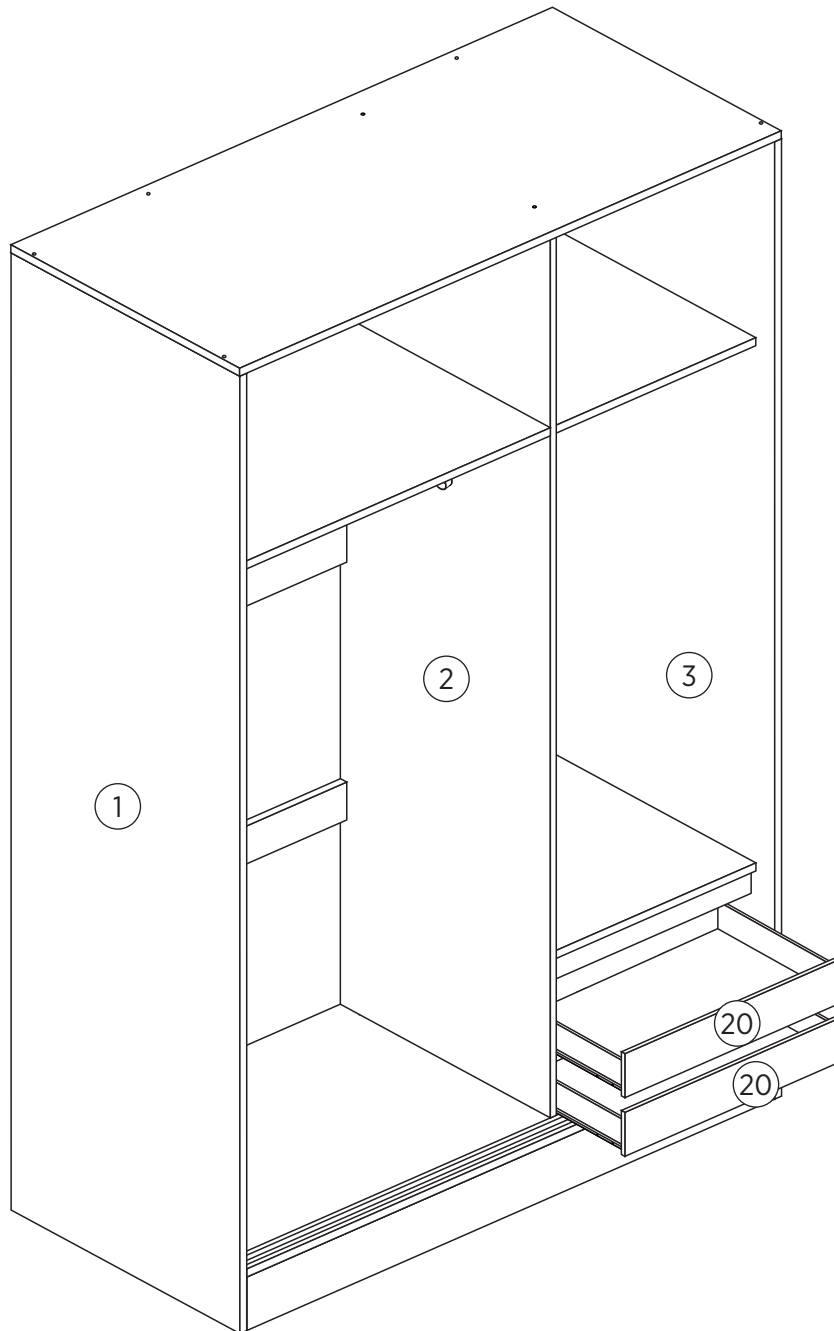

ASSEMBLY INSTRUCTIONS

STEP 18

 
Put parts 23 and 24 on hanging rail bracket (P), as shown.

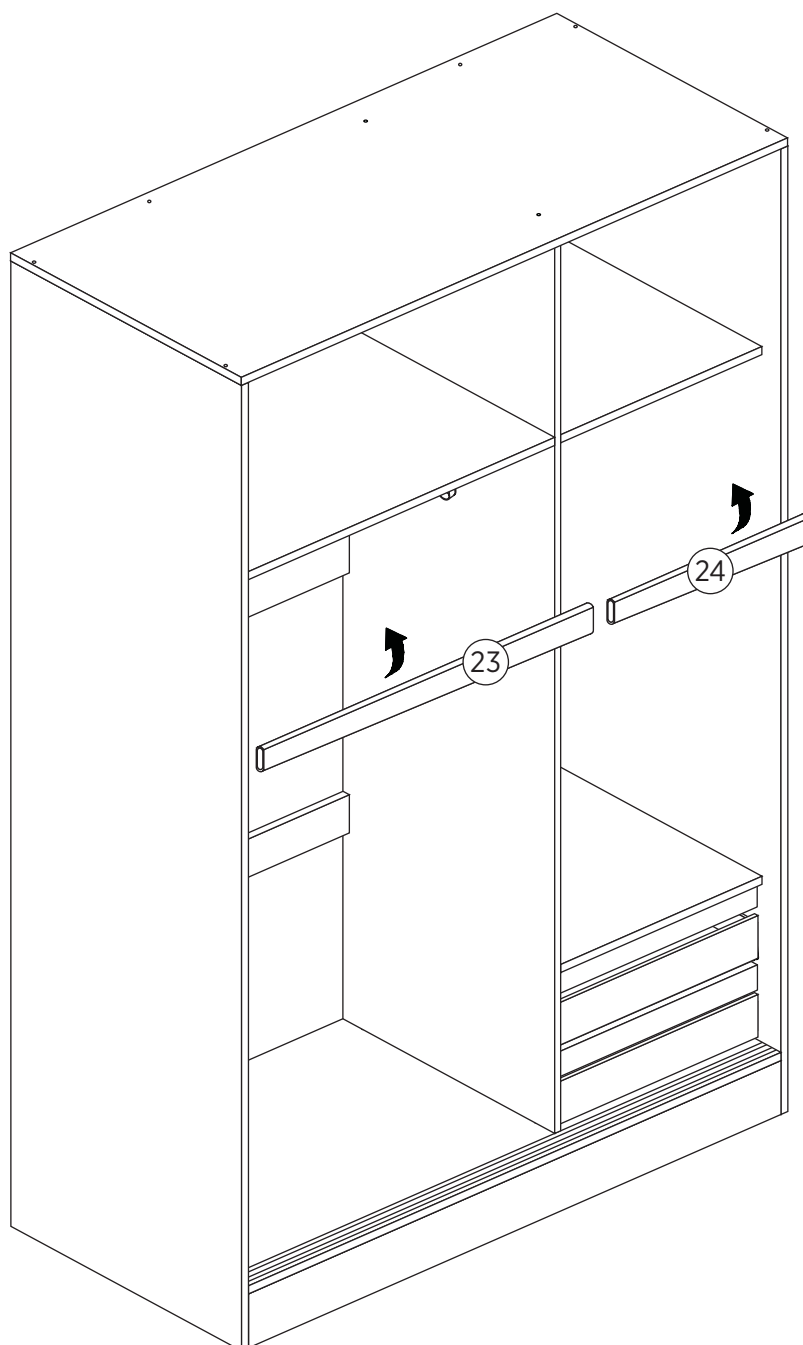

ASSEMBLY INSTRUCTIONS

STEP 19




 
Attach part 21 onto the wardrobe by firstly aligning and inserting part (H) into the bottom rail. Then press the lever downwards on part (G) which will lower the top pin to allow space for you to then insert into the top rail - once inserted you can release the pin.

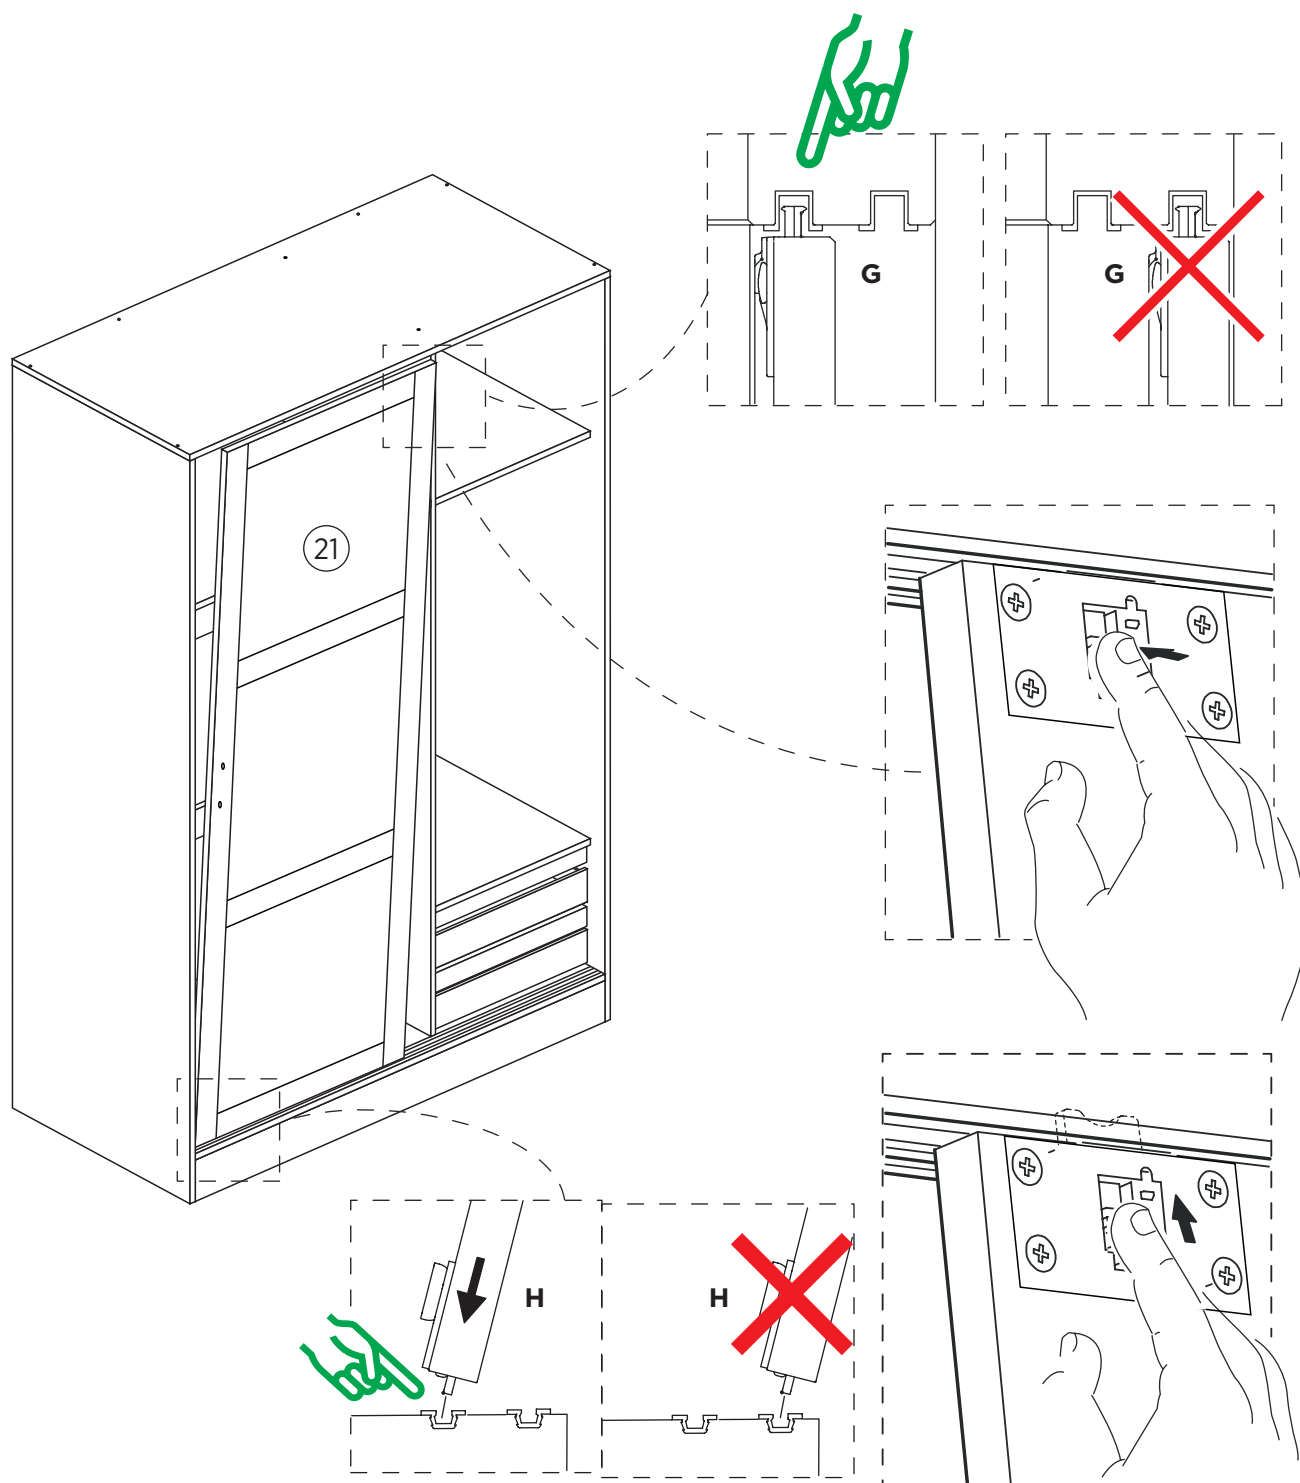

ASSEMBLY INSTRUCTIONS

STEP 20

    Attach part 22 onto the wardrobe by firstly aligning and inserting part (H) into the bottom rail. Then press the lever downwards on part (G) which will lower the top pin to allow space for you to then insert into the top rail - once inserted you can release the pin.


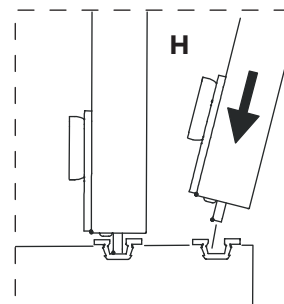
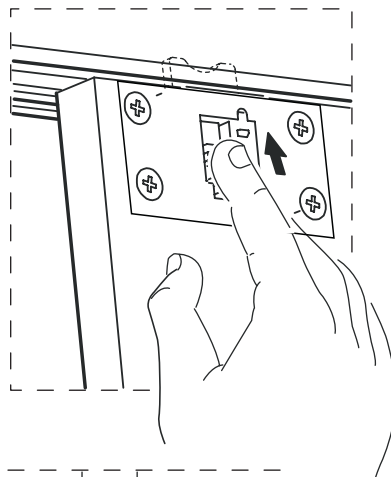
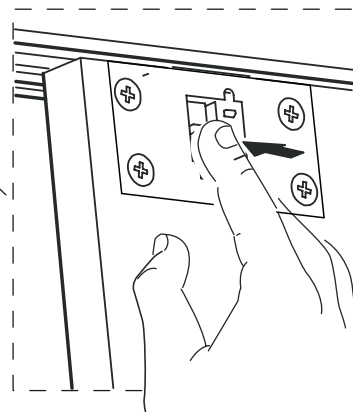
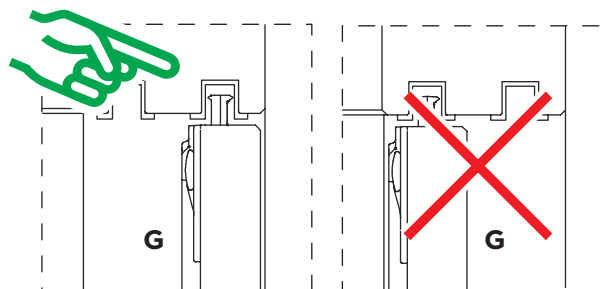


ASSEMBLY INSTRUCTIONS

STEP 21

Fix wall brackets (M) to part 4 using screws (J).

     Fix handle (E) to parts 21 and 22 using screws (K), as shown.

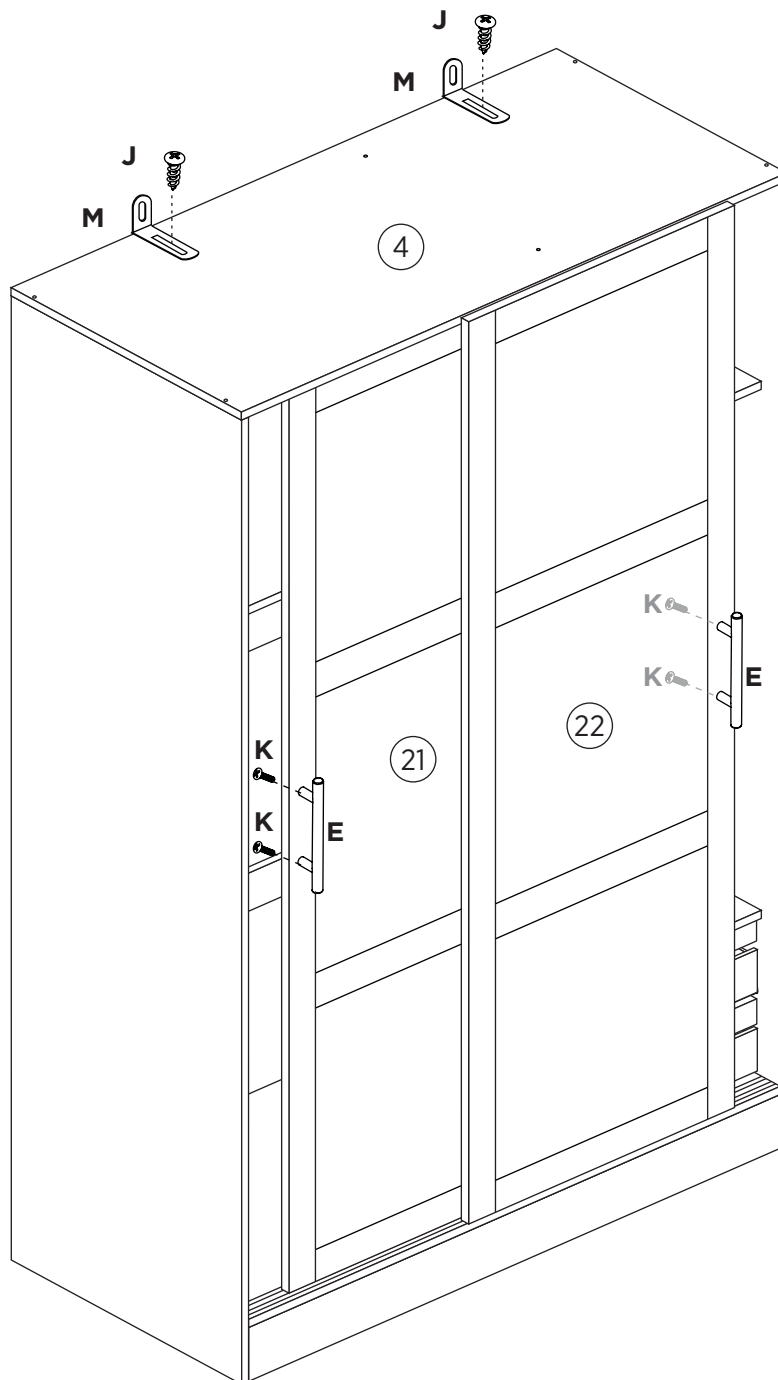




ASSEMBLY INSTRUCTIONS

STEP 22

For extra stability, you must fix your wardrobe to the wall using the additional hardware (N and Q), as shown.

Screws (Q) are fixed through wall brackets (M) and into the wall plugs (N).

   Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

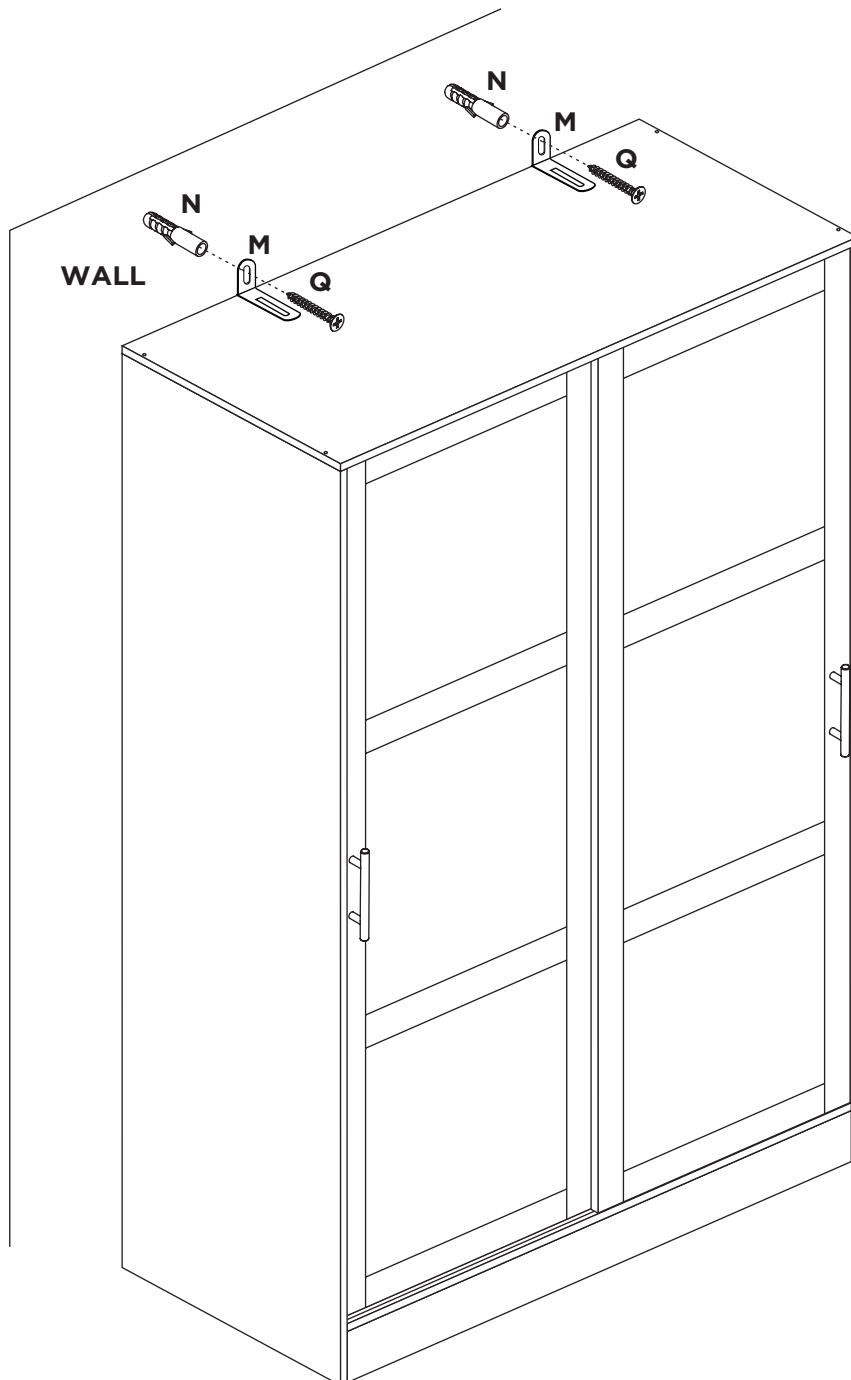

! WARNING

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

ASSEMBLY INSTRUCTIONS

STEP 23

Maximum recommended weight is 10kg for shelf, 15kg for clothes rail and 5kg for each drawer.

Your wardrobe 2 doors 2 drawers is ready for use.



WALL FIXING GUIDE

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice.
Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.

- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

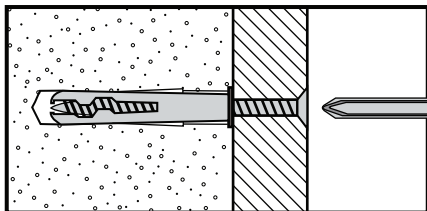


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

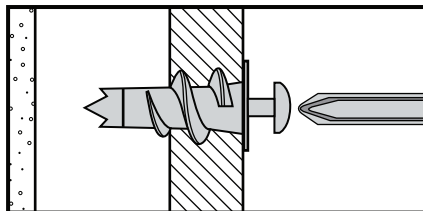


2. Plasterboard Wall Plug

 For use when attaching light loads onto plasterboard partitions.

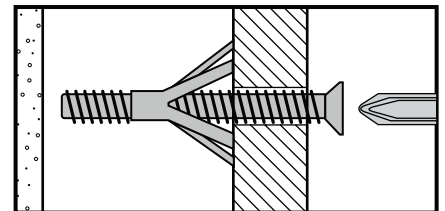


3. Cavity Fixing Wall Plug

 For use with plasterboard partitions or hollow wooden doors.

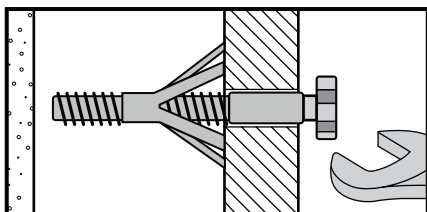


4. Cavity Fixing Heavy Duty Wall Plug

 For use when fitting or supporting heavy loads such as shelving and wall cabinets.

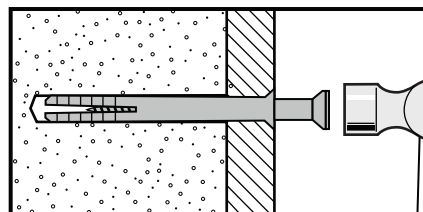

5. Hammer Fixing Wall Plug

 For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

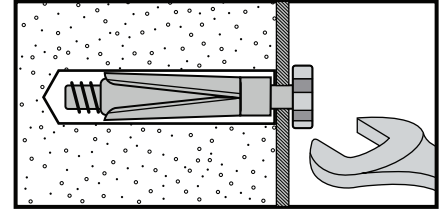

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.