


ASSEMBLY INSTRUCTION

Raphael 180cm White and Oak Entertainment Unit

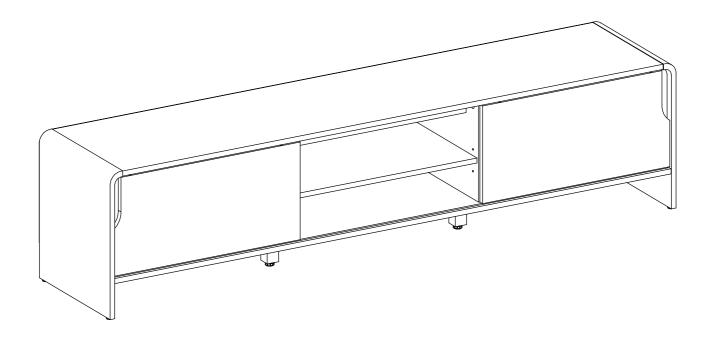

Two people required

www.templeandwebster.com.au

Keep these instructions for future reference

Assemble the furniture on a soft level surface to avoid damaging the furniture or your floor.

Parts of the assembly will be easier with 2 people.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

Warning: In order to prevent overturning, this product must be used with the wall attachment device provided.

 
Care and Maintenance of your Furniture

Wipe clean with a damp cloth. Use only water or a gentle detergent. Wipe dry with a clean cloth.

 
Tools Required

Time Required









45 min

DO NOT USE

Mallet

Flat head Screwdriver


Cross Screwdriver

Part List


- Top Panel 1 Bottom Panel 2
- Left Panel 3
- Right Panel 4
- Divider Left Panel 5
- Divider Right Panel
- Support Panel 7
- Shelf 8
- Leg 9
- 10 Back Panel
- 11 Left Door
- 12 Right Door

people Required




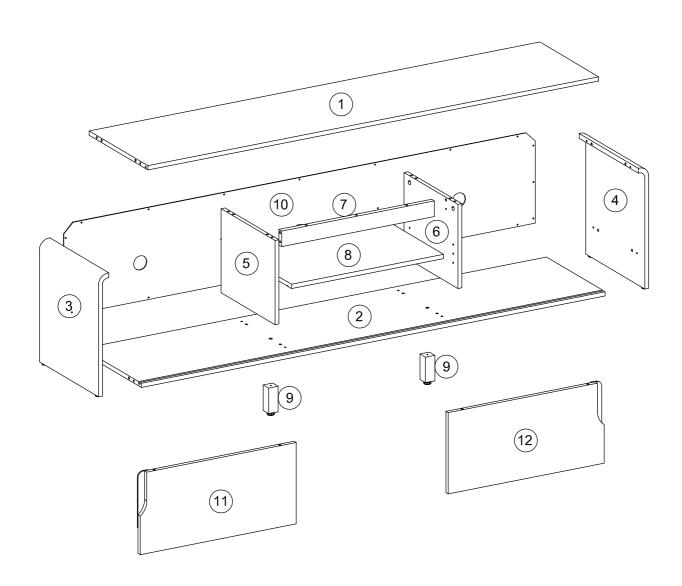

Hardware/Fittings

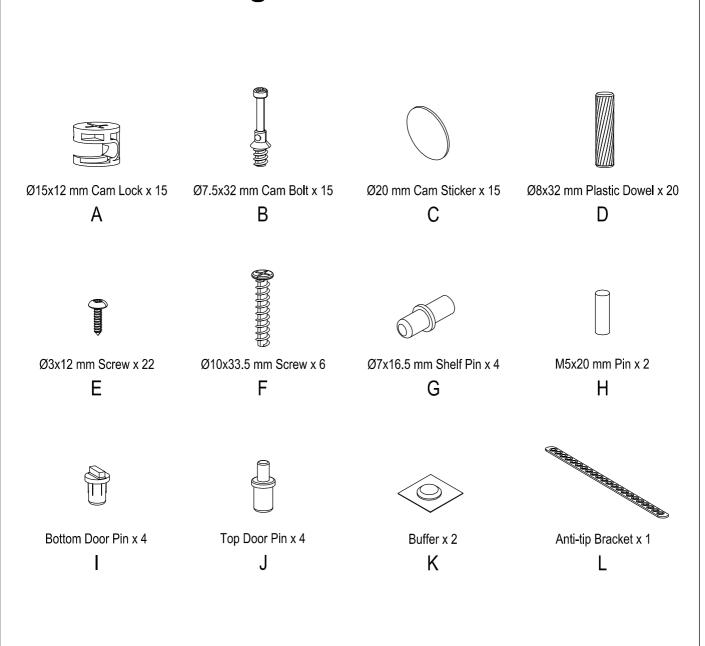




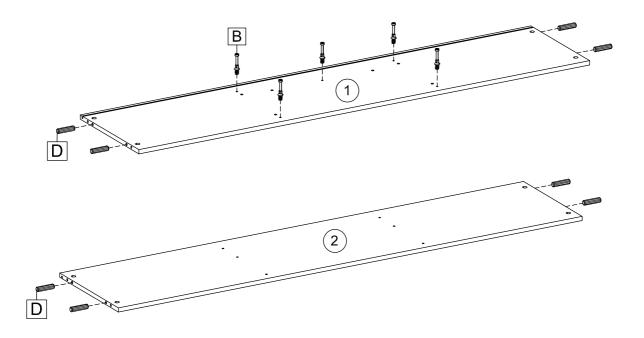


Screw 5 x Cam Bolts (B) into Top Panel (1).
Insert Plastic Dowel (D) into Top panel (1) and Bottom panel (2),
If necessary, gently tap the Plastic dowels with a mallet.

 
2



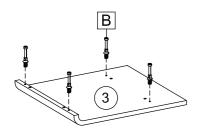






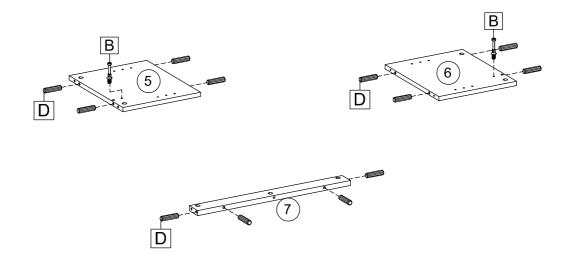



Screw 2 x Cam Bolts (B) into Divider Left Panel (5) and Divider Right Panel (6). Insert 12 x Plastic Dowel (D) into Divider Left Panel (5), Divider Right Panel (6) and Support Panel (7), If necessary, gently tap the Plastic dowels with a mallet.



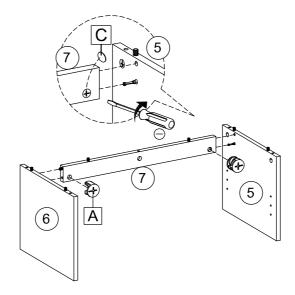

 Attach Divider Left Panel (5) and Divider Right Panel (6) to Support Panel (7) using 2 x Cam lock (A), Use a screwdriver to turn the Cam lock clockwise to lock. Paste 2 x Cam Sticker (C) as shown.




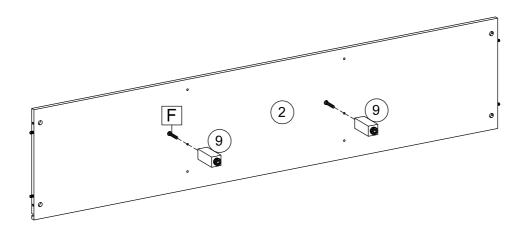

Attach Leg (9) to Bottom panel (2) using 2 x Screw (F).


6



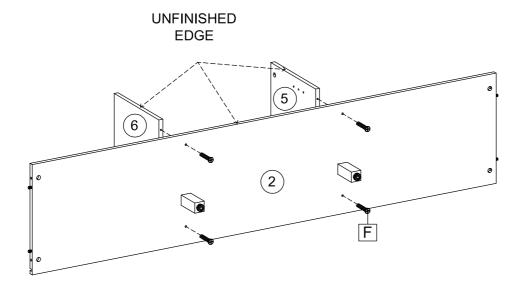

Attach Bottom panel (2) to Assembly using 4 x Screw (F).




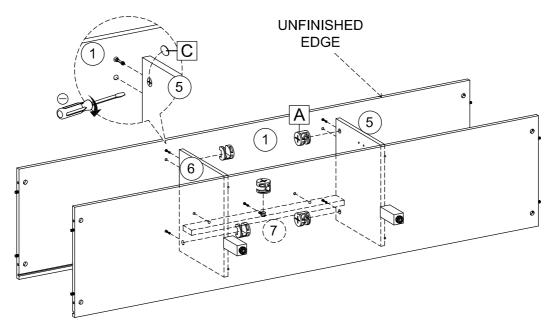

Attach Top panel (1) to Assembly using 5 x Cam lock (A), Use a screwdriver to turn the Cam lock clockwise to lock. Paste 5x Cam Sticker (C) as shown.

8




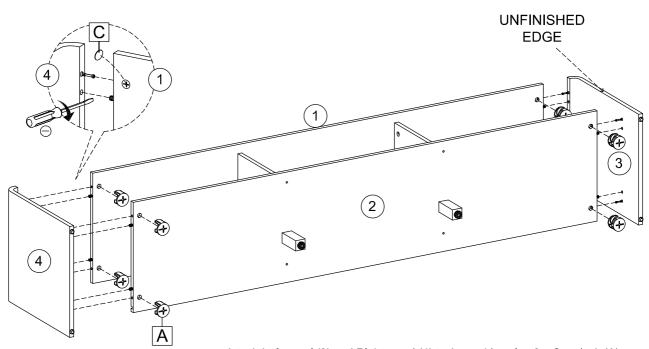


Attach Left panel (3) and Right panel (4) to Assembly using 8 x Cam lock (A), Use a screwdriver to turn the Cam lock clockwise to lock. Paste 8 x Cam Sticker (C) as shown.






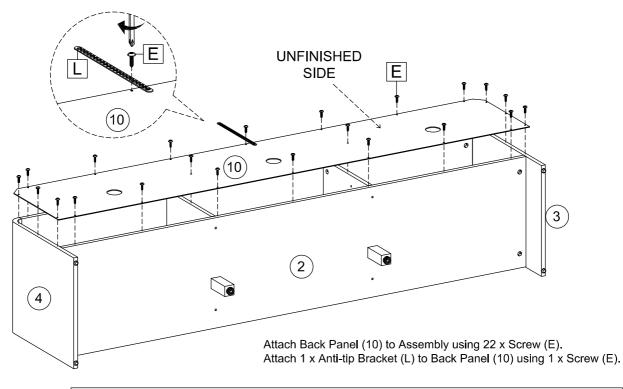




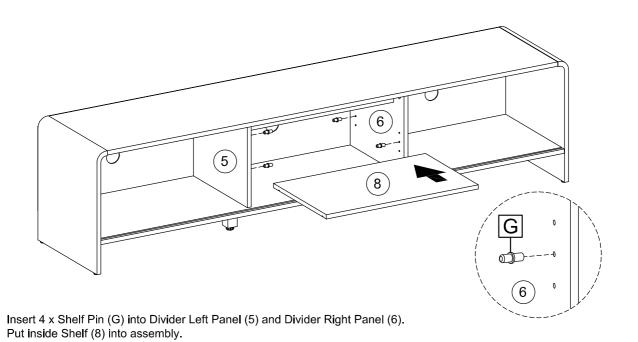




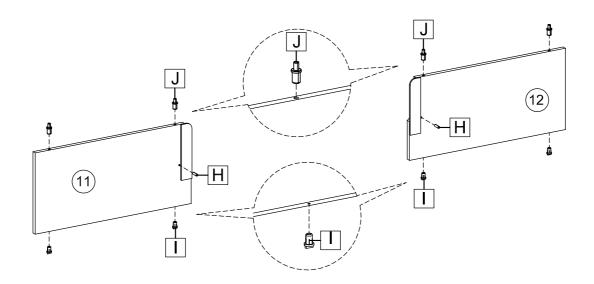


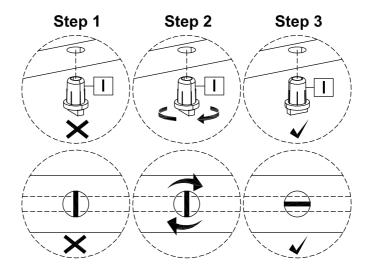


Insert 4 x Bottom Door Pin (I) into Left Door (11) and Right Door (12), Insert 4 x Top Door Pin (J) into Left Door (11) and Right Door (12), Insert 2 x Pin (H) into Left Door (11) and Right Door (12). Turn flat head on Bottom Door Pin until line up with the door as shown.

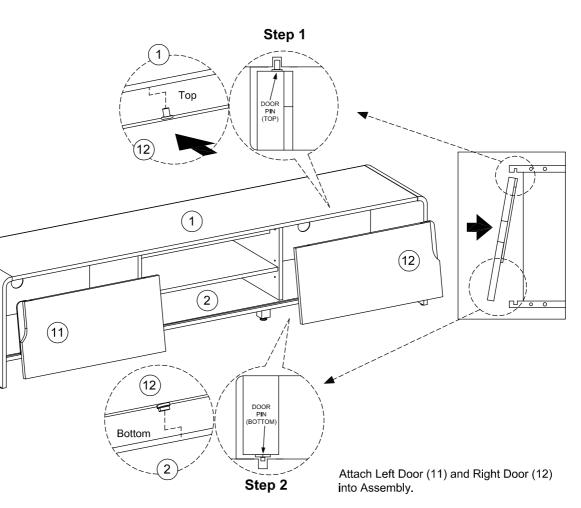



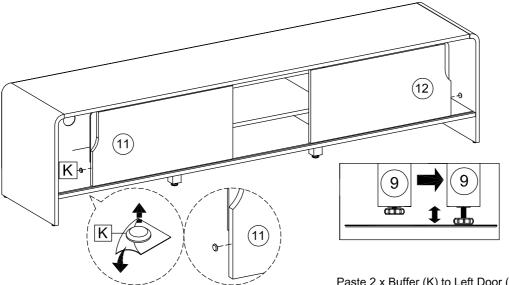

Paste 2 x Buffer (K) to Left Door (11) and Right Door (12). Adjust the Leg (9) until square with floor.

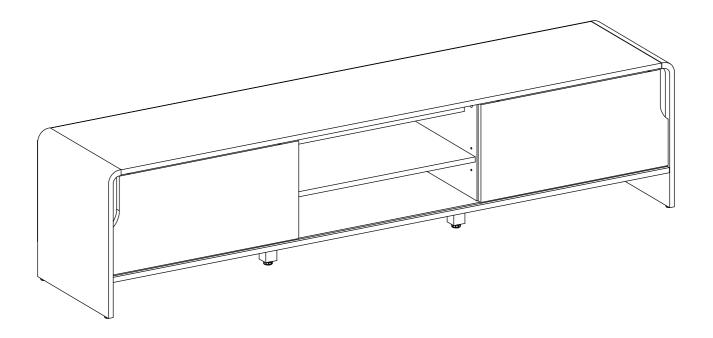

Assembly is complete.

Please dispose of all packaging thoughtfully.