 

 

 

 





Read these instructions and follow steps carefully to ensure you assemble the product correctly and avoid damages. Check that all parts and hardware have been provided before assembling the product. place all contents on a clean, soft flat surface to avoid scratching the product.


⚠ CAUTION:
Only tighten bolts to 80% at first. once all parts have been assembled, fully tighten all hardware.
To prevent damage to threads, do not use a power tool and do not overtighten bolts.



Use two people to lift and turn the product when assembling.
Do not attempt with only one person and do not fall onto legs.
Keep all hardware and small parts away from children.

PART LIST			HARDWARE LIST		
ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION	QTY
A	LEG 	4 PCS	1	BOLTS M8 x 55MM 	8 PCS
B	TABLE TOP 	1 PC	2	M4 ALLEN KEY 	1 PC
C	EXTEND TABLE 	1 PC	3	WASHER 20 x 8.5 x 2MM 	8 PCS
D	SLAT SUPPORT 	1 PC	4	SCREW M6 x 35 MM 	2 PCS
			5	SUPPORT PLATE 	2 PCS
			6	SCREW M4 x 20 MM 	6 PCS

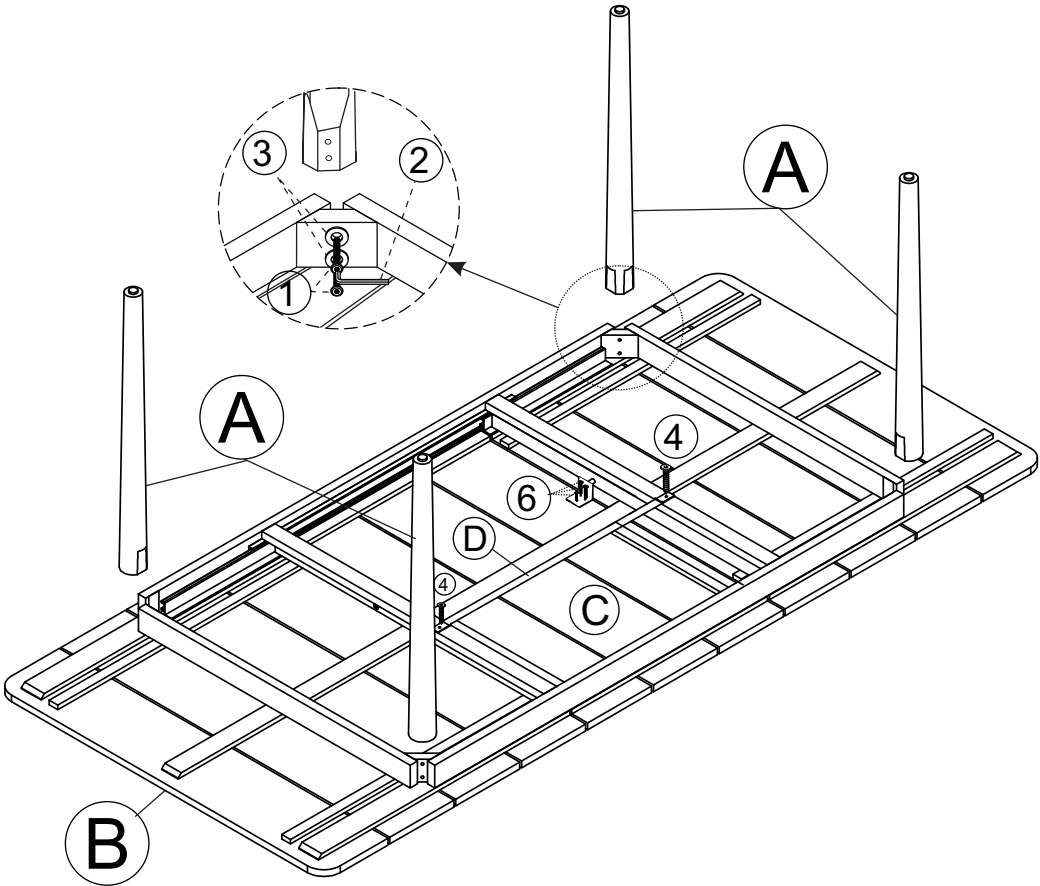STEP 1:



STEP 2:

