


ASSEMBLY INSTRUCTIONS

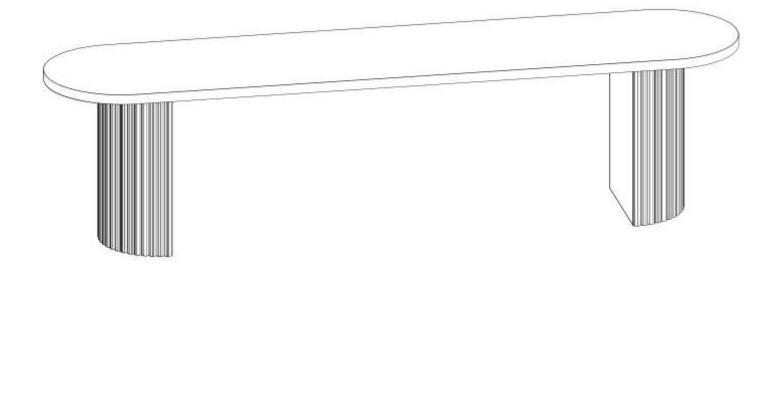

Anika 180cm Dining Bench

Read first, enjoy forever



Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- ALWAYS secure it with an anchor device
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local
- specialized dealer.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.






ASSEMBLY INSTRUCTIONS Anika 180cm Dining Bench STABSMCR

1. Wooden Top – 1 pc



2. Wooden Base-2 Pcs

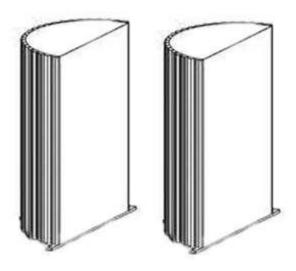

NUMBER OF PEOPLE REQUIRED FOR ASSEMBLY: **2**

TOOLS REQUIRED FOR ASSEMBLY

A. Allen Key4 mm- 1PC



B. JCB BOLT M6 x 20MM- 6 PCS




C. WASHER M8 X 20MM - 6 PCS






Damaged or missing parts? Or just need help? Contact us on service@templeandwebster.com.au

Step - 1.

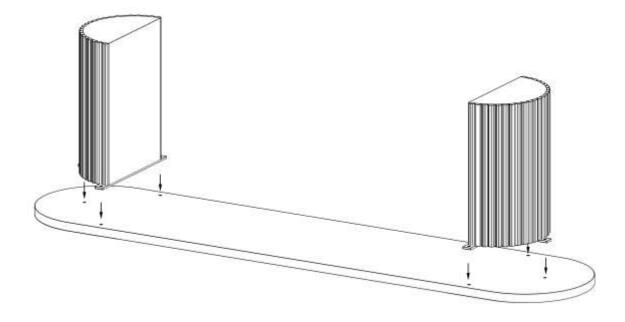


Step. -2.

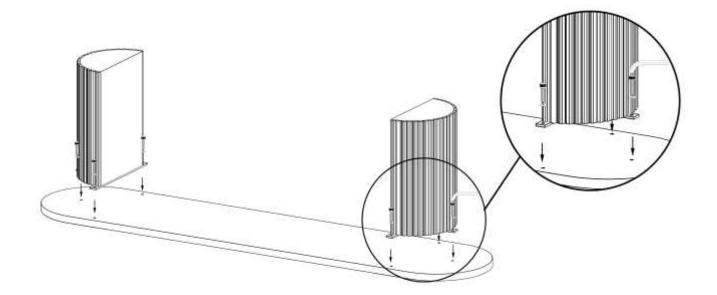




Damaged or missing parts? Or just need help? Contact us on service@templeandwebster.com.au

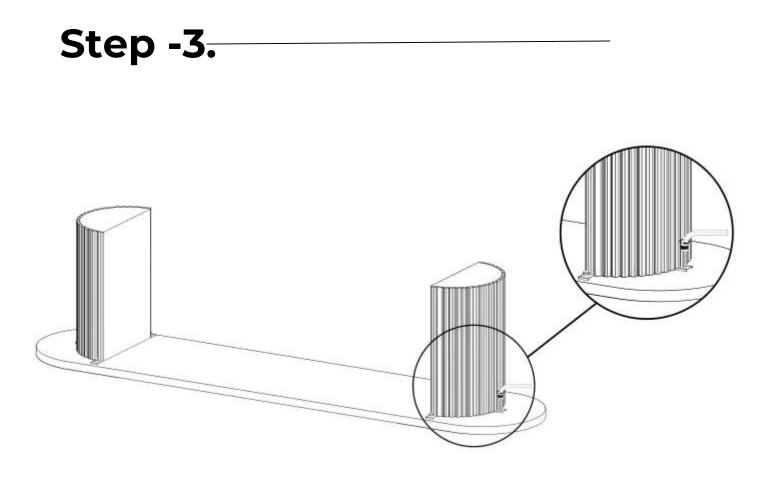

Your product is ready for use.

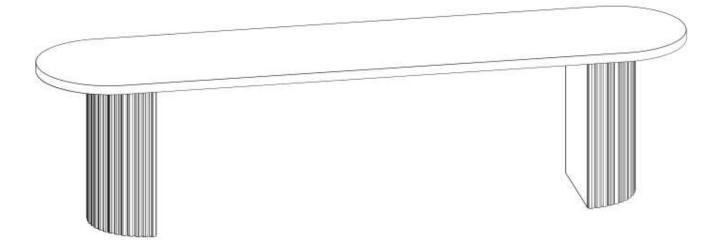



Damaged or missing parts? Or just need help? Contact us on service@templeandwebster.com.au