
# TEMPLEど WEBSTER

# ASSEMBLY INSTRUCTIONS

## **BZBTBSOA**

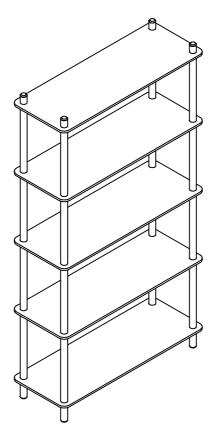

Read these instructions and follow steps carefully to ensure you assemble the product correctly and avoid damages.

Check that all parts and hardware have been provide before assembling the products. Place all contents on a clean,soft-flat surface to avoid scraching the product. CAUTION:

To prevent damage to threads, do not use a power tool and do not overtighten bolts.


Use two people lift and turn the product when assembling.


Do not attempt with only one person and do not roll onto legs.


Keep all hardware and small parts away from children.





1 - 8

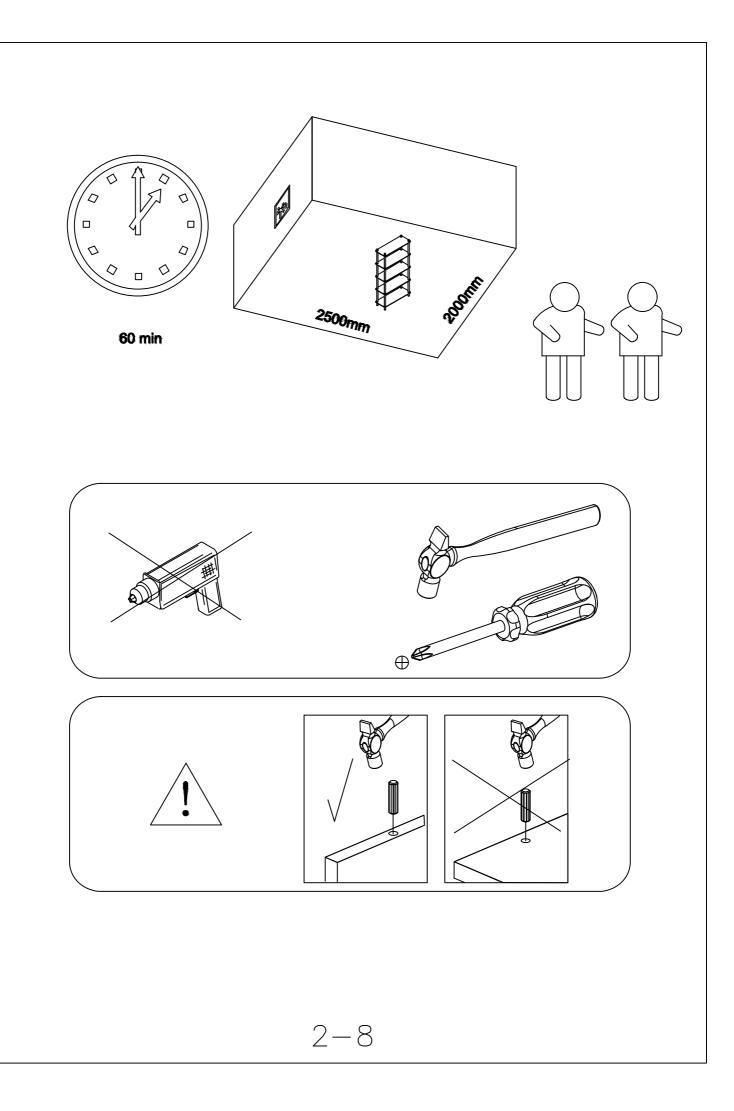


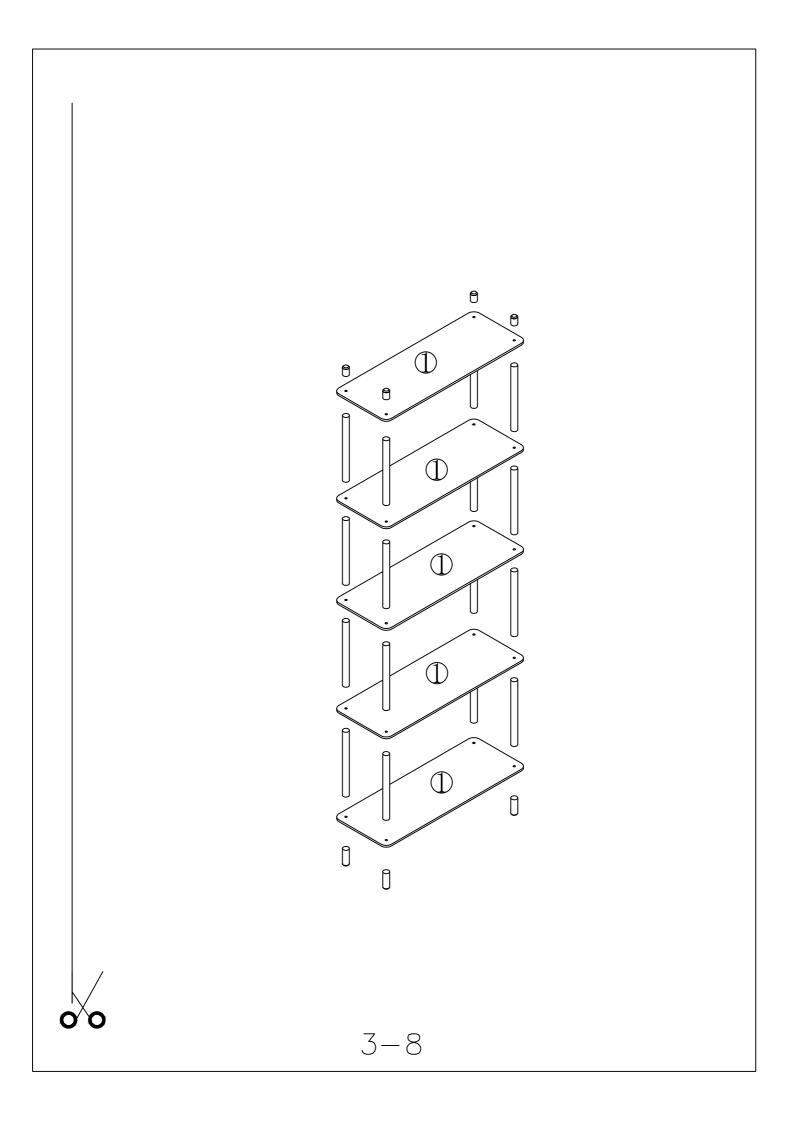


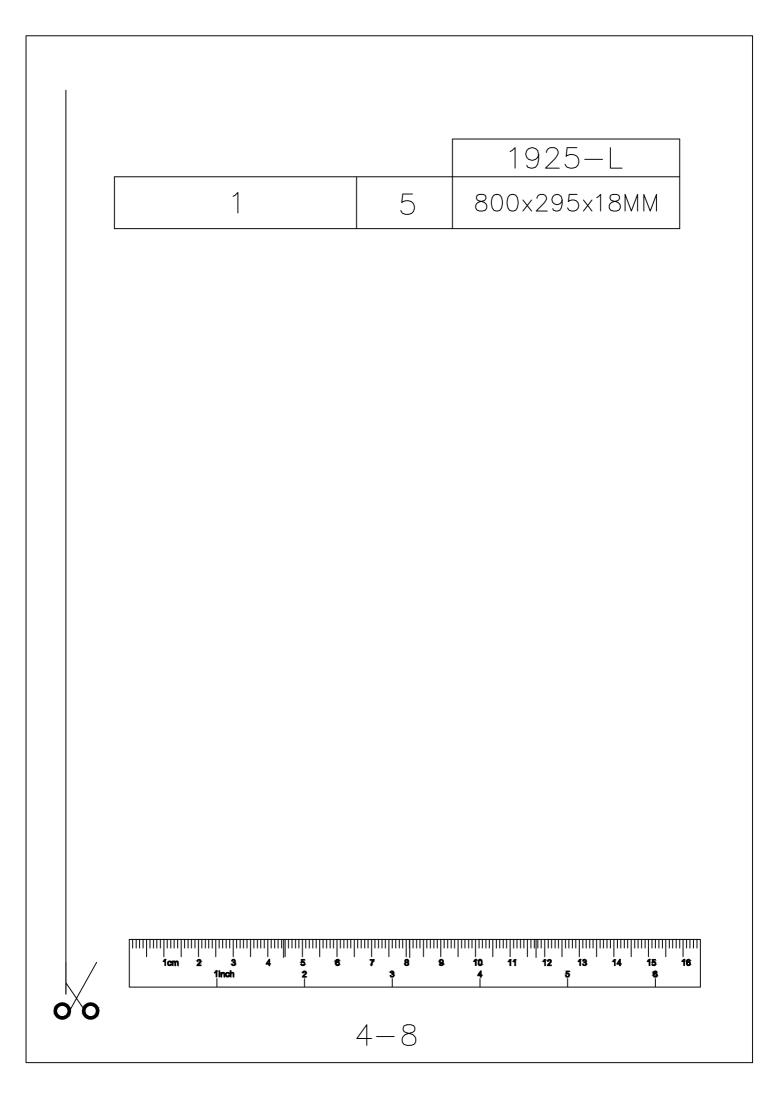

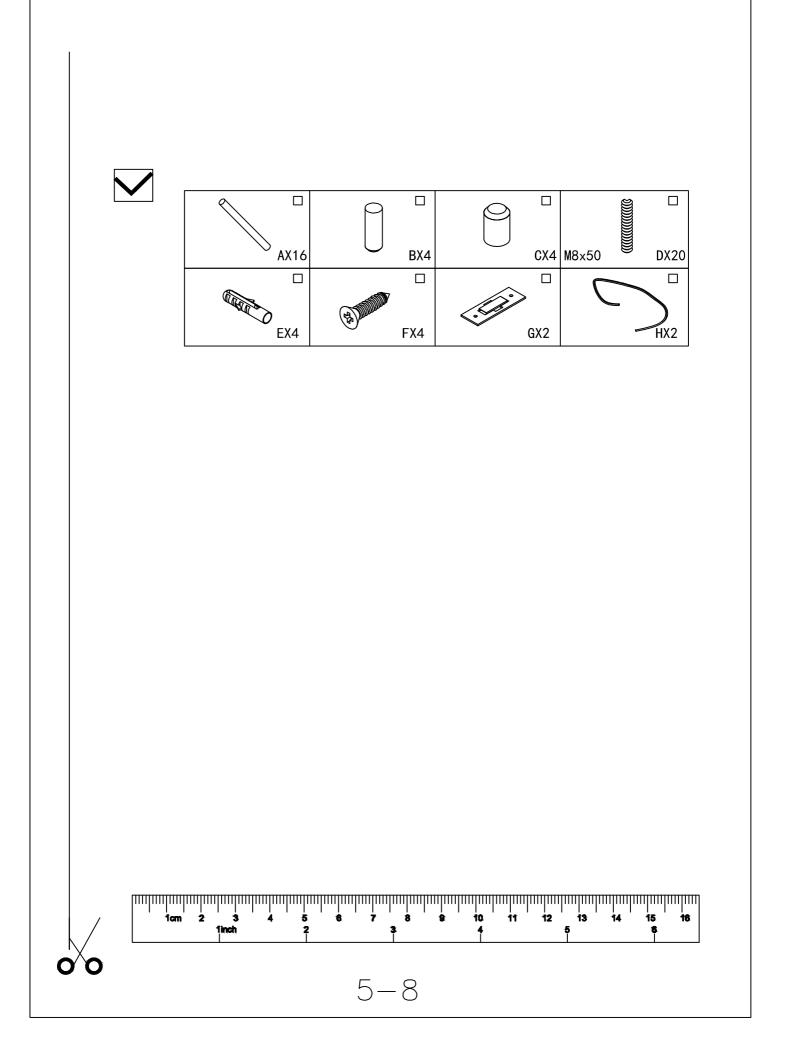

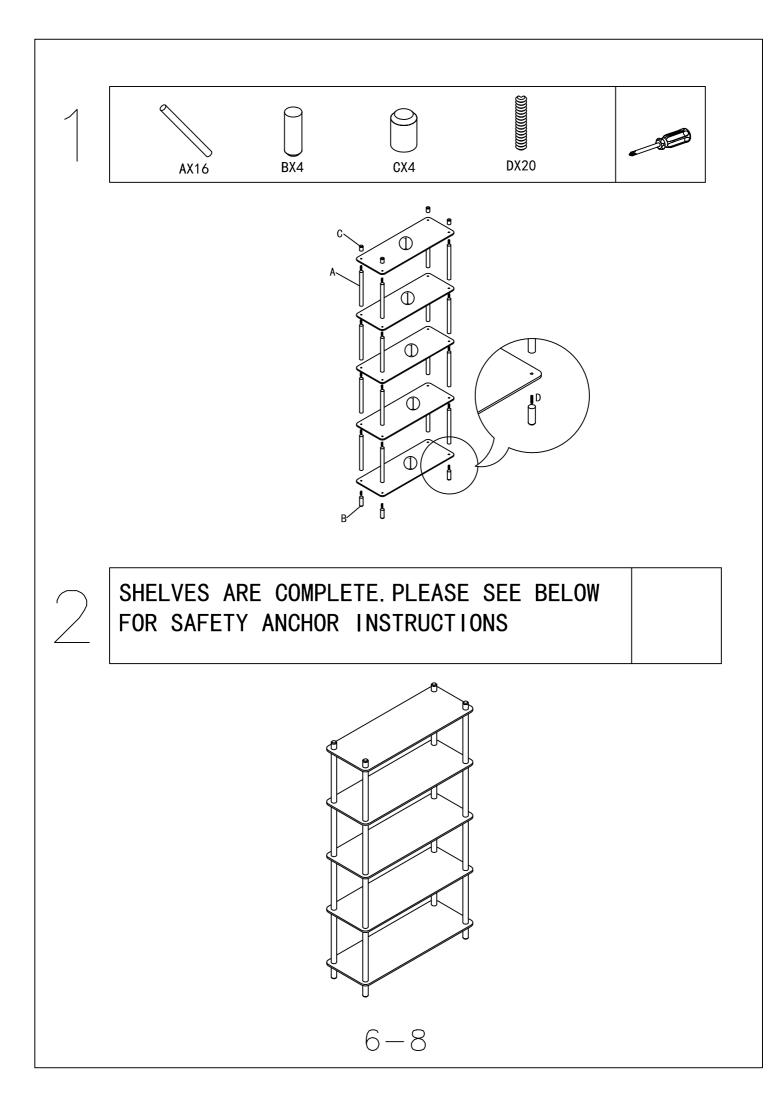

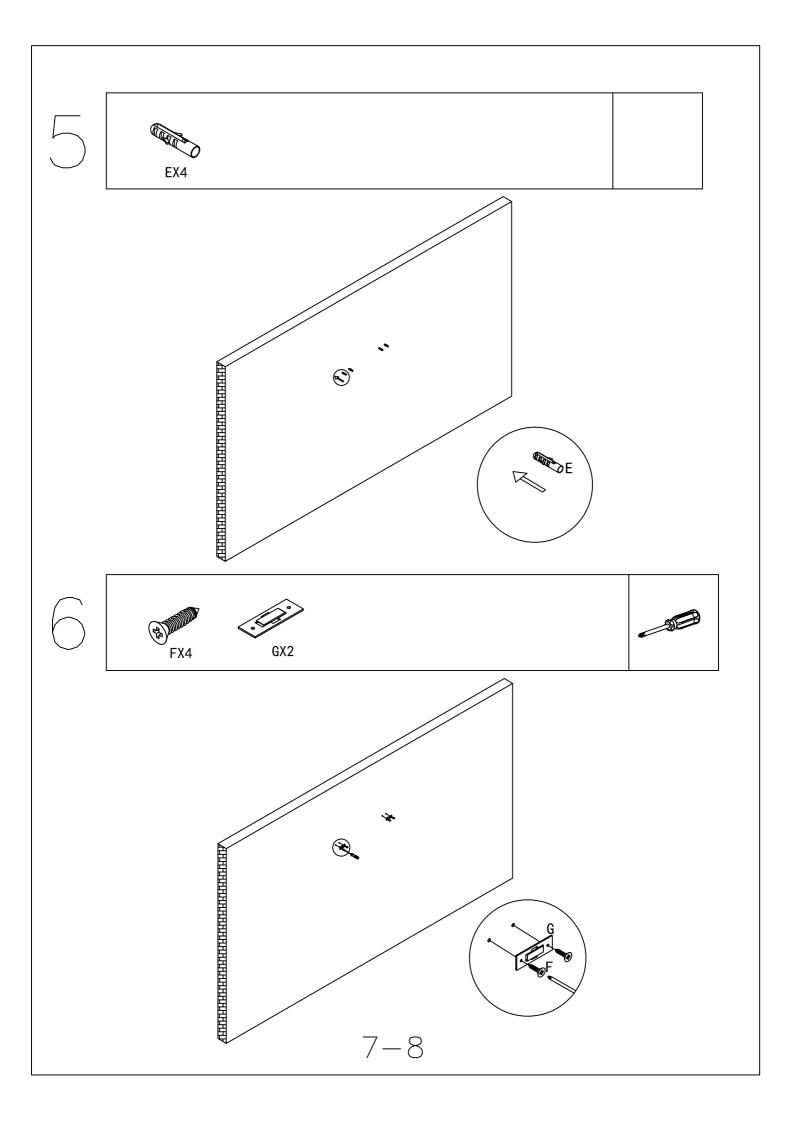

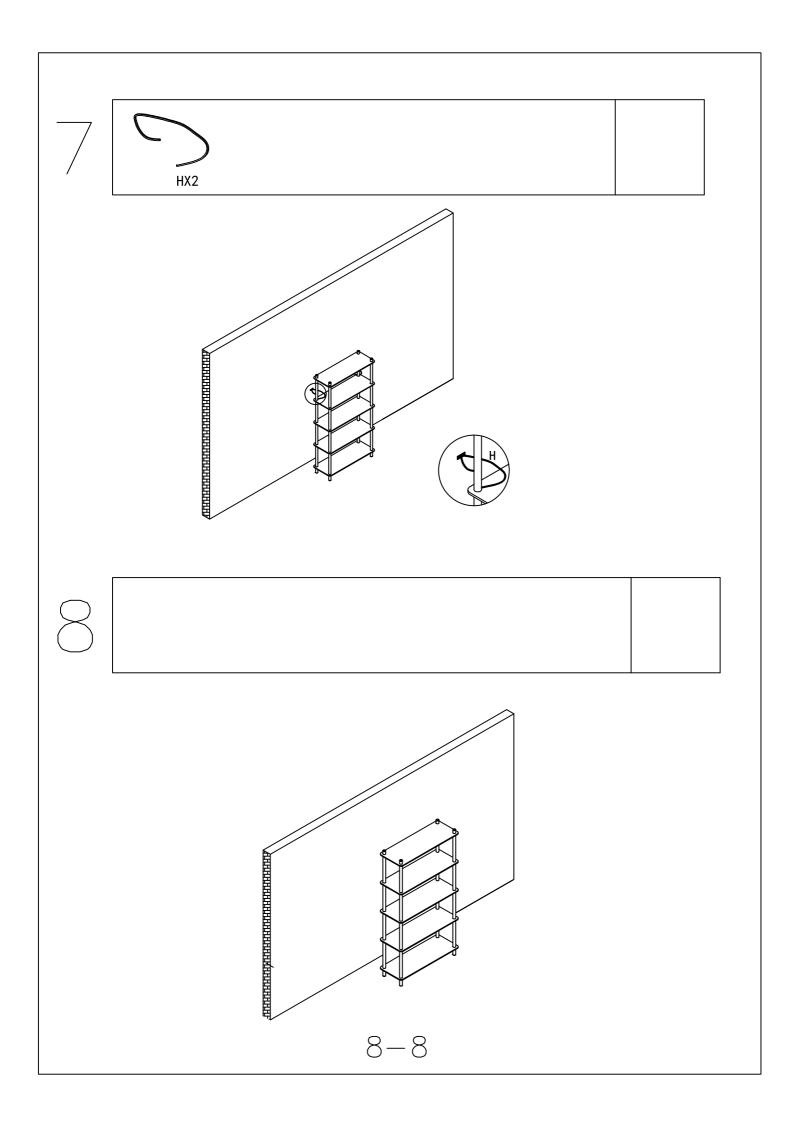

## STANDARD TIP KIT INSTRUCTIONS

### FITTINGS AND PARTS CHECKLIST


Item	Description	QTY	Item	Description	Qty
аа	Mounting Plate 🕬	X2	сс	Flat head screw 🍧	x4
bb	Nylon strap	x2	dd	Plastic wall plug	x4


#### **Notice: Important Warning**

Notice:To prevent injury and property damage from unexpected tipping of furniture,we highly recommend installation of the anti-tip kit included with this product.

Attaching furniture to wall with anti-tip kits

- Determine where the piece is to be placed and mark location on the wall for the mounting bracket screw holes. 1. They should be placed approximately 1" below the top on the back of the piece of furniture.
- 2. Drill the hole and use the appropriate wall plug that is suitable for your walls composition. Warning:Before drilling check wall for hidden pipes and cables.
- 3. Attach the mounting bracket horizontally to the wall using appropriate fastener, through the holes in the bracket and 2 wall plugs that are suitable to your wall and then tighten securely.
- Lace the nylon strap down through the brackets and shelf. Slide the thin end of the strap through the receiving end on 4. the nylon strap.Pull to tighten the piece of furniture snug against wall.

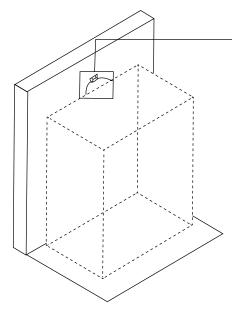

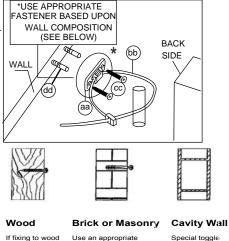

Make sure that it Wall plug provided you wall plugs are are sure your wall is needed Seek expert advice

#### CARE INSTRUCTIONS:

1. Hardware may loosen overtime, Periodically check that all connections are tight and re-tighten as necessary.

isn't chipboard

as screws can easily pull away from the core

structure

sound

2. Wipe with a soft,dry colth.To protect finish,avoid the use of chemicals and household cleaners.