


ASSEMBLY INSTRUCTION

Wesley Chunky Coffee Table

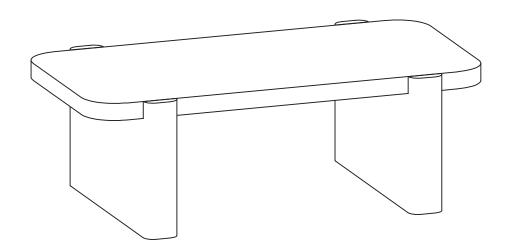

Keep these instructions for future reference

Assemble the furniture on a soft level surface to avoid damaging the furniture or your floor.

Parts of the assembly will be easier with 2 people.

We recommend furniture be assembled near where they will be placed, to avoid moving the product unnecessarily once assembled.

If there is a need to move the furniture, please remove all loose items and have extra hands to help lift the furniture to the desired location. Dragging the furniture will damage both the furniture and the floor.

Regularly check and re-tighten (if necessary) all bolts on furniture that you have assembled yourself.

Care and Maintenance of your Furniture

Always use coasters or placemats to protect the table surface, remove any liquid spills immediately using a clean cloth or kitchen roll sheet & mild detergent.

Do not stand on the Furniture

Tools Required



Parts List

Table Top (P1) x1; Leg (P2) x2.

 
Time Required





30 min

People Required






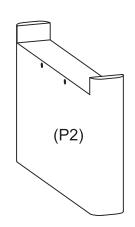

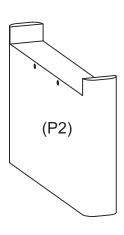


Hardware/Fittings

 

M6x20mm Bolt x 16



 

4 mm Allen Key x 1





90x50x3mm Felt Foot x 4

 





250mm Angle Bar x 4



1




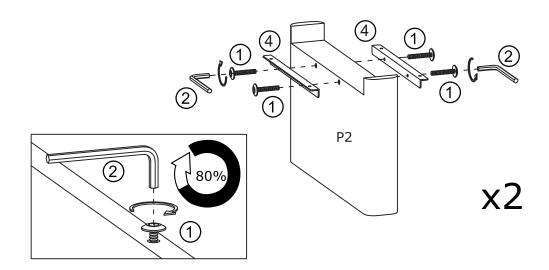

Loosely attach 4 x Angle Bars 4 to 2 x legs (P2) with 8 x Bolts 1 using Allen key 2 .

2




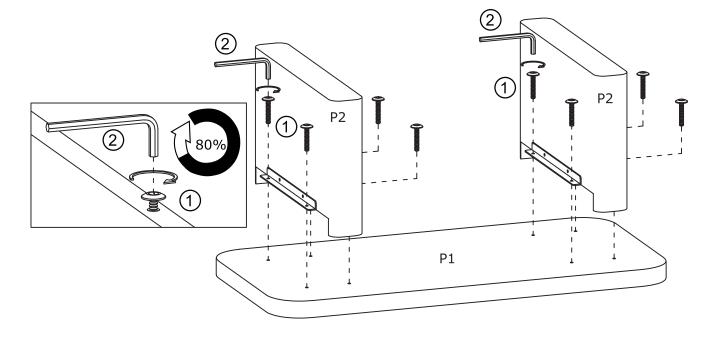

Place Table Top (P1) on a soft covered surface with its underside facing up. Loosely attach 2 x legs (P2) to Table Top (P1) with 8 x Bolts 1 using Allen key 2.

3




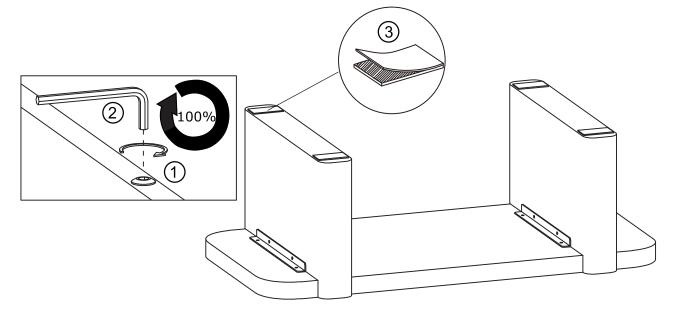

Fasten all Bolts ① with Allen key ②.

Paste 2 x Felt Feet 3 onto each Table leg (P2) as shown.

4

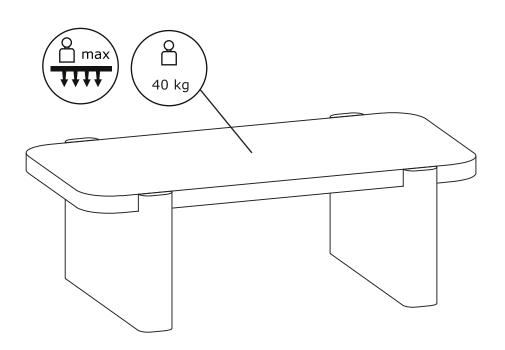

With help, carefully turn the table over. Assembly is complete.