

Paragon 200CM TV Unit - Natural

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- ALWAYS secure it with an anchor device
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.



Important safety instructions

DANGER!

Children have died from furniture tip over.

Toppling Hazard Warning

- ALWAYS secure items with an anchor device
- For safety reasons, we recommend you follow the provided instructions
- When installed properly, the provided hardware may prevent the unit from tipping over unexpectedly.
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer



 
Parts list





 


 
 

 
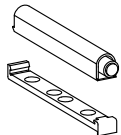 


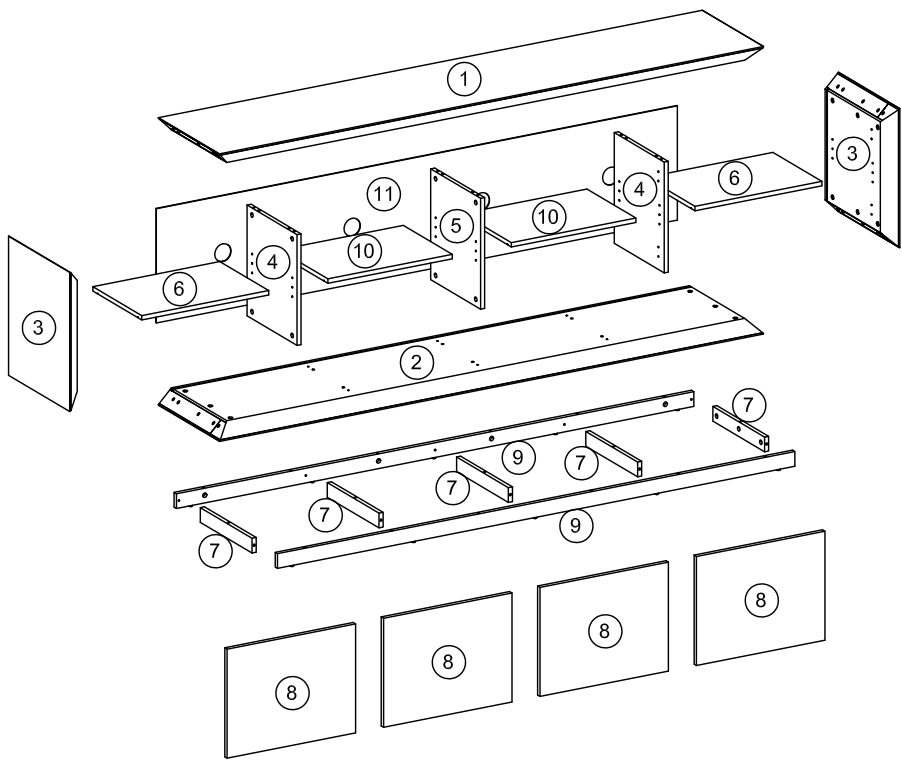
ASSEMBLY INSTRUCTIONS

Paragon 200CM TV unit - Natural
SBPLTVOK

NUMBER OF PEOPLE REQUIRED
FOR ASSEMBLY:
2


TOOLS REQUIRED FOR
ASSEMBLY



A  59 PCS	B  35 PCS	C  35 PCS	D  24 PCS	E  12 PCS	F  8 PCS	G  16 PCS	H  4 PCS
I  4 PCS	J  16 PCS	K  16 PCS	L  4 PCS	M  1 PC	N  1 PC	O  24 PCS	

1.

 Screw 6x Double Bolts (E) into Top Panel (1), then lock using 6x Cam Lock (A) clockwise using screwdriver.
 Paste 6x Cam Shock (O) as shown.
 Screw 6x Cam Bolts (B) into Top Panel (1).
 Attach 4x Push To Open (L) using 8x Screws (F).

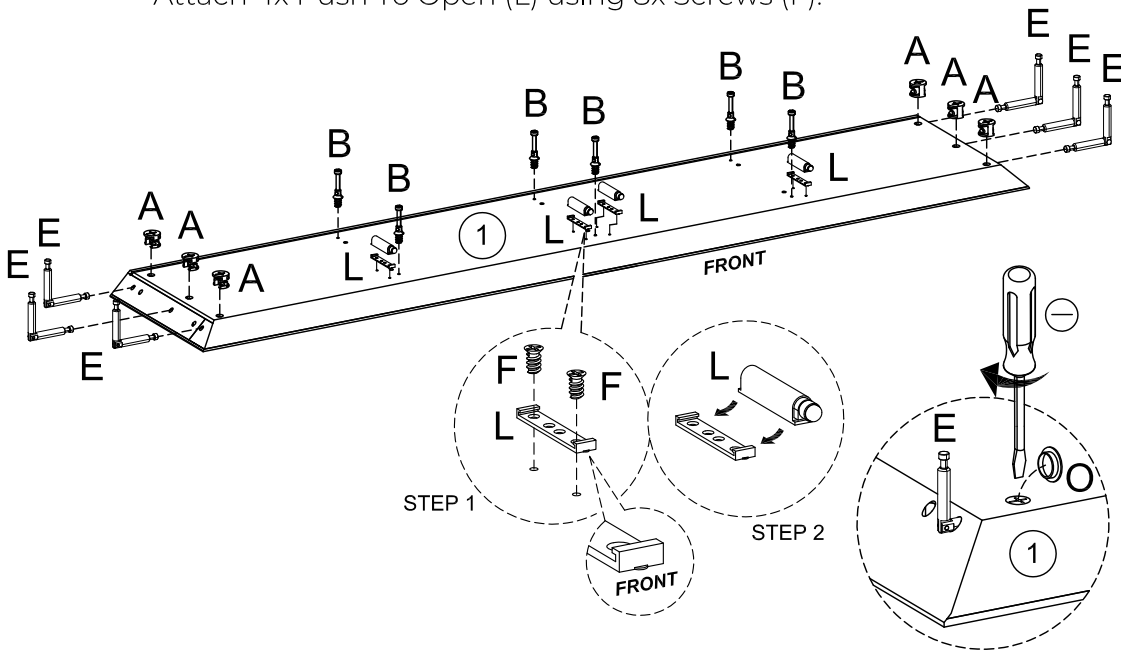


You will need:

A 6 Cam Locks	F 8 Screws
B 6 Cam Bolts	L 4 Push to Opens
E 6 Double Bolts	O 6 Cam Shocks
 1 Phillips head screwdriver	

2.

 
Insert 8x Plastic Dowel (D) into 2x Side Panel (3).

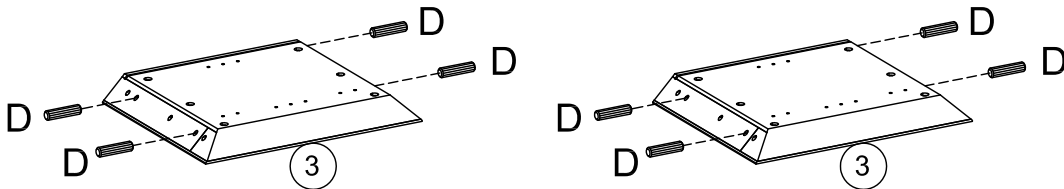


You will need:

D 20 Plastic Dowels

 Insert 8x Plastic Dowel (D) into 2x Side Divider (4).

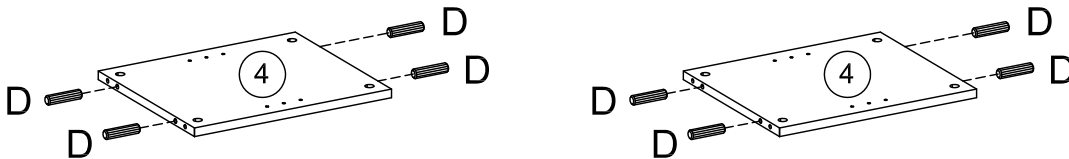

 Insert 4x Plastic Dowel (D) into Middle Divider (5).

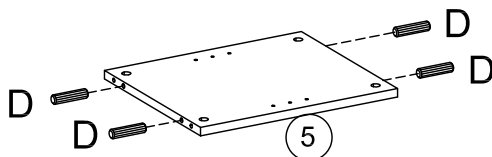


**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
 Contact us on service@templeandwebster.com.au

3.

 Screw 6x Double Bolts (E) into Bottom Panel (2), then lock using 6x Cam Lock (A) clockwise using screwdriver.
 Paste 6x Cam Shock (O) as shown.
 screw 6x Cam Bolts (B) as shown.
 Flip 180° the panel, then screw 13x Cam Bolts (B).

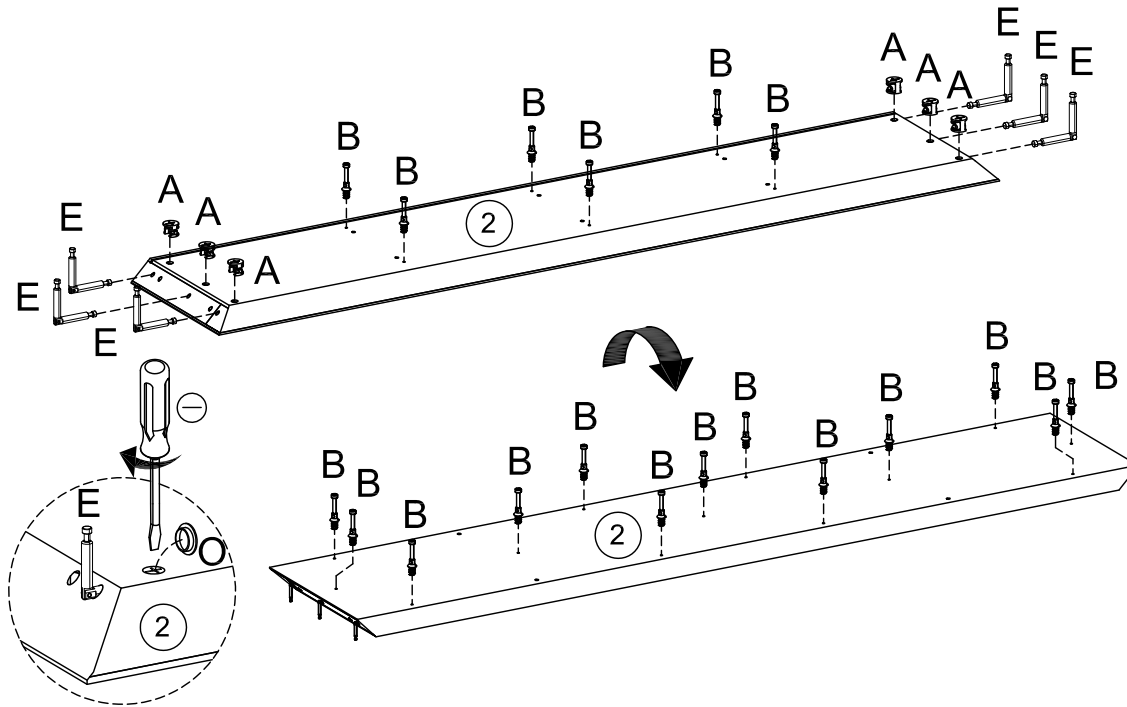

You will need:

A



6 Cam Locks

B



19 Cam Bolts

E

 


6 Double Bolts

O




6 Cam Shocks



1 Phillips head screwdriver

4.

 Screw 10x Cam Bolts (B) into 2x Large Bottom Support (9).
 Insert 4x Plastic Dowel (D) into 2x Large Bottom Support (9),
 If necessary, gently tap the Plastic dowels with a mallet.

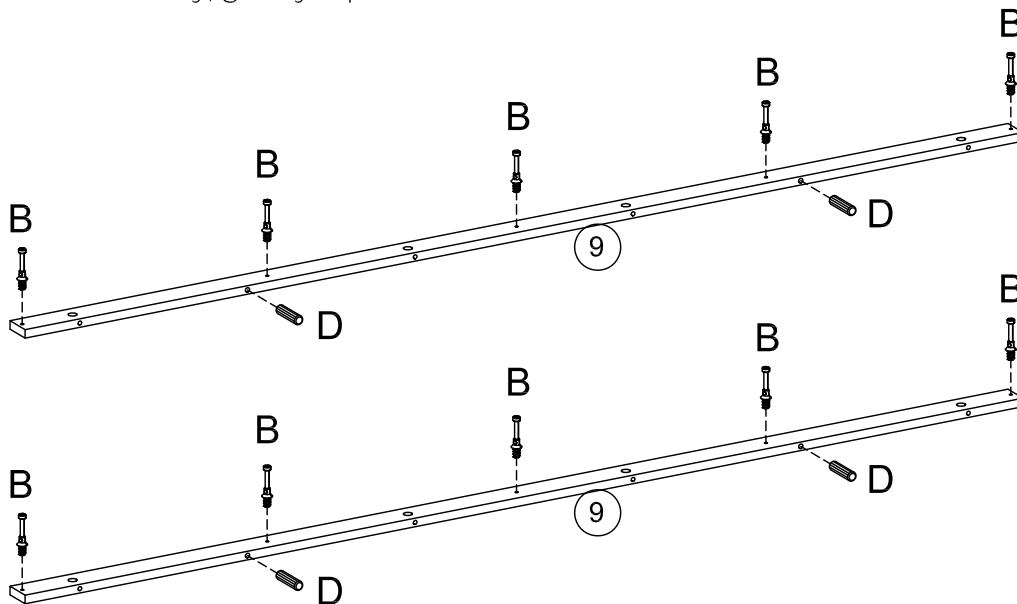

You will need:

B

 


10 Cam Bolts

D



4 Plastic Dowels




1 Phillips head screwdriver

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
 Contact us on service@templeandwebster.com.au

5.

 Attach Divider Left Panel (5) and Divider Right Panel (6) to Fix Shelf (8) and Top Panel Support (9) using 6x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 6x Cam Cover (C) as shown.

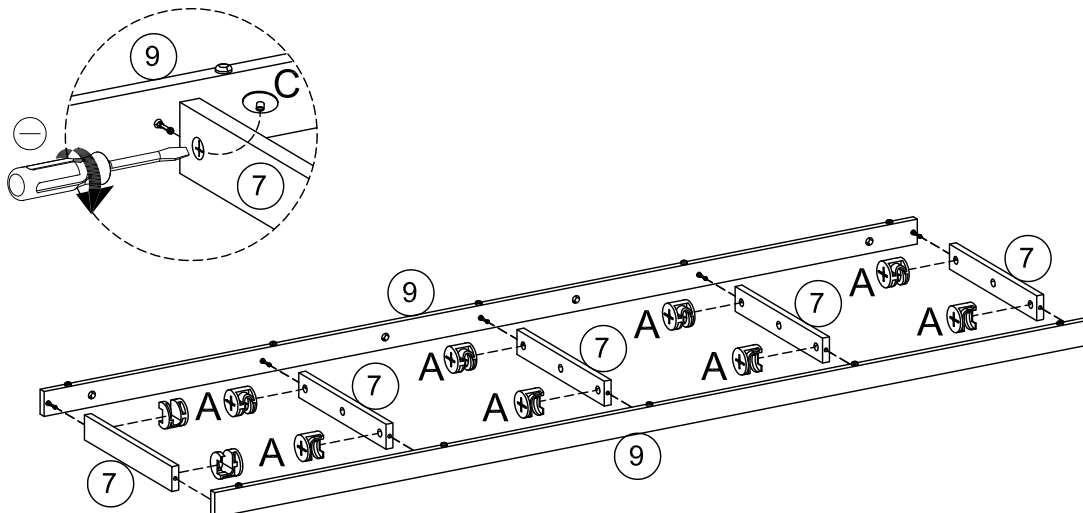

You will need:

A



10 Cam Locks

C



 
10 Cam Covers



1 Phillips head screwdriver

6.

Attach Assembly Bottom Support to Bottom Panel (2) using 13x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 13x Cam Cover (C) as shown.

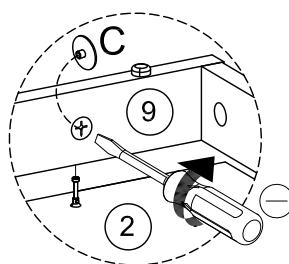

You will need:

A



13 Cam Locks

 
C



13 Cam Covers




1 Phillips head screwdriver

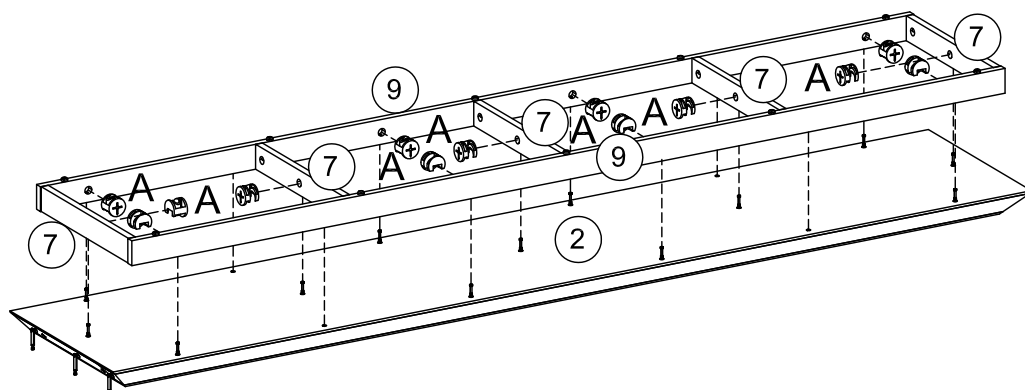

7.

 Attach 2x Side Divider (4) and Middle Divider (5) to Bottom Panel (2) using 6x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 6x Cam Cover (C) as shown.

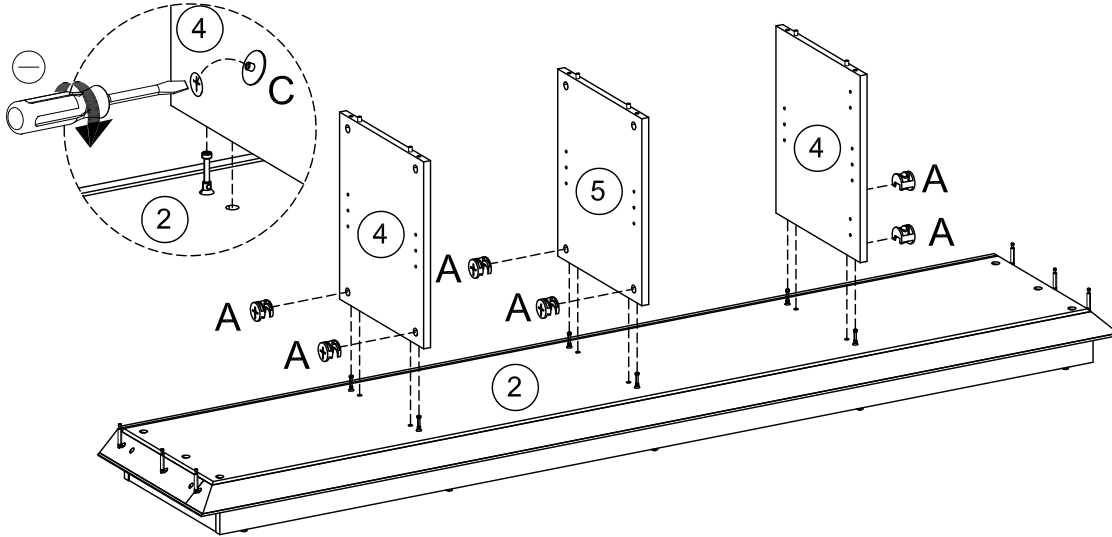

You will need:

A

 


6 Cam Locks

C




6 Cam Covers



1 Phillips head screwdriver

8.

 Attach 2x Side Panel (3) to Bottom Panel (2) using 6x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 6x Cam Shock (O) as shown.

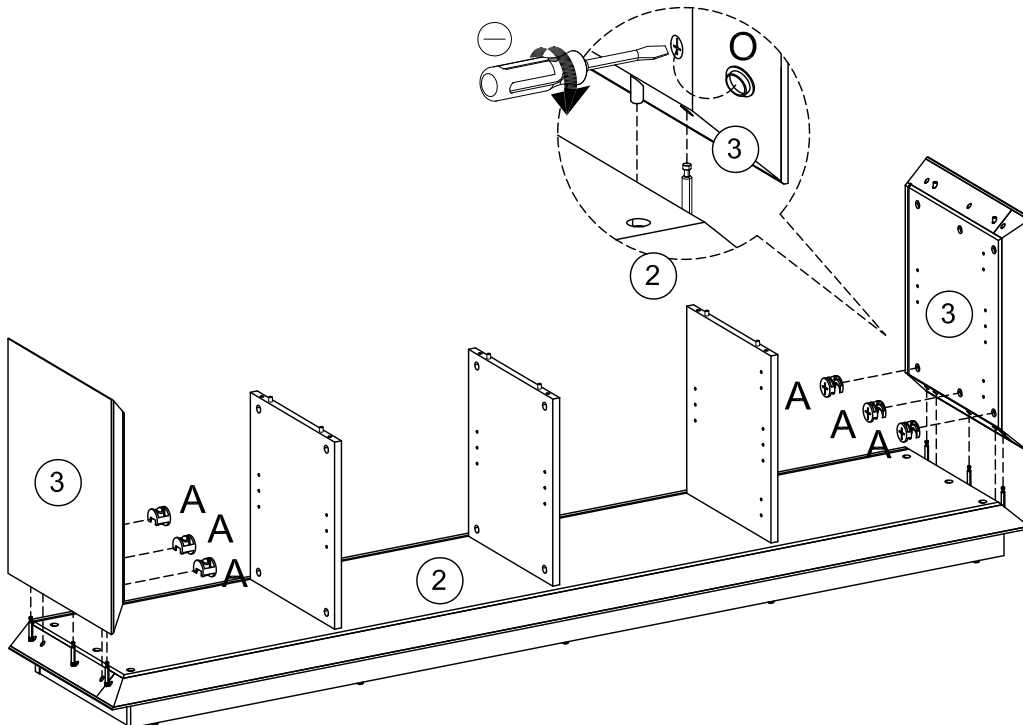

You will need:

A

 


6 Cam Locks

O



6 Cam Shocks




1 Phillips head screwdriver

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


9.

 Insert Back Panel (11) into case assembly as shown.

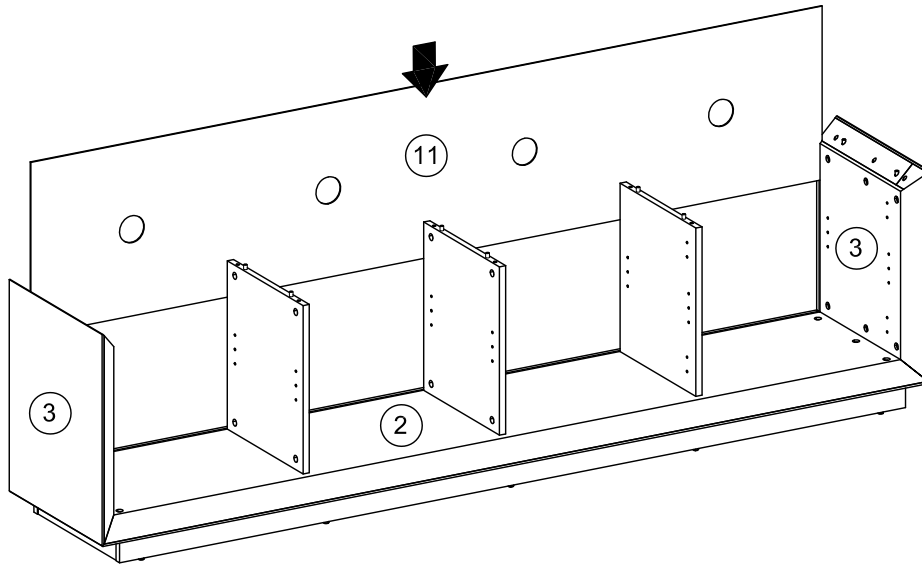

10.

 Attach Top Panel (1) to case assembly using 12x Cam lock (A) as shown, Use a screwdriver to turn the Cam lock clockwise to lock. Paste 6x Cam Cover (C) and 6x Cam Shock (O) as shown.

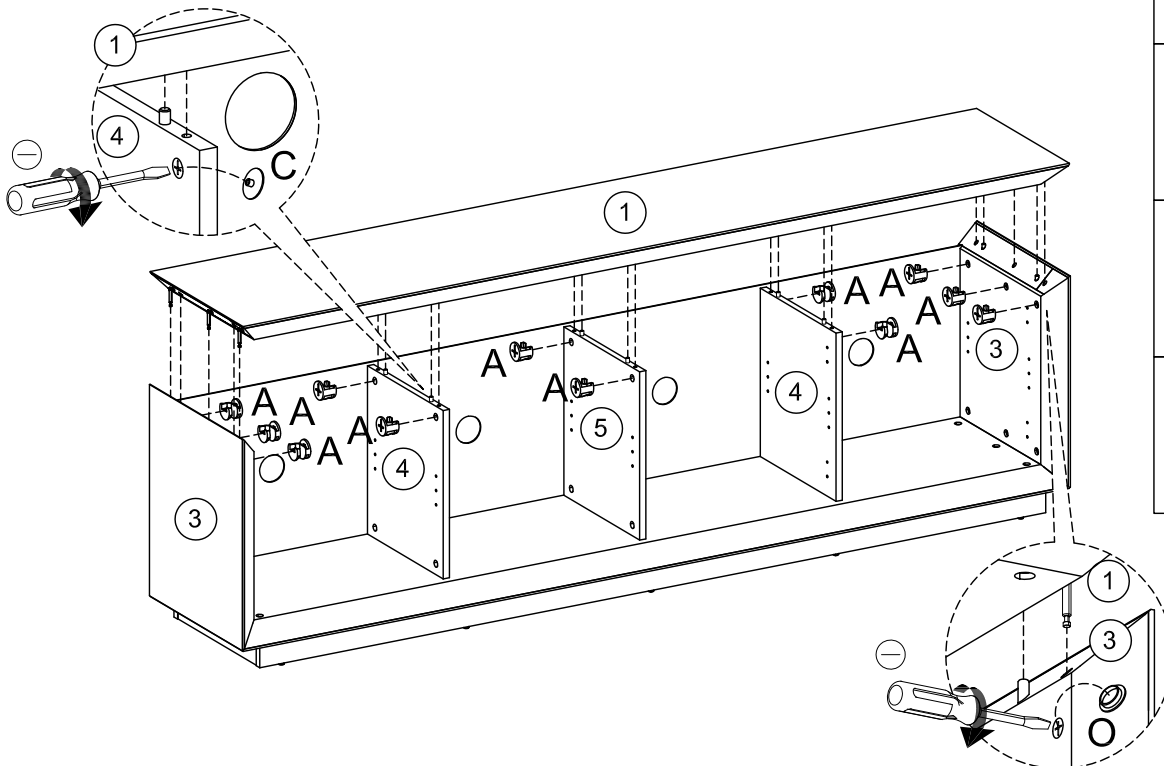

You will need:

A



12 Cam Locks

C

 


6 Cam Covers

O



6 Cam Shocks




1 Phillips head screwdriver

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

11.

 Attach 16x Backply Stopper (K) to Back Panel (11) using 16x Screws (J).
Attach Anti-tip Bracket (N) to Top Panel (1) using Screw (M).

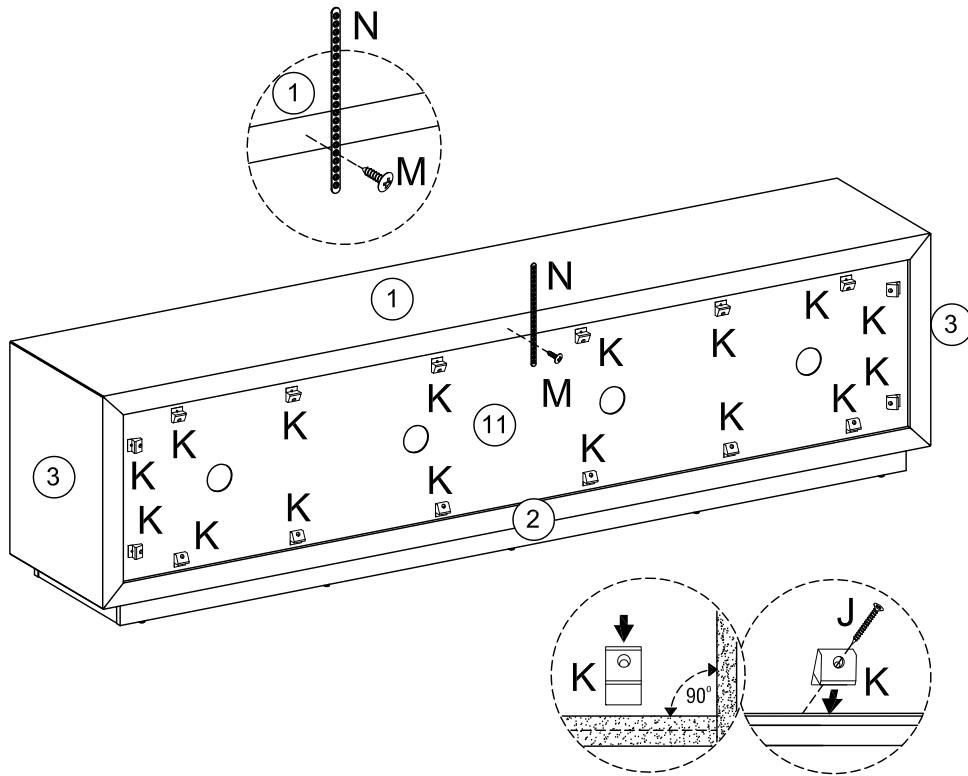

You will need:

J



16 Screws

K



16 Backply Stoppers

M

 


1 Screw

N




1 Anti-tip Bracket



1 Phillips head screwdriver

12.

 Insert 16x Shelf Pin (G) into case assembly as shown.
Insert 2x Side Shelf (6) and 2x Middle Shelf (10) into case assembly as shown.

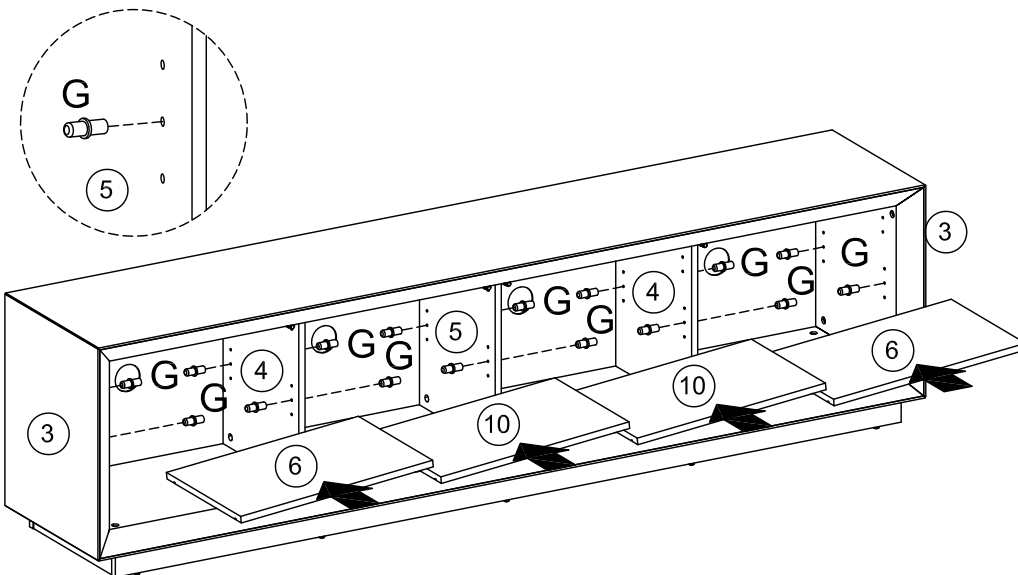

You will need:

G



 
16 Shelf pins

**TEMPLE &
WEBSTER**


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

13.



Attach 4x Full Curve Door Hinge (H) to 2x Door (8) as shown.

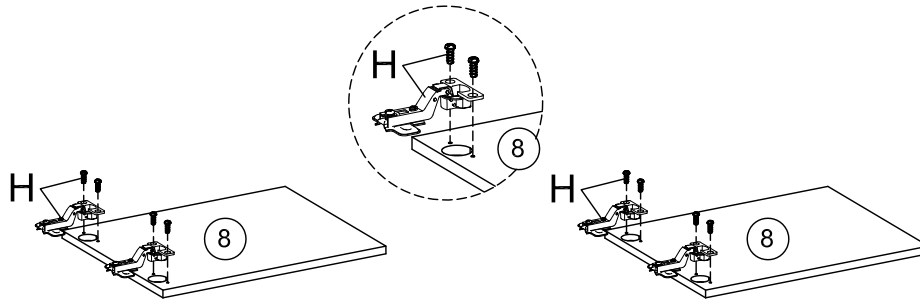

 Attach 4x Half Curve Door Hinge (I) to 2x Door (8) as shown.

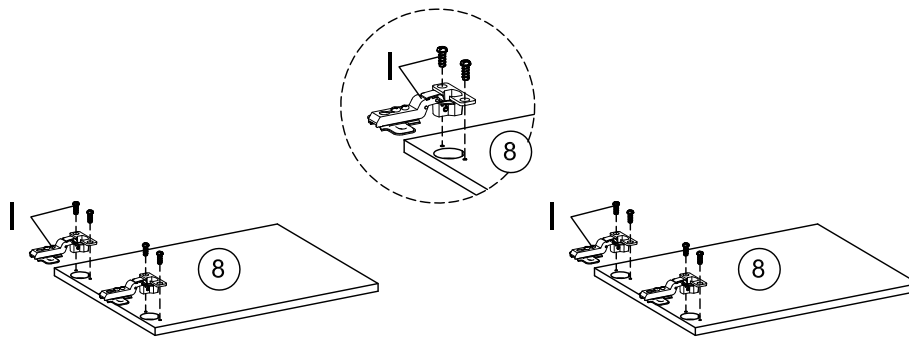



You will need:

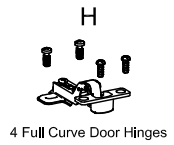  

1 Phillips head screwdriver

14.

  Attach 2x Door (8) to case assembly as shown.
Adjust the Door hinge until fix.

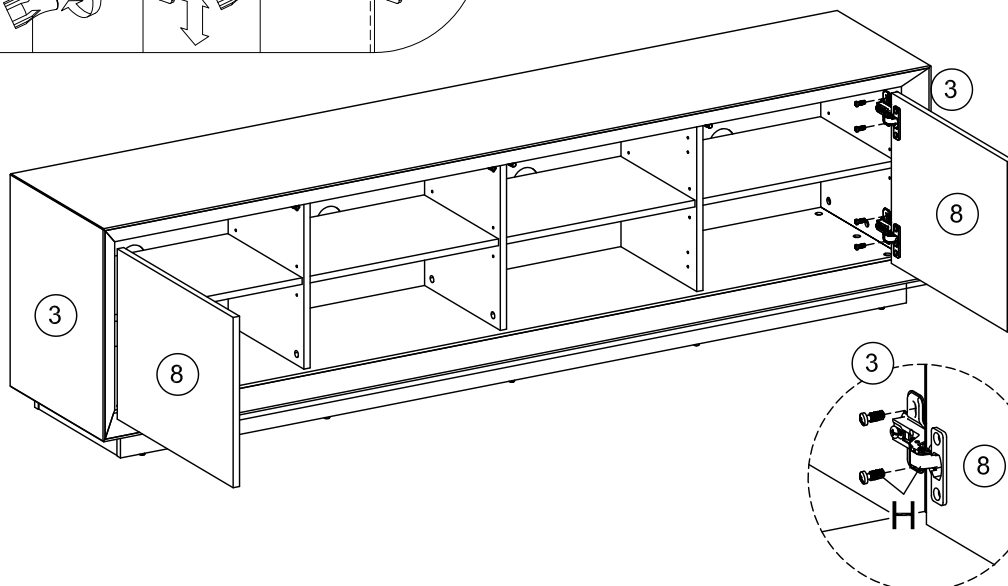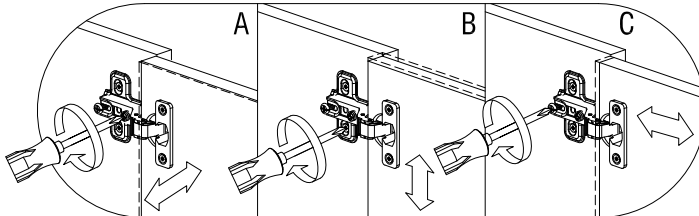


**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


15.

 Attach 2x Door (8) to case assembly as shown.
Adjust the Door hinge until fix.

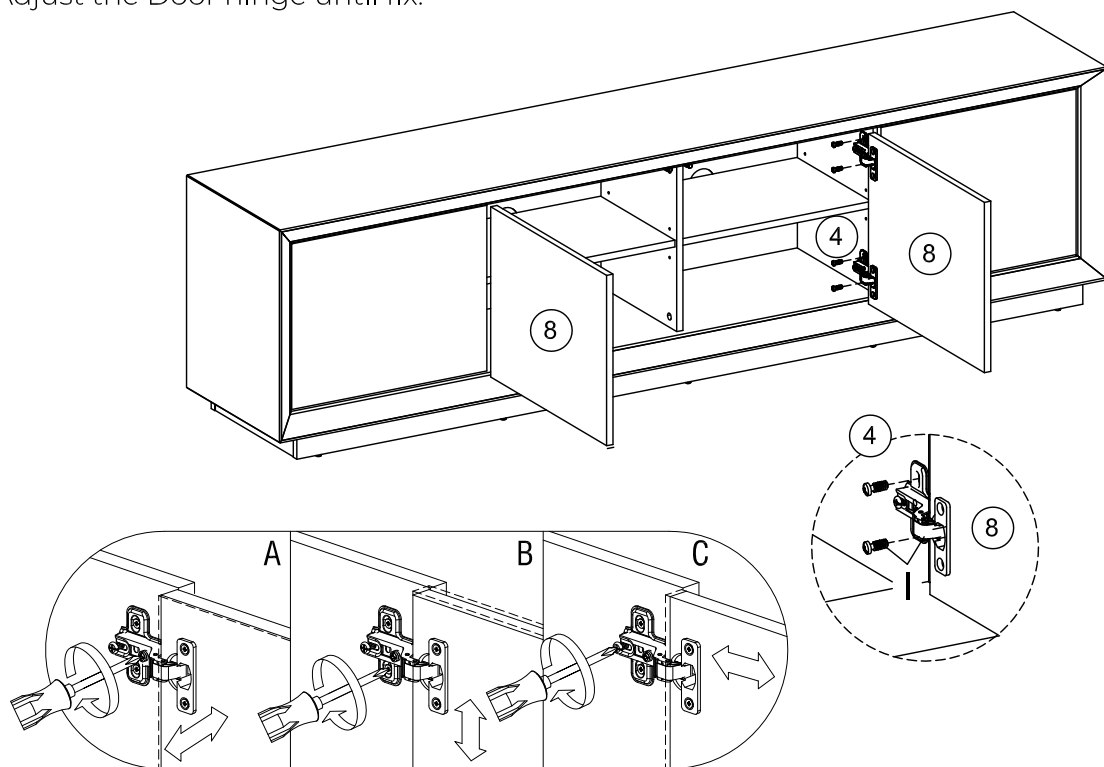

16.

 Adjust Push to Open (L) until fix.

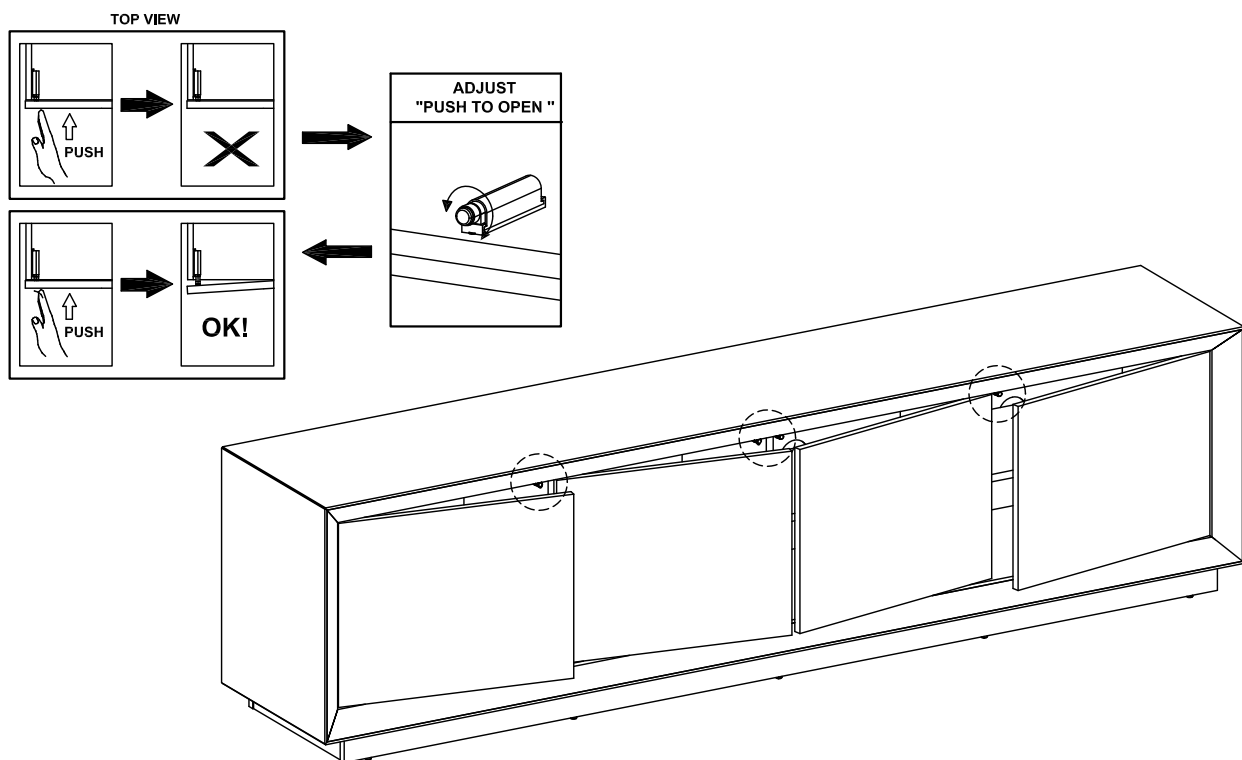

17.

Assembly is complete.

