 


ASSEMBLY INSTRUCTION

Melis Bedside Table

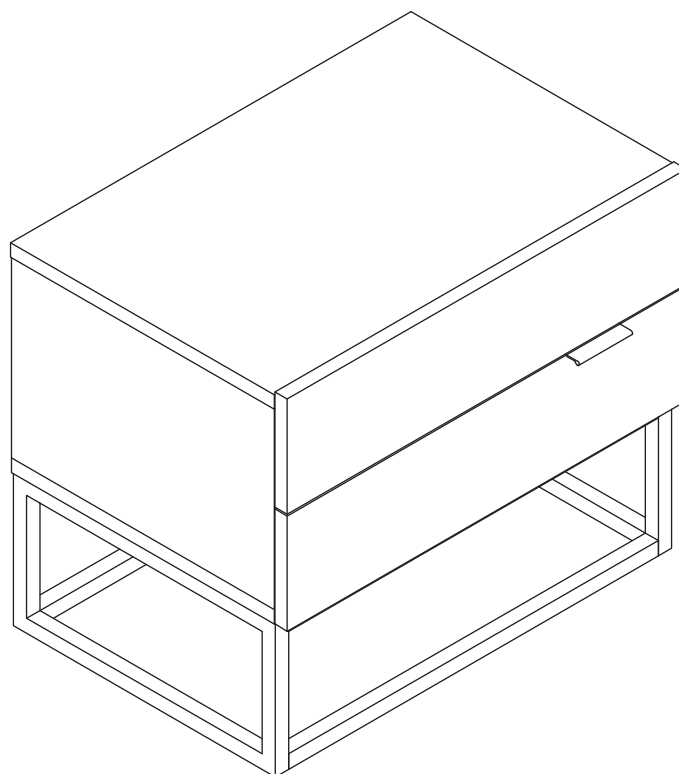

TWO PERSON RECOMMENDED

Read first, enjoy forever

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.
- Never let children climb or hang on drawers, doors or shelves.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.





WARNING:



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer.

For more information, visit <https://www.productsafety.gov.au>

This product has been supplied with a strap. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the straps provided and appropriate fixings.

IMPORTANT:

Regularly check that anchors are securely maintained.

Use safety drawer locks to prevent children climbing.

Stability of tall items may be affected by thick pile carpet or uneven floors.


Do not place unanchored televisions on furniture.

CAUTION:



For your safety when attaching the anchor fixings, please note the following:

- Check for any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson)
- Walls are constructed from different materials, for example, masonry (solid brick) or plasterboard lined cavity walls (hollow). It is important that you use the appropriate wall fixings for your wall type. If unsure, please seek professional advice on how to attach this safety strap to your specific wall.
- Your local hardware store will have the necessary drills and fixings and can offer advice if needed. If in doubt, engage the services of a qualified tradesperson to install and anchor the product.


Tools Required

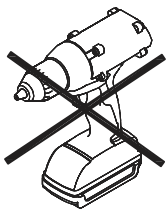

DO NOT USE

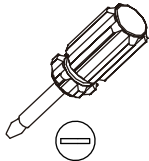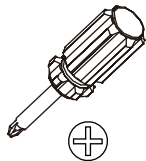


Time Required

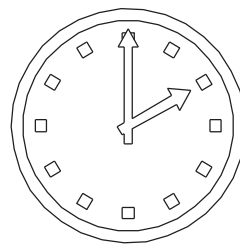 

  

 

 
 
 

 
 

 
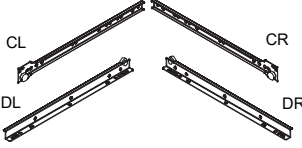 
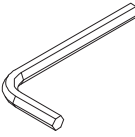 
30 min

Parts List

1. Top panel, x1
2. Bottom panel, x1
3. Left side panel, x1
4. Right side panel, x1
5. Drawer front, x1
6. Left drawer side, x2
7. Drawer back, x2
8. Drawer bottom, x2
9. Drawer front, x1
10. Right drawer side, x2
11. Back panel, x1
12. Metal leg frame, x2
13. Metal support rail, x2
14. Metal support rail, x2

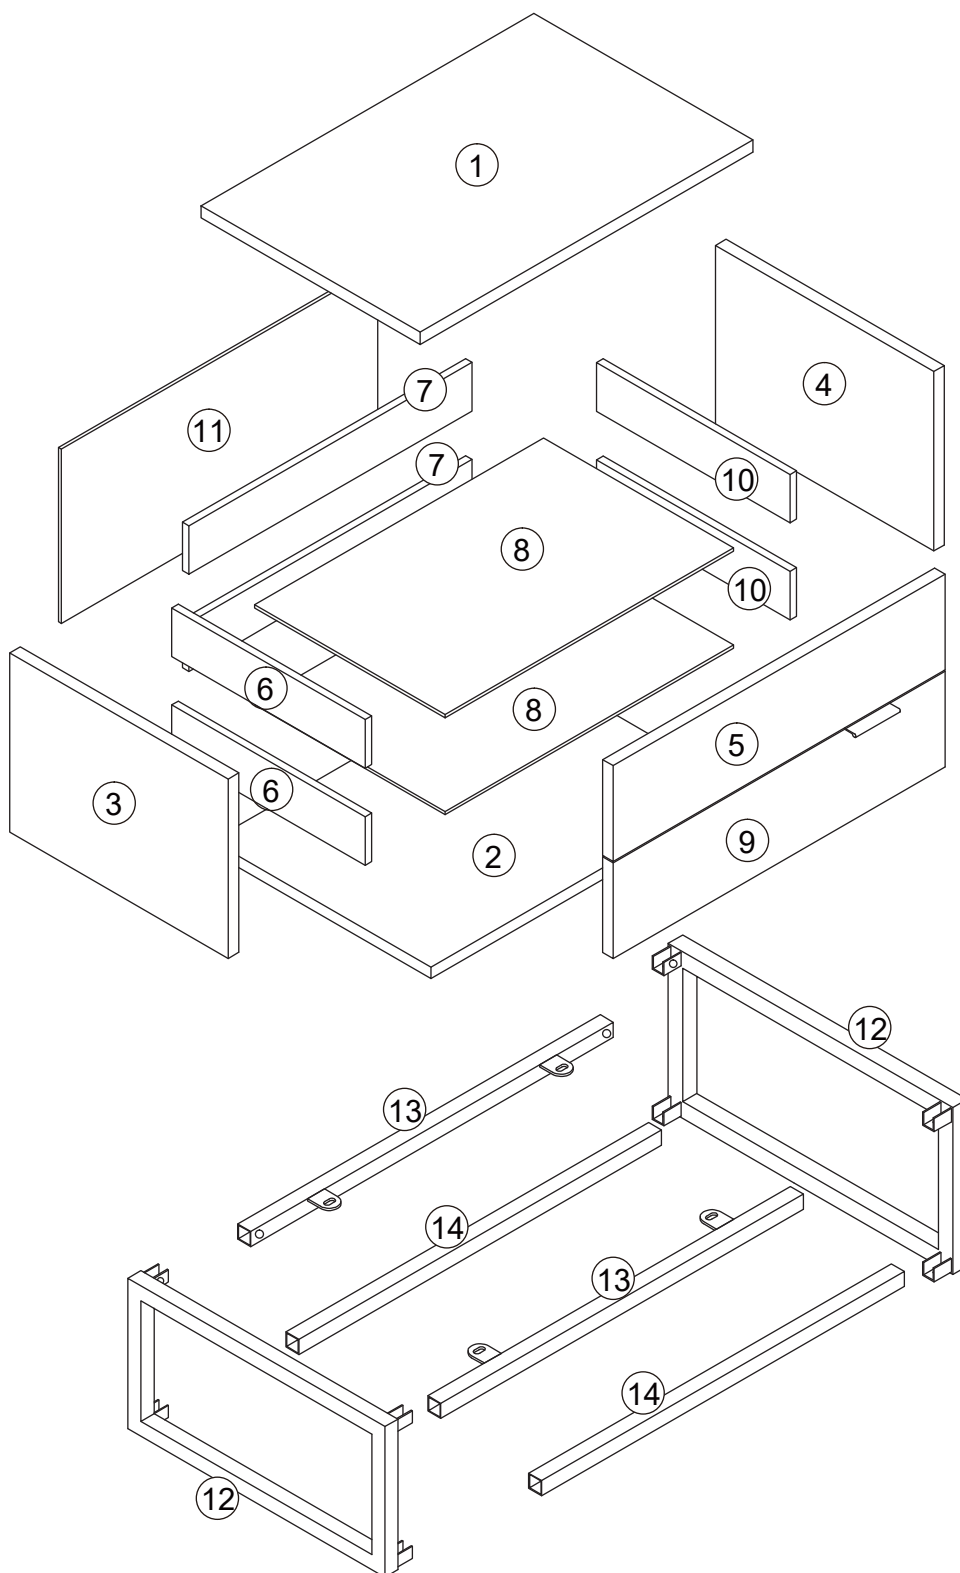




Fittings List

											
A	Handle: 80x30mm	1pc	B	Screw: M4x12mm	22pcs	C	Cam bolt	12pcs	D	Cam nut	12pcs
											
E	Dowel: Ø8x30mm	8pcs	F	Screw: M5x38mm	12pcs	G	Bolt: M6x10mm	12pcs	H	Adjustable feet: M6x15mm	4pcs
											
I	Back panel holder	4sets	J	Fabric wall strap	1pc	K	Washer	2pcs	L	Screw: M4x15mm	1pc
											
M	Drawer runner	2sets	N	Allen key	1pc						

NOTE-


The pack only contains screws for fastening the anti-topple strap(s) itself to the product. Please contact your DIY or hardware store for advice on the correct type of screws/wall plugs for your type of wall.

1

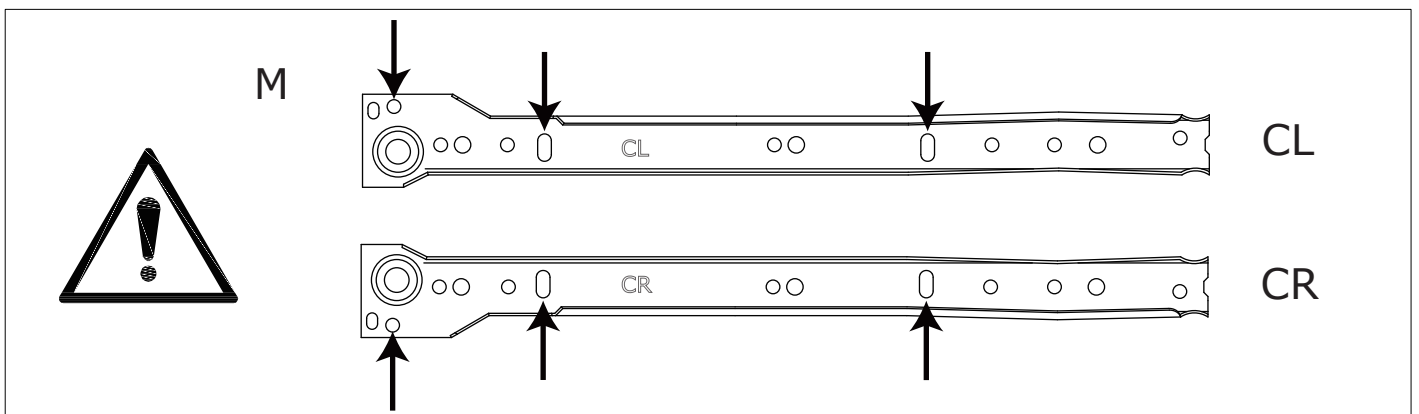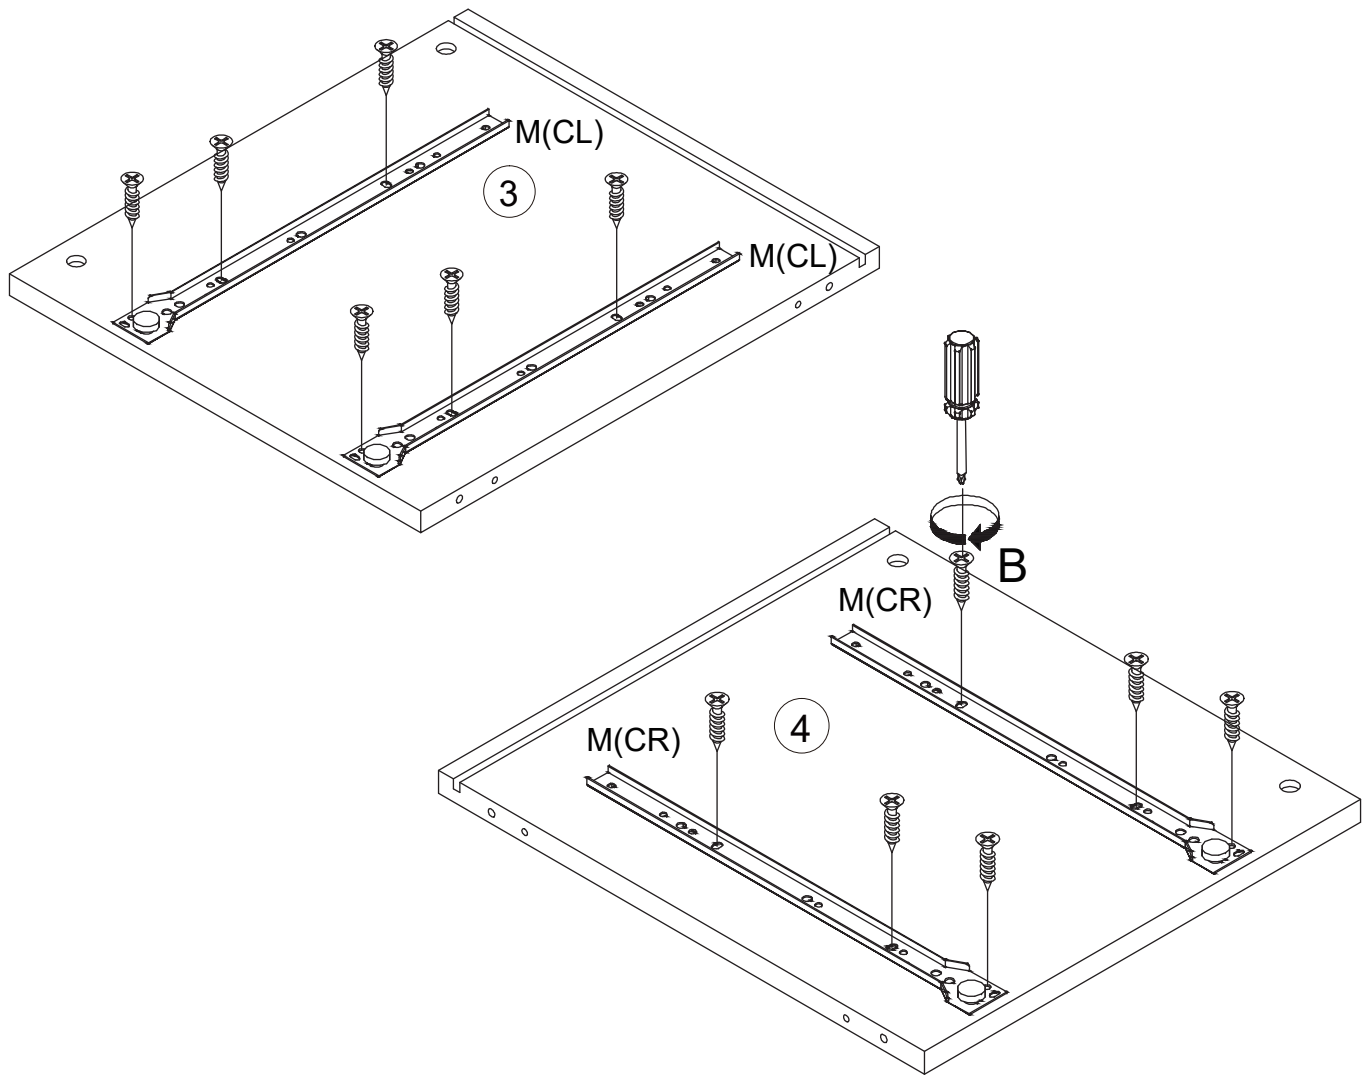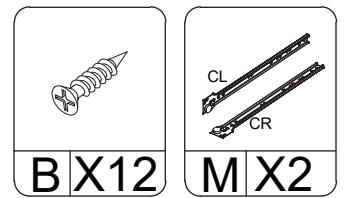


Fix 2 x Slide Tracks M (CL) onto Left side panel (3) with 6 x Screws (B) using a screwdriver.
 Fix 2 x Slide Track M (CR) onto Right side panel (4) with 6 x Screws (B) using a screwdriver.

2

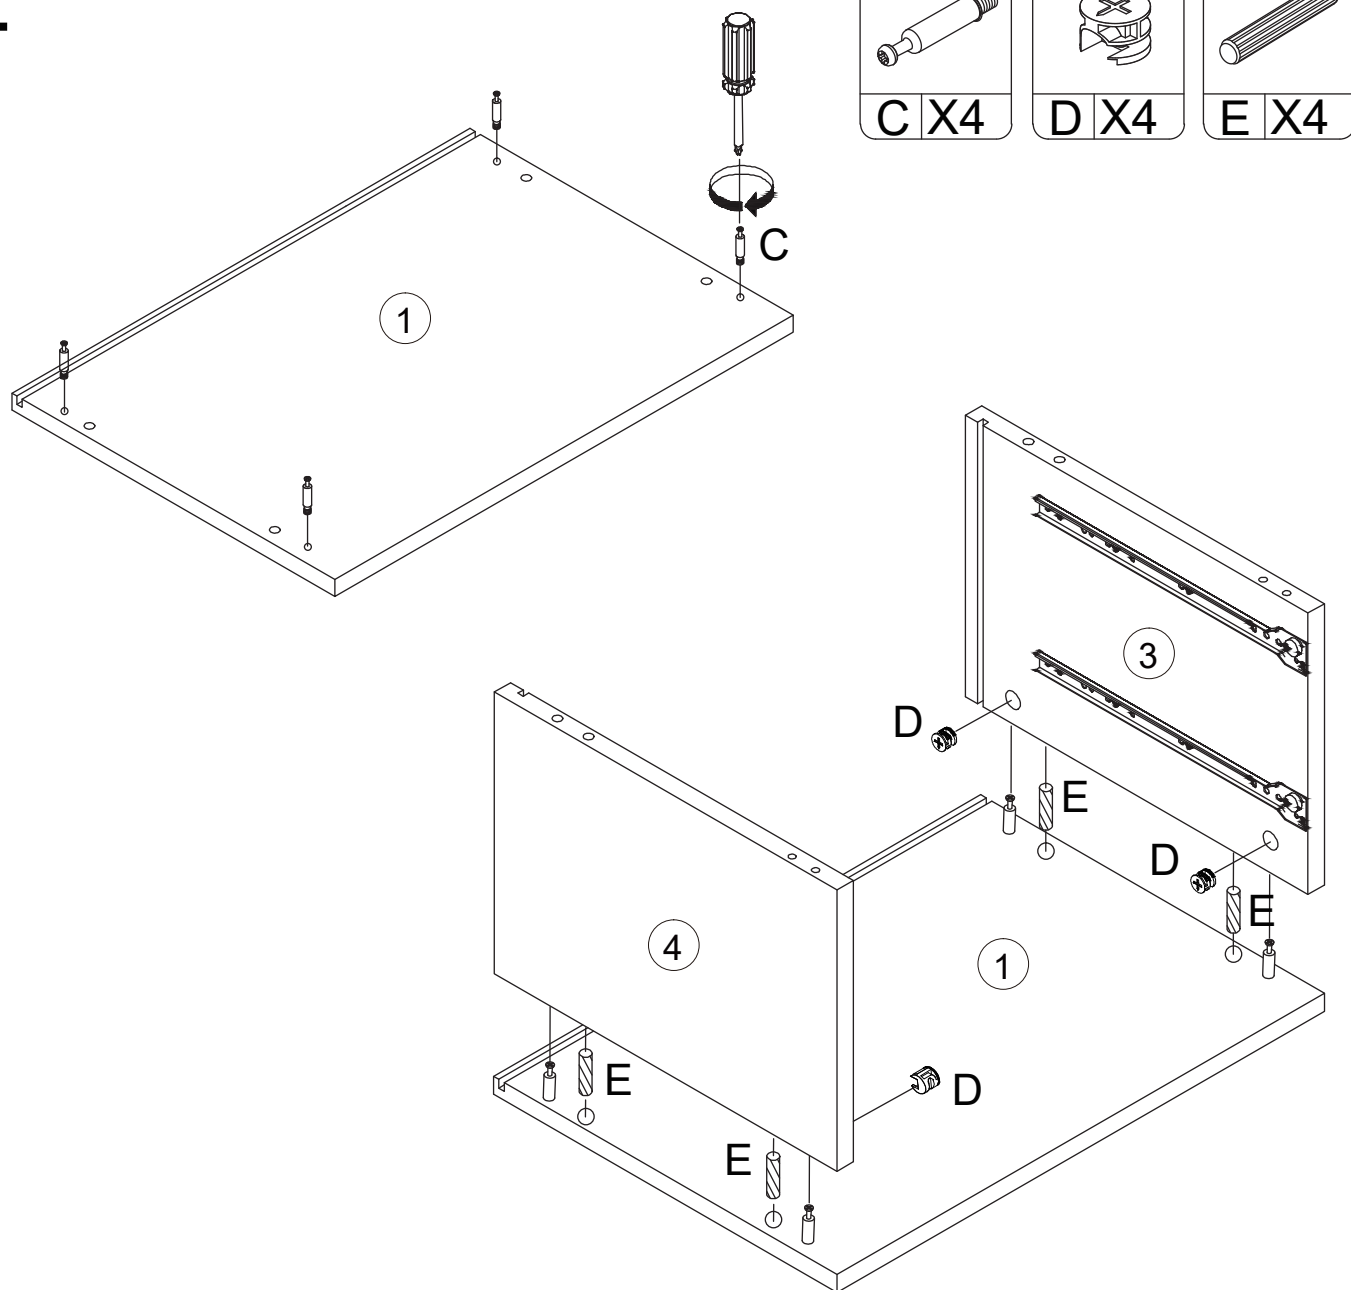


This is how a cam nut works.....

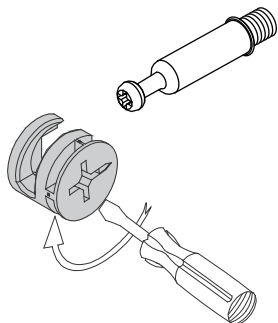

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.




Screw 4 x Cam bolts (C) into Top panel (1) using a screwdriver.
 Insert 4 x Dowels (E) into Left side panel (3) and Right side panel (4) as shown.
 Position the Side panels onto the Top panel (1).
 Insert 4 x Cam nuts (D) into Side panels (3) and (4) as shown.
 Use a screwdriver to turn Cam nuts (D) clockwise to lock.

3

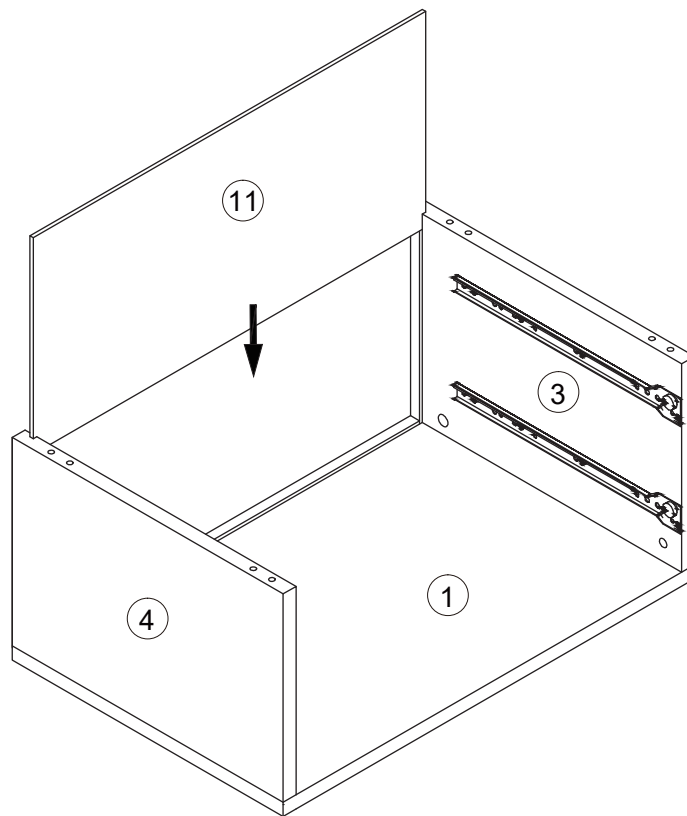


Insert Back panel (11) into the grooves of Left side panel (3), Right side panel (4) and Top panel (1).


4

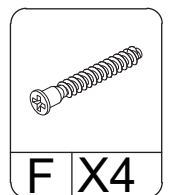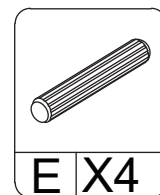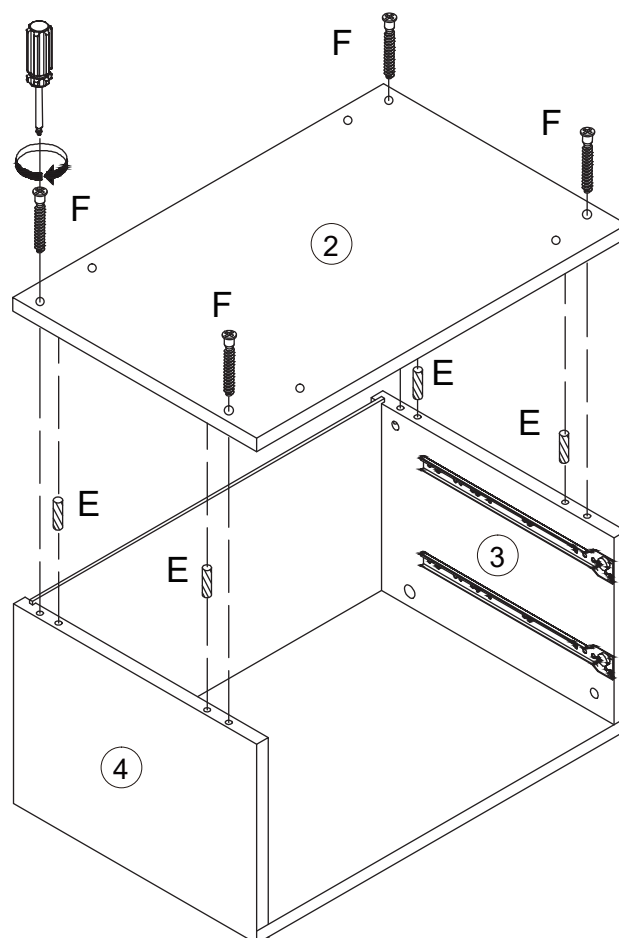

Insert 4 x Dowels (E) into Left side panel (3) and Right side panel (4) as shown.
Attach Bottom panel (2) to the assembled frame with 4 x Screws (F) using a screwdriver.



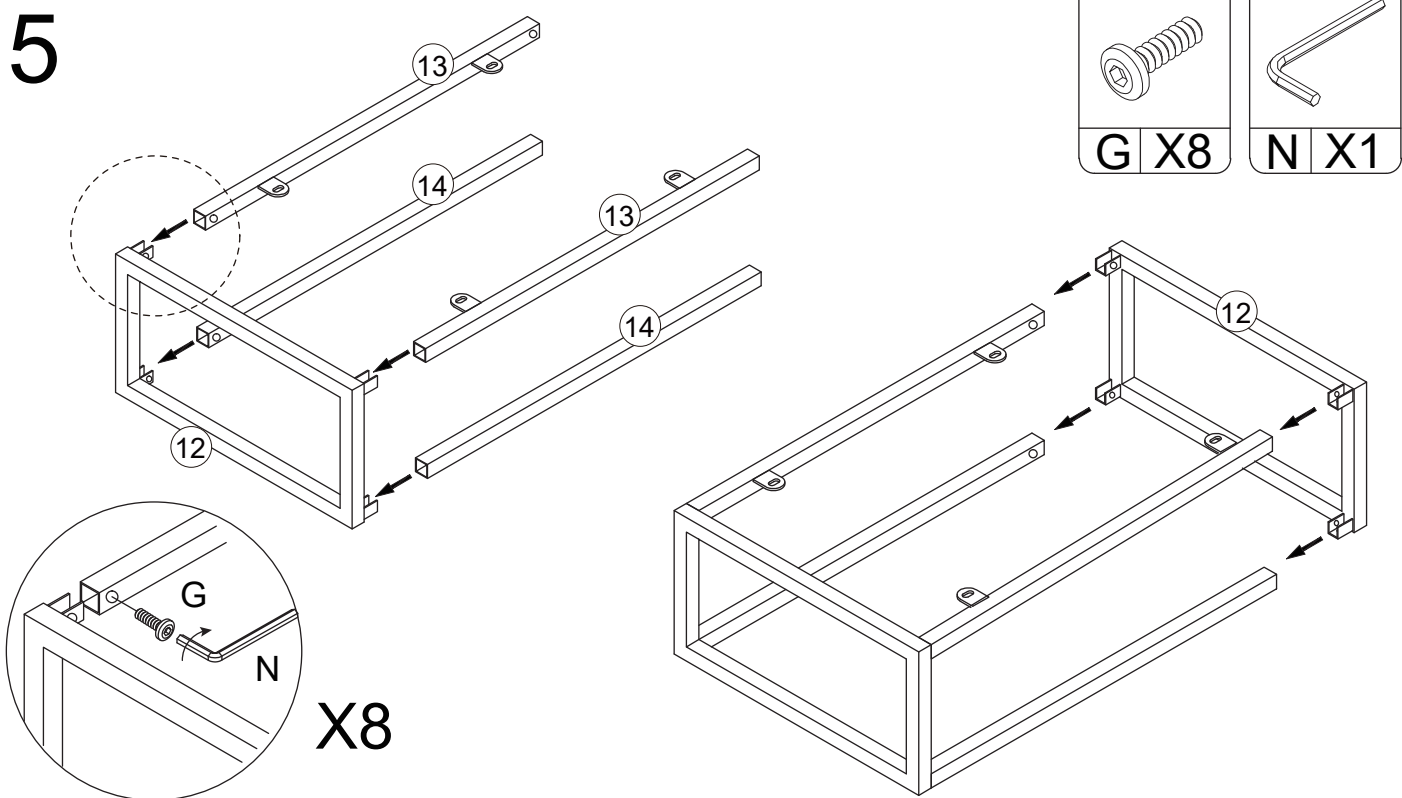


Fix 2 x Metal support rails (13) and 2 x Metal support rails (14) between 2 x Metal leg frames (12) with 8 x Bolts (G) using Allen key (N) as shown.

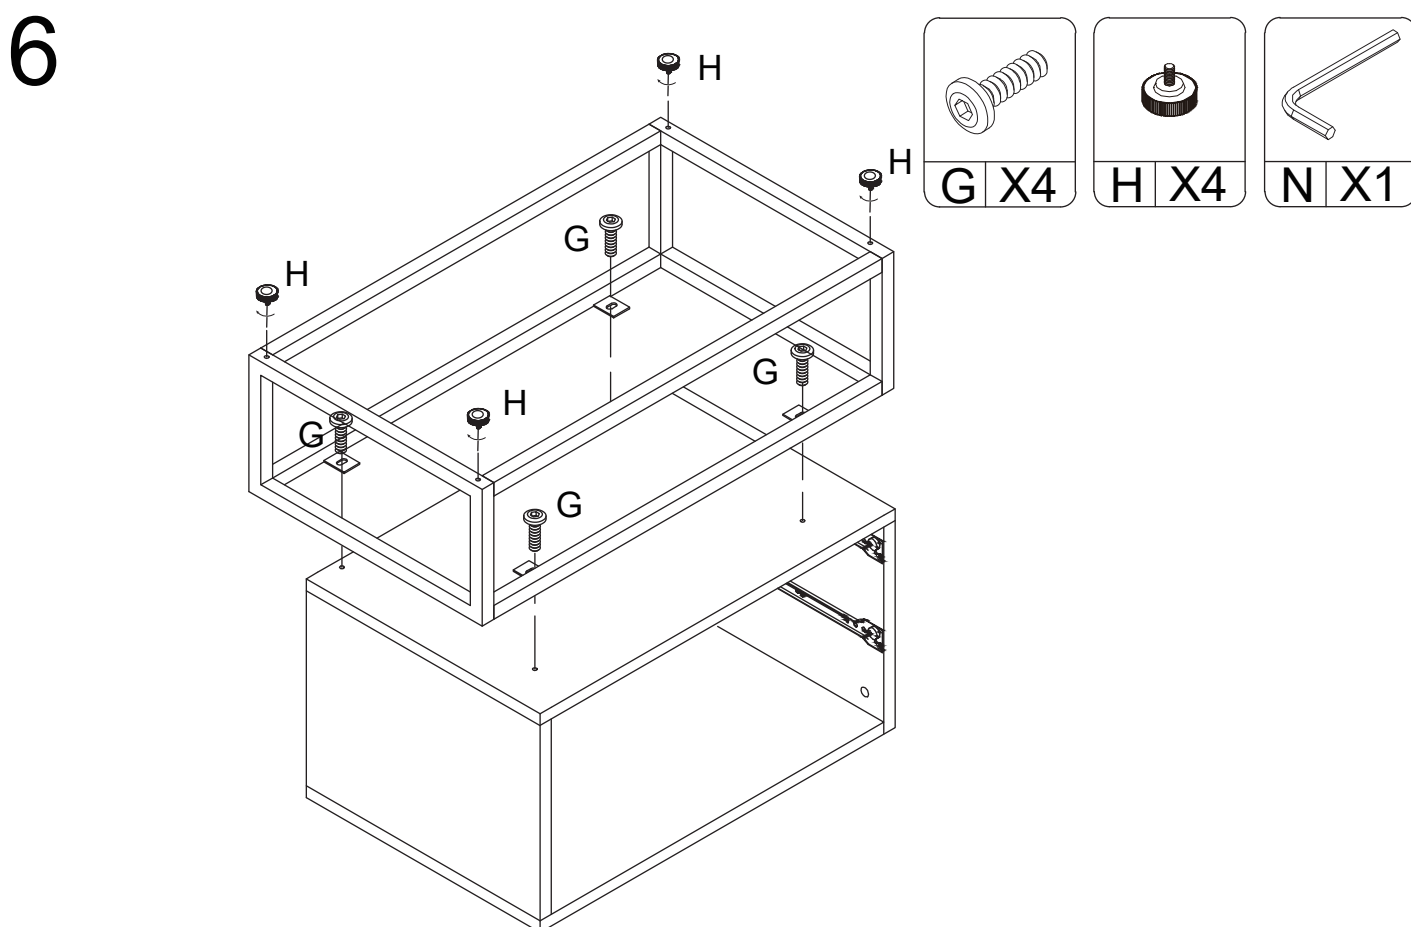


Attach the assembled metal base frame onto the assembled cabinet with 4 x Bolts (G) with Allen key (N).
 Screw 4 x Adjustable Feet (H) into the metal base frame as shown.
 With help, turn the assembled unit upright.

7

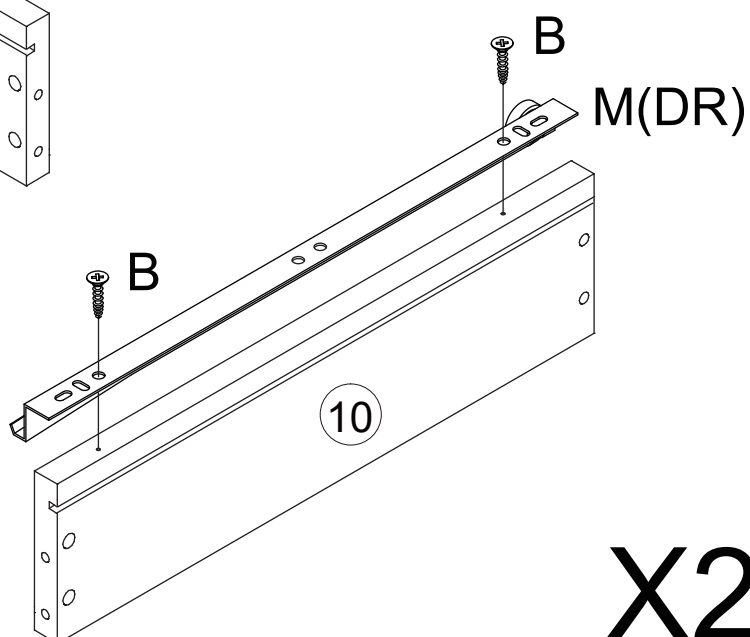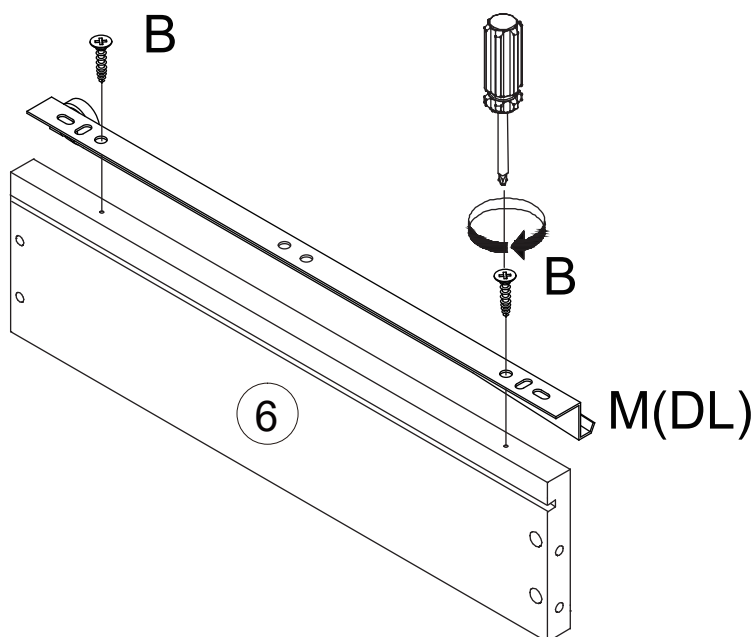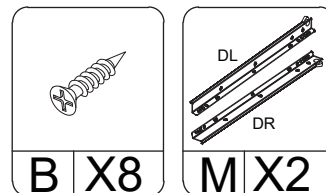


X2

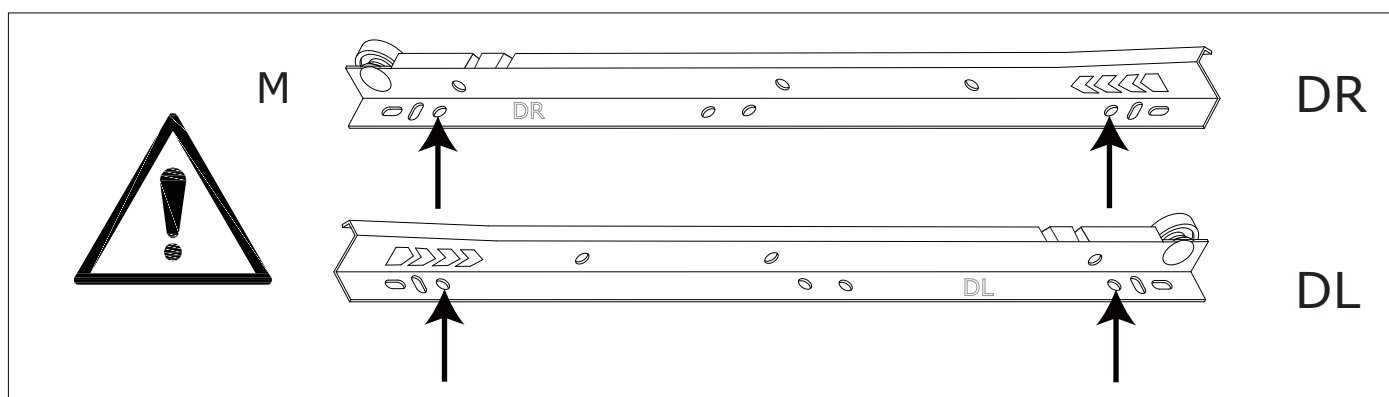


Fix Slider runner M (DL) onto the Left drawer side (6) with 2 x Screws (B) using a screwdriver.
 Fix Slider runner M (DR) onto the Right drawer side (10) with 2 x Screws (B) using a screwdriver as shown.
 Repeat with the remaining Drawer panels.

8

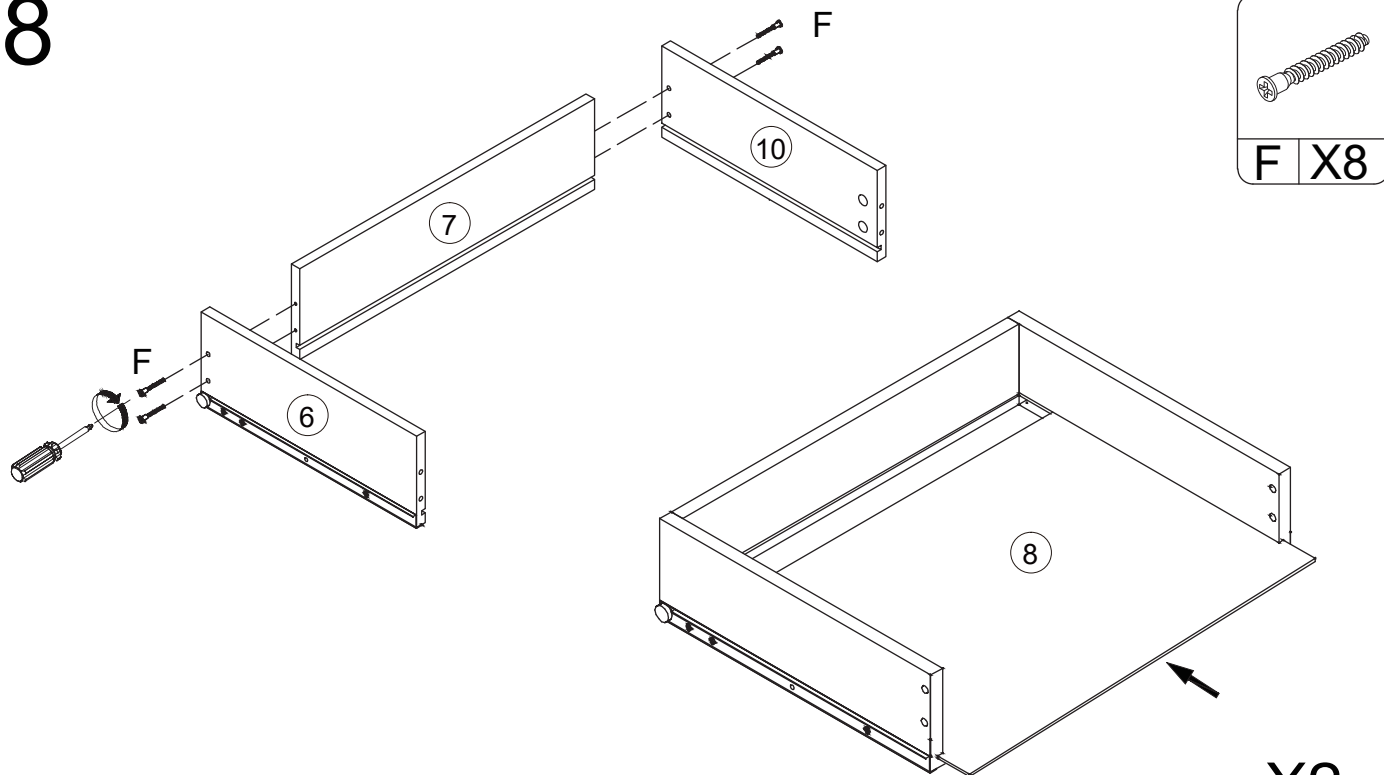




Fix Drawer back panel (7) onto Left drawer side (6) and Right drawer side (10) with 4 x Screws (F) using a screwdriver as shown.
 Slide Drawer bottom (8) into the grooves of Left drawer side (6), Right drawer side (10) and Drawer back panel (7) as shown.
 Repeat with the remaining Drawer panels.

9

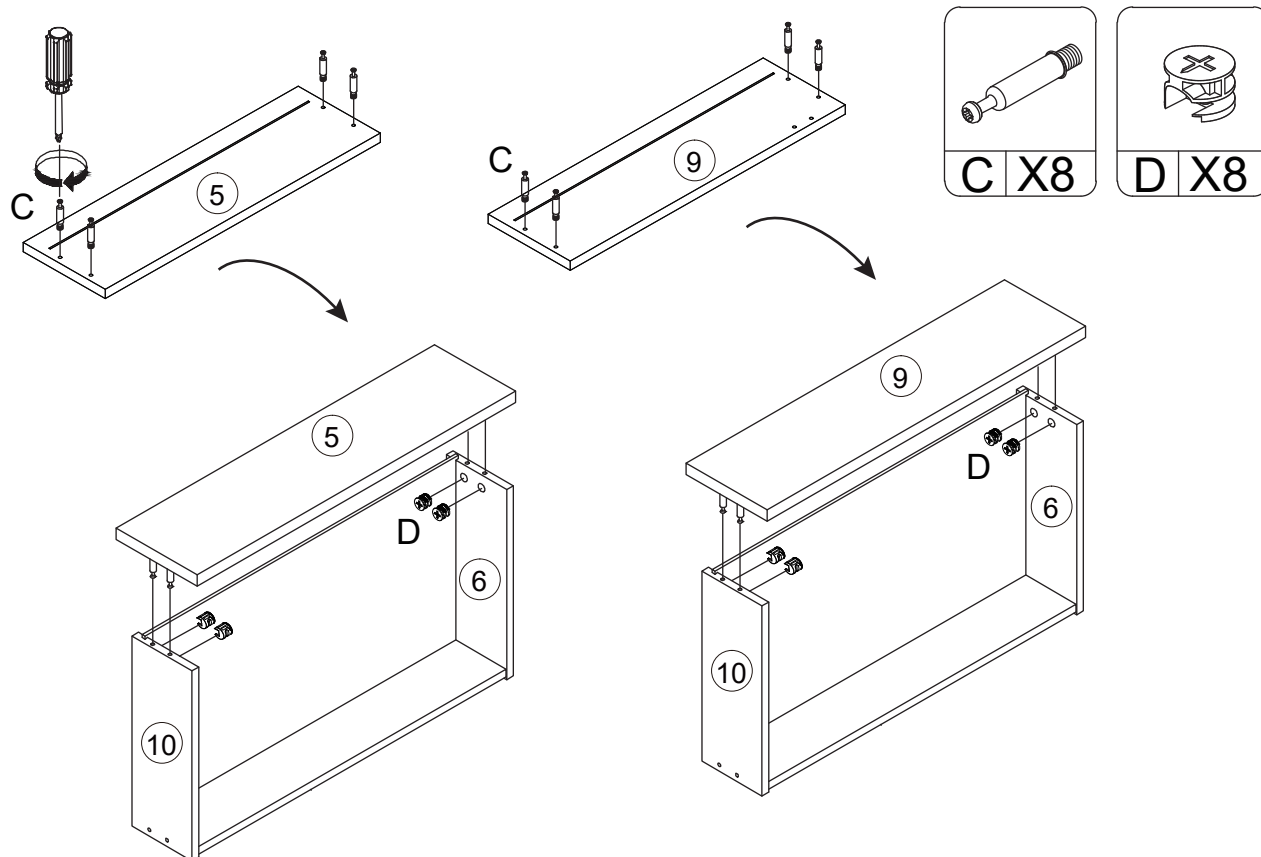



Screw 8 x Cam bolts (C) into Drawer fronts (5) and (9) using a screwdriver as shown.
 Position Drawer fronts (5) and (9) onto Drawer sides (6) and (10).
 Insert 8 x Cam nuts (D) into Drawer sides (6) and (10).
 Use a screwdriver to turn clockwise to lock.

10

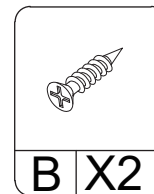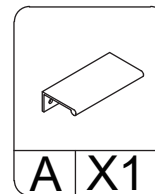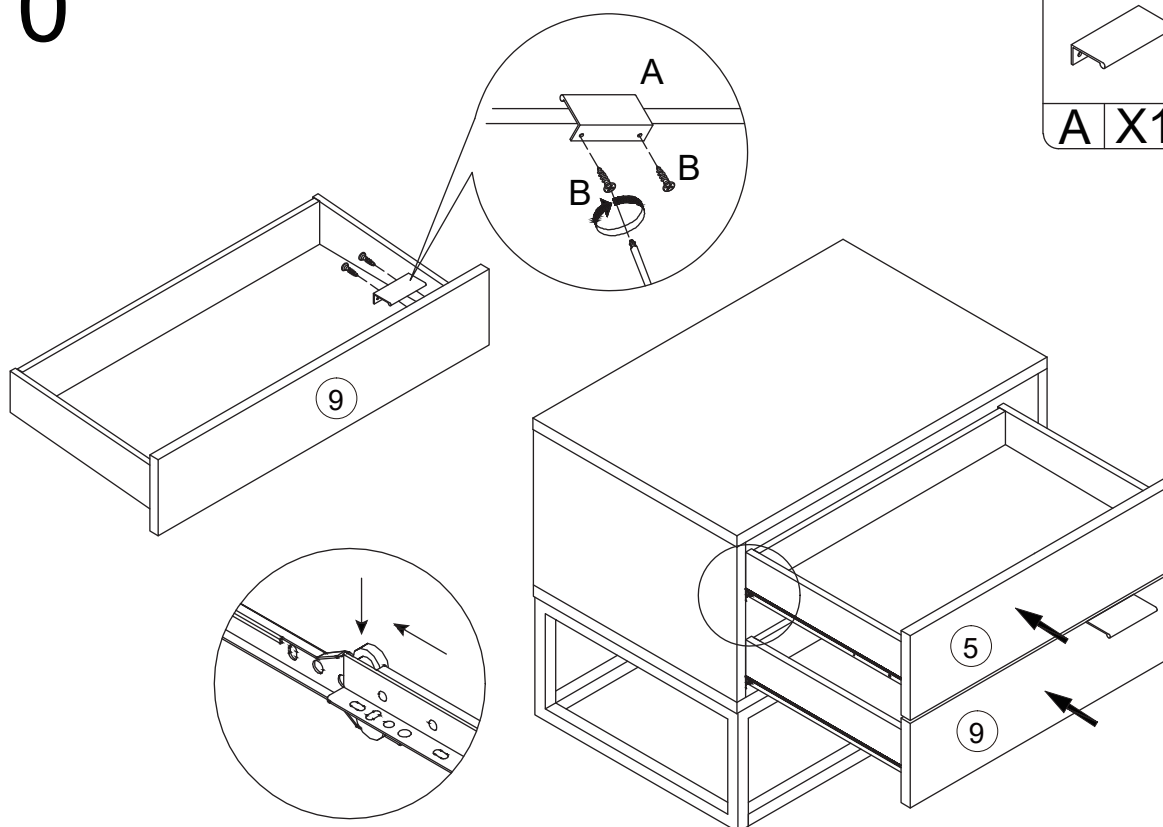

Attach 1 x Handle (A) to Drawer front (9) with 2 x Bolts (B) using a screwdriver as shown.
Slide drawer with Drawer Front (5) onto the top two slide tracks as shown.
Slide drawer with Drawer Front (9) onto the bottom two slide tracks as shown.

11


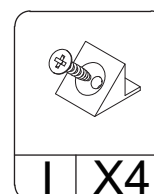
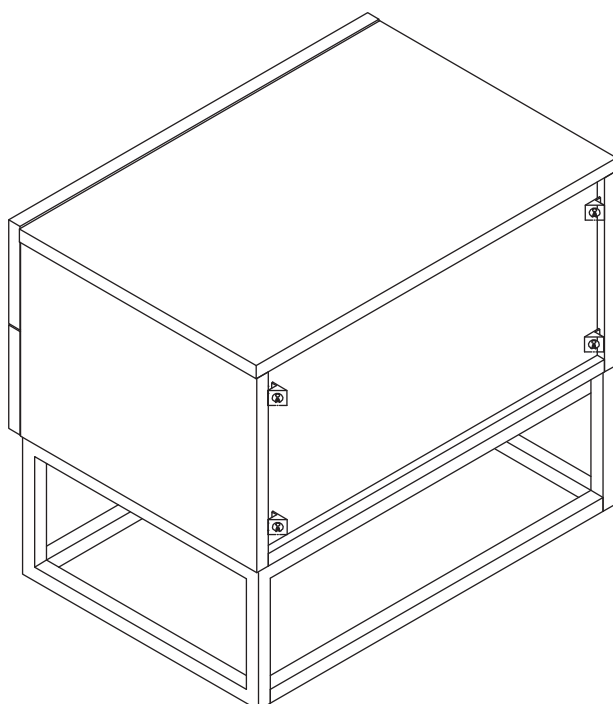


Fix 4 x Back panel holders (I) to assembled unit with 4 x Screws using a screwdriver.

12

NOTE-

We recommend this product to be permanently fixed to the wall with the strap(s) included, to avoid fatal injury in case it topples over. The pack only contains screws for fastening the anti-topple strap(s) itself to the product. Please contact your DIY or hardware store for advice on the correct type of screws/wall plugs for your type of wall.

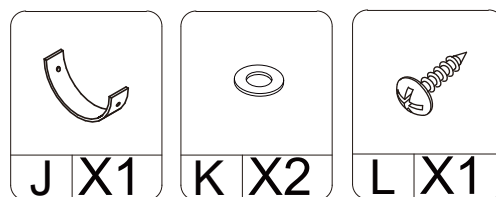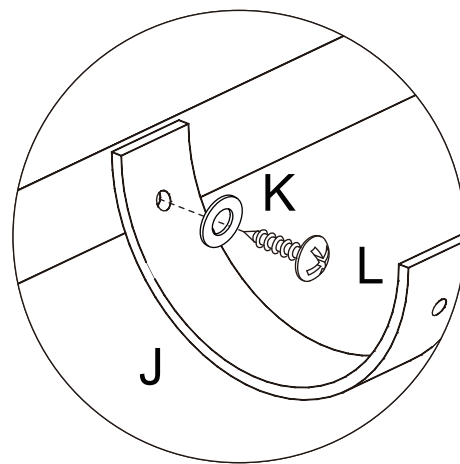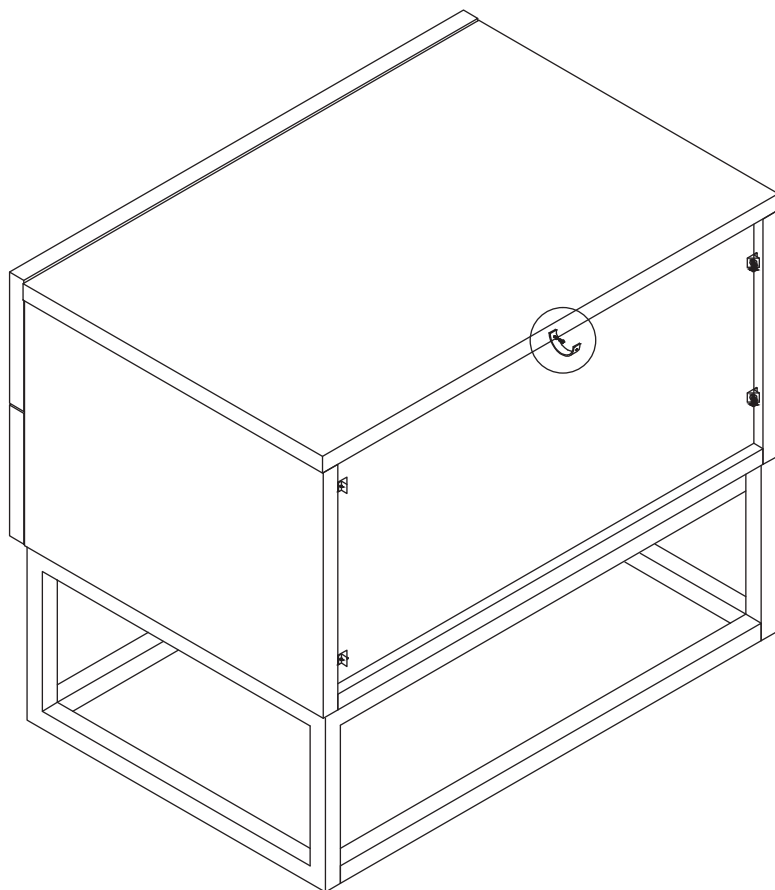

Fix the Wall strap (J) with 1 x Screw (L) and 1 x Washer (K) to the backside of Top panel as shown.

Move the bedside table into position against a wall.

Mark a suitable position for the wall fixing.

Follow instructions to install the wall fixing onto the wall.

Reposition the bedside table and fix the Wall strap (J) and 1 x Washer (K) to the wall with wall fixing.

Assembly is complete.