
Assembly Instructions

Cuppa Series



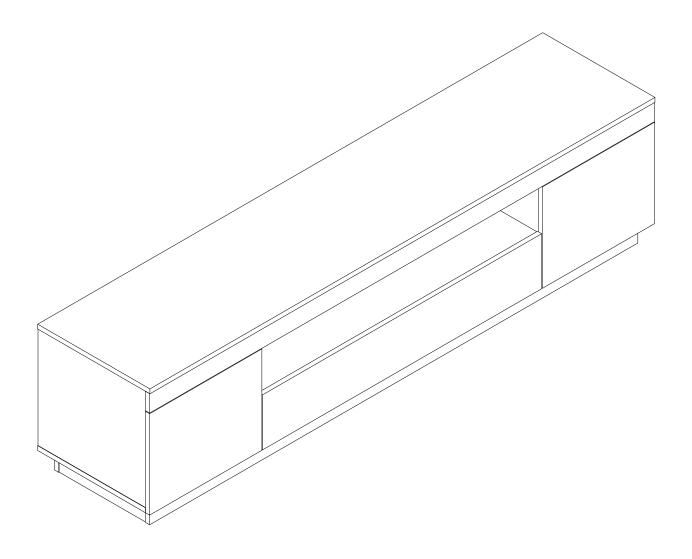

Product Code
CPA-V3-TV180-WOK-ECO Cuppa TV Stand

Dimensions(W x D x H) 1800*400*450mm

Important

Please read through instruction carefully Before assembly and keep for future reference. For our full catalogue of assembly instructions, Visit: lifely.com.au/assembly.

Important Tips and Maintenance





 
Keep children and animals away from working area as smaller parts may cause choking if swallowed.




5. Use a soft or dry cloth when wiping or cleaning surfaces.



Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.



 6.
Two person are required.



To avoid fading, keep furniture out of direct sunlight.



4. Never use ammonia based cleaning products as it will damage the finish.



Lay a soft matt down to protect the furniture piece before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking."

This 9-step assembly should take around 55 minutes with an Allen key-or 35 minutes with an electric drill.

Designed for everyday

Component Hardware are in box 1 Please check you have all the fittings part or tools are listed in below.

No. A Quantity:49 Pcs Cam Ø15*12mm



No. G Quantity 49 Pcs Cover Ø20mm



No. M Quantity:1 Pair Gloves



No. B Quantity 49 Pcs Cam Lock Dowel



No. H Quantity:12 Pcs **EVA Pad** Ø15mm



Quantity:1 Set L=250mm

No. C

No. I Quantity:4 Pcs Spring Hinge Ø35



No. D Quantity:4 Pcs Screw Ø4*35mm



No. J Quantity:8 Pcs M3*18mm No. E Quantity 44 Pcs Wooden Dowel Ø8*30mm



No. K Quantity: 4 Pcs Screw 7*38mm

No. F Quantity:40 Pcs Screw Ø3.5*14mm



No. L Quantity:1 Pc Key 5mm














Component Panels & part List Please check you have all the panels are listed below.


1. Top Panelx1	CTN 2/2
2. Bottomx1	CTN 2/2
3. Side Panel-Leftx1	CTN 1/2
4. Side Panel-Rightx1	CTN 1/2
5. Middle Side Panel-Leftx1	CTN 1/2
6. Middle Side Panel-Rightx1	CTN 1/2
7. Middle Panel-Leftx1	CTN 2/2
8. Middle Panel-Rightx1	CTN 2/2
9. Side Back Panelx2	CTN 1/2
10. Middle Back Panelx1	CTN 2/2
11. Front Panelx1	CTN 2/2


12. Top Supportx1	CTN 2/2
13.Footboardx2	CTN 2/2
14.Side Footboardx3	CTN 2/2
15. Doorx2	CTN 2/2
16.Drawer Facex1	CTN 1/2
17.Drawer Panel-Leftx1	CTN 1/2
18. Drawer Panel-Right x1	CTN 1/2
19. Drawer Backx1	CTN 1/2
20. Drawer Bottom x1	CTN 1/2
21. Drawer Supportx2	CTN 1/2
22. Shelf x1	CTN 2/2

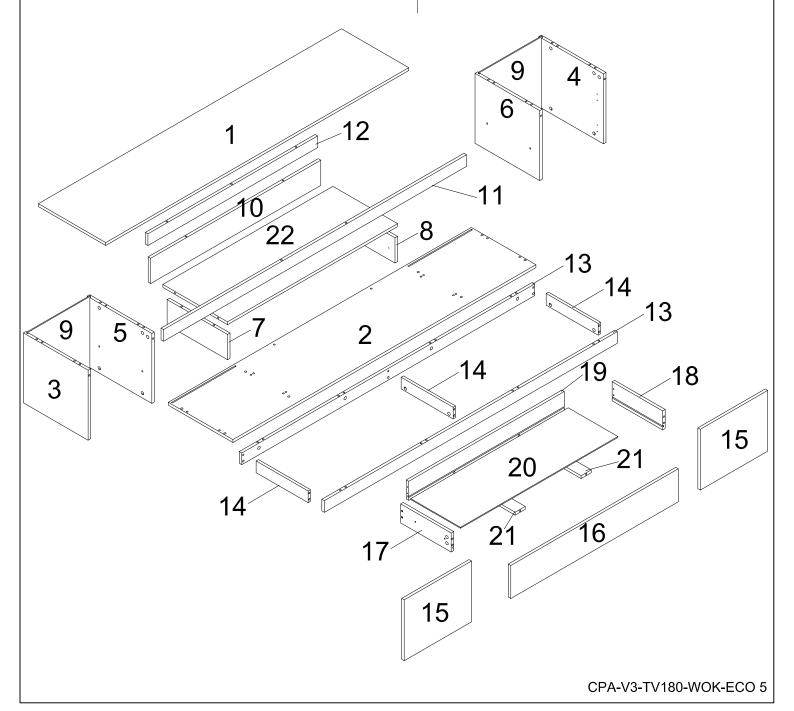


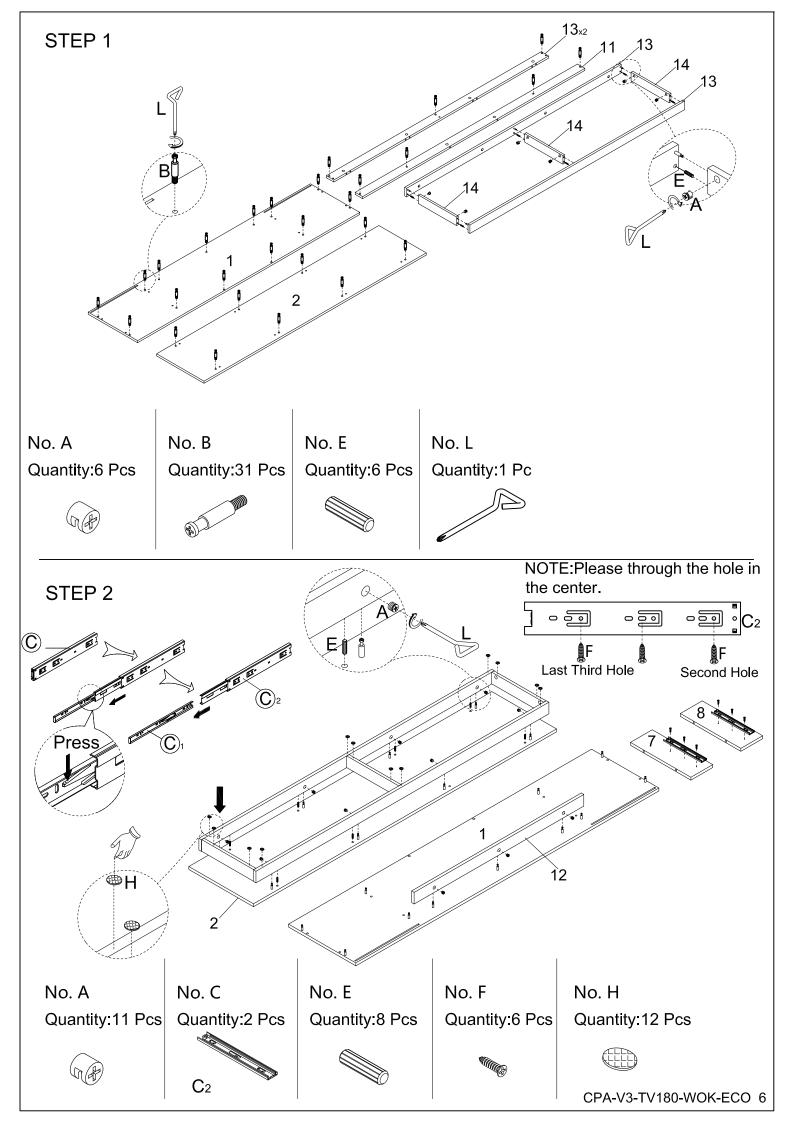


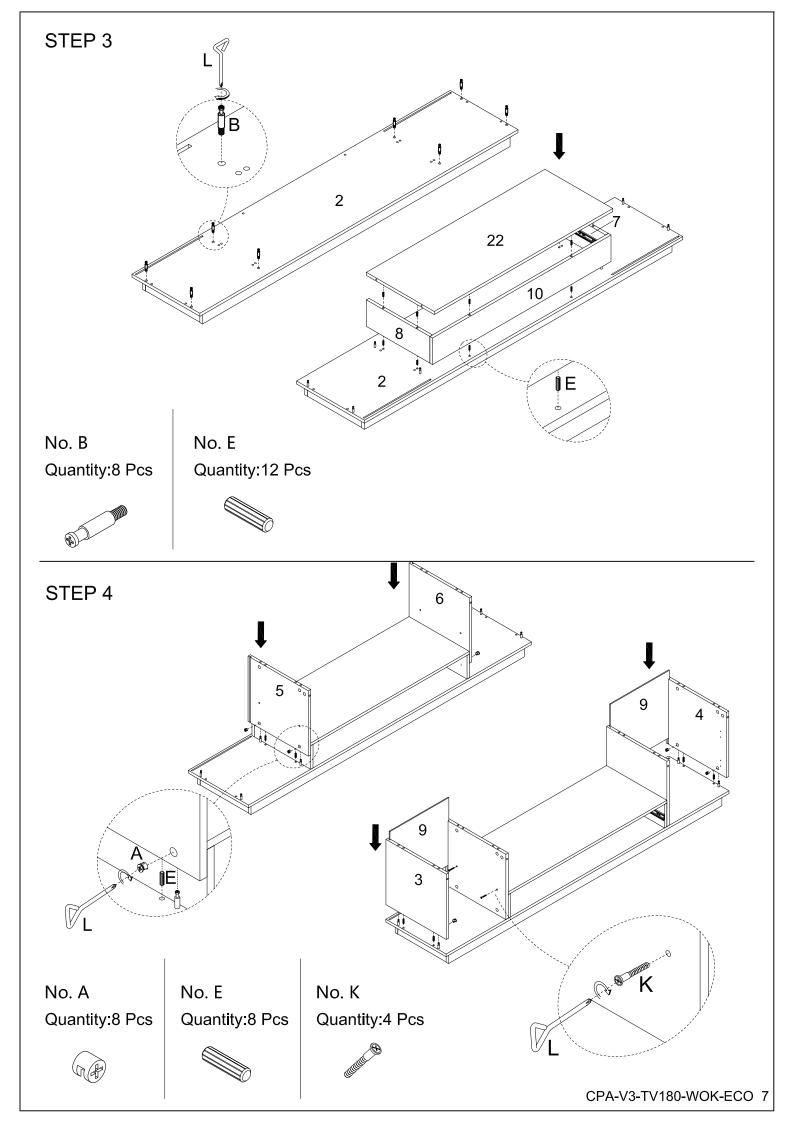

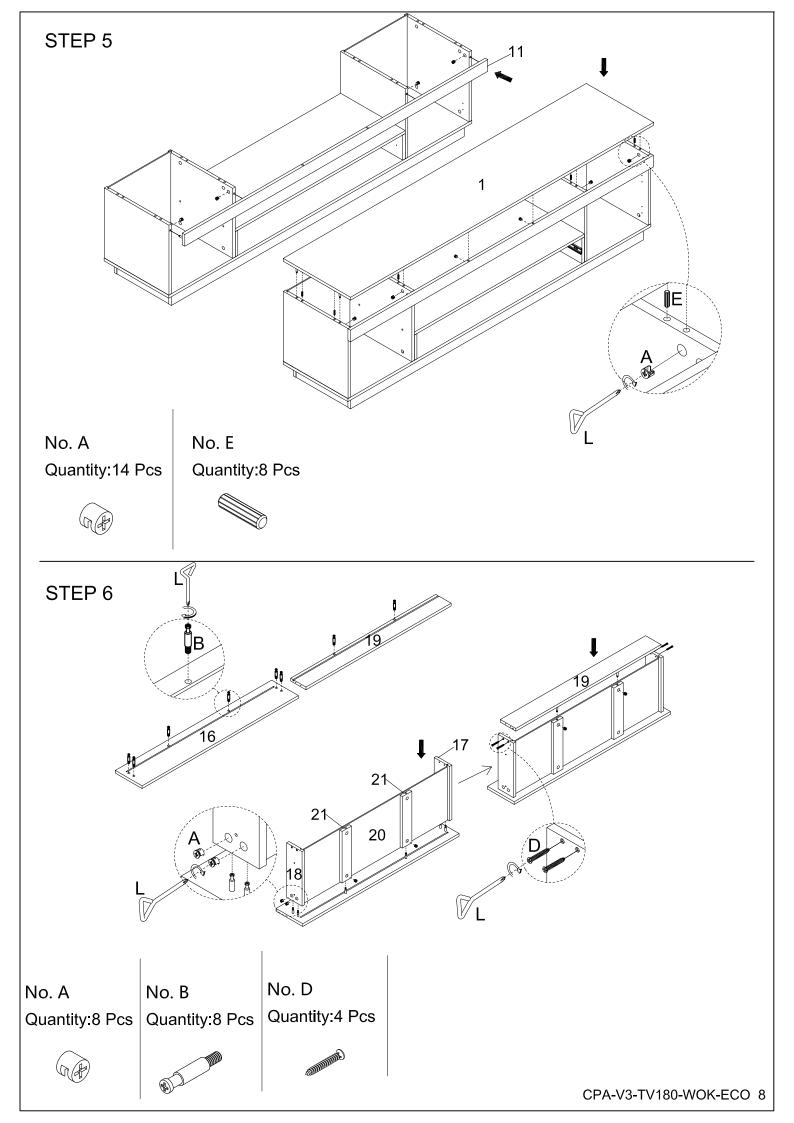

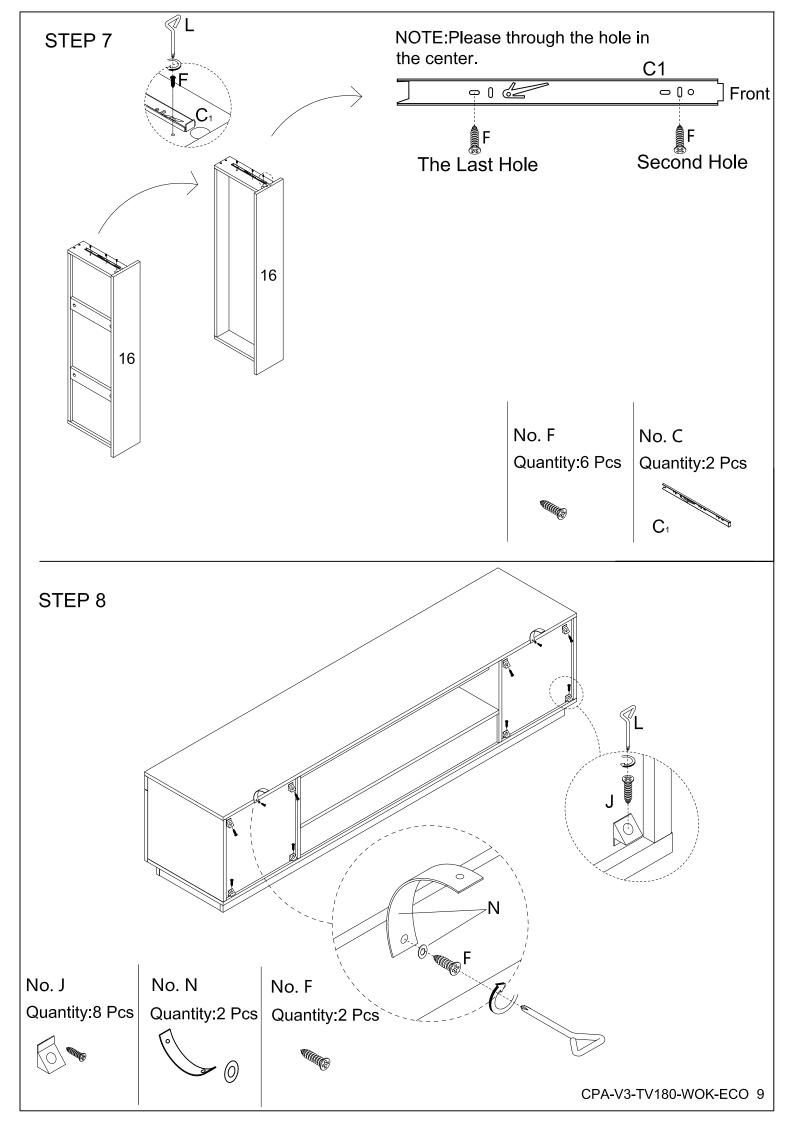

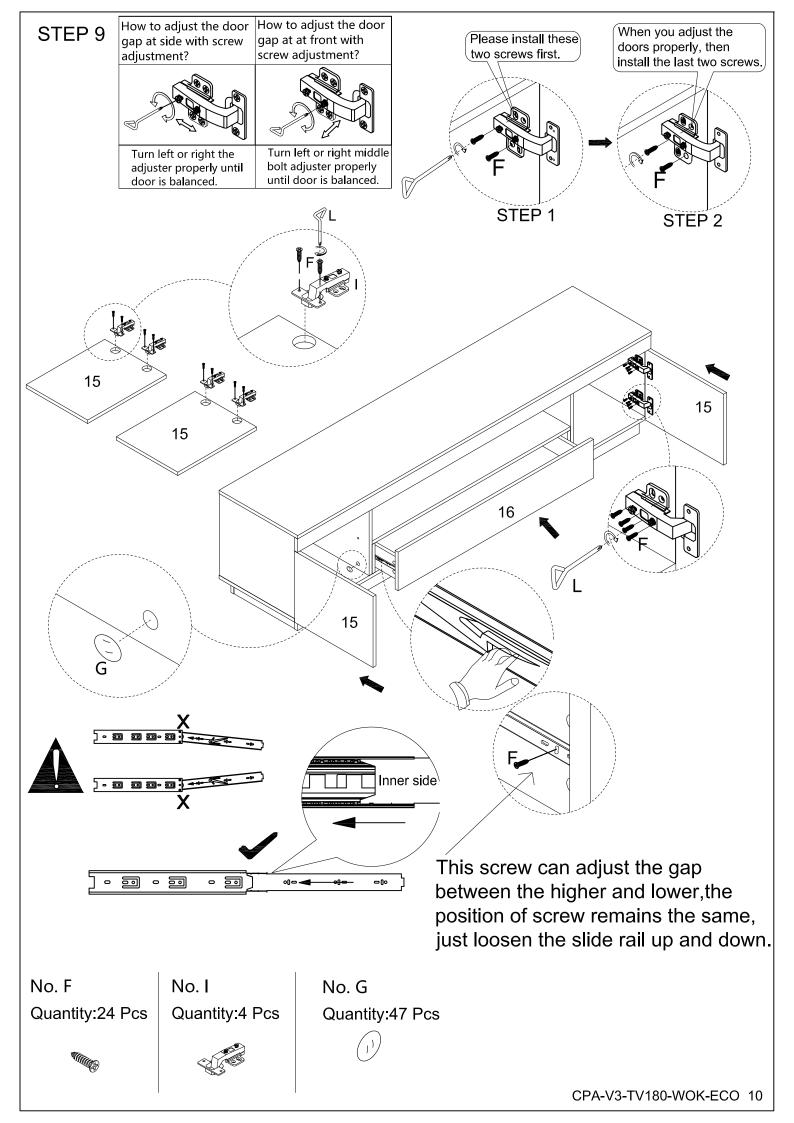

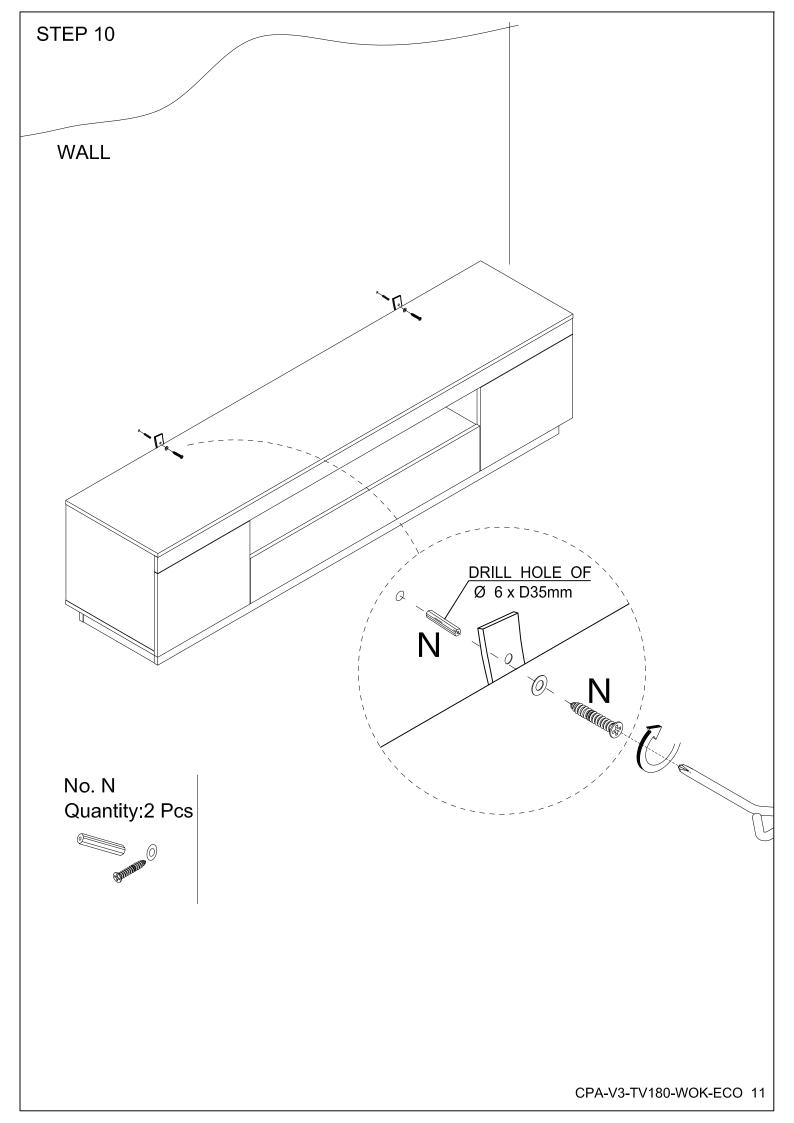



Children have died from furniture tipover.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- ALWAYS secure your television with an anchor device.

Great job. You're done!

Don't forget to share how it looks in your space and tag us on Instagram.

@lifelyhome #homewithlifely!